ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#:263515 263516

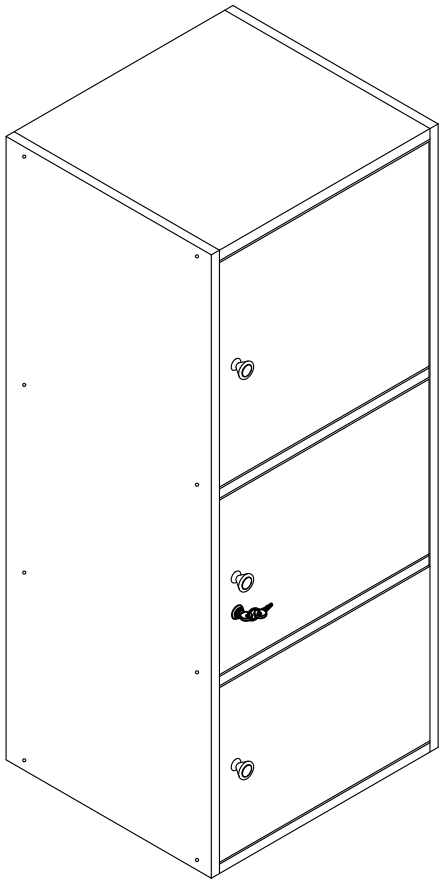

PARTS IDENTIFICATION





ITEM#:263515 263516

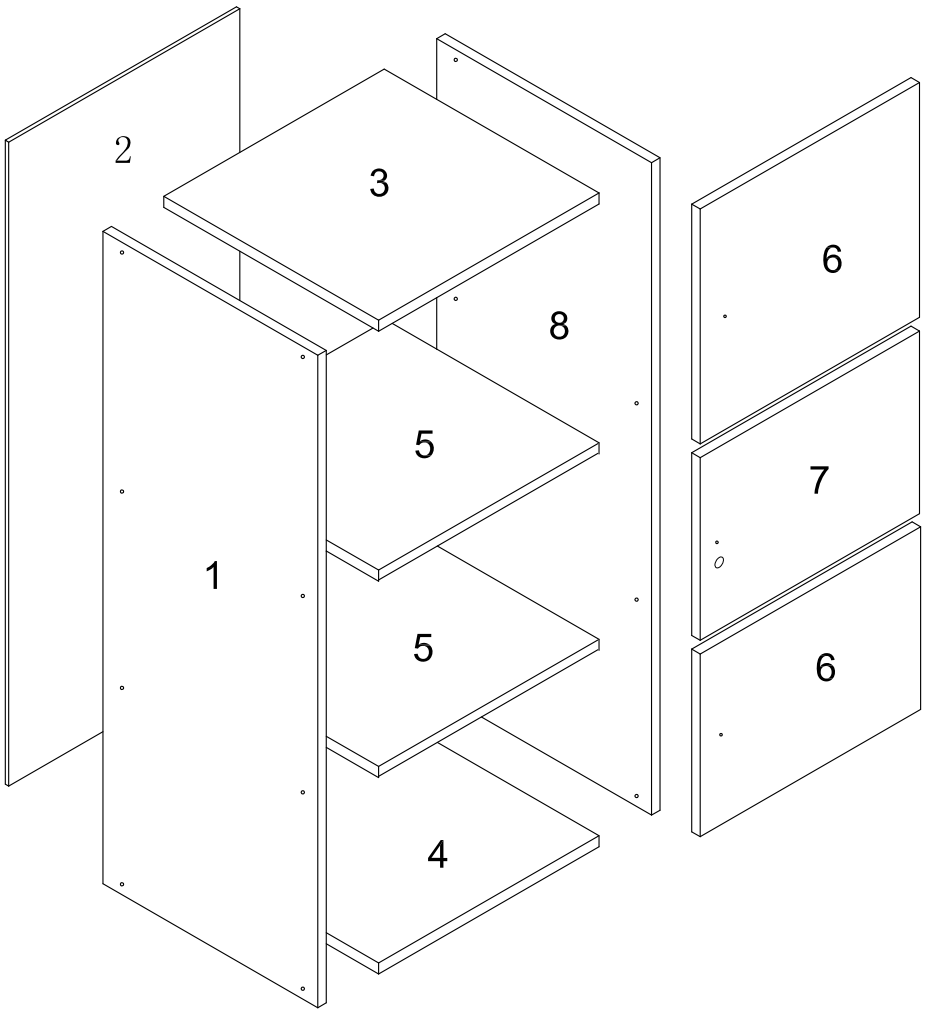

(1)	2pcs	(5)	2pcs
(2)	1pcs	(6)	2pcs
(3)	1pc	(7)	1pcs
(4)	1pc		


HARDWARE IDENTIFICATION

ITEM#:263515 263516

A		□4x35	16pcs
B			40pcs
C		□5	3pcs
D		□4x22	3pcs
E			3pcs
F			2pcs
G		□3x16	4pcs
H		□3.5x12	6pcs
I		□8x25	8pcs
J			1pcs
K		Ø3x20	4pcs
L			1pcs
M		Ø4.5×Ø1×254	1pcs
N		□4×19	1pcs
O		□5×40	1pcs
P		□14×36	1pcs
Q		12×12×1	2pcs


ASSEMBLY INSTRUCTION

ITEM#:263515 263516

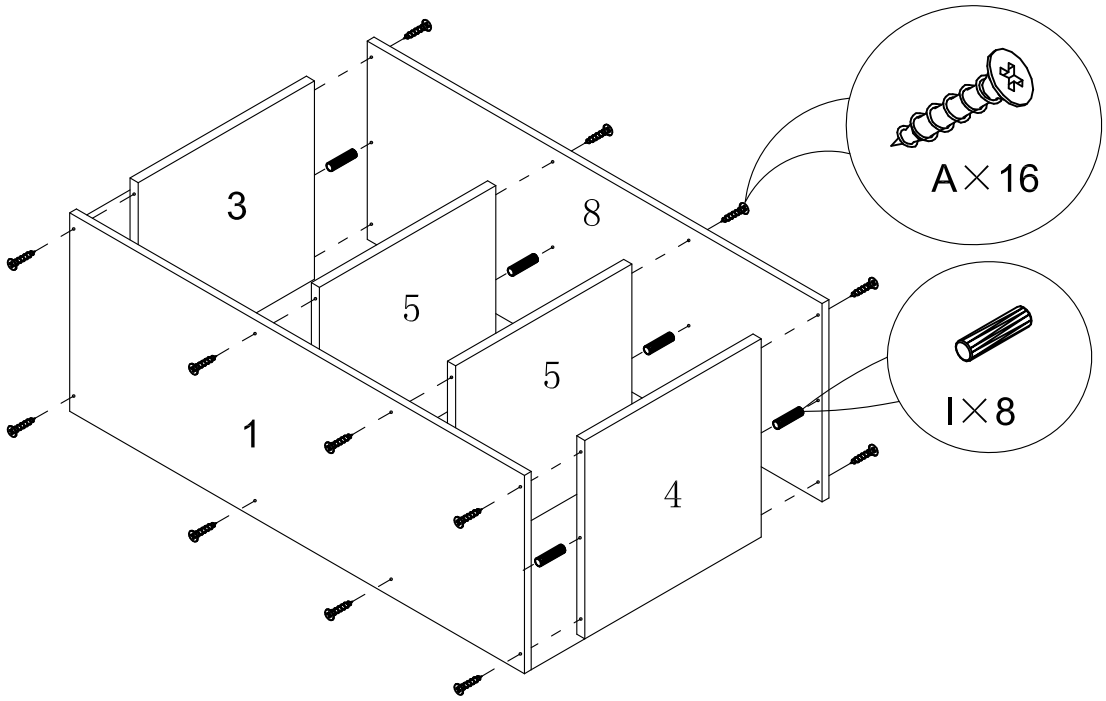


STEP1

STEP2

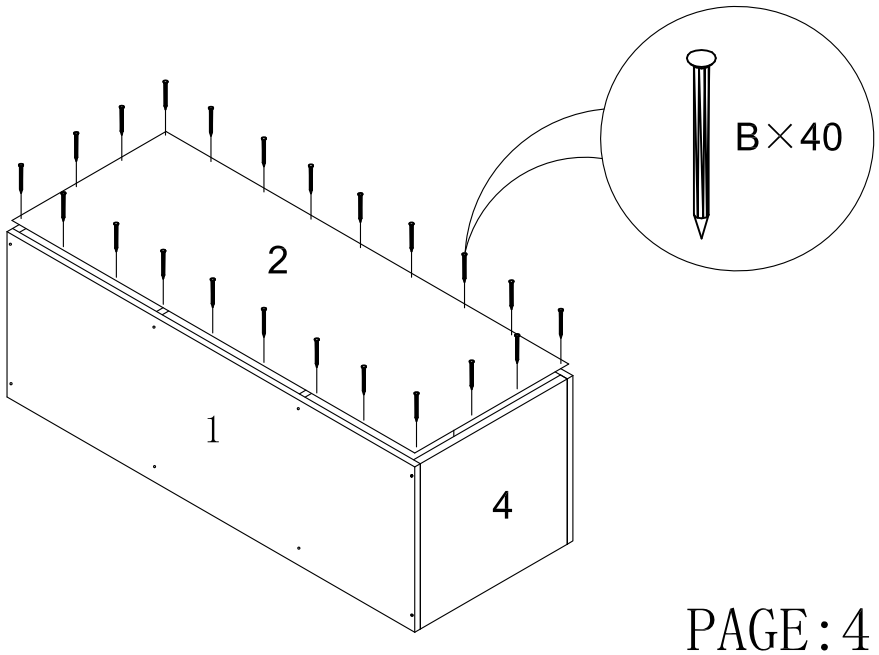


ASSEMBLY INSTRUCTION

ITEM#:263515 263516

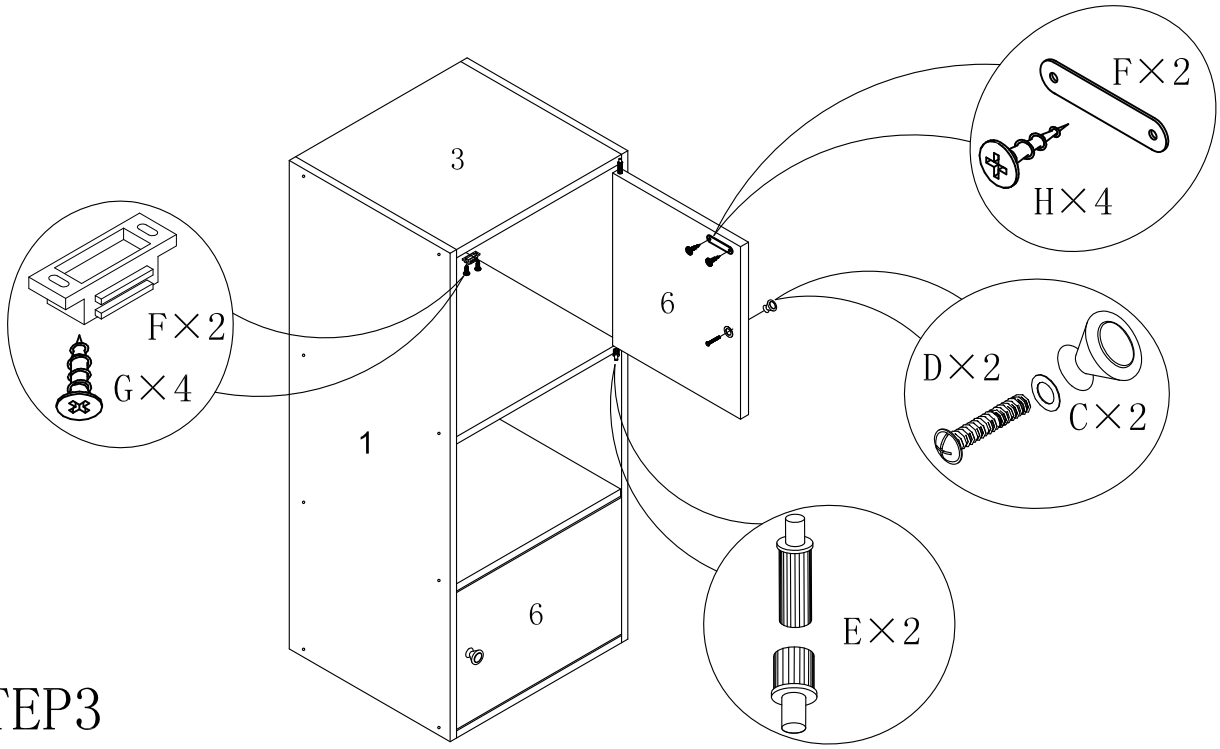


STEP3

STEP4

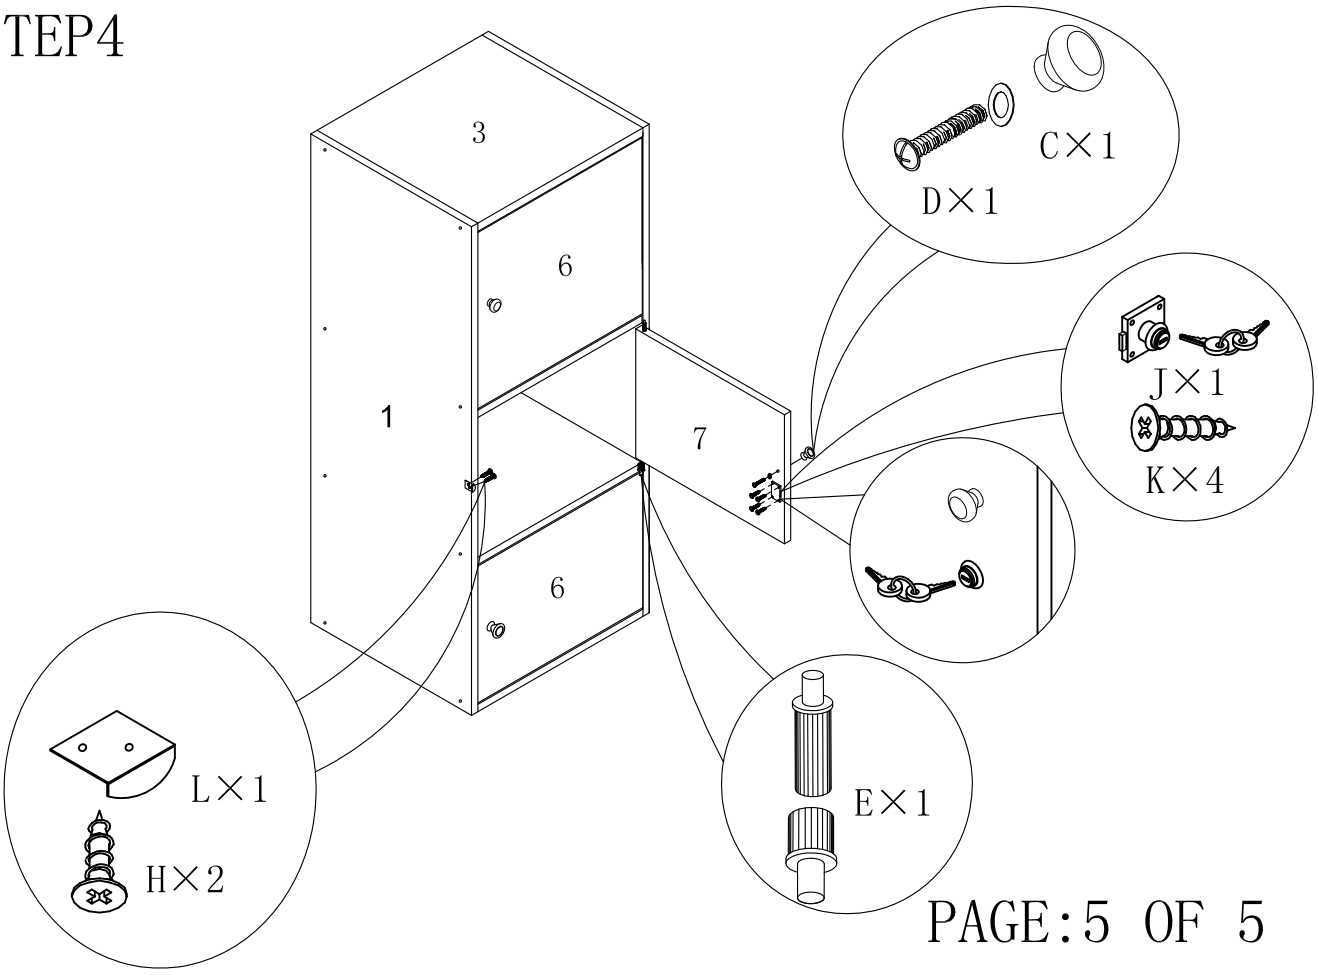


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE(INCLUDED):



DRYWALL ANCHOR ϕ14×36 × 1PC



METAL BRACKETS 12×12×1 × 2PCS




DRYWALL SCREW ϕ5×40 × 1PC

STRAP ϕ4.5×ϕ1×254 × 1PC

FLATHEAD SCREW ϕ4X25 × 1PC

TOOLS NEEDED (NOT INCLUDED):

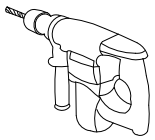


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

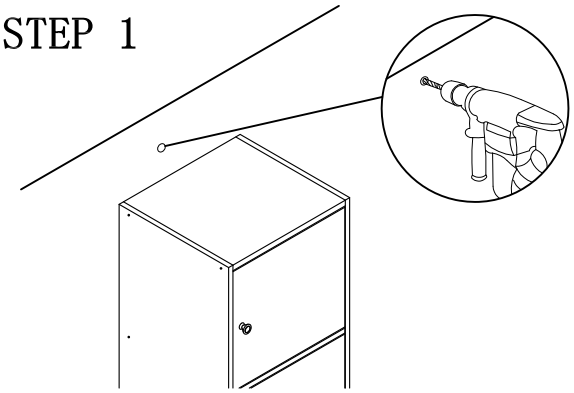


1.Find spot on wall 1″ below top of item.
2.Using a drill bit slightly thinner than anchor ,drill hole into drywall.

STEP 2

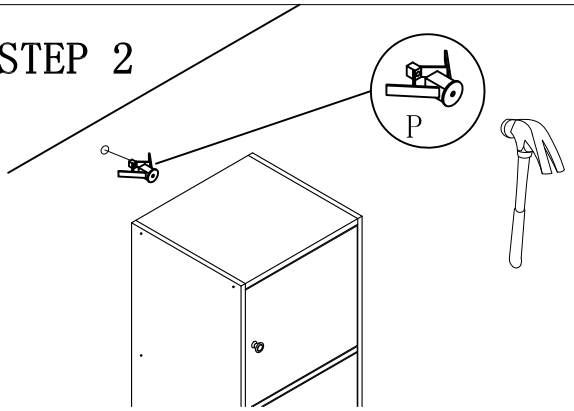


1.Use a light hammer to tap anchor into hole.
2.Anchor should fit snugly.lf hole is too small, drill again to increase hole size .Do not force anchor into wall.

STEP 3

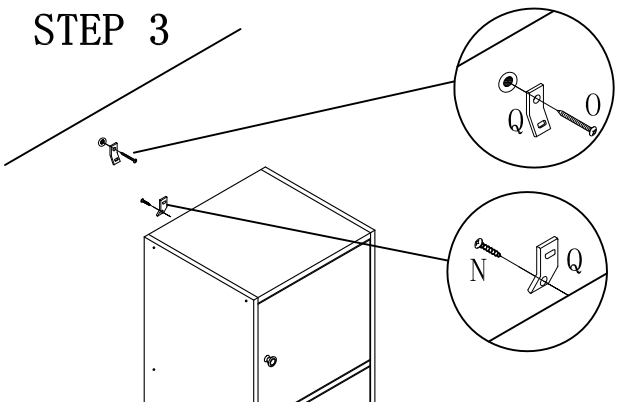

1.Insert drywall screw into metal bracket and into drywall anchor.
2.Insert flathead screw into second metal bracket and into back of item.along top edge.

STEP 4

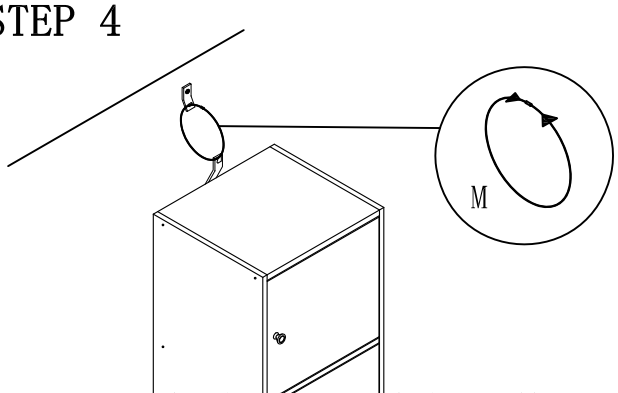

1.Insert strap thru bracket attached to wall. then thru bracket on item , and into head of strap.
2.pull lightly til strap stops.
Assembly is complete.