
Installation and User Manual

Smart Toilet

(S61-NE)

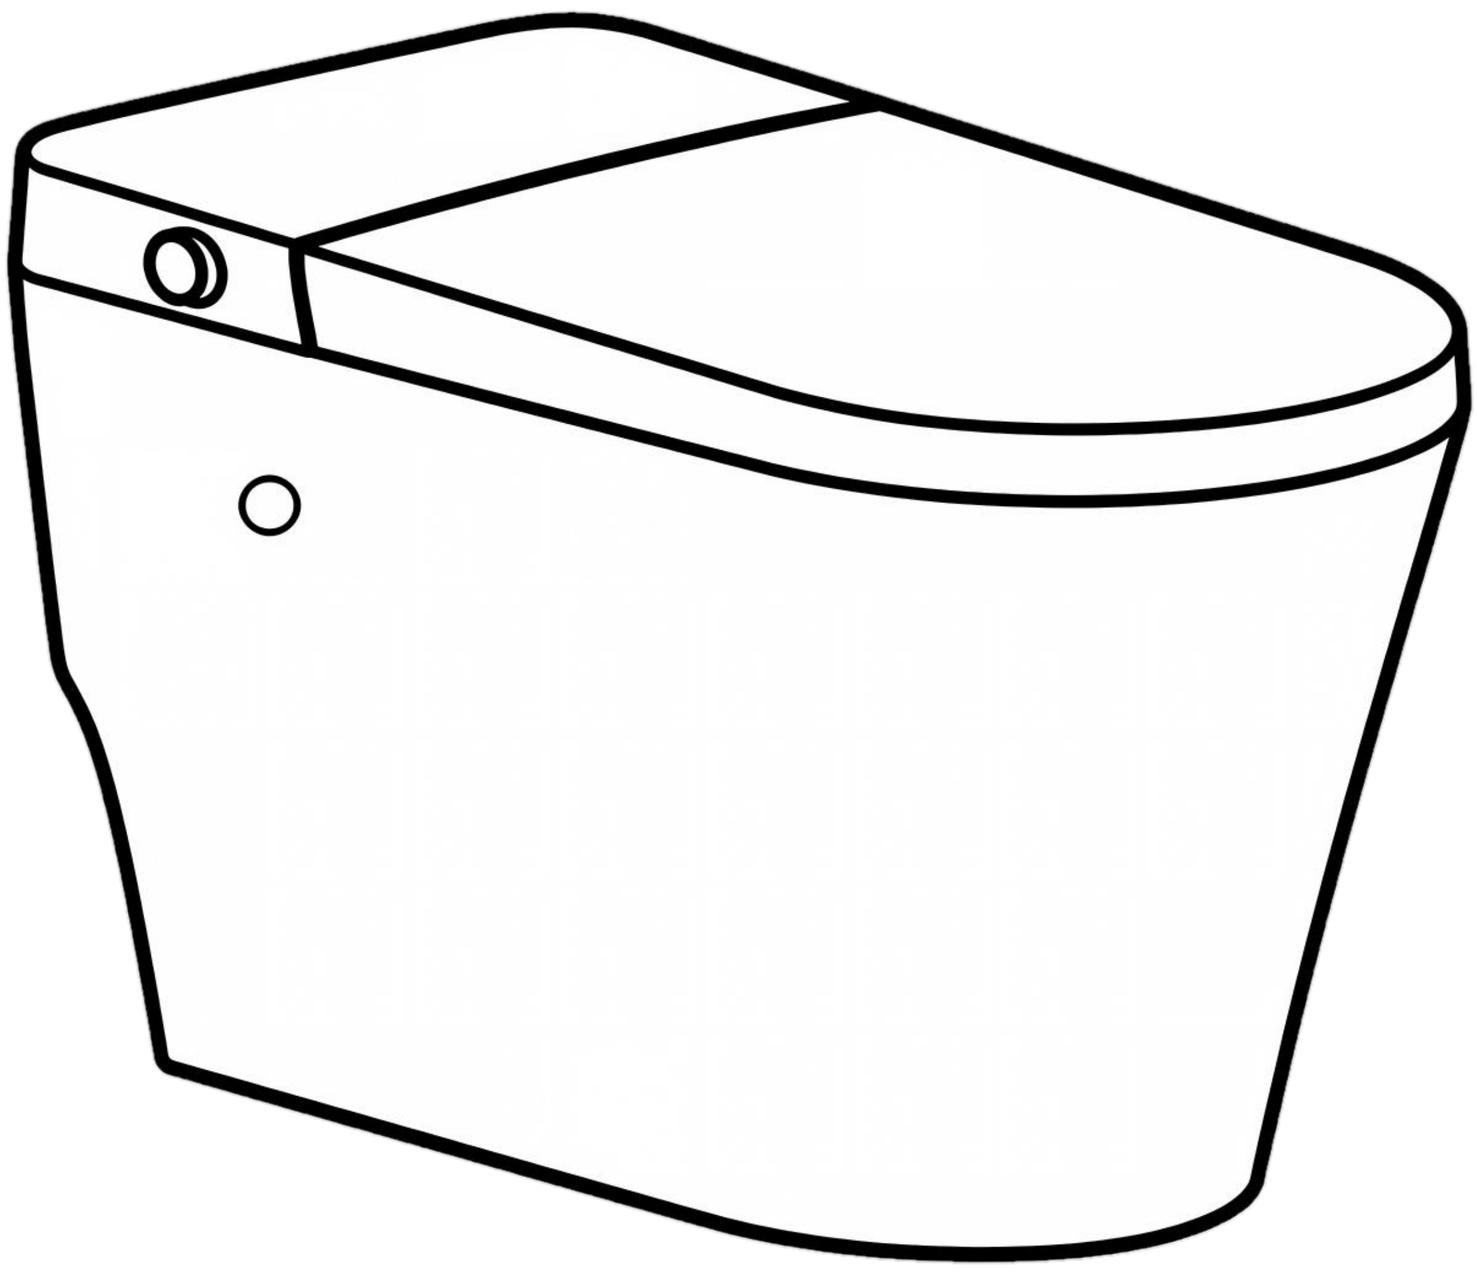

NOTE: Drawings may not exactly define contour of the product.

+1 6265304012| hucijyo@gmail.com

Prior to Installation:

1. Check Package Contents

- Unpack the product and verify that all components are included as per the packing list.
- Inspect the toilet for any visible damage. If any parts are missing or damaged, please contact customer service before proceeding.

2. Prepare Installation Area

- Ensure the installation site has the required water supply and electrical outlet.
- Verify that the floor and wall are clean, level, and free of debris.

3. Installation Precautions

- Do not install the toilet in an area where it may be exposed to direct sunlight, freezing temperatures, or excessive humidity.
- If replacing an old toilet, shut off the water supply and disconnect the existing unit before proceeding.
- Please read installation and maintenance instructions thoroughly before installing the toilet

4. Safety Notes

- Professional installation is recommended for optimal performance and warranty coverage.
- Do not attempt to modify the product or its components, as this may lead to malfunction or void the warranty.
- Follow all local plumbing and electrical codes when installing the smart toilet.
- Be sure to use proper tools and always wear proper personal safety accessories for your protection

If you have any questions or concerns please contact us:

+1 6265304012| hucijyo@gmail.com

CONTENTS

IMPORTANT SAFEGUARDS 2

INSTALLATION PREPARATION 3

PRODUCT INFORMATION 4

INSTALLATION STEPS 5-6

CLEANING AND MAINTENANCE 7

MAIN UNIT OPERATION INSTRUCTIONS 8

TROUBLESHOOTING 9

LIMITED WARRANTY COVERAGE 10

IMPORTANT SAFEGUARDS

1. Do not use the product while bathing.
2. Do not place or store the product where it can fall or be pulled into a bathtub or sink.
3. Do not place the product in water or other liquids.

WARNING – General Safety


1. Close supervision is required when this product is used by, on, or near children or individuals with limited abilities.
2. Use this product only for its intended purpose as described in this manual. Do not use attachments or accessories not recommended by the manufacturer.
3. Never operate the product if:
· The product is not working properly
· The product has been dropped or damaged
· The product has been dropped into water
In such cases, return it for inspection and repair.
4. Never block the air openings or place the product on soft surfaces (such as a bed or couch) where airflow may be obstructed. Keep all air openings free of lint, hair, or other debris.
5. Do not use while sleeping or drowsy.
6. Do not drop or insert any objects into any openings or hoses.
7. Do not use outdoors or operate in areas where aerosol sprays are being used or oxygen is being administered.
8. Fill the reservoir with water only, unless otherwise specified by the manufacturer.

NOTICE: Please retain this manual for future reference.

+1 6265304012
hucijyo@gmail.com

INSTALLATION PREPARATION


Package Contents

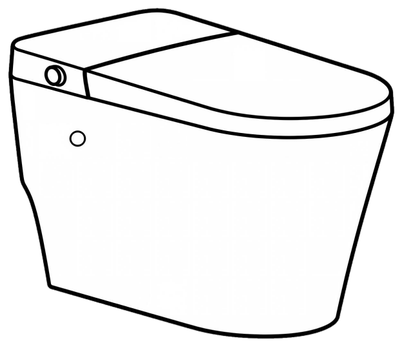

Toilet Unit



User Manual

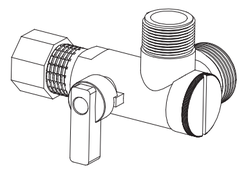

Angle Stop Valve




Floor Bolts




Sealing Ring

Tools Required (Not Included)

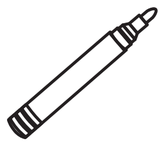

Marker

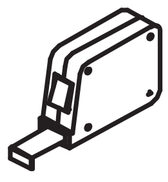


Tape Measure




Thread Seal Tape
(PTFE Tape)




Adjustable
Wrench

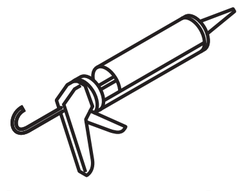

Silicone Sealant

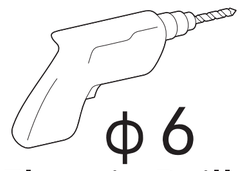

Electric Drill
(Ø 6 mm / 1/4 in.)

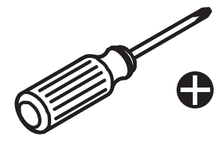


Screwdriver

Installation Dimensions

Pre-Installation Notes:

1. Ensure that the product is installed on finished floors and walls. Installation on unfinished surfaces may affect positioning accuracy.
2. The required water supply pressure is 0.2–0.75 MPa (static pressure). Insufficient water pressure may result in poor flushing performance.
3. Before installation, thoroughly clean the water supply pipes and the installation area to remove debris, which may affect installation or normal operation.
4. Use only the supplied accessories to ensure proper installation and performance.
5. Do not embed the waste outlet in cement mortar or other setting materials. Material expansion may cause cracking or damage to the toilet.

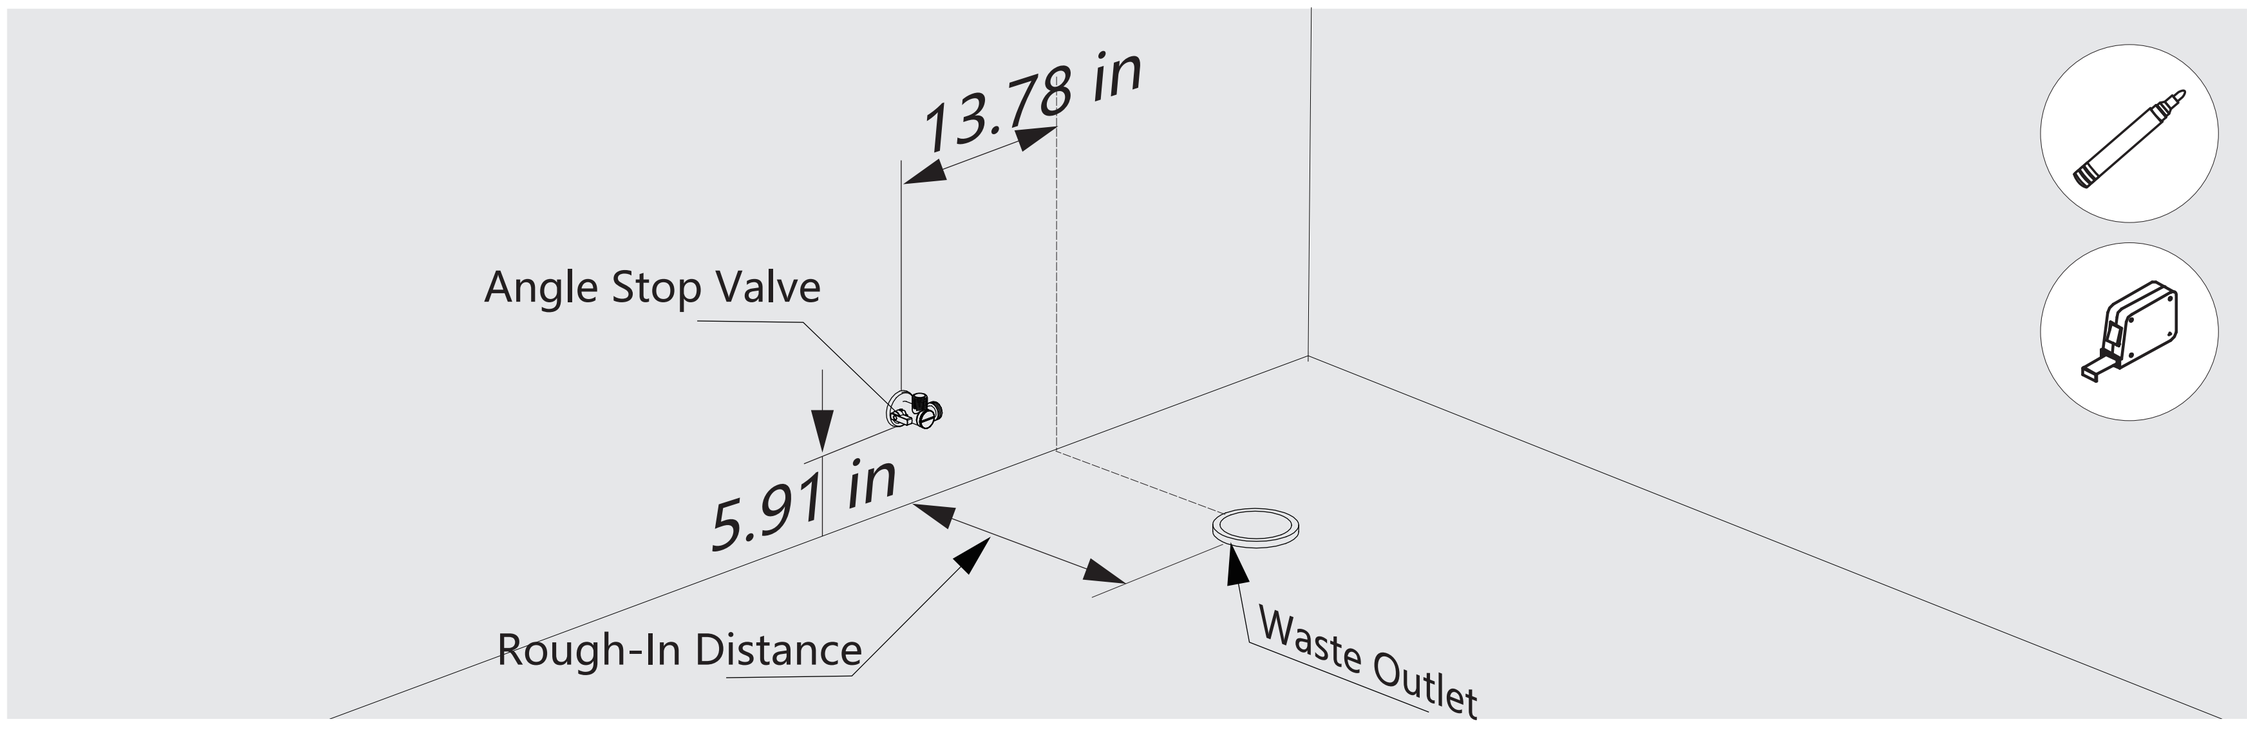


NOTE: Installation of the Smart Toilet may require specialized tools. Plumbing is not included.


+1 6265304012
hucijyo@gmail.com

PRODUCT INFORMATION

Product Parts

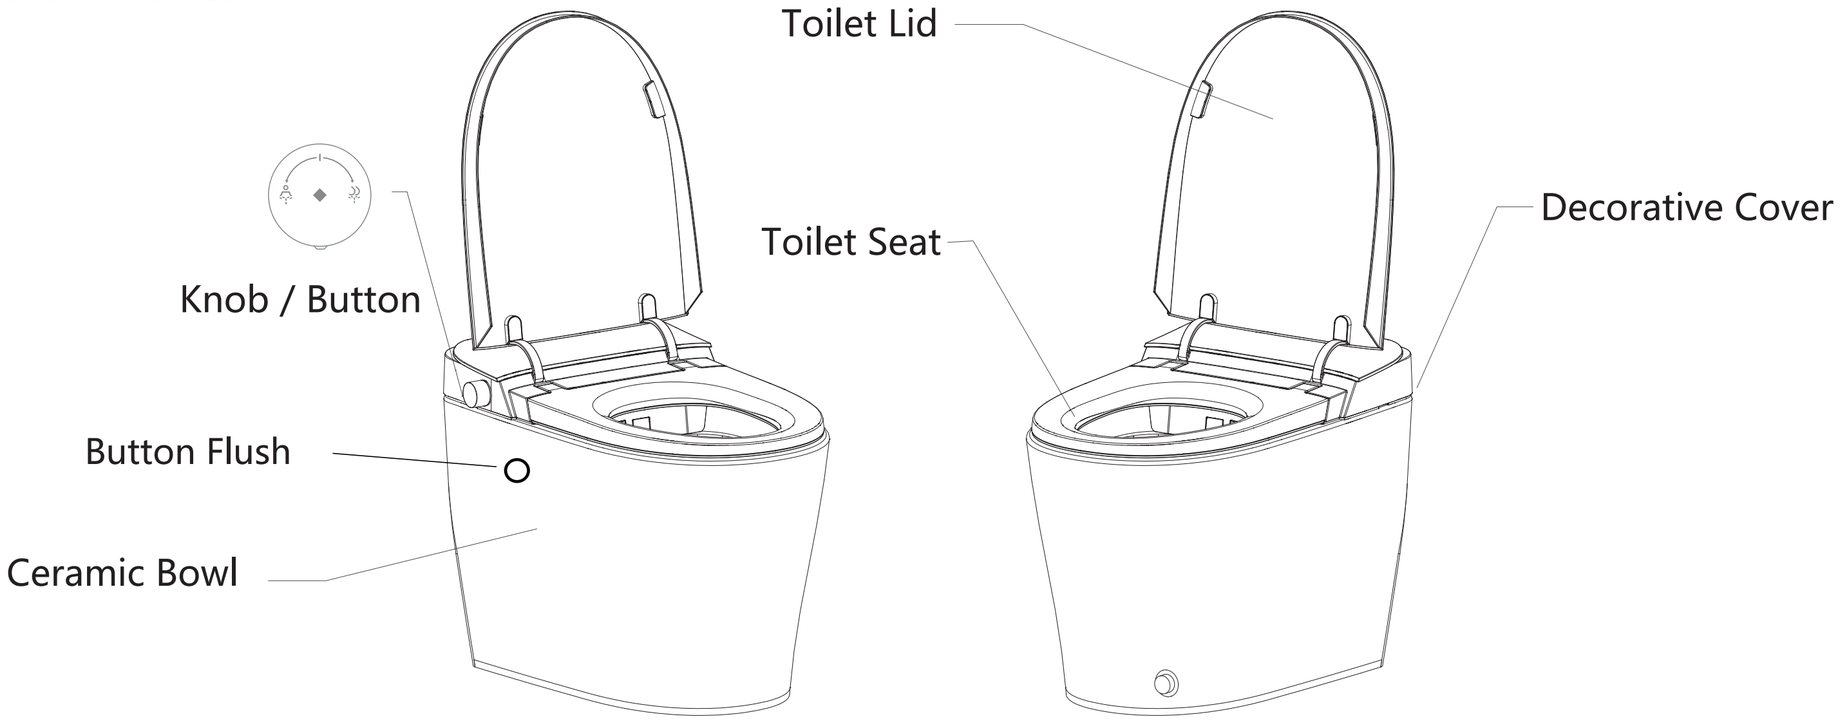

Product Dimensions

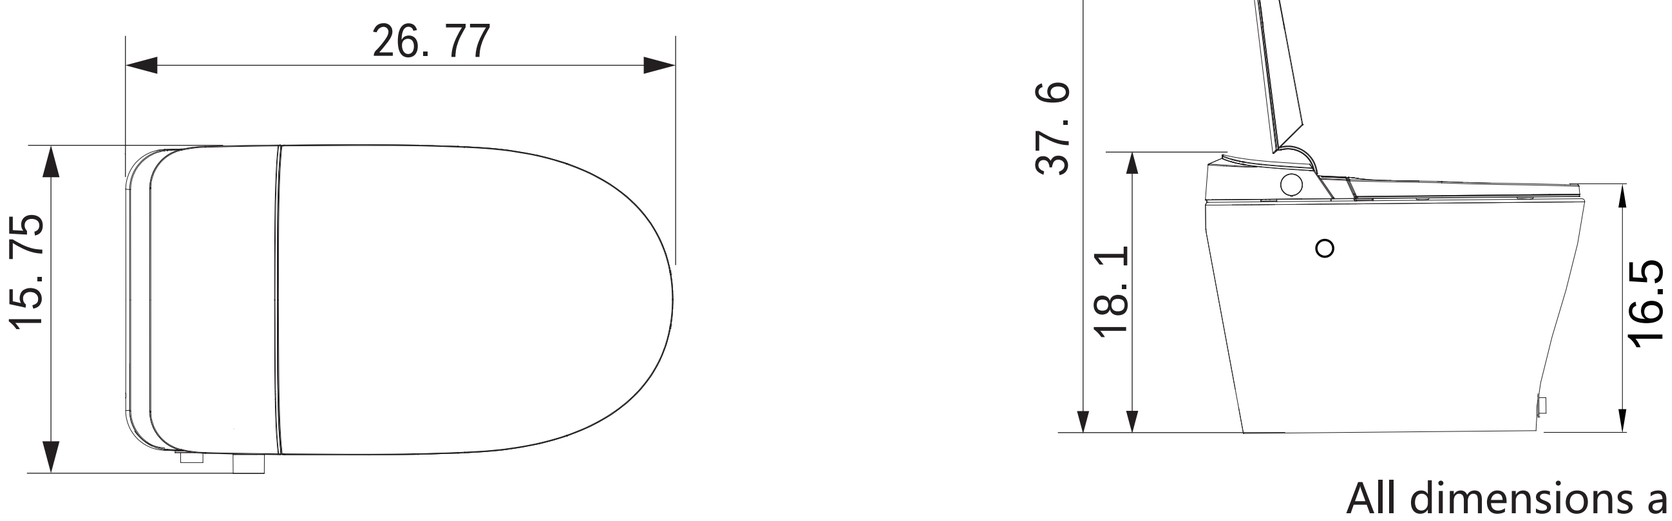

All dimensions are in inches.

Product Model			S61-NE
Basic Functions	Cleansing Mode	Rear	Mechanical wash
		Front	Mechanical wash
	Flushing		●
Hygiene Functions	Antibacterial Nozzle		●
	Antibacterial Seat		●
Interaction / Control	Soft-Close		●
	Main Unit Control		●
	Foot-Control Flush		●
Technical Specifications	Water Pressure Requirement		0.2–0.75 MPa (flow ≥ 0.79 gal / 10 sec)
	Operating Temperature		39°F–104°F
	Waterproof Rating		IPX4
	Rough-In Distance		12 in
	Product Dimensions (L×W×H)		26.77 × 15.75 × 18.11 in

NOTE: Illustrations are for reference only and may not exactly represent the product.


+1 6265304012
hucijyo@gmail.com

INSTALLATION STEPS

Confirmation of Water Pressure

· Minimum dynamic operating water pressure: 25 psi
· Maximum static water pressure: 80 psi

Determining Minimum Water Flow

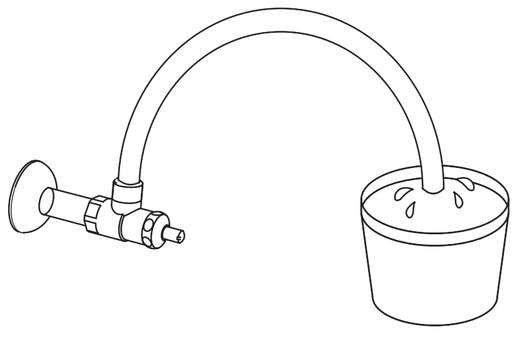


1. Open the angle stop valve for water supply.
2. Measure the water flow for 10 seconds. The flow should be ≥ 0.79 gal / 10 sec.
※ If the above conditions are not met, optimal flushing performance cannot be achieved. An additional booster pump may be required to increase water pressure.

Tools Required: Stopwatch, measuring cup


Smart Toilet Installation Steps

1

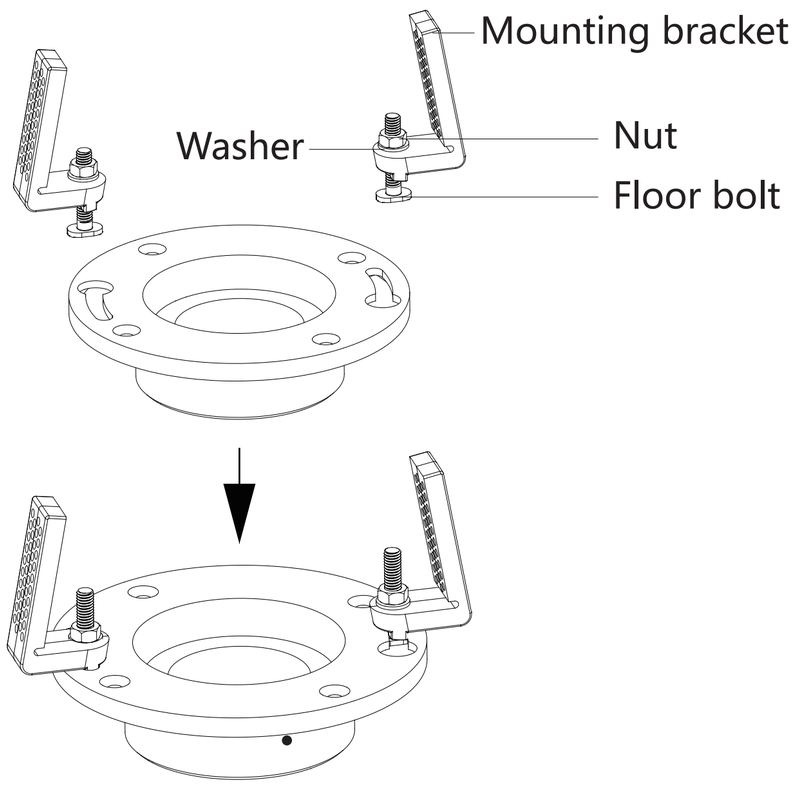

Assemble the mounting bracket using the floor bolts and nuts, secure it onto the pre-installed floor flange, and tighten the nuts.

2

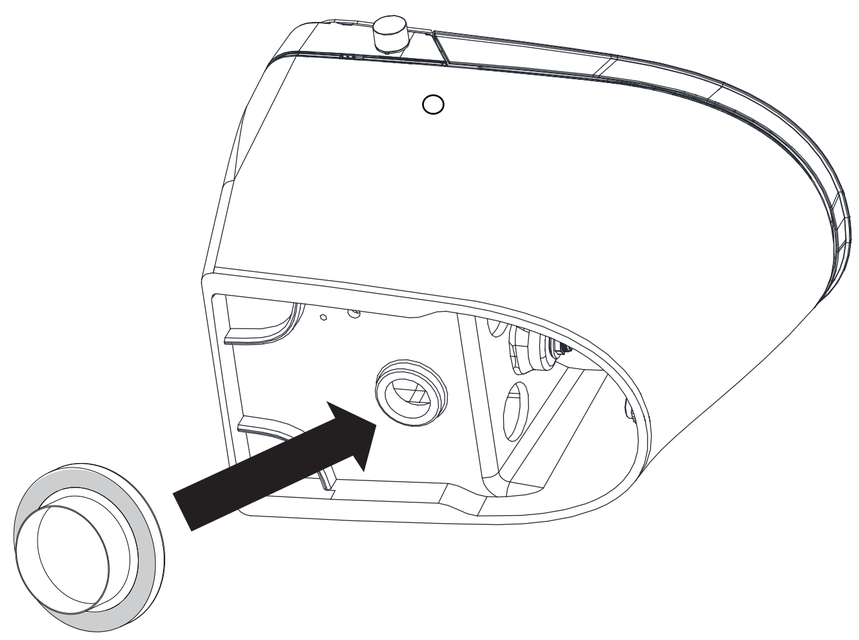


Place the sealing ring onto the waste outlet at the bottom of the toilet, ensuring a tight connection.

NOTE: Illustrations are for reference only and may not exactly represent the product.


+1 6265304012
hucijyo@gmail.com

3

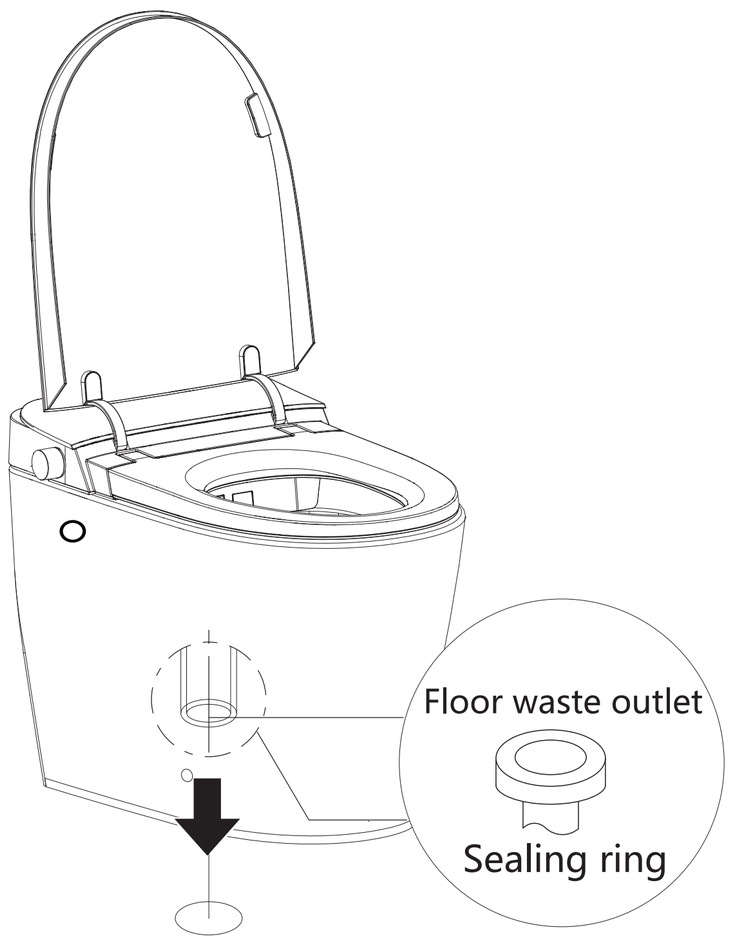


Align the toilet (with sealing ring installed) over the installation location, and carefully place it onto the floor flange.

4

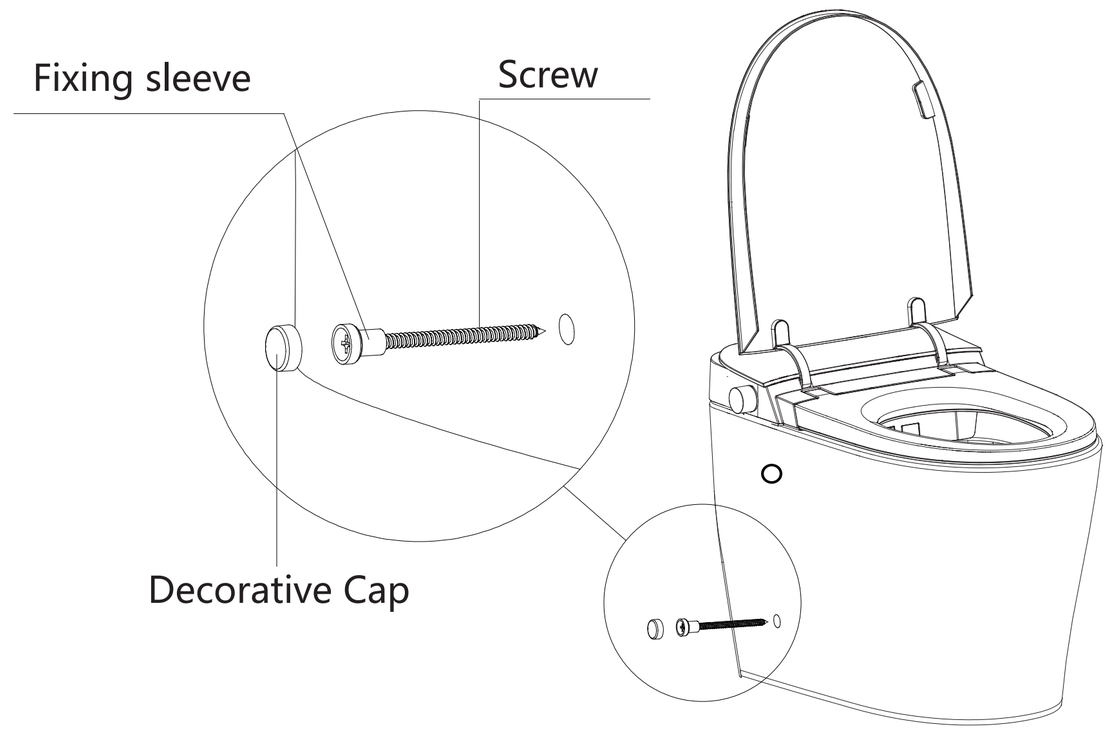


Insert the screw through the fixing sleeve, then install it through the holes on both sides of the toilet bowl and secure it to the mounting bracket on the floor. Tighten the screws, and install the decorative cap on the fixing sleeve.

5

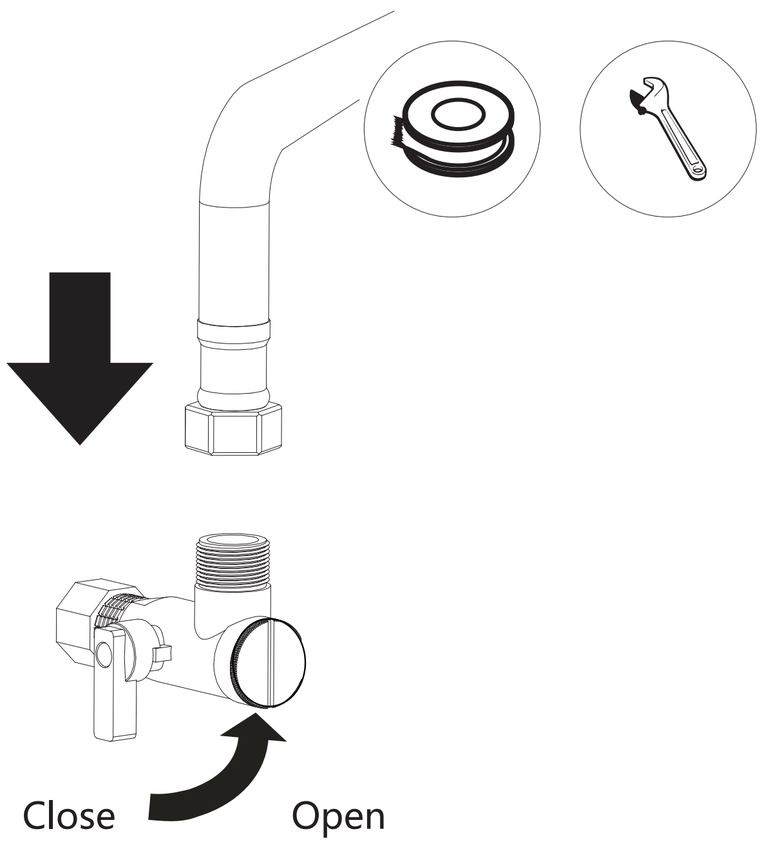

Install the water supply hose, open the angle stop valve, and check for leaks. Make sure all connections are watertight.

6

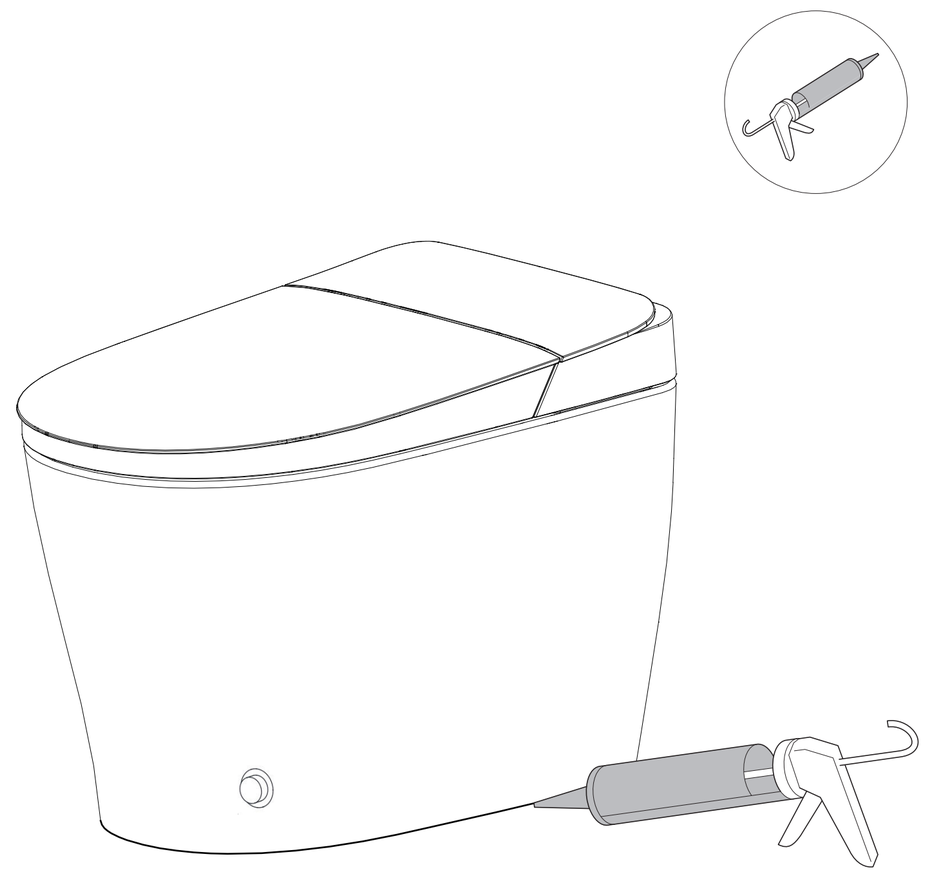


After positioning the toilet neatly and adjusting its location, apply silicone sealant around the base of the toilet.
* Do not use the toilet for 48 hours after applying sealant.

NOTE: Illustrations are for reference only and may not exactly represent the product.

+1 6265304012
hucijyo@gmail.com

CLEANING AND MAINTENANCE

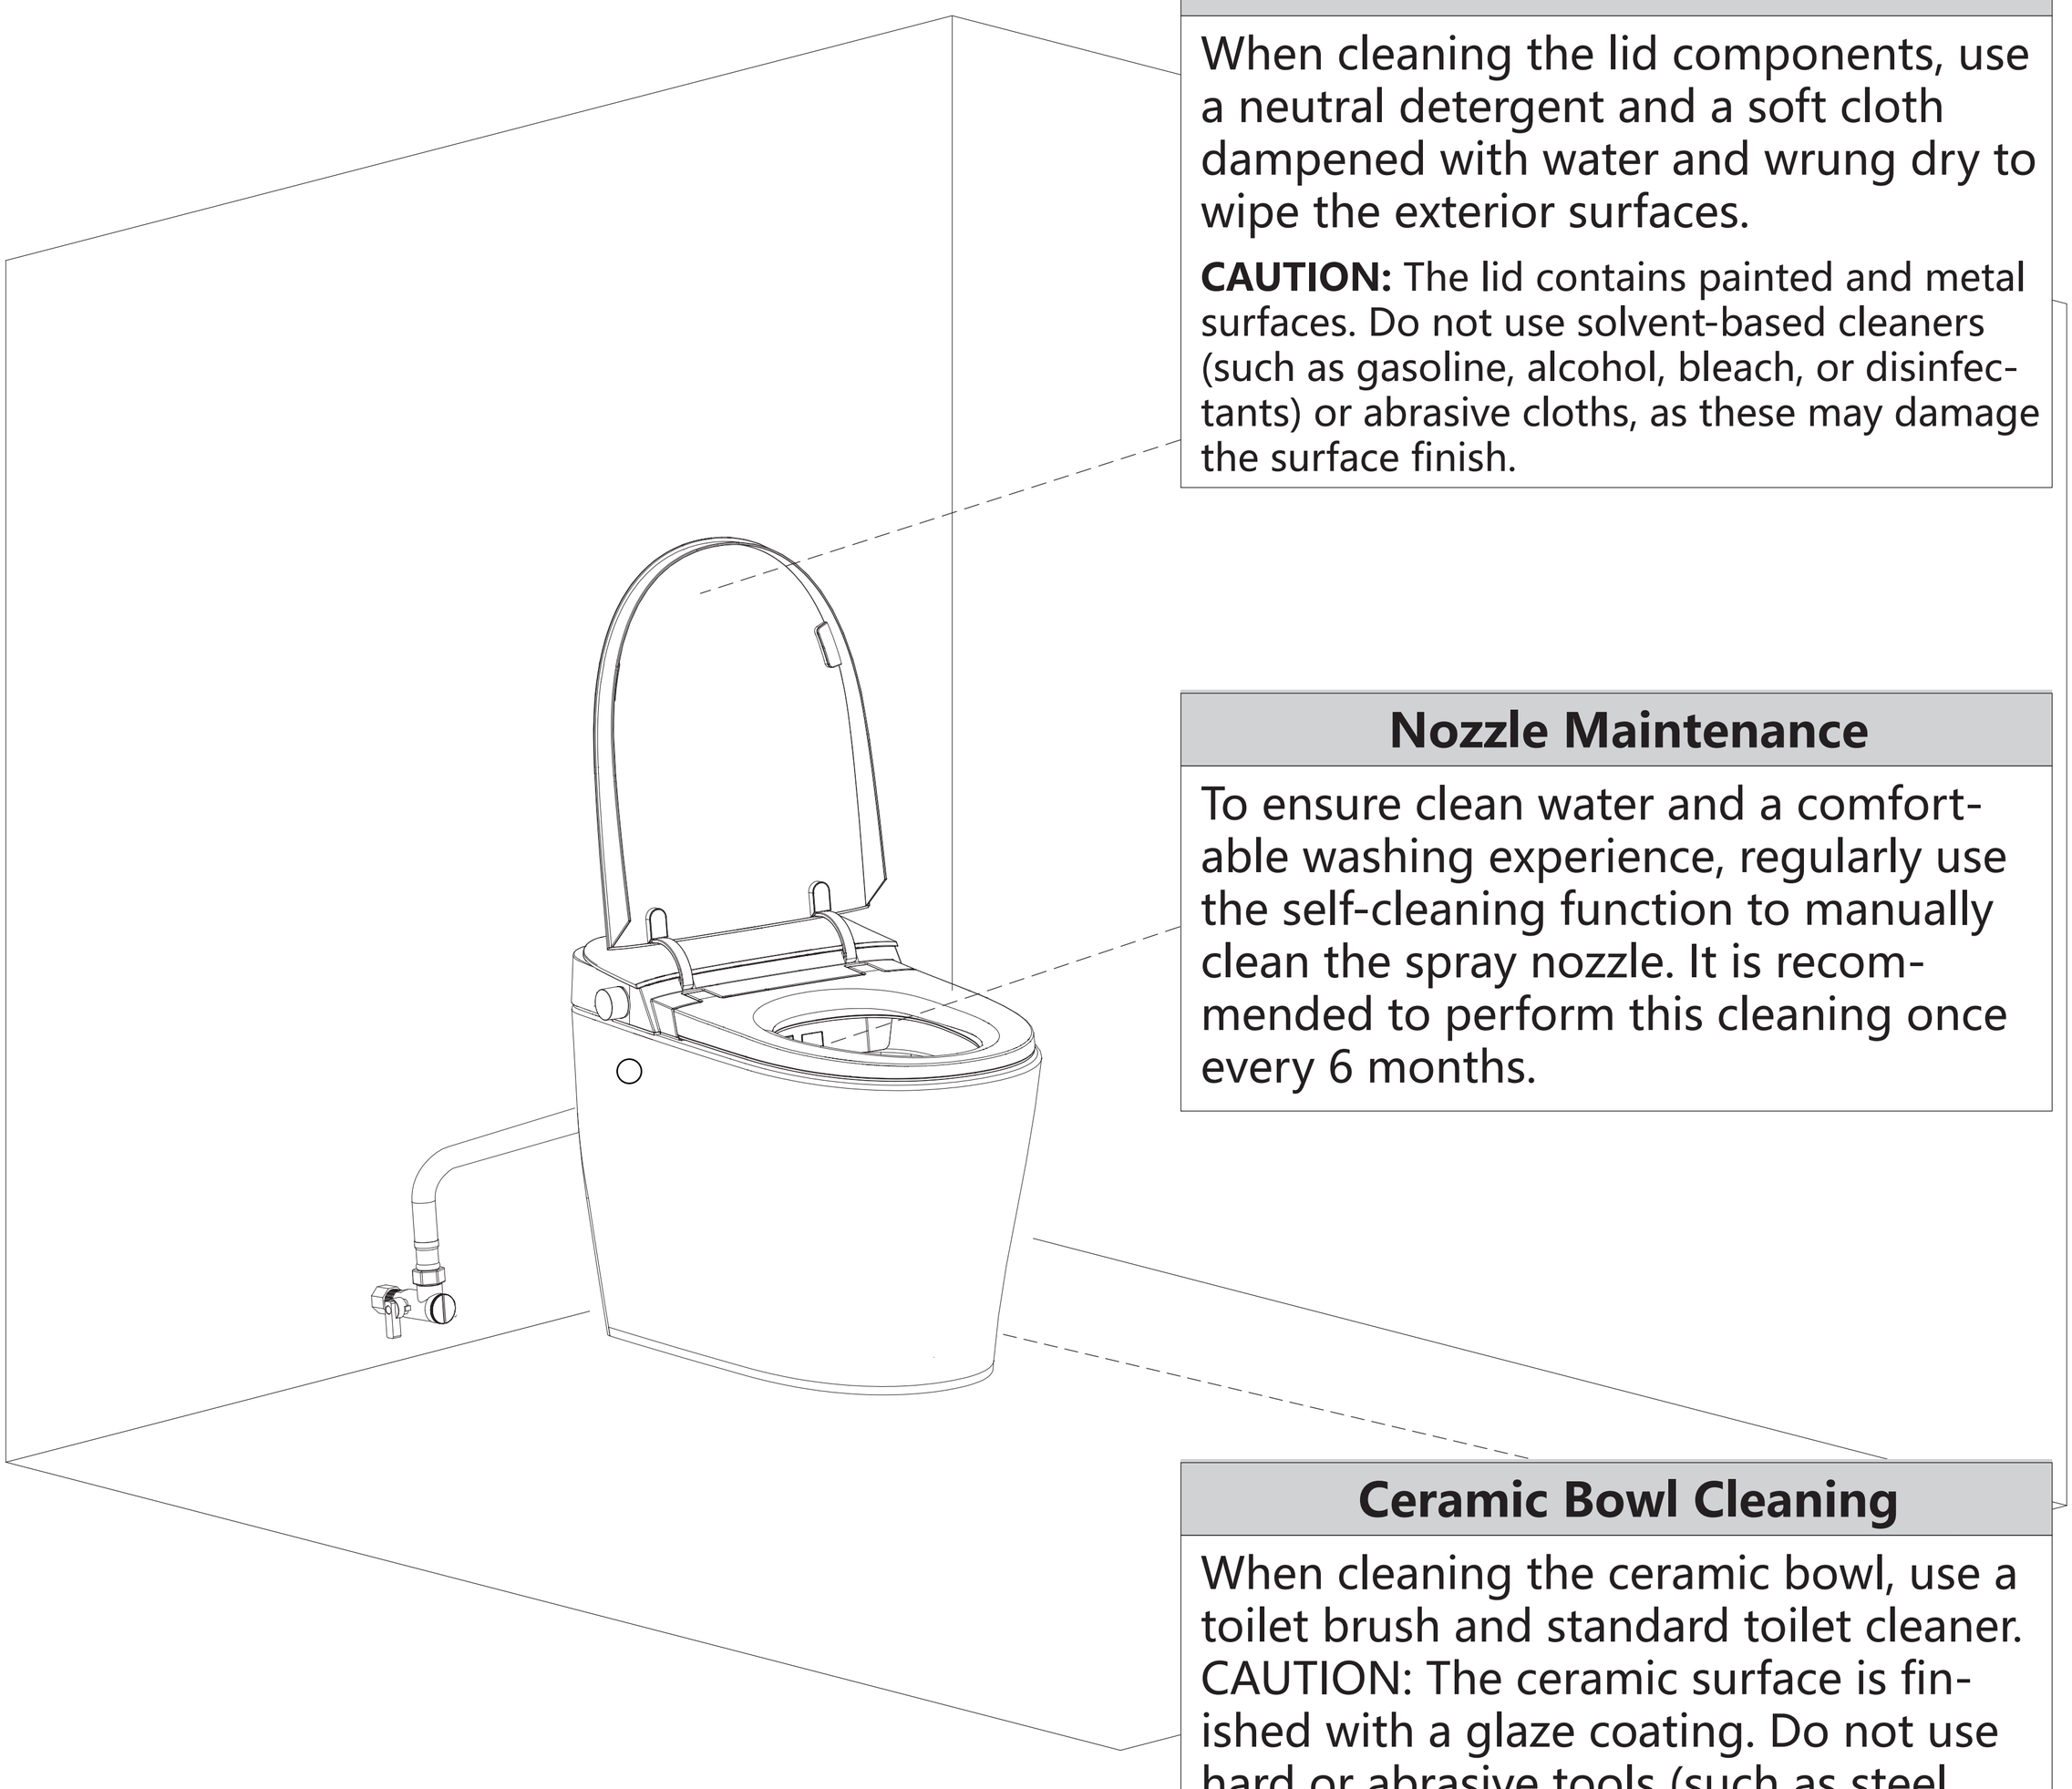

Toilet Lid Care

When cleaning the lid components, use a neutral detergent and a soft cloth dampened with water and wrung dry to wipe the exterior surfaces.

CAUTION: The lid contains painted and metal surfaces. Do not use solvent-based cleaners (such as gasoline, alcohol, bleach, or disinfectants) or abrasive cloths, as these may damage the surface finish.

Nozzle Maintenance

To ensure clean water and a comfortable washing experience, regularly use the self-cleaning function to manually clean the spray nozzle. It is recommended to perform this cleaning once every 6 months.

Ceramic Bowl Cleaning

When cleaning the ceramic bowl, use a toilet brush and standard toilet cleaner. CAUTION: The ceramic surface is finished with a glaze coating. Do not use hard or abrasive tools (such as steel wool), as this may damage the ceramic surface.


NOTE: Illustrations are for reference only and may not exactly represent the product.

+1 6265304012
hucijyo@gmail.com

MAIN UNIT OPERATION INSTRUCTIONS

Main Unit Functions

1. Flush Button: Press the side flush button or the foot control button once to perform a single flush.
2. Knob:
Rotate 90° counterclockwise (hear a “click”) to activate the Front Wash.
Rotate 90° clockwise (hear a “click”) to activate the Rear Wash.
Turn to the middle position (hear a “click”) to Stop the function.

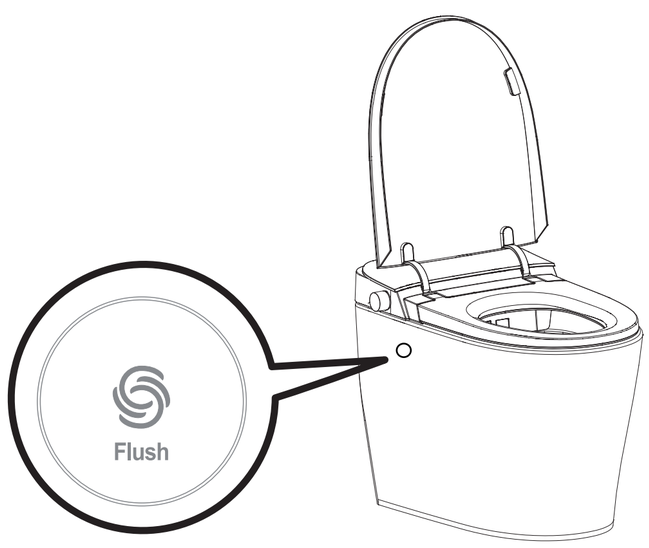





Button Flush


Short press the button " " to flush once.

Foot Control Flush

Press the foot control button to flush once.

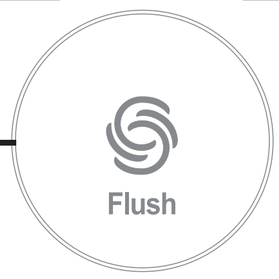

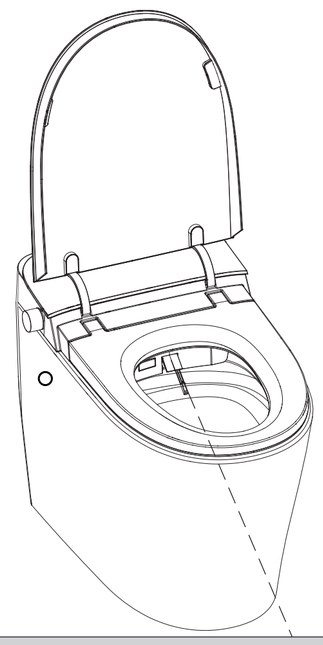

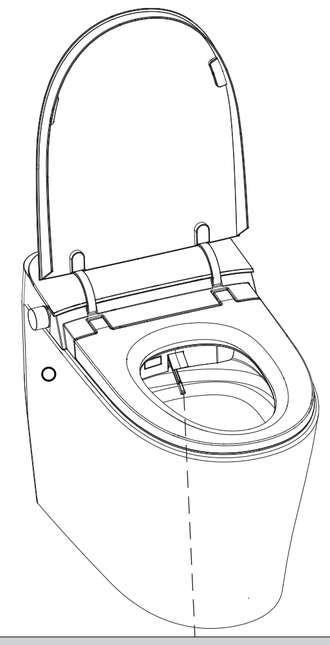

Front Wash

Rotate the knob to the Front Wash position to start the spray.

Rear Wash

Rotate the knob to the Rear Wash position to start the spray.



NOTE: Illustrations are for reference only and may not exactly represent the product.

+1 6265304012
hucijyo@gmail.com

TROUBLESHOOTING

If the product is not functioning properly, please follow these steps to identify the issue:
1. Is the water supply valve turned ON? Is water supply normal?
2. Check the following list of common issues and corresponding solutions.
If the problem persists after following the above steps, please contact Customer Service immediately: +1 6265304012

Symptom		Check	Solution
Washing Function	Spray nozzle does not spray or water flow is low	Is the water supply valve fully open?	Fully open the water supply valve
		Is the water inlet blocked?	Clean the inlet filter or remove any kinks in the water supply line
Flushing	No flush or low water flow	Is the water supply valve fully open?	Fully open the water supply valve
		Is the water inlet blocked?	Clean the inlet filter or remove any kinks in the water supply line

NOTE: Illustrations are for reference only and may not exactly represent the product.

+1 6265304012
hucijyo@gmail.com

Phone: +1 6265304012
Email: hucijyo@gmail.com

LIMITED WARRANTY COVERAGE

2-YEAR LIMITED WARRANTY
Our products are made with quality materials and excelle nt craftsmanship to provide customers with a long-lasting product. If any defects in materials or craftsmanship are found under normal use within the first two years of delivery, we will provide replacement parts at no charge or, at its option, replace any product or part of the product deemed defective under normal installation, use, service, and maintenance. This warranty applies only to the original purchaser. Proof of purchase will be required to process any claims. SCRATCHES ARE NOT COVERED UNDER WARRANTY.

The manufacturer warrants this product to be free of manufacture defects during the above mentioned warranty time. Please keep a copy of the original invoice as proof of purchase.

we will, as its option, (1) repair or replace the defective part(s) or product(s) at no charge; (2) issue a refund of the original purchase price of the product(s) (Valid within 30 days from the date of delivery); or (3) issue a credit to be applied toward the purchase of a new our product shipping/delivery charges may apply and are in our sole discretion.

We recommends the installations to be made by a licens ed, professional plumber. We will not be held responsibl e for any damage or product failure due to improper ins tallation, misuse, or failure to use a licensed professional . We are not responsible for any removal or installation cost.

This limited warranty shall not apply to goods which have been subject to accident, negligence, improper installation, product abuse, product misuse, or use of cleaners containing abrasives, alcohol or other organic solvents, whether performed by a contractor, service company, or yourself, are excluded from this warranty.

We responsibility under this limited warranty is limited to only to replacement parts and no other costs. We will not be responsible for labor charges and/or damage incurred by installation, repair or replacement, nor for any indirect incidental or conse- quential damages, losses, injury or costs of any nature relating to this product Except as provided by law, this limited warranty is in lieu of and excludes all other warranties, conditions, and guarantees, whether expressed or implied, statutory or otherwise, including without restriction those merchantability of fitness for use.

RESPONSIBILITIES OF OTHERS
Inspecting the unit prior to installation is the responsibili- ty of the installer or building contractor who acts on behalf of the user. They are responsible for ensuring the unit is free of defect or damage.

Notices are placed on and in the unit and on the ship- ping carton advising the installer of this responsibility.

In the event of a problem, the unit must not be installed. We are not responsible for failures or damage that could have been discovered, repaired, or avoided by proper inspection and testing prior to installation.

Damage occurring in transit is the responsibility of the carrier. The user or installer MUST open the crate and inspect the unit for damage when it is delivered. If damage is discovered, it must be reported immediately to the seller and the carrier in writing, and an inspection requested. Failure of the carrier to respond should be reported to the seller and the carrier. Your freight claims should be filed promptly thereafter.

LIMITATIONS AND EXCLUSIONS
This warranty does not cover instances of negligence, misuse, abuse, improper installation, carelessness, acci- dent, hard water ormineral deposits, exposure to corro- sive materials, misapplication, damages caused by improper maintenance, alteration of theproduct, or failure to follow care or installation instructions enclosed with your product. The warranty becomes invalid if the Our product undergoes any alterations or if attempts are made to carry out repairs using unauthorized accessories o r parts from our company.

We will not be liable for loss of use of our products, inconvenience, or any other incidental or consequential costs, expense or damages. Please note that some states do not allow the exclusion or limitation of incidental damages.

DISCLAIMER
Except as expressly provided, there shall be no warranty or obligation, express or implied, oral or statutory. No dealer or other person has the authority to make any warranties or representations concerning our company or our products. In no event shall our company be held responsible for any such warranties or representations.

WARRANTY SERVICE
NOTE: When requesting warranty, be sure to have the following:
•Copy of original invoice
•Date of installation
•Description and pictures of defect
•Model number or description of model
To obtain warranty service and replacement part, please contact Our Customer Service. We will determine whether to repair or replace your product, issue a refund, or issue a credit.