













MOBILE TOOL CART

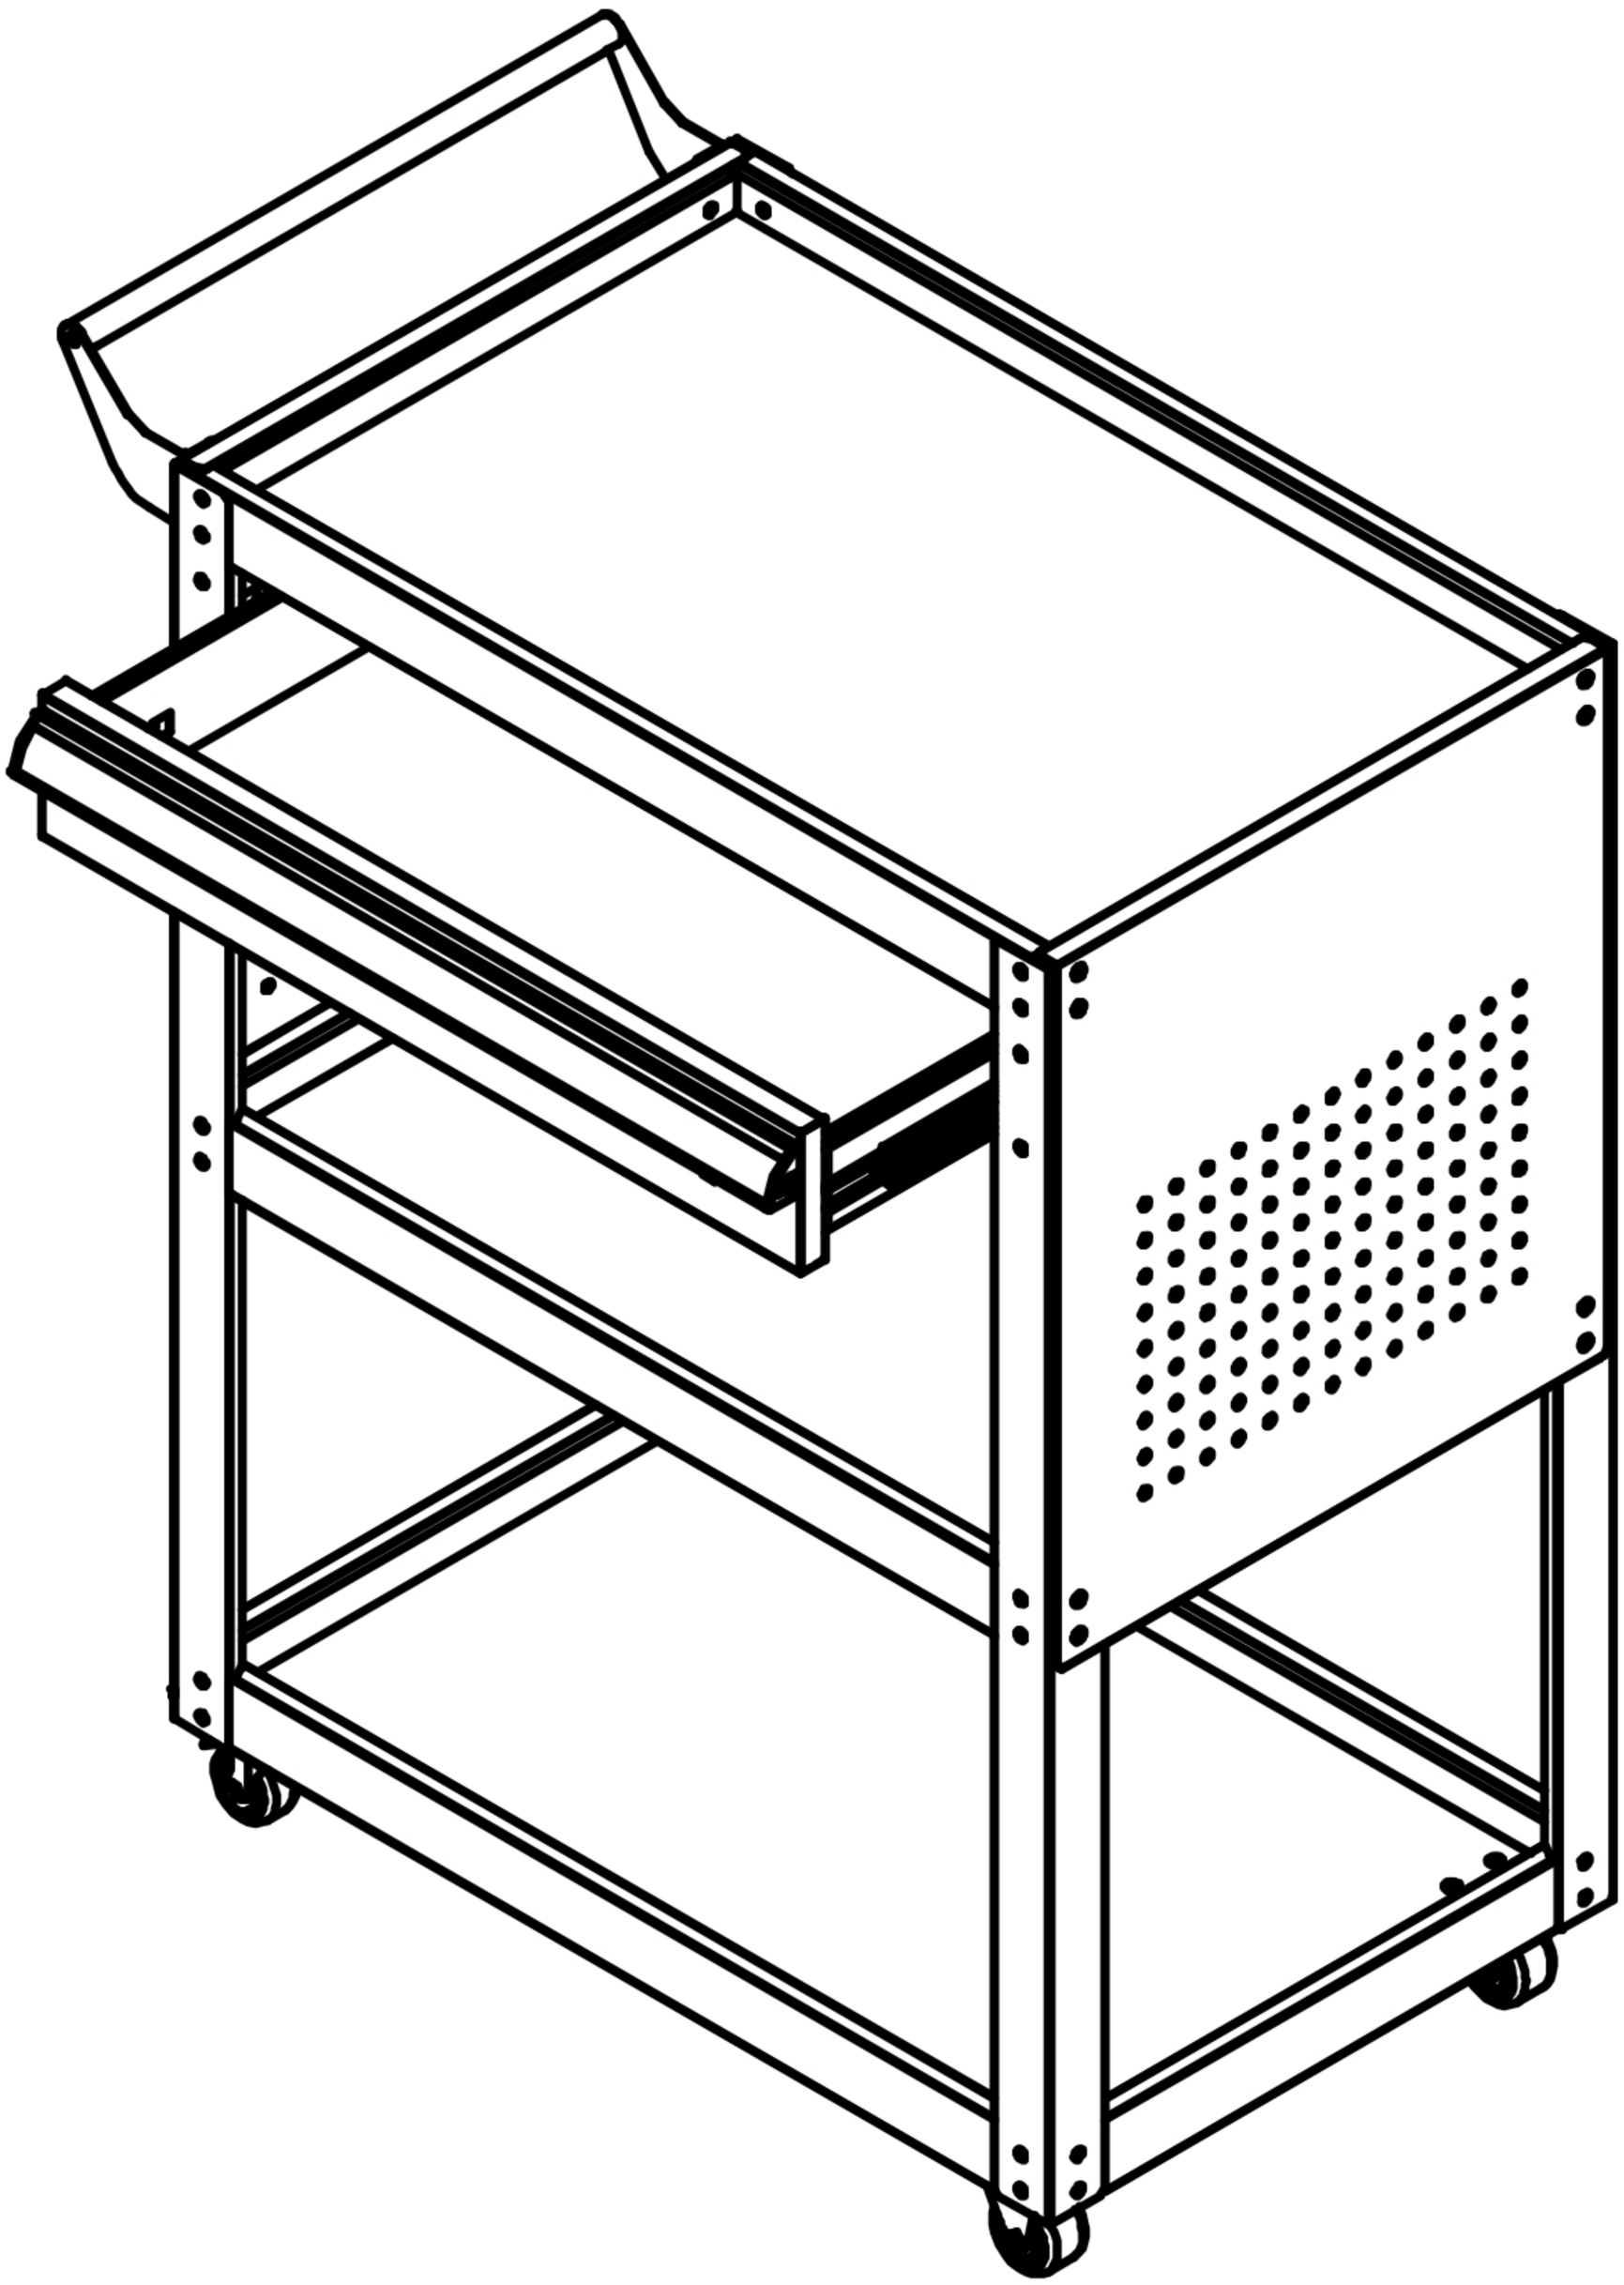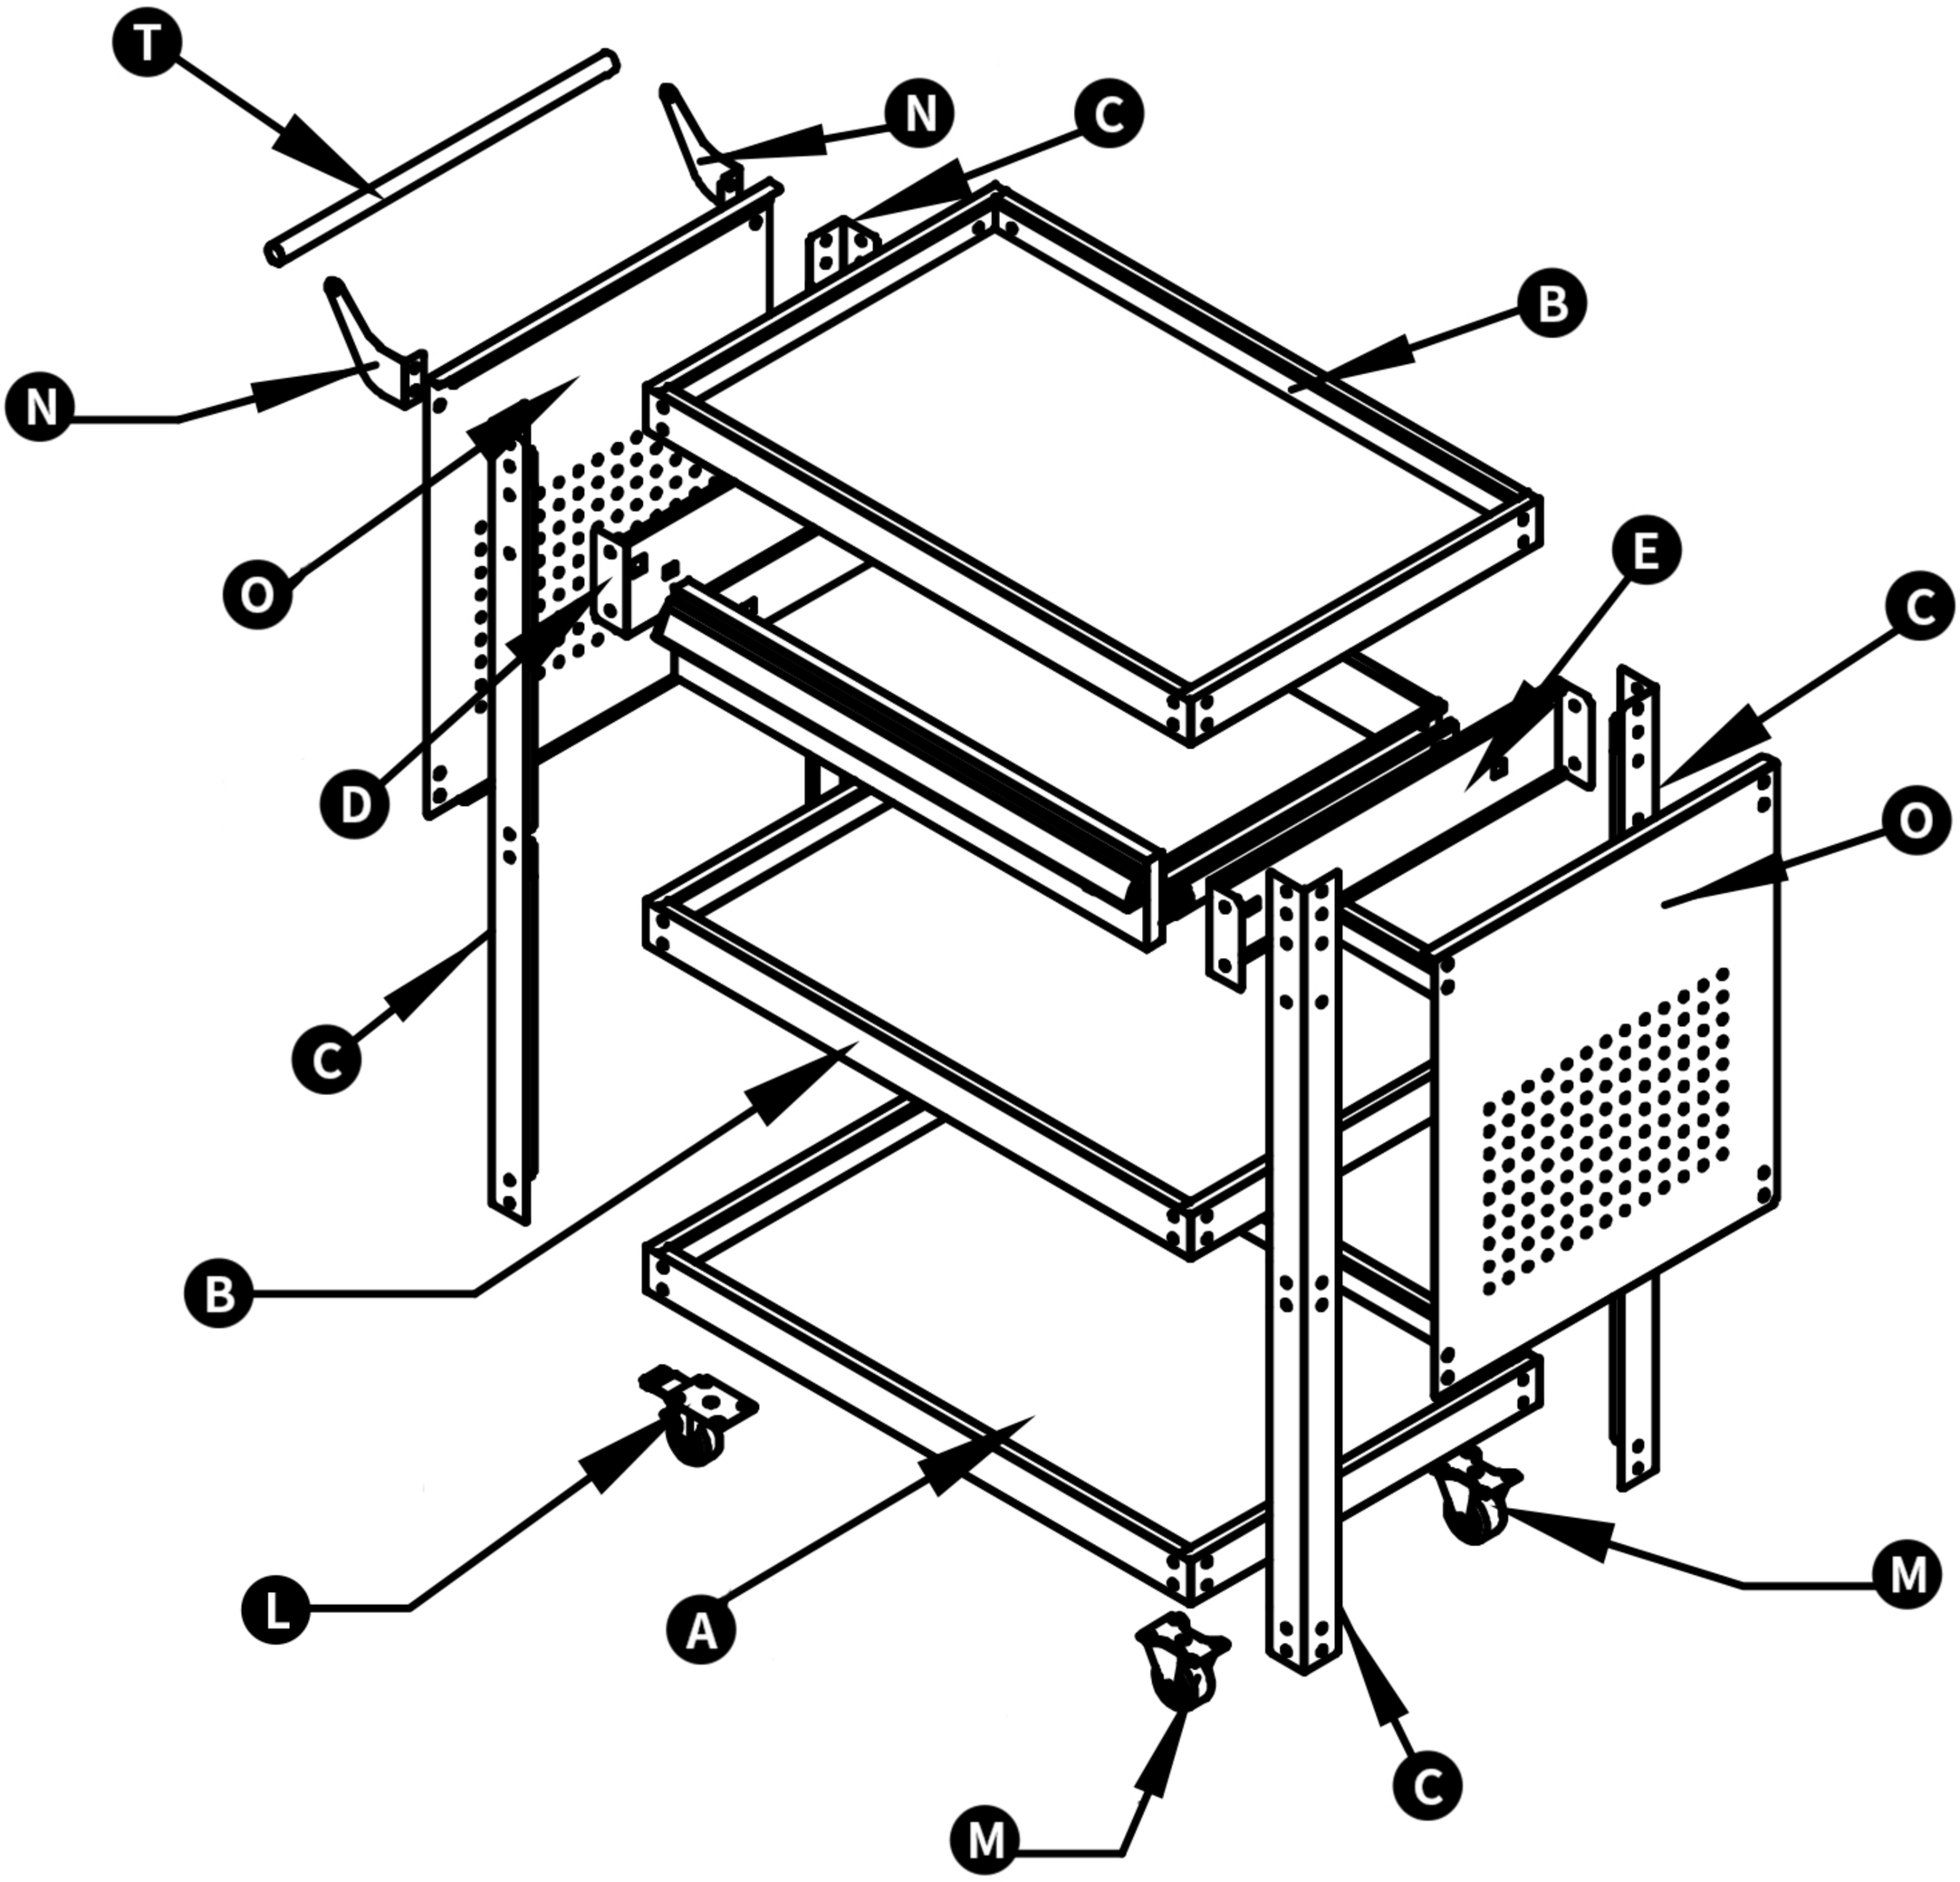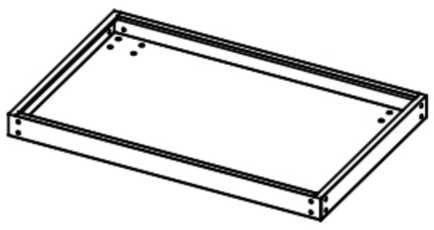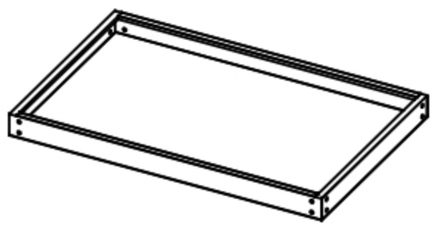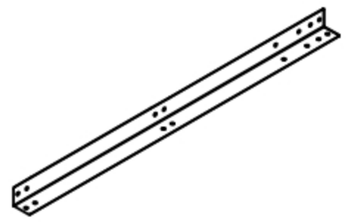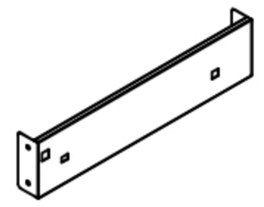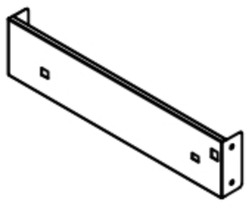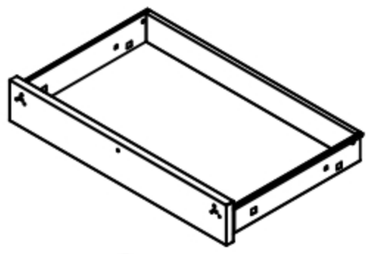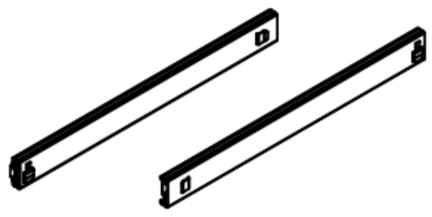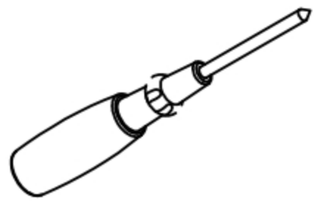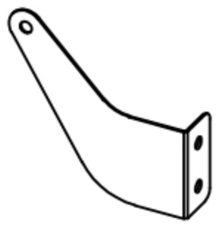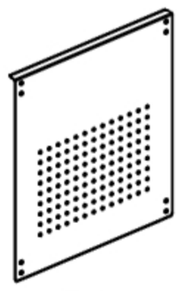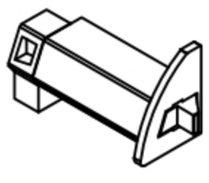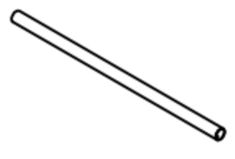


Customer Support Email:
cscenterus@outlook.com


T
N
C
N
B
O
E
C
D
O
C
B
L
A
M
C
M

Installation Accessories

 **A** x1	 **B** x2	 **C** x4	 **D** x1
 **E** x1	 **F** x1	(2 spare screws)  **G** x5	(2 spare screws)  **H** x6
 **I** x1	 **J** x1 (pair)	 **K** x1	 **L** x2
 **M** x2	 **N** x2 bilateral symmetry	 **O** x2	(6 spare screws)  **P** x80
(6 spare screws)  **Q** x80	 **R** x1	 **S** x1	 **T** x1

Part ·1

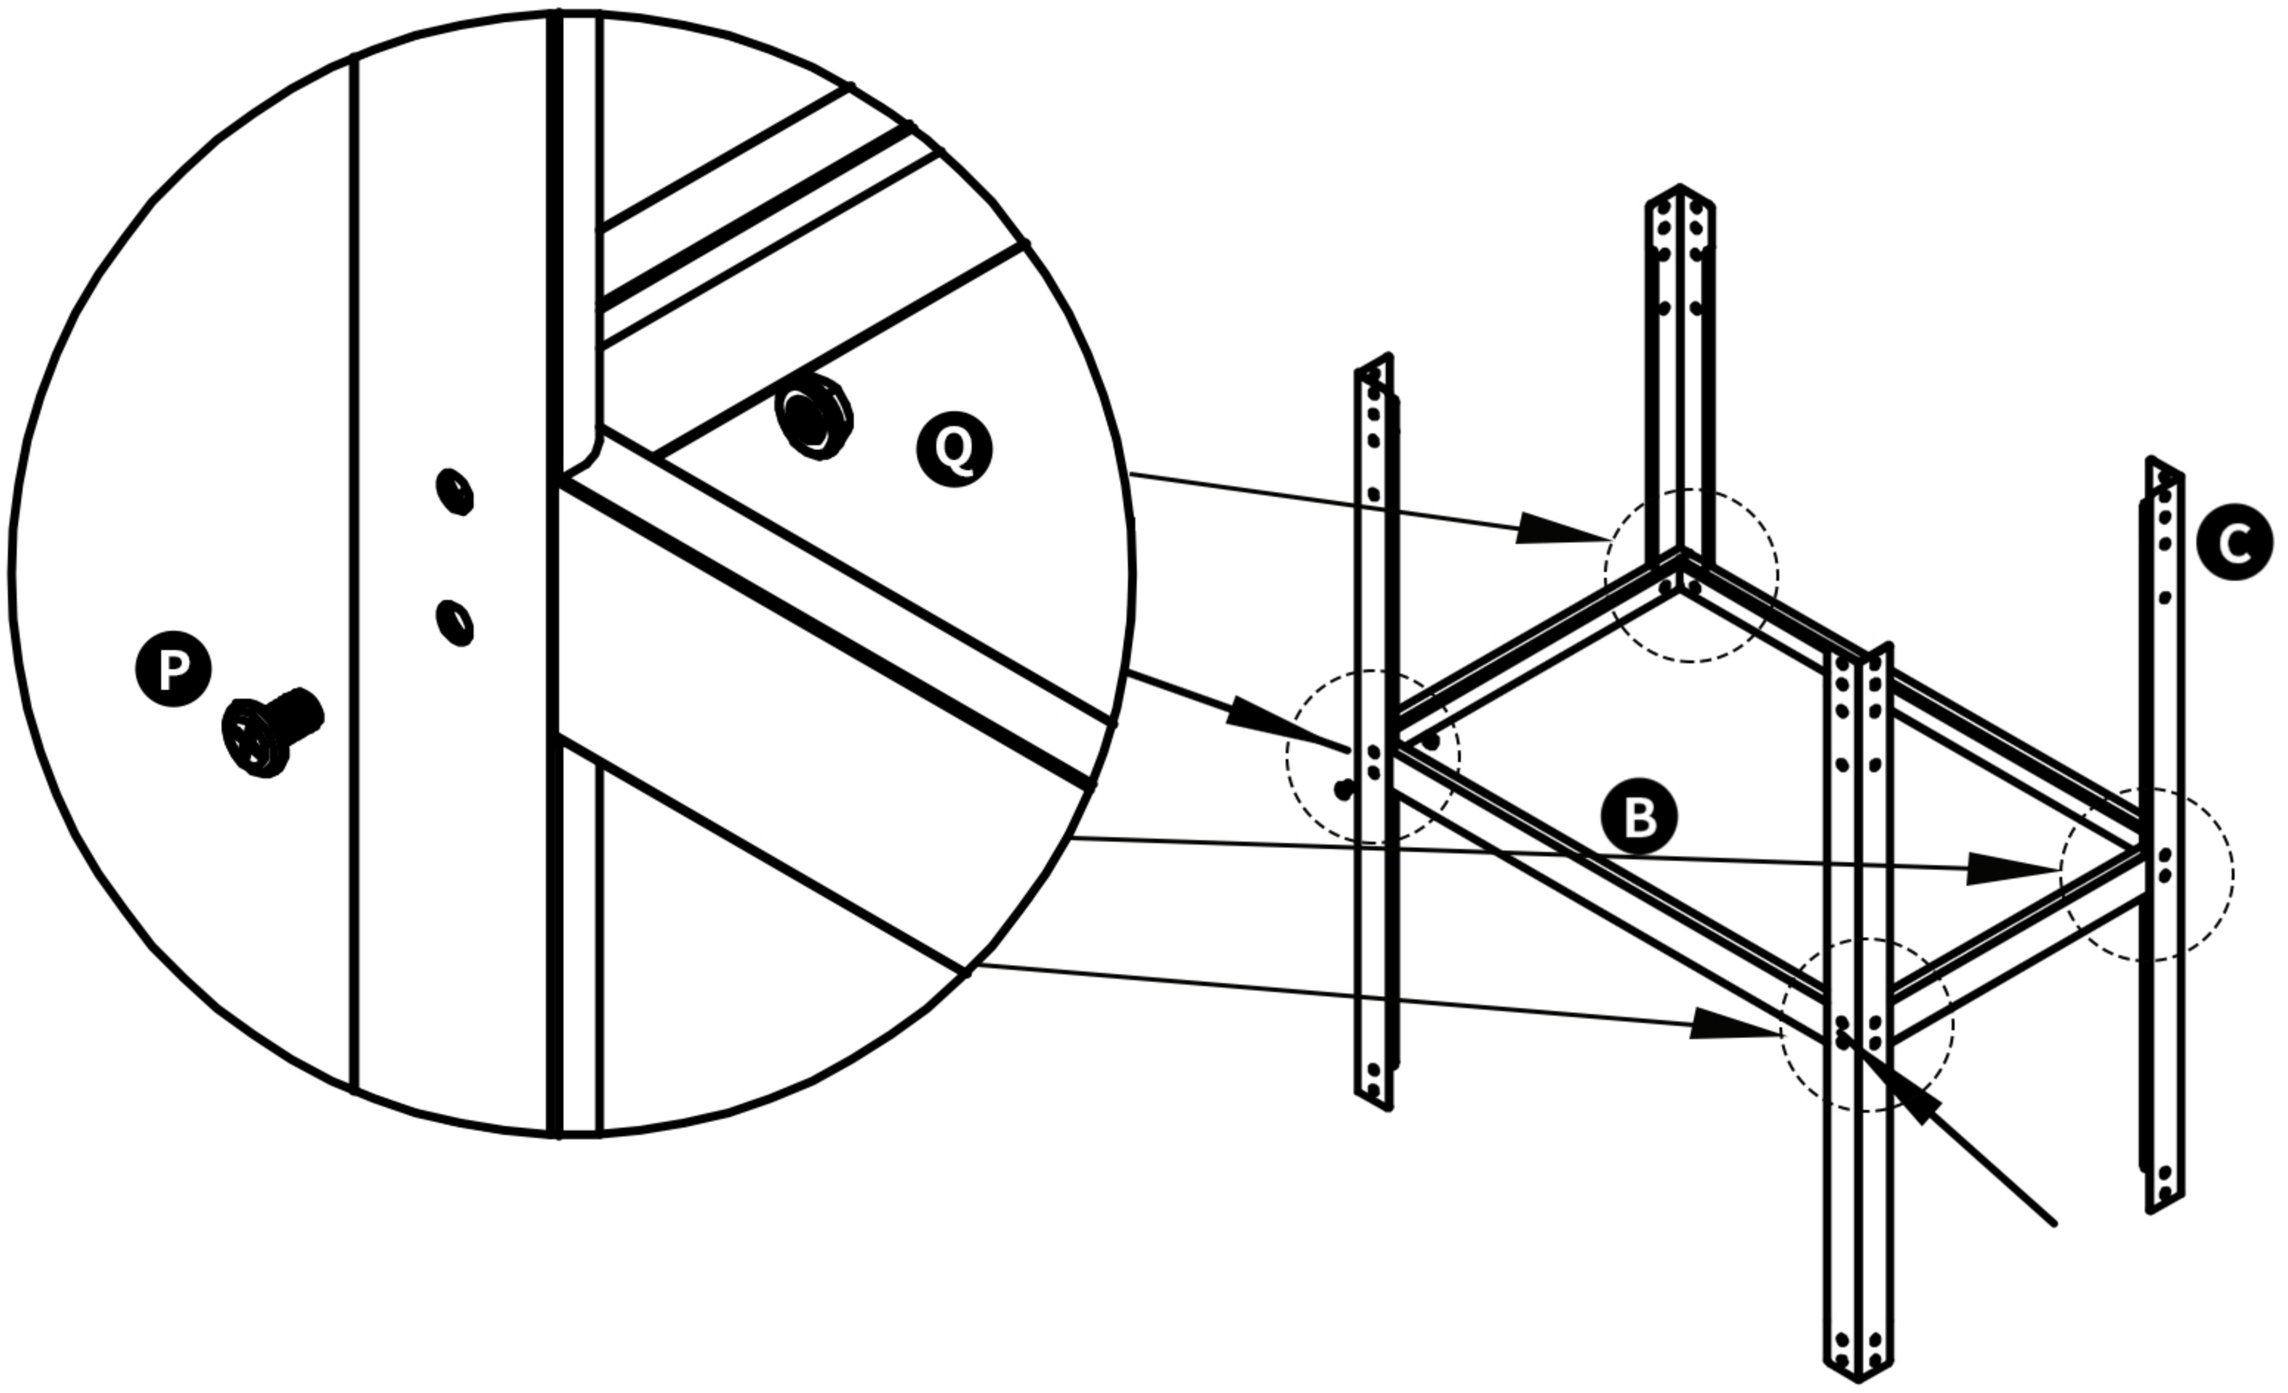


Install C on B.

1.Screws on the outside, nuts on the inside.
2.Install only the 2 long screwson the inner side, tighten all 8 screws fully after positioning.

P		16
Q		16

Part ·2

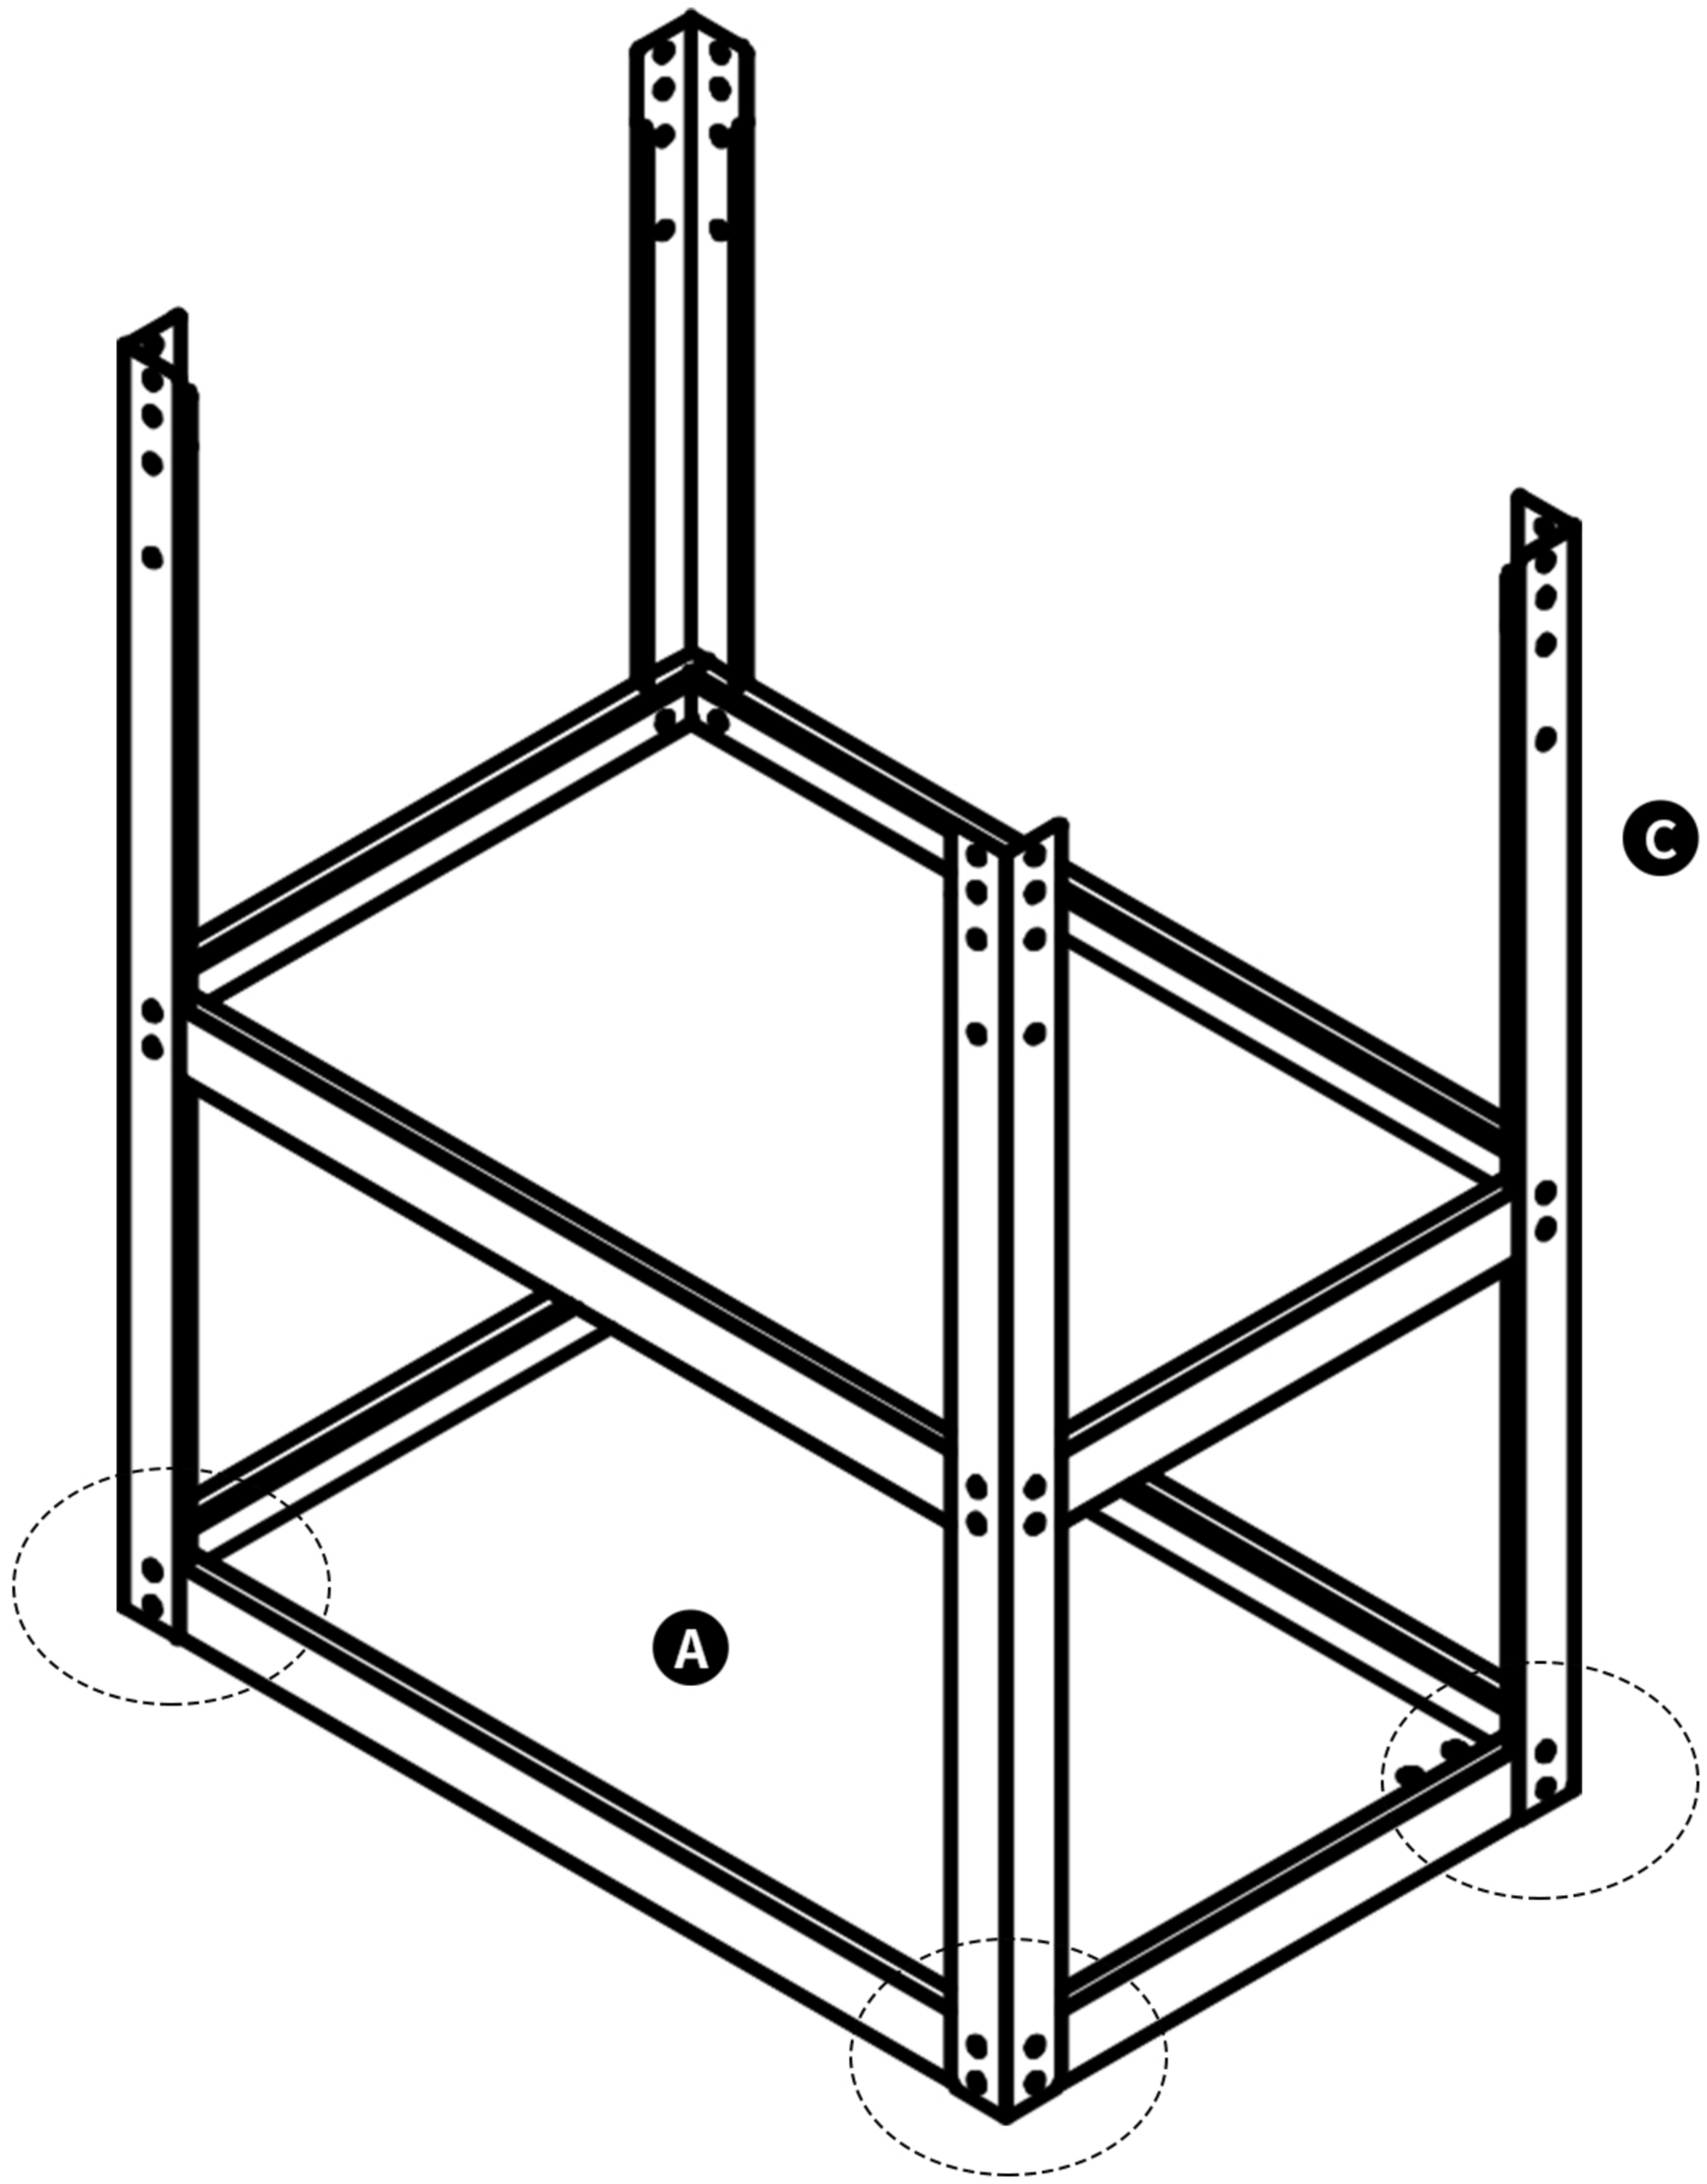


Install A on C.

Each corner has 4 screws, totaling 16 screws.

P		16
Q		16

Part ·3

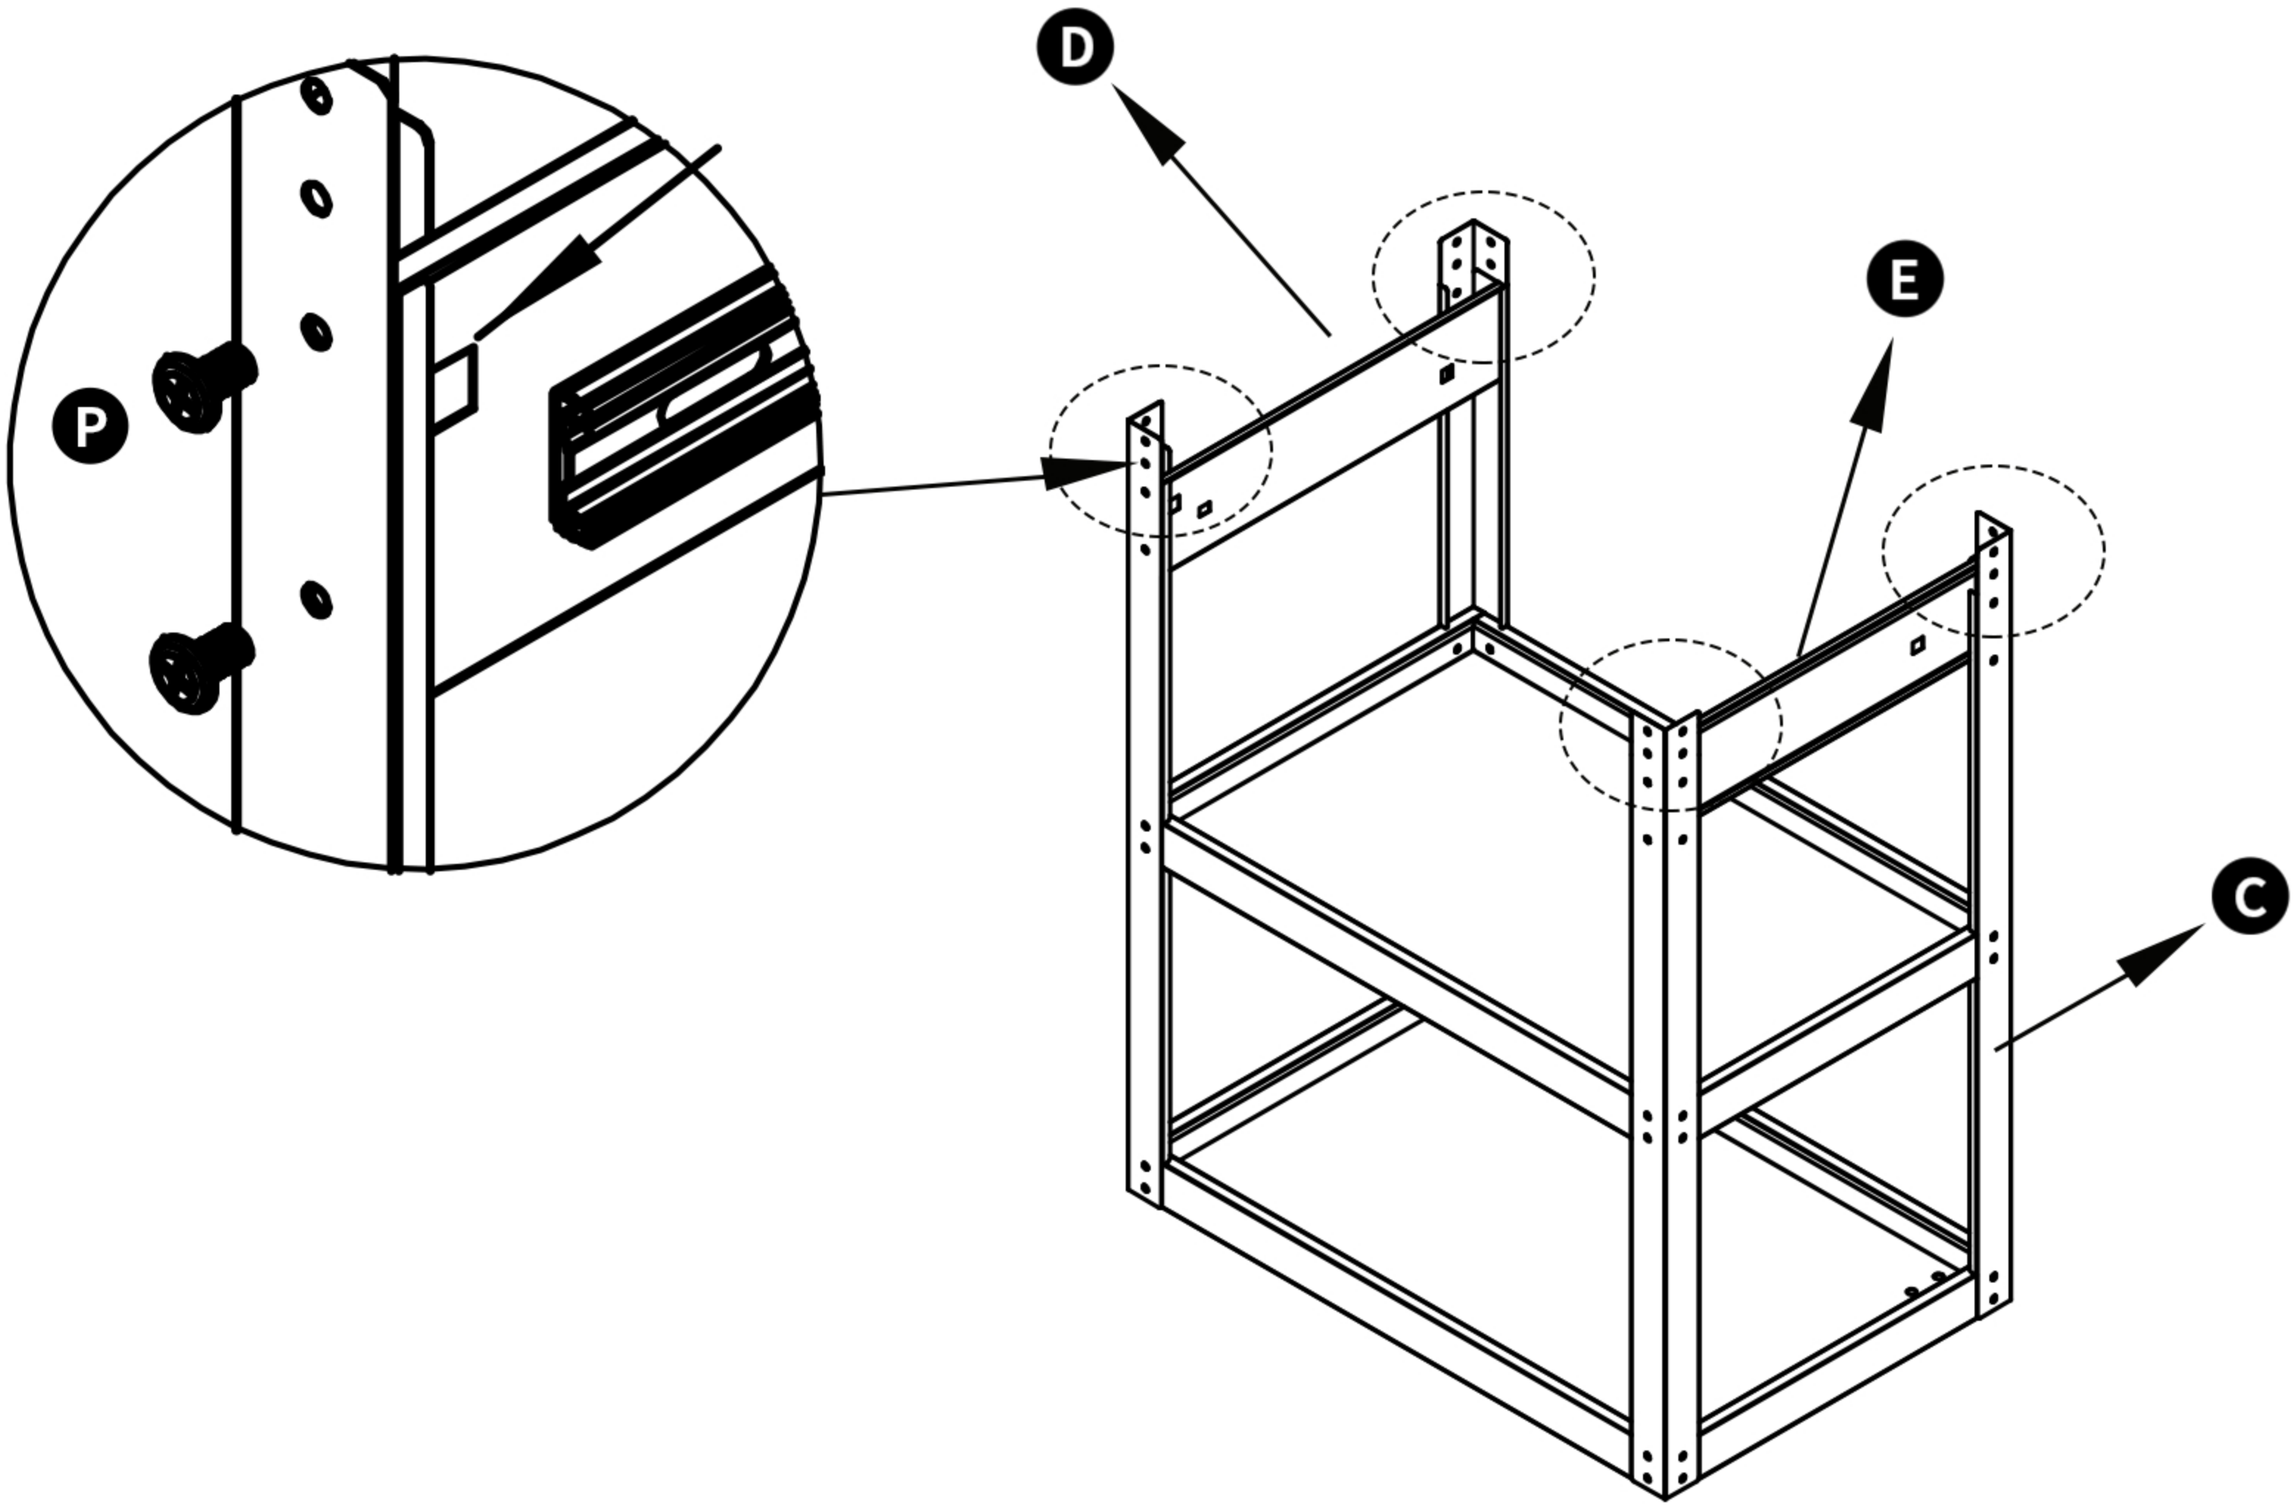


Install D and E on C.

Secure with screws, left and right installation total 8 screws.


P		8
Q		8

Part ·4

Drawer Assembly Instructions

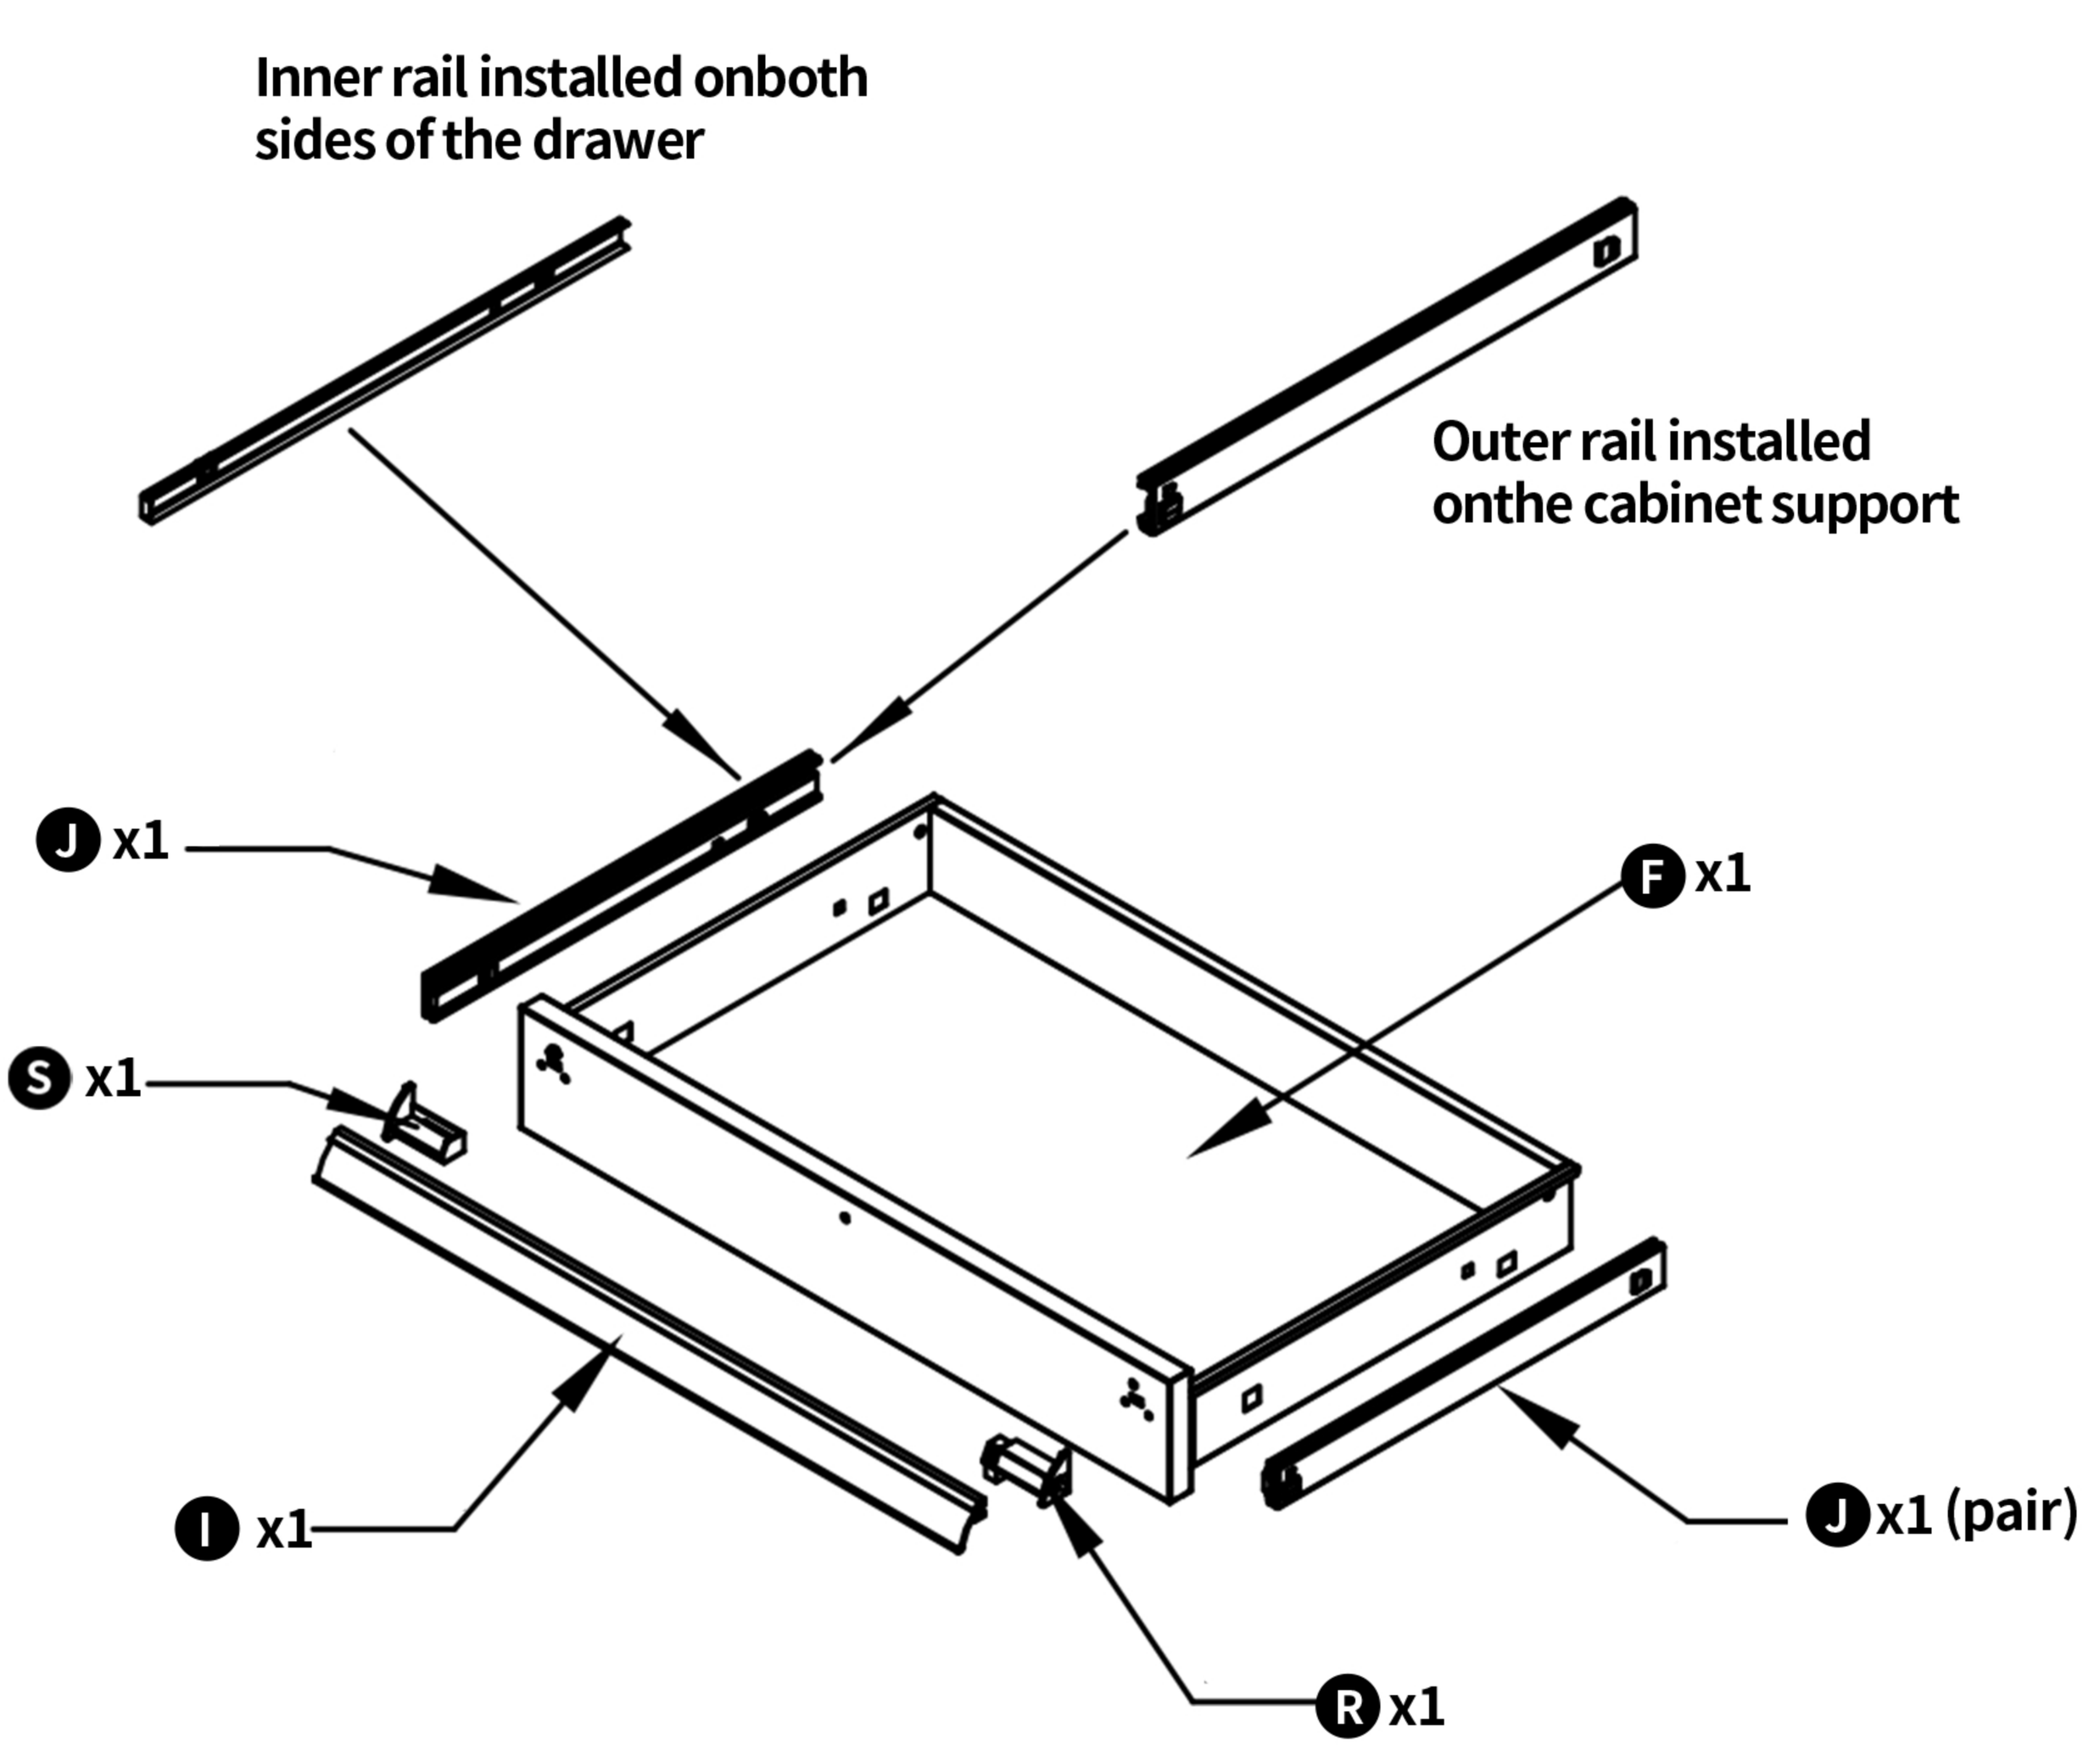


Part ·5

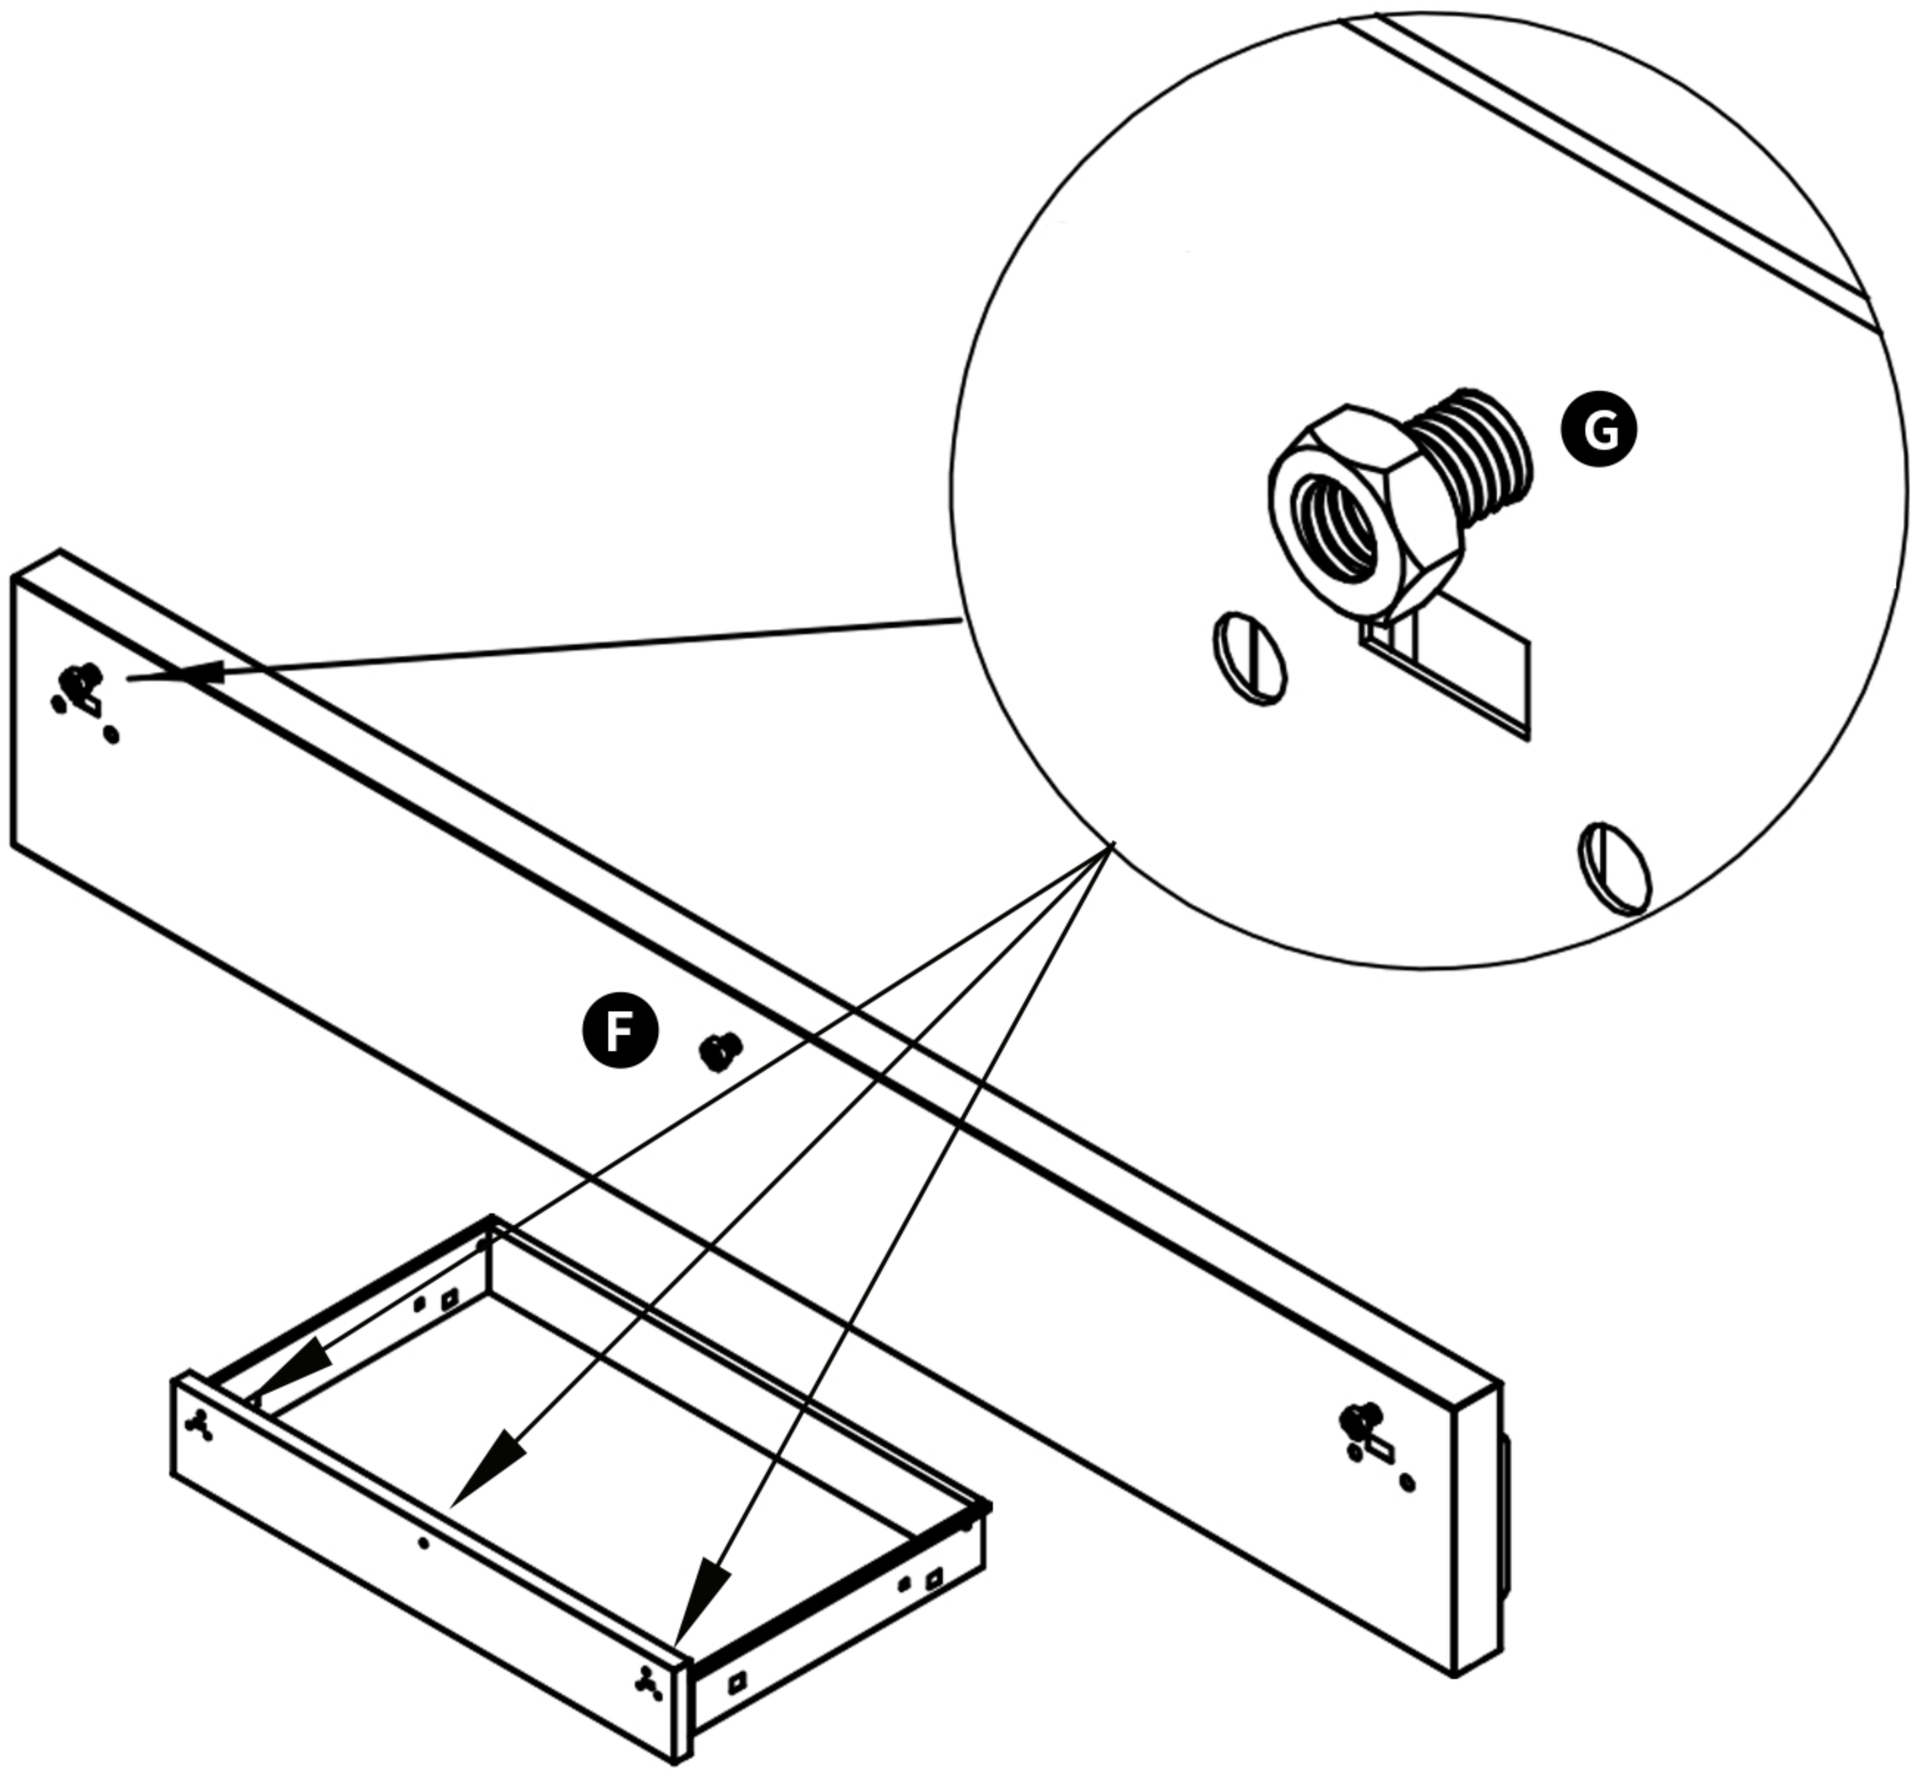


Connect part F and G as shown.

Note: Don't fully tighten them yet - leave room for adjustment.

G		3


Part ·6

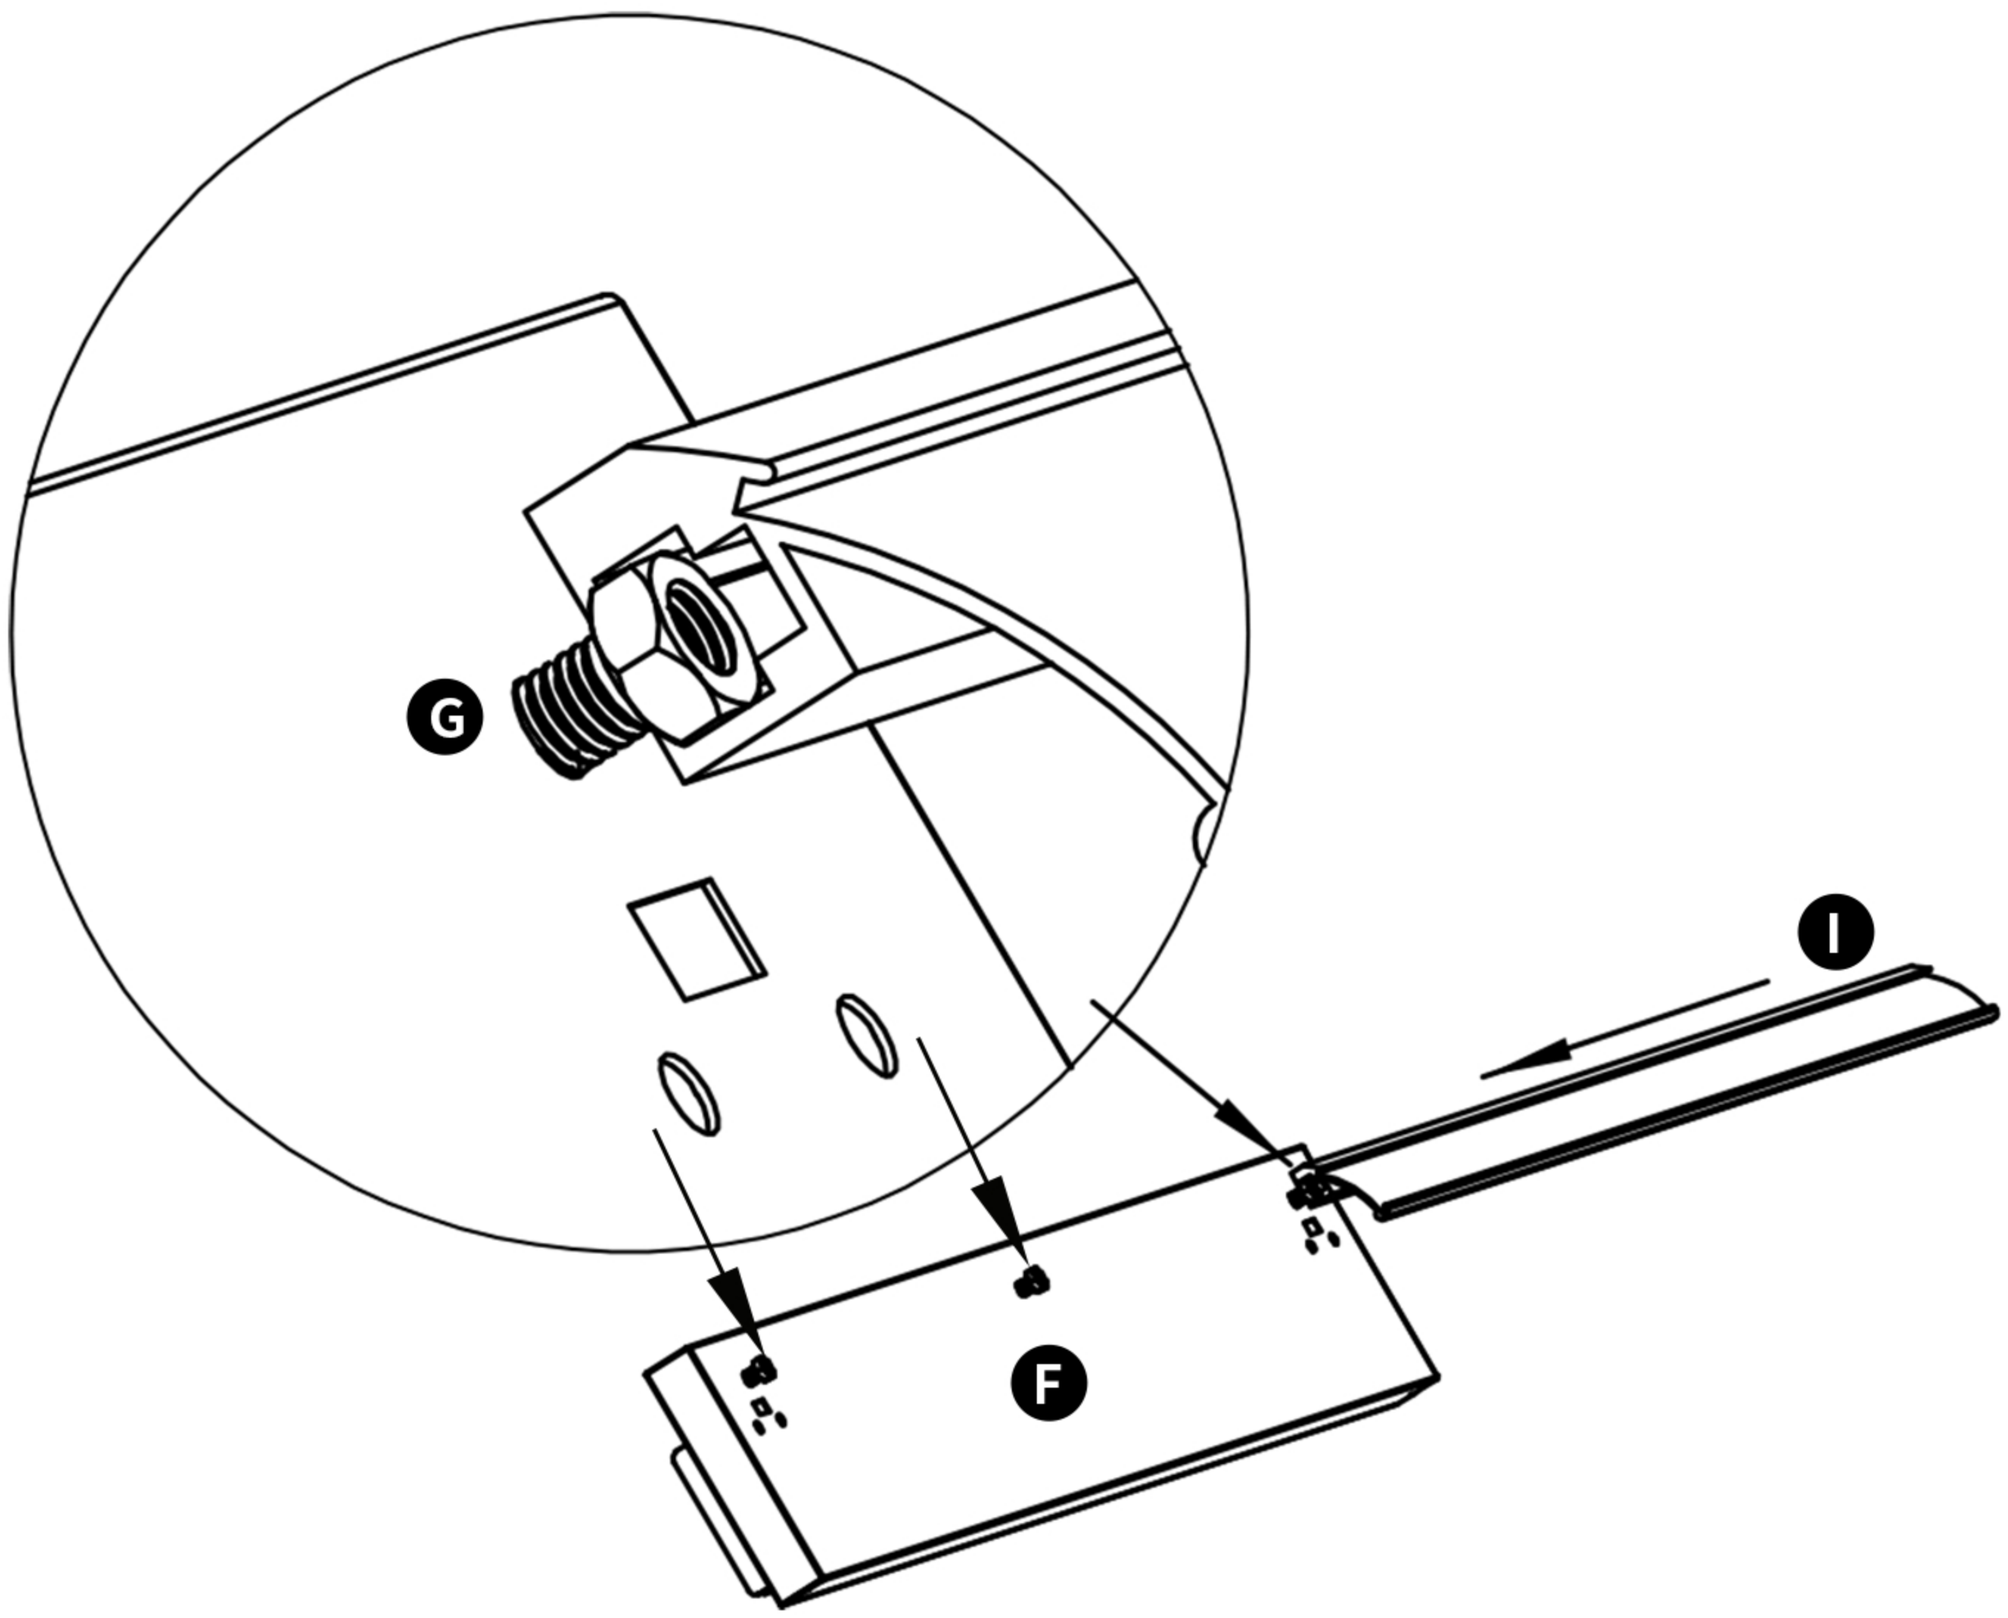

1.Insert the handle clip I horizontally into the arrows.


2.Following the direction indicated by the arrows, pass through the three screws one by one. After aligning the handle with the front panel of the drawer.

Part ·7

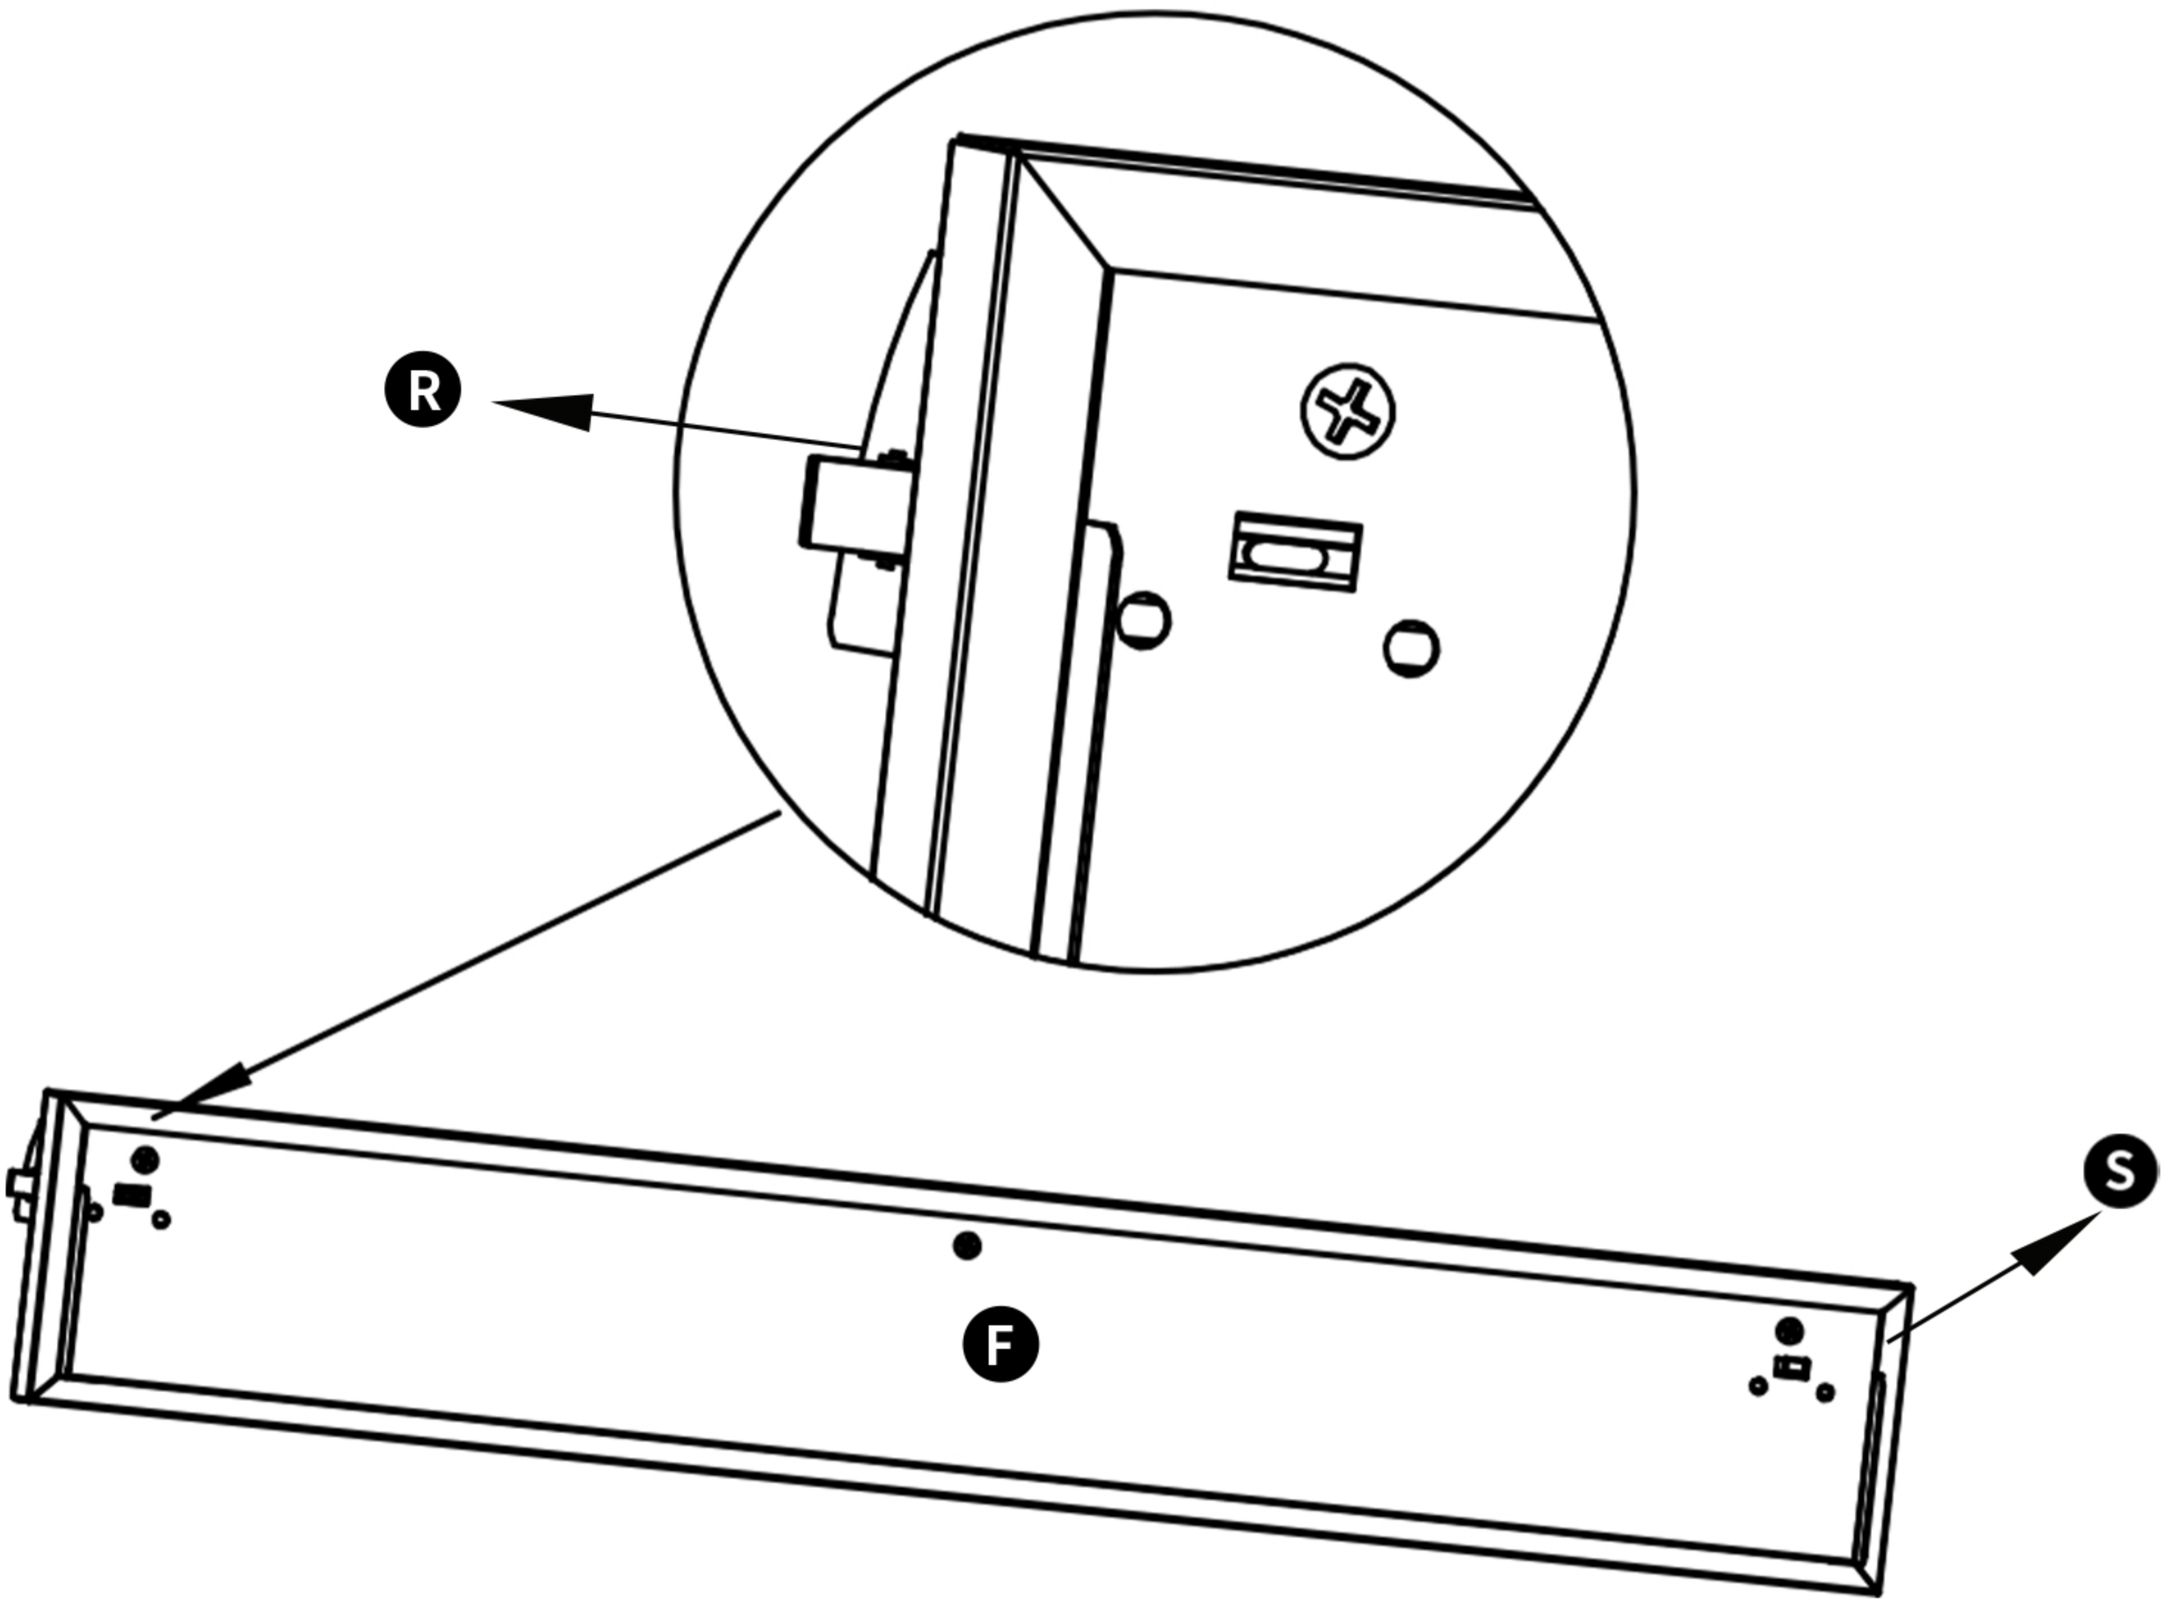


1.Insert the left and right inner plugs,the plug with a lock mechanism is for ther ight side.
2.Tighten the three screws so that the clips on both inner plugs fit into the square holes on the drawer.


Part ·8

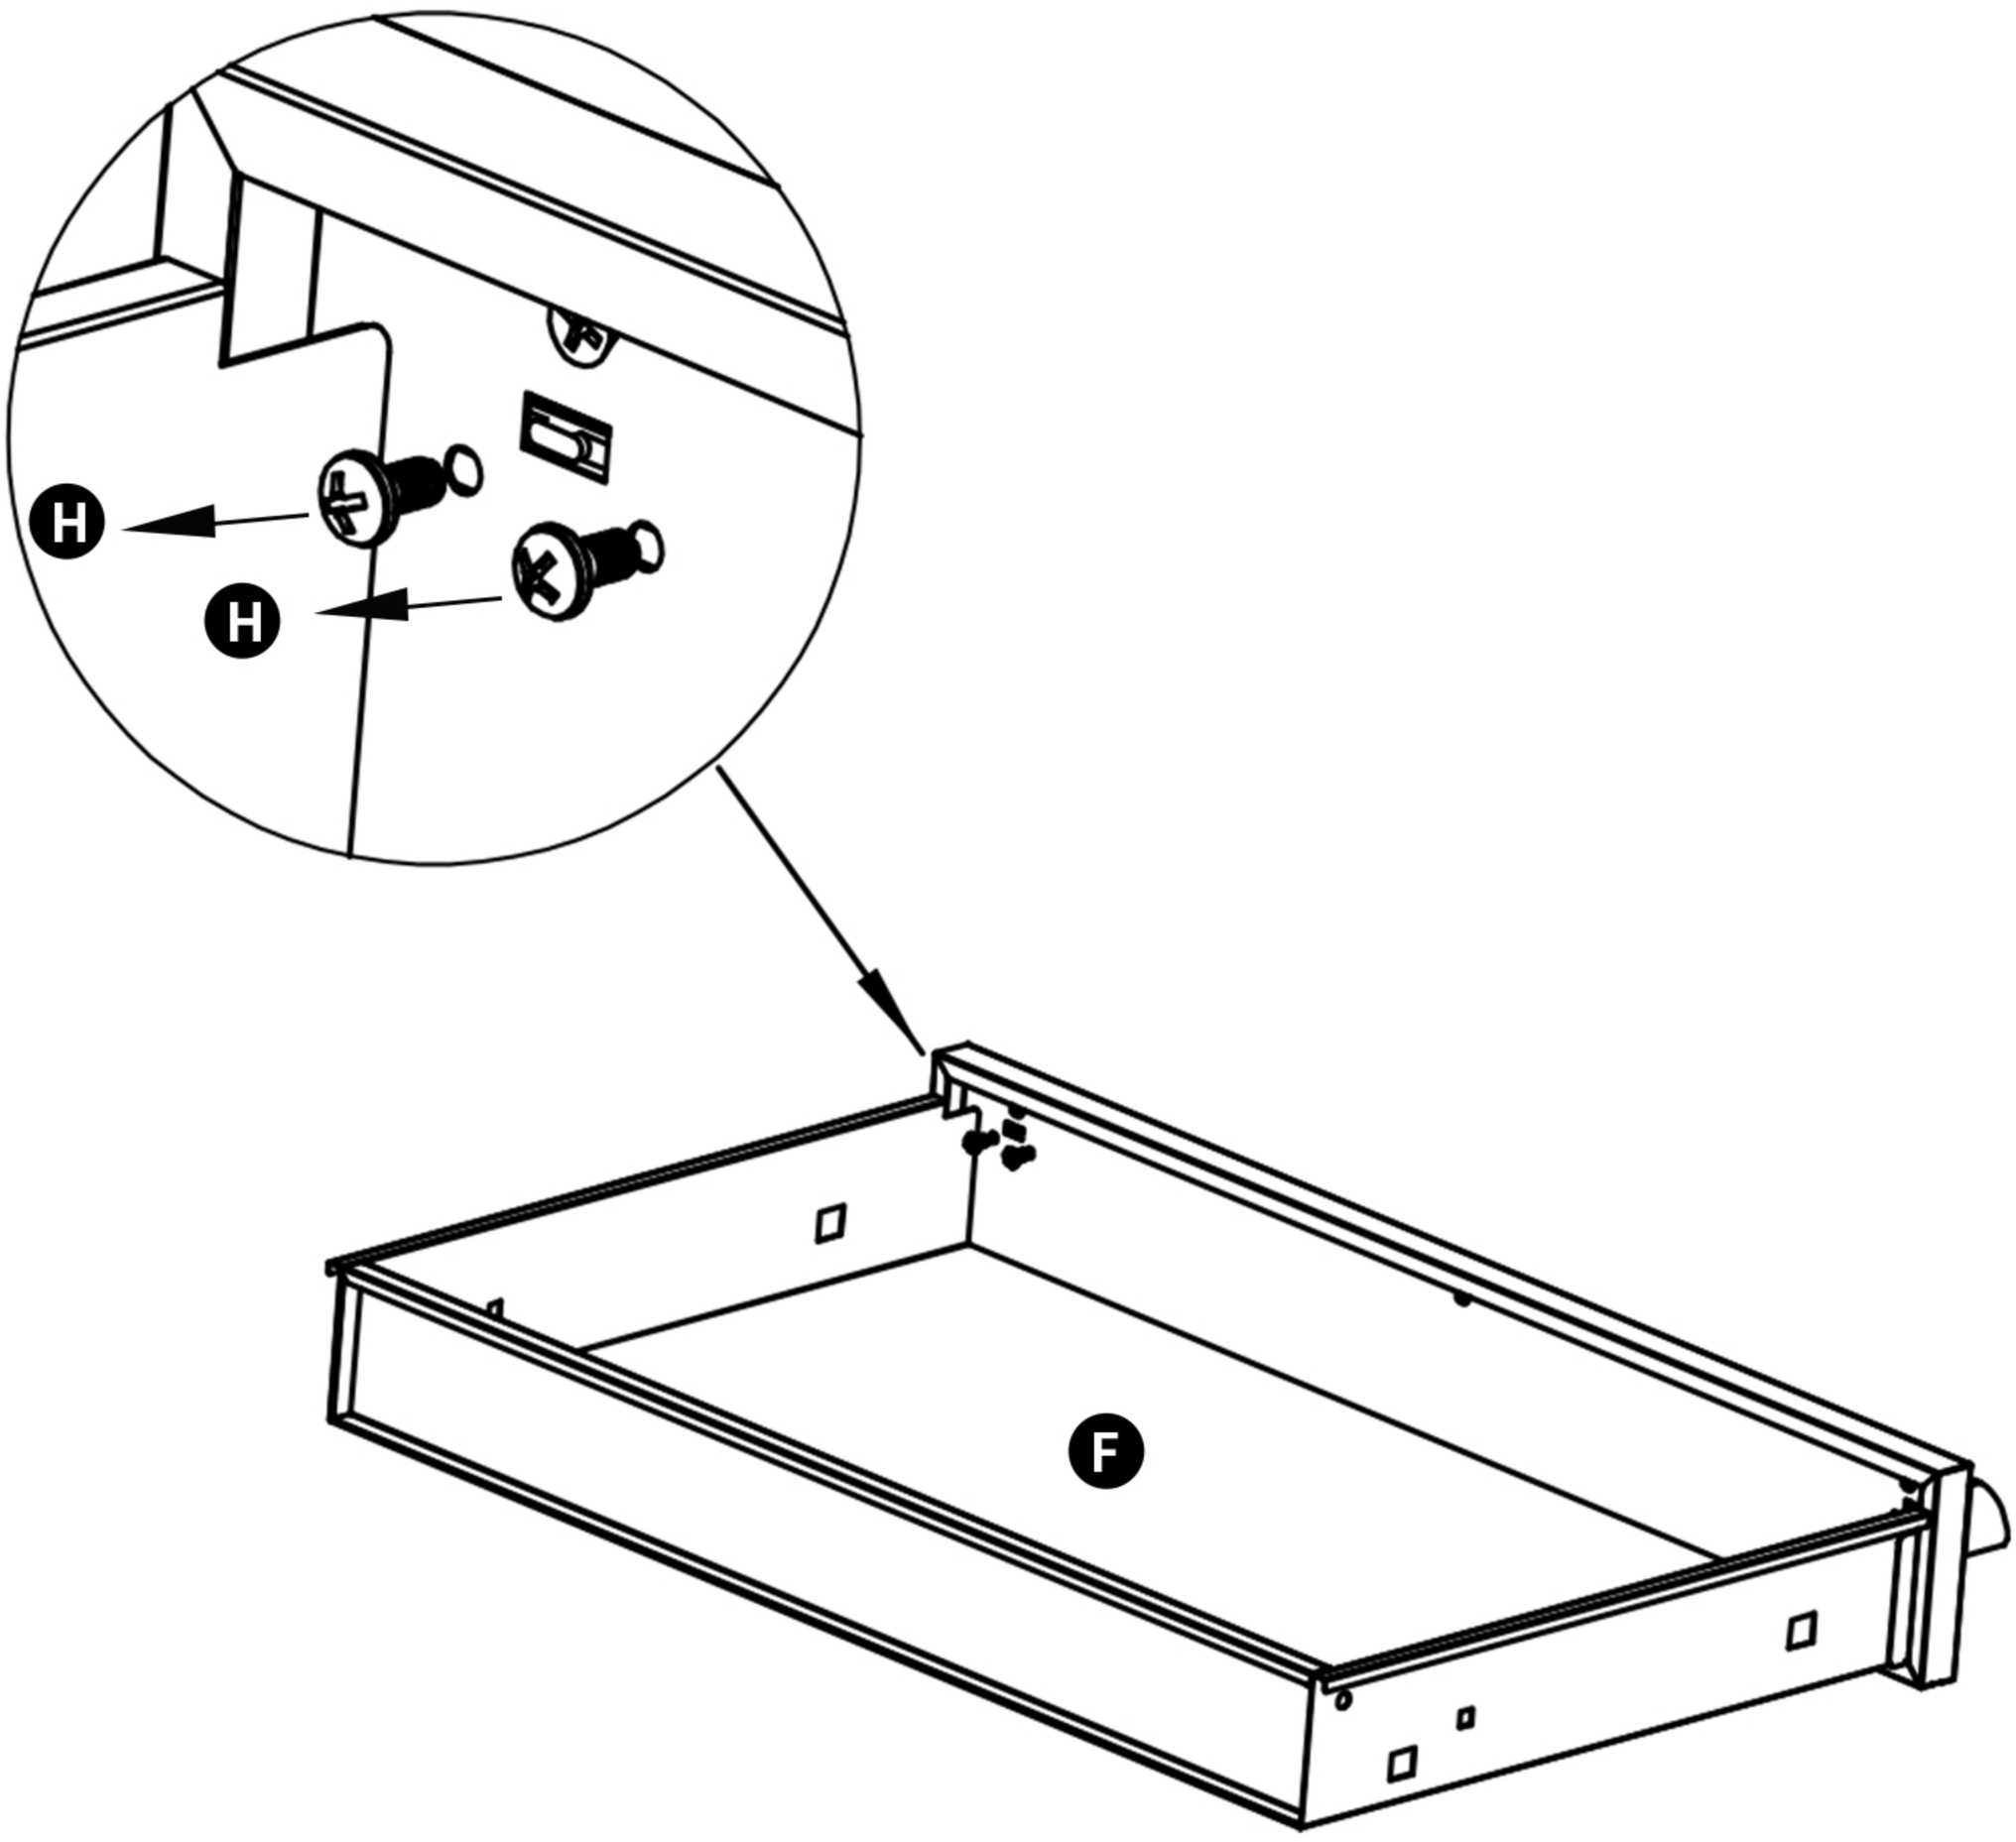


1.Secure part H in the position shown to fix the inner plugs.
2.Use 2 screws on the left and 2 on the right, 4 screws in total.

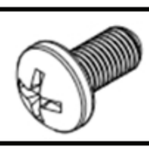H		4


Part ·9

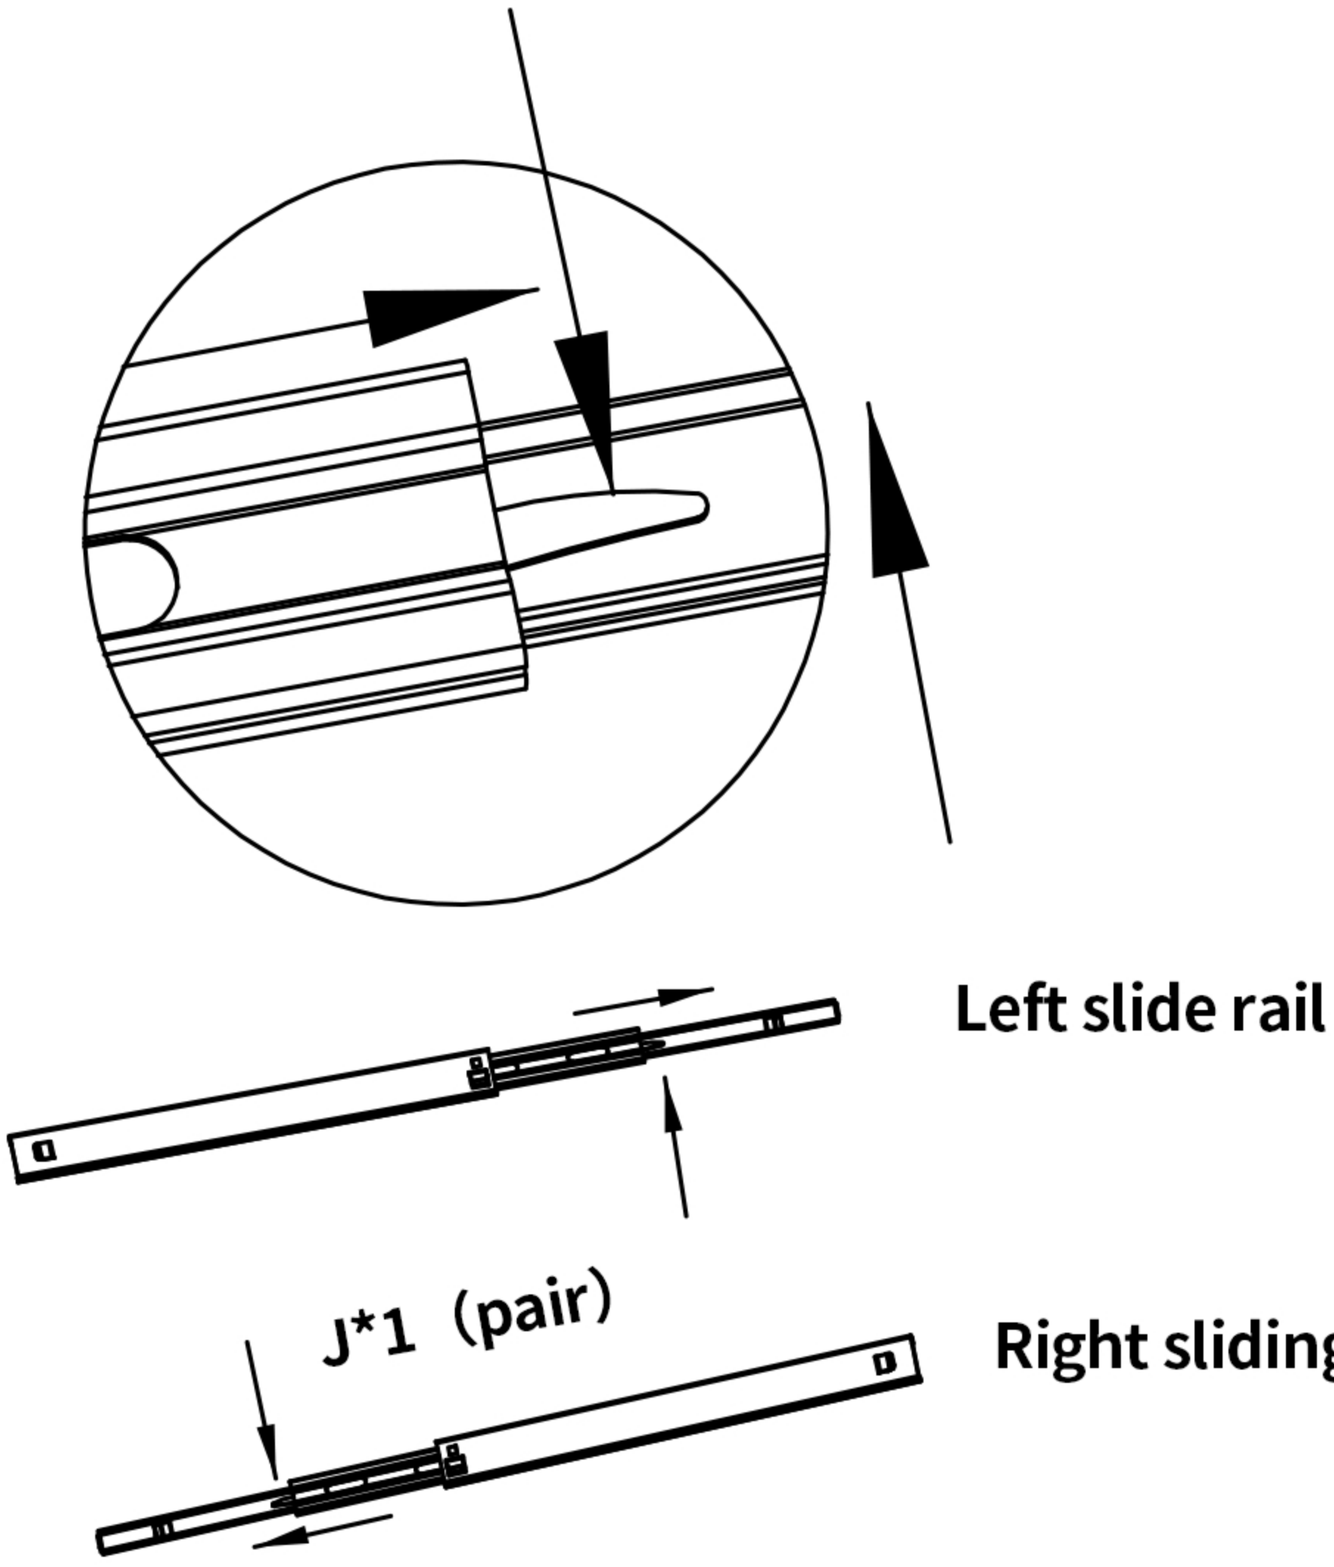

According to the arrow direction, lift the left slide rail, press down the right slide rail, and then pull outward to remove the inner slide rail.

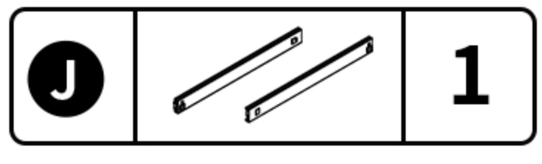


Part ·10

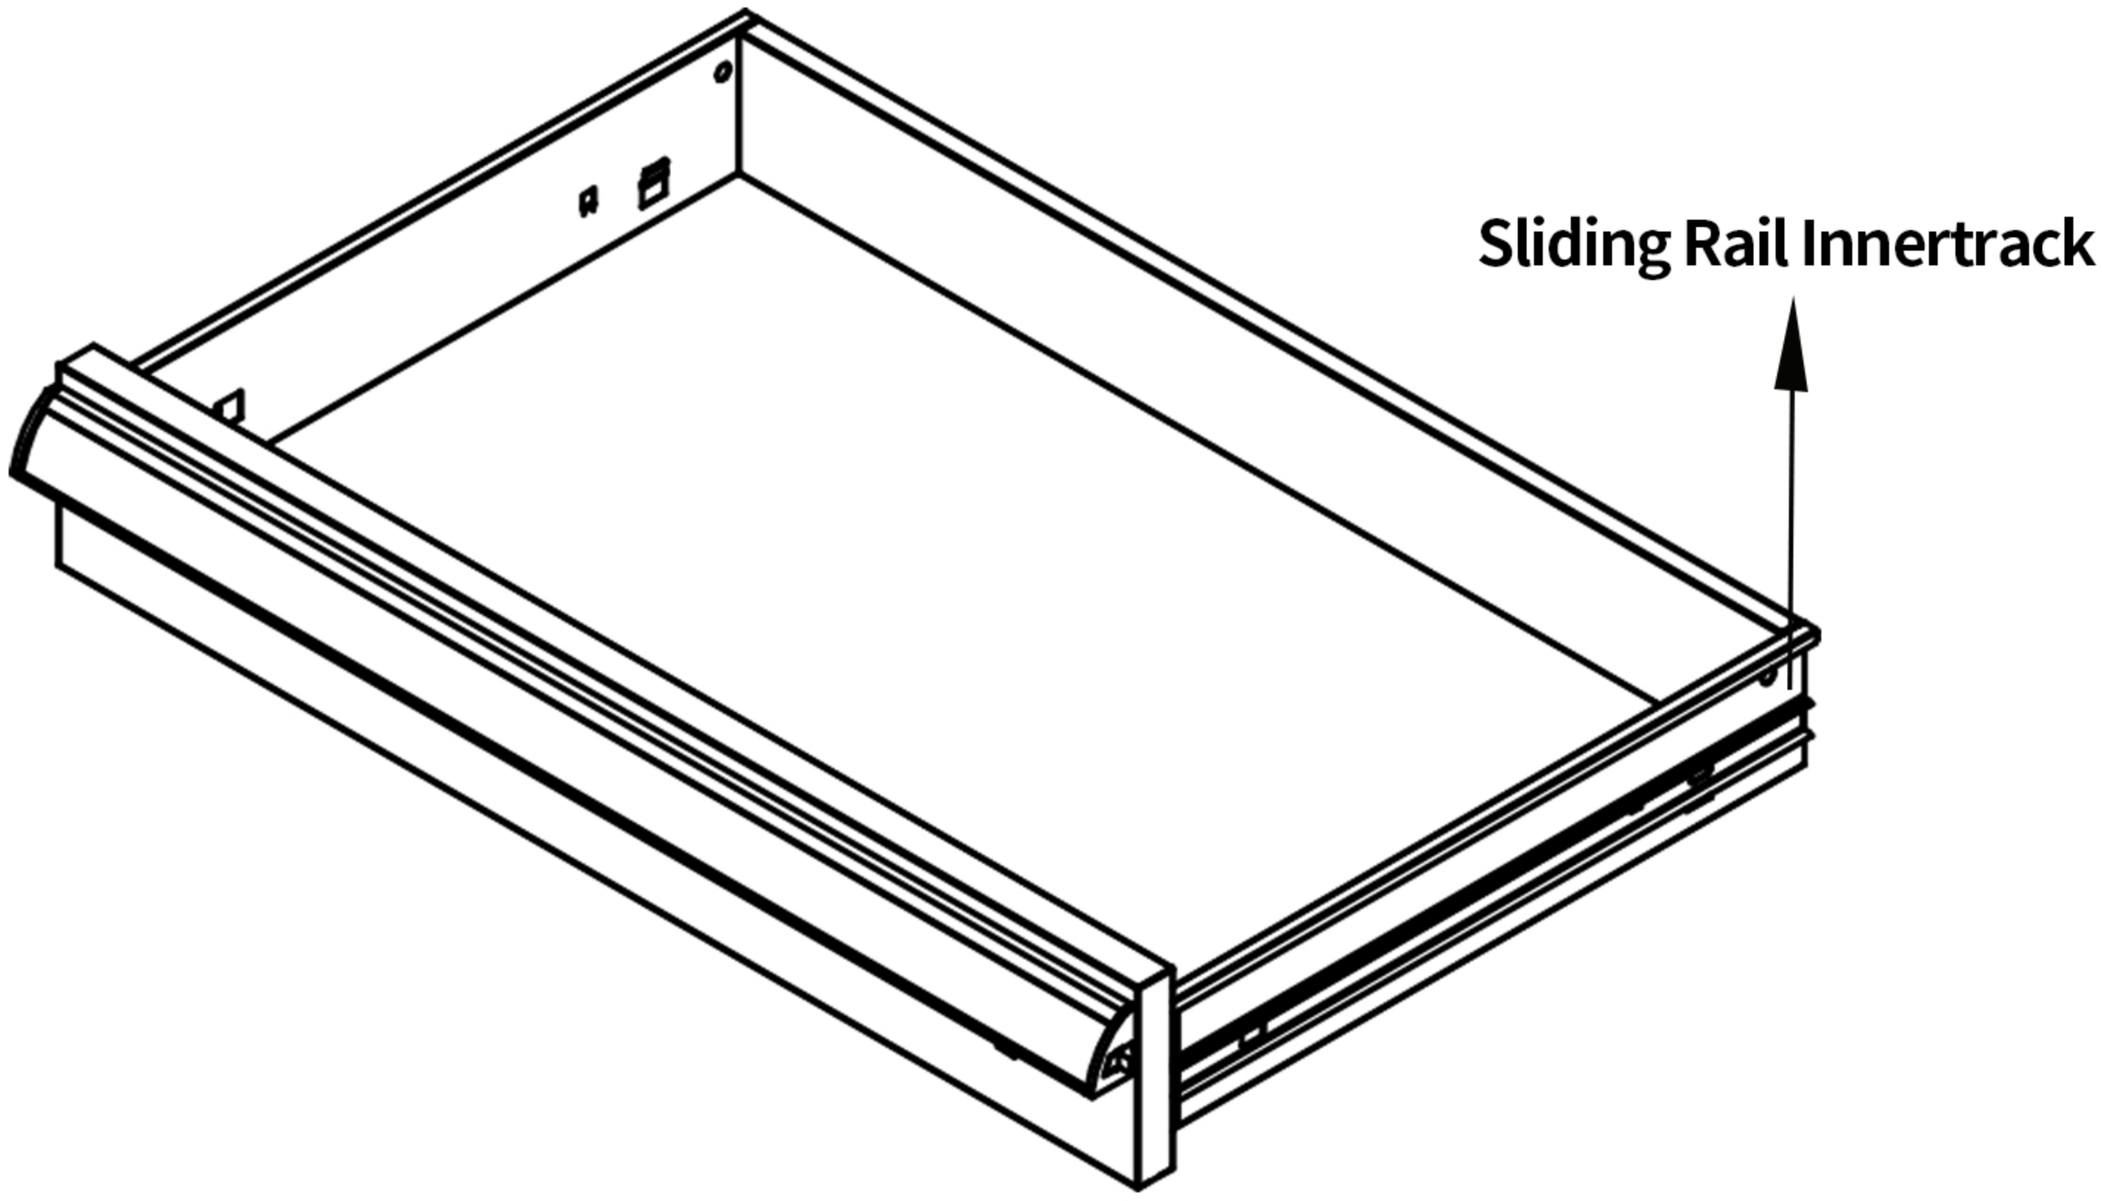


1.Install the slide rails on both sides of the drawer.
2.Snap them into place and secure them to complete the installation.

Part ·11

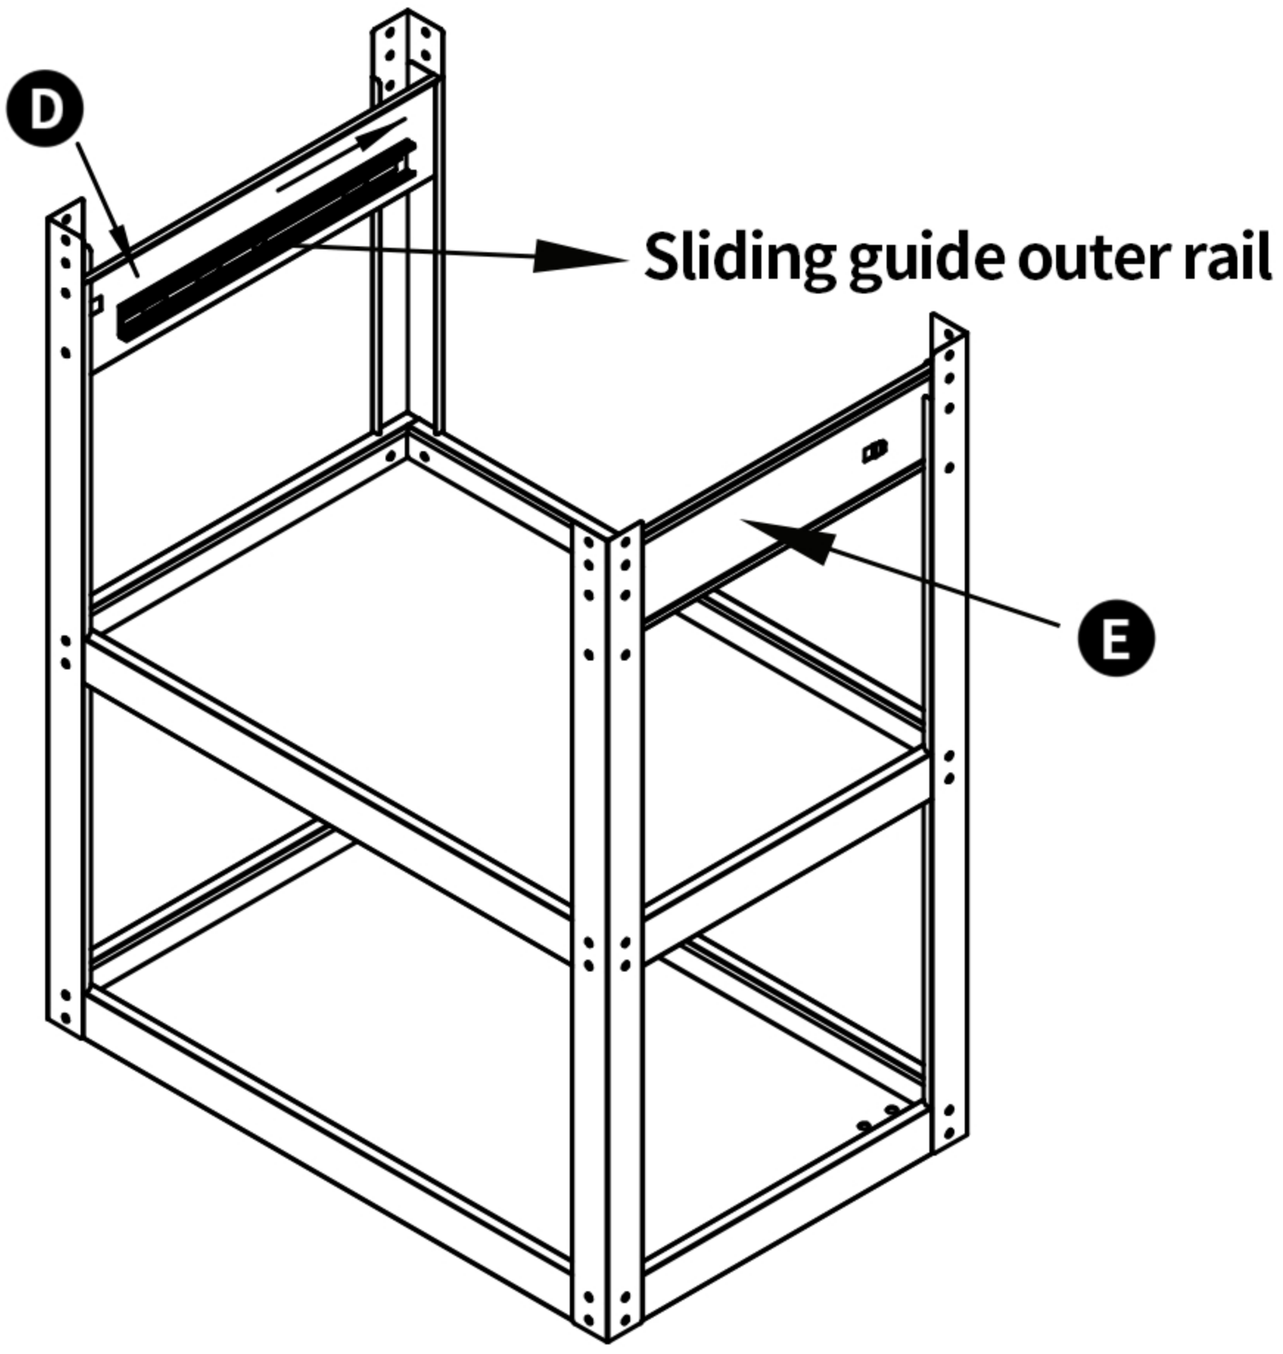


Install the outer rails of the left and right sliding tracks on the material hopper supports D and E respectively.

Part ·12

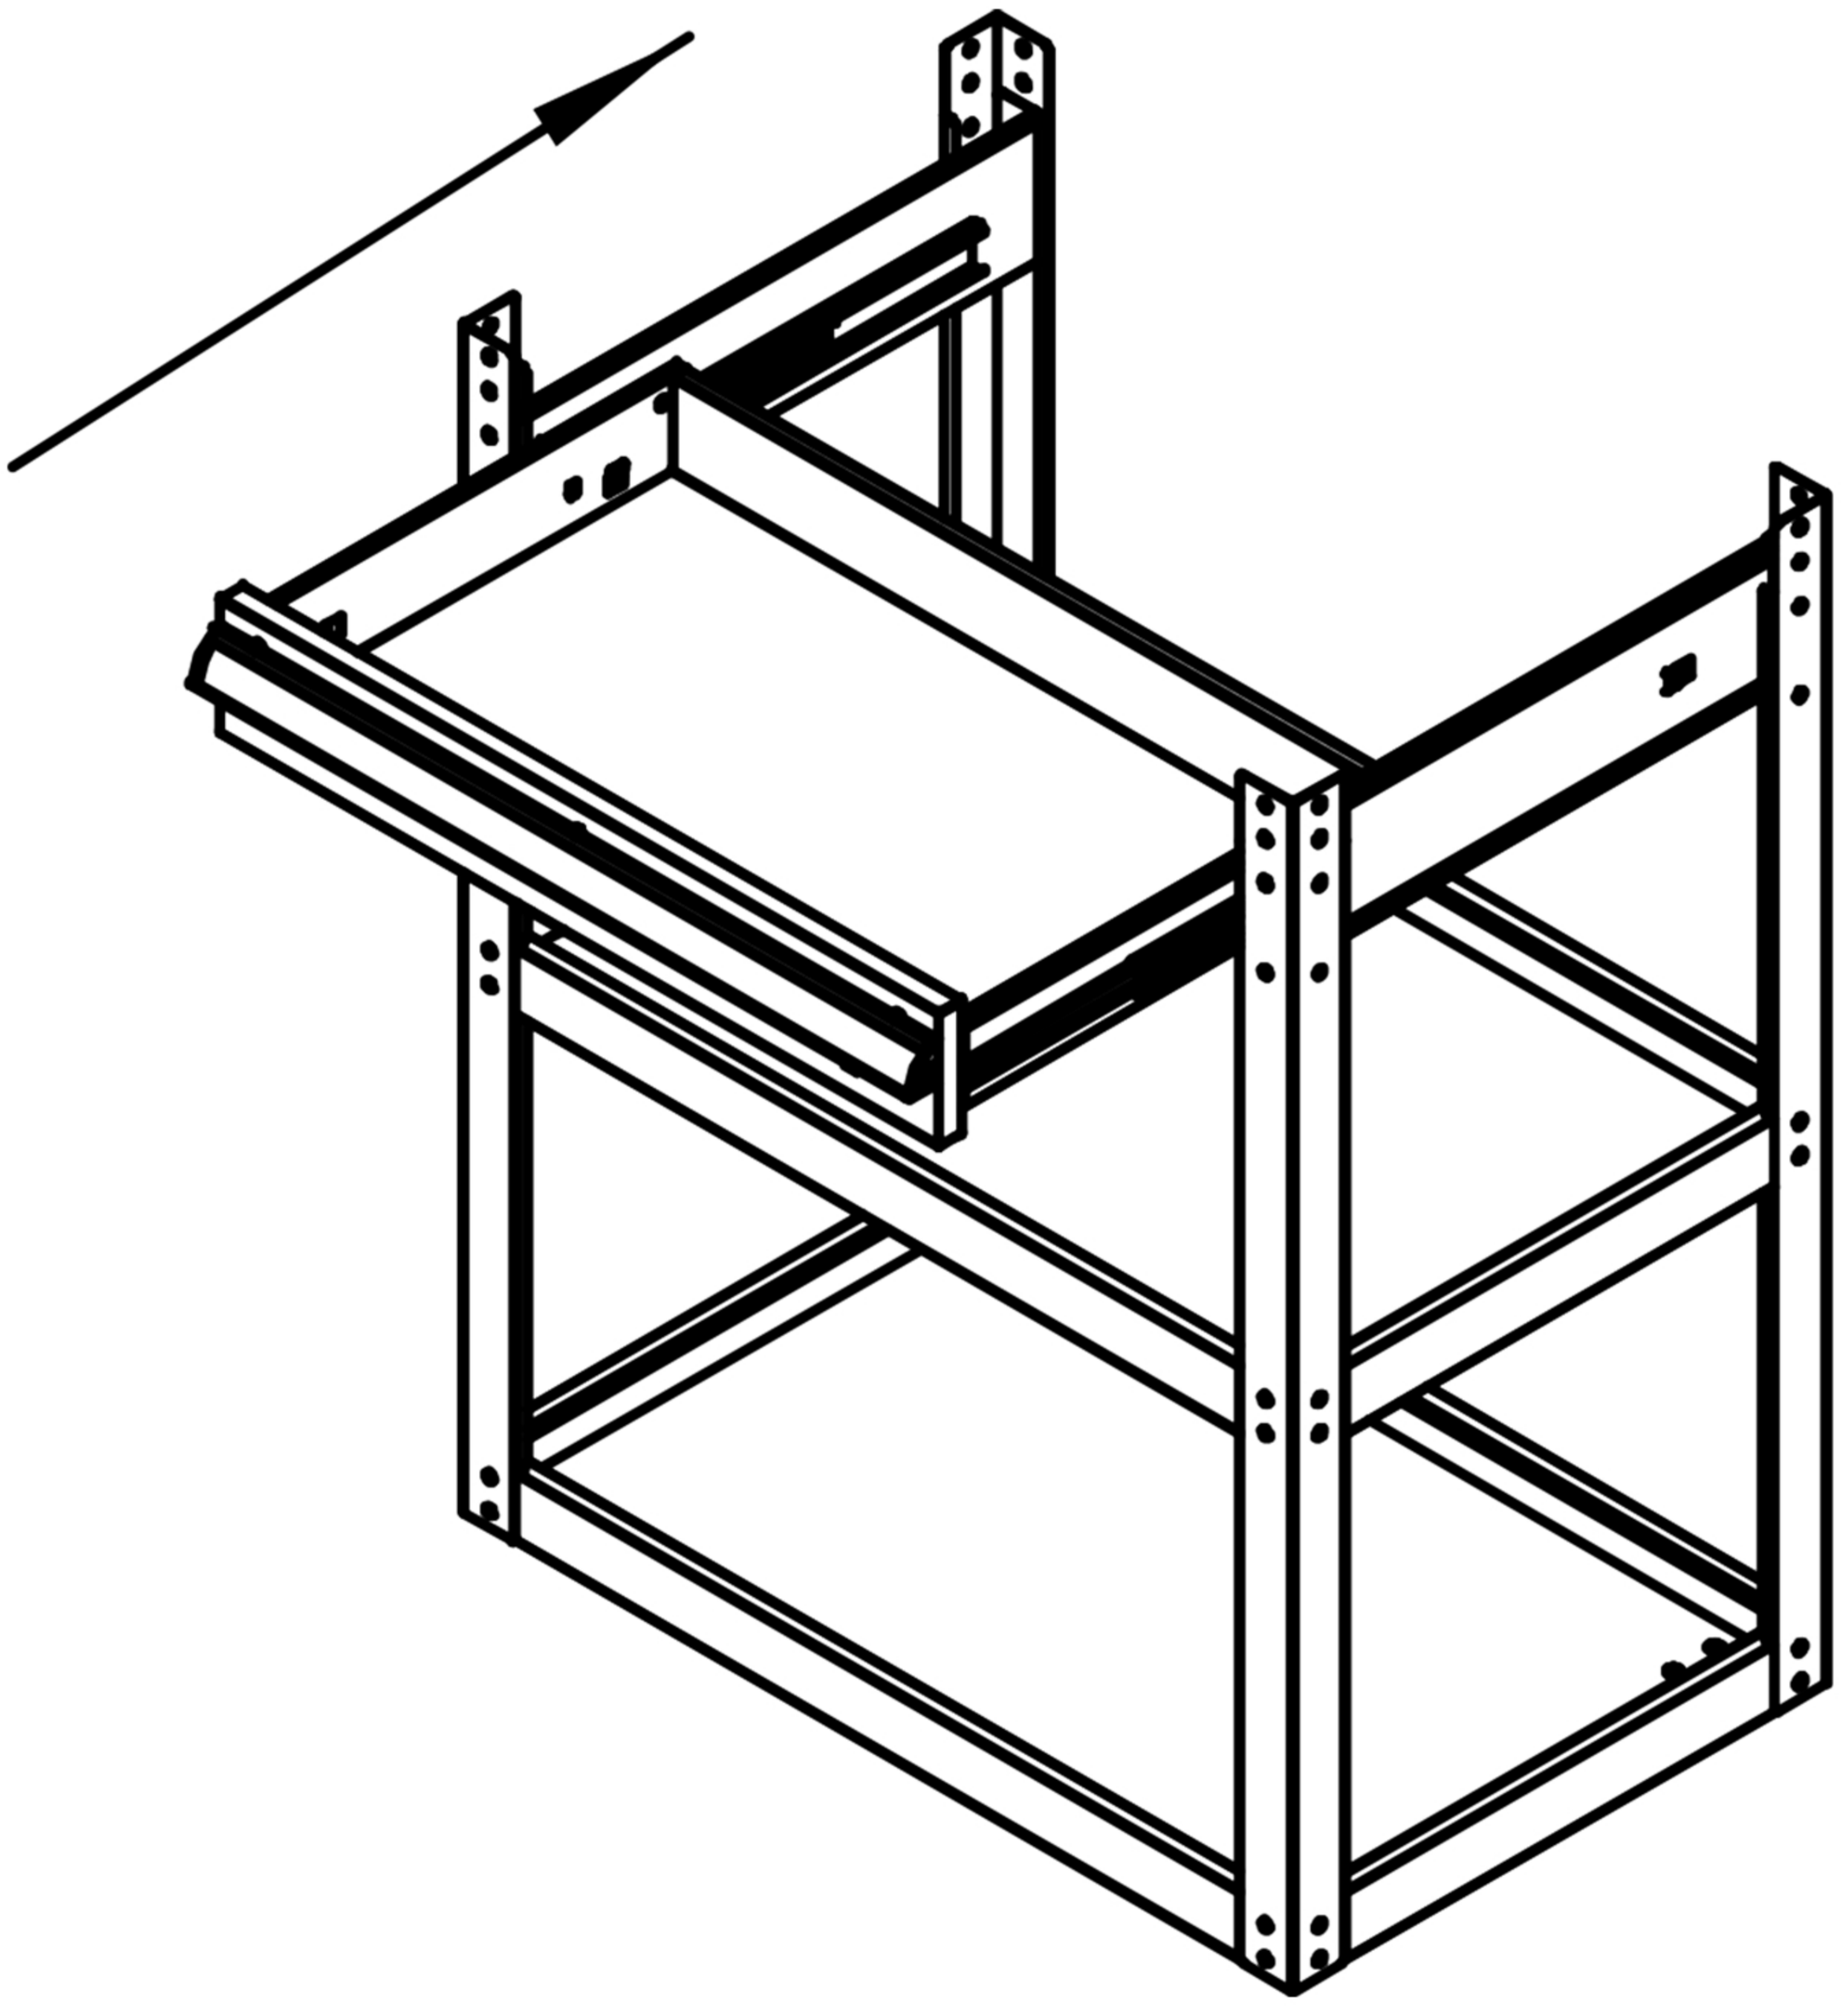

1.Align the inner tracks on both sides of the drawer with the outer tracks.
2.Push inward according to the arrow direction to lock the inner and outer tracks together, allowing for easy sliding.

Part ·13

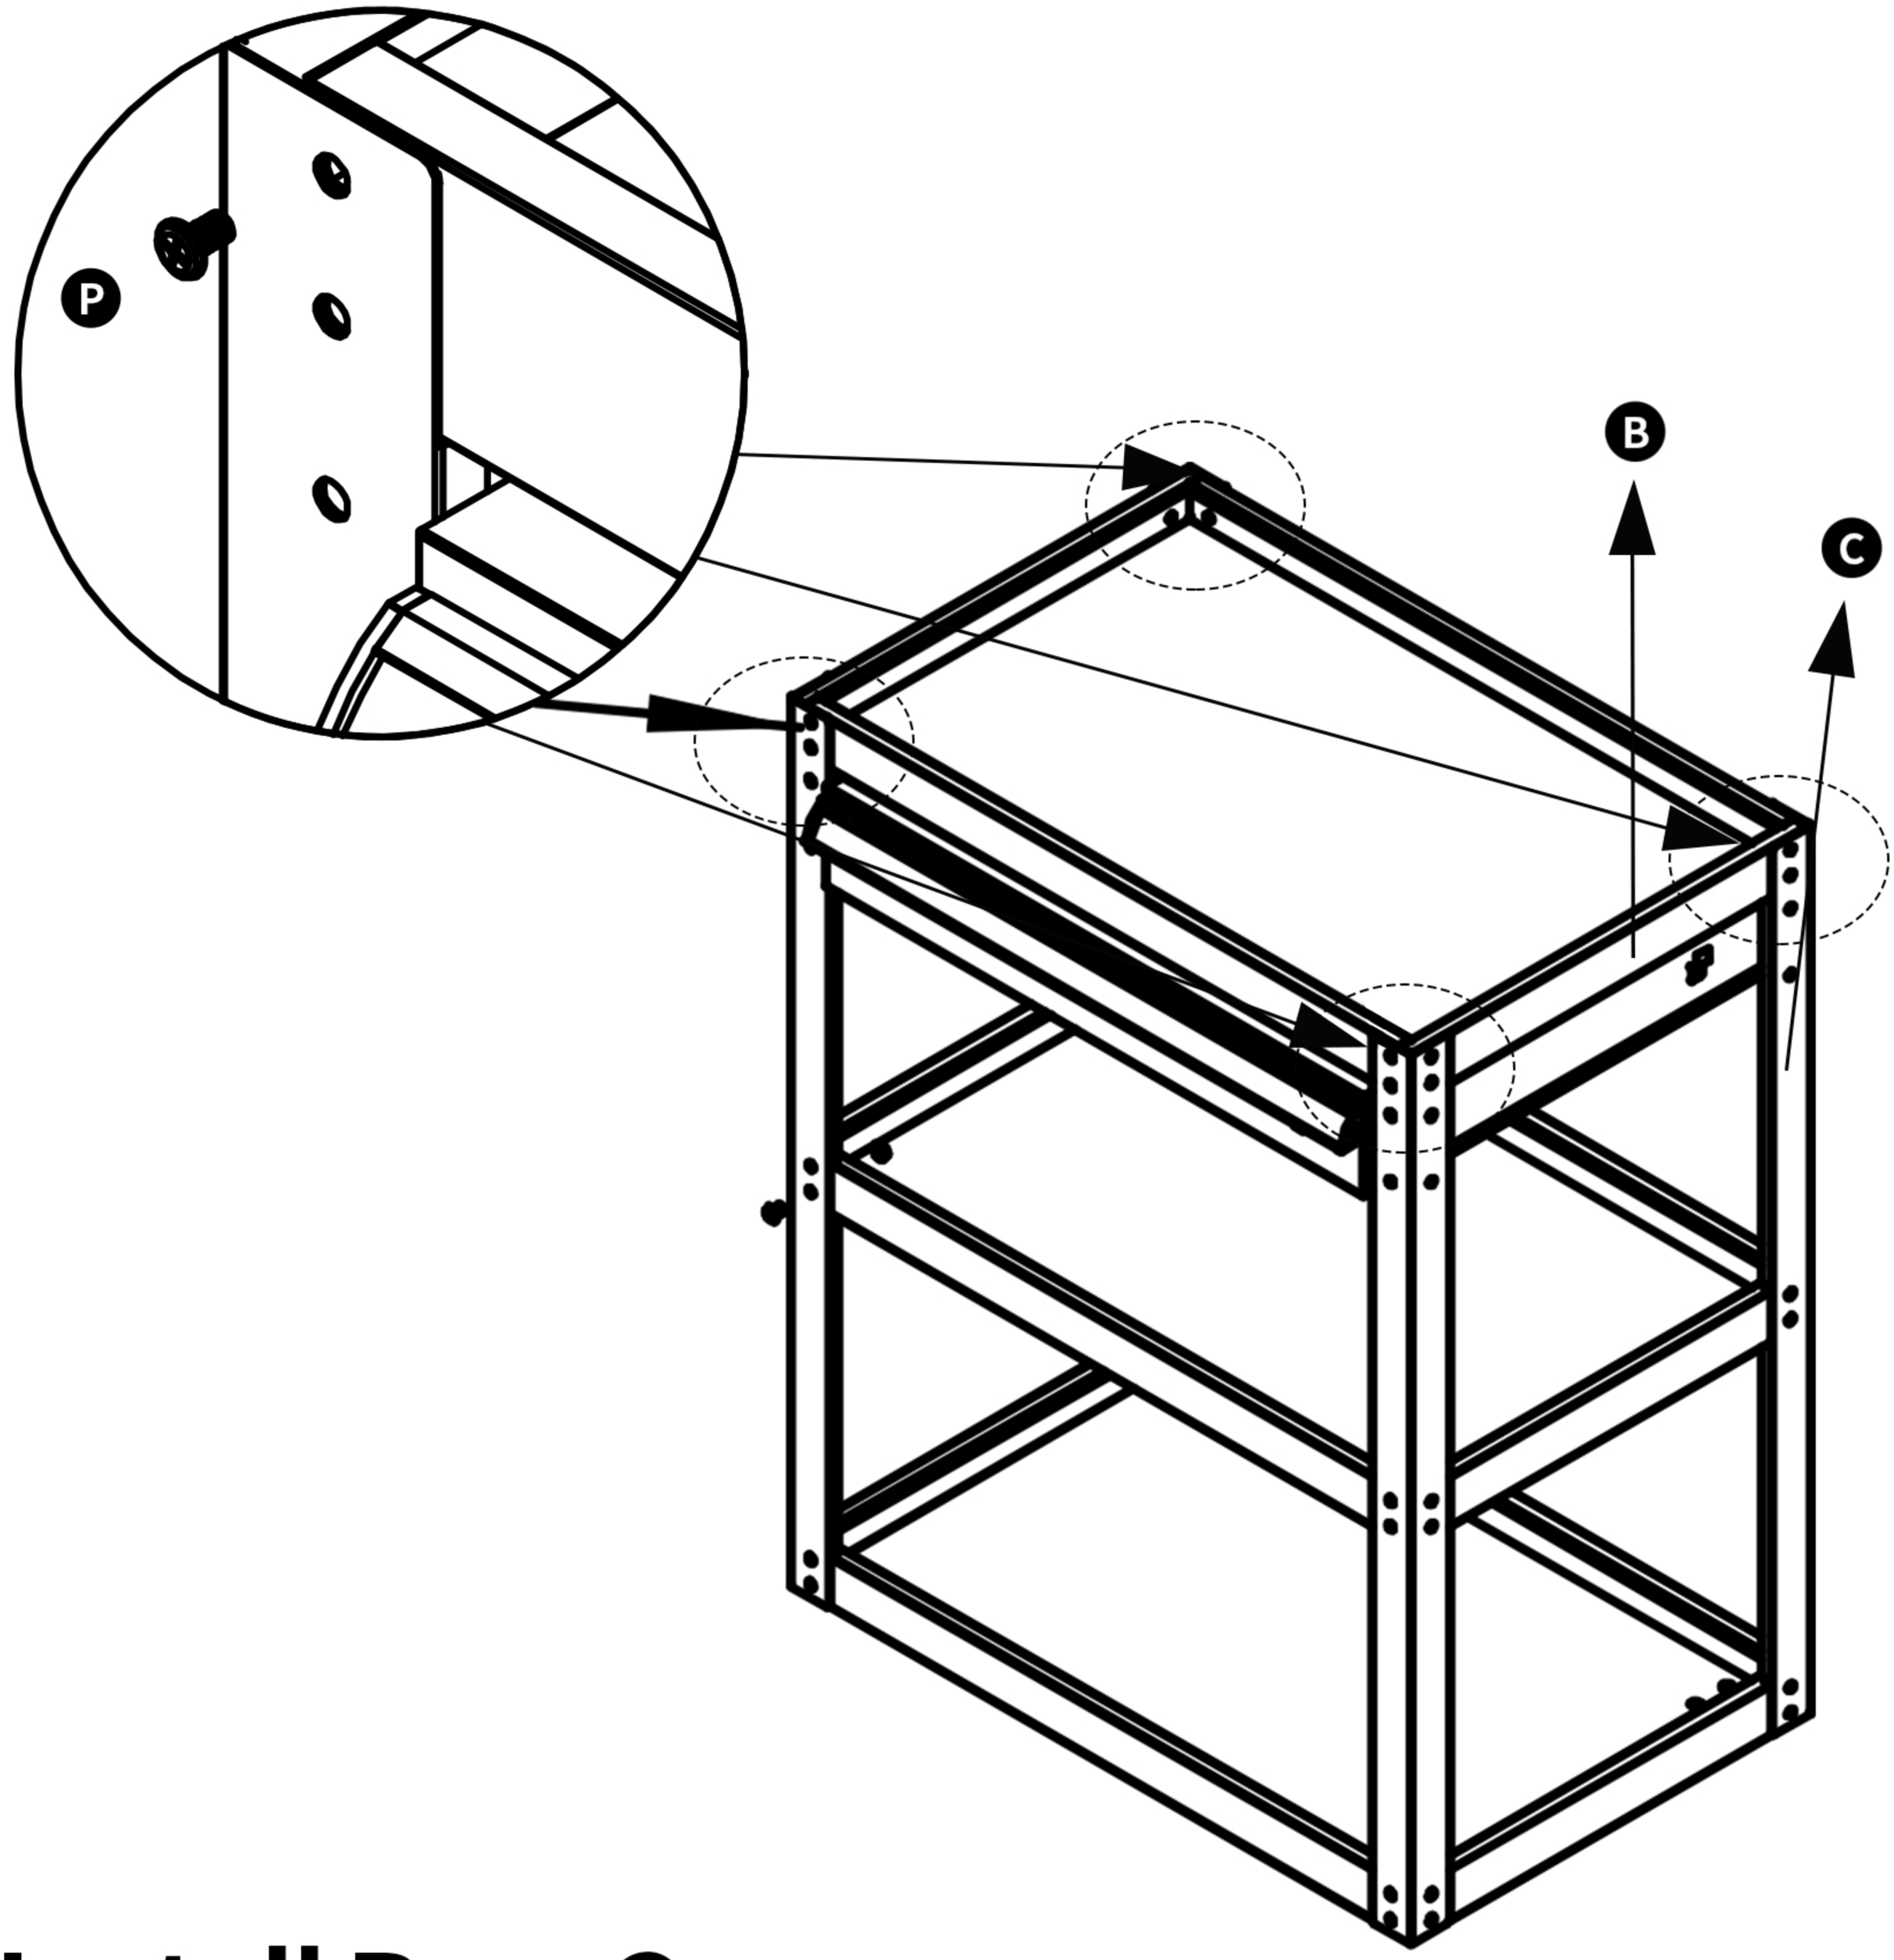


Install B on C.

Install only the 2 long screws on the inner side,total 8 screws.

P		8
Q		8

Part ·14

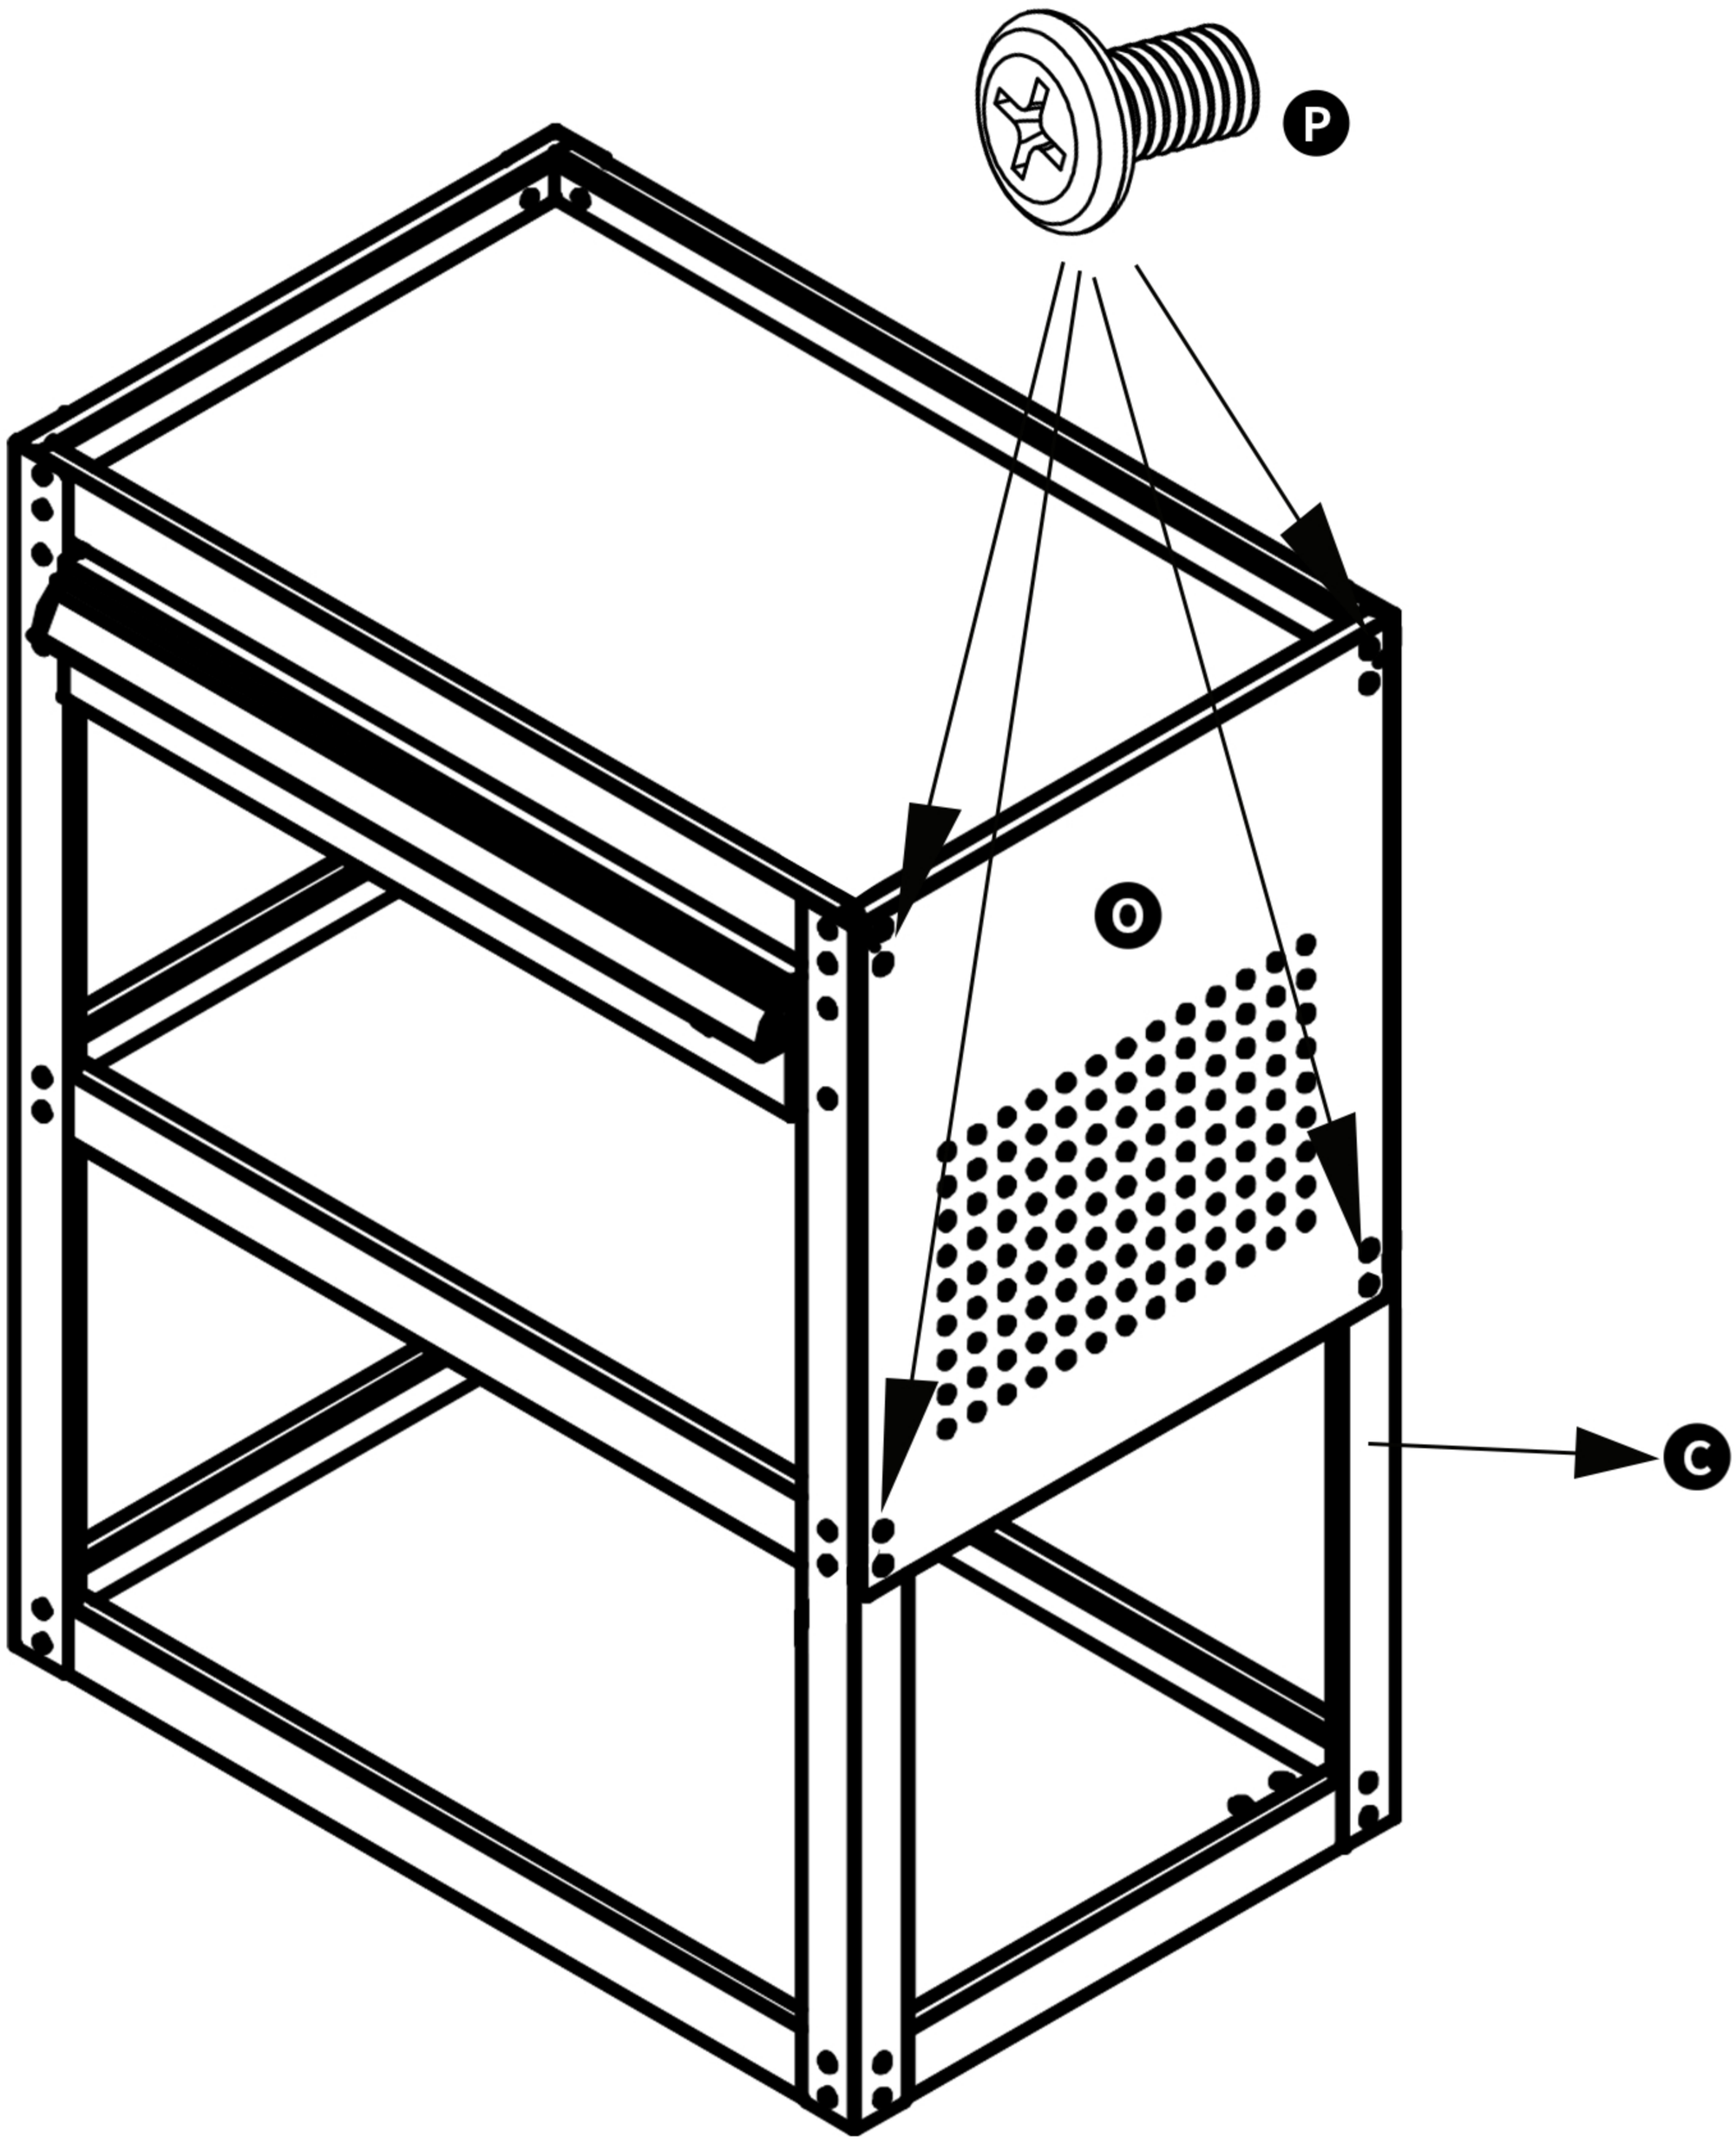


Install O*1 on C.

Hang a perforated board on the right side and secure all four sides with screws,total 8 screws.

P		8
Q		8


Part ·15

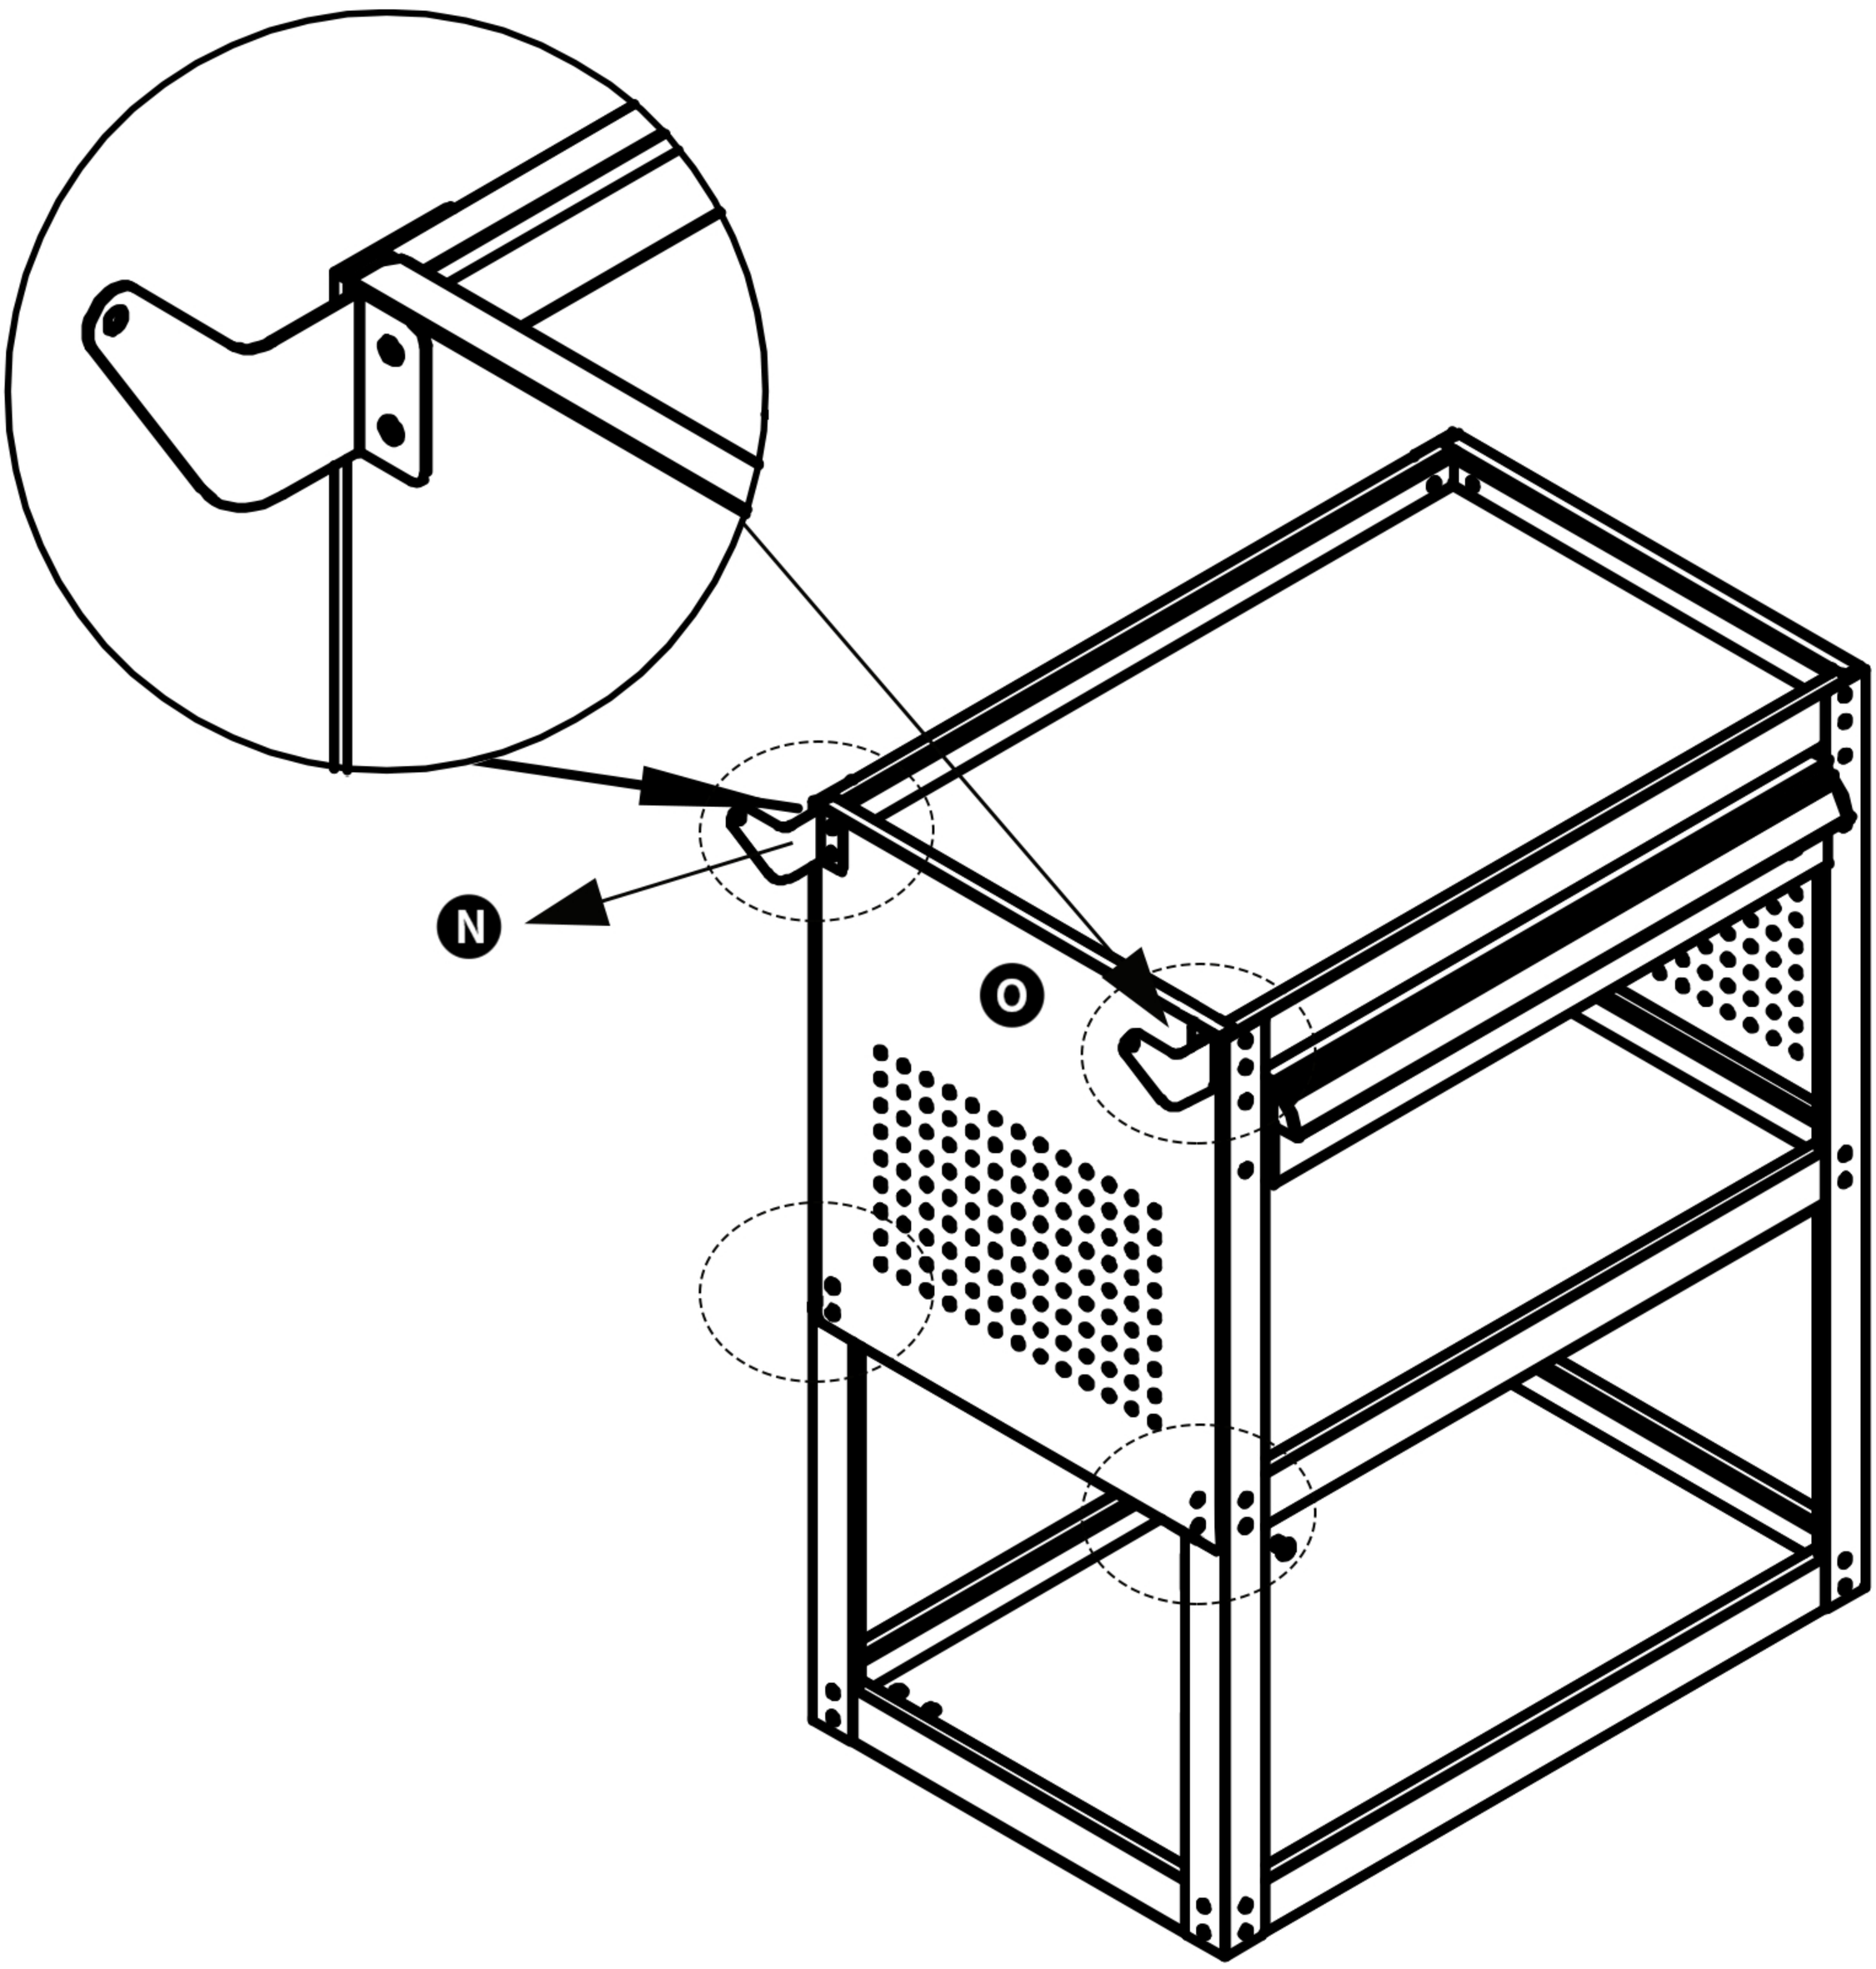

1.Install O*1 and N*2 on C,hang a perforated board O on the left side,
two handles on top.
2.Secure all four sides with screws,total 8 screws.

P		8
Q		8

Part ·16

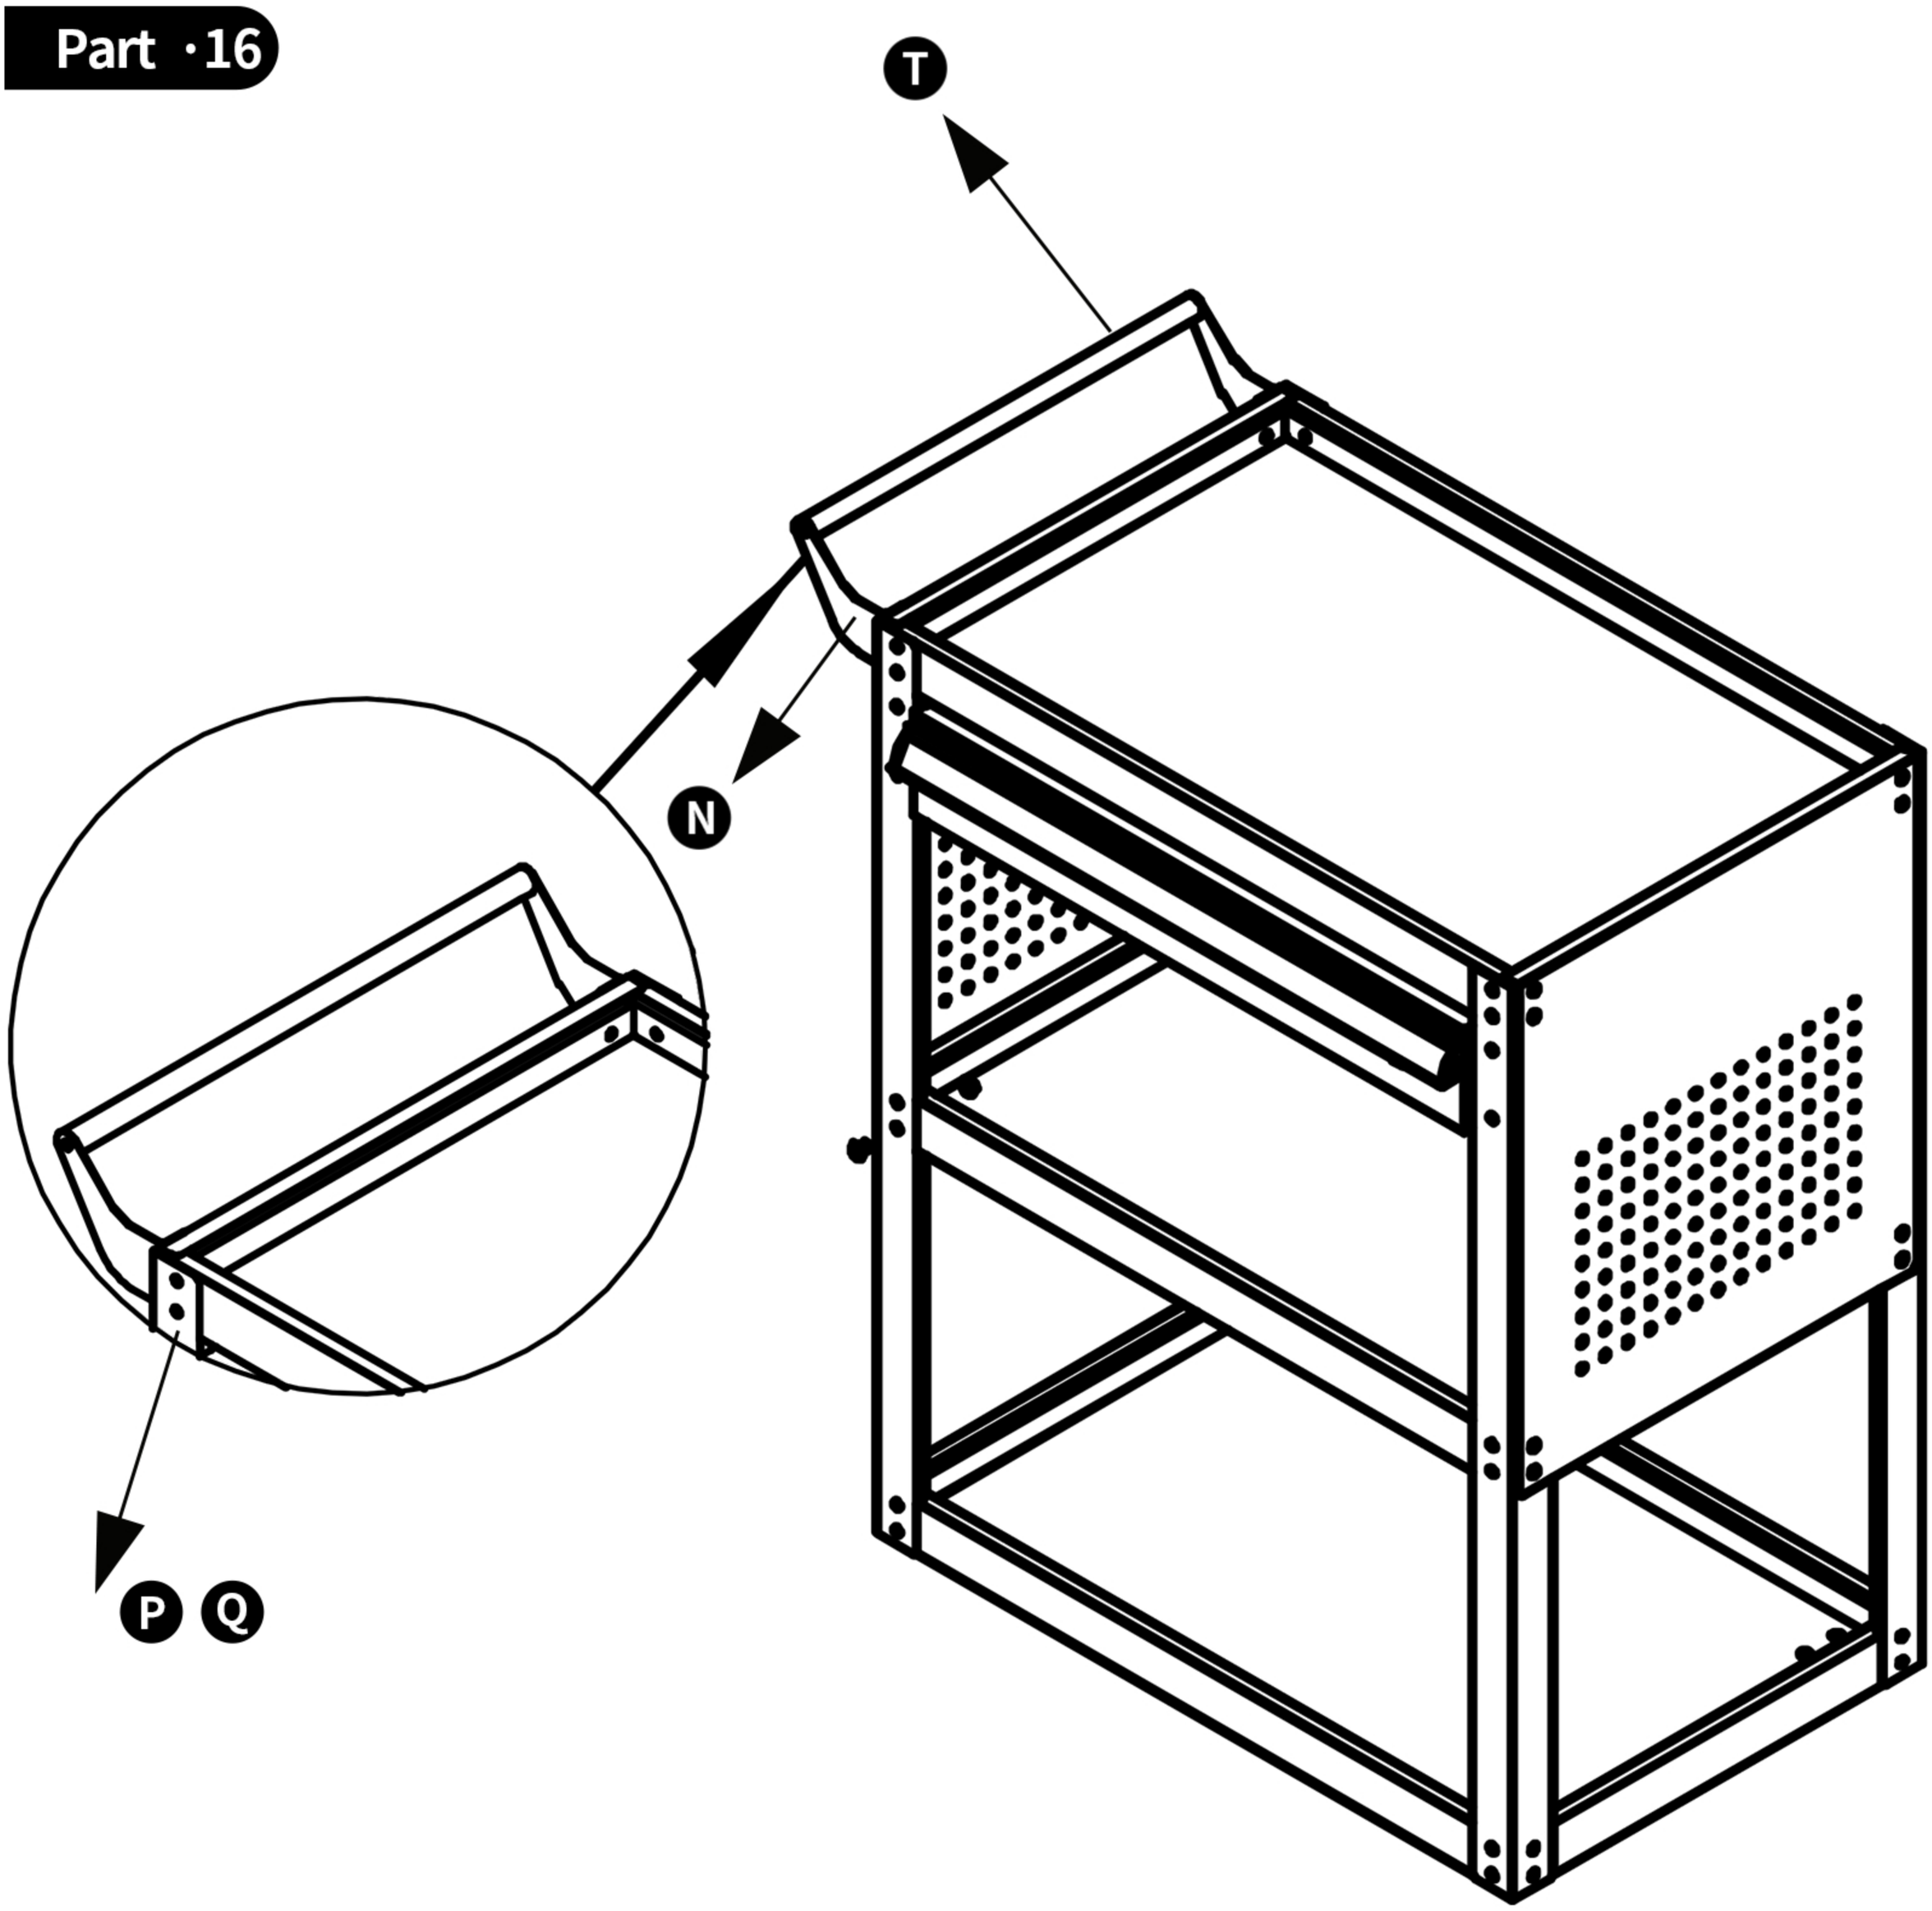


Install T on the middle of N.

Install the round tube in the middle of the hand leand secure with 2 screws.

P		2
Q		2

Part ·17

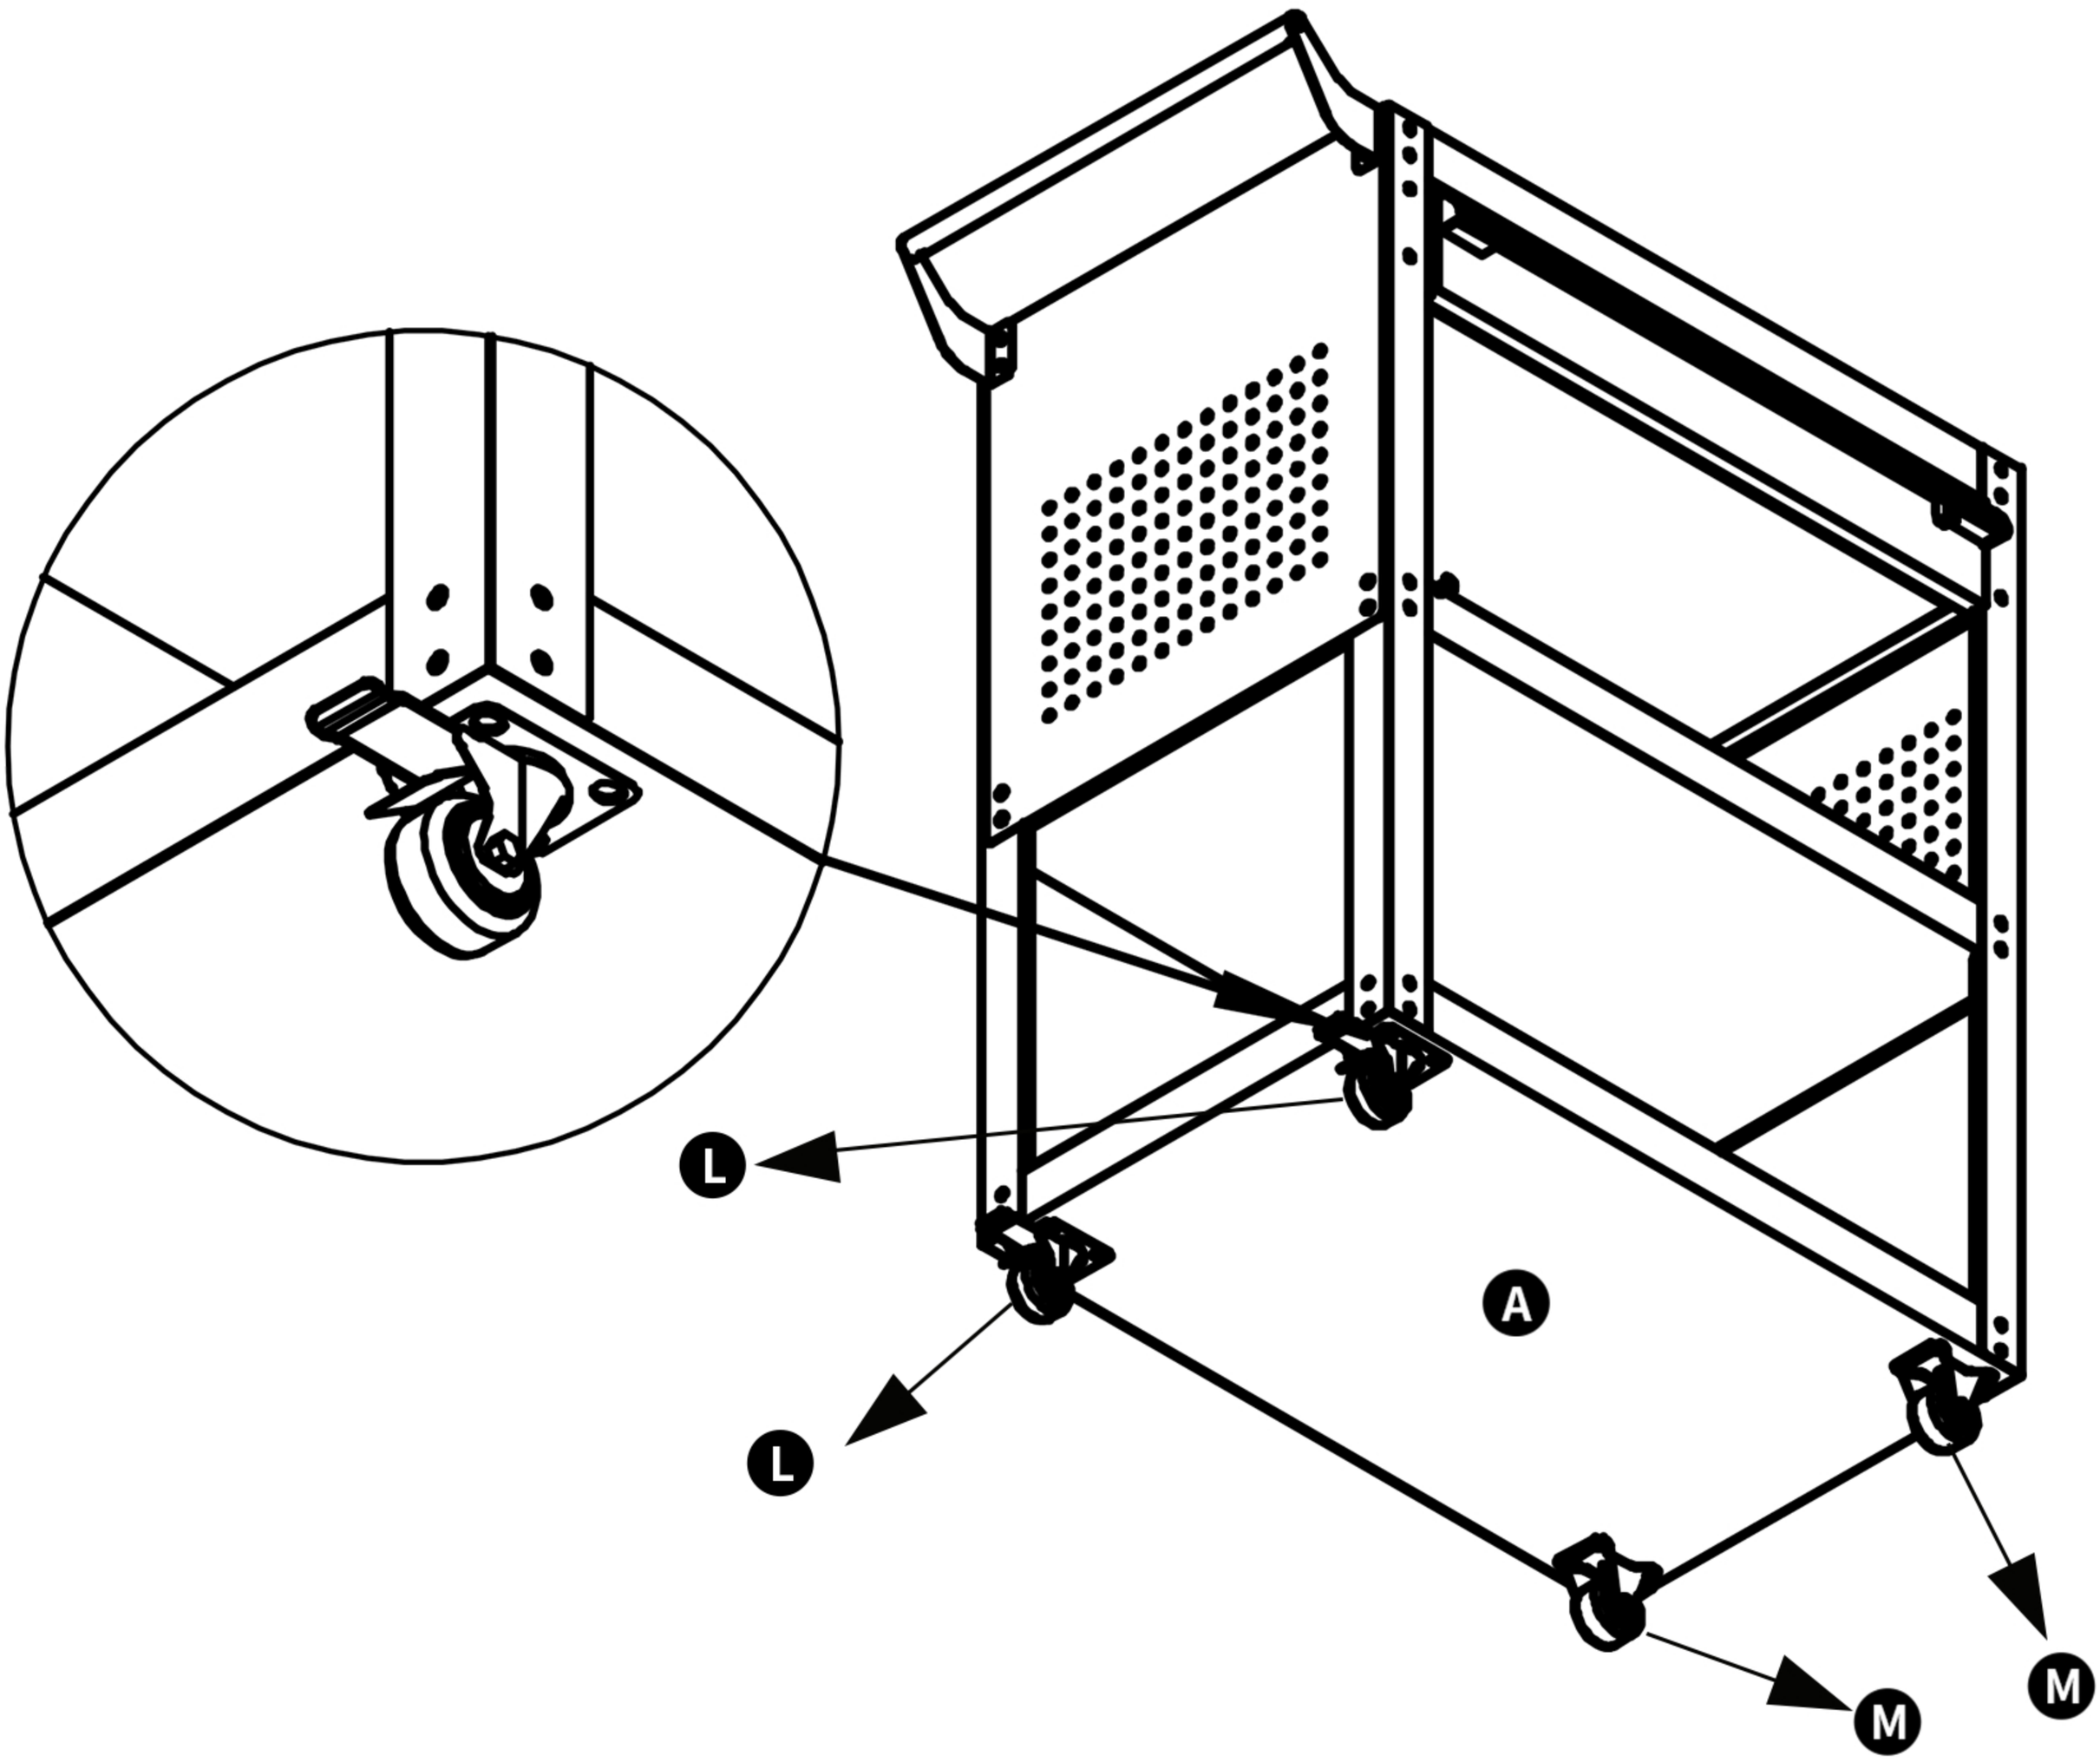

Install L and M on the bottom of A.

1.Note:that the swivel wheels are on the side of the handle, while the directional wheels are on the other side.
2.Each wheel uses 4 screws, total 16 screws.

P		16
Q		16