
CLOUD HAVEN

Owner’s Manual

MODEL:FSO051

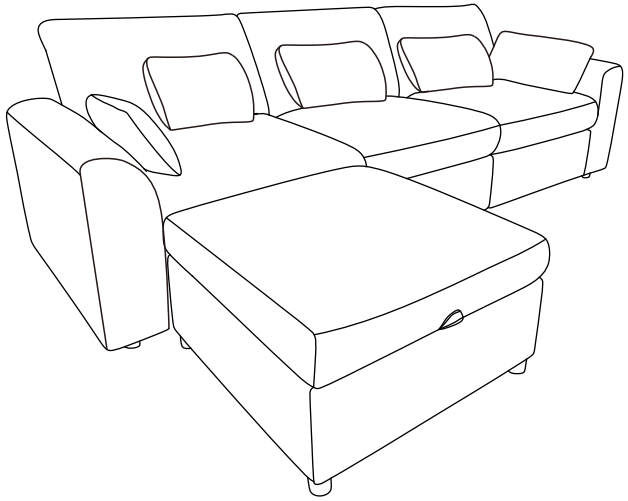

Assembly Video-straight module

Assembly Video-corner module

CushionFluffing

sofabedservice@163.com
+1-(510)913-9746

sofabedservice@163.com
+1-(510)913-9746


Important Caution

Before beginning assembly of the product, make sure all parts are present. Compare parts with the package contents list and hardware contents. If any part is missing or damaged, do not attempt to assemble the product. If any part is missing or damaged, please contact customer service at sofabedservice@163.com.

- Some parts may contain sharp edges. Wear protective gloves if necessary during assembly.
- When using power tools, please start with the minimum power setting to avoid potential damage to the parts.

Safety Guide

- For your safety and to reduce the risk of severe personal injury, the user must read and understand this Safety Guide.
- Assemble each piece only by following the instructions. Using tools or hardware not included in the original packaging, or improper assembly may cause the product to malfunction or create a risk of severe personal injury.
- Assemble on a flat and soft surface, such as carpeting, to avoid scratches or damage.

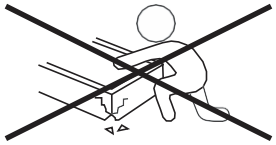



NOTICE
- Tighten all bolts and screws again within the first two weeks of assembly.
- Check the tightness of all bolts every two months; tighten them if necessary.

Care & Maintenance

- Flu ffcushions regularly to maintain their shape and loft.
- Vacuum crevices weekly using a soft brush attachment to prevent dust and soil from settling into the fabric.
- Keep furniture out of direct sunlight and away from heat sources to prevent fading and deterioration.
- Spills should be wiped up immediately. Blot (do not rub) spills promptly with a clean, colorfast, absorbent cloth.
- Always pre-test cleaning agents in a small, inconspicuous area first.

Read & Save These Instructions Before Assembly

- Please separate and identify all parts, making sure you have all parts listed.
- To avoid scratches during assembly, please assemble on a soft mat or similar surface.
- Please assemble step by step and follow the instructions.
- Washers must be used.
- Do not fully tighten each screw and nut until all screws are properly aligned.

Return Policy:

- If you want to return the product, please contact us about return issue, make sure that the boxes packaging are complete, the product is not damaged, stained and not affecting secondary sales.
- Return product that do not use the original packaging may be rejected, and the pictures may be requested to offer.

Read & Save These Instructions Before Assembly

•Two adults are required for safe assembly.





YOU ARE HERE

START | STRAIGHT | ADD SEAT | CORNER | OTTOMAN | FINAL

Quick Start Guide

Box Checklist

Find your variant & check boxes. Different variants ship with different boxes. Before assembly, confirm you've received all boxes. If any box or part is missing or damaged, please contact us by email or through the platform and we'll help right away.

Model Variant		Box Delivery Checklist
2 Seat Sofa		A+B
2 Seat Sofa +1 Ottoman		A+B+E
3 Seat Sofa +1 Ottoman		A + B + C
3 Seat Sofa +2 Ottoman		A+B+C+E
4 Seat Sofa +2 Ottoman		A + B + 2C
5 Seat Sofa		2B + D + F + G
5 Seat Sofa +1 Ottoman		2B+D+E+F+G
5 Seat Sofa +2 Ottoman		A+ B + 2C + D
6 Seat Sofa +1 Ottoman		2B+C+D+F+G
6 Seat Sofa +2 Ottoman		2B+C+D+E+F+G
7 Seat Sofa +2 Ottoman		2B+2C+D+F+G

YOUR ASSEMBLY ROUTE

STRAIGHT SOFA

STRAIGHT → ADD SEAT ×0/1/2 → OTTOMAN ×0/1/2 → FINAL

5-SEAT CORNER


LEFT 2 SEATS → CORNER → RIGHT 2 SEATS → OTTOMAN ×0/1/2 → FINAL

6-SEAT CORNER

LEFT 3 SEATS→ CORNER→RIGHT 2SEATS →OTTOMAN x1/2 →FINAL

7-SEAT CORNER

LEFT 3 SEATS→CORNER → RIGHT 3 SEATS→OTTOMAN x2→FINAL

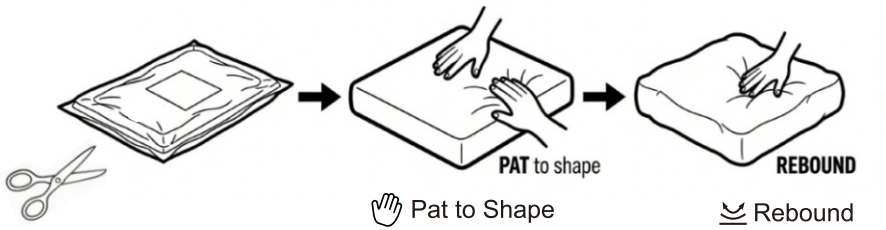

Pat to Shape


Rebound



① Fluff after Unsealing

② Knead & Massage for Perfect Shape

③ 24-72 Hours Decompression


Parts List

Carton	Part				Part			
BOX A	A1	Left armrest		1PC	T	Plastic gasket		4PCS
	A2	Right armrest		1PC	C1	Seat Cushion Cover		2PCS
	D	Back pad cover		2PCS	Z1	Connector tabs		1PCS
	D1	Backrest cushion insert		2PCS	Z2	Connector tabs		1PCS
	F1	Lumbar Pillow Cover		4PCS				
	F2	Lumbar Pillow Insert		4PCS				
	S	Short feet		4PCS				

Carton	Part				Part			
BOX B	B	Backrest		2PCS	O3	M8x45mm Bolt		22+1PCS
	C3	Seat Cushion Insert		2PCS	O4	M8x60mm Bolt		1+1PCS
	C2	Sub-seat cushion		2PCS	P	Gasket		24+1PCS
	E	Front seat baffle		2PCS	Q	Butterfly nut		1+1PCS
	I	Wooden slat		2PCS	V	Wrench		1PC
	K1	L-shaped square tube		4PCS	M2	Rubber gasket		2PCS
	R	Tall feet		2PCS				

Parts List

Carton	Part				Part			
BOX B	L	Connecting pipe		1PC				
	M1	Support pipe		2PCS				

Carton	Part				Part			
BOX C	B	Backrest		1PC	O1	M8x20mm Bolt		16+1PCS
	C1	Seat Cushion Cover		1PC	O2	M8x40mm Bolt		8+1PCS
	C2	Sub-seat cushion		1PC	O3	M8x45mm Bolt		8+1PCS
	D	Backrest pad		1PC	O4	M8x60mm Bolt		1+1PCS
	E	Front seat baffle		1PC	P	Gasket		34+1PCS
	F2	Lumbar Pillow Insert		1PC	Q	Butterfly nut		1+1PCS
	G	Footstool Cover		1PC	V	Wrench		1PC
	H1	80cm Panel		2PCS	N	Fastener		4PCS
	H3	75cm Side panel		2PCS	T	Plastic gasket		4PCS
	I	Wooden slat		1PC	C3	Seat Cushion Insert		1PC

Parts List


Carton	Part				Part			
BOX C	J	Base plate		1PC	D1	Backrest cushion insert		1PC
	K2	Central square tube		2PCS	J1	Cover plate		1PC
	L	Connecting pipe		1PC	F1	Lumbar Pillow Cover		1PC
	M1	Support pipe		1PC	G1	Footstool Insert		1PC
	R	Tall feet		2PCS				
	S	Short feet		4PCS				
	W	Partition strip		4PCS				

Carton	Part				Part			
BOX D	X	Right Corner Backrest		1PC	O3	M8x45mm Bolt		15+1PCS
	B	Backrest		1PC	O4	M8x60mm Bolt		1+1PCS
	Z	Corner Cushion Cover		1PC	P	Gasket		16+1PCS
	C2	Sub-seat cushion		1PC	M2	Rubber gasket		2PCS
	D2	Backrest pad		2PCS	V	Wrench		1PC
	F2	Waist cushion insert		1PC	T	Plastic gasket		2PCS
	Y1	support plate		1PC	Y2	Small L-Tube		2PCS

YOU ARE HERE

START | STRAIGHT | ADD SEAT | CORNER | OTTOMAN | FINAL

Parts List


Carton	Part				Part			
BOX D	I	Wooden slat		1PC	Z1	Corner Cushion Insert		1PC
	M1	Support pipe		1PC	D3	Backrest cushion insert		2PCS
	K1	L-shaped square tube		2PCS	F1	Lumbar Pillow Cover		1PC
	S	Short feet		2PCS				

Carton	Part				Part			
BOX E	H1	80cm Panel		2PCS	N	Fastener		4PCS
	H3	75cm Side panel		2PCS	O1	M8x20mm Bolt		16+1PCS
	G	Footstool Cover		1PC	O2	M8x40mm Bolt		8+1PCS
	J	Base plate		1PC	V	Wrench		1PC
	W	Partition strip		4PCS	P	Gasket		24+1PCS
	J1	Cover plate		1PC	S	Short feet		4PCS
	G1	Ottoman Seat Cushion Insert		1PC	T	Plastic gasket		4PCS

Parts List

Carton	Part				Part			
BOX F	A1	Left armrest		1PC	T	Plastic gasket		4PCS
	A2	Right armrest		1PC	Z1	Connector tabs		1PCS
	D	Backrest pad		4PCS	Z2	Connector tabs		1PCS
	F1	Lumbar Pillow Cover		6PCS				
	S	Short feet		4PCS				
	D1	Backrest cushion insert		4PCS				
	F2	Lumbar Pillow Insert		6PCS				
	C1	Seat Cushion Cover		4PCS				

Parts List

Carton	Part				Part
BOX G	K2	Central square tube		4PCS	

Note: If your modular sofa is delivered in two cartons of B, you will receive 8* K1 tubes. Only 4*K1 tubes and 4*K2 tubes are required for assembly. We will also provide an additional G set (4* K2 tubes) so you can configure the sofa in your preferred arrangement.

START HERE

Open to page 09: Find Your Sofa. Keep carton labels nearby and do not discard hardware bags until assembly is complete.

Assembly Instructions

- Start the installation only after all corresponding boxes have been received.
- The installation steps vary depending on the different combinations


2 Seat Sofa

Include 3 Box: BoxA + BoxB




2 Seat Sofa+1 Ottoman

Include 3 Box: BoxA + BoxB + BoxE

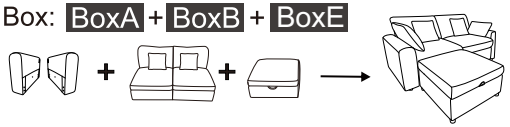


3 Seat Sofa+1 Ottoman

Include 3 Box: BoxA + BoxB + BoxC

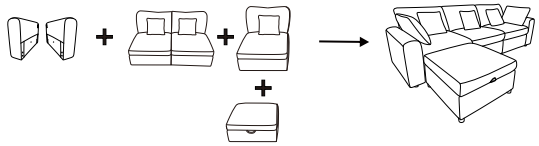


3 Seat Sofa+ 2Ottoman

Include 4 Box: BoxA + BoxB + BoxC + BoxE

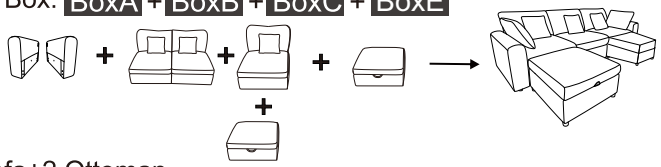


4 Seat Sofa+2 Ottoman

Include 4 Box: BoxA + BoxB + BoxC + BoxC

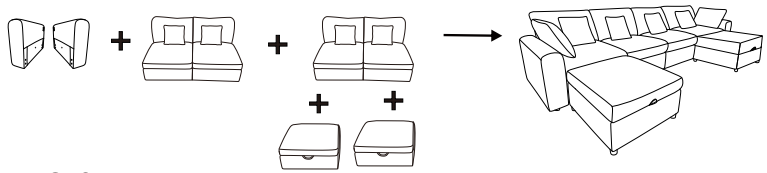


5 Seat Sofa

Include 4 Box: BoxB + BoxB + BoxD + BoxF + BoxG

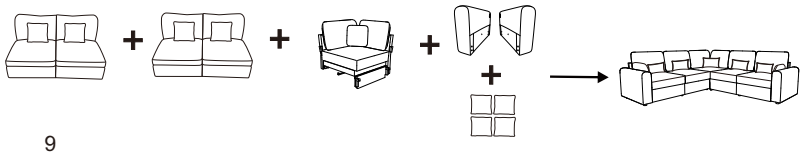

5 Seat Sofa+ 1 Ottoman


Include 5 Box: BoxB + BoxB + BoxD + BoxE + BoxF + BoxG

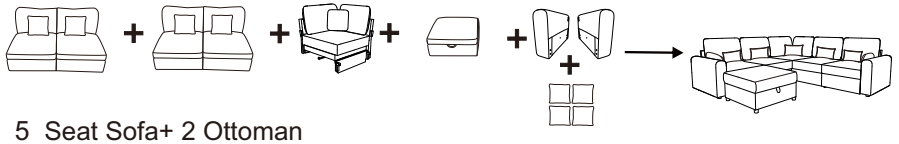

5 Seat Sofa+ 2 Ottoman


Include 5 Box:

BoxA + BoxB + BoxC + BoxC + BoxD

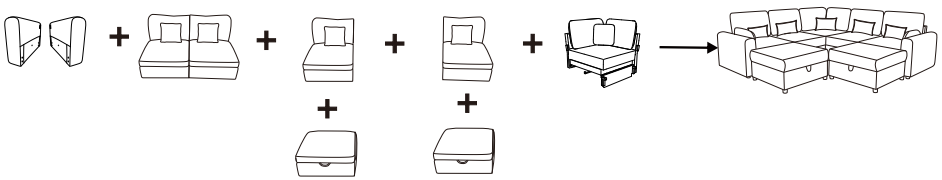


6 Seat Sofa+ 1 Ottoman

Include 5 Box: BoxB + BoxB + BoxC + BoxD + BoxF + BoxG

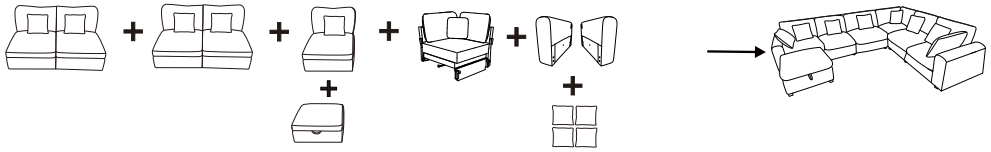

6 Seat Sofa+ 2 Ottoman


Include 6 Box: BoxB + BoxB + BoxC + BoxD + BoxE + BoxF + BoxG

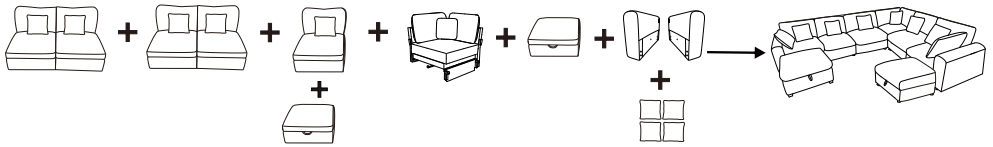

7 Seat Sofa+ 2 Ottoman


Include 6 Box:

BoxB + BoxB + BoxC + BoxC + BoxD + BoxF + BoxG

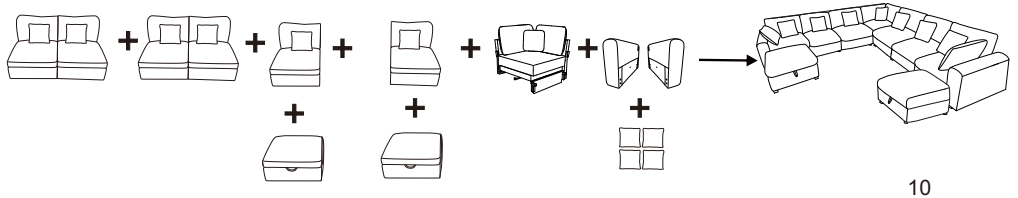


YOU ARE HERE


Stuff the cushion insert into the fabric cover.

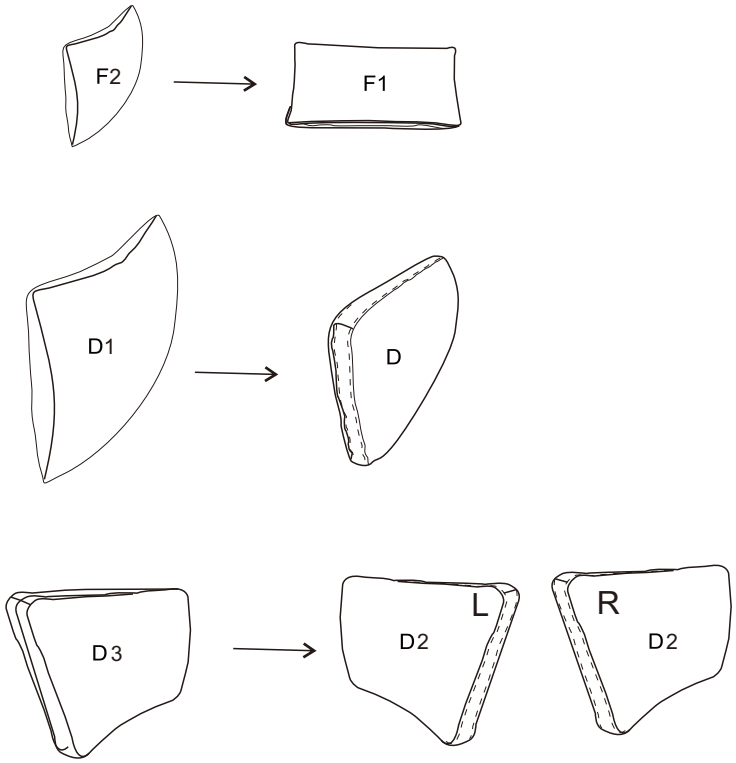


Stuff the cushion insert into the fabric cover.

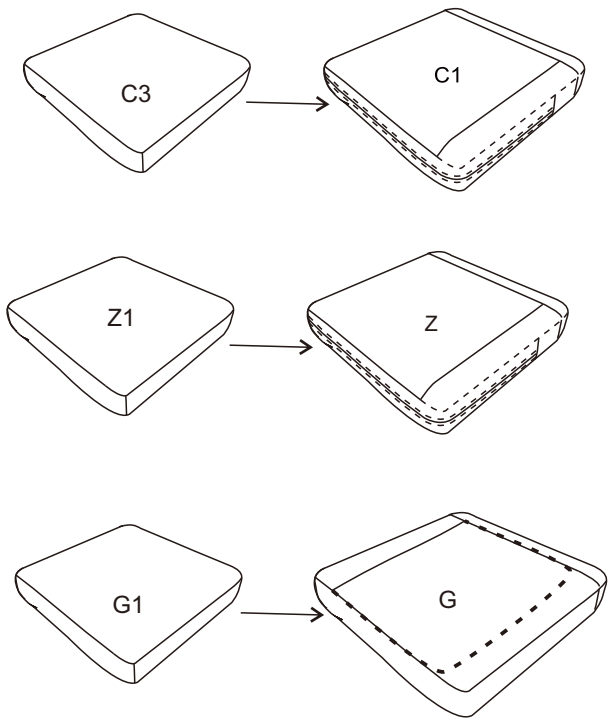


1 Take out all the compression bags from the box and open them all Place all the sponge pads aside and gently pat them, then wait for the sponges to rebound. Note: Be careful not to scratch the interior of the sponge with sharp objects. Remove the compression bag a nd sofa legs from the bottom of the armrests.

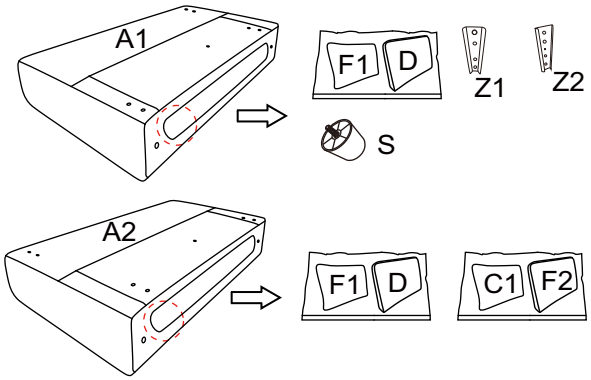


2 Remove the pre-installed screws.

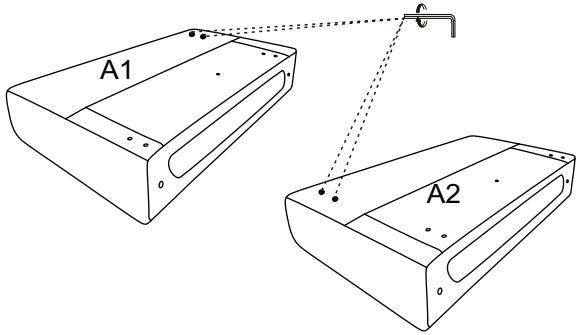

3 First, fully tighten Connector tabs (Z2) to Left armrest (A1) using the removed pre-installed screws, then fully tighten Connector tabs (Z1) to Right armrest (A2) using the removed pre-installed screws.

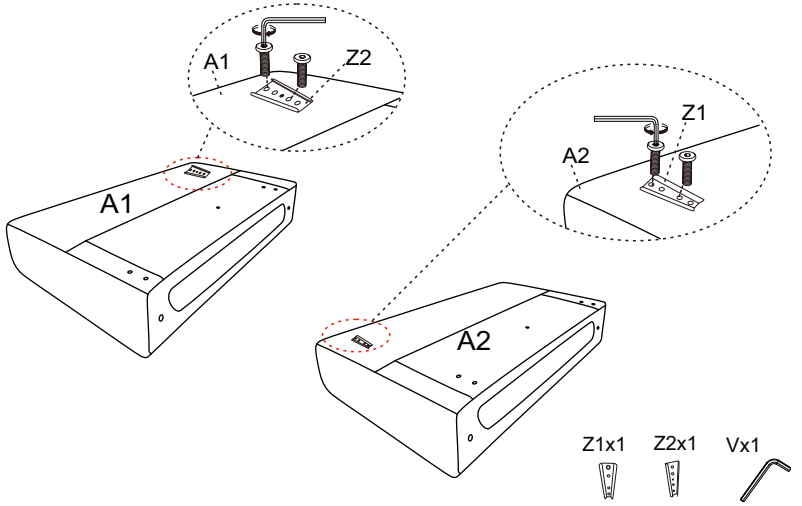



4 Install two L-shaped square tubes (K1)at the hole positions of front guard plate (E),and fasten them to 60% with gaskets(P), M8x45mm bolts (O3), and wrench.

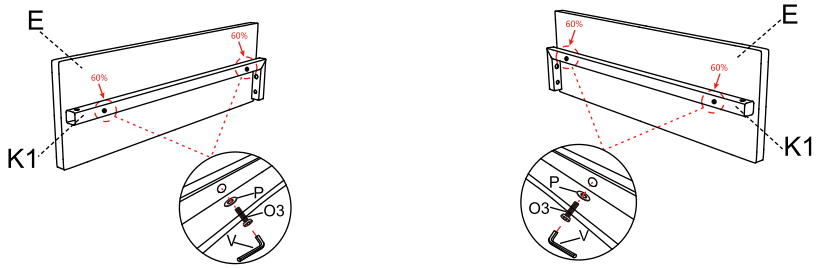




5 Install two L-shaped square tubes (K1) at the hole positions of backrest(B),and fasten them to 60% with gaskets(P), M8x45mm bolts (O3), and wrench.

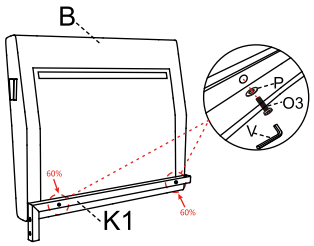

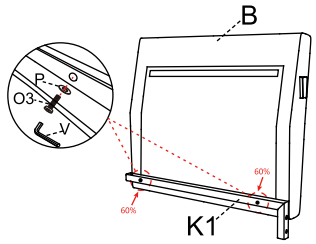




6 Install the backrest (B) insert onto the left armrest (A1) insert, then press down until fixed in place.

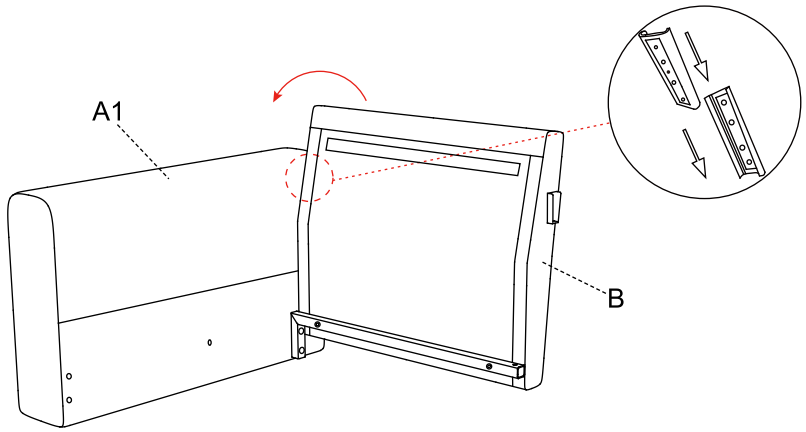


7 Connect the two L-shaped square tubes (K1) of the front seat baffle (E) and backrest (B) to the left armrest (A1), then fasten them with the gasket (P), M8×45mm bolt (O3) and a wrench (V).

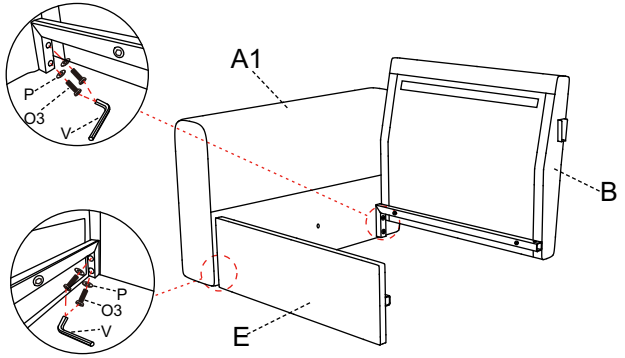





8 Install the middle backrest (B) insert into the left backrest (B) insert, and press down until it is fixed in place.

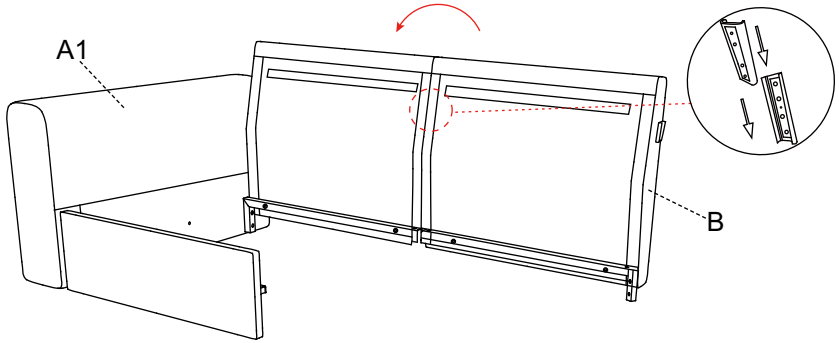


9 Install the connecting tube (L) on both sides of the backrest and the front seat baffle, and use the gasket (P), M8×45mm bolt (O3), and wrench (V) to tighten it.

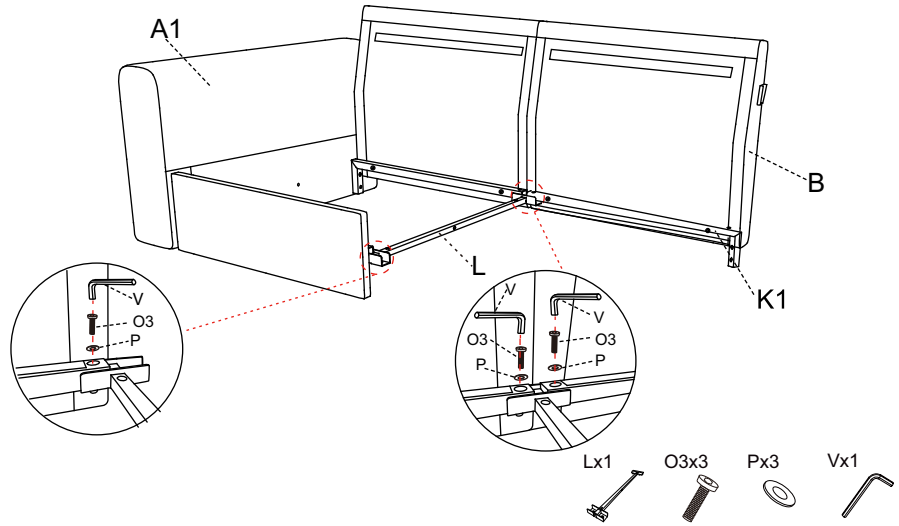


10 Connect the central square tubes (K1) of the front seat baffle (E) to the connecting pipe (L), then tighten them using the gasket (P), M8×45mm bolt (O3) and a wrench (V).

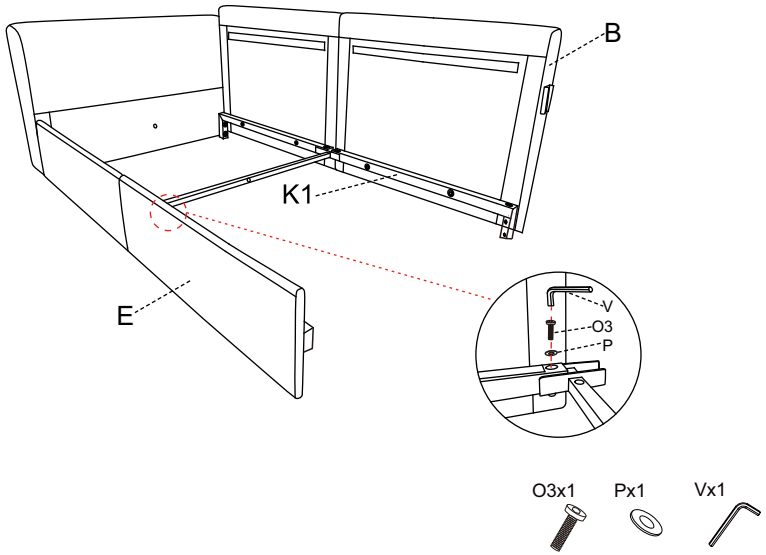


11 Install the right armrest (A2) insert onto the backrest (B) insert, then press down until fixed in place. Connect the two L-shaped square tubes (K1) of the front seat baffle (E) and backrest (B) to the right armrest (A2), then fasten them with the gasket (P), M8x45mm bolt (O3) and a wrench (V).

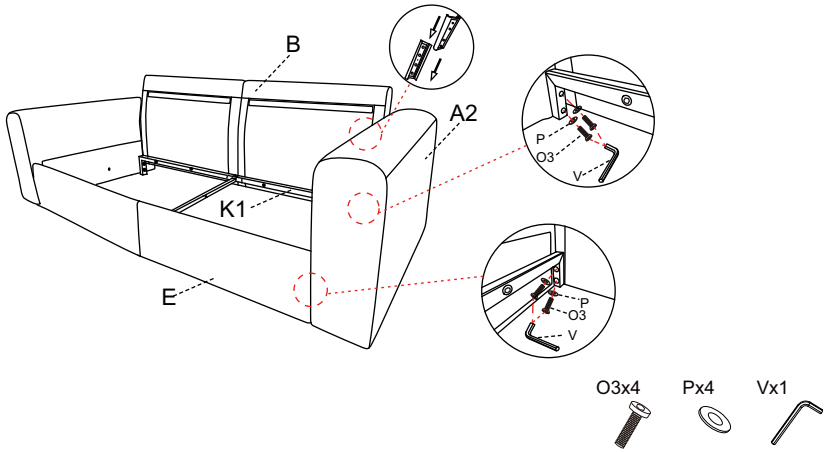


12 Install the support pipe (M1), and secure it at the handrail end with a rubber gasket (M2) andM8*45mm bolt(O3). For connection to the middle position, a butterfly nut (Q) and M8*60mm bolt(O4)should be used for fastening. Note: Don't forget to use the gasket (P)

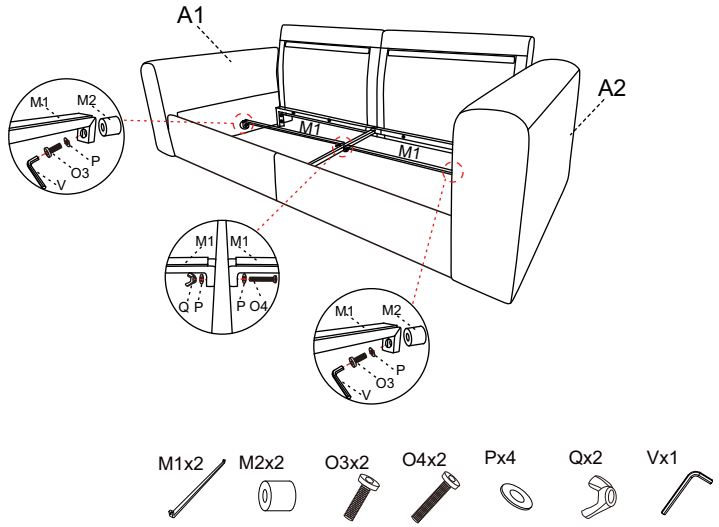

13 Flip the seat frame over, then install the four tall feet (R) to the bottom of the connecting pipe (L), and install the four short feet (S) to the bottom of both armrests.Note: Do not forget to use the plastic gasket(T).

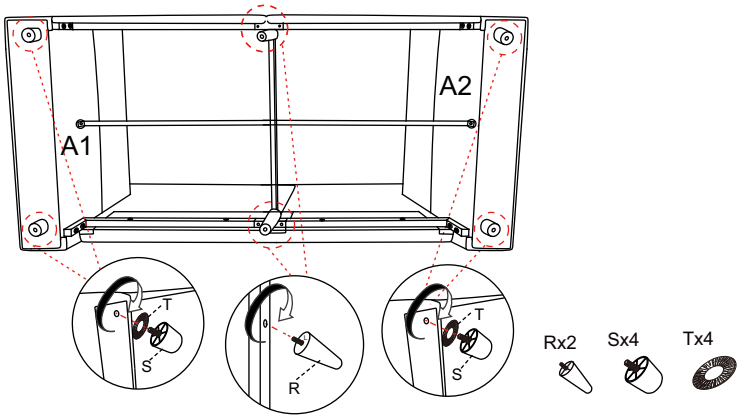


14 Ensure that the velcro on the wooden slat (I) is fully attached to the square tube of the seat frame.

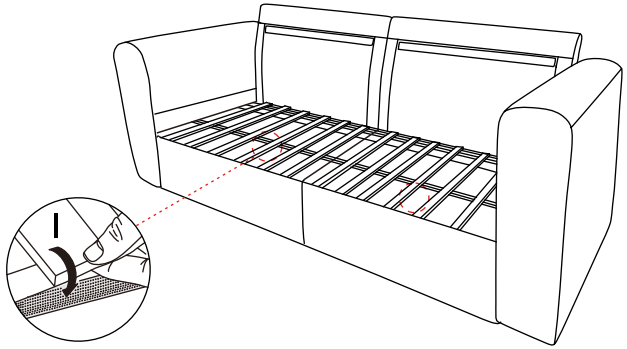




15 Place sub-seat cushion (C2) on wooden slat (I).

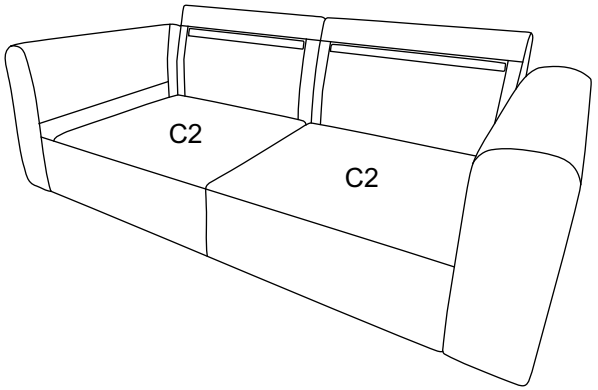

16 Lay the pre-fitted Backrest pad (D) & Backrest cushion insert (D1) and Seat Cushion Cover (C1) & Seat Cushion Insert (C3).

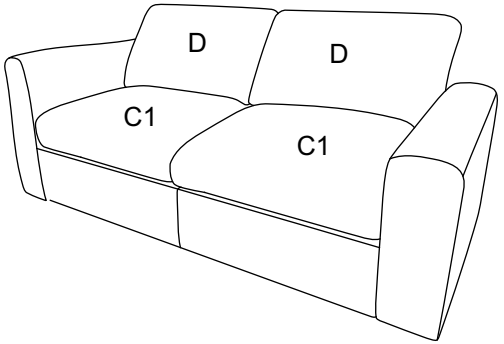


NOTE:


This manual uses the 2-seat modular sofa as the assembly example.
For 3-seat and 4-seat configurations, first assemble the basic 2-seat frame, then add the required center seat module(s) between the two side modules.
- 3-seat configuration: Add 1 center seat module.
- 4-seat configuration: Add 2 center seat modules.

For each additional center seat module, repeat the applicable connection, backrest-installation, and fastening steps in this manual. Make sure that all connecting tubes, bolts, and gaskets are securely installed before adding the next module.


1 Install the straight square tube (K2) at the hole positions of front guard plate (E) and backrest(B), and fasten them to 60% with gaskets(P), M8x45mm bolts (O3), and wrench.

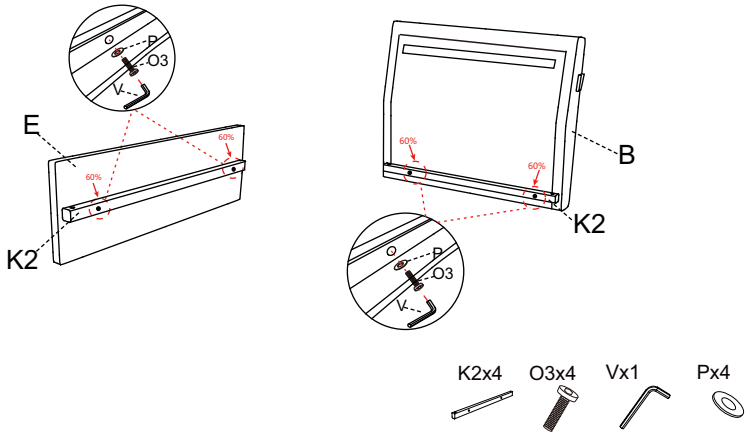


2 Install the middle backrest (B) insert into the left backrest (B) insert, and press down until it is fixed in place.

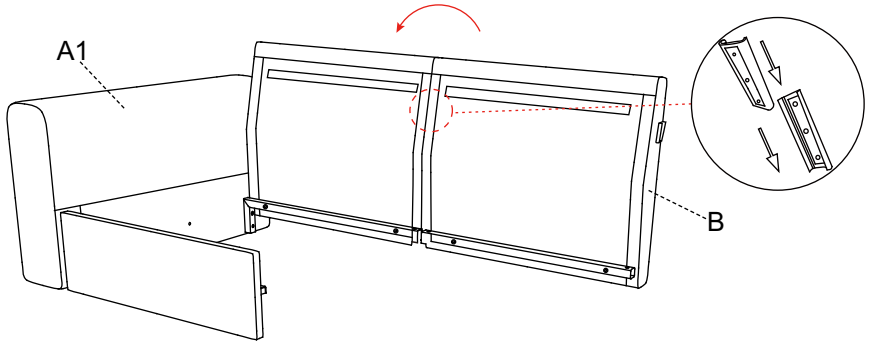


3 Install the connecting tube (L) on both sides of the backrest and the front seat baffle, and use the gasket (P), M8×45mm bolt (O3), and wrench (V) to tighten it.

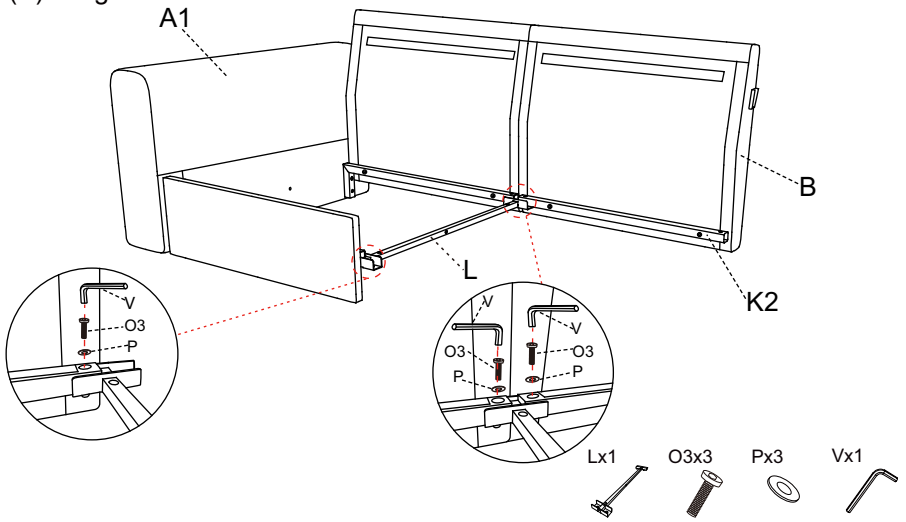


4 Connect the central square tubes (K2) of the front seat baffle (E) to the connecting pipe (L), then tighten them using the gasket (P), M8×45mm bolt (O3) and a wrench (V).

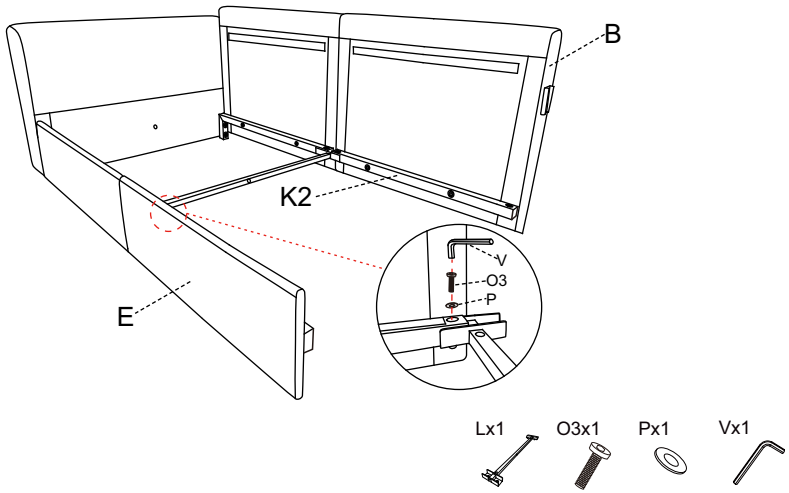


5 Install the right backrest (B) insert into the left backrest (B) insert, and press down until it is fixed in place.

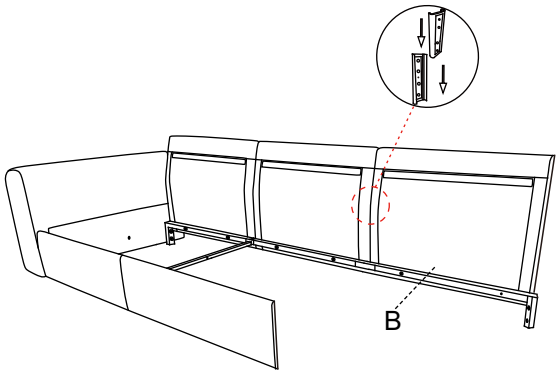


6 Install the connecting tube (L) on both sides of the backrest and the front seat baffle, and use the gasket (P), M8×45mm bolt (O3), and wrench (V) to tighten it.

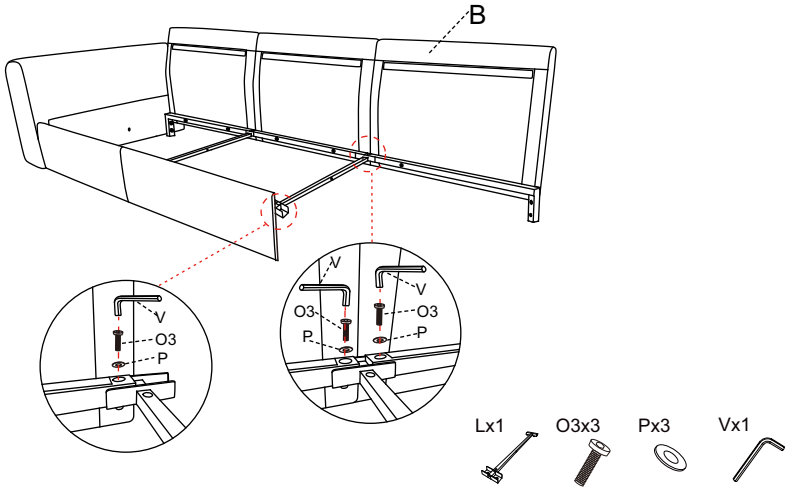


7 Connect the central square tubes (K1) of the front seat baffle (E) to the connecting pipe (L), then tighten them using the gasket (P), M8×45mm bolt (O3) and a wrench (V).

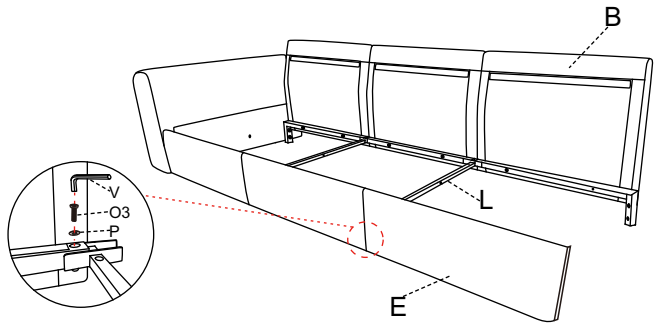


8 Install the right armrest (A2) insert onto the backrest (B) insert, then press down until fixed in place. Connect the two L-shaped square tubes (K1) of the front seat baffle (E) and backrest (B) to the right armrest (A2), then fasten them with the gasket (P), M8x45mm bolt (O3) and a wrench (V).

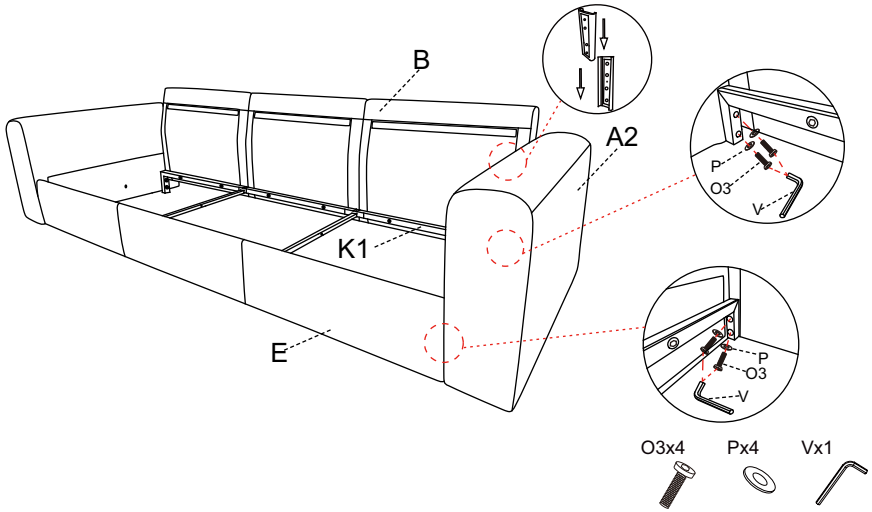


9 Install the support pipe (M1), and secure it at the handrail end with a rubber gasket (M2) andM8*45mm bolt(O3). For connection to the middle position, a butterfly nut (Q) and M8*60mm bolt(O4)should be used for fastening. Note: Don't forget to use the gasket (P)

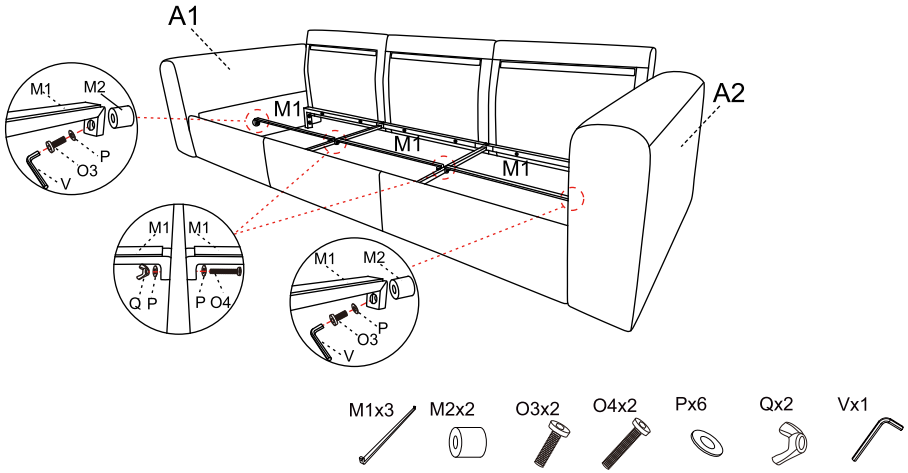


10 Flip the seat frame over, then install the four tall feet (R) to the bottom of the connecting pipe (L).

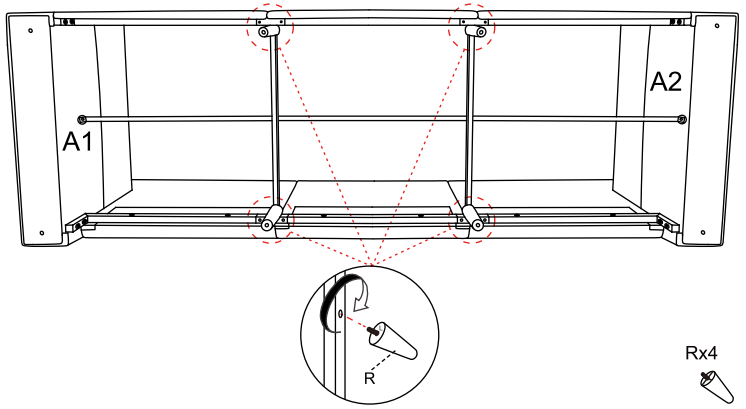

11 Flip the seat frame over, and install the four short feet (S) to the bottom of both armrests.Note: Do not forget to use the plastic gasket(T).

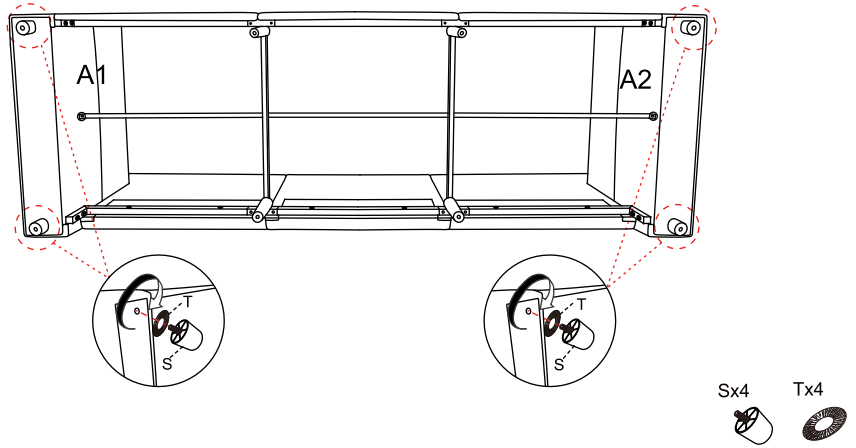


12 Ensure that the velcro on the wooden slat (I) is fully attached to the square tube of the seat frame.

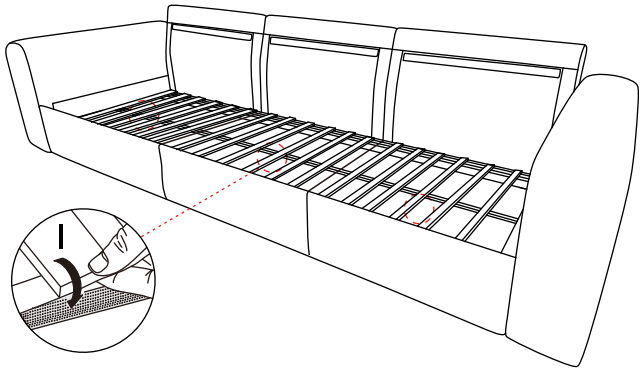




13 Place sub-seat cushion (C2) on wooden slat (I).

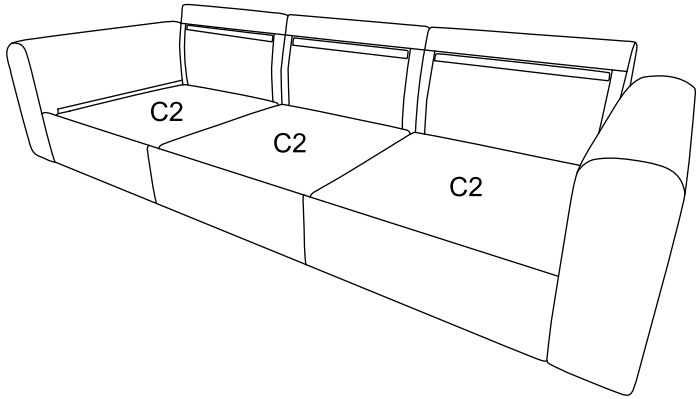


14 Lay the pre-fitted Backrest pad (D) & Backrest cushion insert (D1) and Seat Cushion Cover (C1) & Seat Cushion Insert (C3).

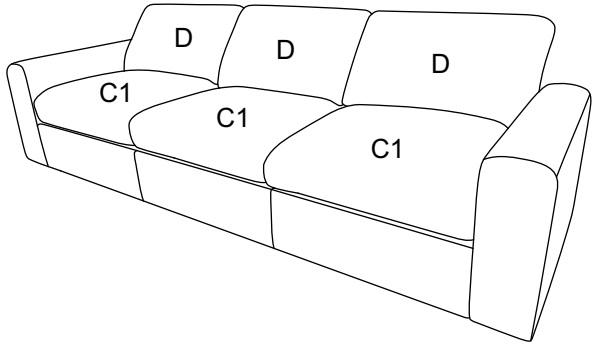


YOU ARE HERE

START | STRAIGHT | ADD SEAT | CORNER | OTTOMAN | FINAL


1 Take out all the compression bags from the box and open them all Place all the sponge pads aside and gently pat them, then wait for the sponges to rebound. Note: Be careful not to scratch the interior of the sponge with sharp objects. Remove the compression bag a nd sofa legs from the bottom of the armrests.

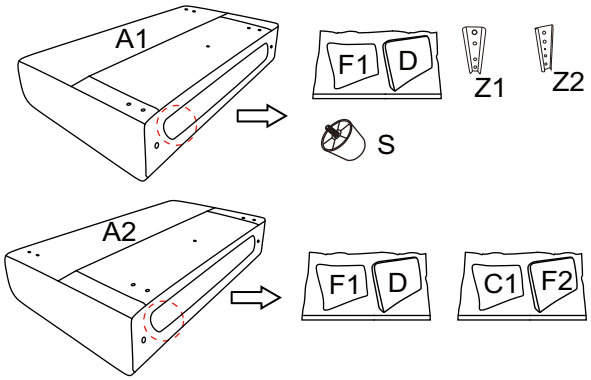


2 Remove the pre-installed screws.

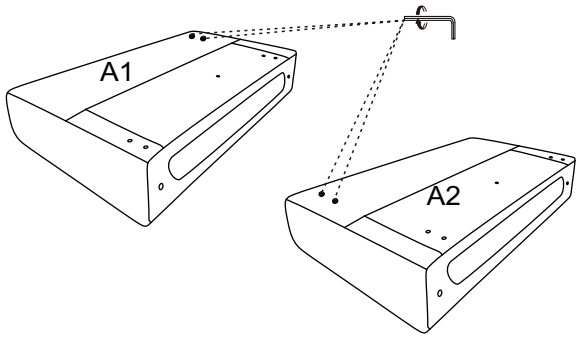

3 First, fully tighten Connector tabs (Z2) to Left armrest (A1) using the removed pre-installed screws, then fully tighten Connector tabs (Z1) to Right armrest (A2) using the removed pre-installed screws.

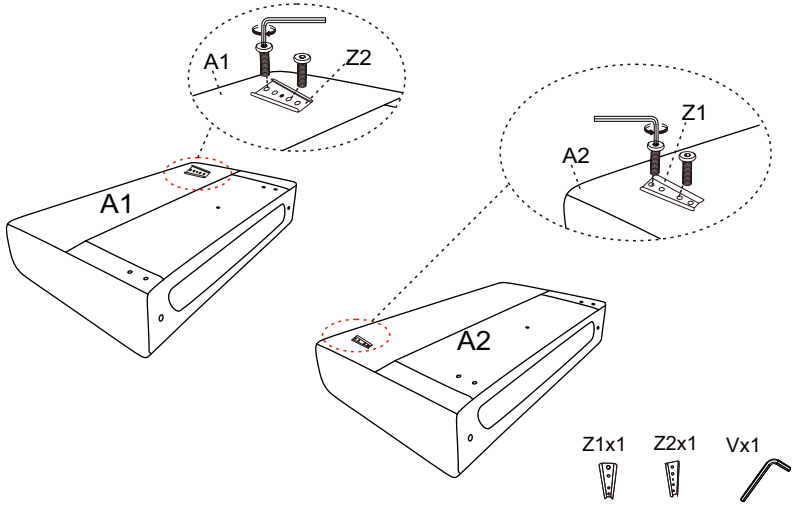


4 Install two L-shaped square tubes (K1) and the straight square tube (K2) at the hole positions of front guard plate (E), and fasten them to 60% with gaskets(P), M8x45mm bolts (O3), and wrench.

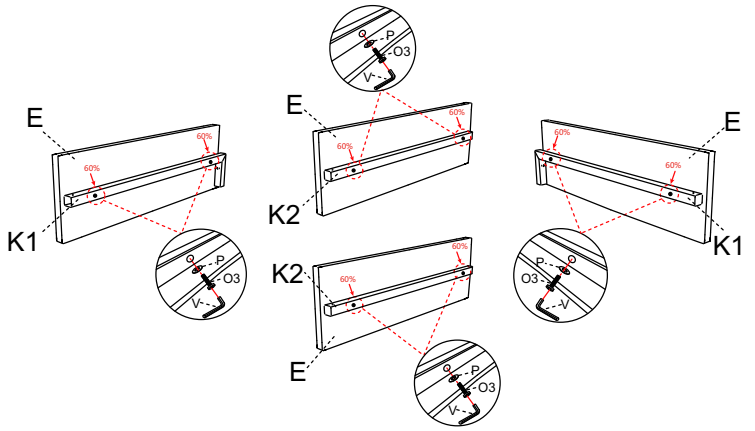





5 Install L-shaped square tubes (K1) and the straight square tube (K2) at the hole positions of backrest(B),and fasten them to 60% with gaskets(P), M8x45mm bolts (O3), and wrench.

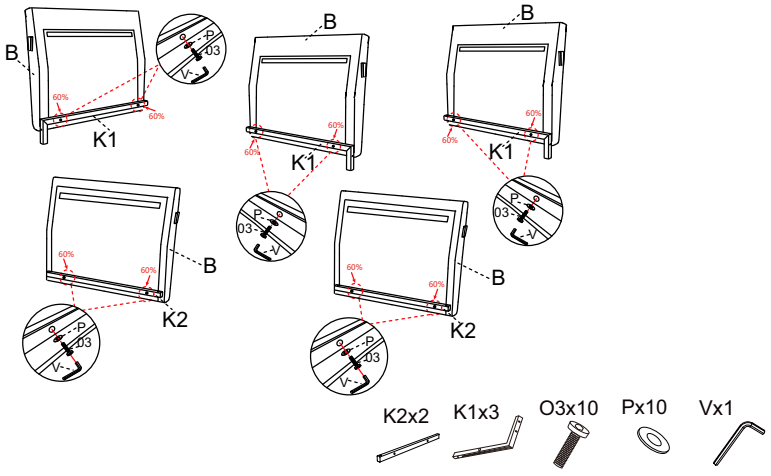


6 Connect part (Y2) to the outside of the support plate (Y1), then use washer (P), M8x45mm bolt (O3), and wrench (V) to tighten it.Then connect the (K1) square tube to the inside of the support plate and use washer (P), M8x45mm bolt (O3), and wrench (V) to fix them at 60% of the position.

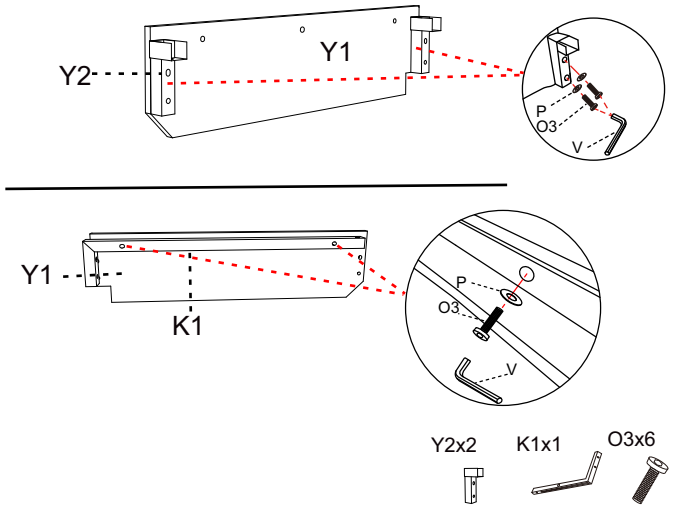

7 Install the backrest (B) insert onto the left armrest (A1) insert, then press down until fixed in place.

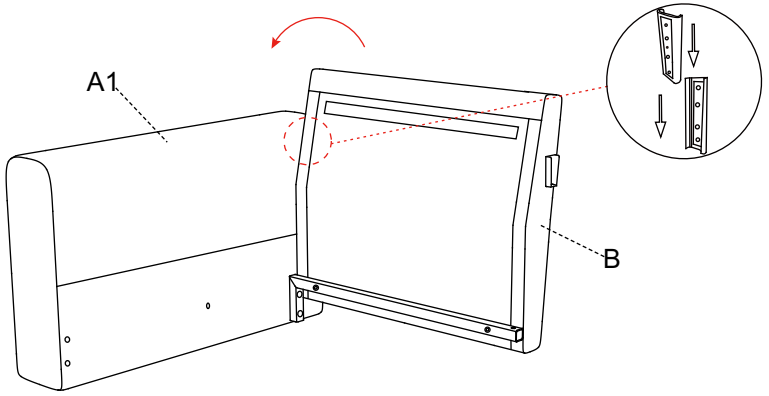


8 Connect the two L-shaped square tubes (K1) of the front seat baffle (E) and backrest (B) to the left armrest (A1), then fasten them with the gasket (P), M8×45mm bolt (O3) and a wrench (V).

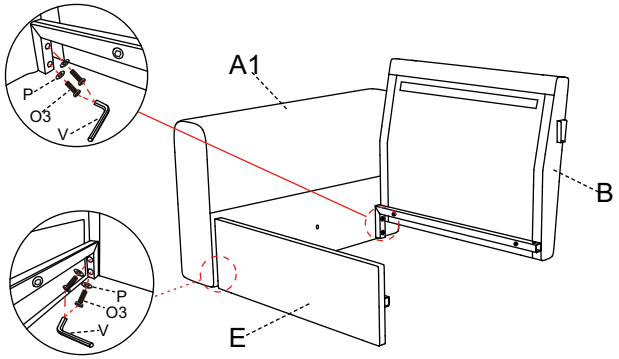




9 Install the middle backrest (B) insert into the left backrest (B) insert, and press down until it is fixed in place.

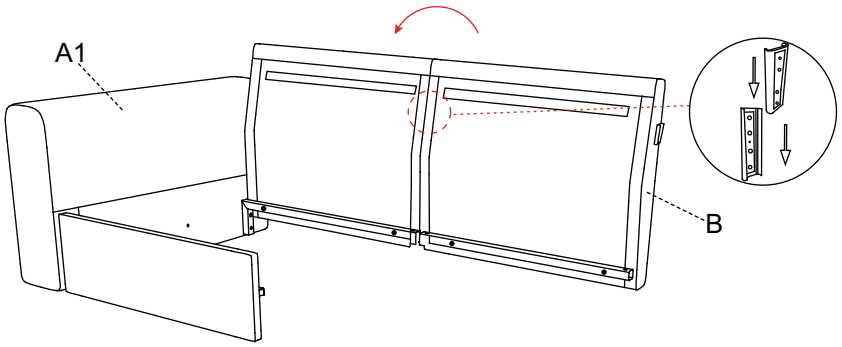


10 Install the connecting tube (L) on both sides of the backrest and the front seat baffle, and use the gasket (P), M8×45mm bolt (O3), and wrench to tighten it.

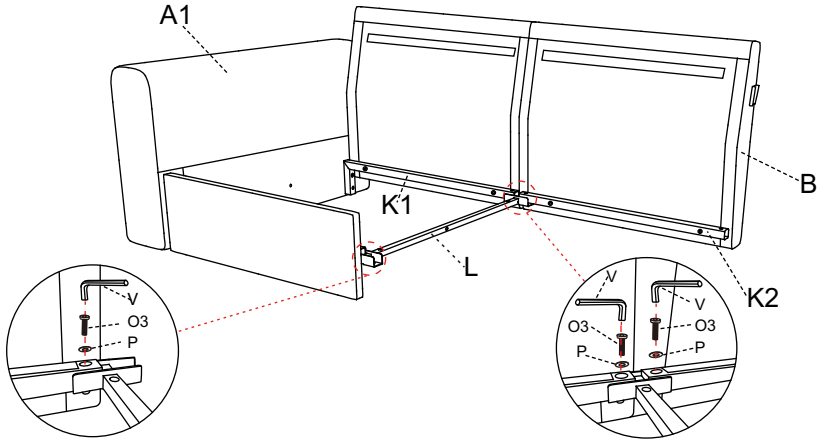





11 Connect the central square tubes (K2) of the front seat baffle (E) to the connecting pipe (L), then tighten them using the gasket (P), M8×45mm bolt (O3) and a wrench (V).

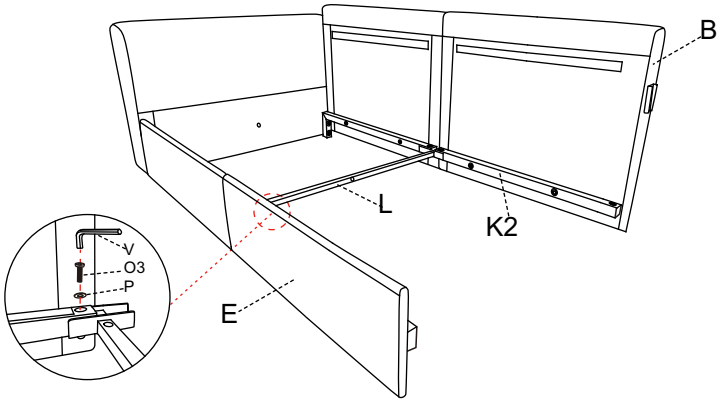




12 Install the connecting tube (L) on both sides of the backrest and the front seat baffle, and use the gasket (P), M8x45mm bolt (O3), and wrench(V) to tighten it.

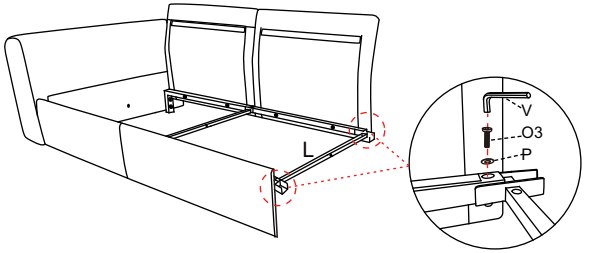


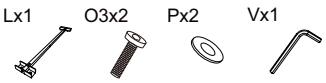


13 Insert the corner backrest (X) into the middle backrest (B), then press down until fixed in place.
Connect the L-shaped square tube (K1) of the backrest (B) to the corner backrest, then fasten it with the gasket (P), M8×45mm bolt (O3), and a wrench (V).

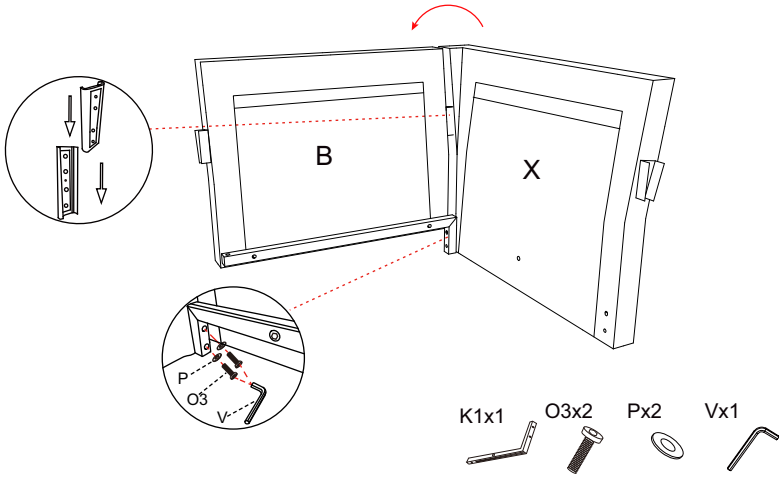


14 Connect the L-shaped square tube (K1) of the support plate (Y1) to the corner backrest, then fasten it with the gasket (P), M8×45mm bolt (O3), and wrench (V).

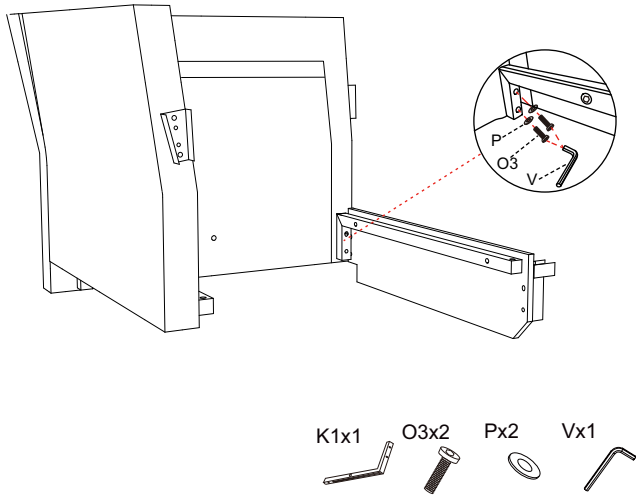


15 Insert the right backrest (B) into the middle backrest (B) insert, and press down until it is fixed in place.
Connect the L-shaped square tubes (K1) of the support plate (Y1) and the backrest (B) to the connecting pipe (L), then tighten them using the

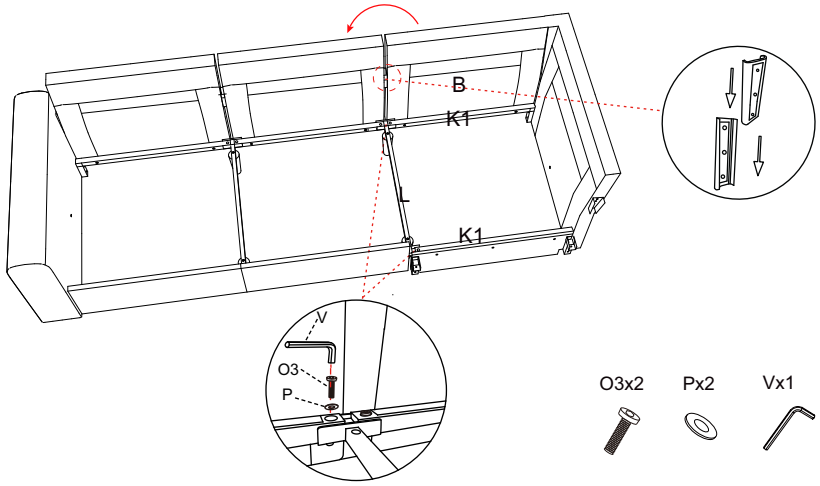


16 Install the support pipe (M1) at the handrail end and the corner backrest end, secure it using a rubber gasket (M2) and an M8x45mm bolt (O3).For the middle connection, fasten it using a butterfly nut (Q) and an M8x60mm bolt (O4).Note: Be sure to use the gasket (P)

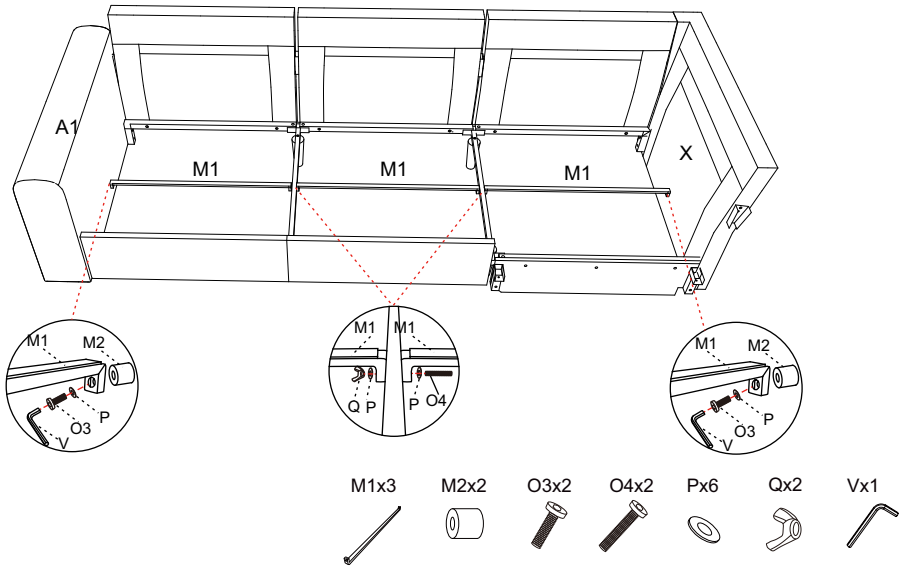


17 Flip the seat frame over, and install the two short feet (S) to the bottom of both armrests and the corner backrest. Note: Do not forget to use the plastic gasket (T). Then install the four tall feet (R)

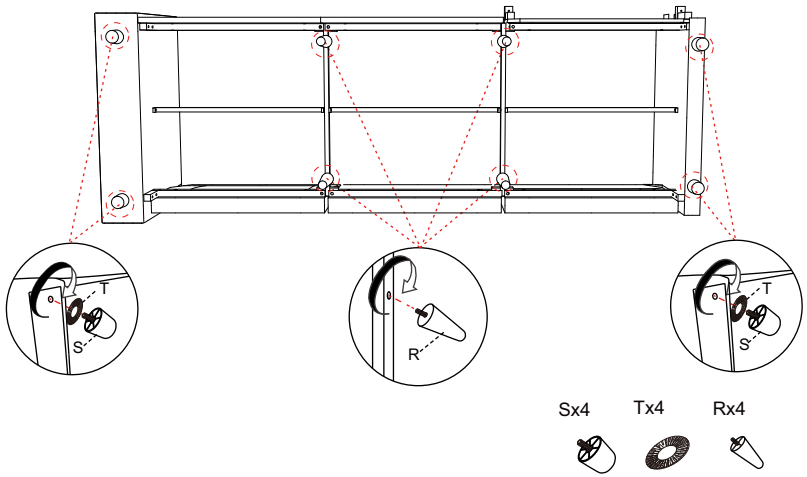


18 Install the backrest (B) insert onto the left armrest (A2) insert, then press down until fixed in place.

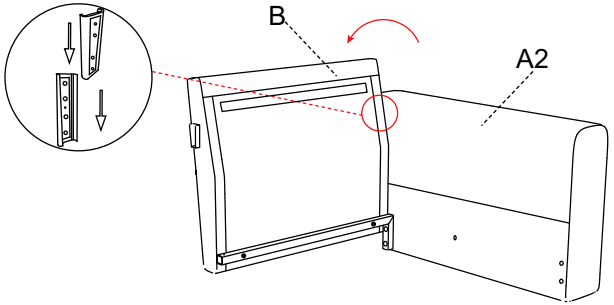


19 Connect the two L-shaped square tubes (K1) of the front seat baffle (E) and backrest (B) to the left armrest (A2), then fasten them with the gasket (P), M8x45mm bolt (O3) and a wrench (V).

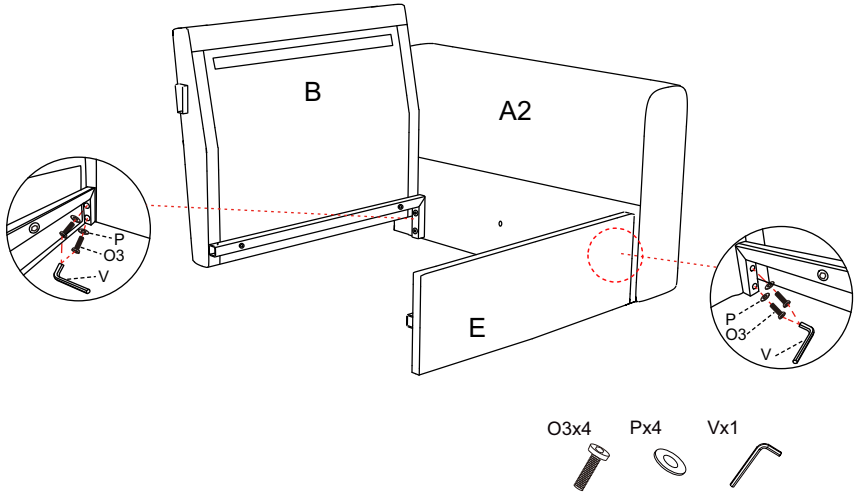


20 Install the middle backrest (B) insert into the left backrest (B) insert, and press down until it is fixed in place.

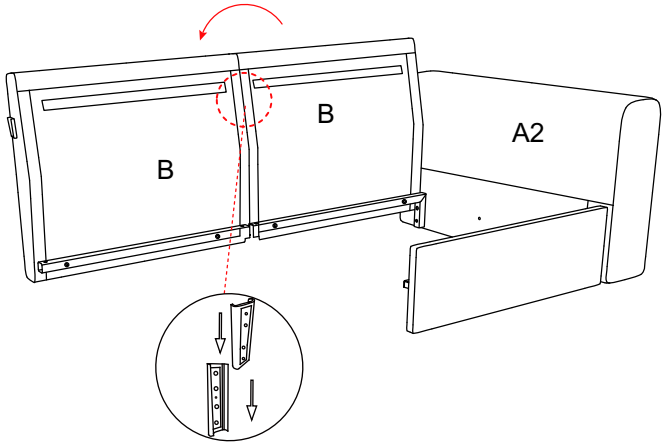


21 Install the connecting tube (L) on both sides of the backrest and the front seat baffle, and use the gasket (P), M8x45mm bolt (O3), and Install the connecting tube (L) on both sides of the backrest and the wrench (V) to tighten it.

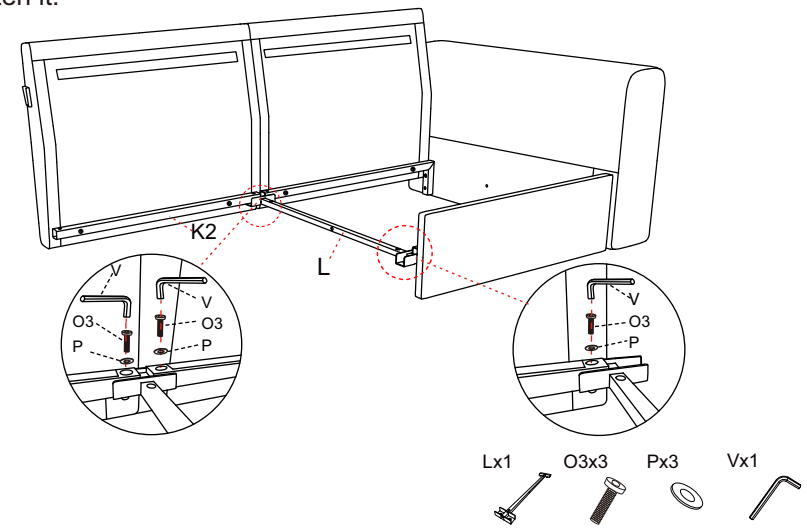


22 Connect the central square tubes (K2) of the front seat baffle (E) to the connecting pipe (L), then tighten them using the gasket (P), M8×45mm bolt (O3) and a wrench (V).

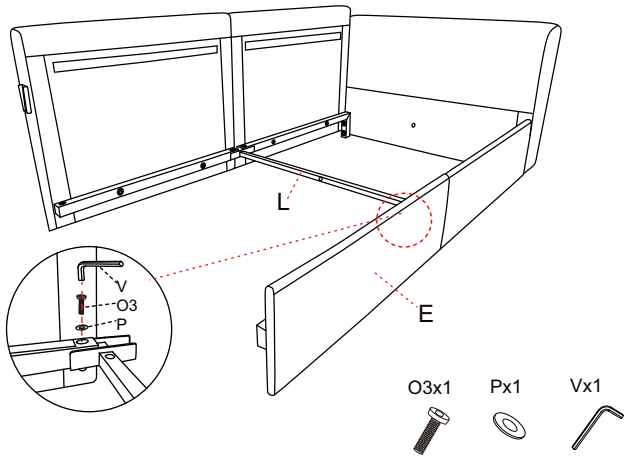


23 Install the support pipe (M1), and secure it at the handrail endwith a rubber gasket (M2) andM8*45mm bolt(O3). For connection to themiddle position, a butterfly nut (Q) and M8*60mm bolt(O4)should be usedfor fastening. Note: Don't forget to use the gasket (P)

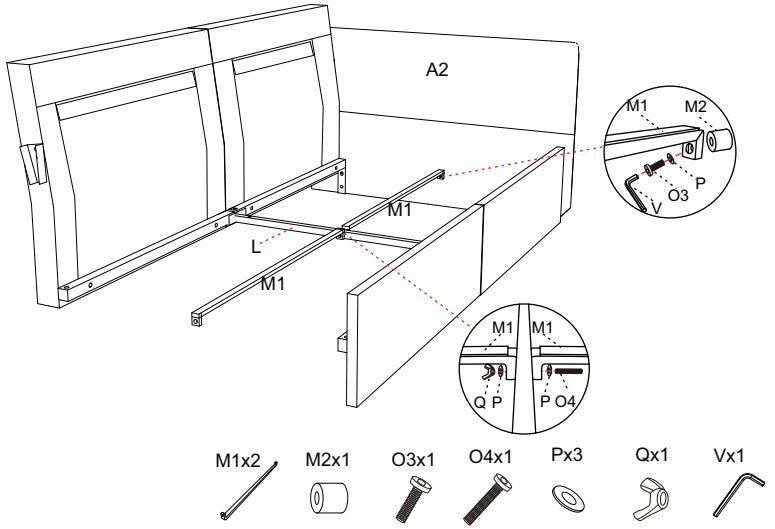


24 Flip the seat frame over, and install the two short feet (S) to thebottom of both armrests.Note: Do not forget to use the plastic gasket(T). then install the two tall feet (R)to the bottom of the connecting pipe (L).

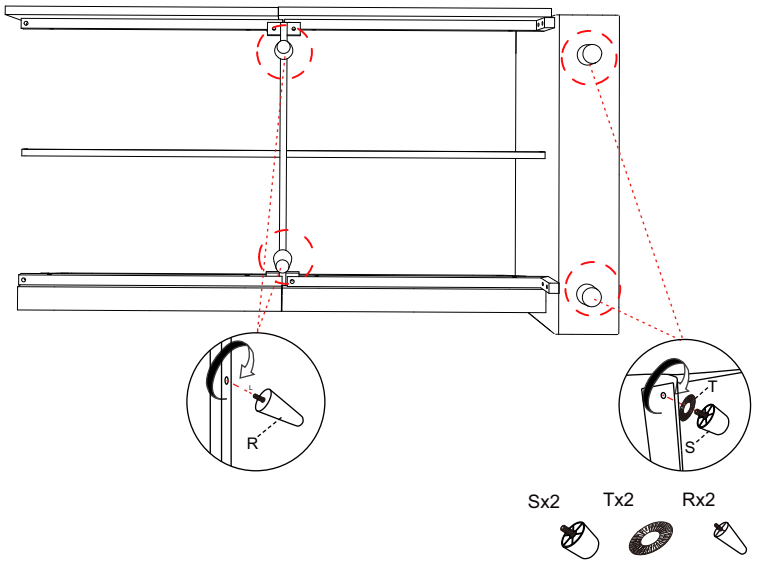


25 Insert the backrest (B) into the corner backrest (X) insert, then push downward until it locks into place.Install the support pipe (M1), and secure it at the support plate end with a rubber gasket (M2) and M8×45mm bolt (O3).Connect the central square tubes (K2) of the backrest (B) and the front baffle (E) to the part (Y2), then tighten them using the washer (P), M8×45mm bolt (O3), and wrench (V).

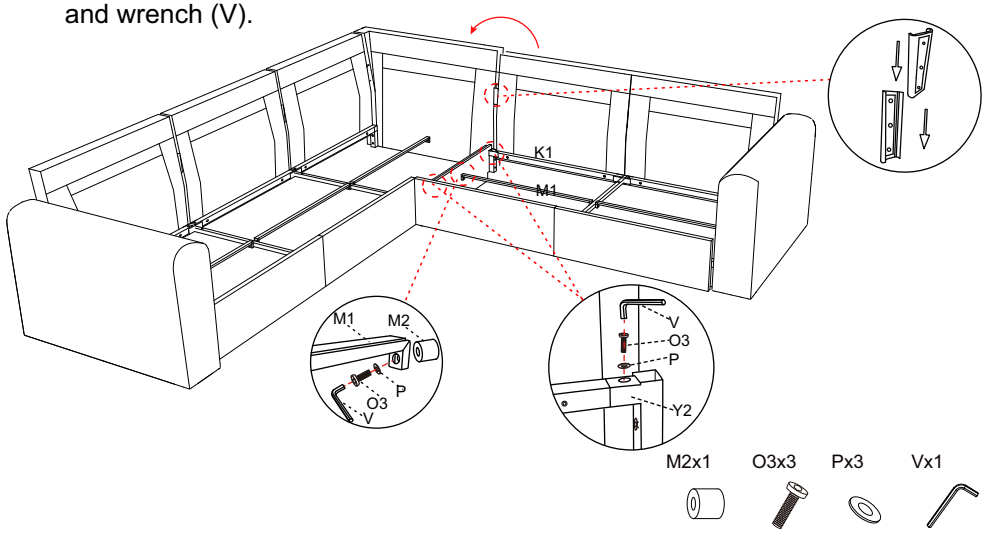


26 Ensure that the velcro at the wooden slat (I) is fully attached to the square tube of the seat frame.

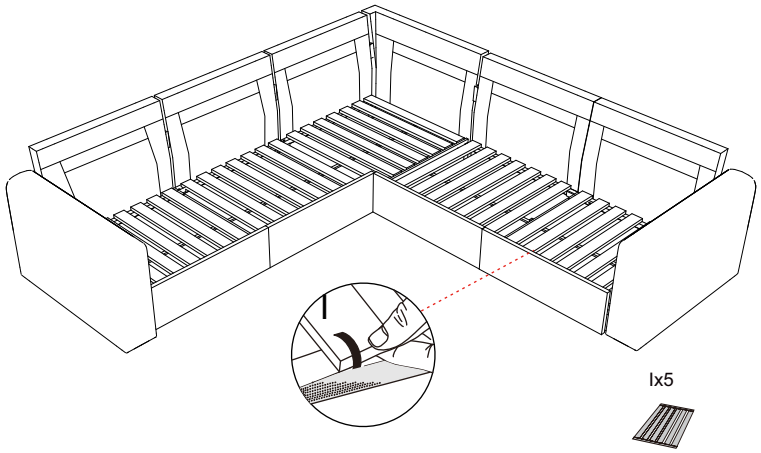


27 Place sub-seat cushion (C2) on wooden slat (I).

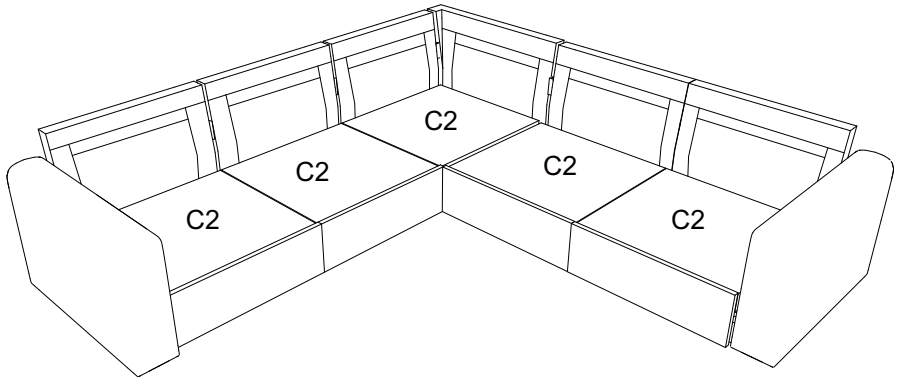

28 Lay the pre-fitted Backrest pad (D) & Backrest cushion insert (D1) and Seat Cushion Cover (C1) & Seat Cushion Insert (C3).

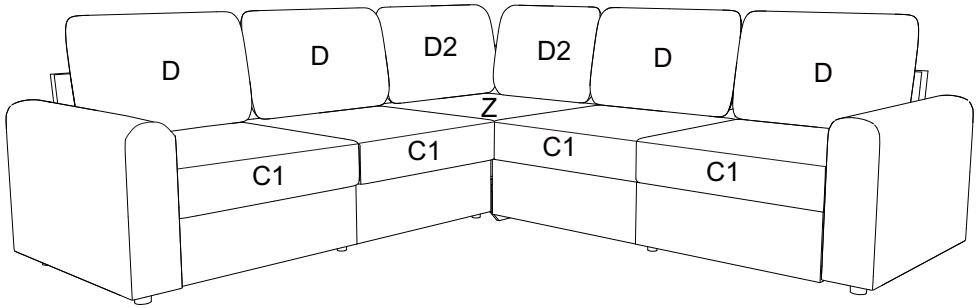


1 Connecting the 80cm panel (H1) and 75cm side panel (H3) with installation fasteners (N), and fasten them with M8*20mm bolts(O1) and a wrench (V). Note: Don't forget to use the gasket (P).

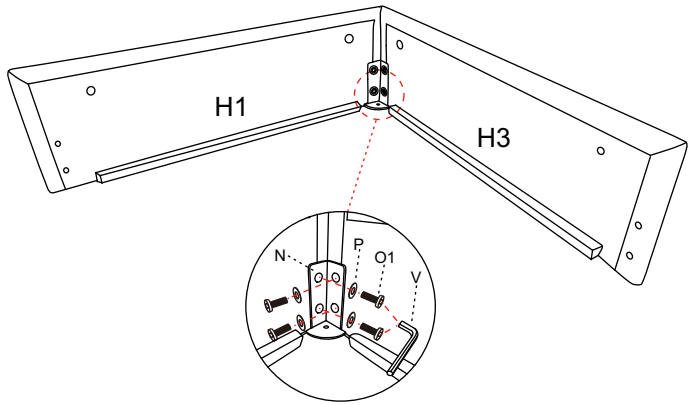




2 Repeat step 19 installation to complete the installation of the remaining 80cm panel (H1) and 75cm side panel (H3), and then place the base plate (J).

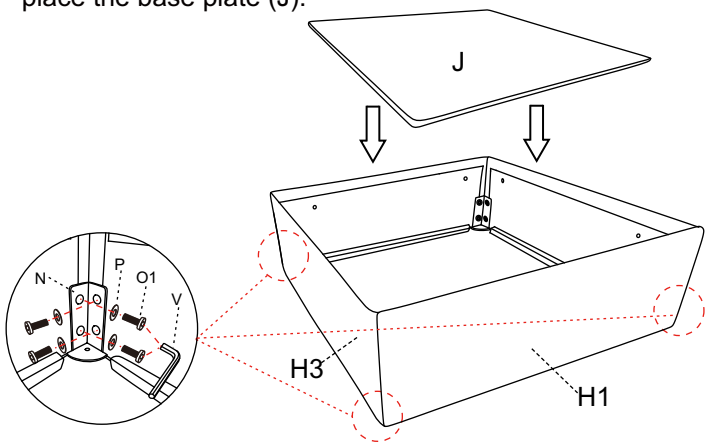





3 After completing the installation of the ottoman frame, locate the partition strip (W) and install it on the inner side of the four panels. use M8*40mm bolt(O2) and a wrench (V) to tighten it. Note: Don't forget to use the gasket (P)
And then place the cover plate (J1). Note: Don't forget to use the gasket (P).

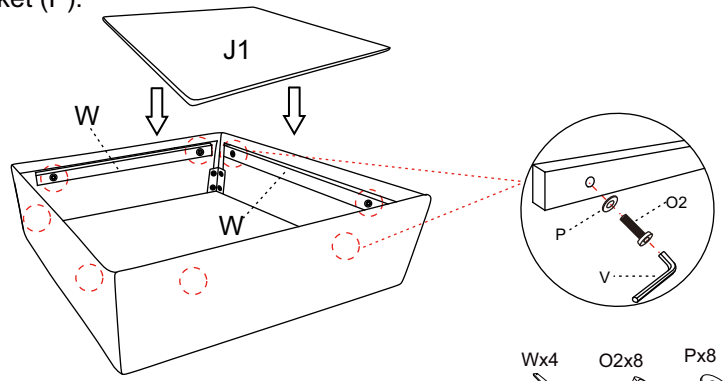




4 Turn the ottoman frame over to the bottom and screw on the low feet (S) at the four fasteners.Note: Don't forget to use plastic gaskets (T) .

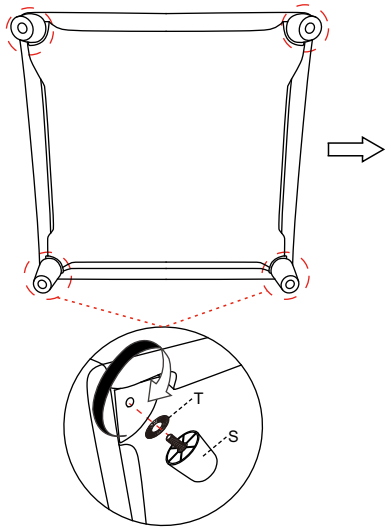

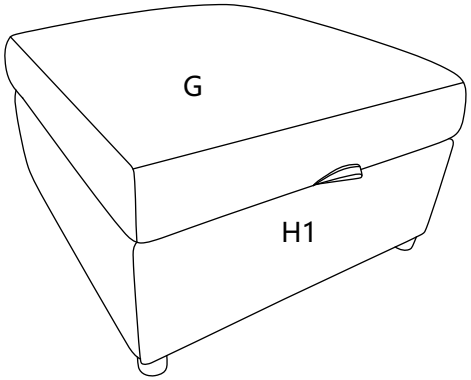





2 Seats(A+B)

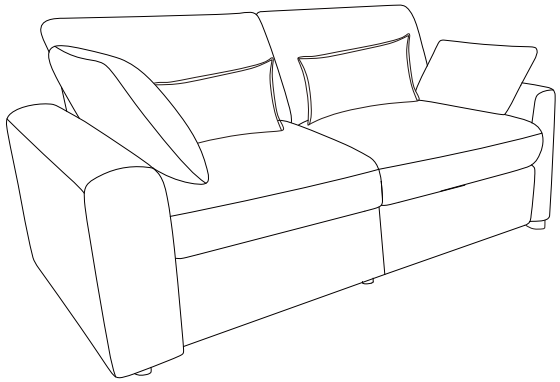


3+1 Seats(A+B+C)

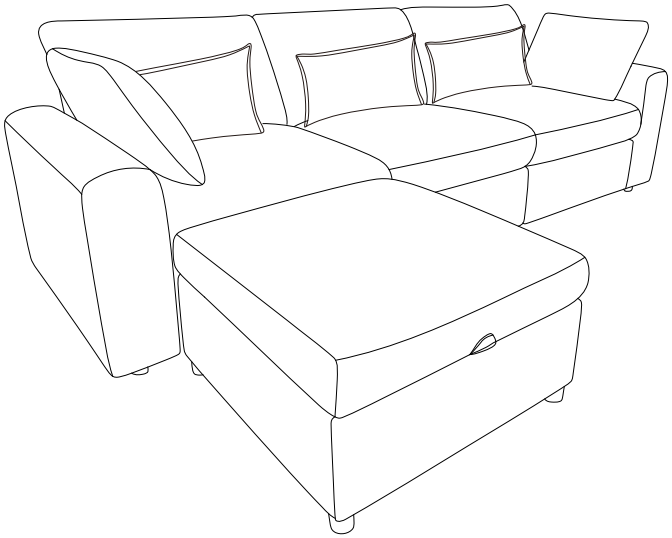


2+1Seats(A+B+E)

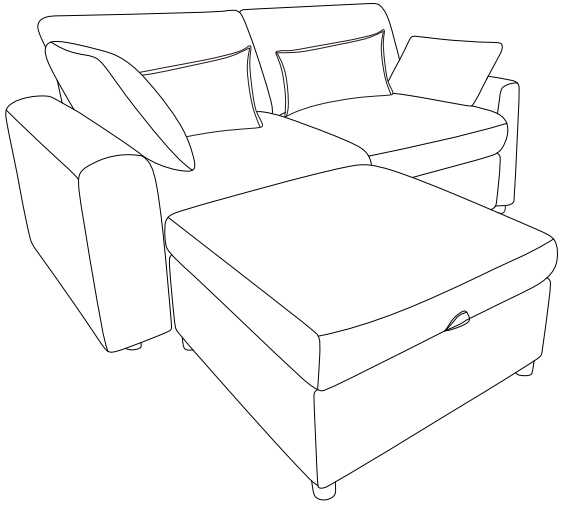


3+2 Seats(A+B+C+E)

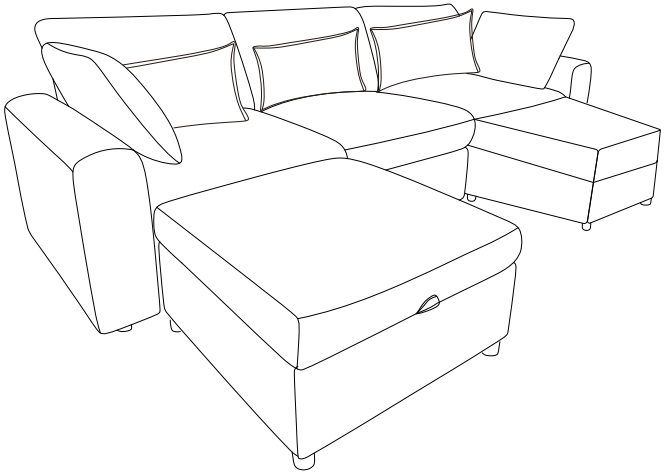


4+2Seats(A+B+C+C)

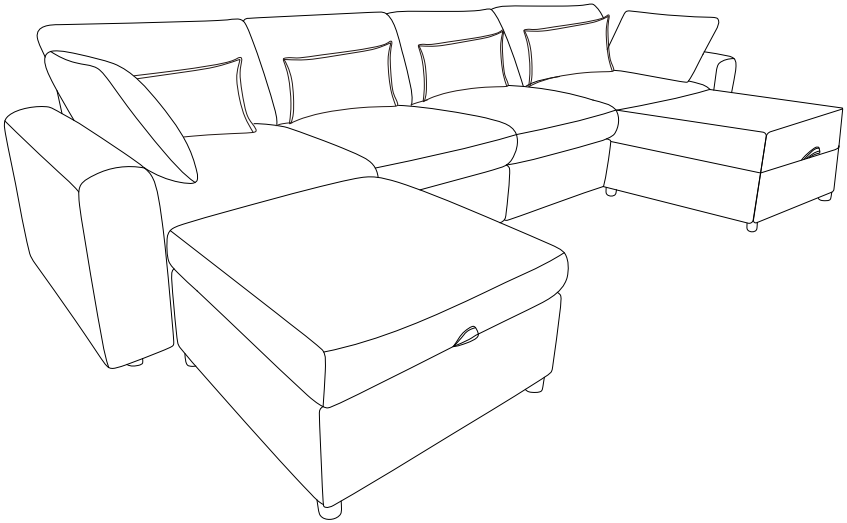


5+1Seats (B+B+D+E+F+G)

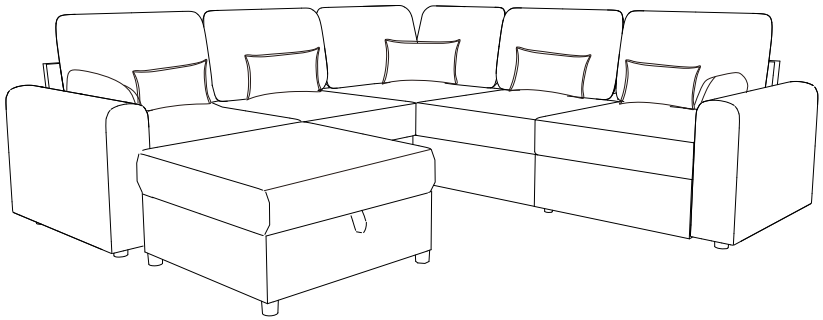


5Seats (B+B+D+F+G)

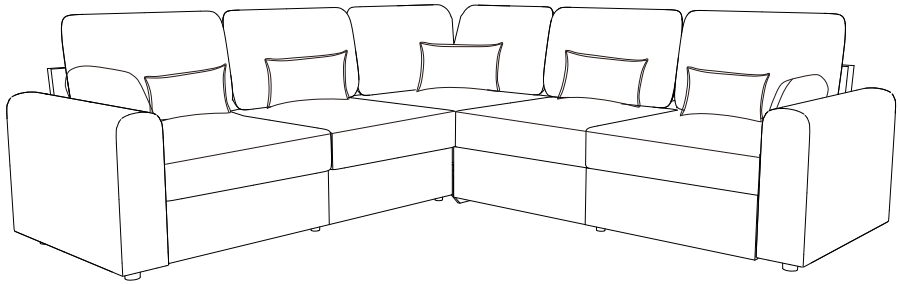


5+2Seats (A+B+C+C+D)

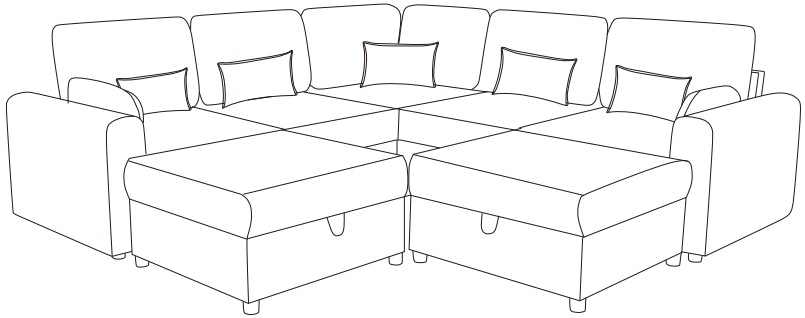

6+1Seats(B+B+C+D+F+G)

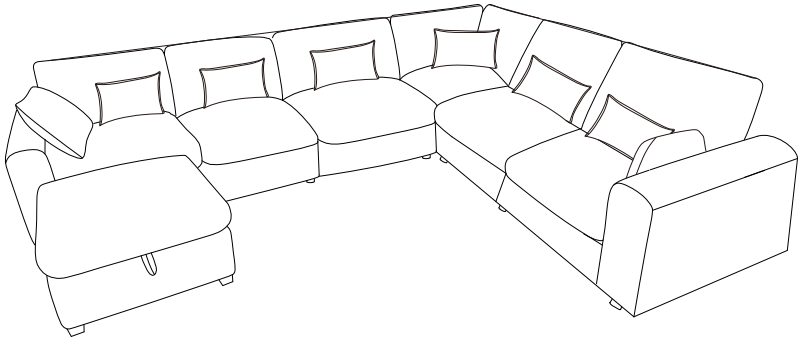

7+2Seats(B+B+C+C+D+F+G)

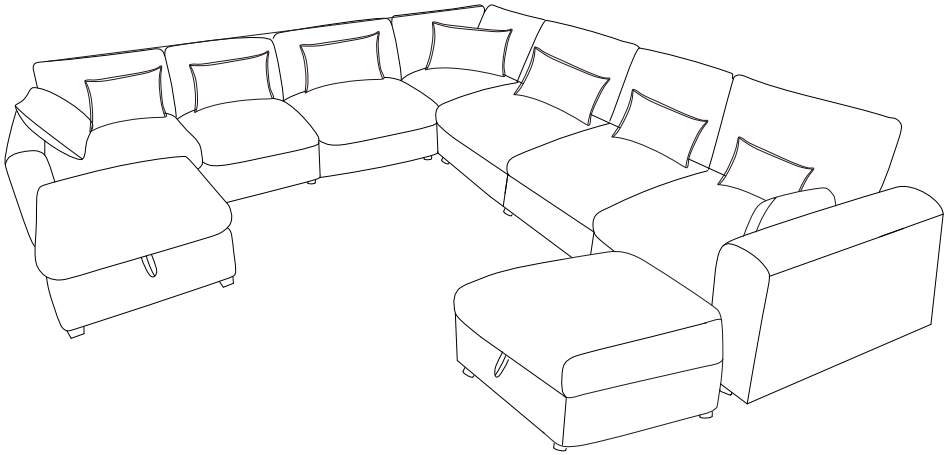

6+2Seats(B+B+C+D+E+F+G)

