YGG0075

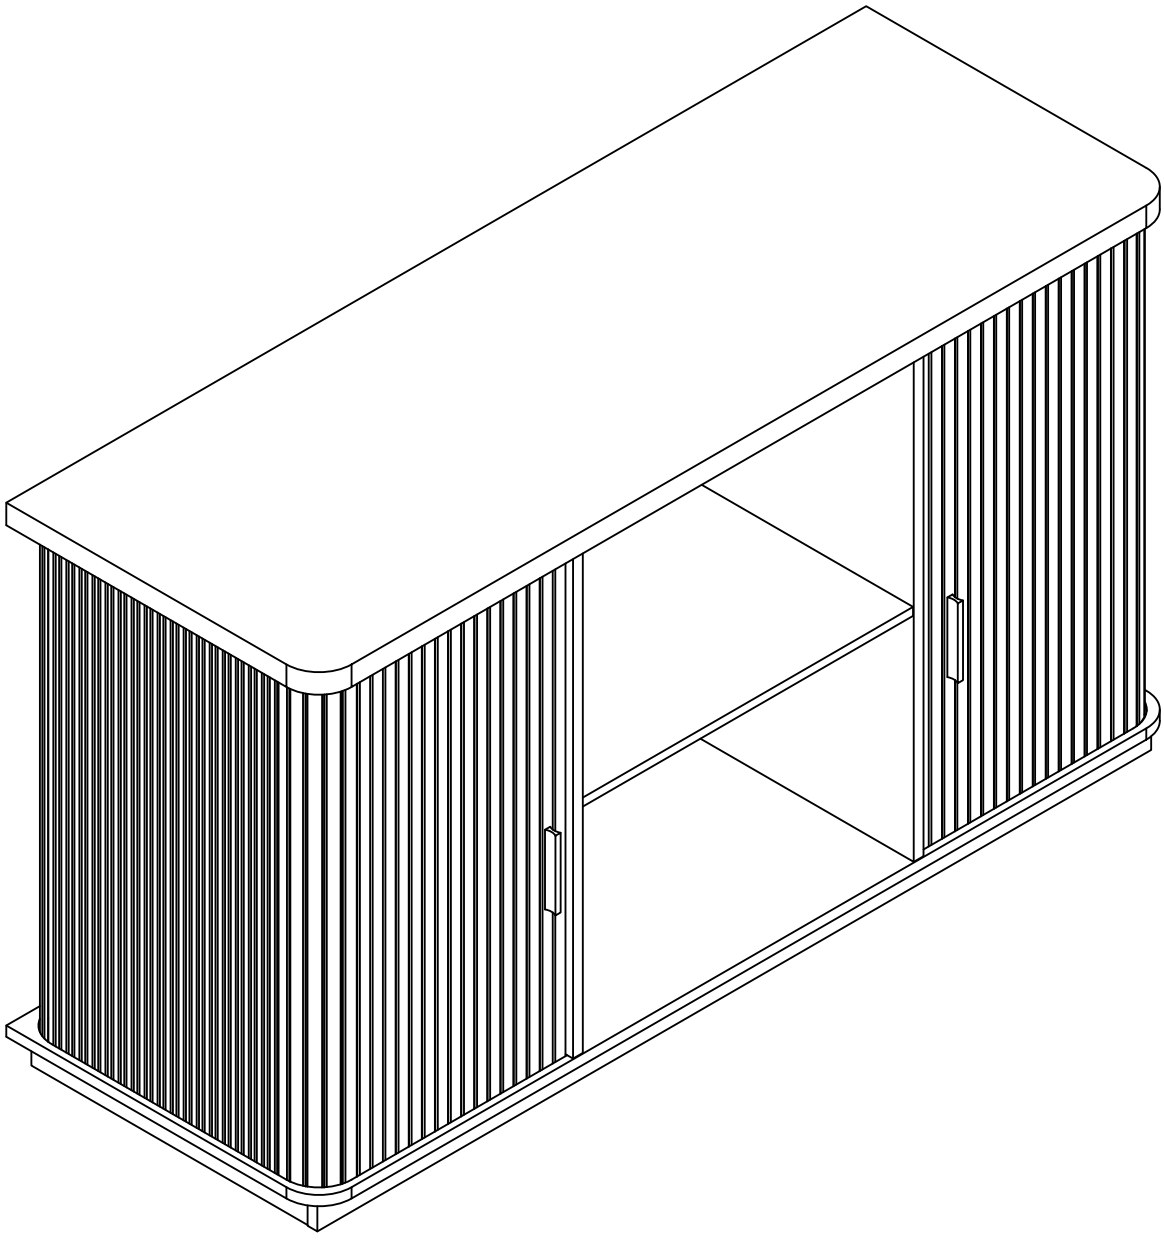

As this item contains many parts, please read the installation instruction carefully before installation and complete the installation with the cooperation of your partner. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

Before You Start

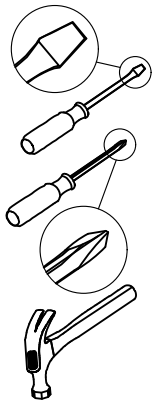

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**



- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an **R** (right) and **L** (left) for proper placement.

- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.



-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.



- Do NOT use harsh chemicals or abrasive cleaners on this item.

- Never push, pull, or drag your furniture.

Board Identification

Not actual size

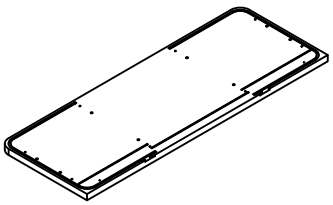

①

Qty:1

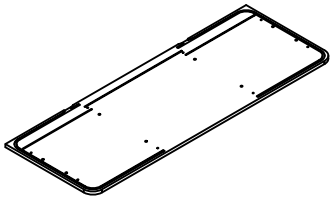

②

Qty:1

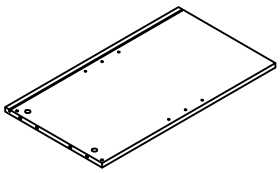

③

Qty:1

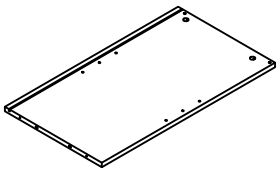

④

Qty:1

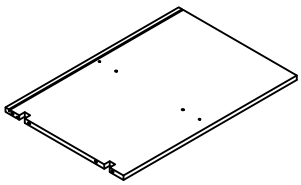

⑤

Qty:1

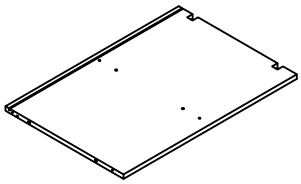

⑥

Qty:1

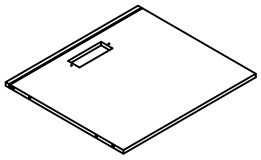

⑦

Qty:1

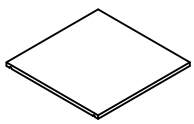

⑧

Qty:2

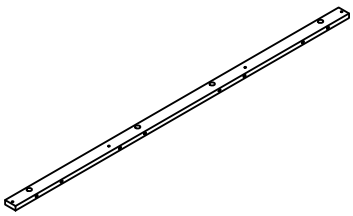

⑨

Qty:1

Board Identification

Not actual size

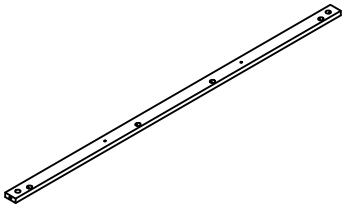

⑩

Qty:1

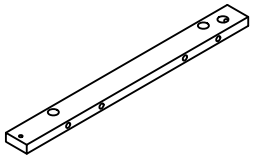

⑪

Qty:1

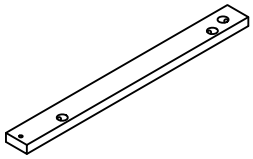

⑫

Qty:1

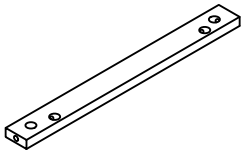

⑬

Qty:1

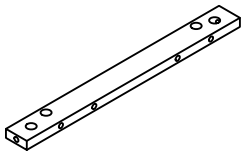

⑭

Qty:1

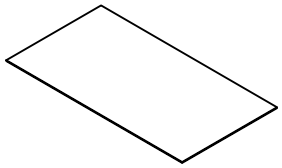

⑮

Qty:2

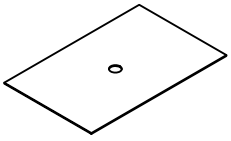

⑯

Qty:2

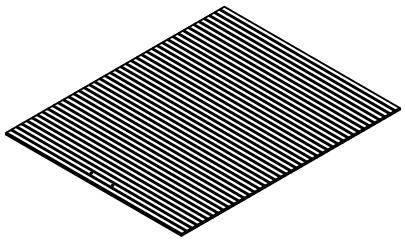

⑰

Qty:2

Part List

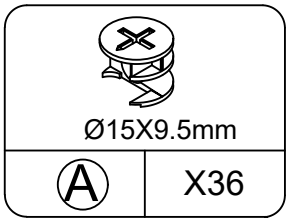

CAM LOCK
spare:3

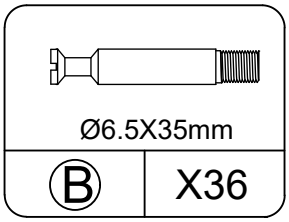

CAM BOLT
spare:3

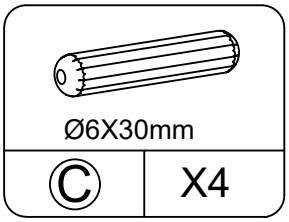

WOOD DOWEL
spare:1

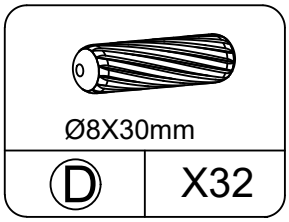

WOOD DOWEL
spare:3

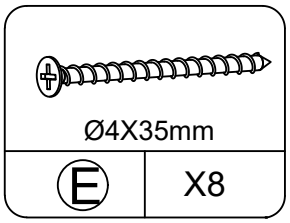

SCREW
spare:1

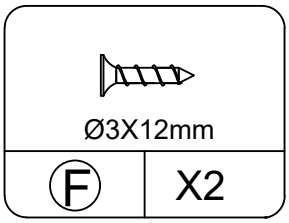

SCREW
spare:1

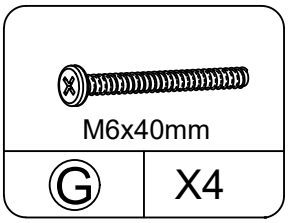

SCREW
spare:1

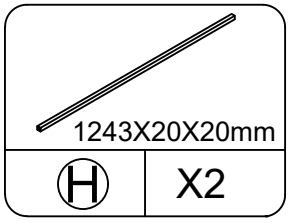

SUPPORT TUBE

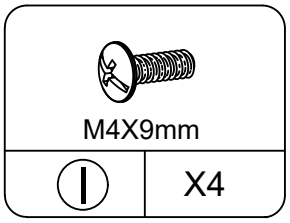

SCREW
spare:1

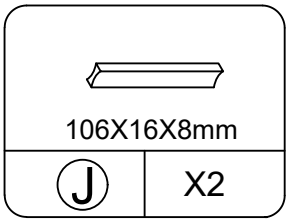

HANDLE

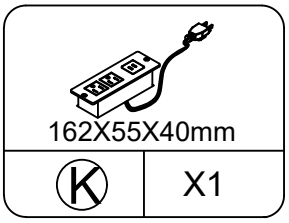

USB

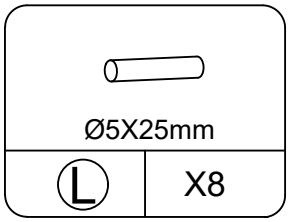

ADJUSTABLE SHELF PIN
spare:1

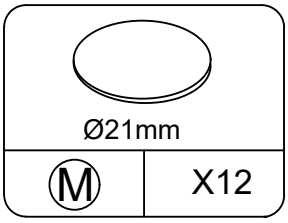

PERFECT STICKER
spare:3

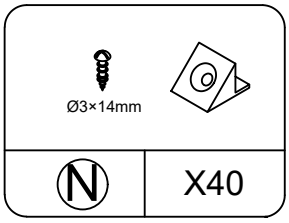

FASTENER
spare:3

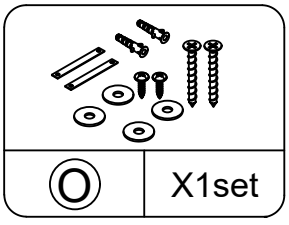

SCREW ANCHOR SET

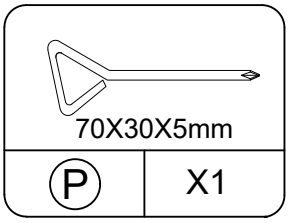

Wrench

Part List

Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

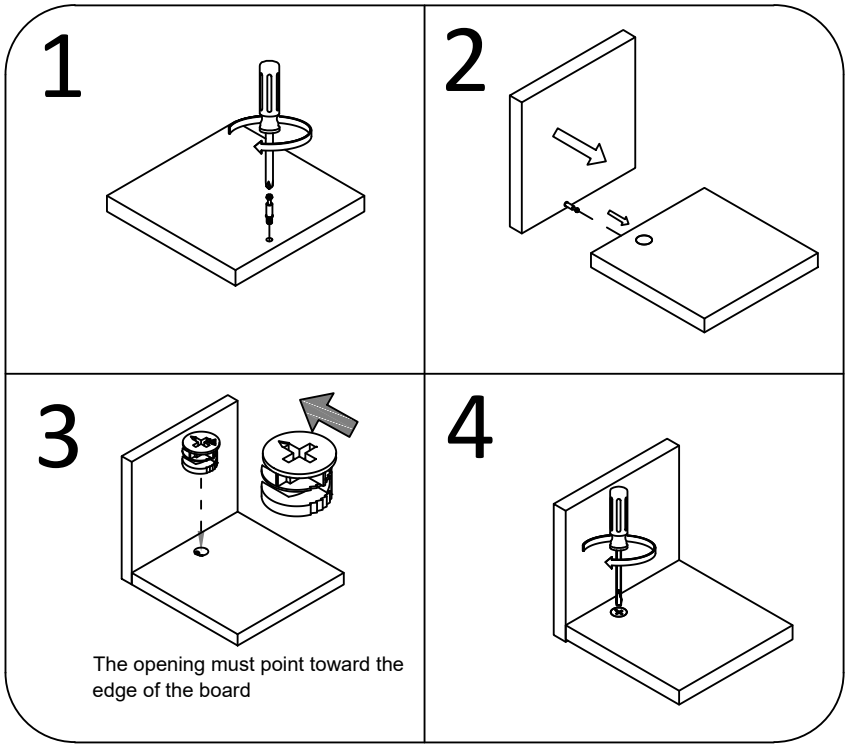

Board Identification

Not actual size

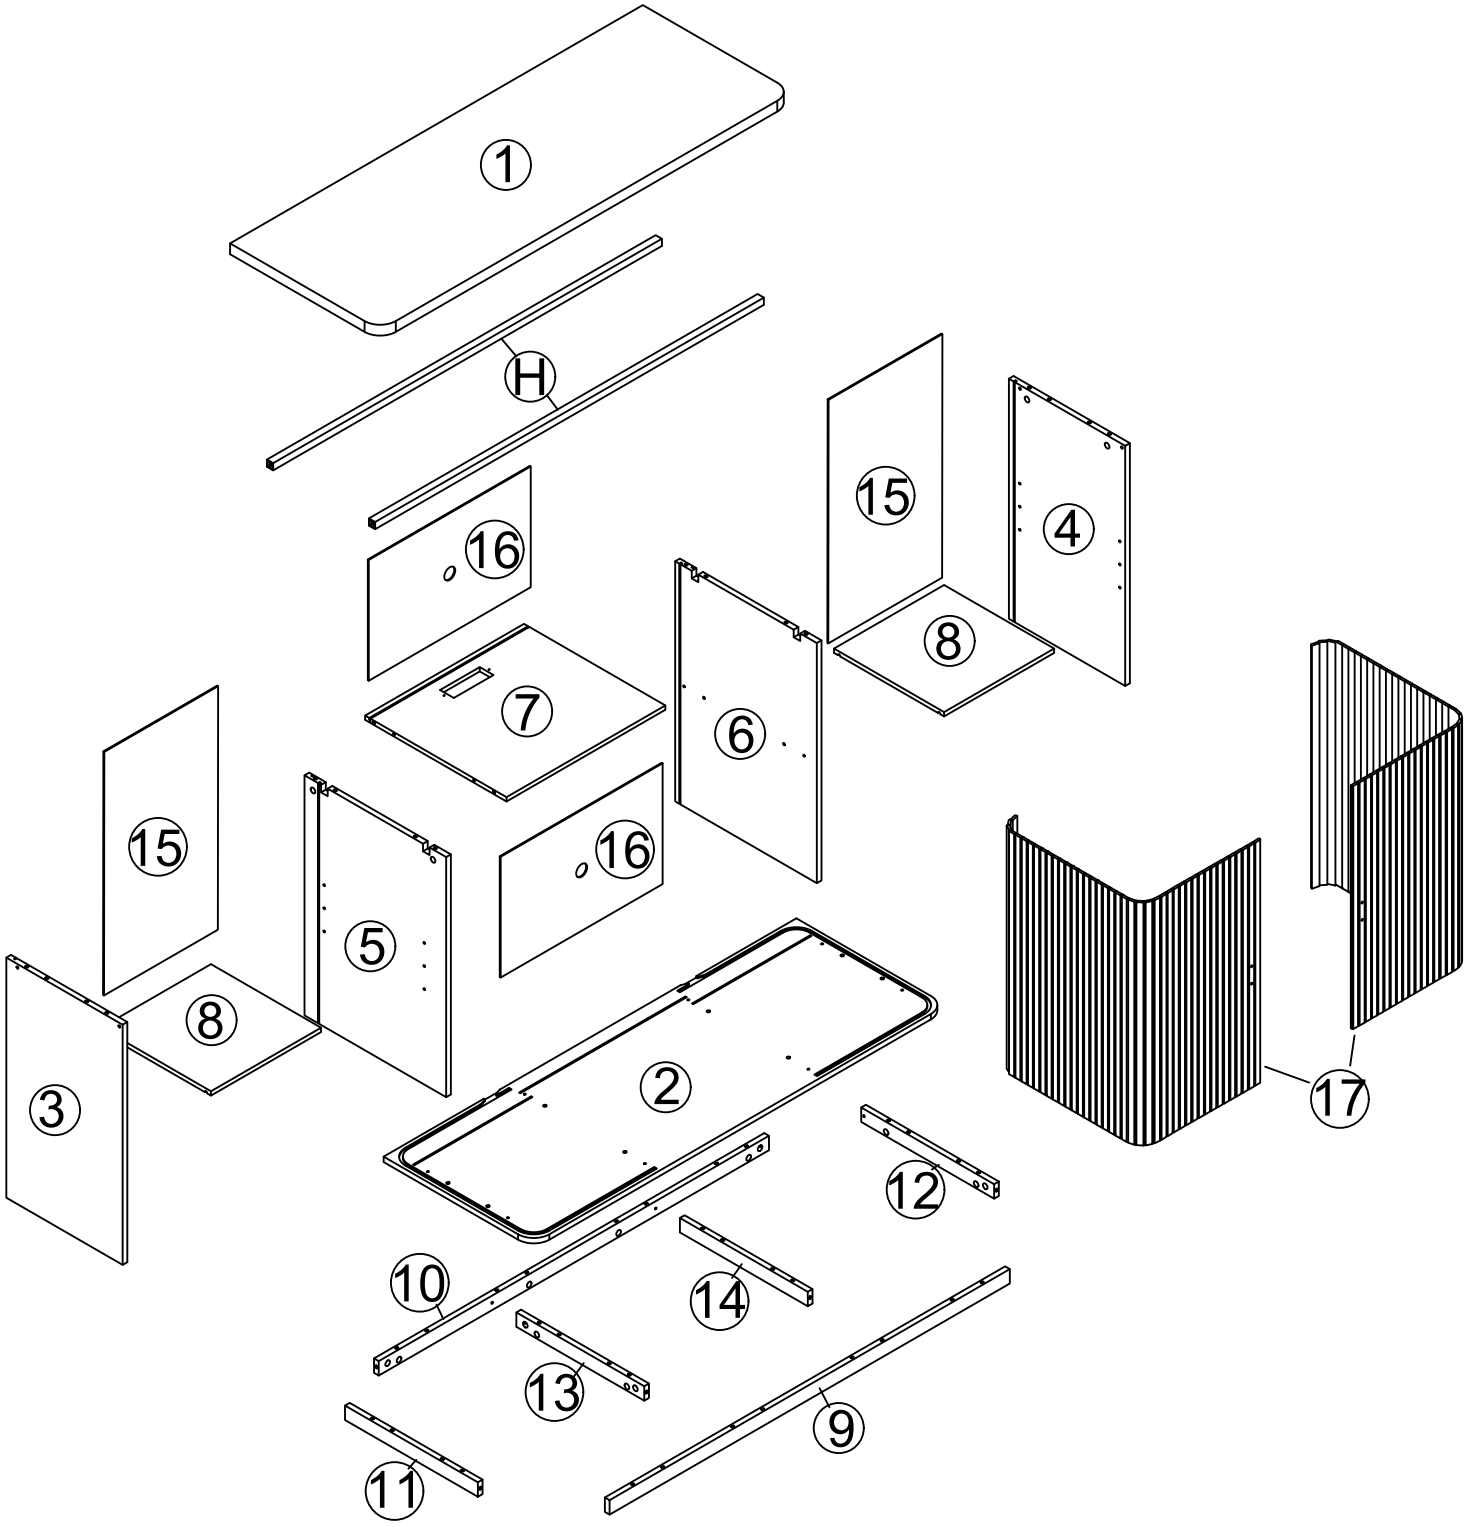

STEP1

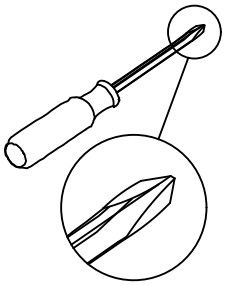

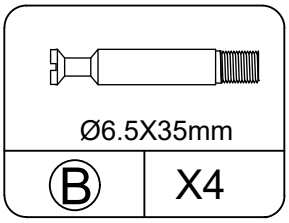

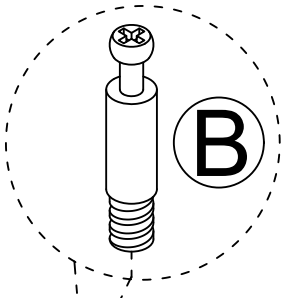

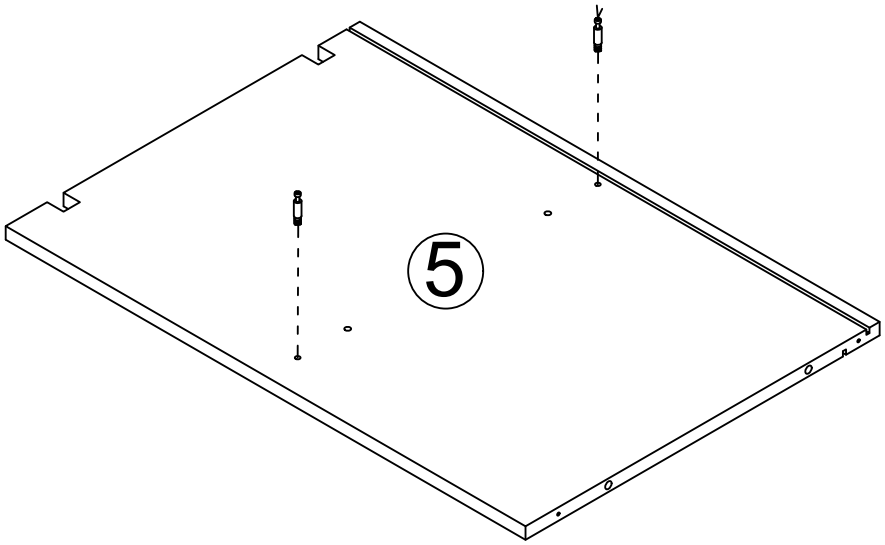

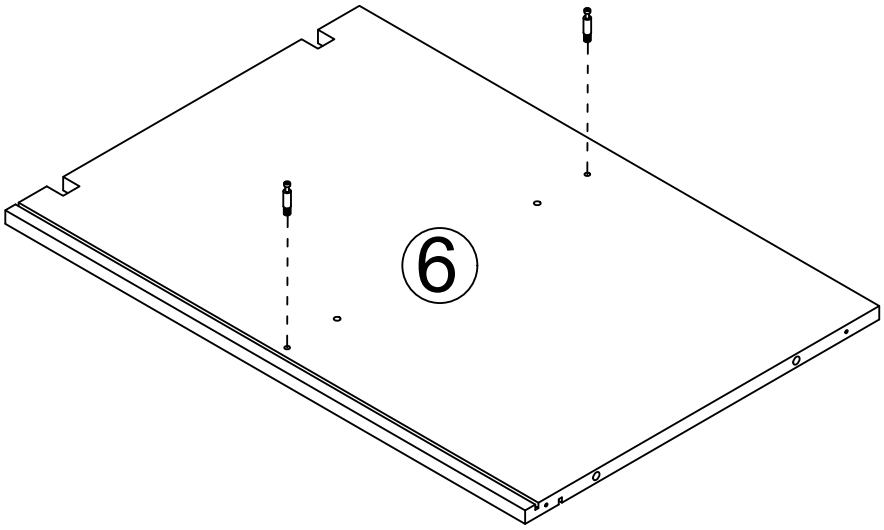

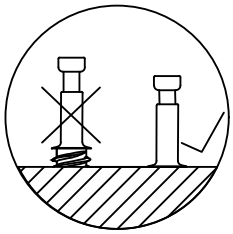

STEP2

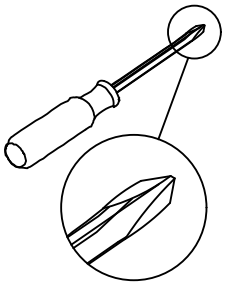

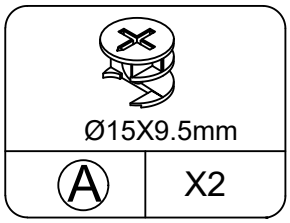

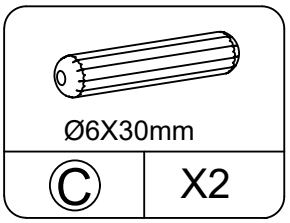

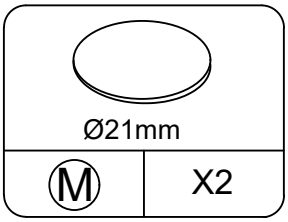

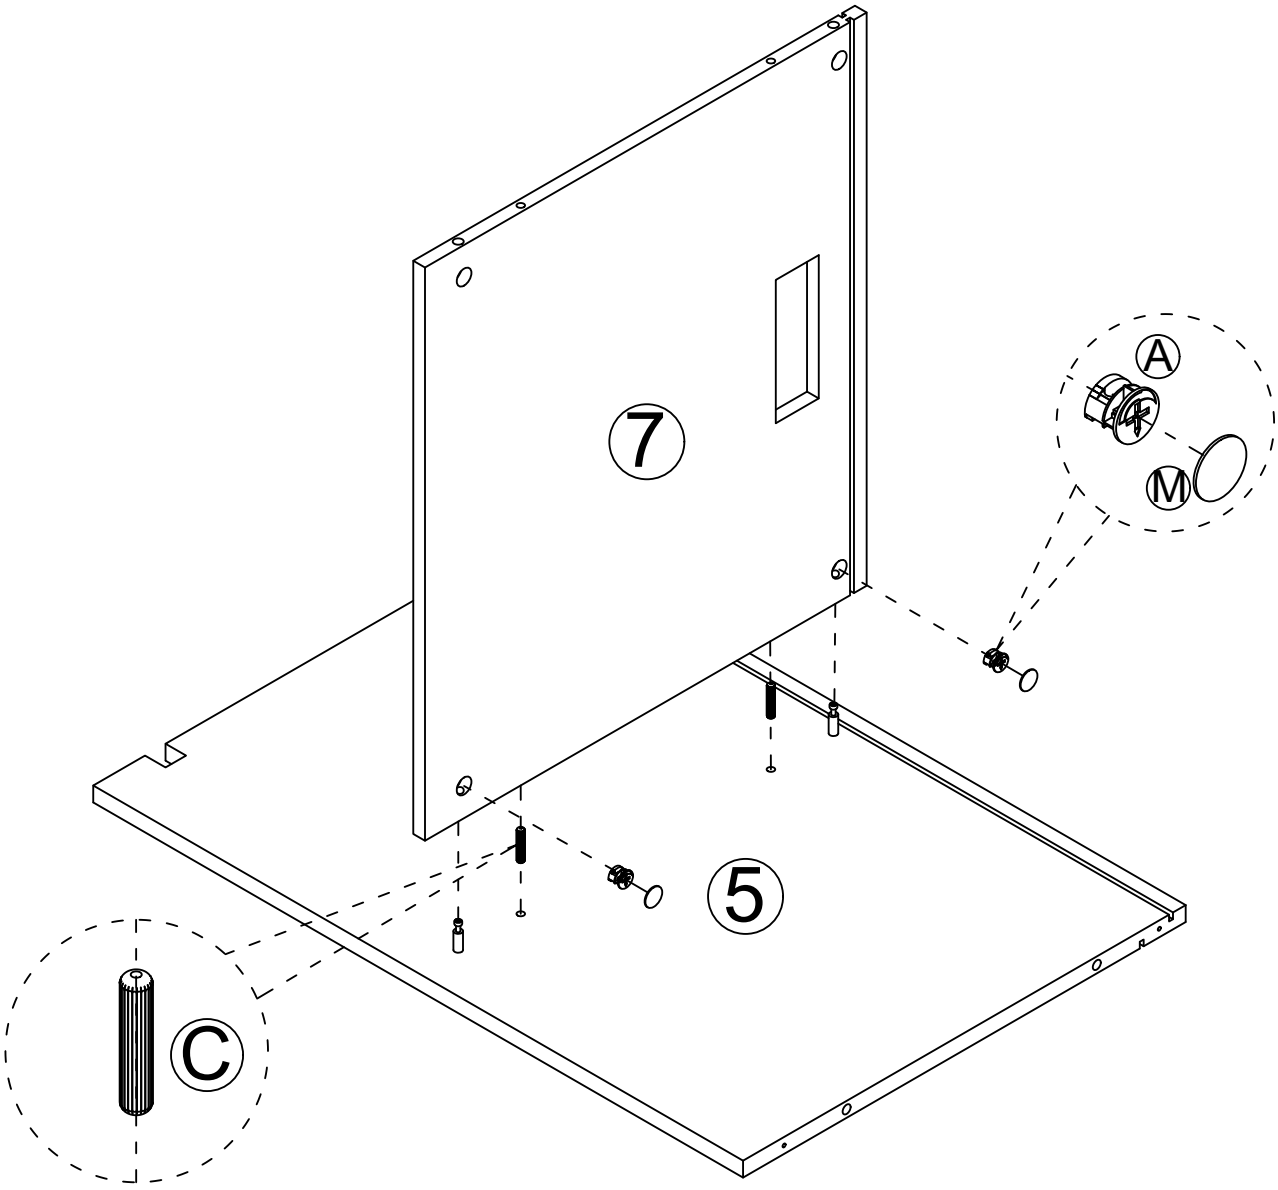

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

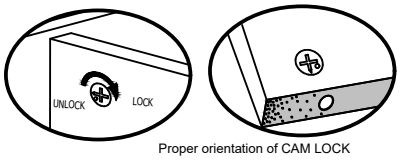

Proper orientation of CAM LOCK

STEP3

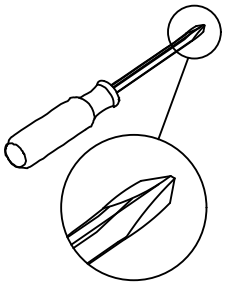

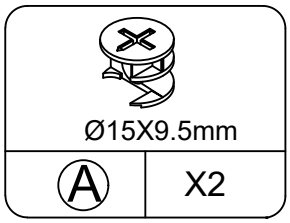

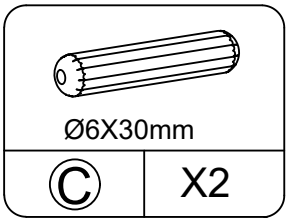

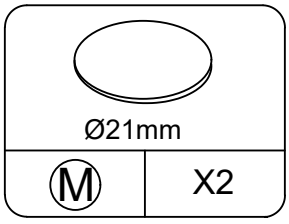

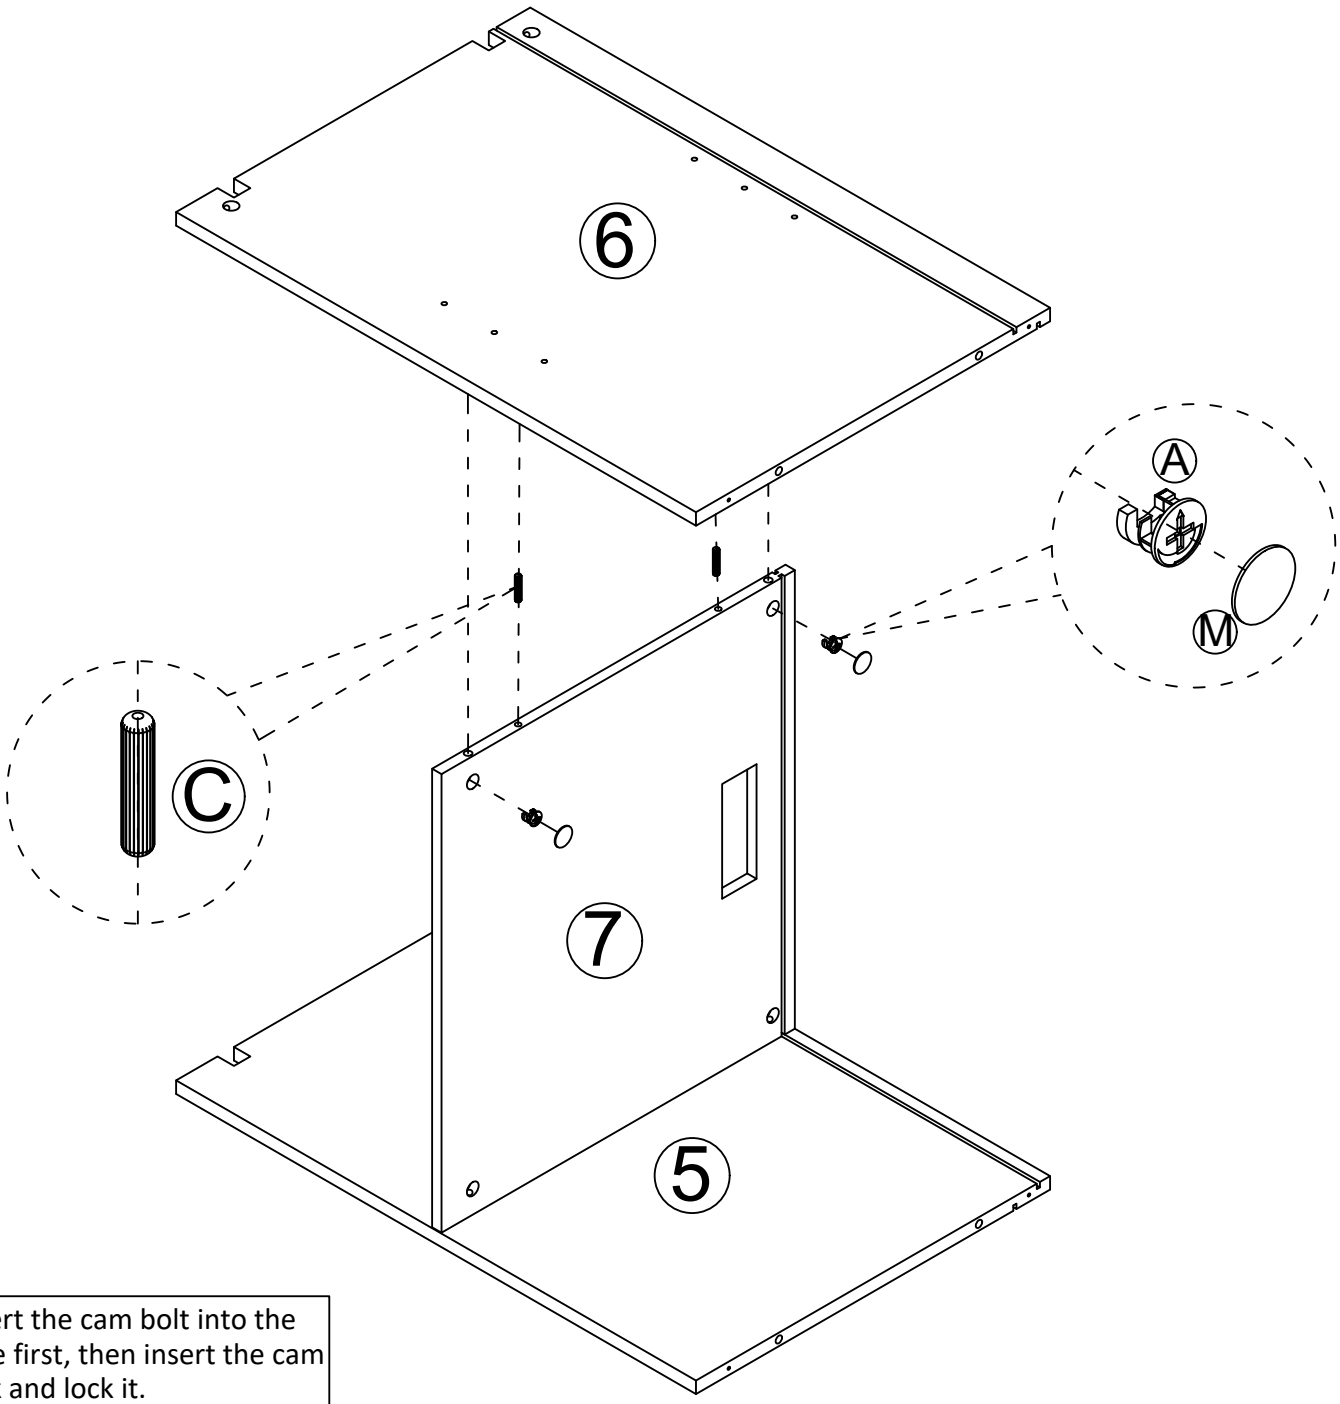

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

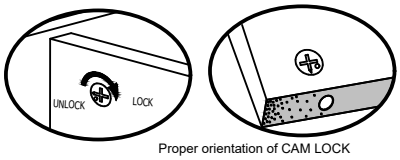

Proper orientation of CAM LOCK

STEP4

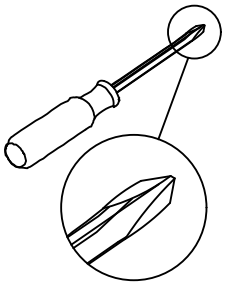

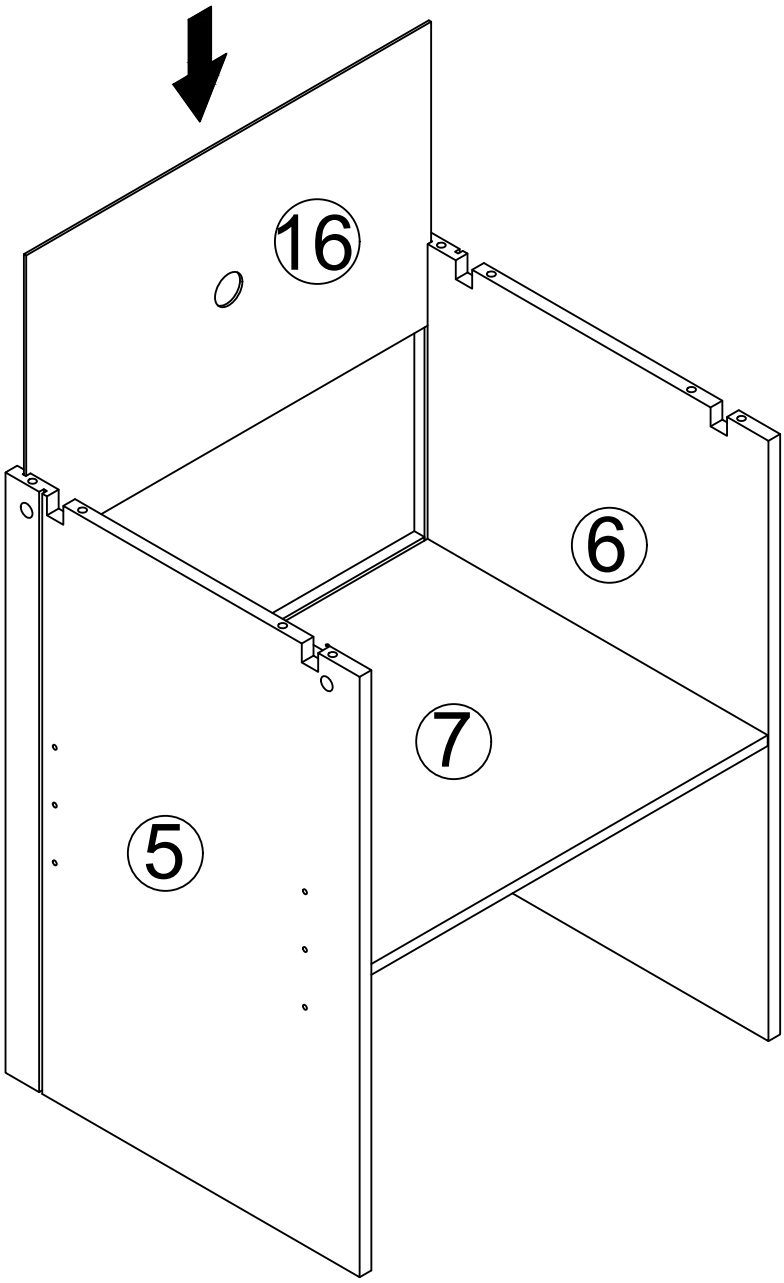

STEP5

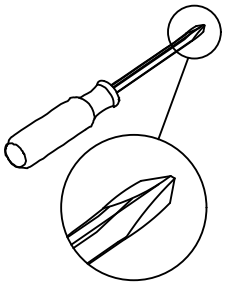

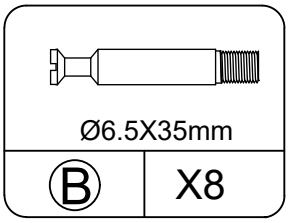

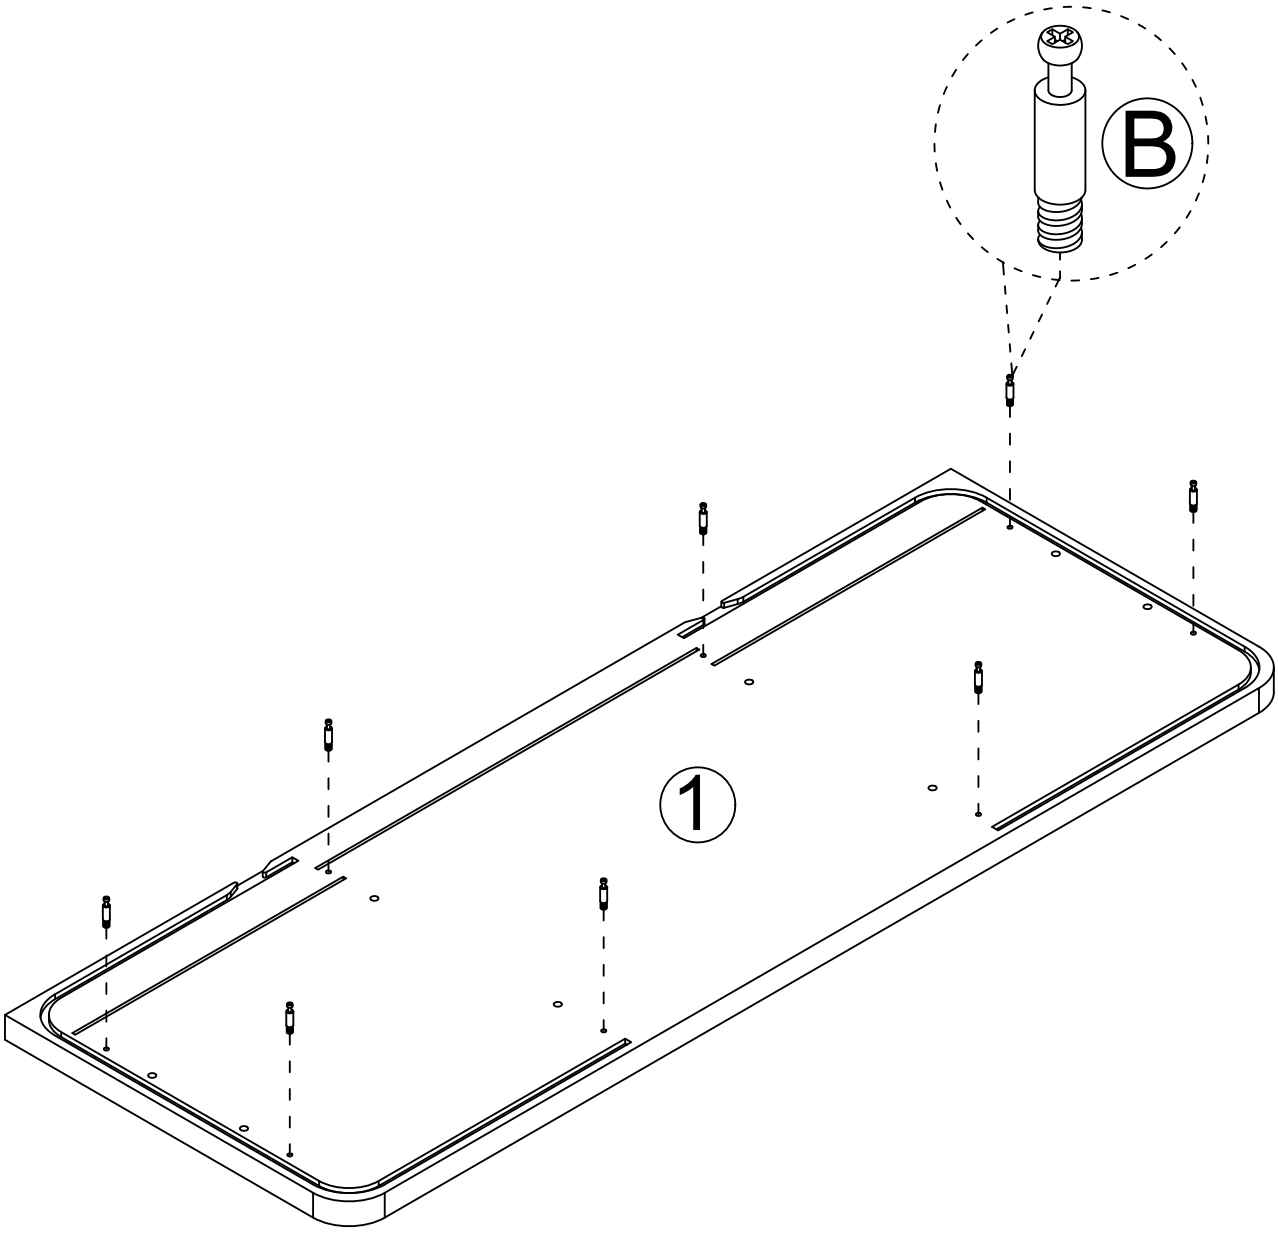

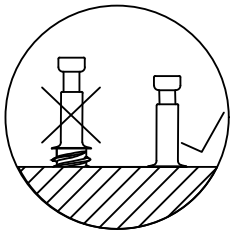

STEP6

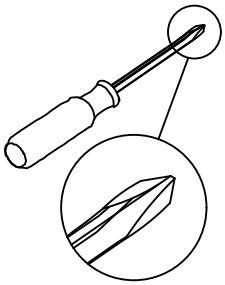



Ø15X9.5mm

Ⓐ X4



Ø8X30mm

Ⓓ X4



Ø21mm

Ⓜ X4

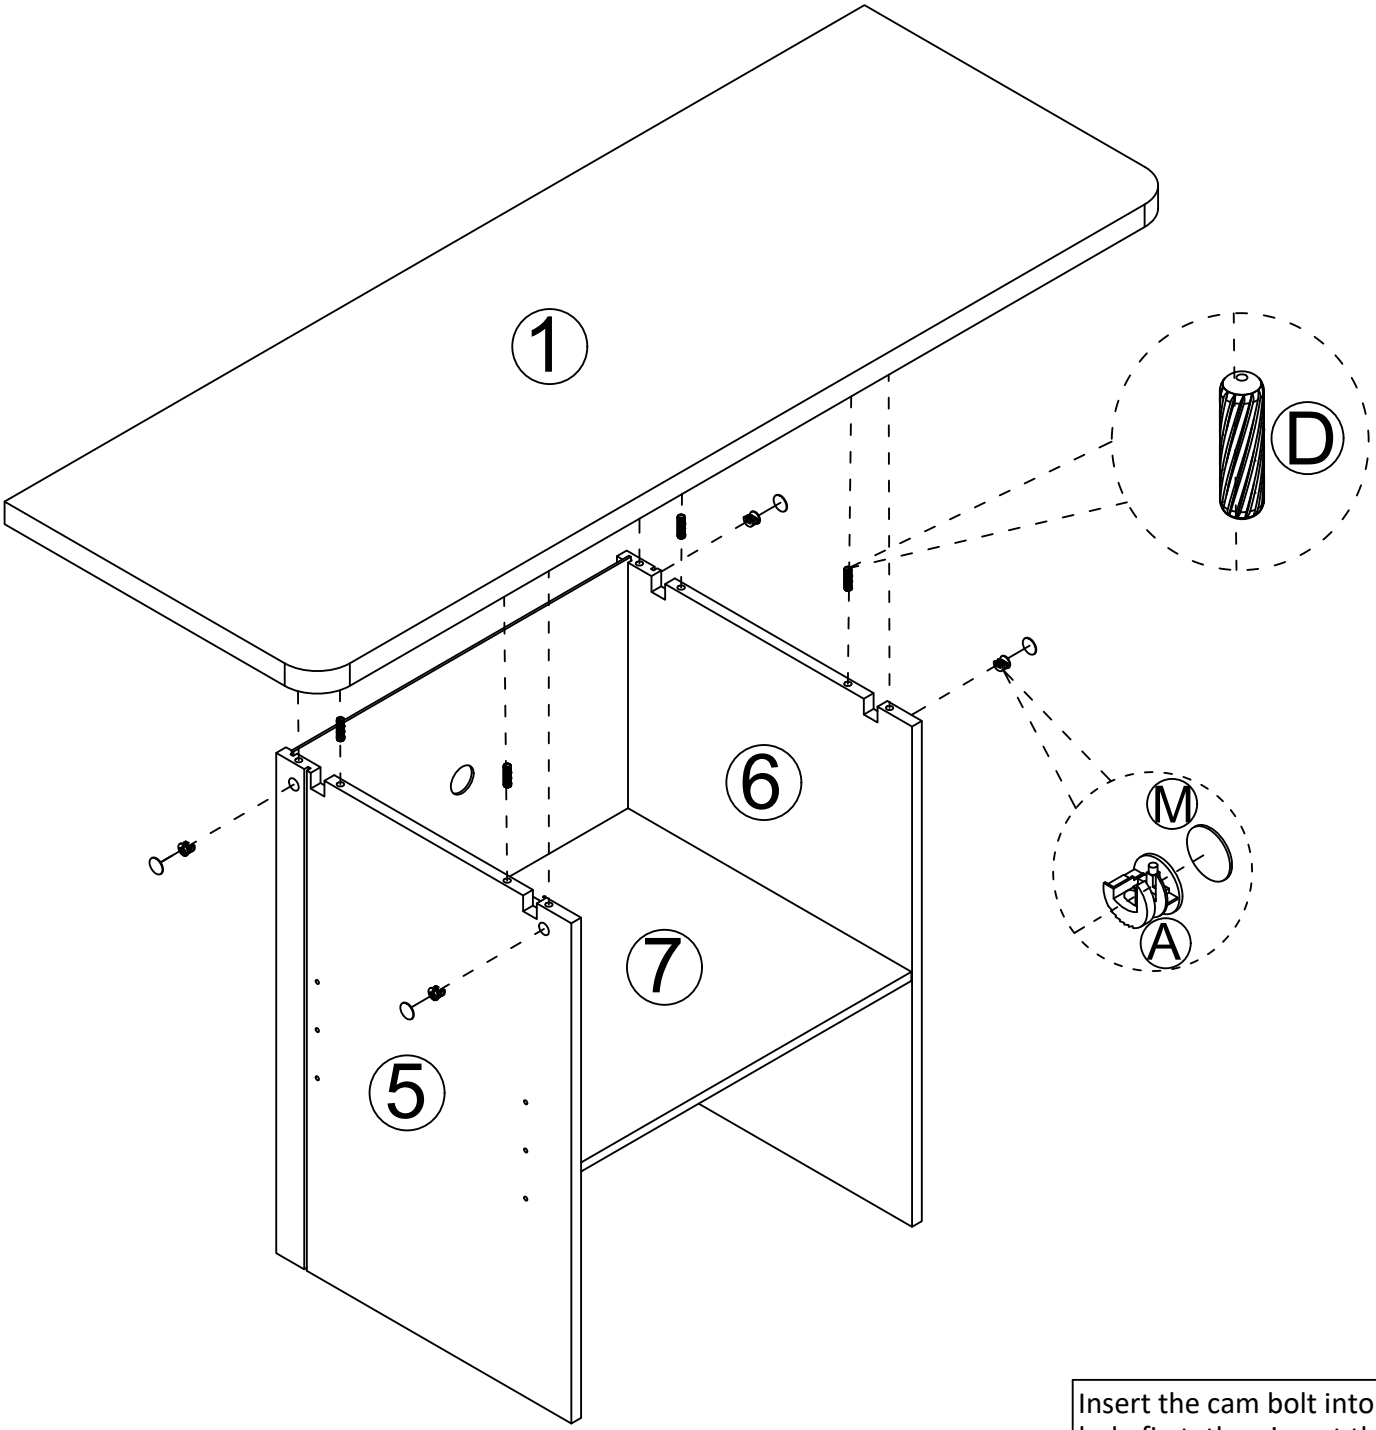

After this installation step is completed, flip it over.

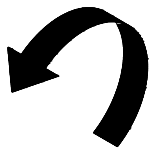

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

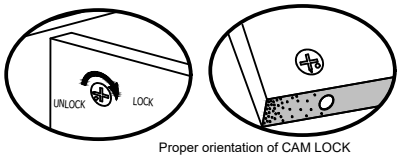

Proper orientation of CAM LOCK

STEP7

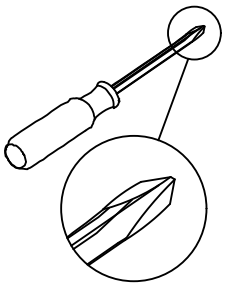

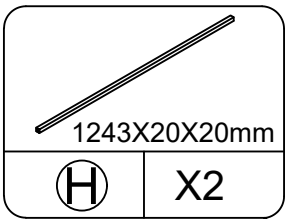

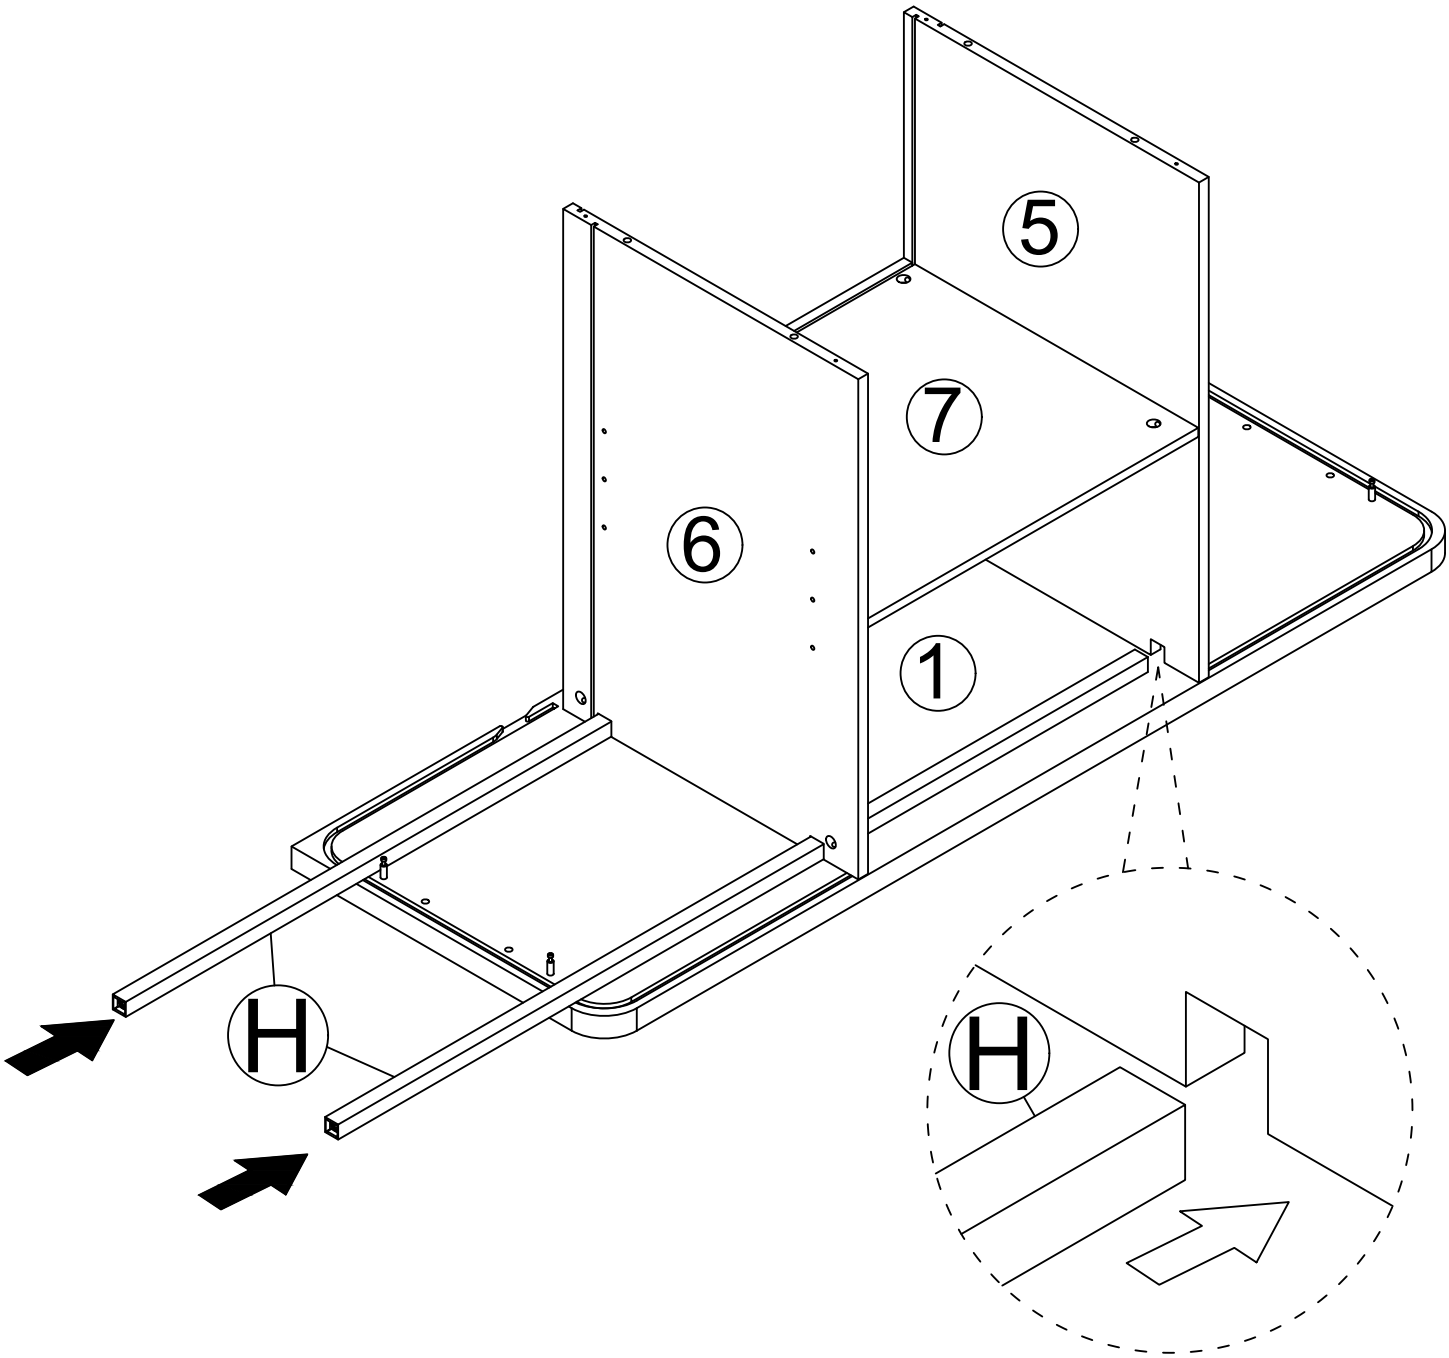

Pass part H through the notches in panels 5 and 6.

STEP8

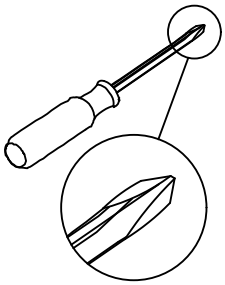

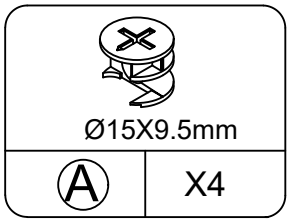

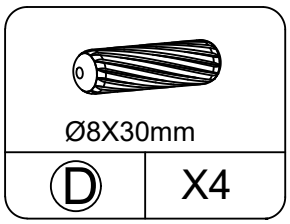

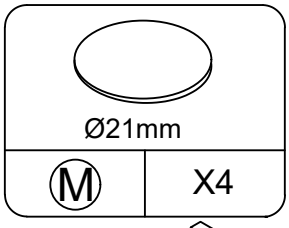

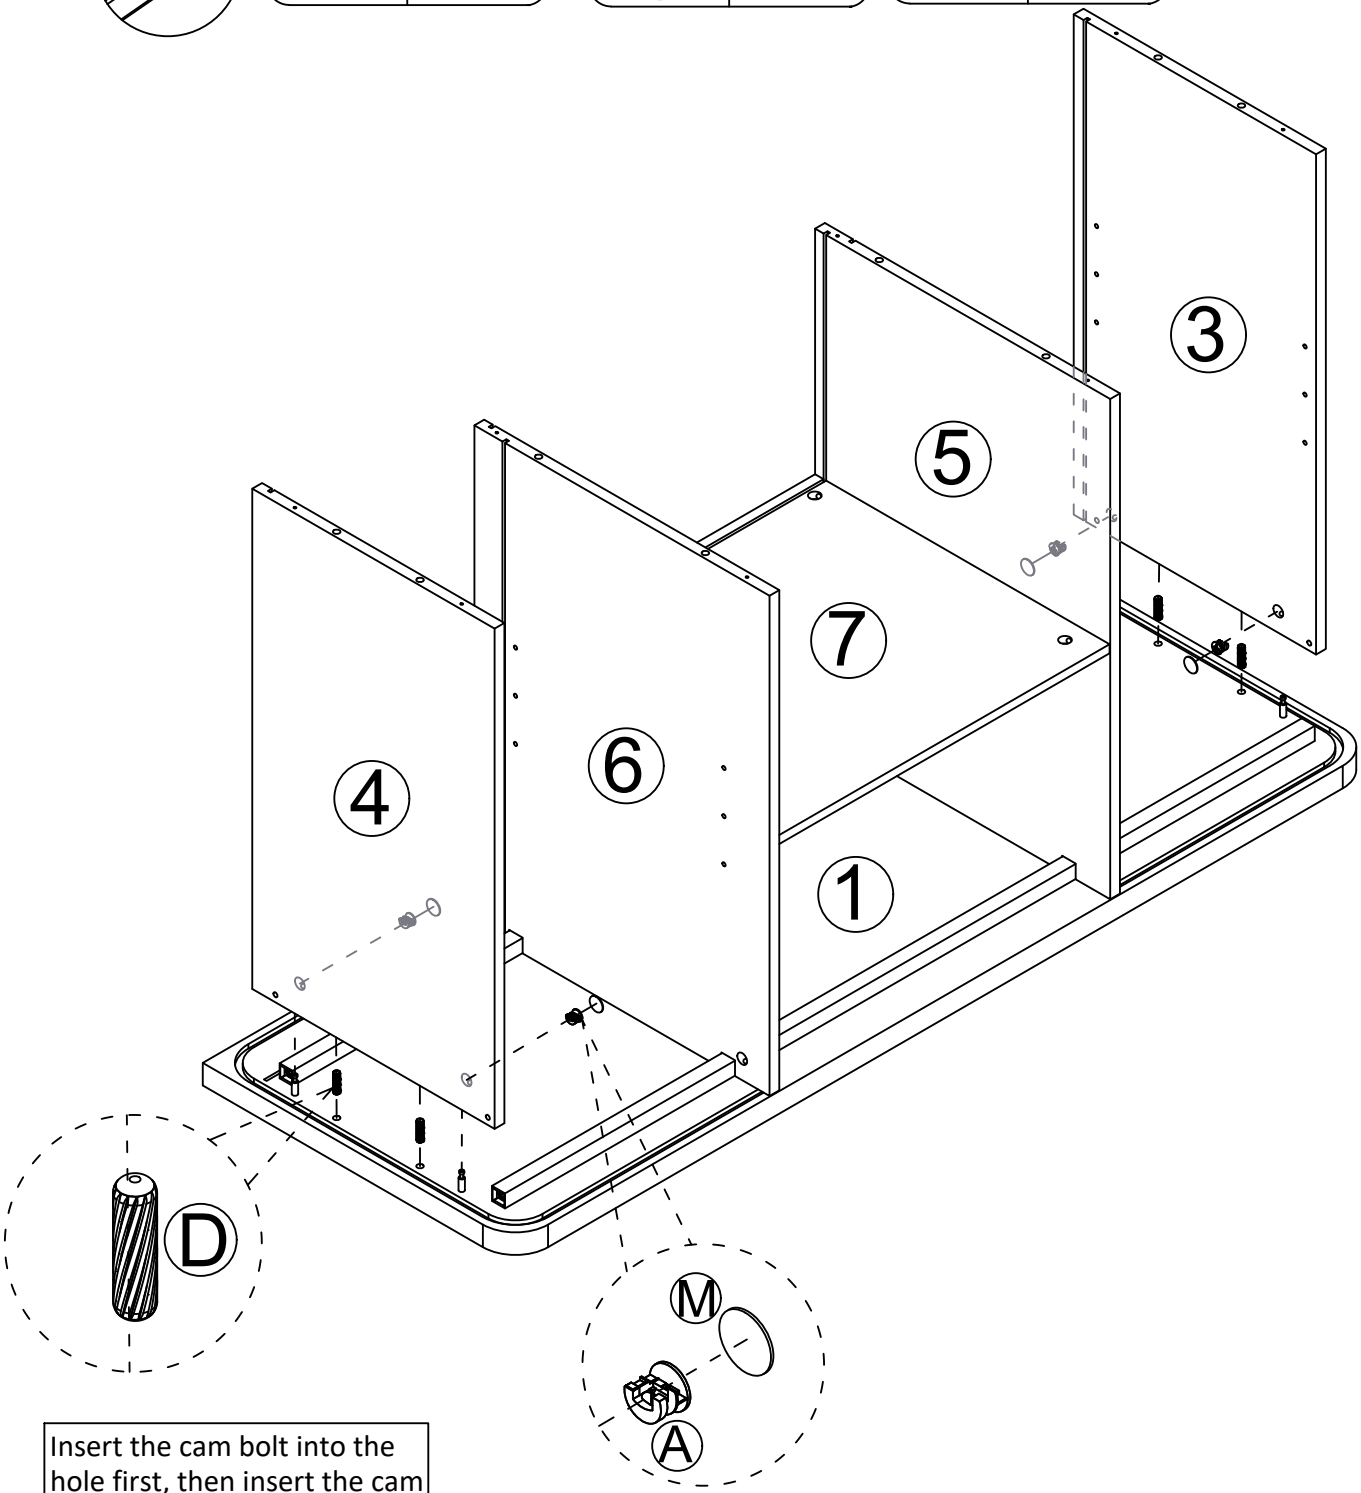

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

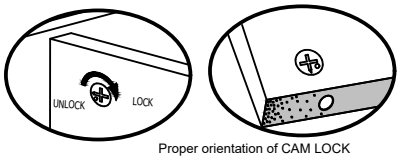

Proper orientation of CAM LOCK

STEP9

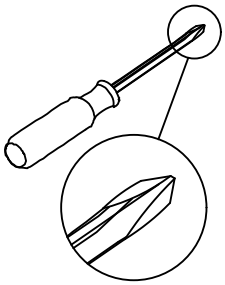

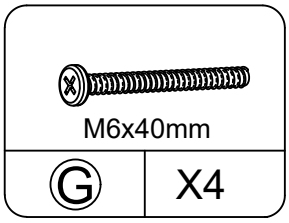

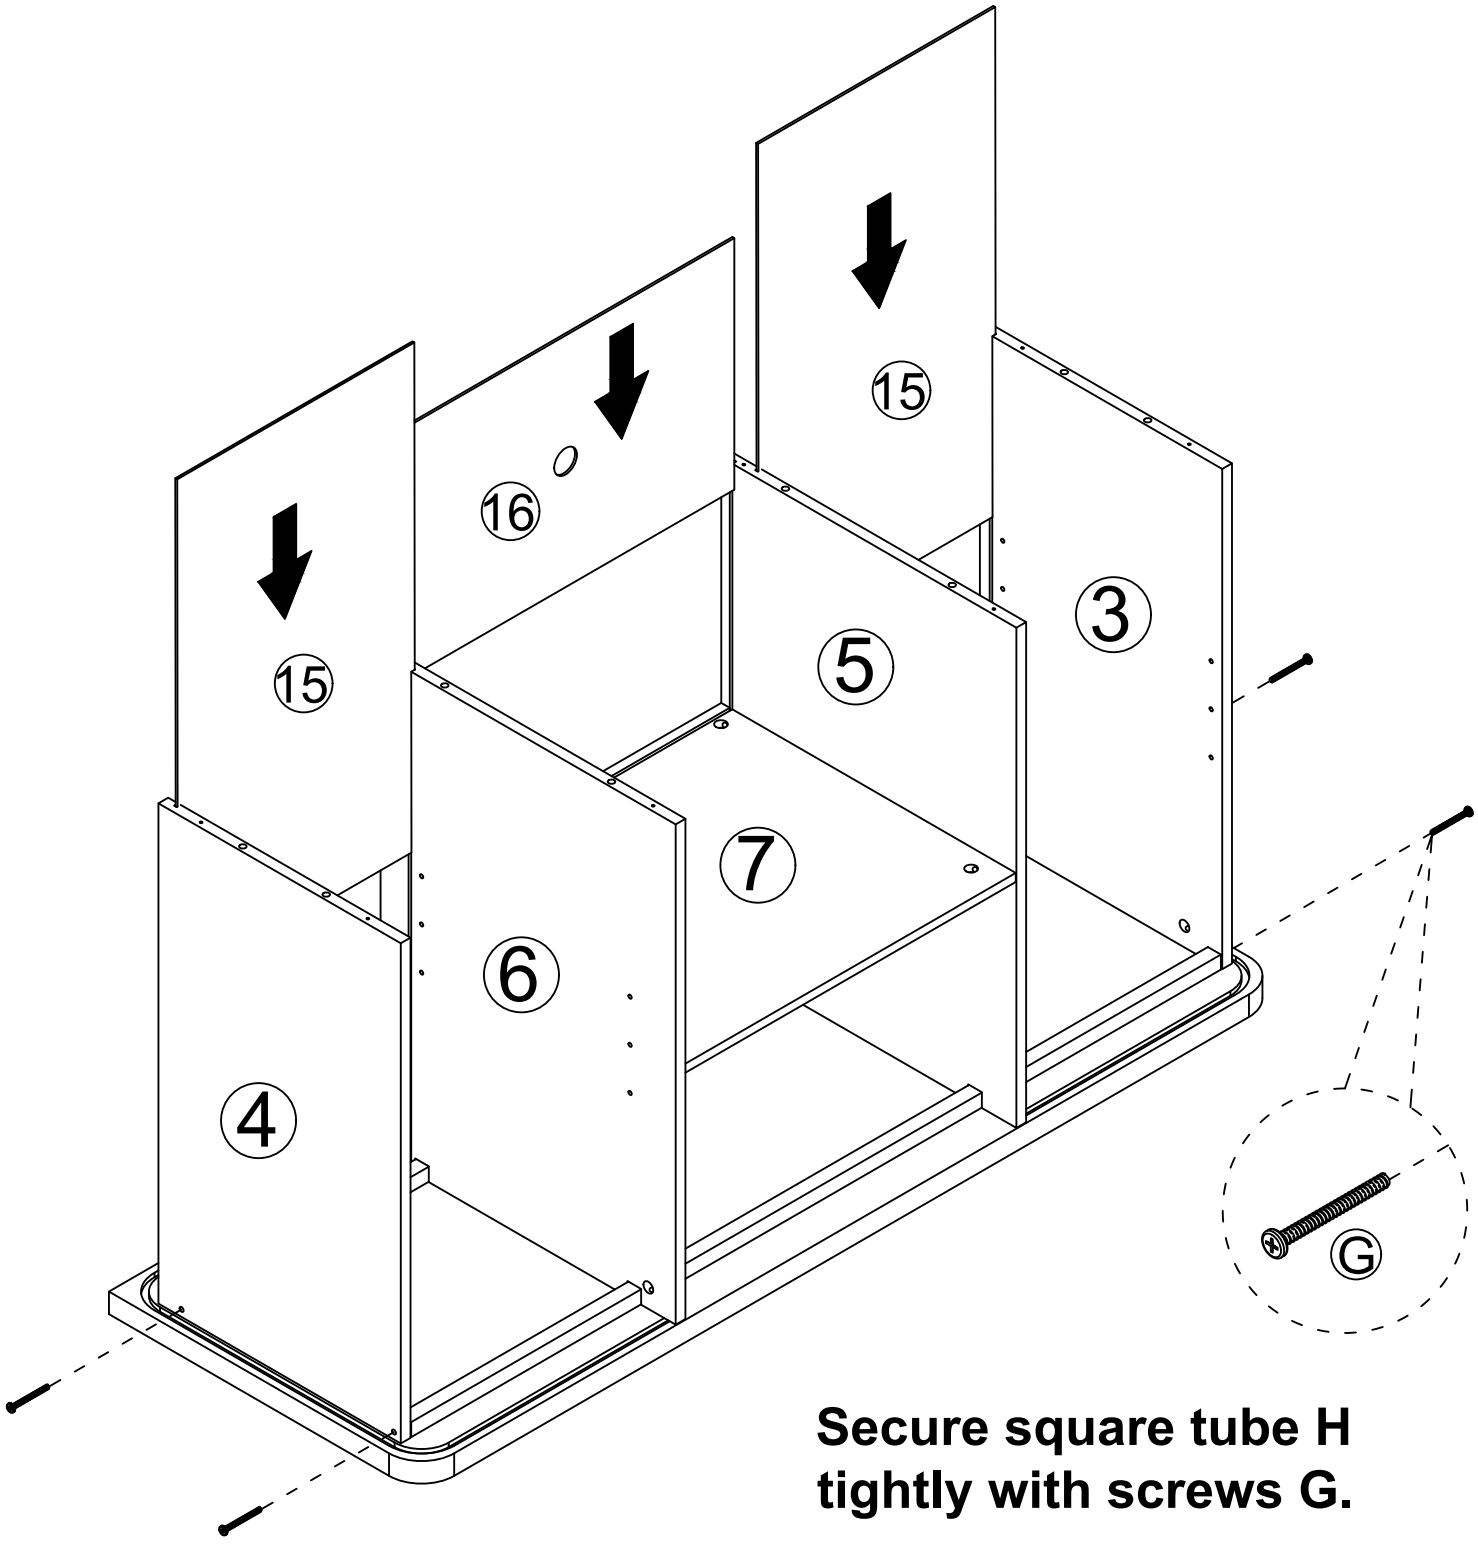

Secure square tube H tightly with screws G.

STEP10

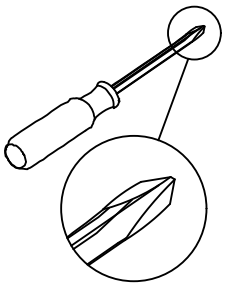

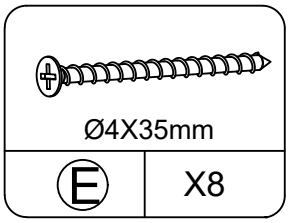

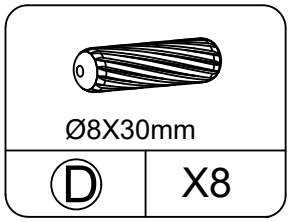

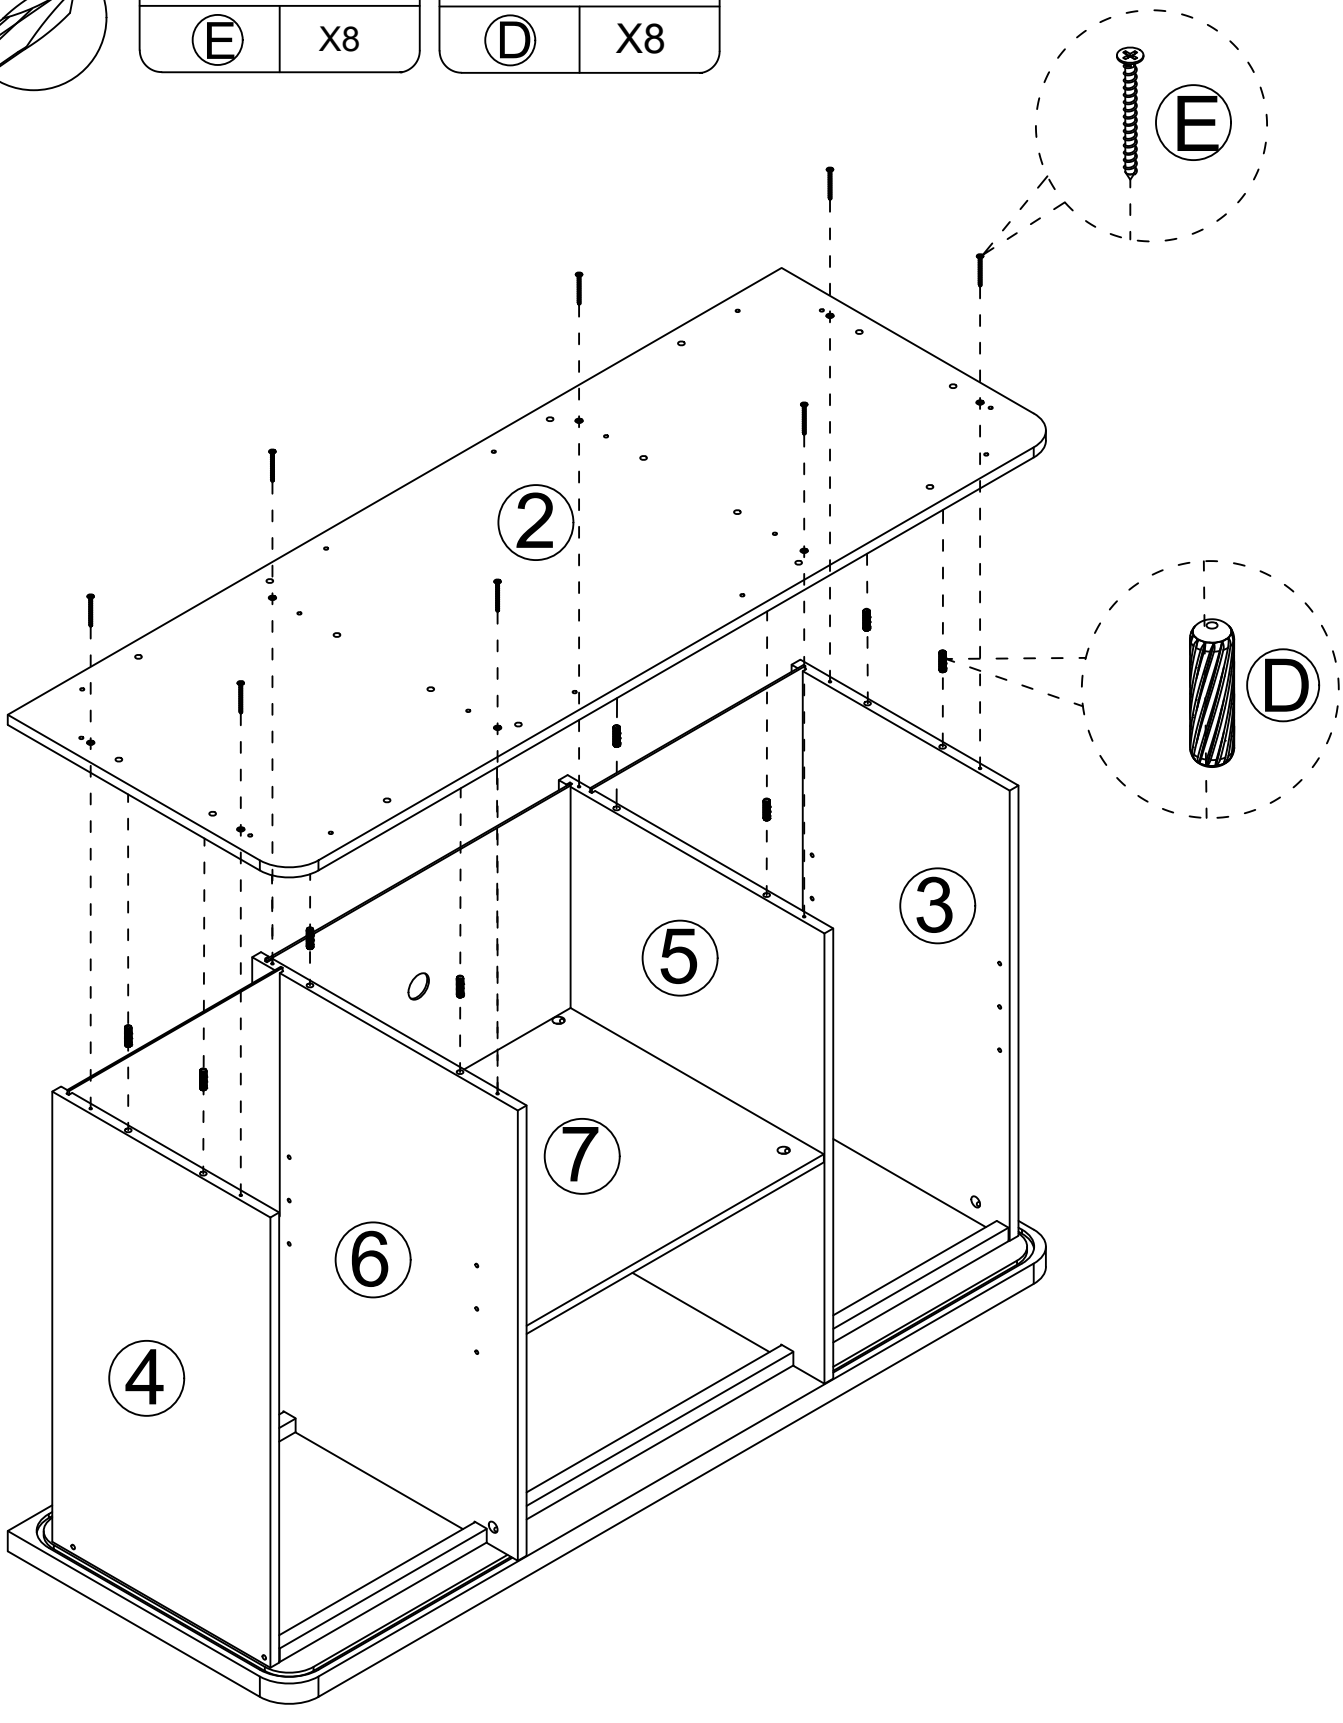

STEP11

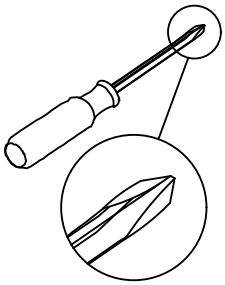

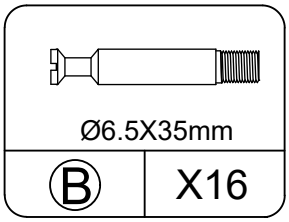

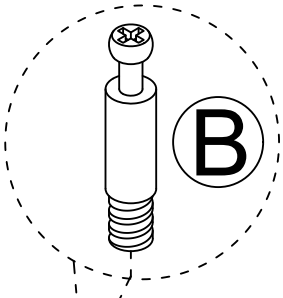

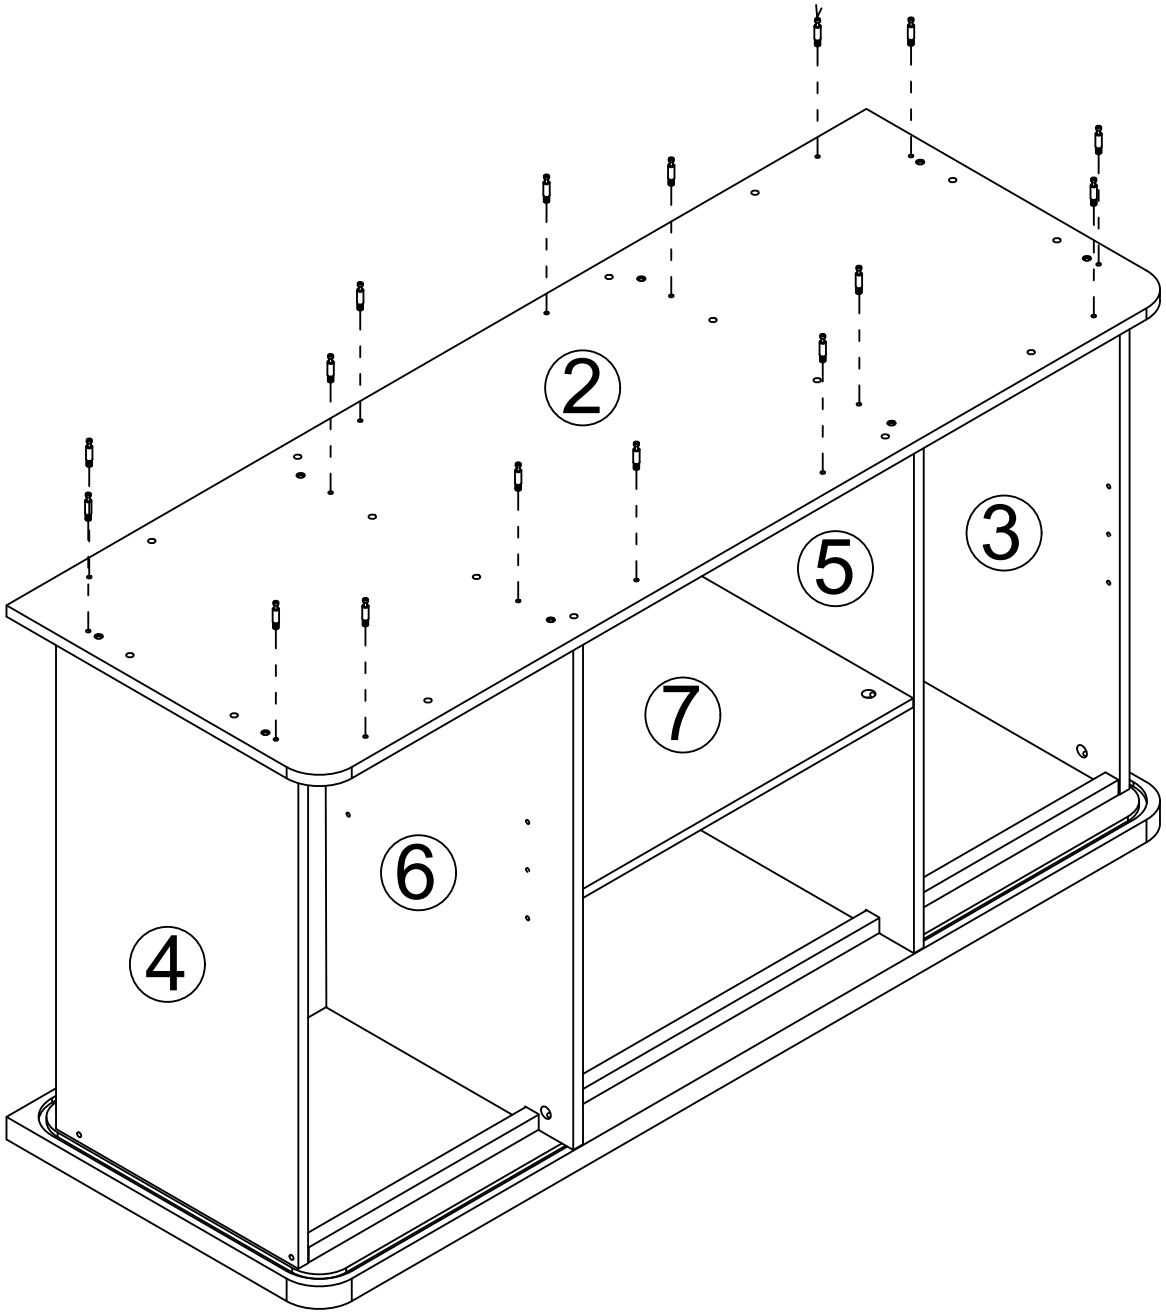

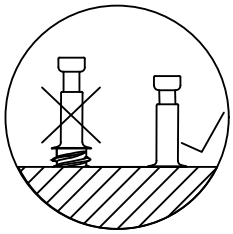

STEP12

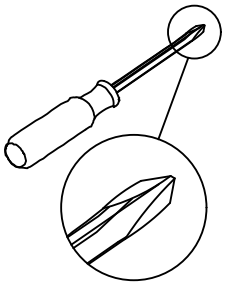

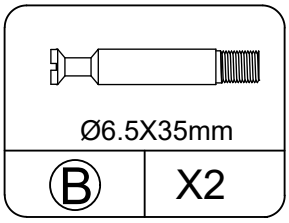

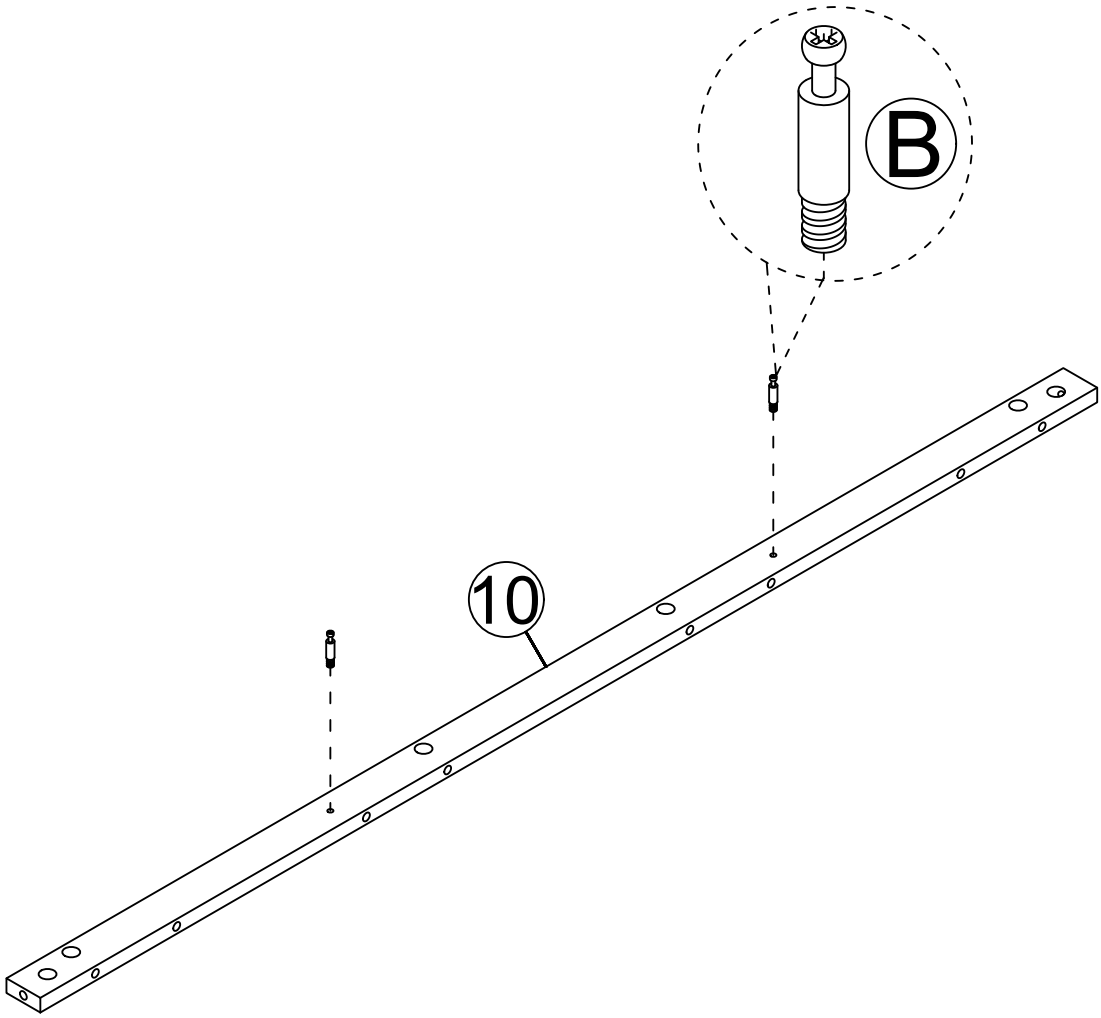

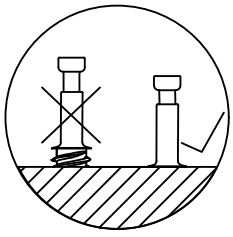

STEP13

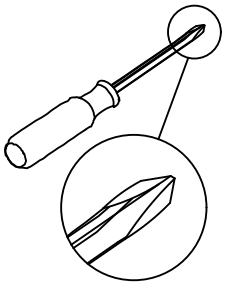

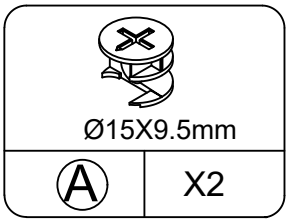

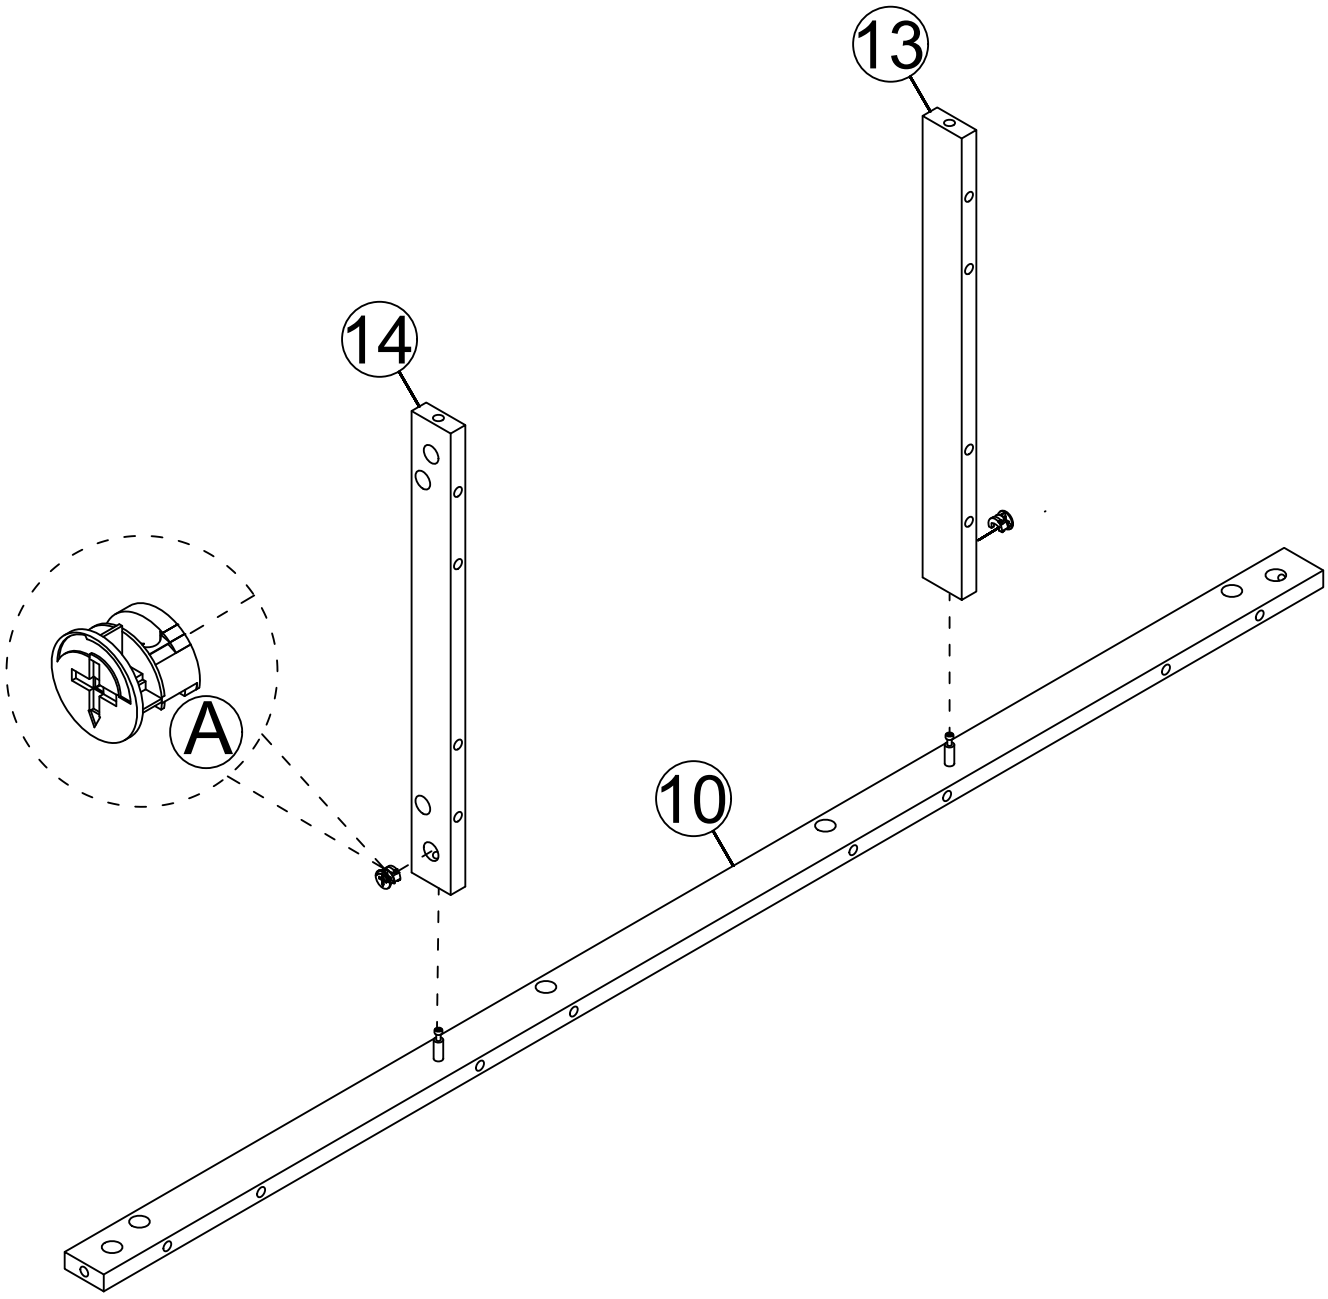

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

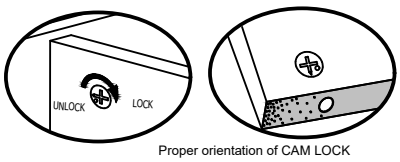

Proper orientation of CAM LOCK

STEP14

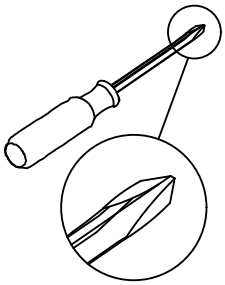

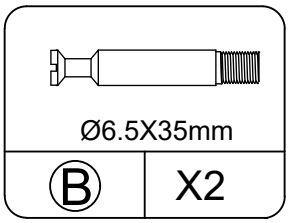

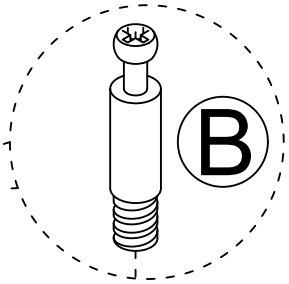

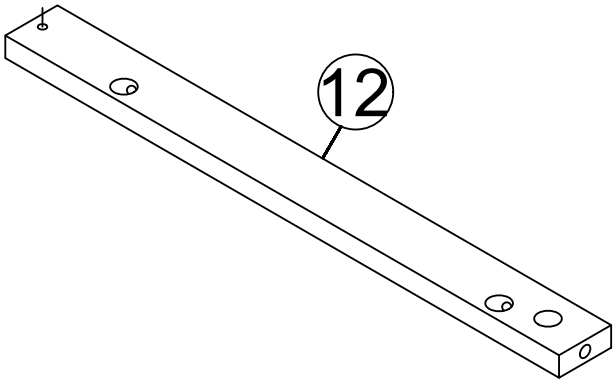

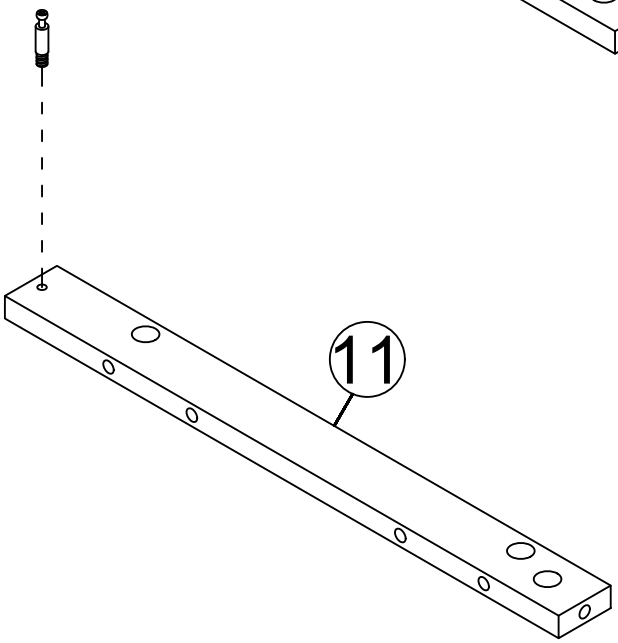

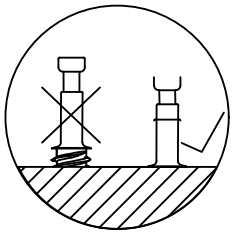

STEP15

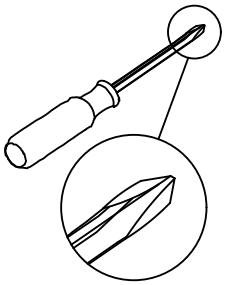

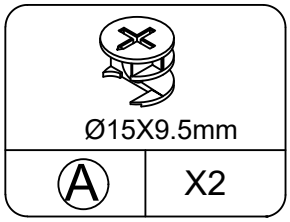

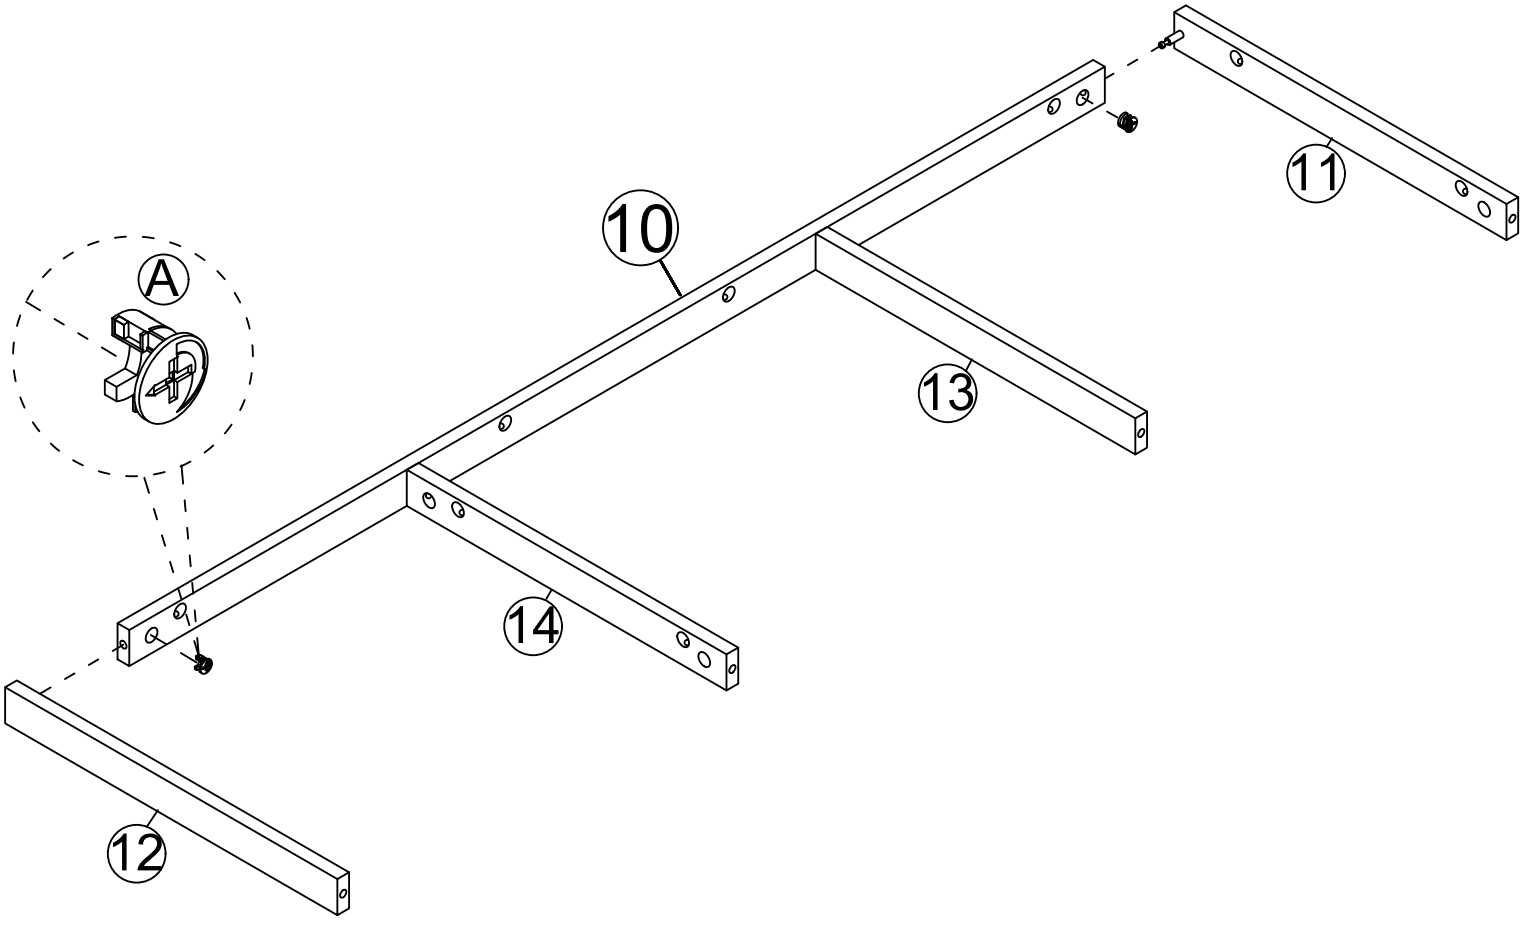

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

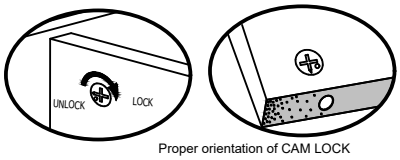

Proper orientation of CAM LOCK

STEP16

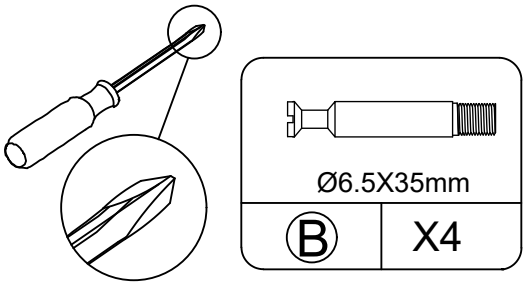

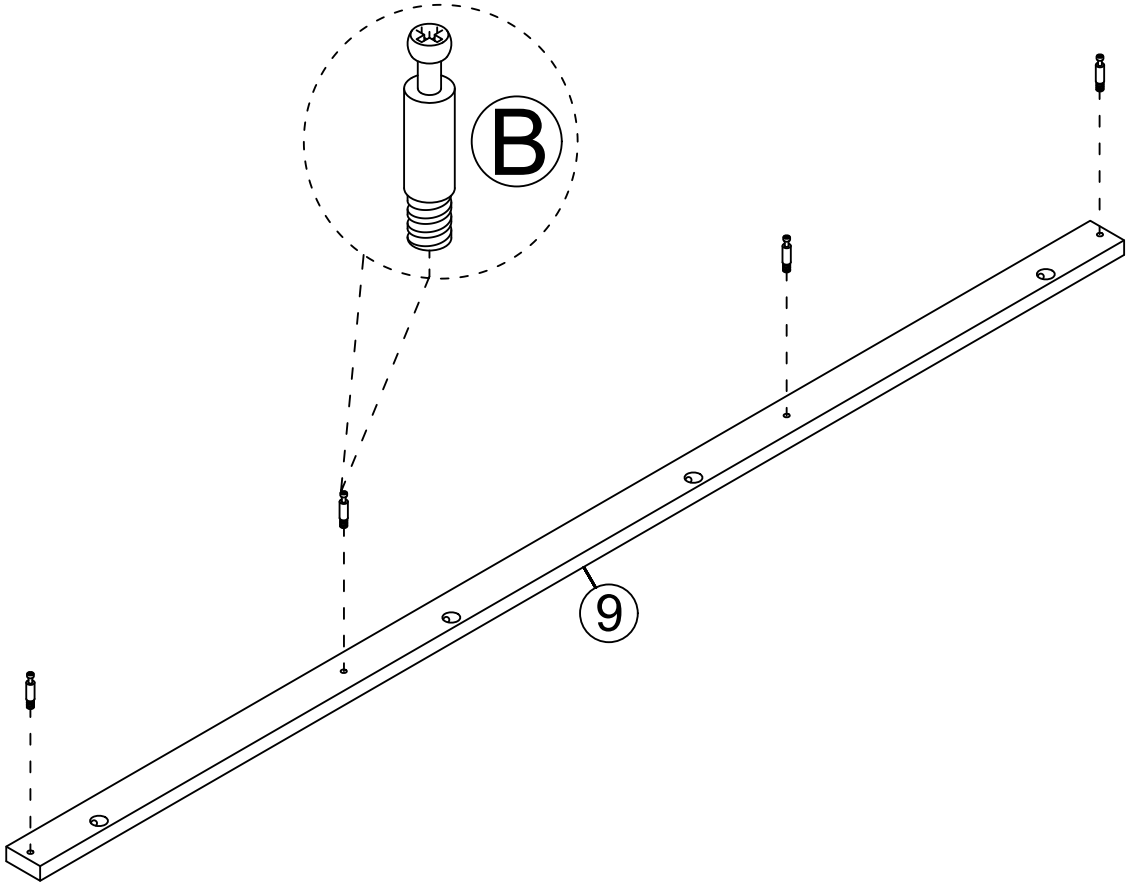

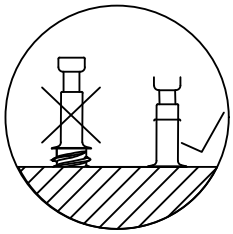

STEP17

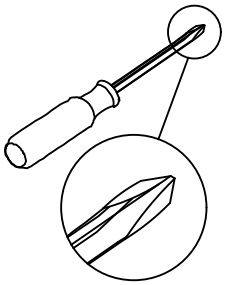

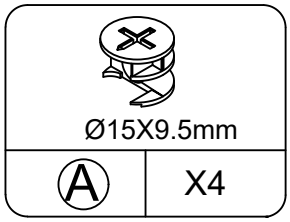

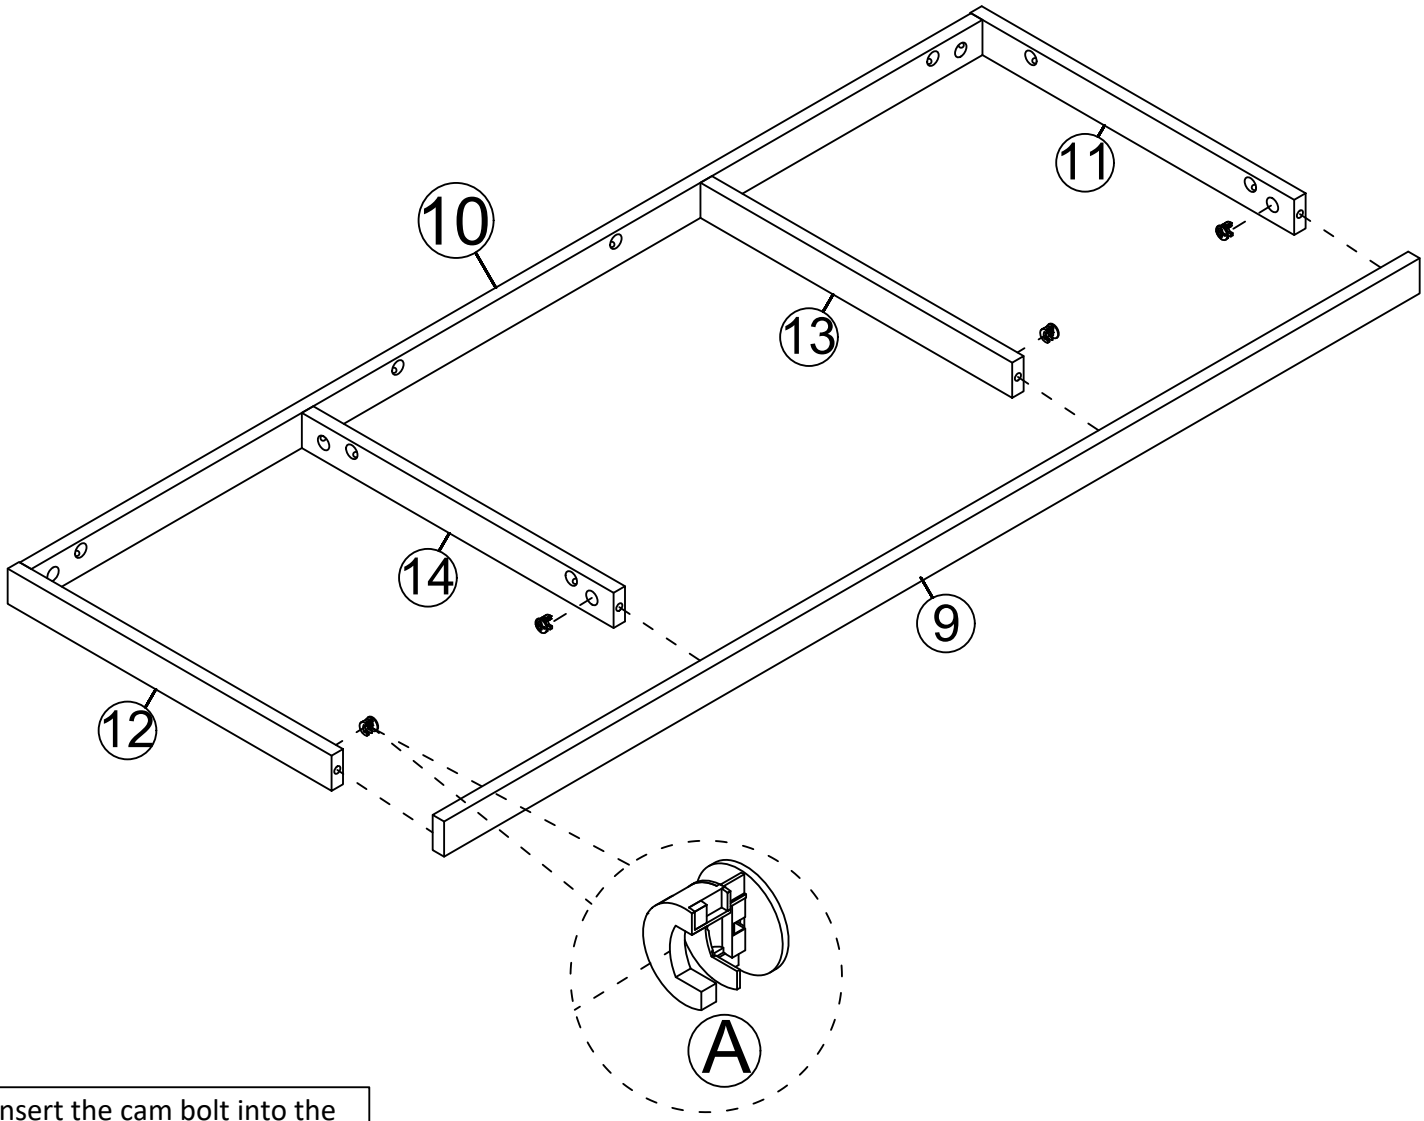

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

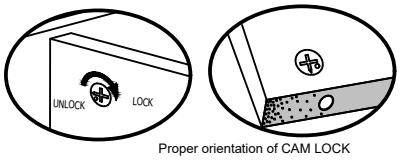

Proper orientation of CAM LOCK

STEP18

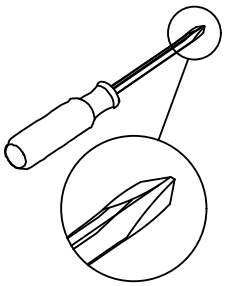



Ø15X9.5mm

A	X16



Ø8X30mm

D	X16

After this installation step is completed, flip it over.

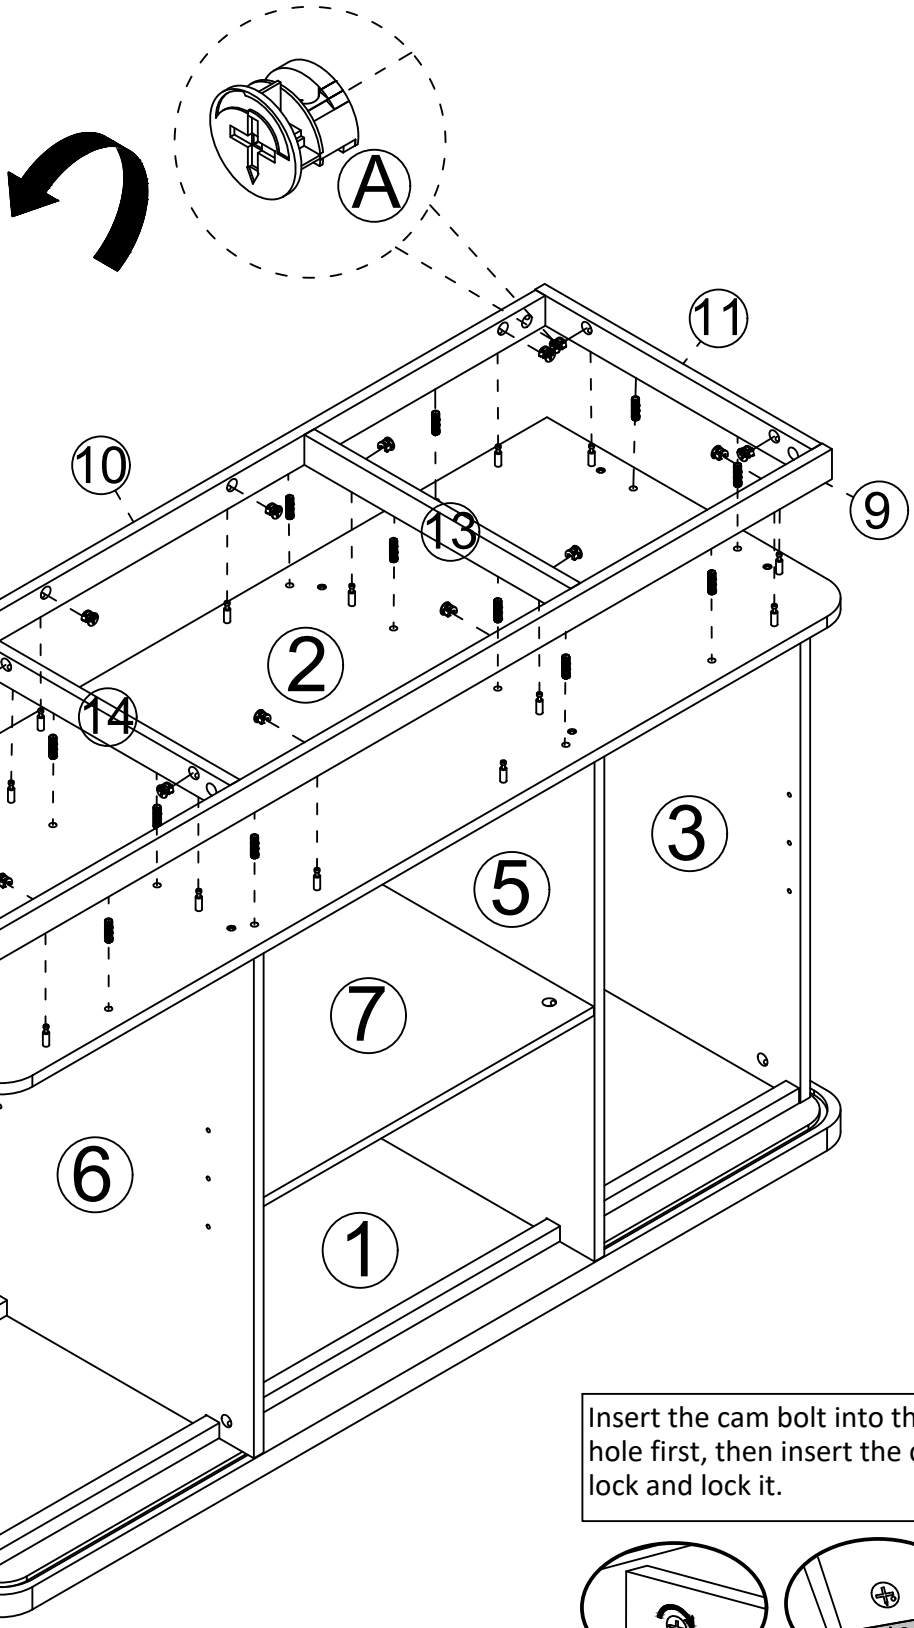

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

Proper orientation of CAM LOCK

STEP19

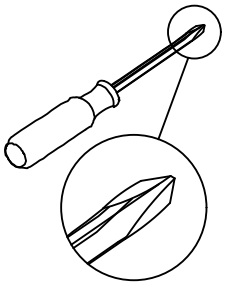

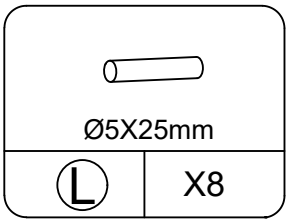

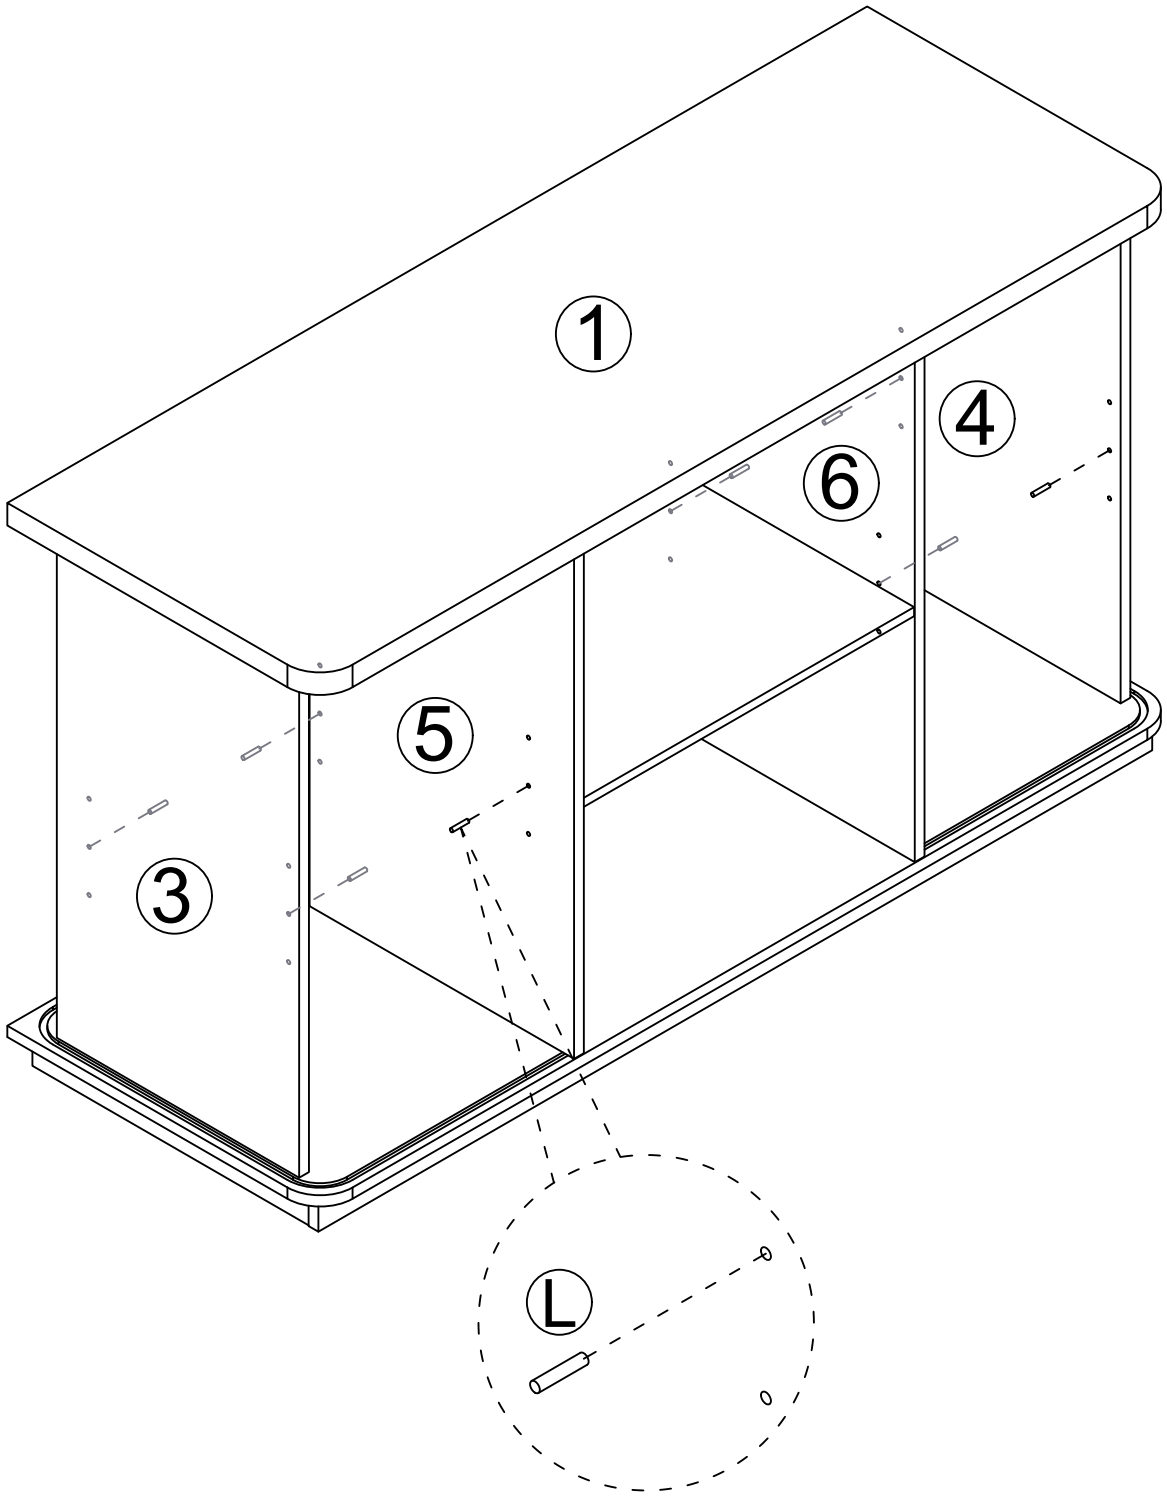

STEP20

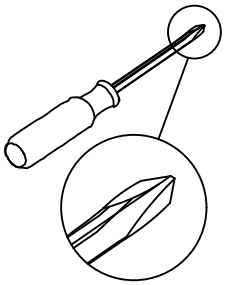

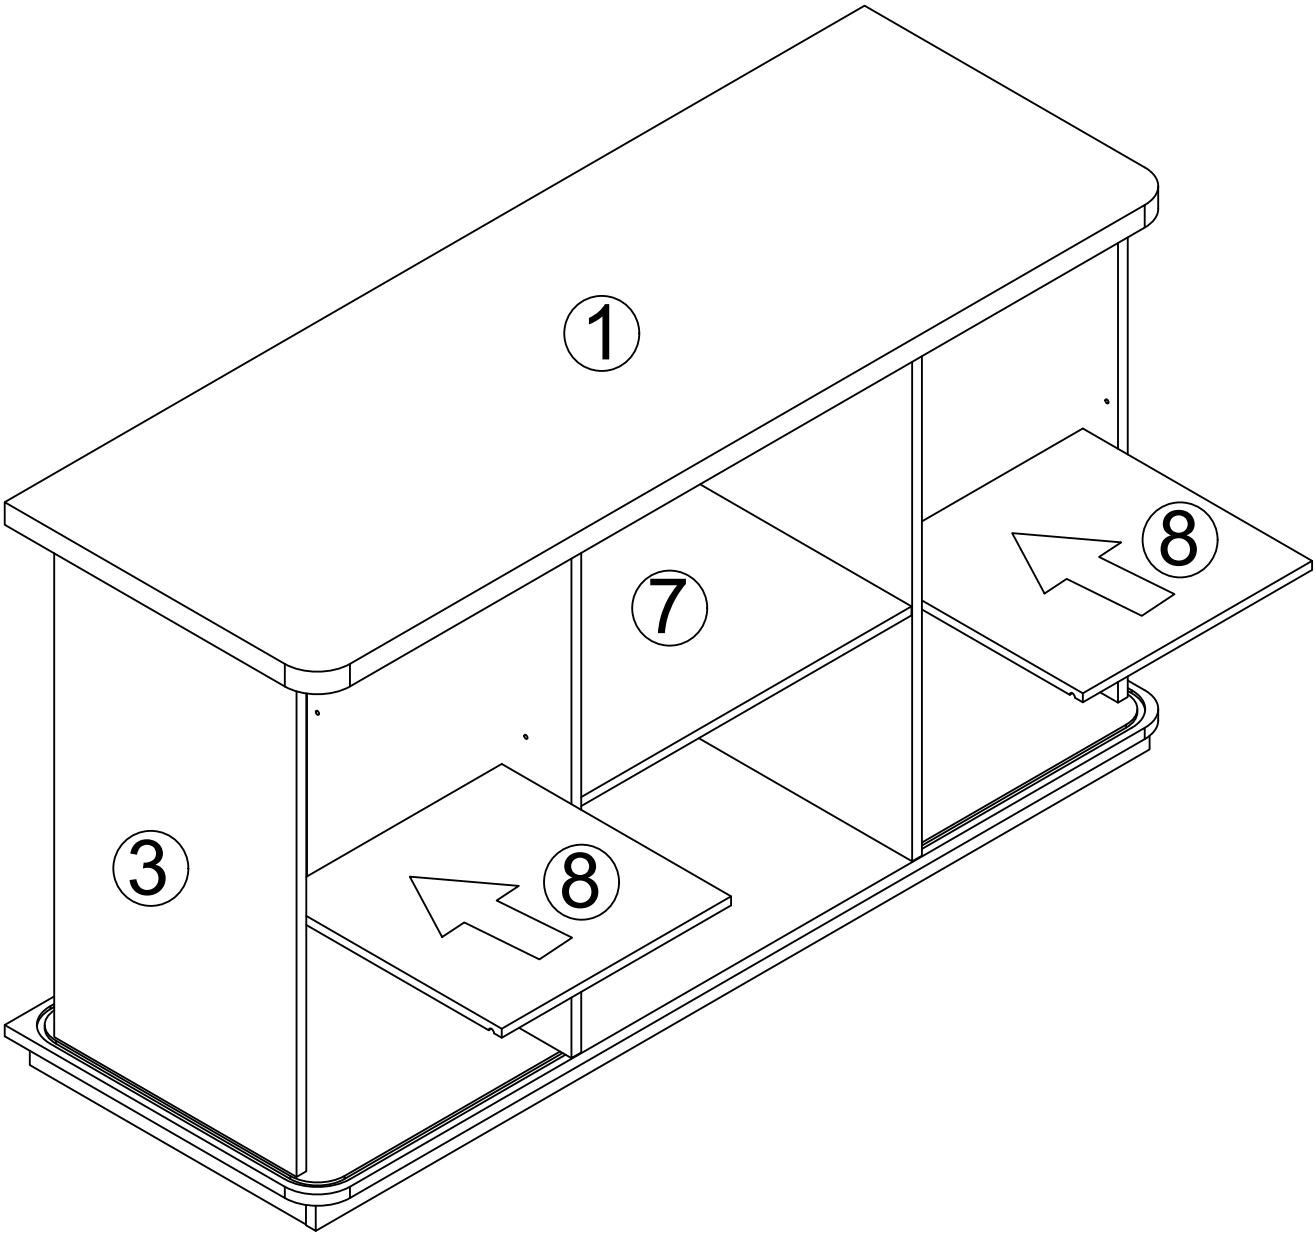

STEP21

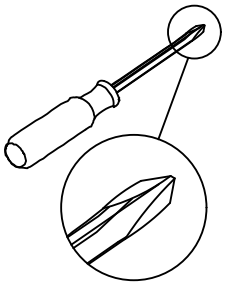

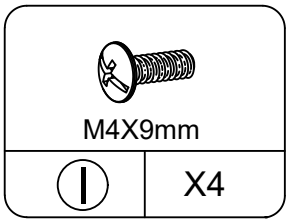

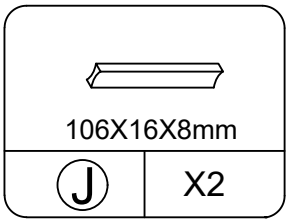

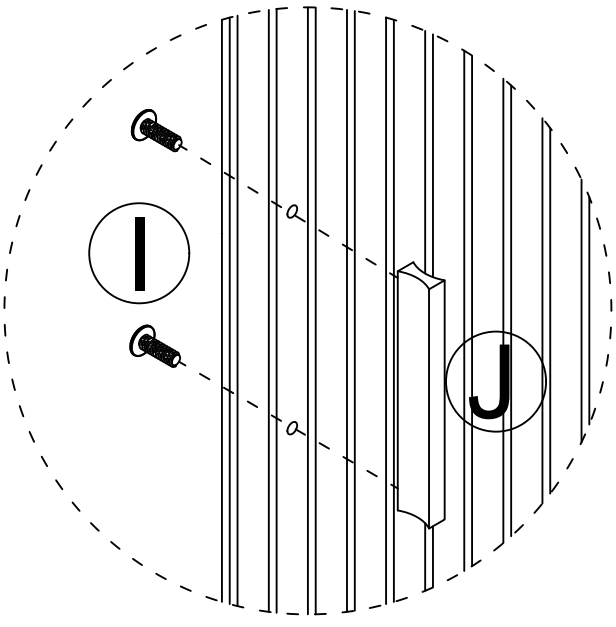

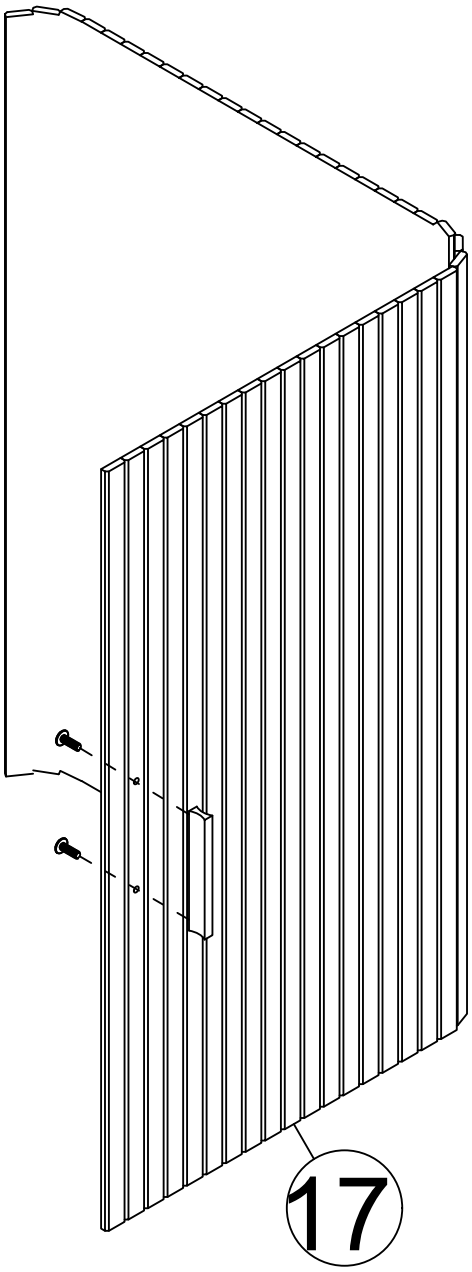

X2

STEP22

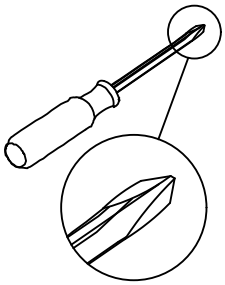

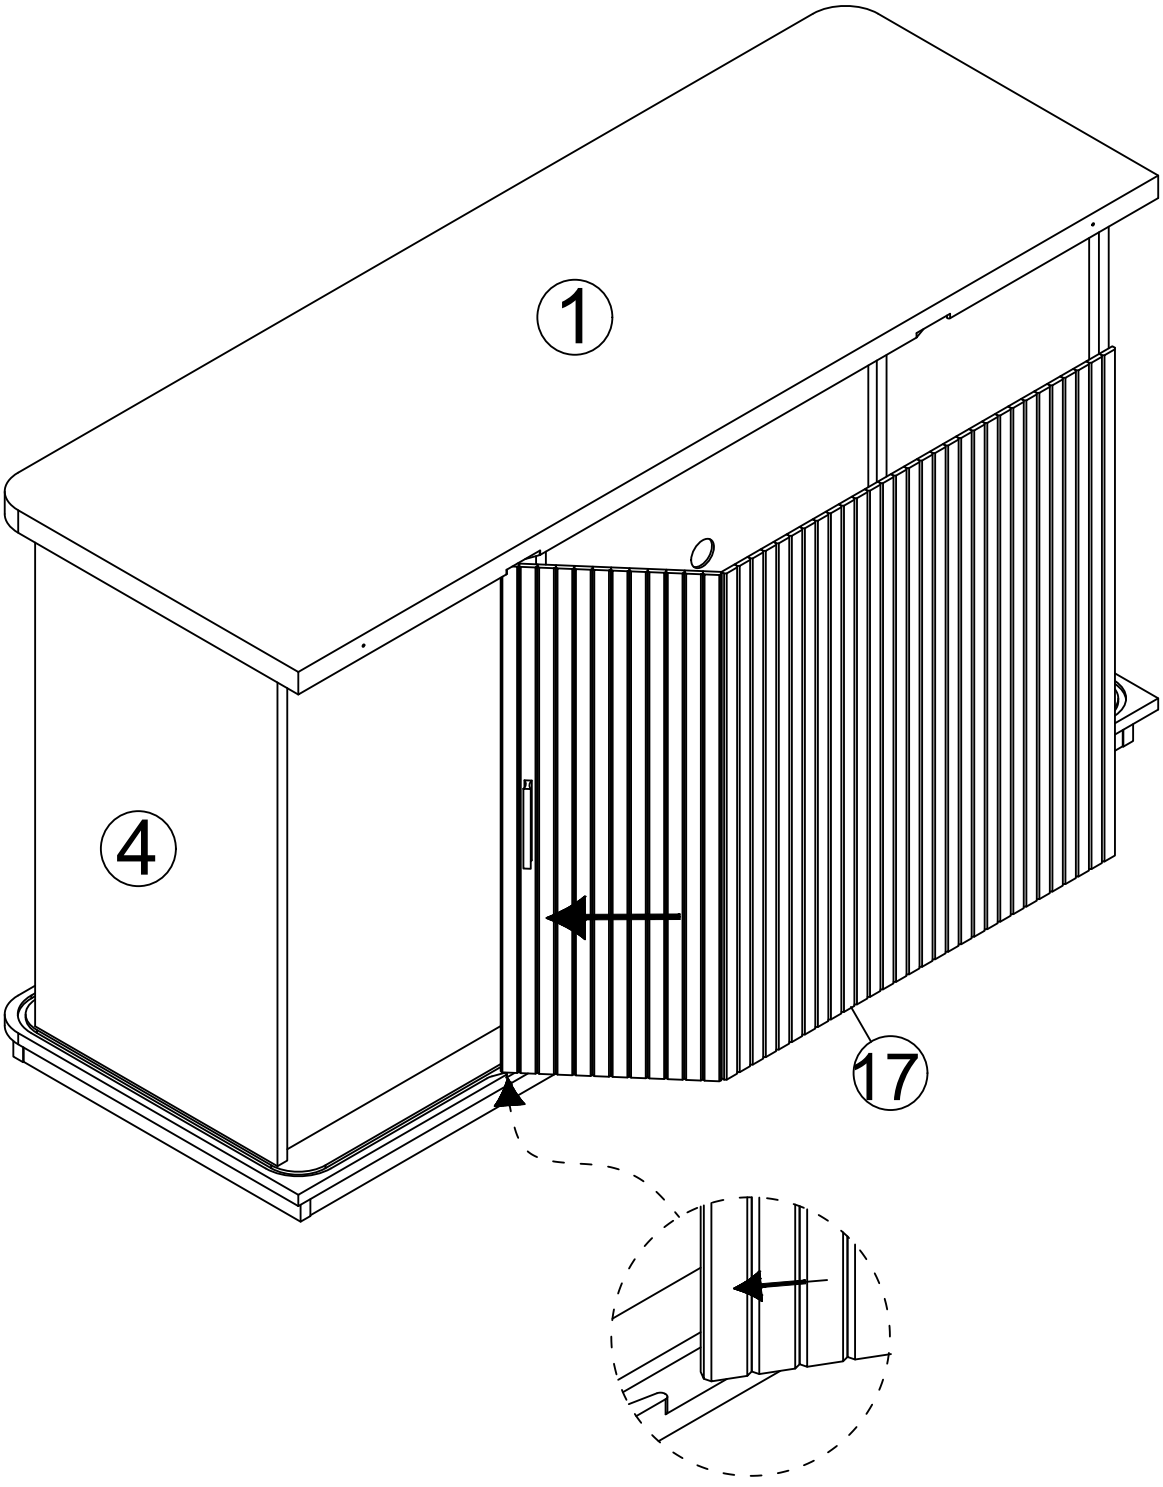

STEP23

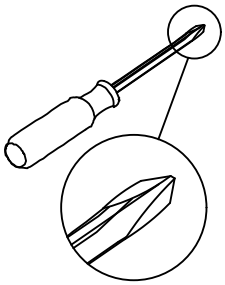

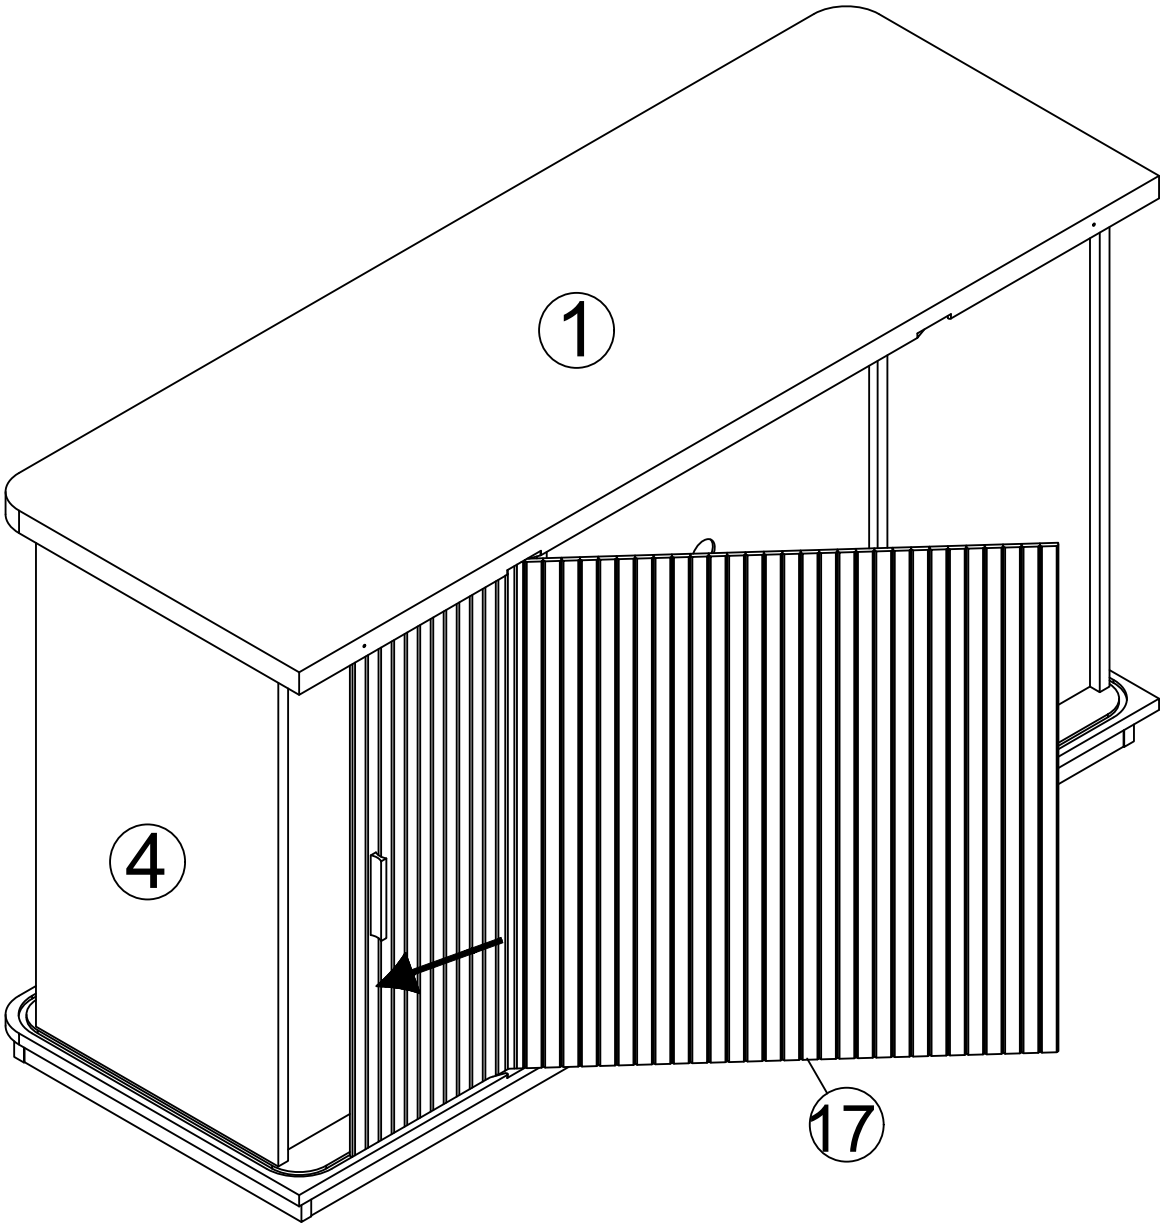

STEP24

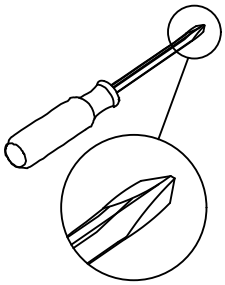

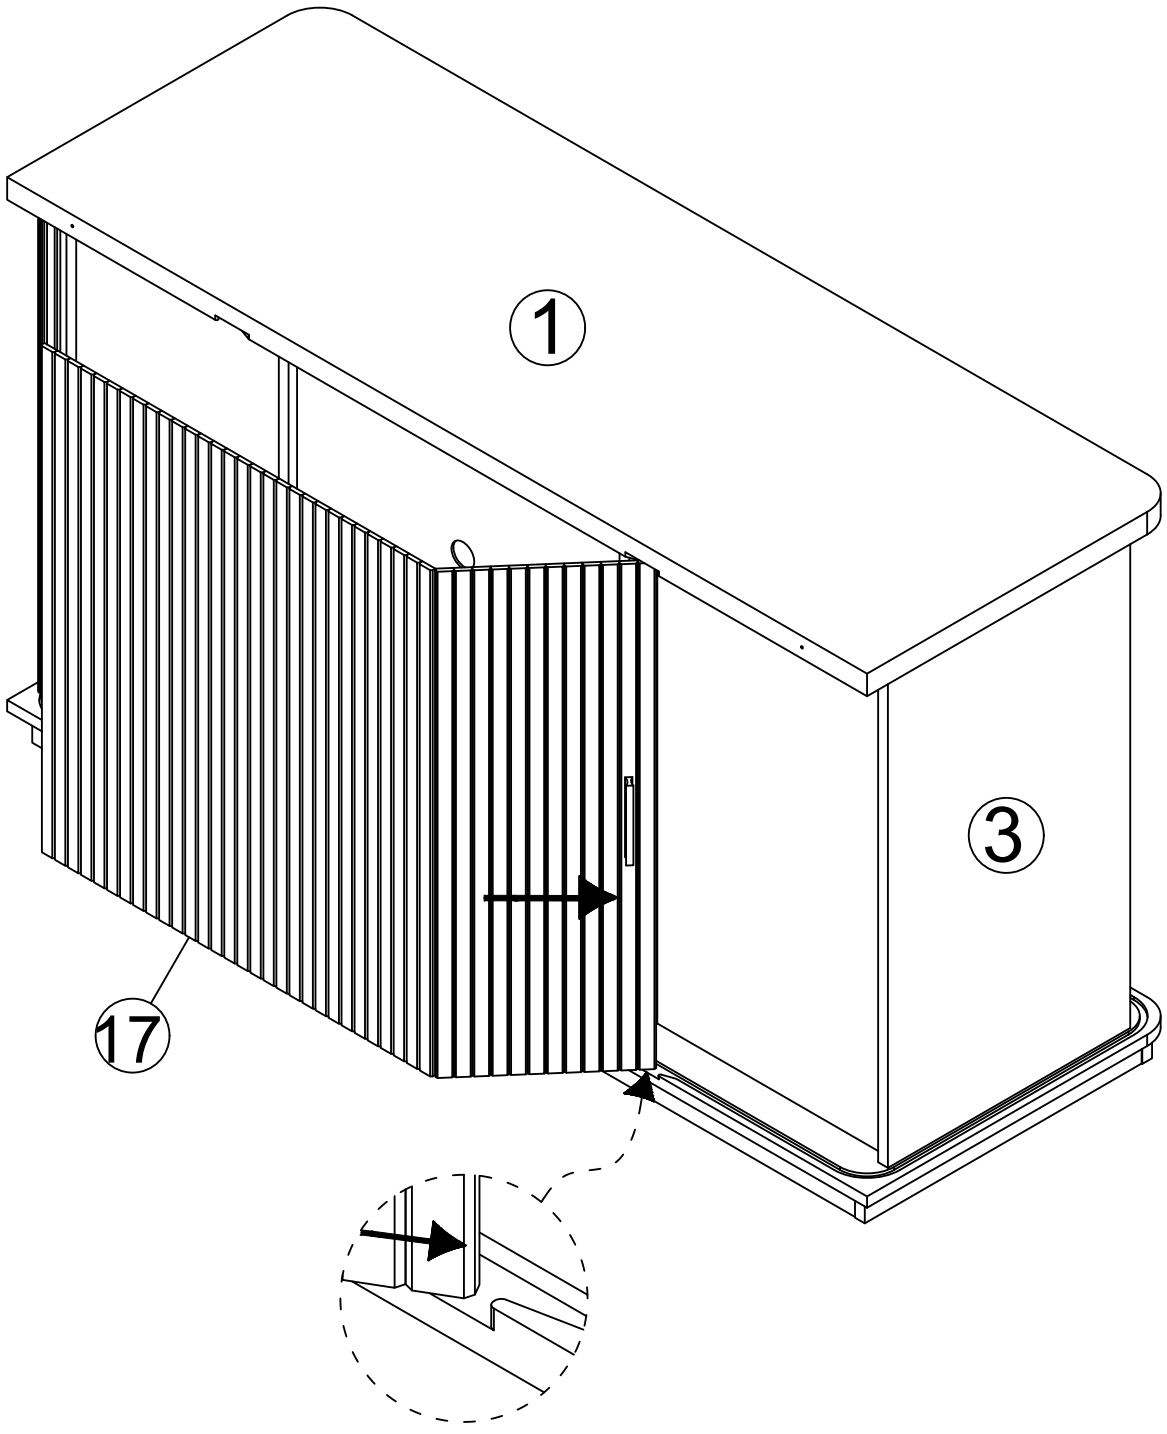

STEP25

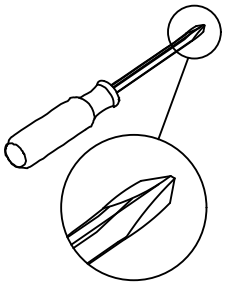

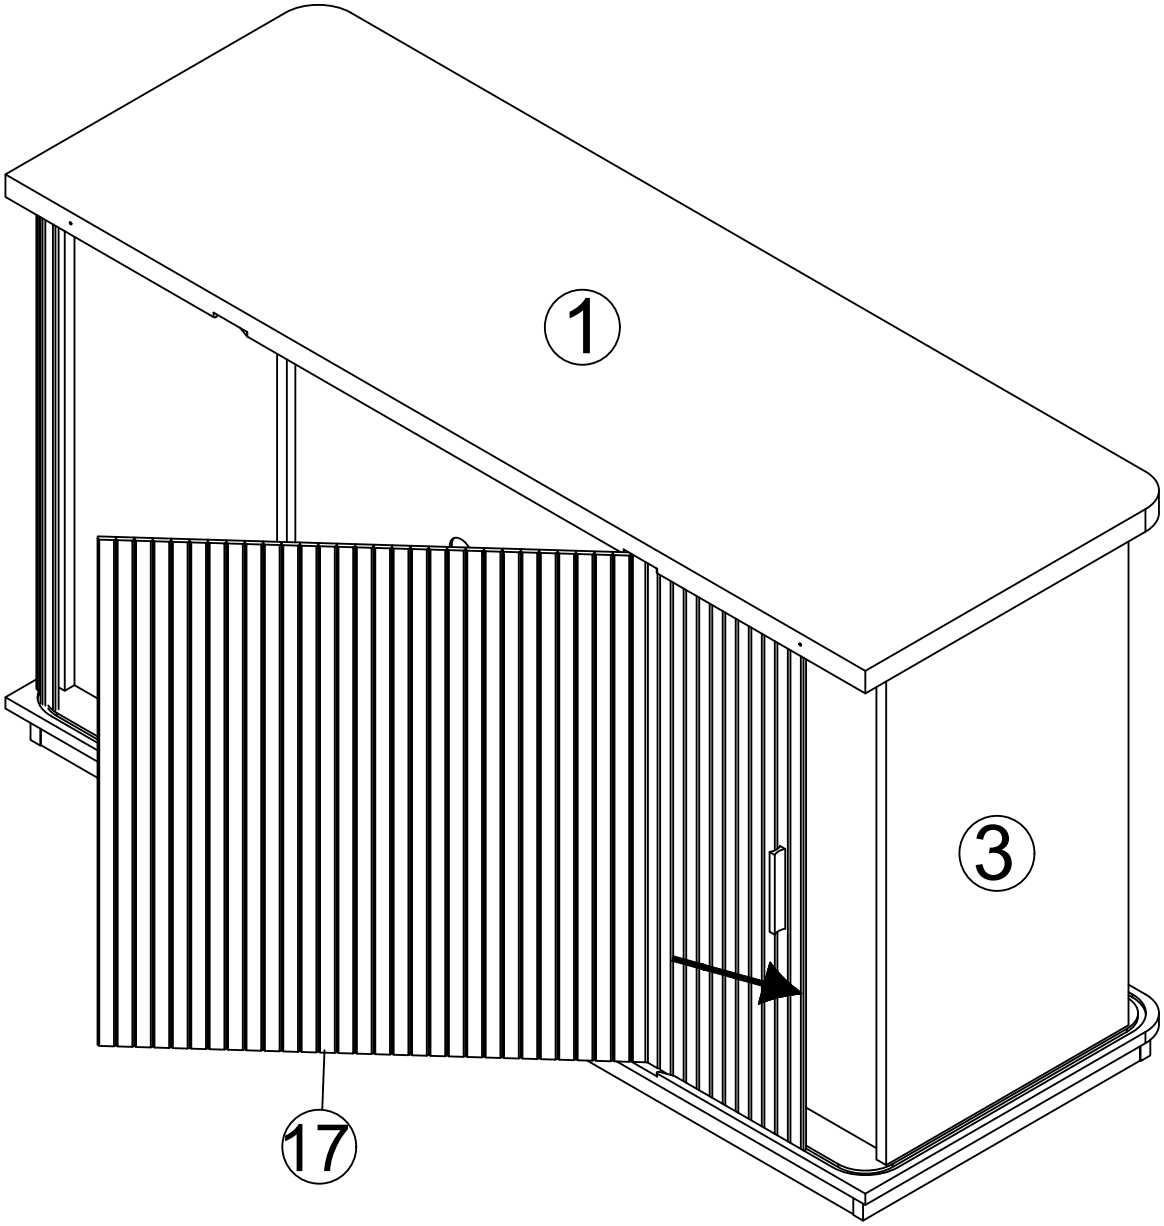

STEP26

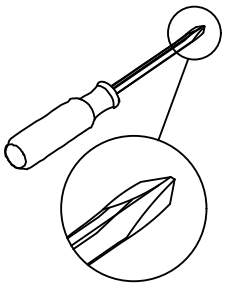

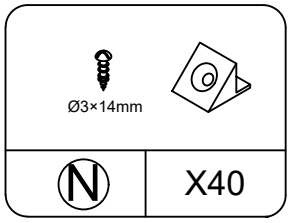

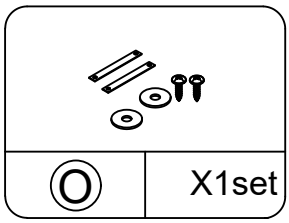

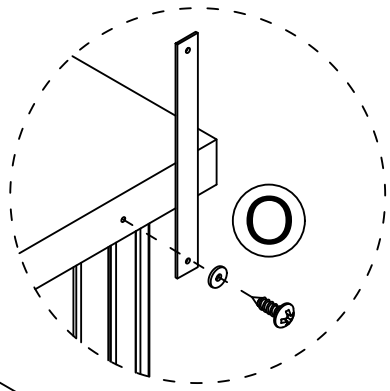

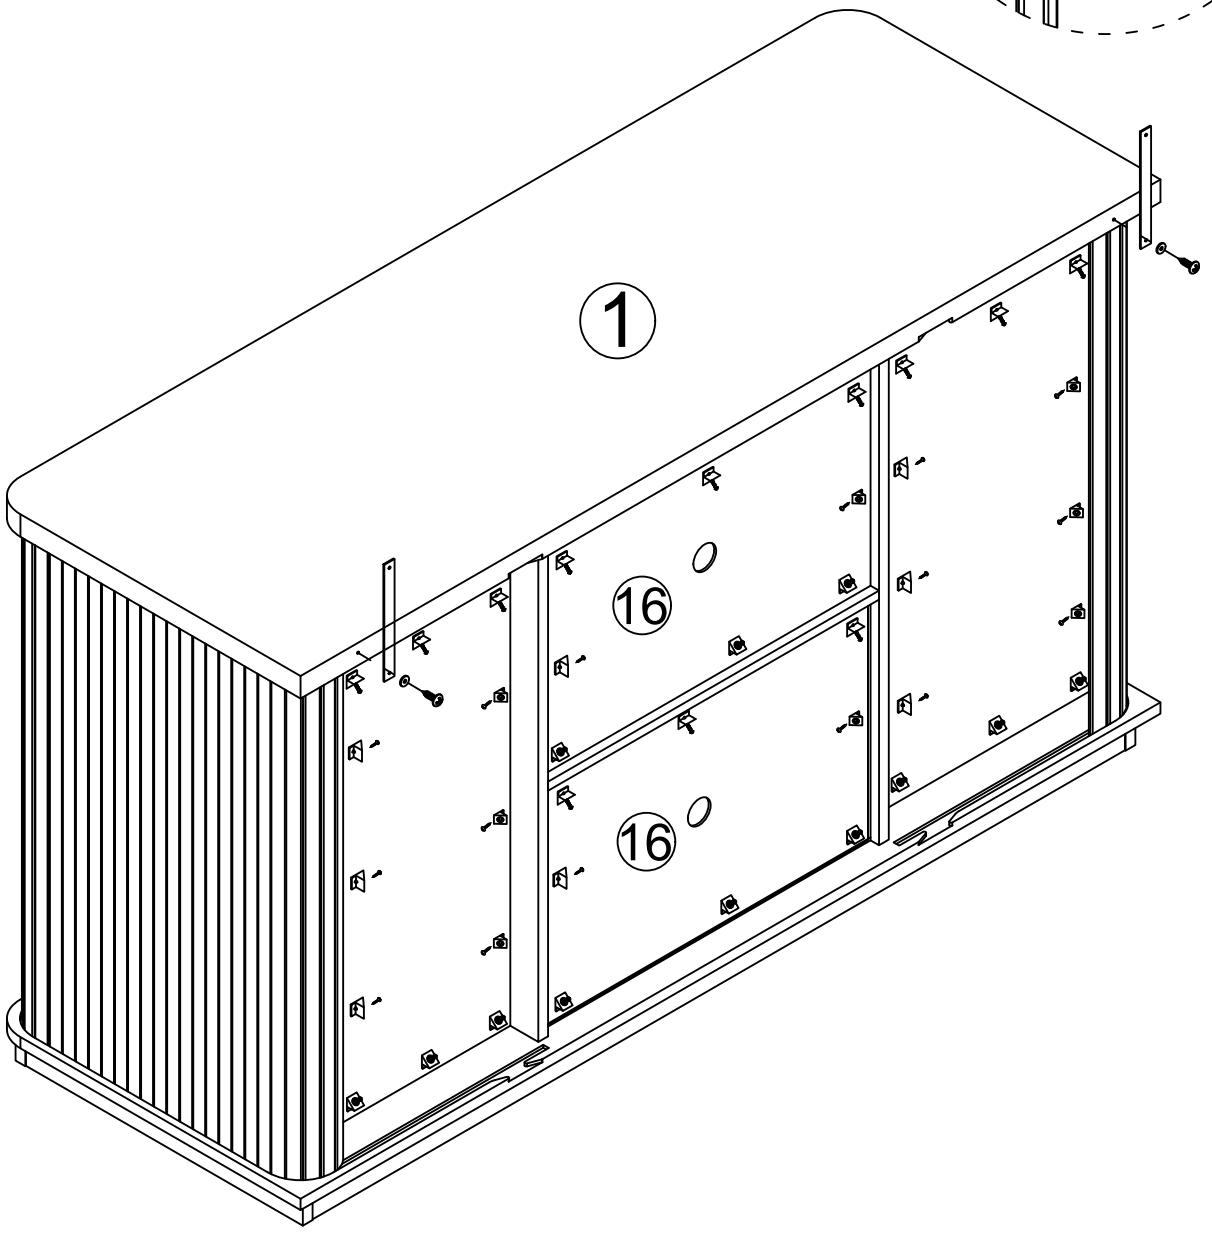

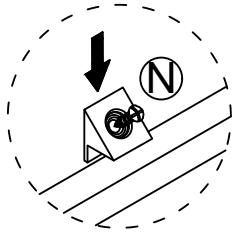

Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.

STEP27

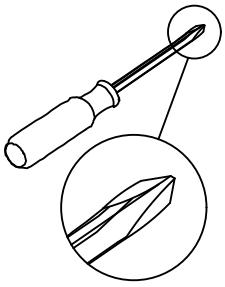

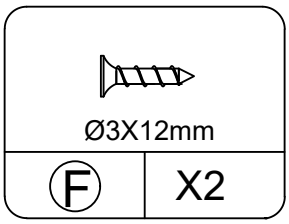

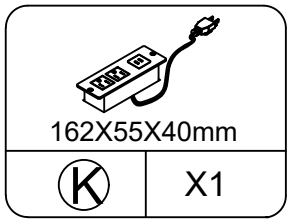

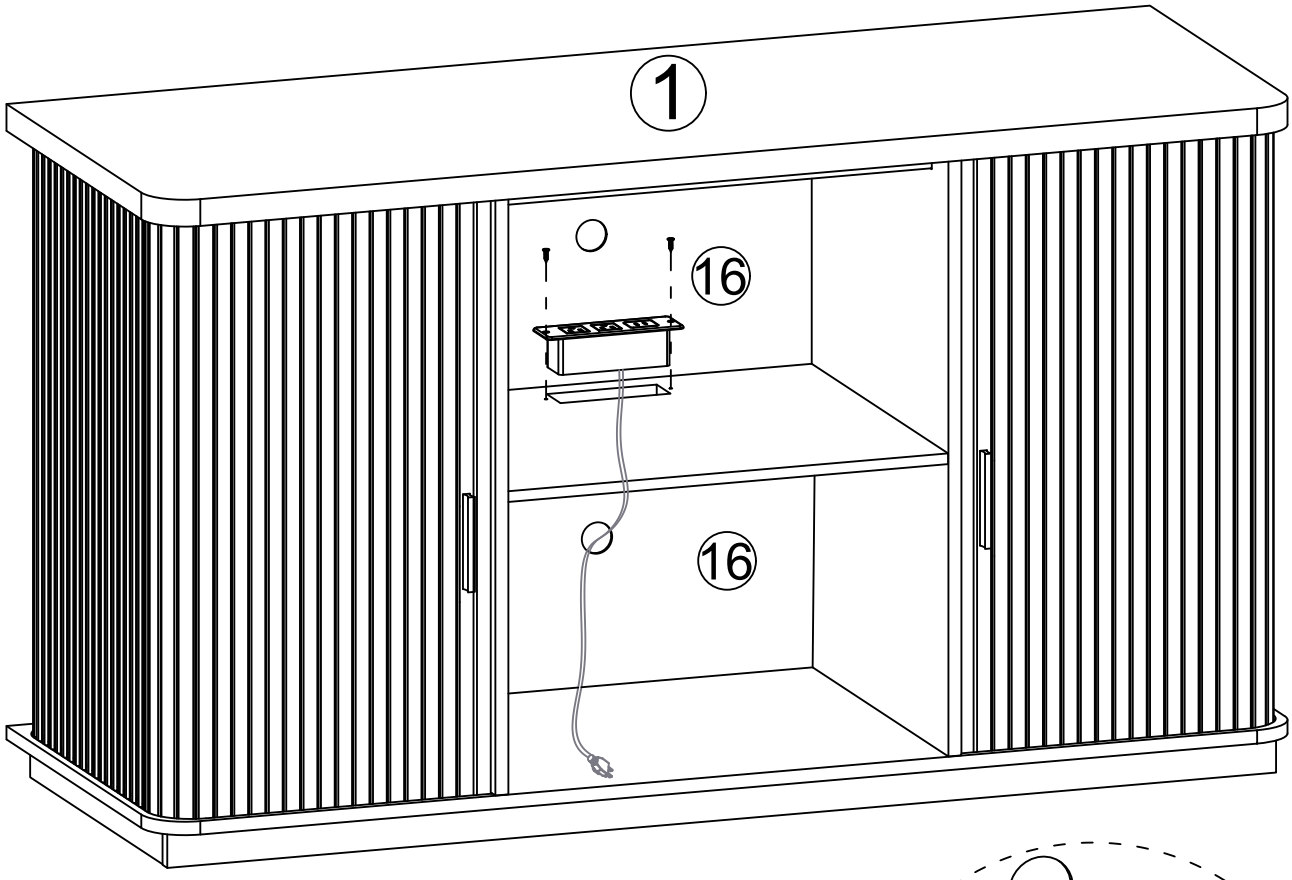

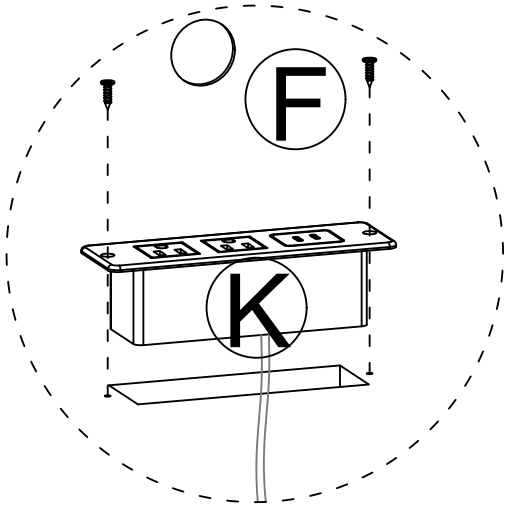

STEP28

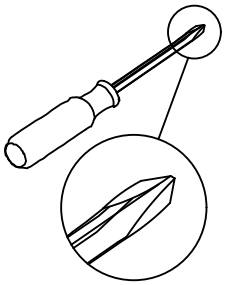

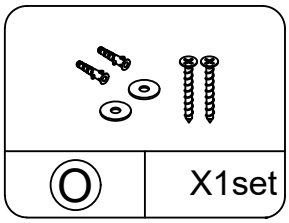

Install the tipping restraint hard ware

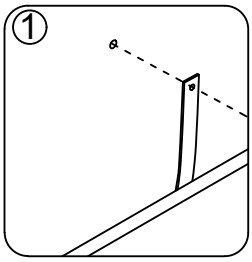

1.make mark on the wall

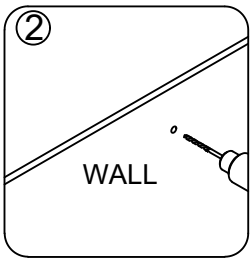

2.drill two Ø6 holes on the wall

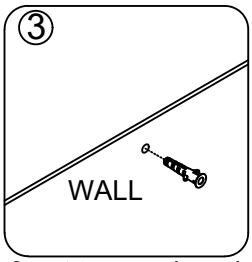

3.put two anchors in the holes

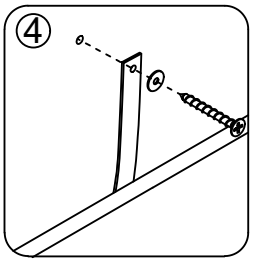

4.fix the device on the wall by the long screws

