
WQSG260BK---->10X10FT

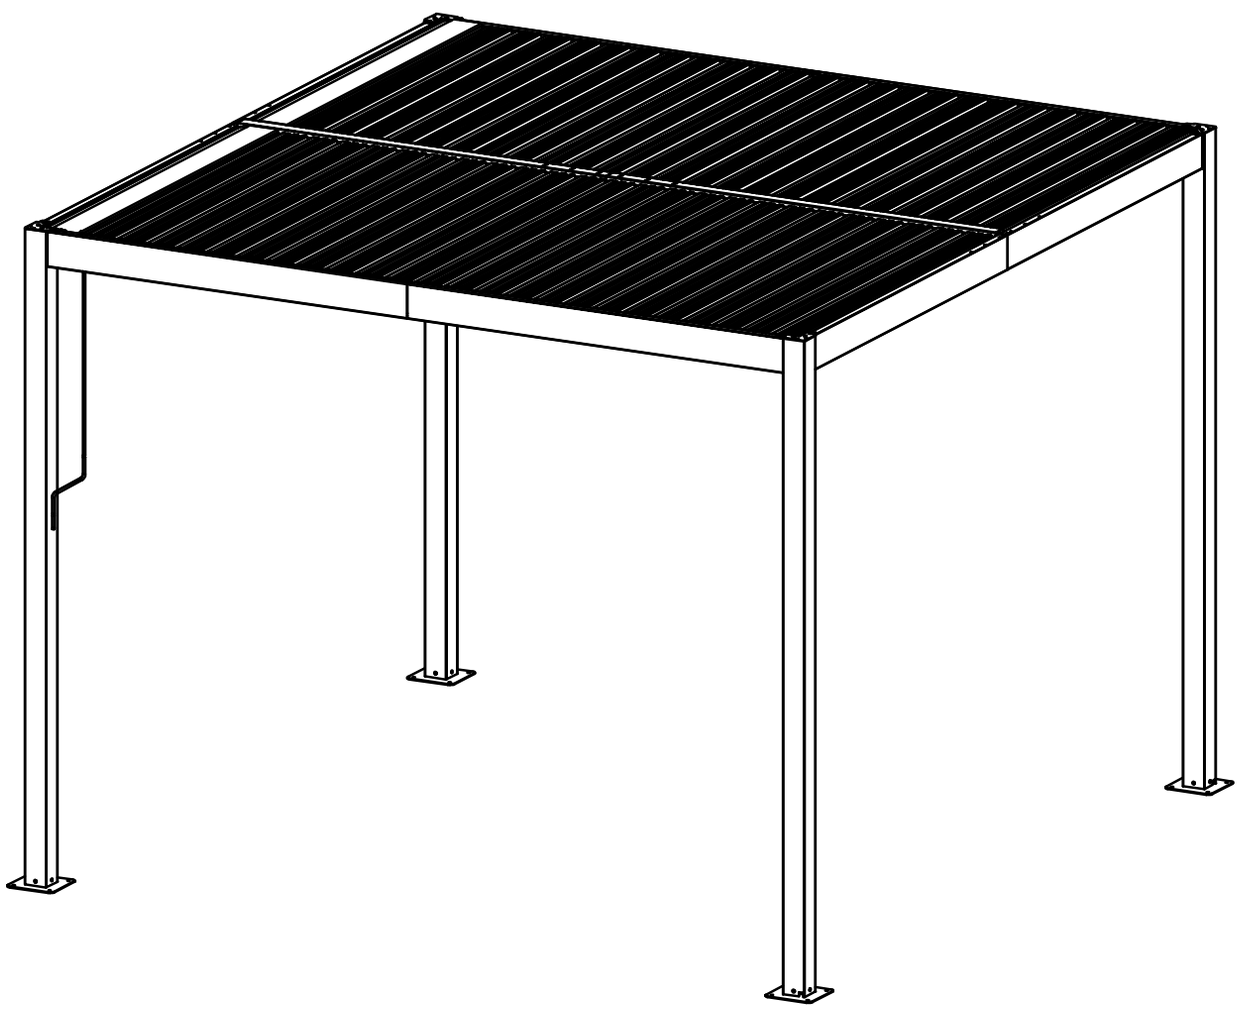

10X10FT
Louvered Pergoloa

Installation instructions

PRODUCT INSTRUCTION

Remember that the assembly might take (2) hours and requires (3) people.

Before You Begin

①Before starting assembly, please carefully inspect all parts in the package.
If you notice any damage, missing parts, or discrepancies, please contact us for assistance.
②Please note that we are not responsible for parts lost or damaged due to improper handling during assembly.

Preparation Is Key

①Confirm that your site preparation and foundation are fully ready before unpacking.
②Review all steps in this manual thoroughly before beginning.
③Consult local authorities regarding permits and building regulations.

Safety First

①Some parts have sharp metal edges — handle with care.
②Wear gloves, eye protection, and long sleeves during assembly or maintenance.
③Do not assemble in strong winds or extreme cold.
④Once installed, place heavier items near the bottom when filling.
⑤Do not allow children to play in the unit, and do not stand, sit, or store items on the roof.

Our Promise to You


①Inspired by the idea of “ Closer to life, ” we strive to provide well-designed, reliable products that enhance your outdoor living. Our goal is to help you connect with nature and enrich your lifestyle.②Here ’ s to creating your own outdoor sanctuary !

Need Help ?

If you have any questions during assembly, please reach out to our customer service team.

Installation Notes


- Refer to the provided diagram during assembly.
- These following tools are required but not included

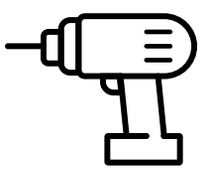


Power Drill



Tape Measure



Hammer

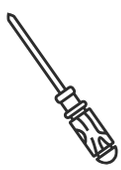


Screwdriver




Ladder




Scissors

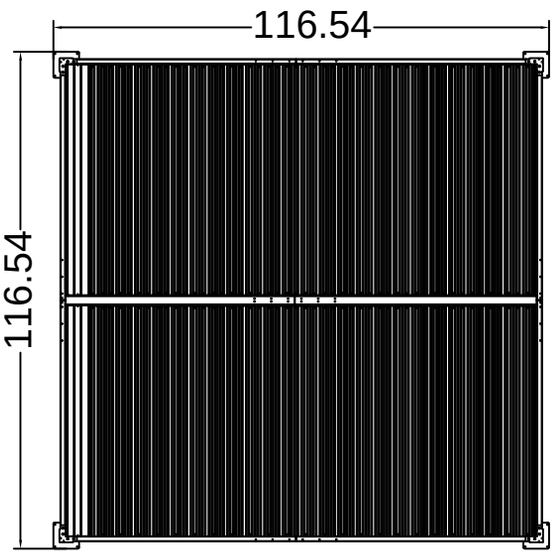

Top

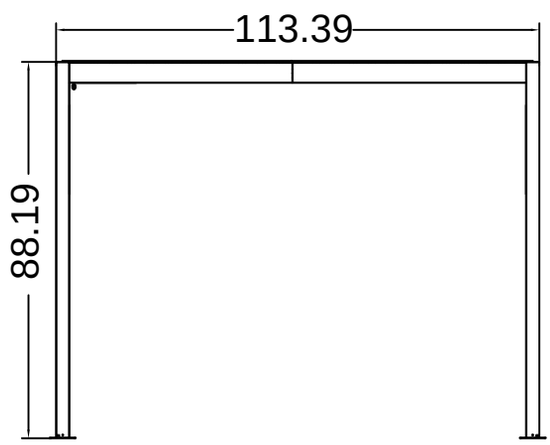

Front

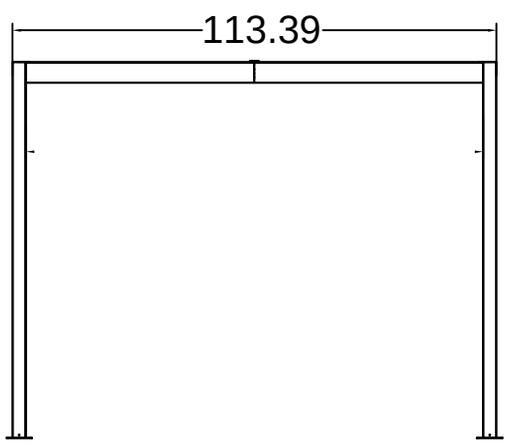

Left

ACCESSORIES LIST

Serial number

Box A

Part name	A	I-2	B1	C1	D1	J	I-1
Qty	4	2	1	1	1	1	2
Part name	K	L	M1	M2	N	N1	O
Qty	2	2	2	2	2	4	4
Part name	P	R	R1	R2			
Qty	4	1	2	1			












Box B

Part name	B	C	D	E	E1	F	F1
Qty	1	1	1	1	1	1	1
Part name	G	Q	Q1	1#	2#	3#	4#
Qty	2	1	4	54	24	198	6
Part name	5#	6#	7#	8#	9#		
Qty	8	4	20	82	16		










Box C

Part name	H						
Qty	48						


ACCESSORIES LIST Figure style

 A×4	 B×1	 B1×1
 C×1	 C1×1	 D×1
 D1×1	 E×1	 E1×1
 F×1	 F1×1	 G×2
 H×48	 I-1×2	 I-2×2
 J×1	 K×2	 L×2
 M1×2	 M2×2	 N×2


ACCESSORIES LIST Figure style

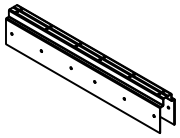 N1×4	 O×4	 Q×1
 Q1×4	 P×4	 R×1
 R1×1+1	 R2×1	 M6*15 1#×52+2
 M8*38 2#×24	 M5*16 3#×192+6	 M4*12 4#×4+2
 M6 5#×8	 M6*40 6#×4	 M6*15 7#×20
 M6*10 8#×80+2	 M8 9#×16	 6mm
 4mm	 4mm	


ASSEMBLY STEP 1




A x4




O x4



1# x16

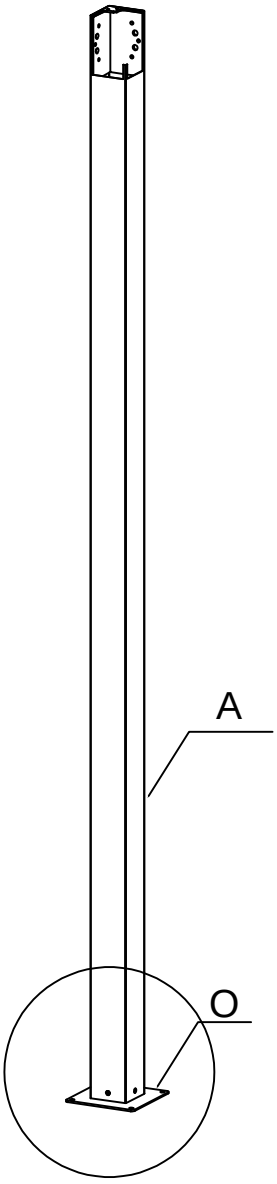

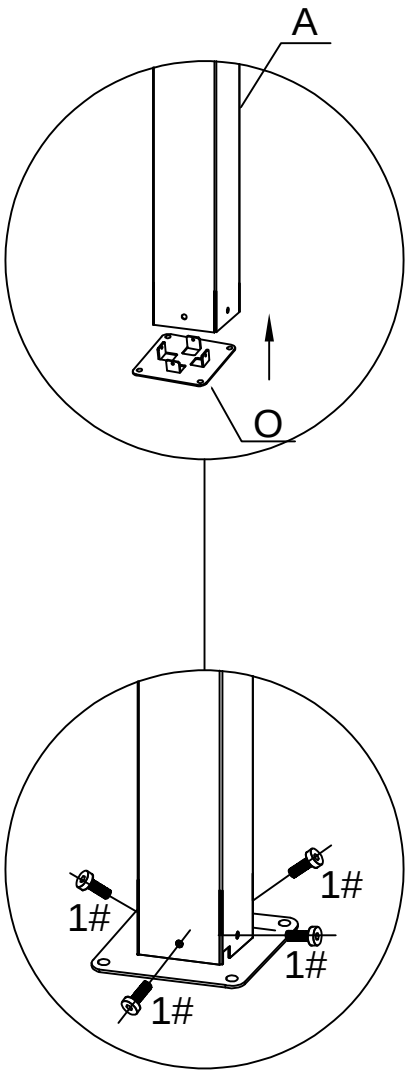

ASSEMBLY STEP 2



B x1




B1 x1




Q1 x1



P x1



8# x14

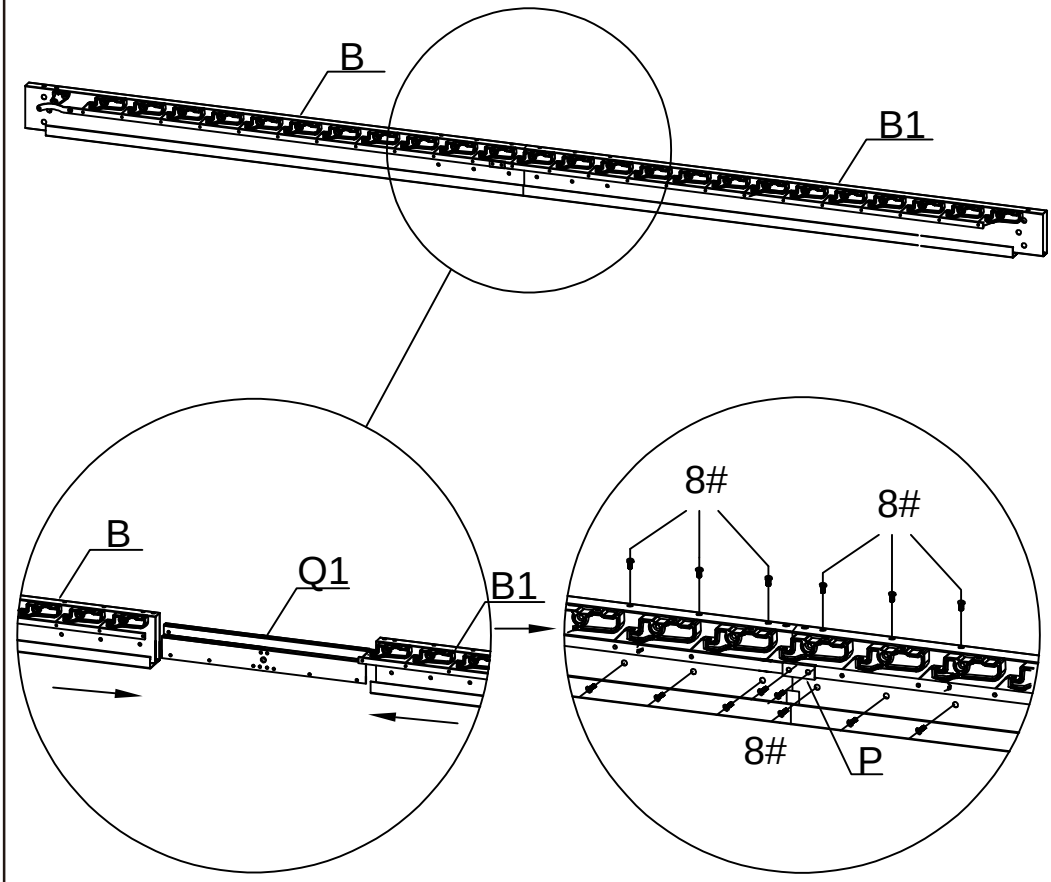

ASSEMBLY STEP 3



C x1




C1 x1




Q1 x1




P x1




8# x14

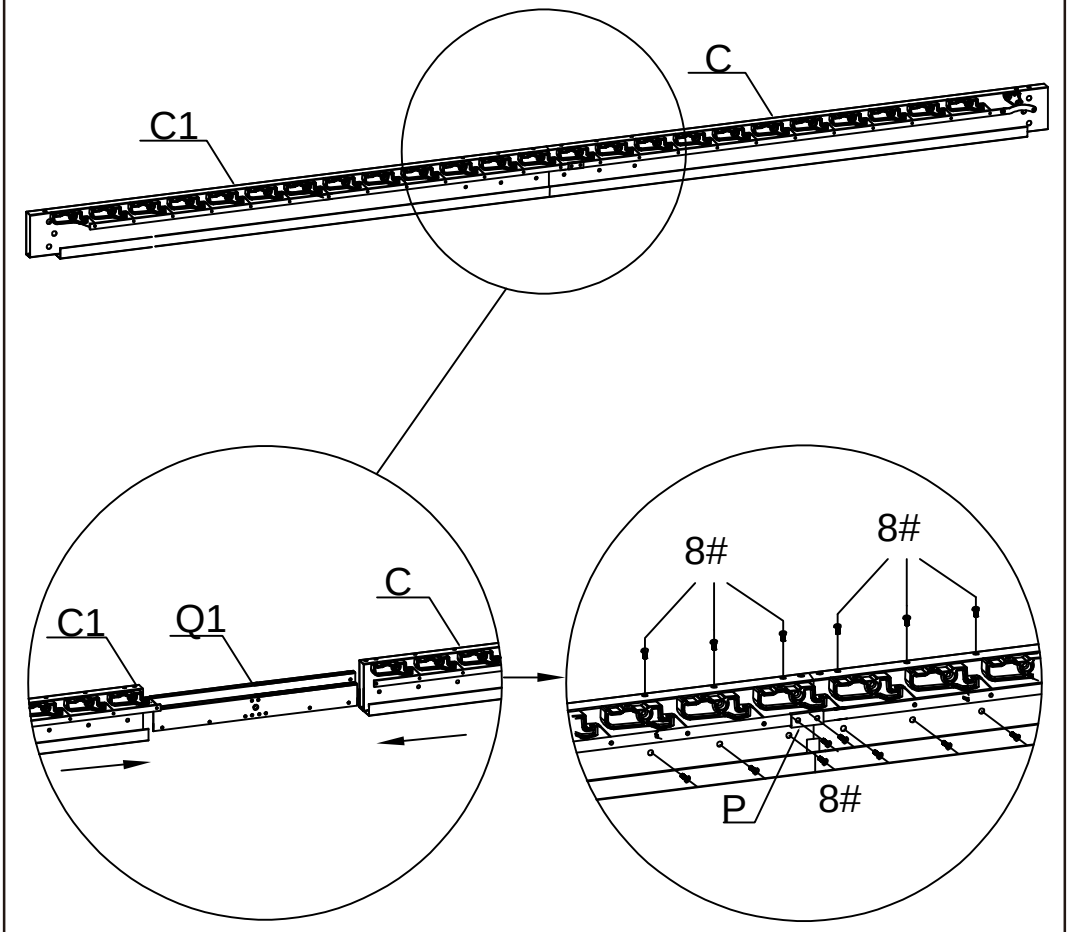

ASSEMBLY STEP 4



E x1



E1 x1



Q1 x1




N x1




7# x4




8# x12

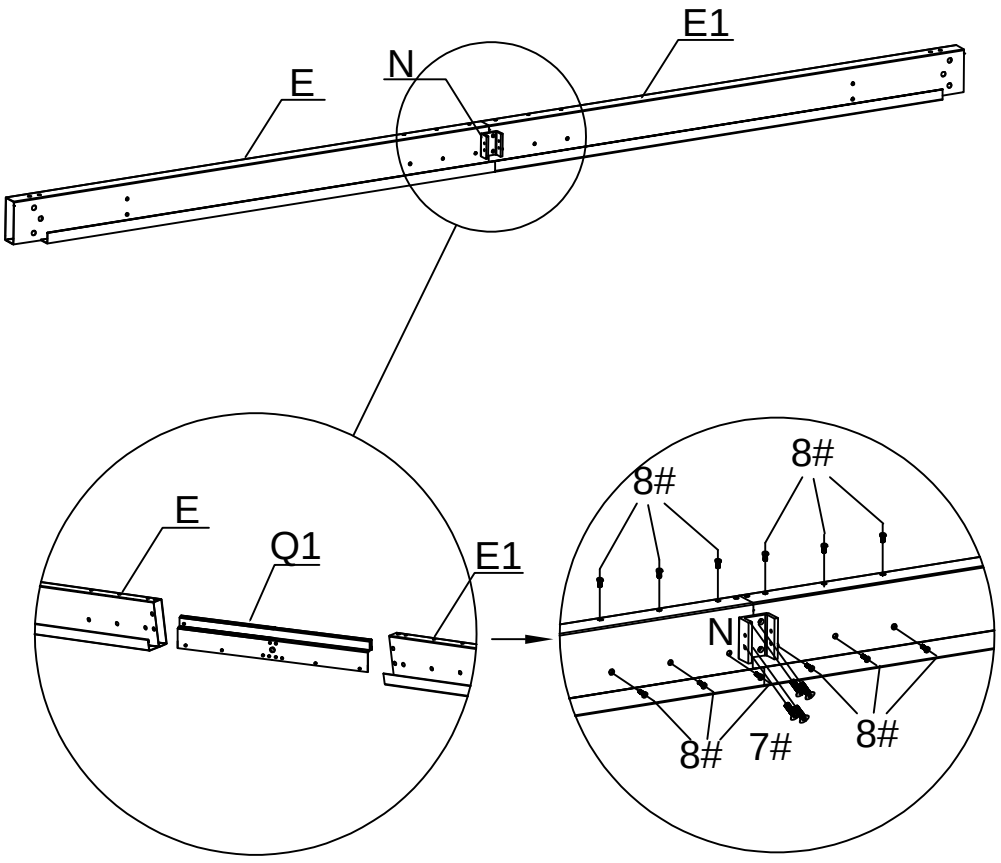

ASSEMBLY STEP 5



F x1



F1 x1



Q1 x1




N x1



7# x4



8# x12

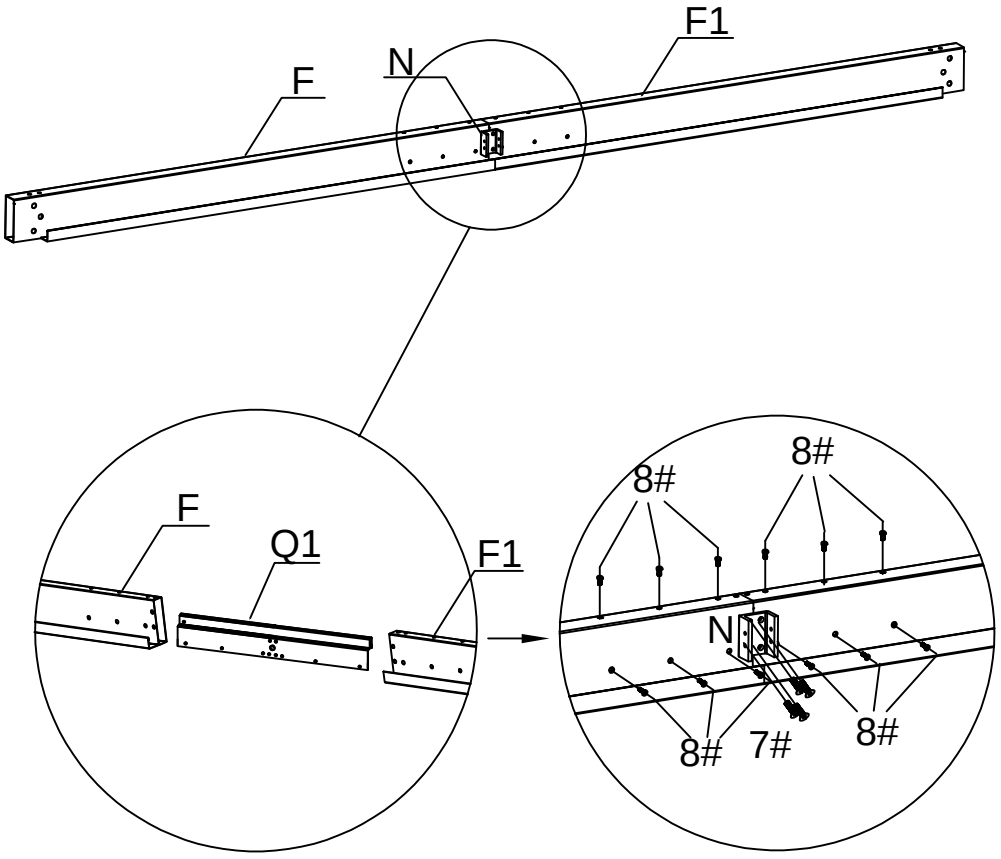

ASSEMBLY STEP 6




D x1



D1 x1




P x2




Q x1




8# x28

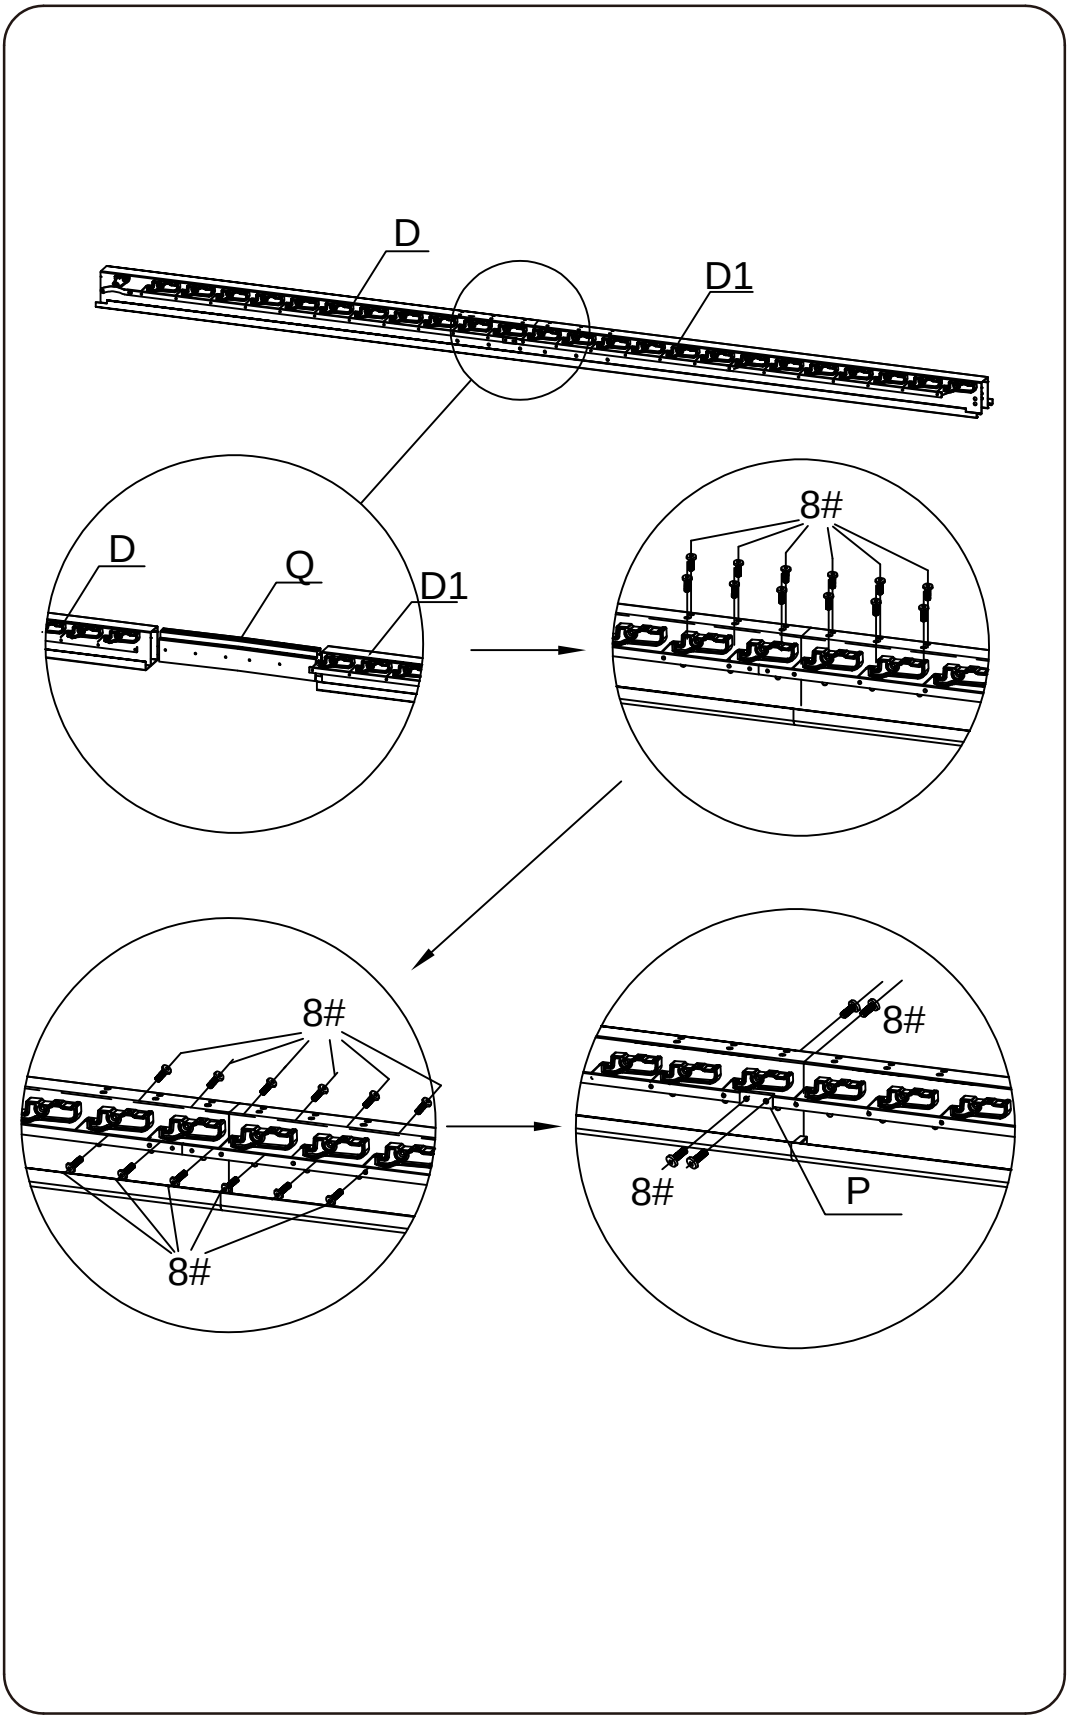


ASSEMBLY STEP 7




2# x12

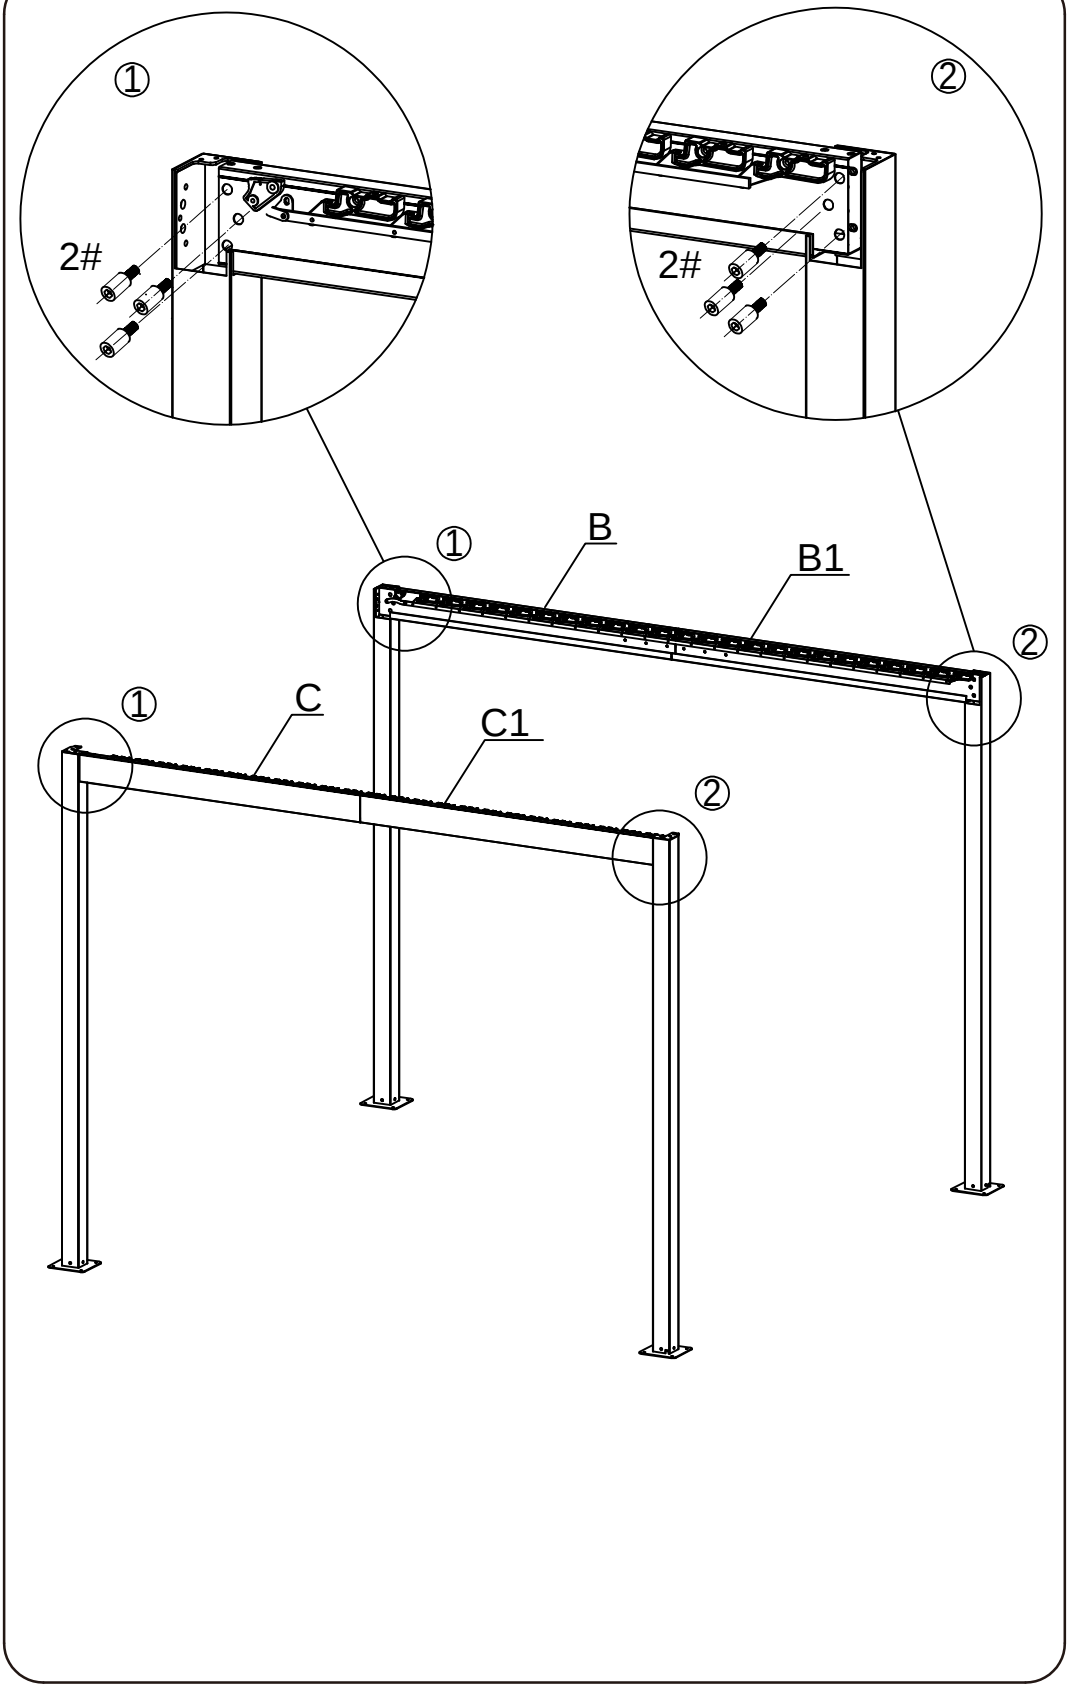


ASSEMBLY STEP 8




2# x12

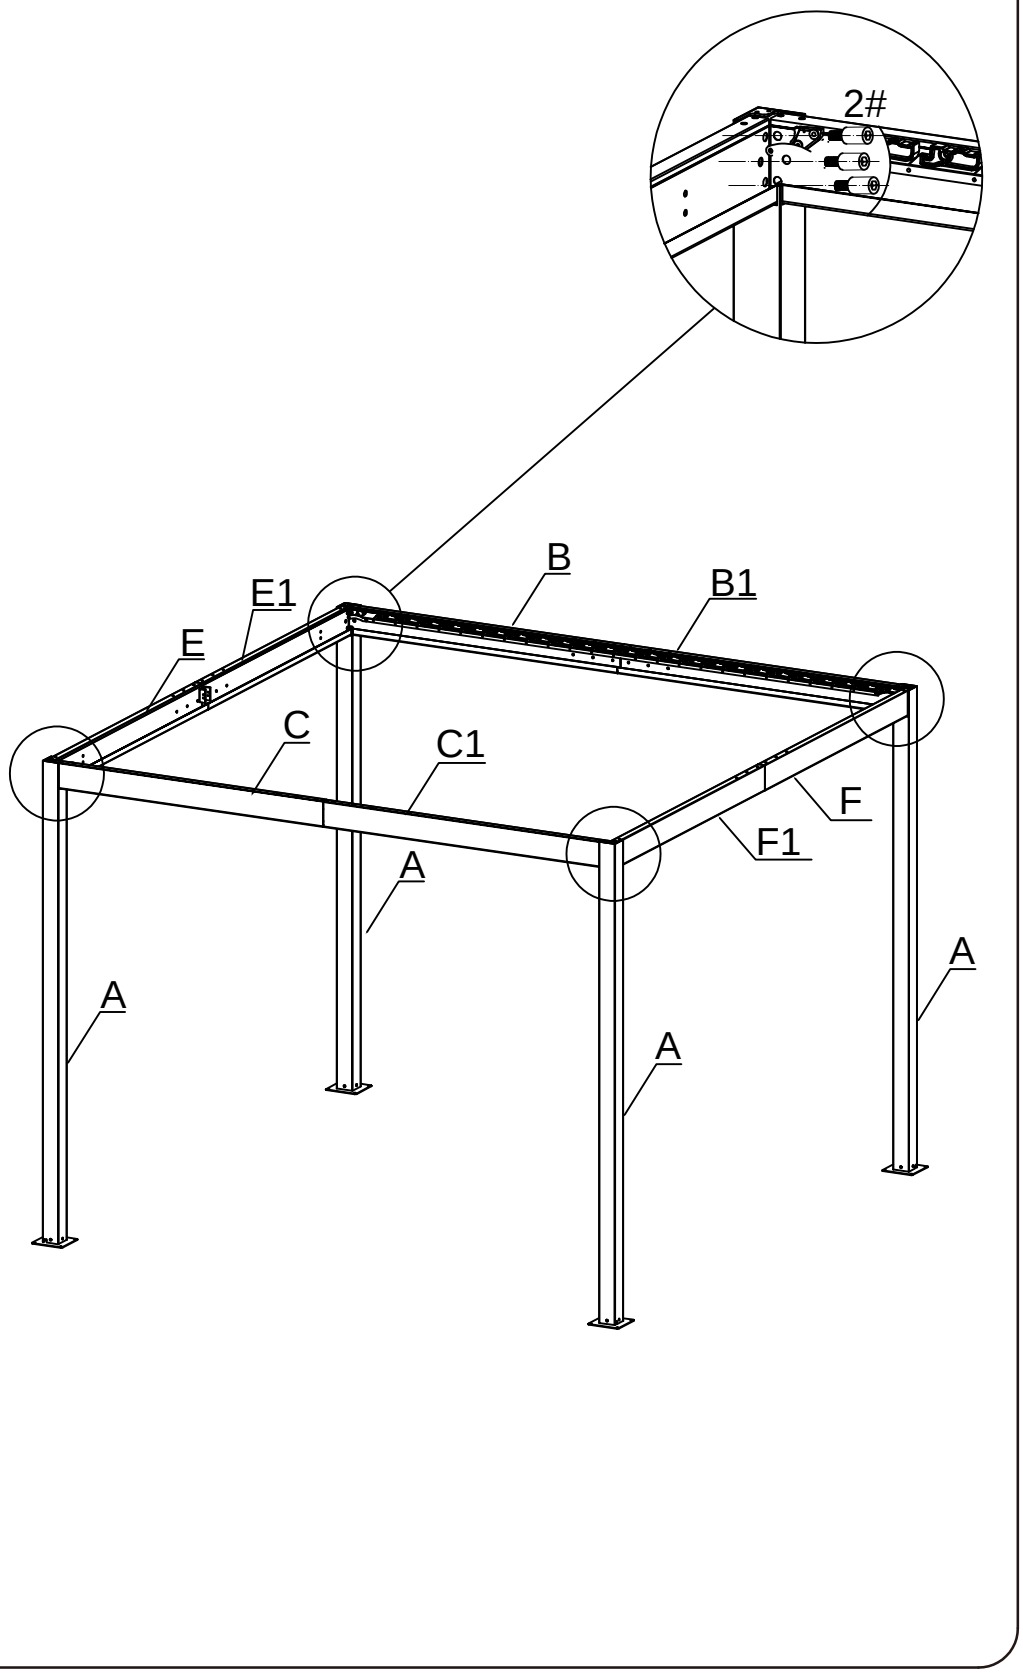

ASSEMBLY STEP 9




R x1

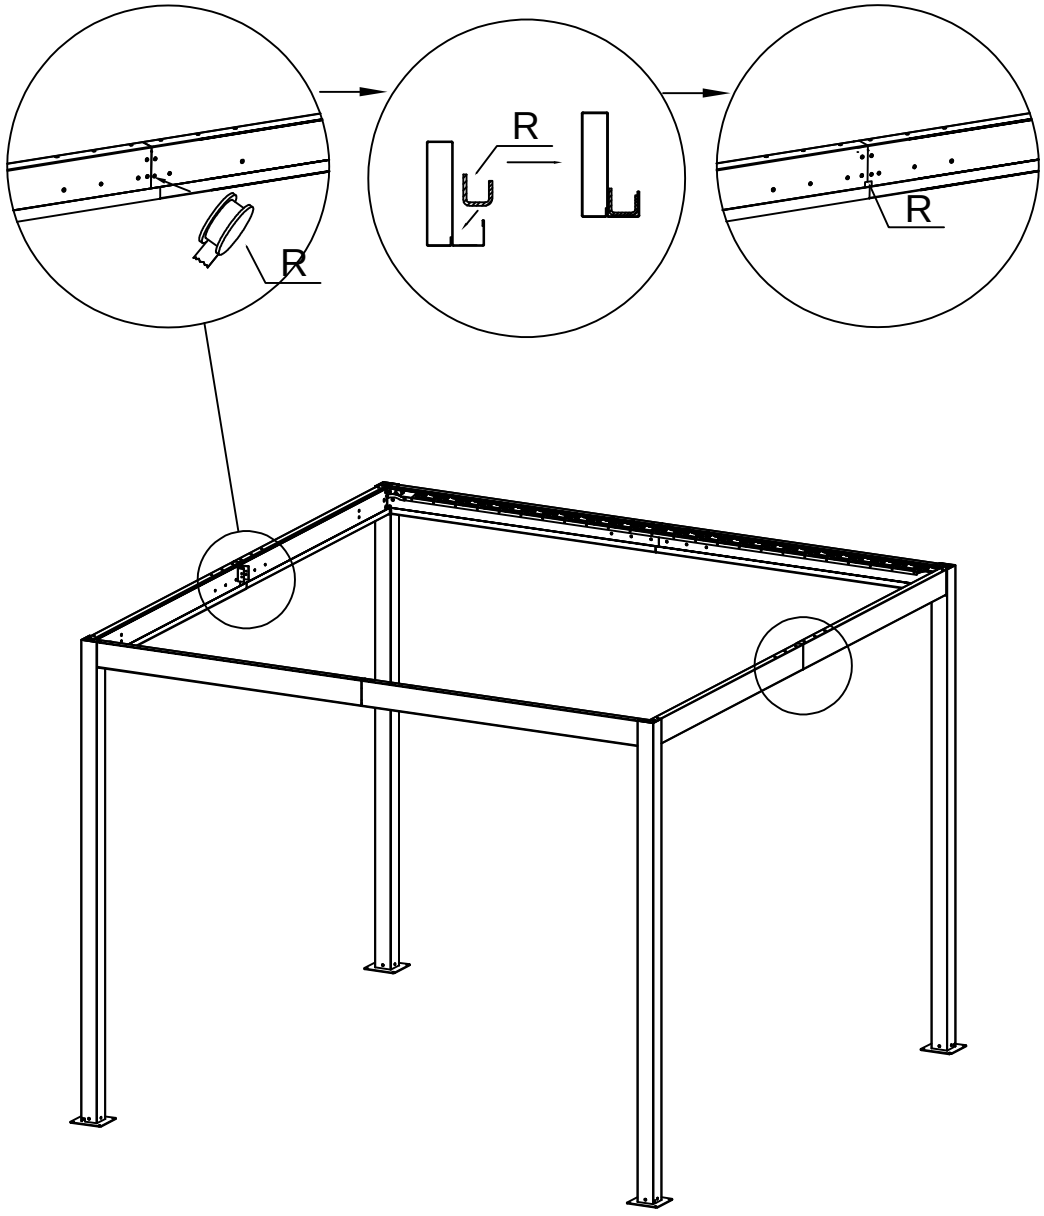


Tips：Apply waterproof tape along the groove seams of the cross beam connectors to prevent leaks, being careful not to cover the screw holes.


ASSEMBLY STEP 10




1# x8

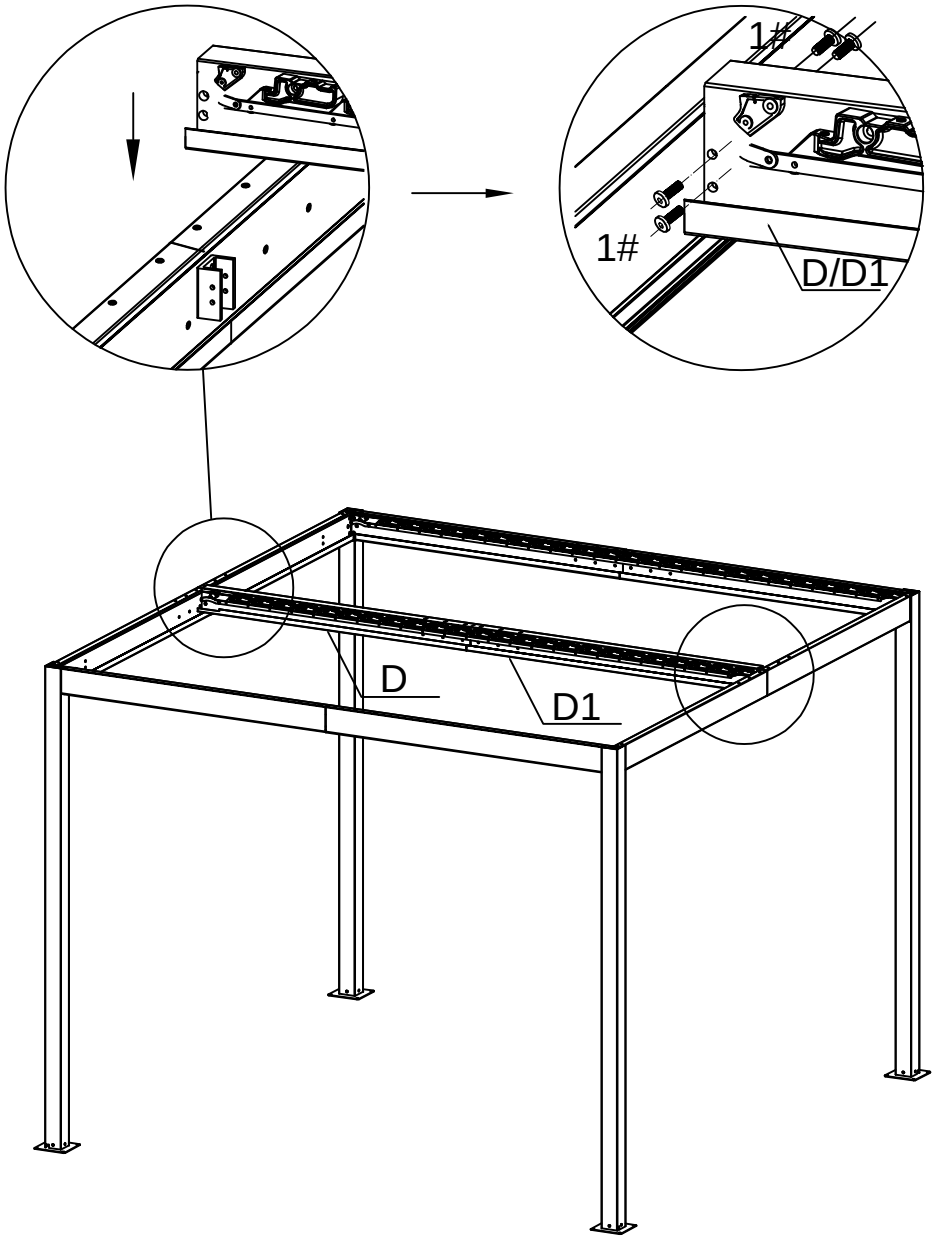

ASSEMBLY STEP 11




R x1

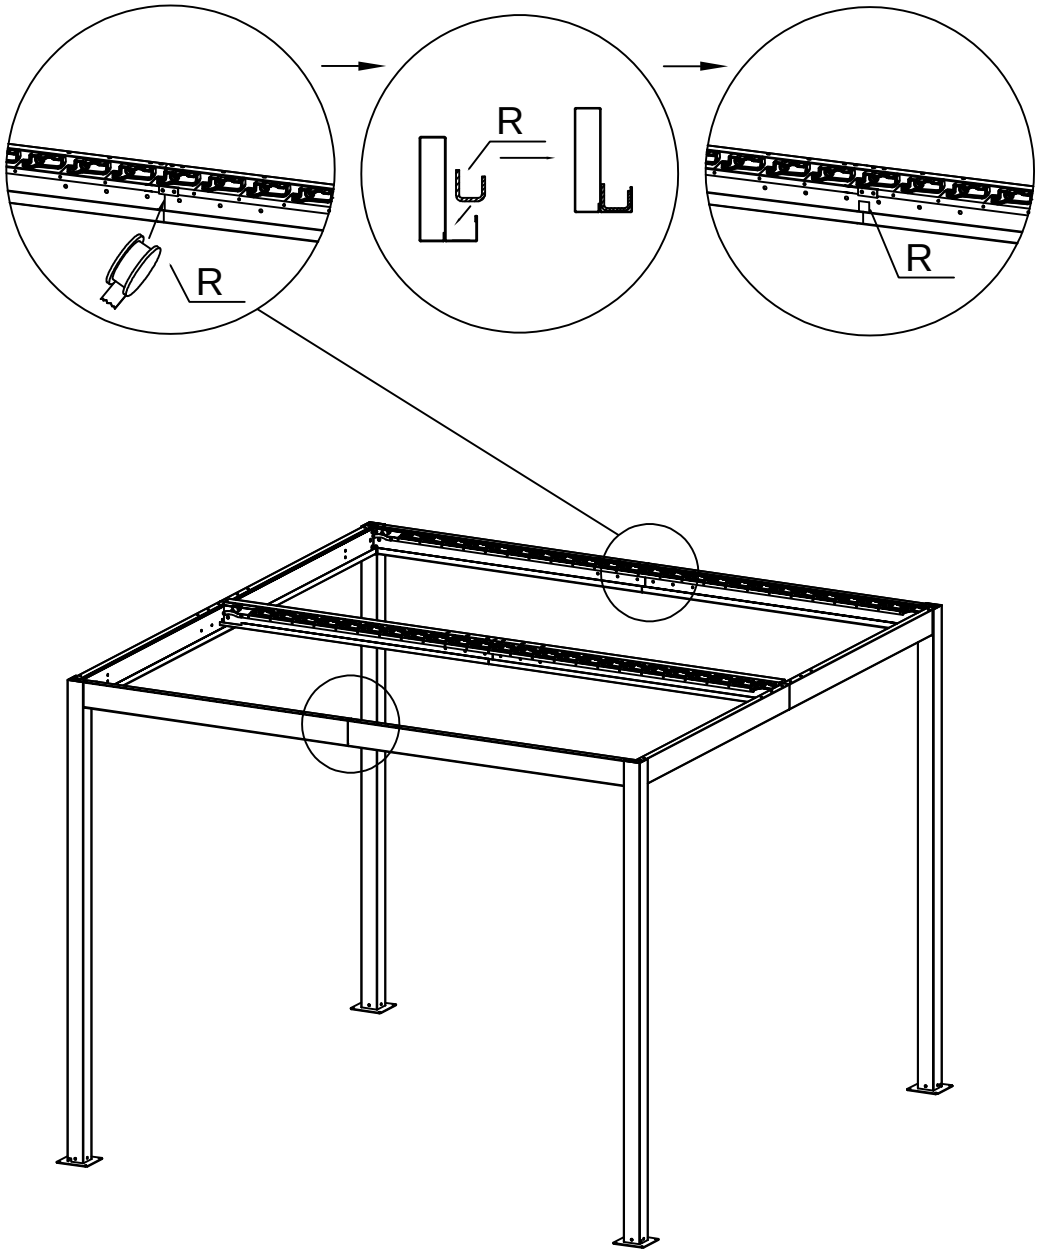

Tips：Apply waterproof tape along the groove seams of the cross beam connectors to prevent leaks, being careful not to cover the screw holes.

ASSEMBLY STEP 12




R x1



R1 x1



R2 x1

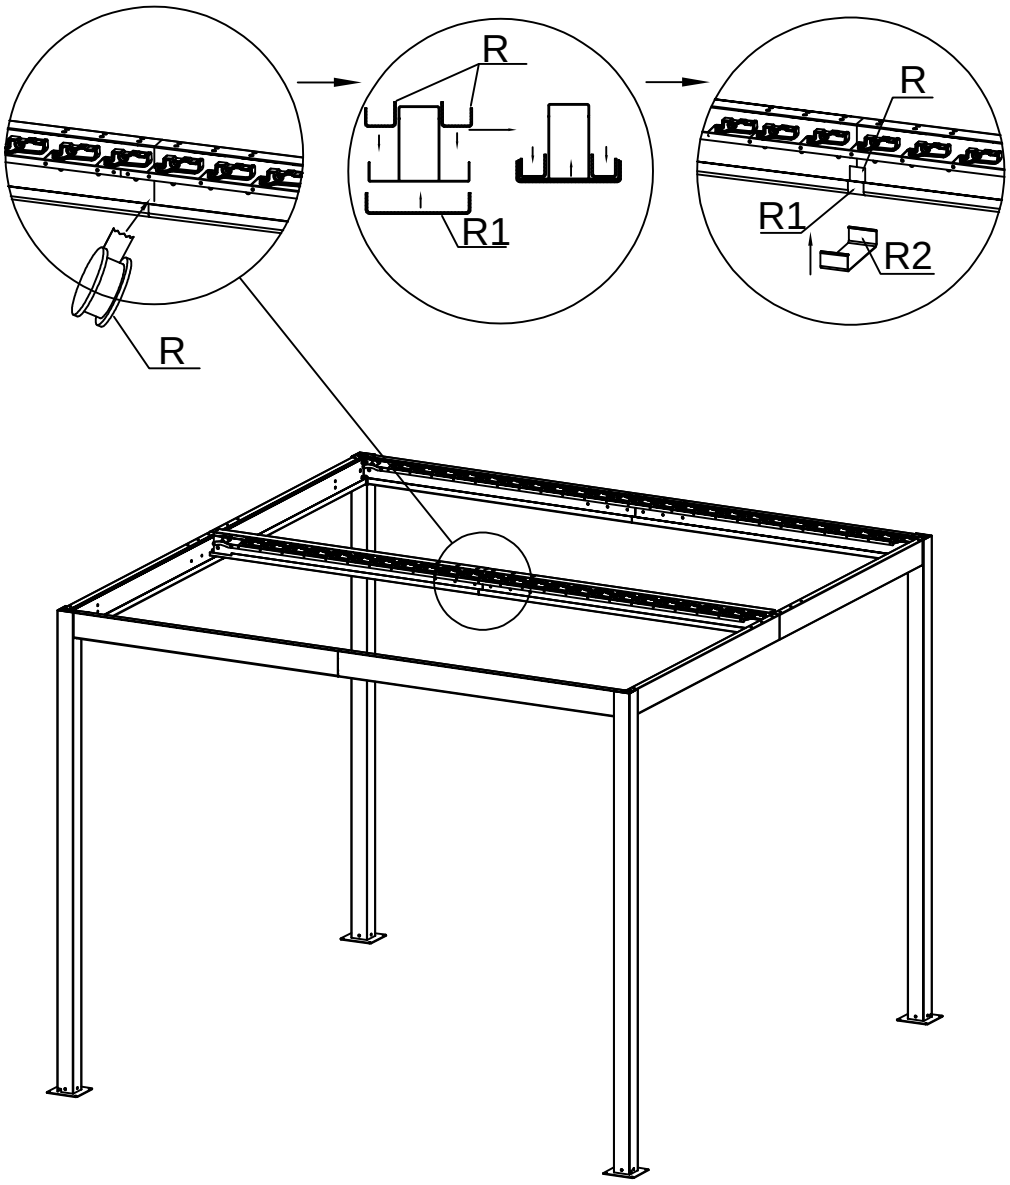

Tips：Apply waterproof tape along the groove seams of the cross beam connectors to prevent leaks, being careful not to cover the screw holes.


ASSEMBLY STEP 13



N1 x4




1# x24

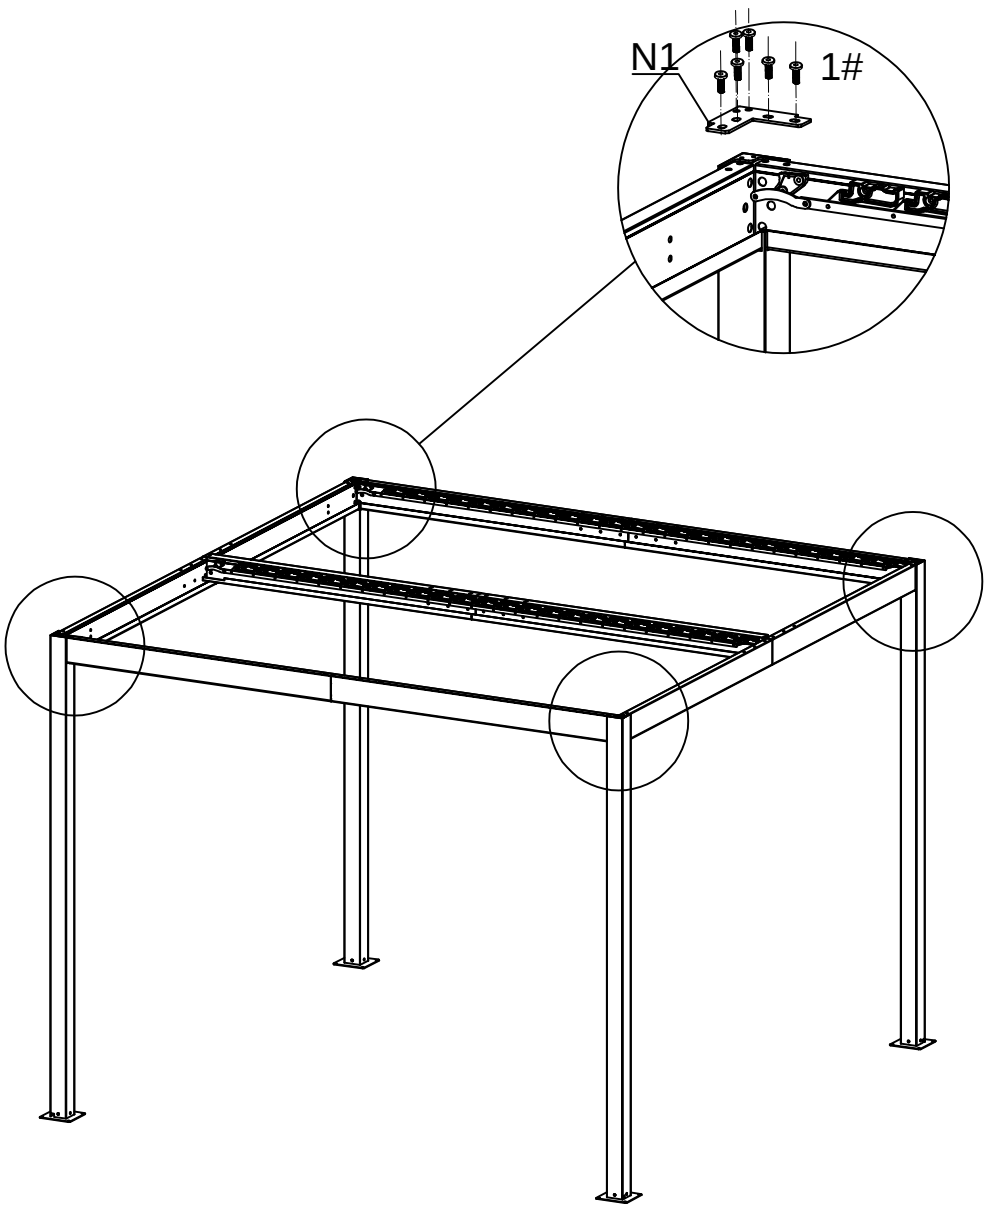

ASSEMBLY STEP 14



M1 x2


M2 x2



K x2



L x2


I-1 x2


I-2 x2


5# x4



6# x4

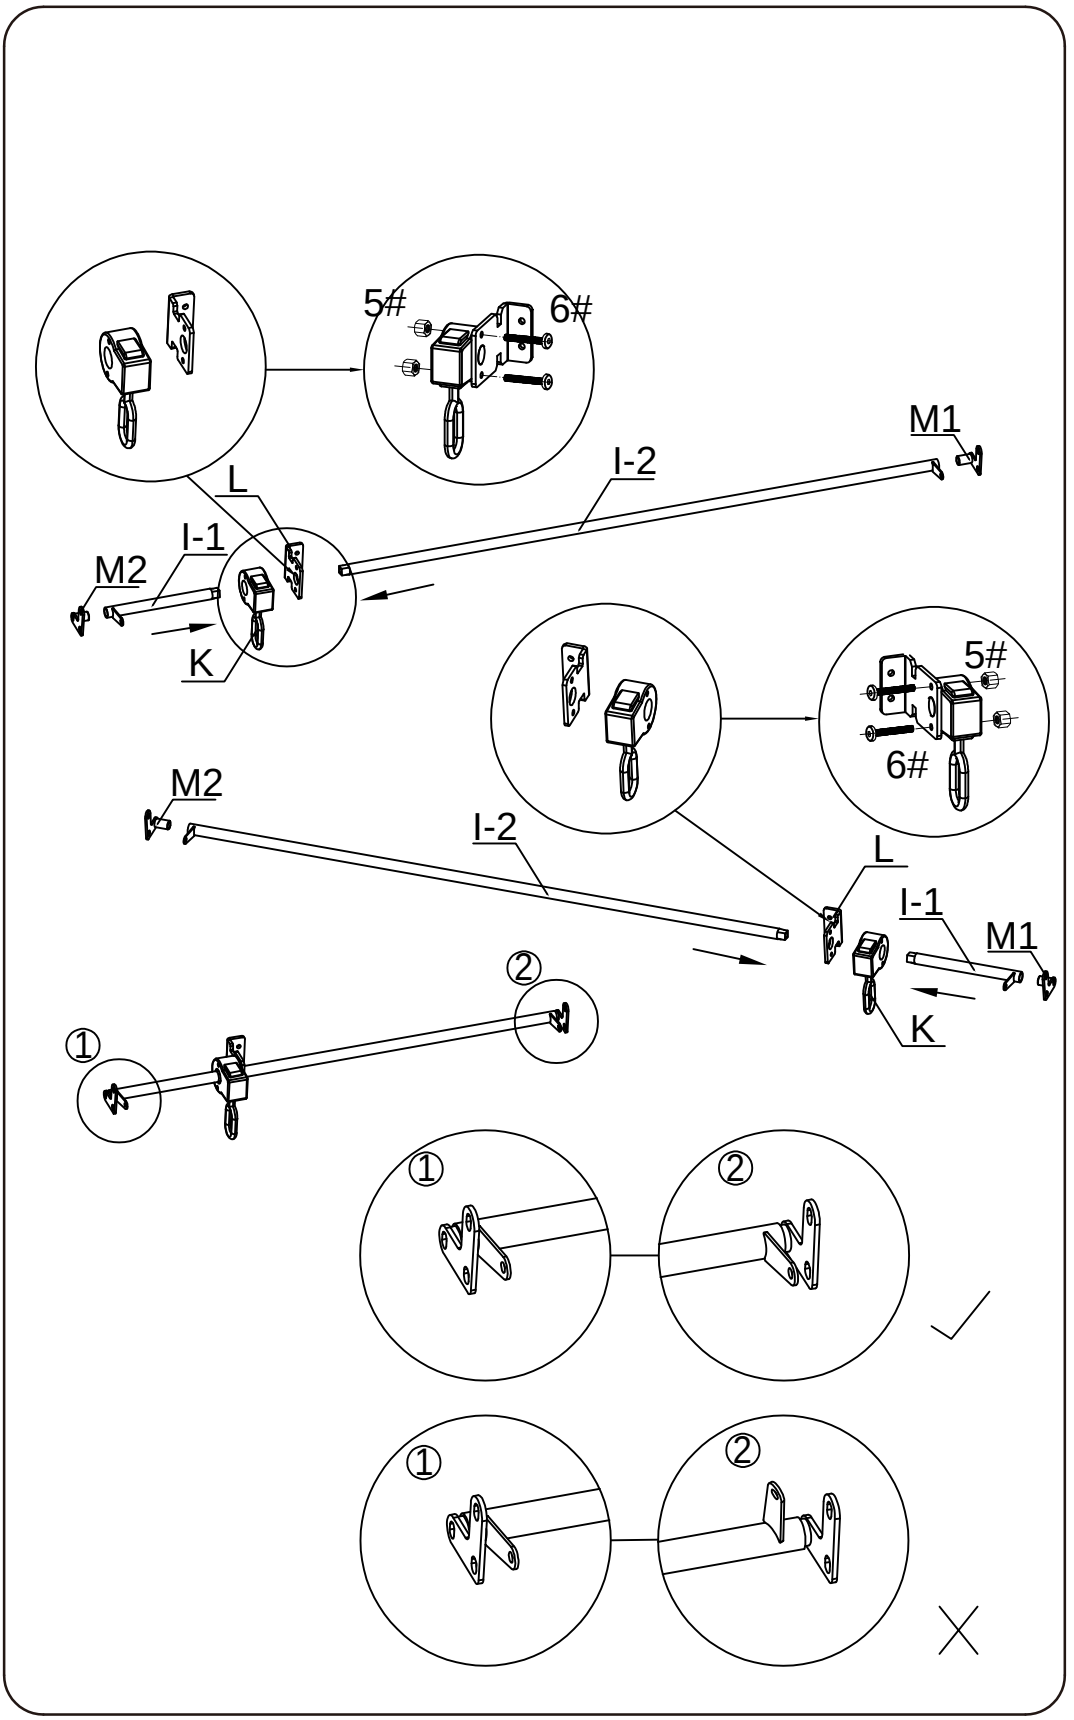

ASSEMBLY STEP 15



1# x4

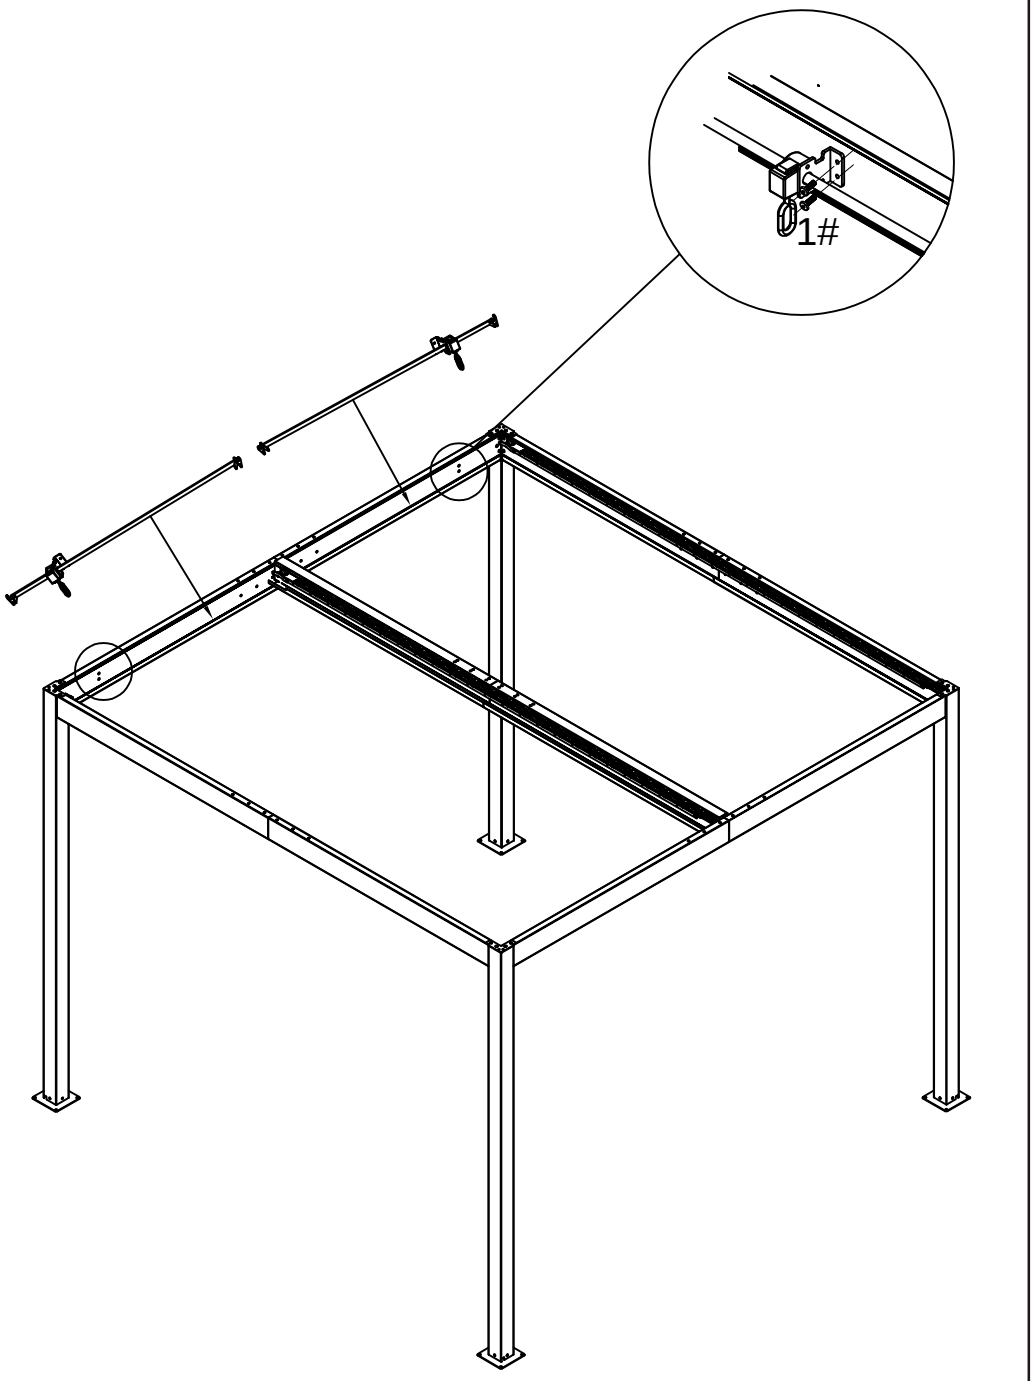


ASSEMBLY STEP 16



7# x12




5# x4

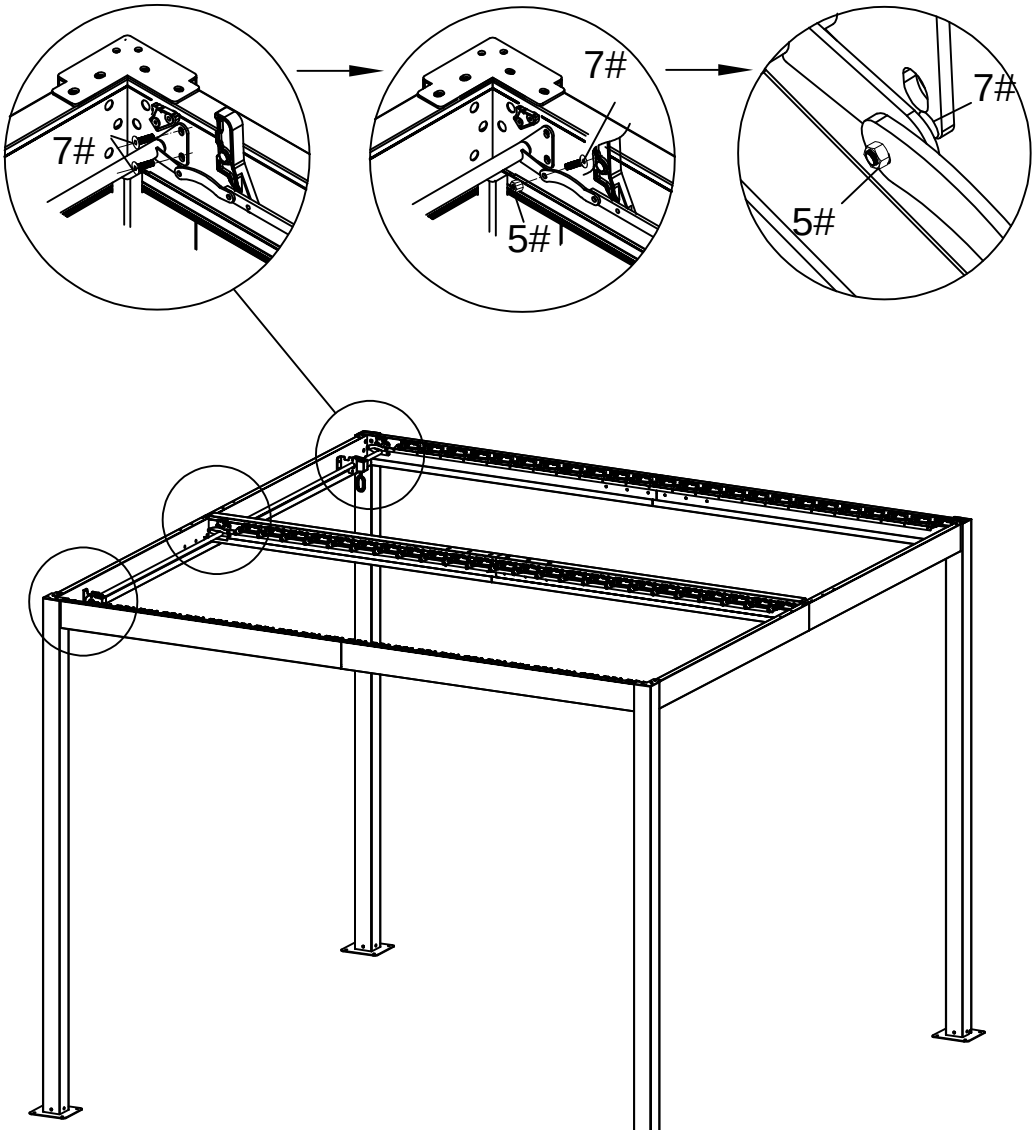

ASSEMBLY STEP 17




H x48



J x1



3# x192

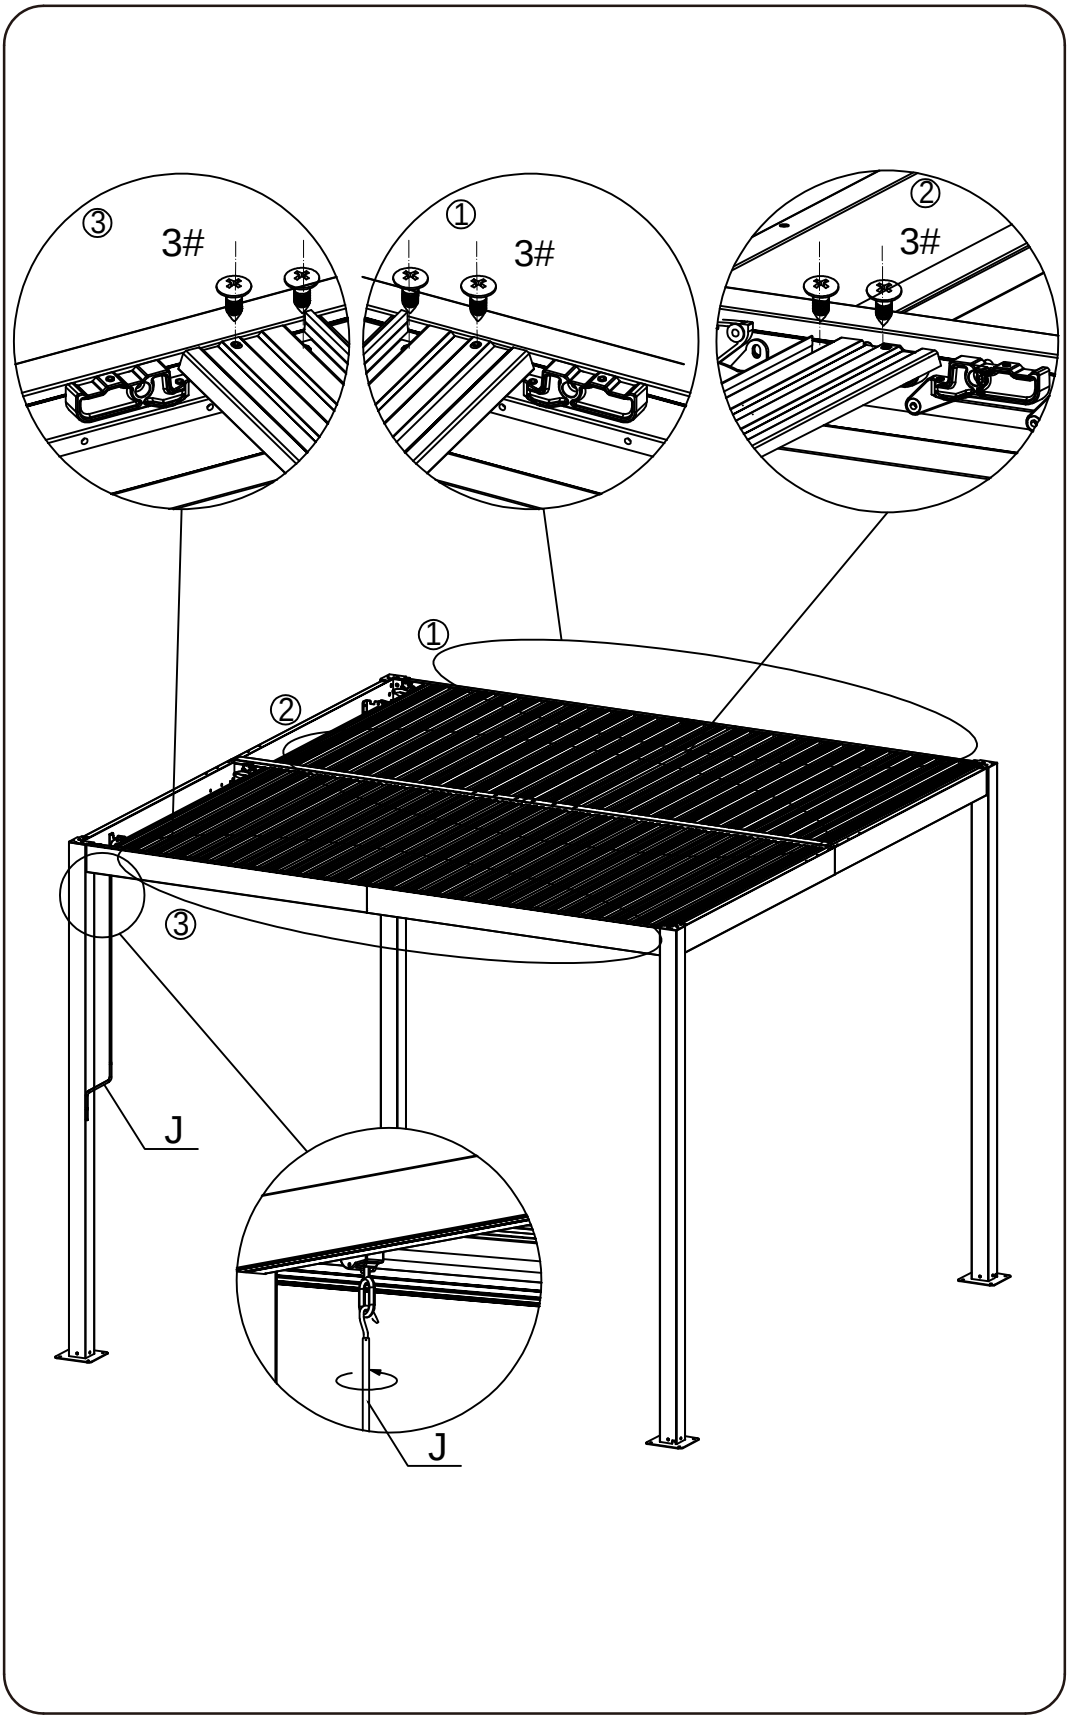


ASSEMBLY STEP 18

G x2

4# x4

9# x16

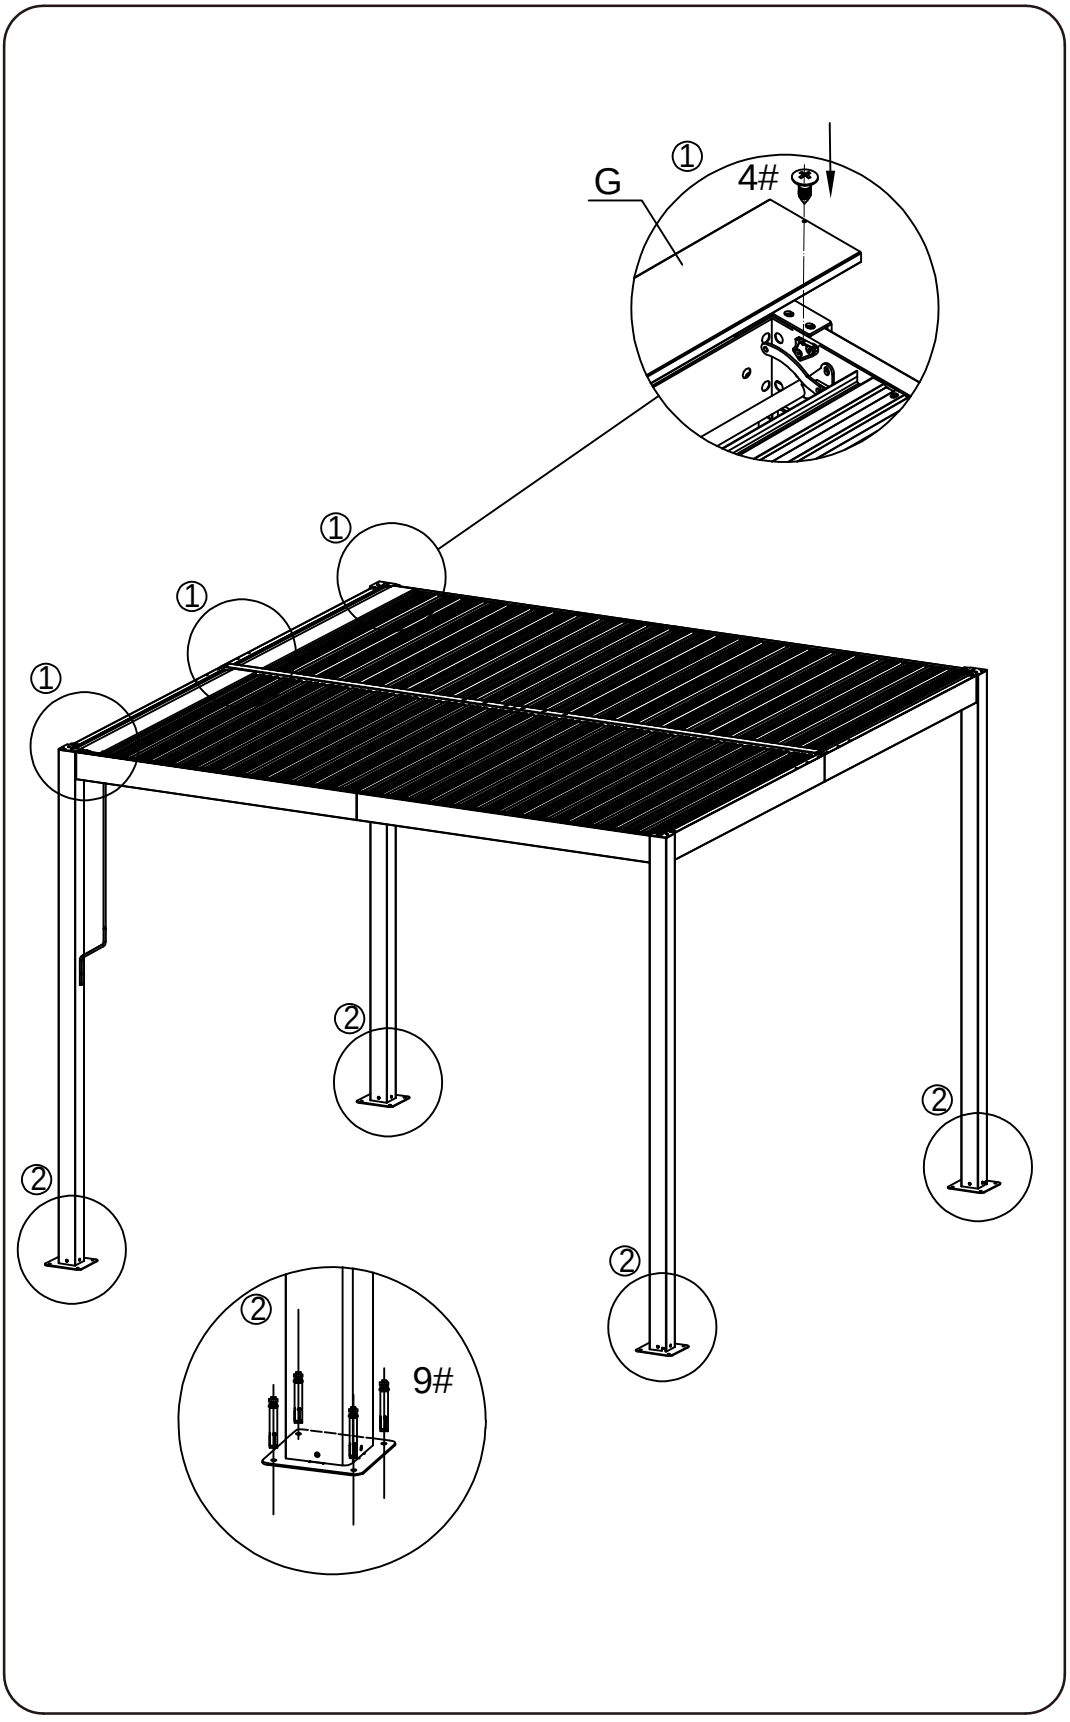

INSTALLATION SUCCESSFUL

