HEADRAIL

ASSEMBLY INSTRUCTIONS

Before assembling your platform head rail, please read through these instructions carefully and familiarize yourself with the different parts.

Instructions apply for all bed sizes
> Twin > Full > Queen > King

PARTS LIST

1	MID RAIL	1 PC
2	TALL LEG	2 PCS
3	SHORT LEG	2 PCS

HARDWARE

- (a) Wooden dowels- 4 pcs
  Spare - 1 pc
- (b) JCB M6 X 100mm(4 3/4") - 2 pcs
  Spare - 1 pc
- (c) Barrel nut - 2 pcs
  Spare - 1 pc
- (d) Wood button - 2 pcs
  Spare - 1 pc
- (e) Allen wrench - 1pc
  Spare - 1pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1

Insert wooden dowels (a) to the locator holes on (1). Both end.

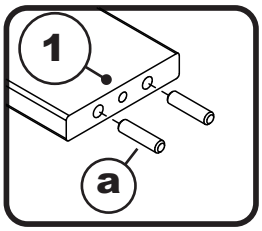

Step 2

Attach the legs (2) or (3) to mid rail (1), using JCB M6 X 100mm (b) and barrel nut (c). Tighten with the Allen wrench (e). Cover holes with wood button (d).

Use the **tall legs** when using only mattress, use the **short legs** if using both box spring and mattress.

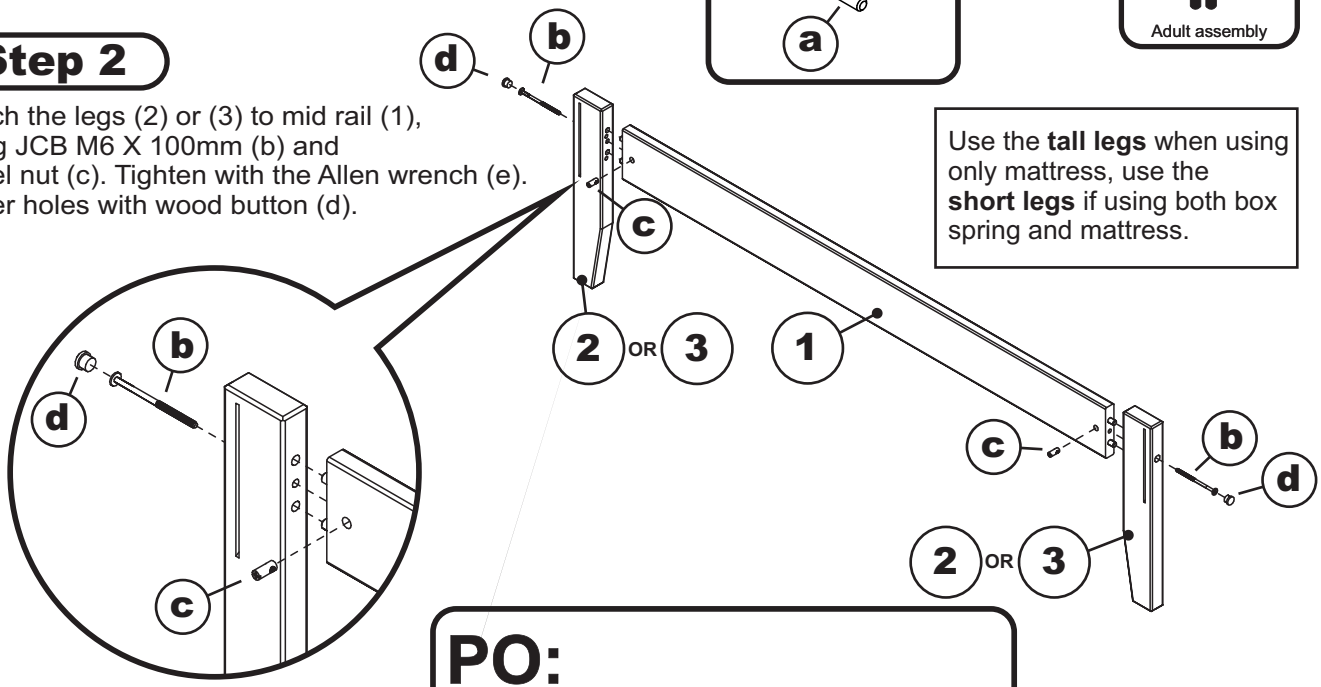

PO:

Step 3

Attach bed frame assemblies to the head rail assemblies, using bed hook as shown below. For Slat kit assembly, follow assembly instructions included with slat kit.

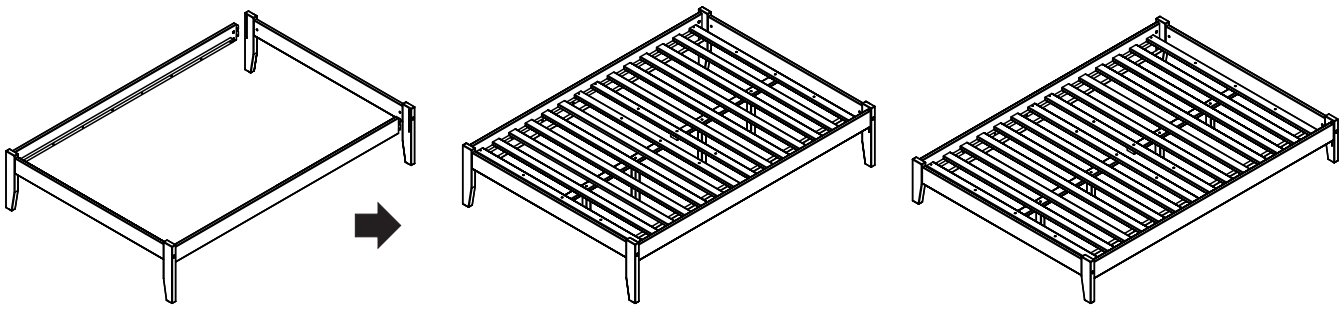

PLATFORM BED - TALL HEIGHT

TRADITIONAL BED - LOW HEIGHT