
Headboard Assembly Instructions

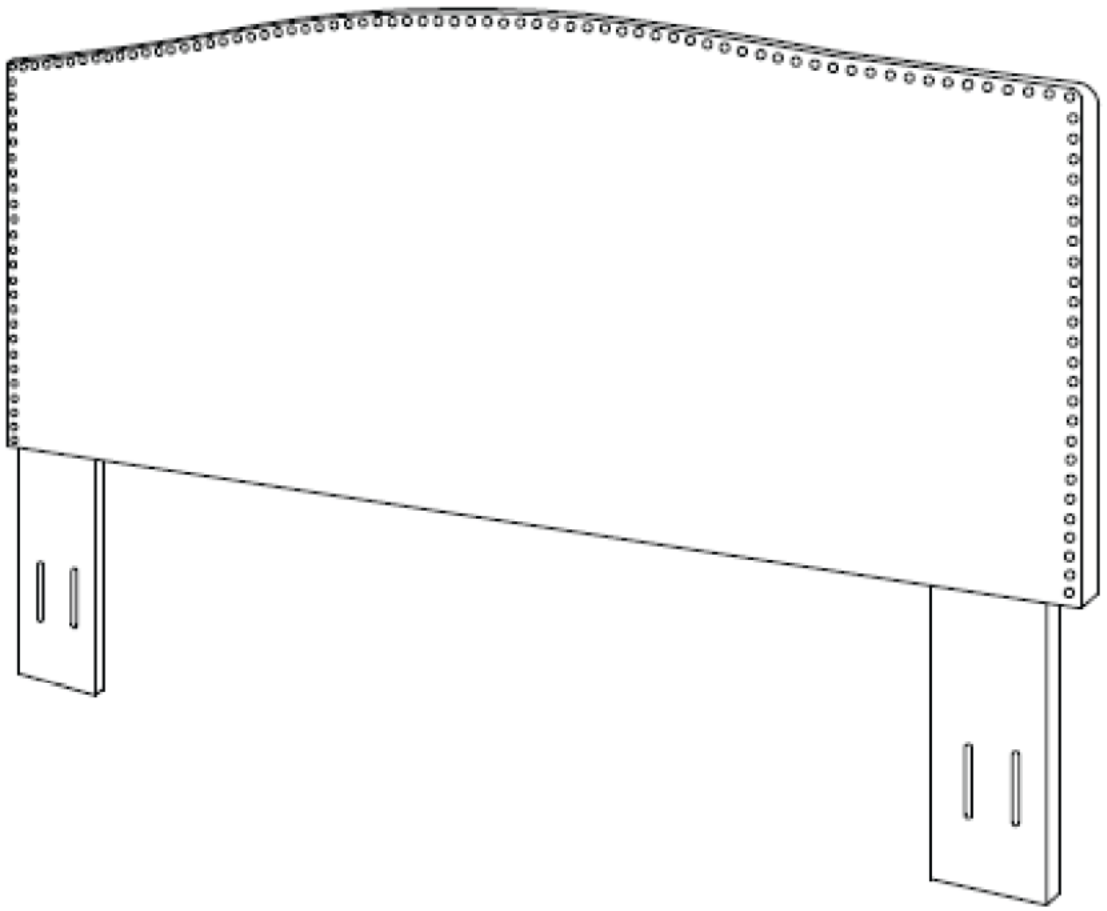


Headboard Assembly Instructions

NOTE: Place all parts on a clean and smooth surface (rug, carpet) to avoid the parts from being scratched.

NOTE: Follow assembly instructions step by step.

NOTE: Do not completely tighten screws until the headboard is fully set up.

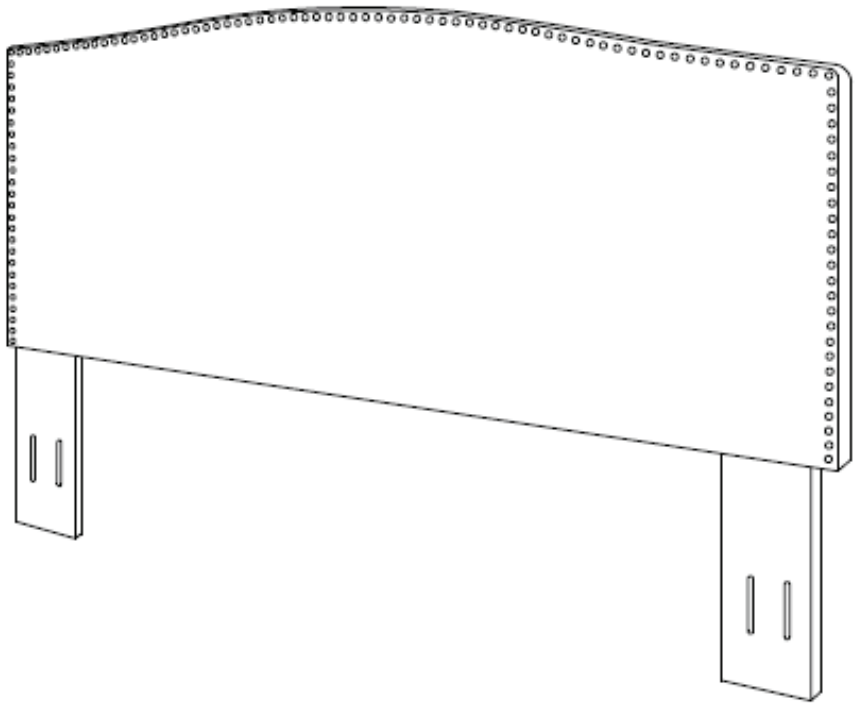


Headboard Assembly Instructions

PART LIST:



① Headboard 1pc

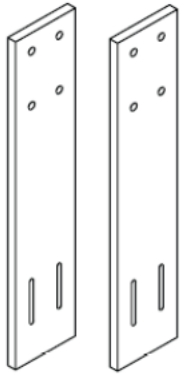


② Legs 2pcs

HARDWARE LIST:

LABEL	PICTURE	DESCRIPTION	QTY	LABEL	PICTURE	DESCRIPTION	QTY
A		2” BOLT M8	**8**	C		M8 FLAT WASHER	**16**
B		M8 ALLEN WRENCH	**1**	D		M8 LOCK WASHER	**8**
E		HEX NUT (to attach headboard to metal bed frame)	**4**	F		2-1/2” BOLT M8 (to attach headboard to metal bed frame)	**4**


Headboard Assembly Instructions

STEP 1: Remove legs and hardware from behind the headboard.
(See below diagram)

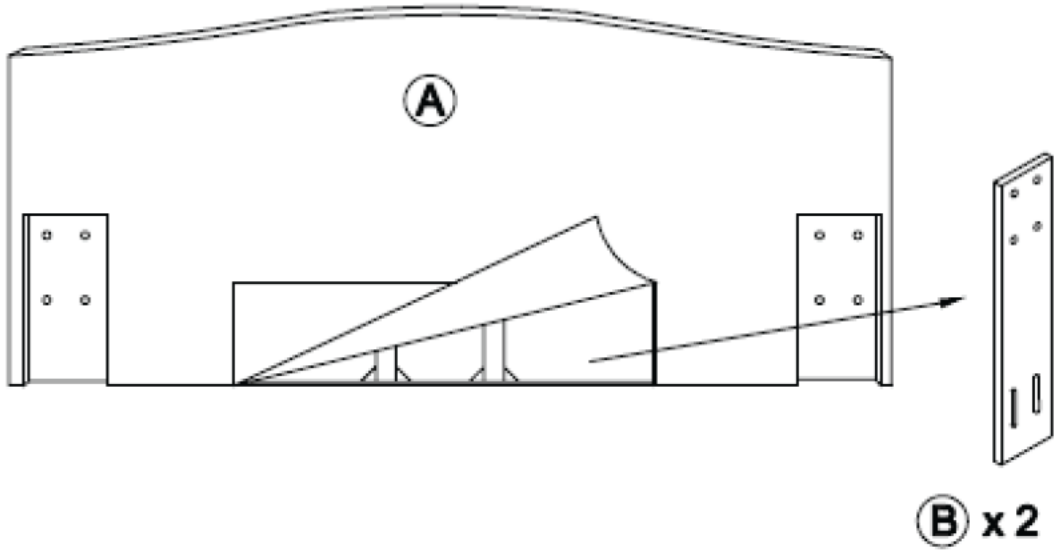

Headboard Assembly Instructions

STEP 2: Using the provided hardware, attach legs to headboard.
(See below diagram)
Use the different hole patterns to customize the
desired height of the headboard.

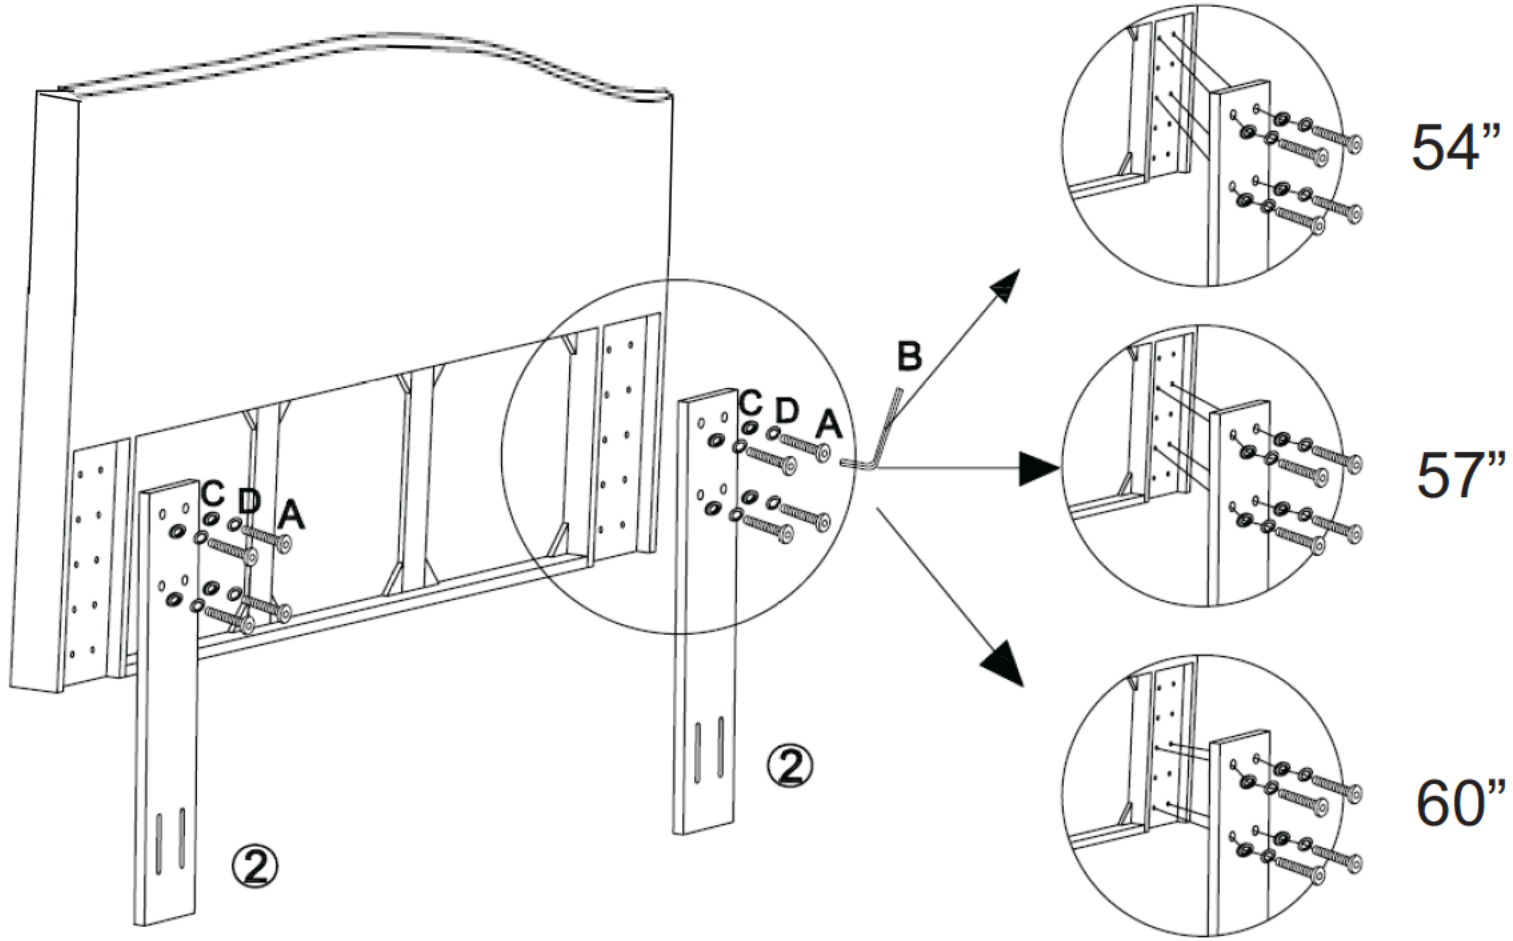

Headboard Assembly Instructions

STEP 3: After all bolts have been tightened, re-apply backing.

STEP 4: After headboard is fully assembled, align slots at the bottom of headboard legs with attachment holes on metal bedframe, use the provided 2-1/2” bolts, washers & hex nuts to attach headboard to metal bed frame.

