Label	Picture	Description
A	x1	Chair Back Rest
B	x1	Chair Seat
C1	Left x1	Chair Arm Rest
C2	Right x1	Chair Arm Rest
D1	Left x1	Connecting Bracket
D2	Right x1	Connecting Bracket
E	x1	Chair Base
F	x1	Five Star Metal Leg
G	x1	Ottoman Cushion
H	x1	Ottoman Base
I	x1	Four Star Metal Leg
J	x1	Hexagon Wrench
K	x1	Transparent Gasket
L	x1	Chair Washer Φ40*2
M	x9	Hexagonal Screw M8*16
N	x12	Hexagonal Screw M6*25
O	x9	Chair Washer Φ16*1.5
P	x1	Spare part: Four Star Foot Nail
Q	x1	Spare part: Five Star Foot Nail

1 Five star metal leg central hole along with chair base rod, press and rotate it down to the end until tighten.

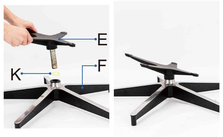

2 Put the Five star metal leg upside down, then fix the rod with screw and washer provided

3 Install the chair base component to chair seat, please notice to put rubber pad before fixing the chair base under the chair seat.

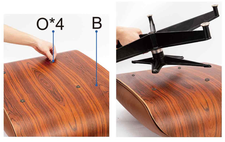

4 Fix chair base and chair seat with screws.

5 Install the chair back rest and seat with the connecting bracket, pre install the left and right brackets, and be careful not to fix the screws

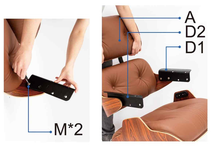

6 After adjusting the angle of the chair, fix the connecting back rest

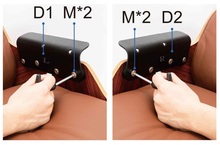

7 Install arm rest on both side

8 Tighten the arm rest with screws underneath.

9 For the installation of the ottoman, use rubber pads to protect the bottom plate.

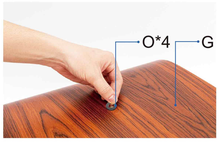

10 Refer to step 3 and 4 installation for ottoman base component setup.

11 Insert the four-star leg down into the rod till tighten,Refer step 4 in stallation for ottoman setup.

12 Follow the above steps and you will get a perfect recliner.

Note

Mid Century Lounge Chair

Installation Guide