


ASSEMBLY INSTRUCTIONS
BATH VANITY-CABINET

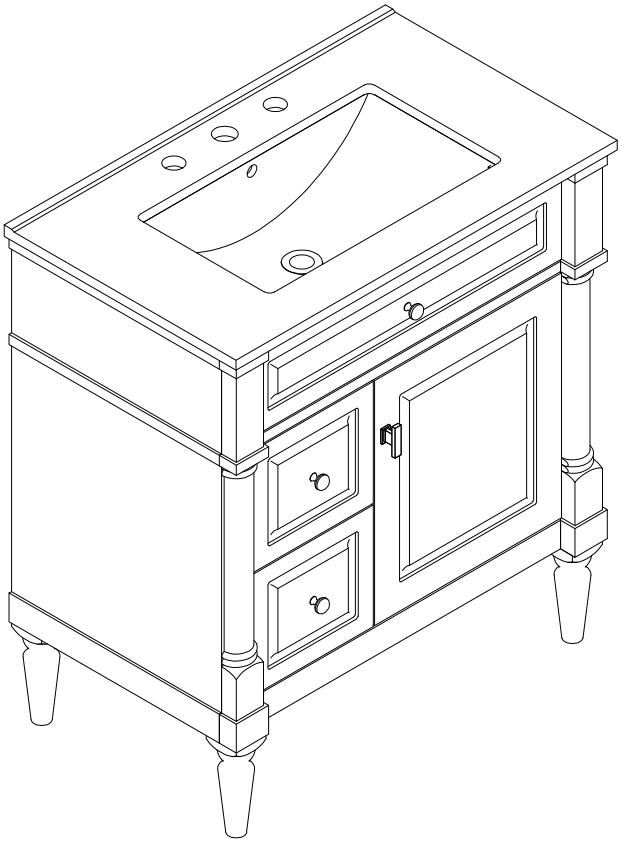


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.
Compare with the parts list to be sure all parts are present.
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED

***Use of a power tool to assemble this product will invalidate any claim and damage this product, making it unsafe!!!**
*** Please assemble on a clean soft surface to avoid damage.**

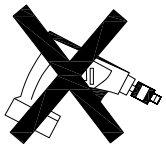

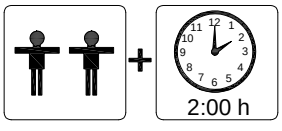


Tools Required



IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

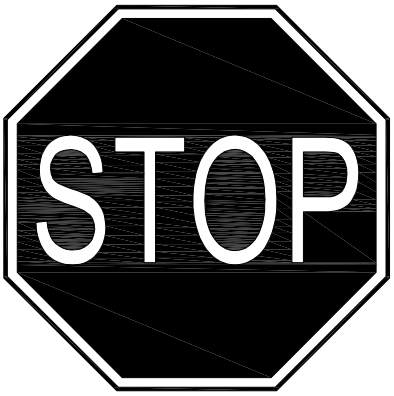

Please do not return this product to the retailer!!
We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

Important-Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


• We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.

• Please do not over tighten screws or bolts until the assembly is completed.

• Keep children and animal away from the work area, small parts could choke if swallowed.

• Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.

Cam Lock Assembly Instructions

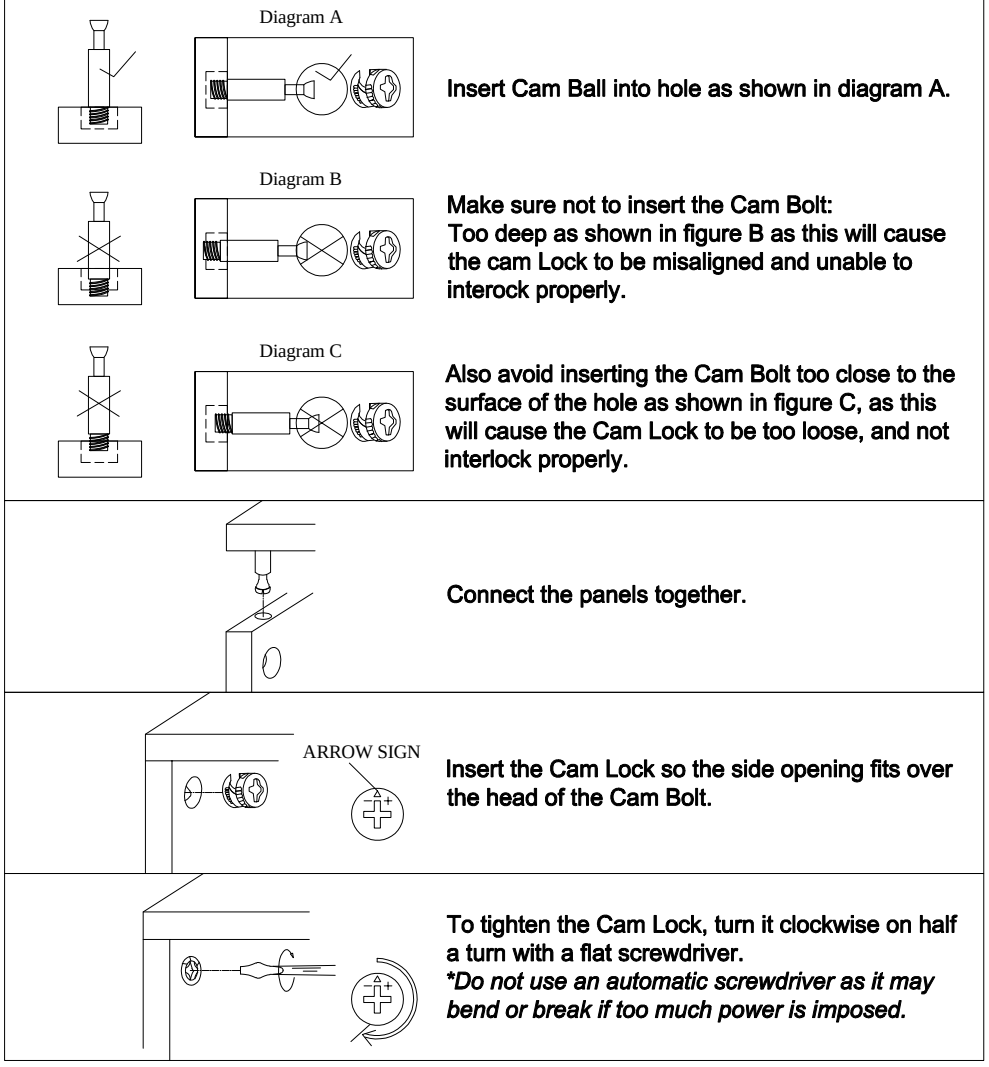

Insert Cam Ball into hole as shown in diagram A.

Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the cam Lock to be misaligned and unable to interock properly.


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

Connect the panels together.




















Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.











To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

Detail View









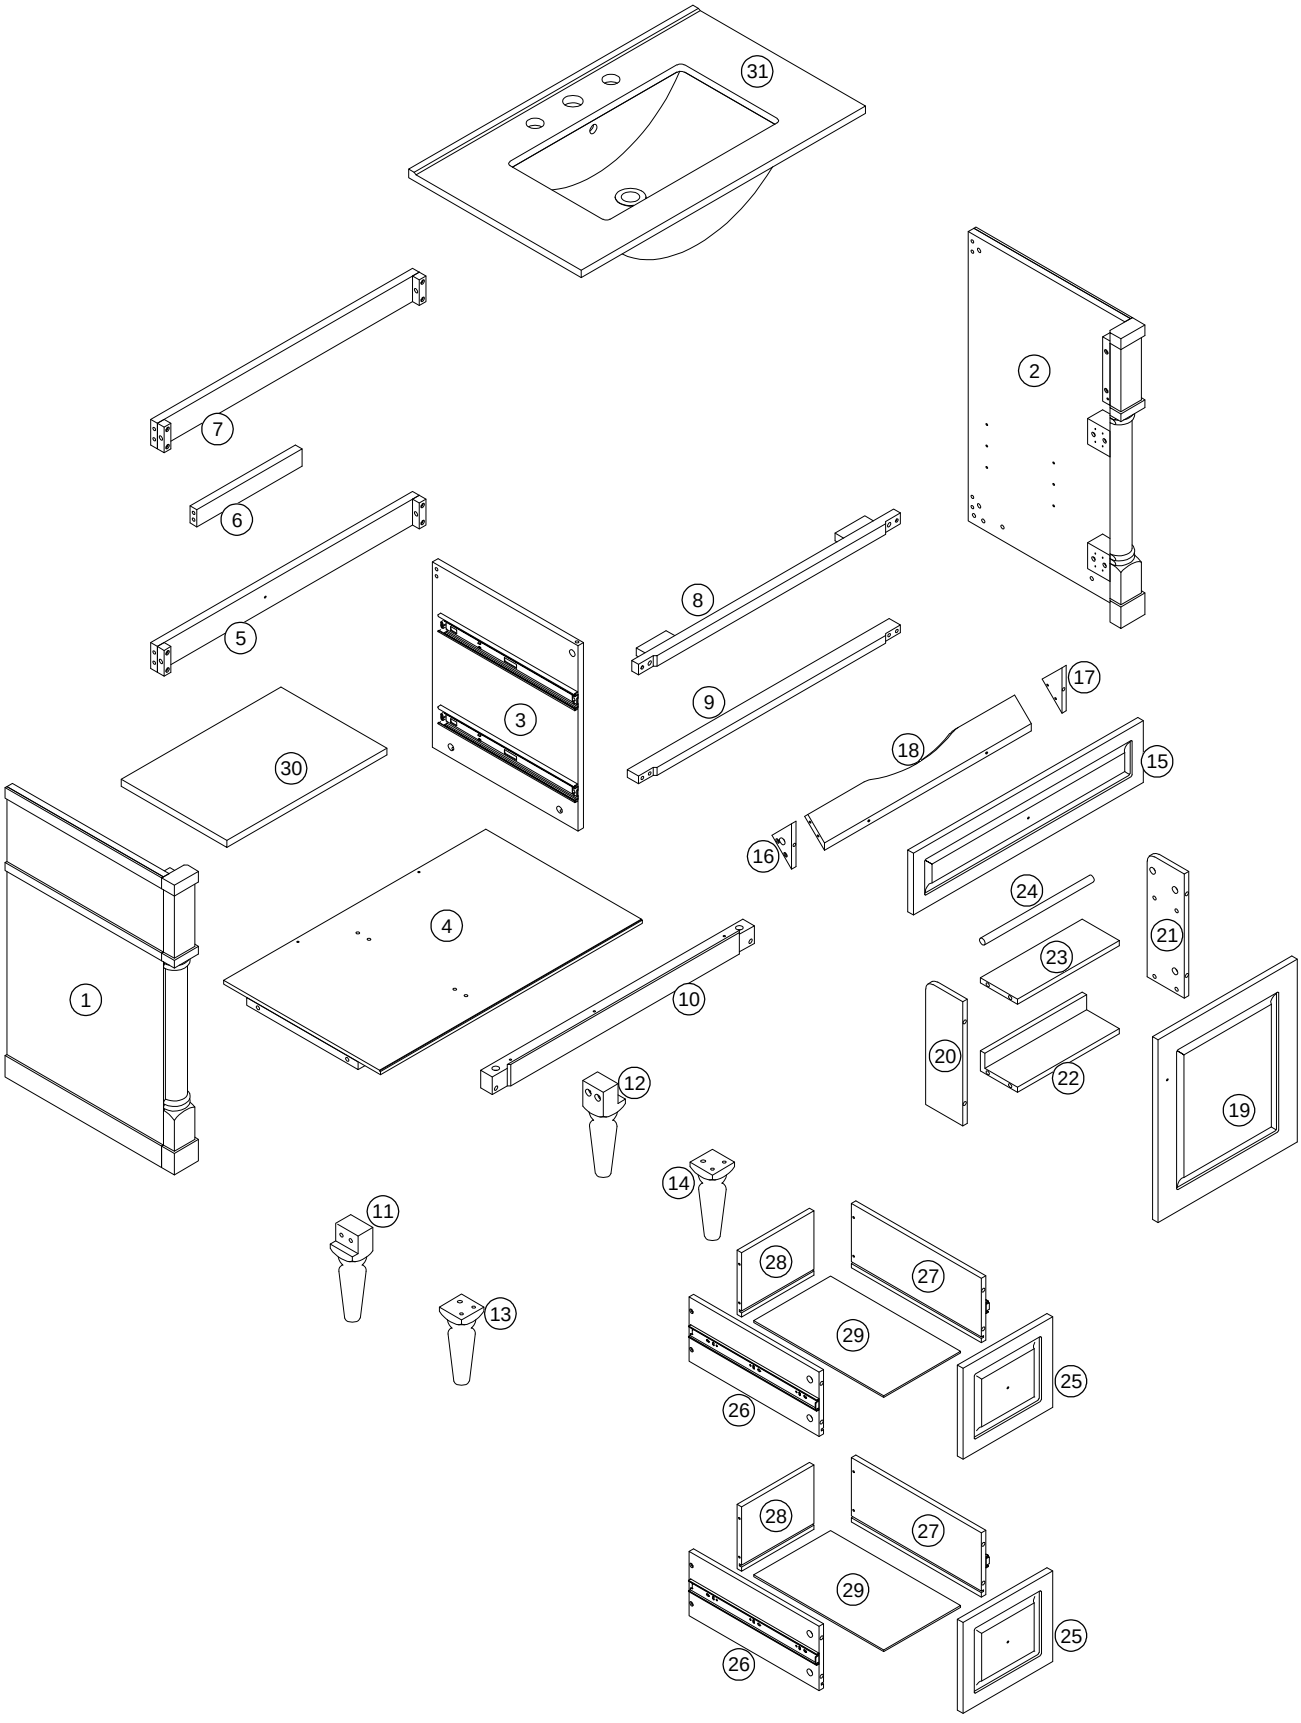


Identifying the Hardware-Identify the hardware using the illustrations below.

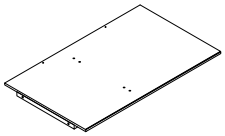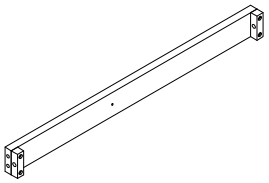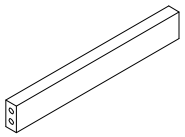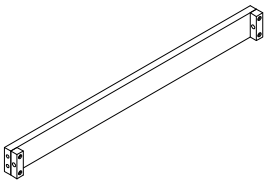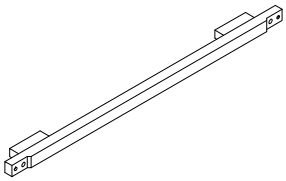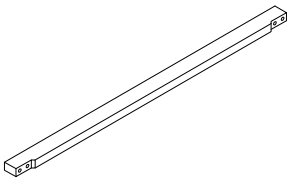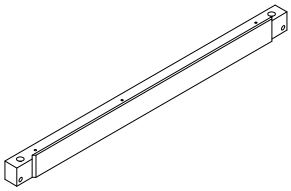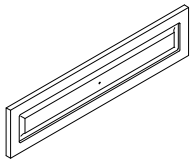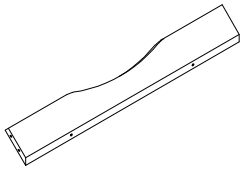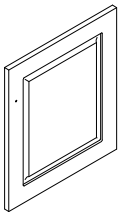
1  Side Frame (L) - 1pc	2  Side Frame (R) - 1pc	3  Vertical Panel - 1pc
4  Bottom Panel - 1pc	5  Bottom Rear Crossbar - 1pc	6  Middle Rear Crossbar - 1pc
7  Top Rear Crossbar - 1pc	8  Top Front Crossbar - 1pc	9  Middle Front Crossbar - 1pc
10  Bottom Front Crossbar - 1pc	11  Back Left Leg - 1pc	12  Back Right Leg - 1pc
13  Font Left Leg - 1pc	14  Font Right Leg - 1pc	15  Drawer Side Panel (R) - 1pc
16  Drawer Side Panel (L) - 1pc	17  Drawer Side Panel (R) - 1pc	18  Drawer Back Panel - 1pc
19  Drawer Back Panel - 1pc	20  Door Side Panel (L) - 1pc	21  Door Side Panel (R) - 1pc

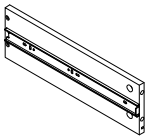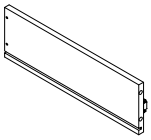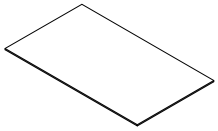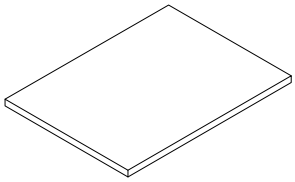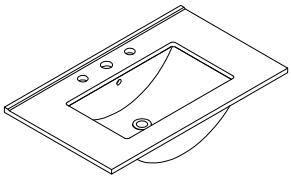
22  Door Bottom Panel - 1pc	23  Door Mid Panel - 1pc	24  Round Bar - 1pc
25  Drawer Face - 2pcs	26  Drawer Side Panel (L) - 2pcs	27  Drawer Side Panel (R) - 2pcs
28  Drawer Back Panel - 2pcs	29  Drawer Bottom Panel - 2pcs	30  Adjustable Shelf - 1pc
31  Sink - 1pc		


Hardware Lists

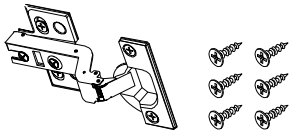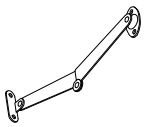
A  M6x30mm	B  Ø1/4 ''x13x1mm	C  Ø6*32mm
Hex-Head bolt (18pcs)+1pc	Washer (8pcs)+1pc	Three in on bolts (27pcs)+1pc
D  Ø14.5*9.5mm	E  45*12*1mm 45*17*14mm	F  Ø3.5x12mm
Three in one locks (28pcs)	Plastic Door Magnet (3 set)	Flat head screw (18pcs)+1Pc
G  Ø8x30mm	H 	I  K4mm
Wood dowel (20pcs)+1	Pin shelf (4pcs)+1Pc	Allen key (2pcs)
J  Ø3.5x25mm	K 	L 
Round head screw (6pcs)+1pc	Handle (3pcs)	Damping hinge (2 sets)
M  Ø3.5x15mm	N 	O 
Round head screw (8pcs)+1pc	Left elbow hinge (1pc)	Rotary Hinge(1set)
P  Ø10x10mm	Q  M4x35mm	R  M4x22mm
Plastic Canopy (12pcs)+1pc	Round head screw (12psc)+1pc	Handle screw (4pcs)+1pc
S 	T  M6x50mm	U 
Handle (1pc)	Hex-Head bolt (2pcs)+1pc	Anti fall Hardware (2 sets)


STEP:1

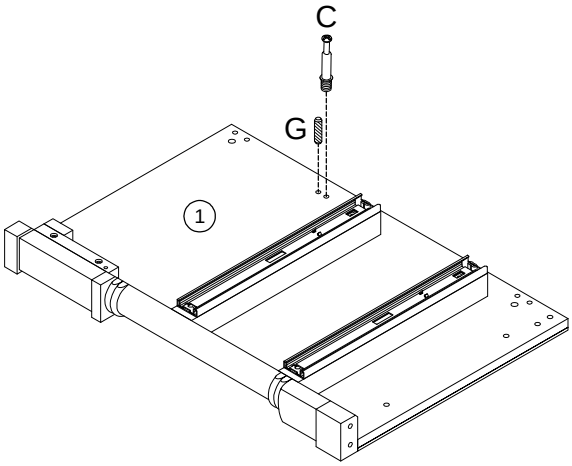


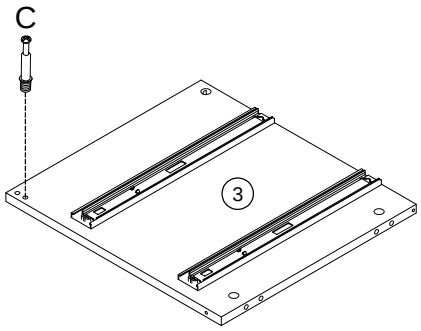


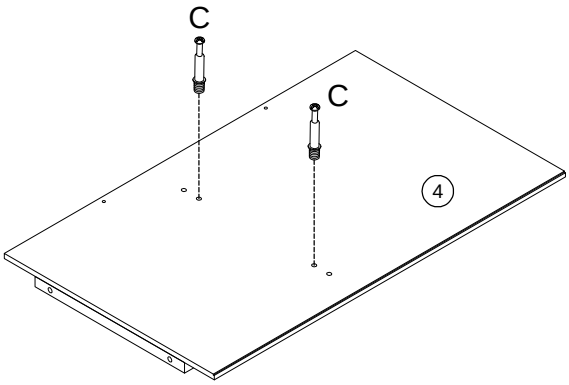


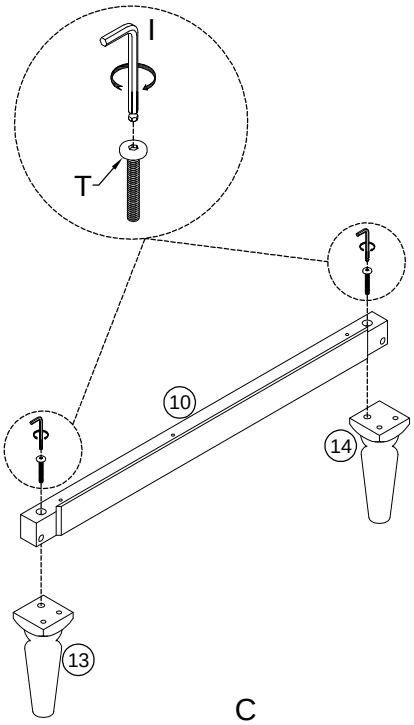

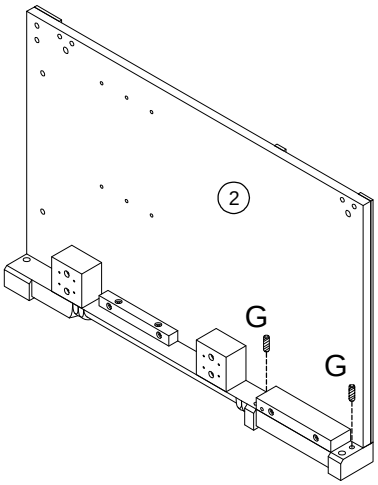

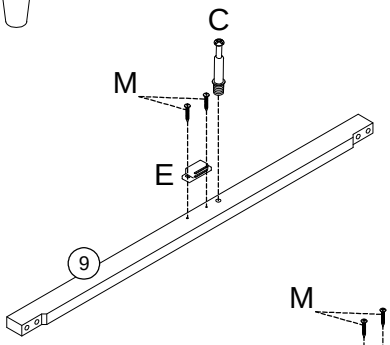

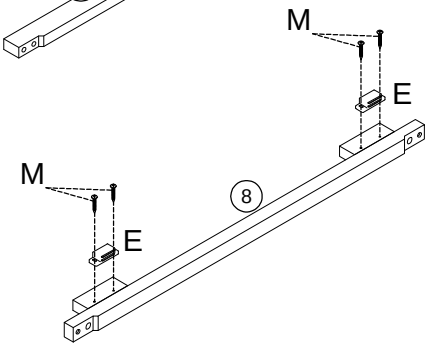

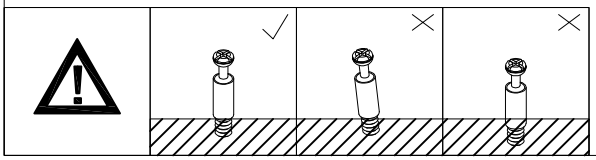

T




2pcs

C



5pcs

E



3pcs

M




6pcs

G




3pcs


STEP:2

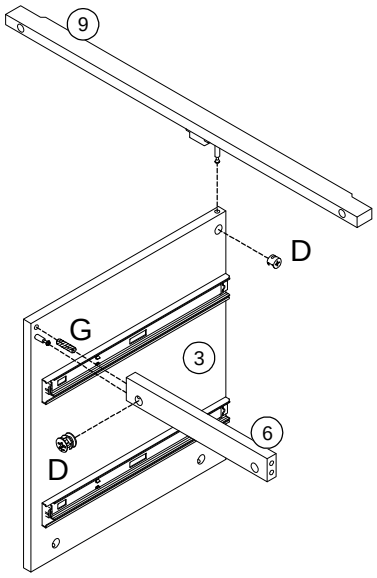

D	G
	
2pcs	1pc

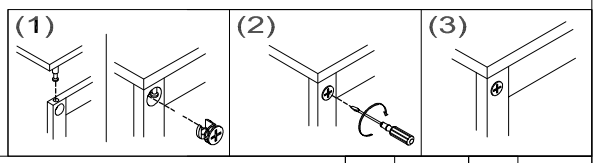



STEP:3

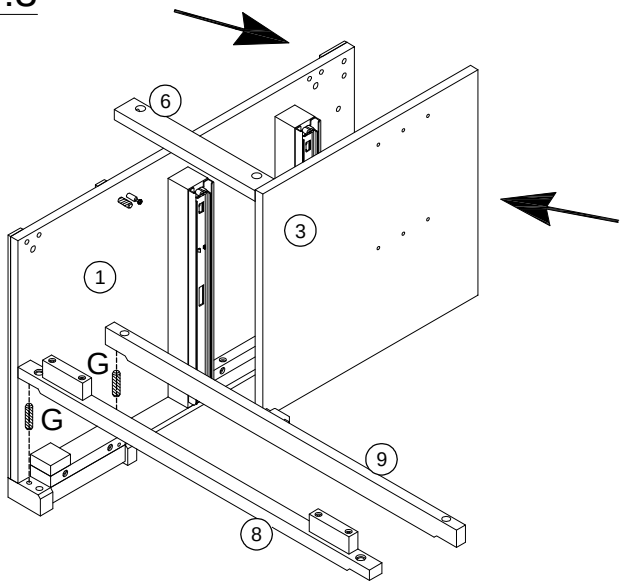


A	B
	
3pcs	1pc


D	G
	
1pc	4pcs

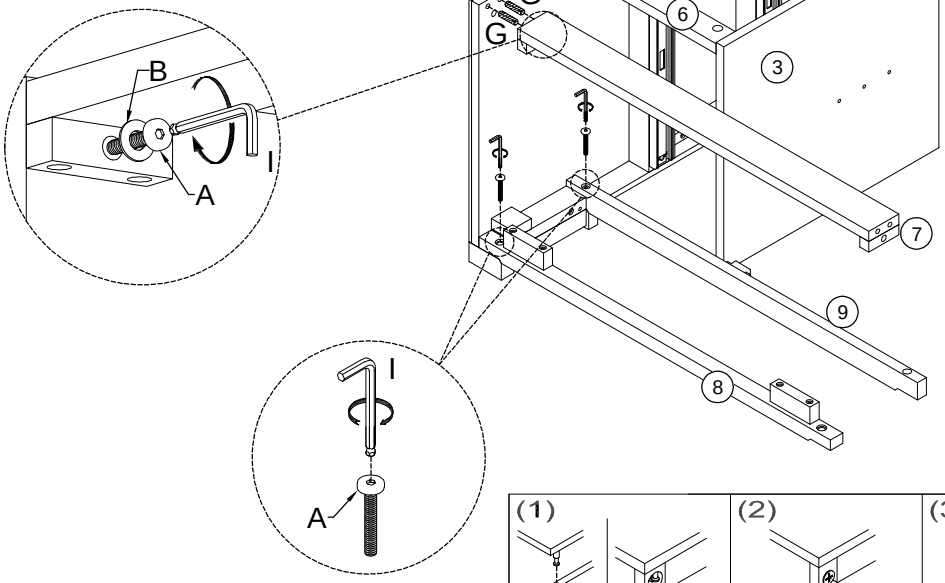



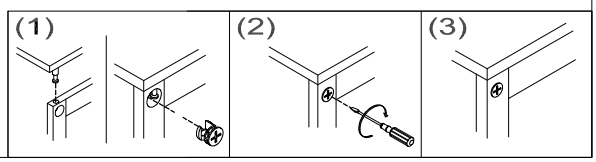


STEP:4

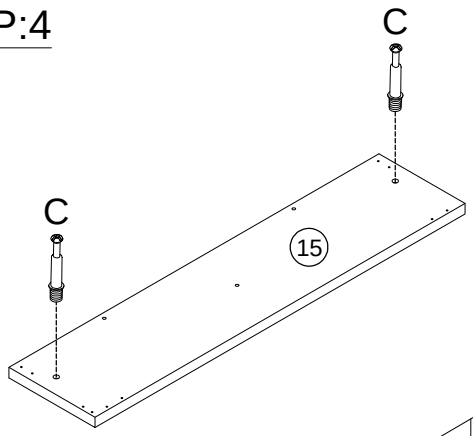


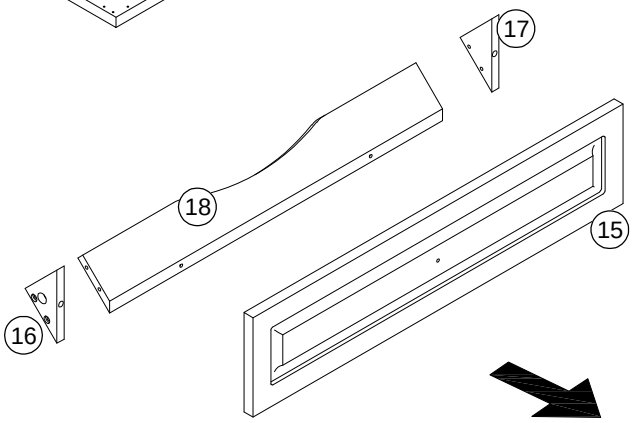



C	D	E	F
			
2pcs	2pcs	2pc	8pcs


K	O	R	P
			
1pc	1set	1pc	4pcs


Q	M
	
4pcs	2pcs

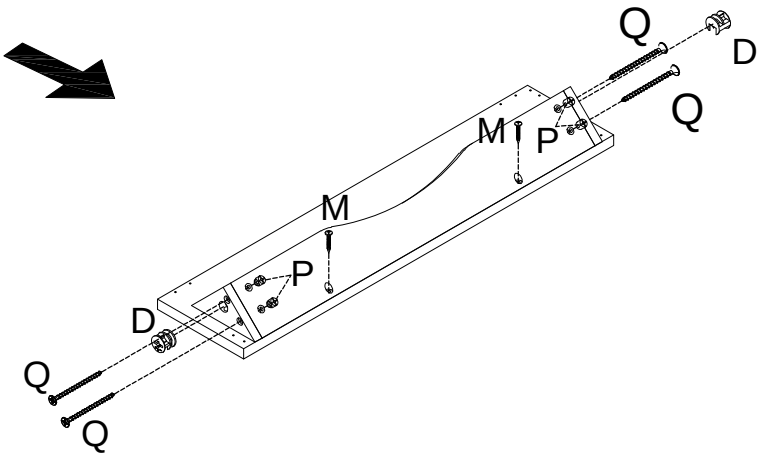

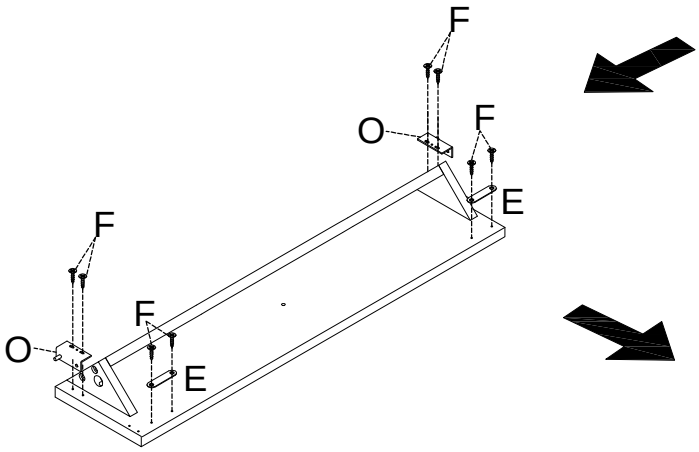

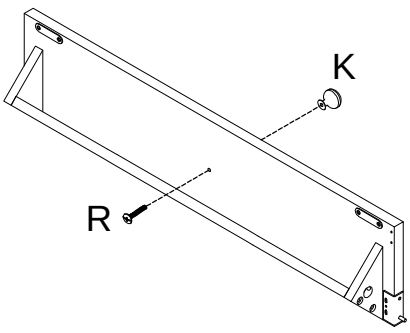


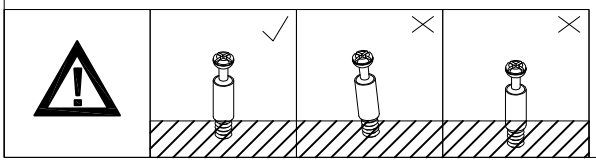


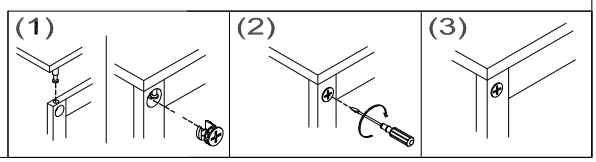


STEP:5

A	B
	
2pcs	2pcs
D	**G**
	
2pcs	2pcs

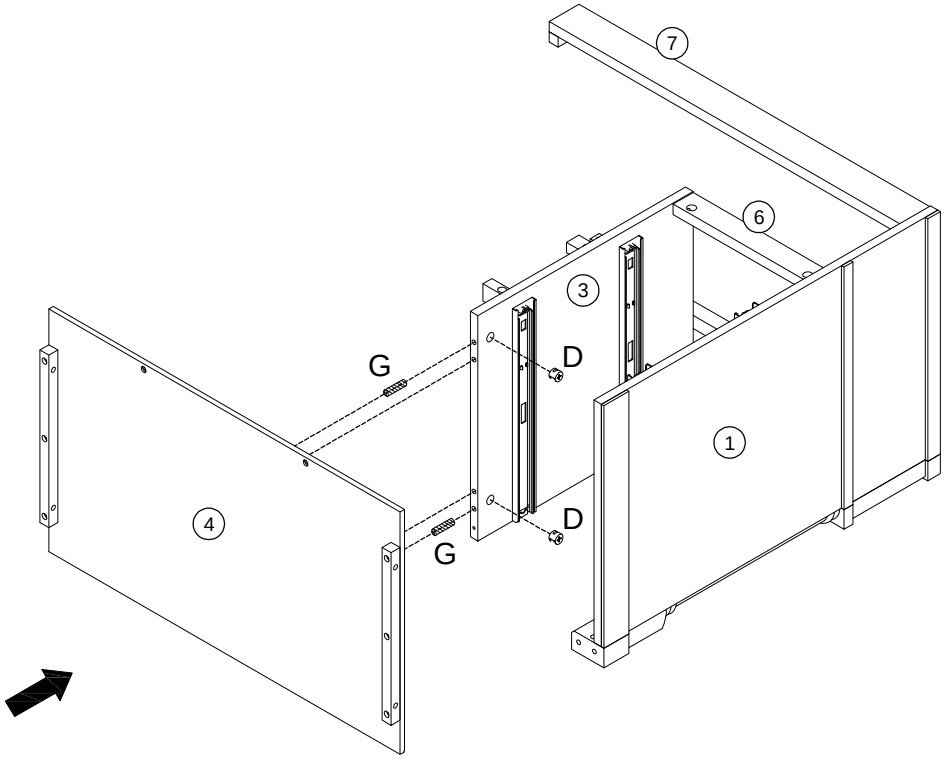


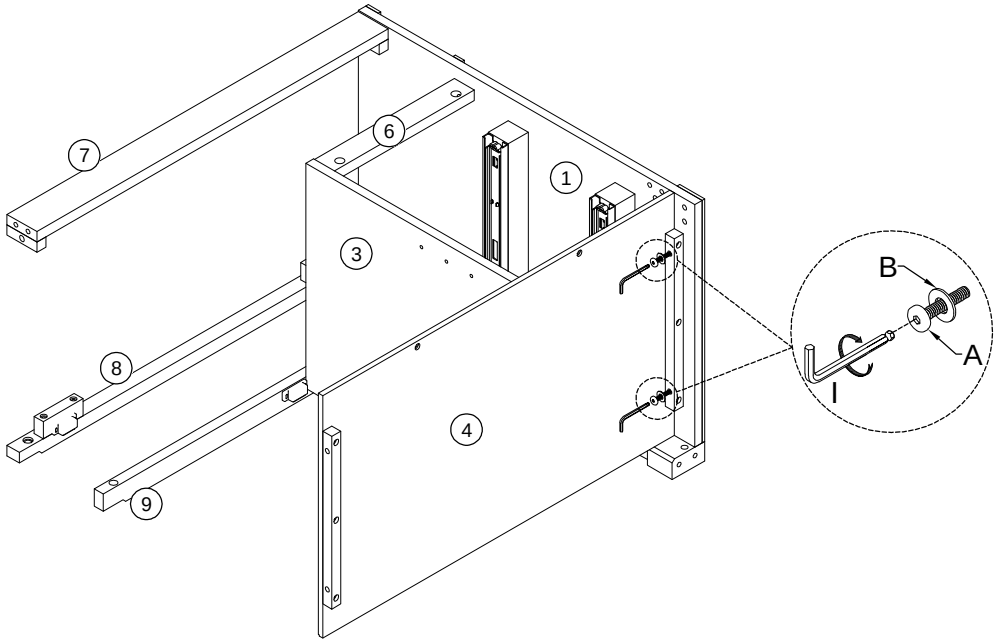


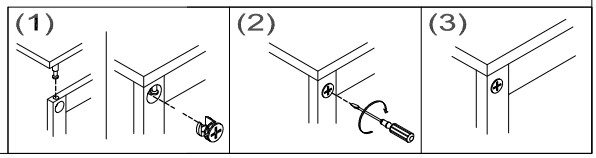


STEP:6


A	B
	
1pc	1pc

G	J
	
2pcs	3pcs

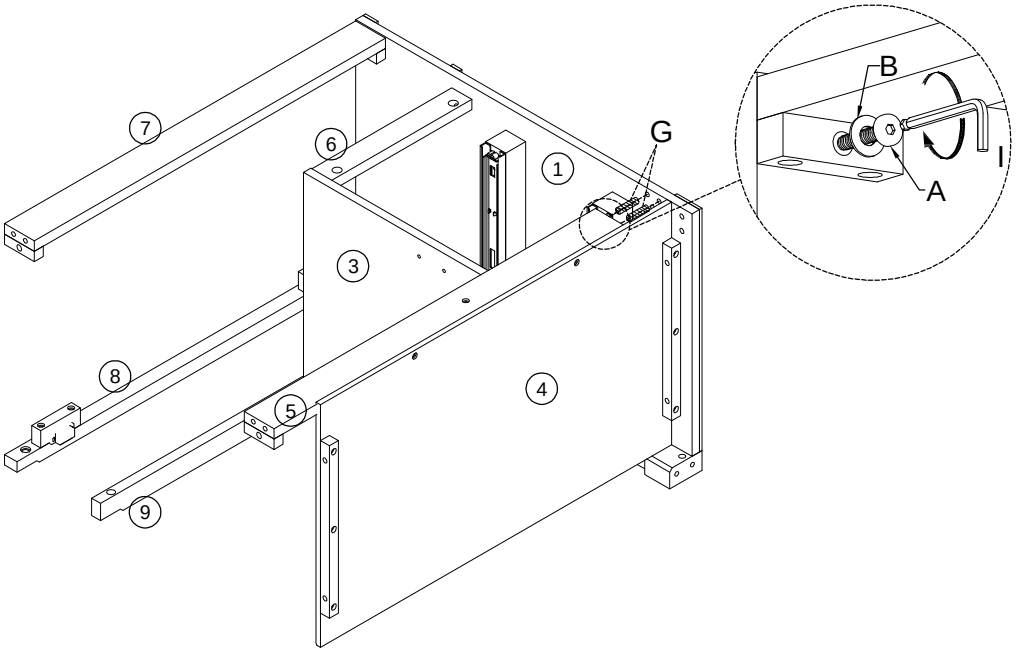


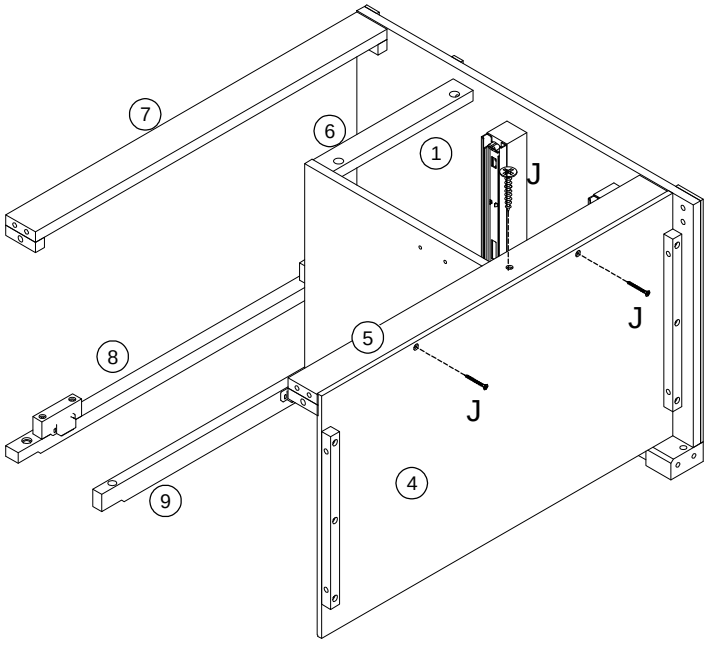


STEP:7

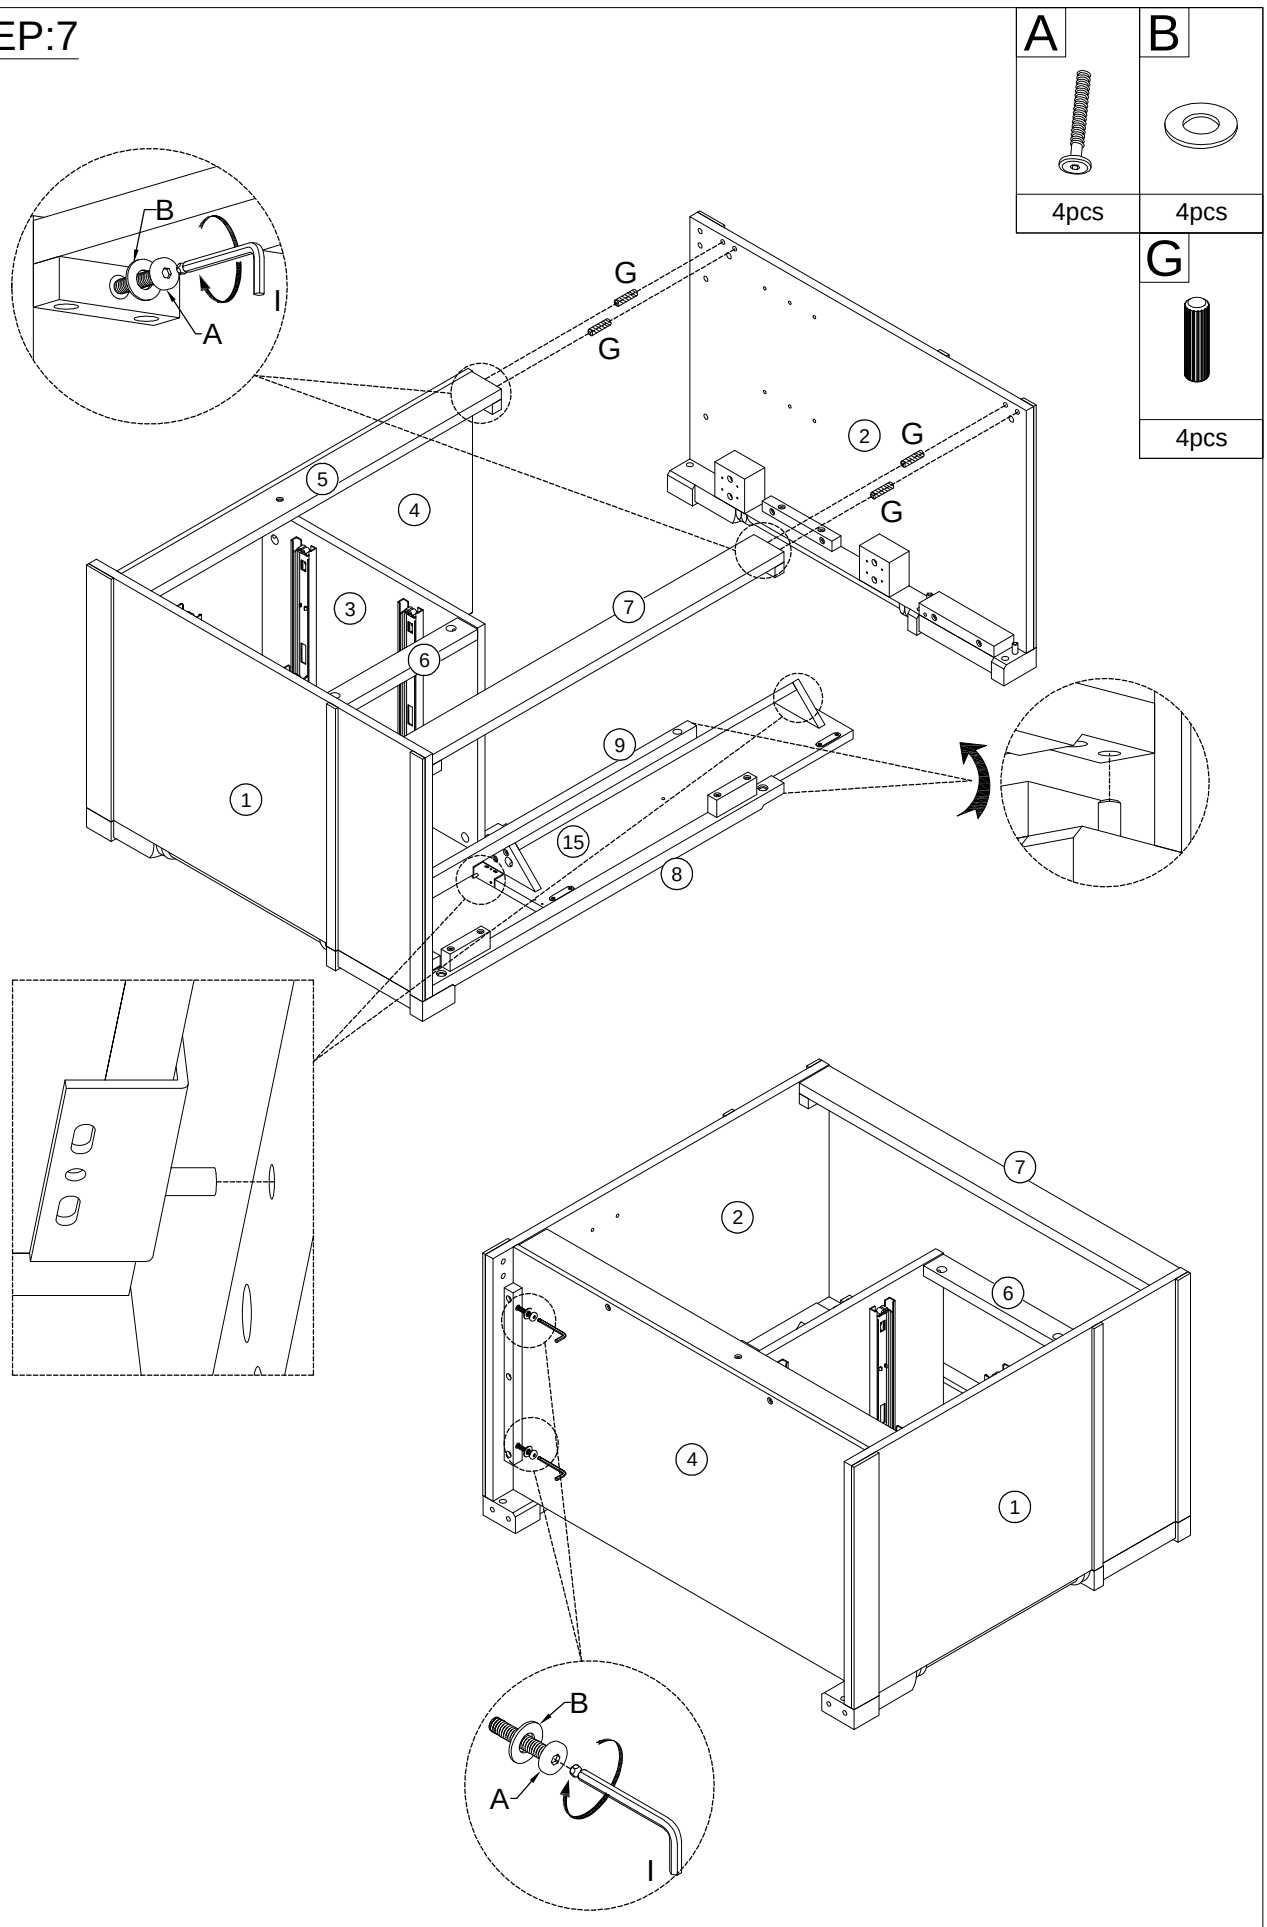

STEP:8

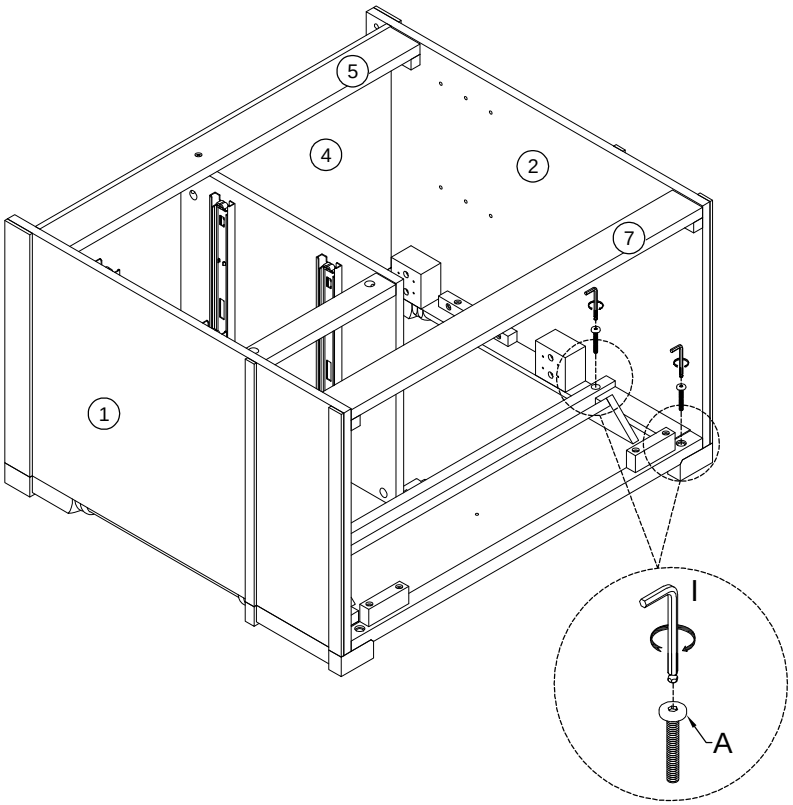


A



2pcs

STEP:9

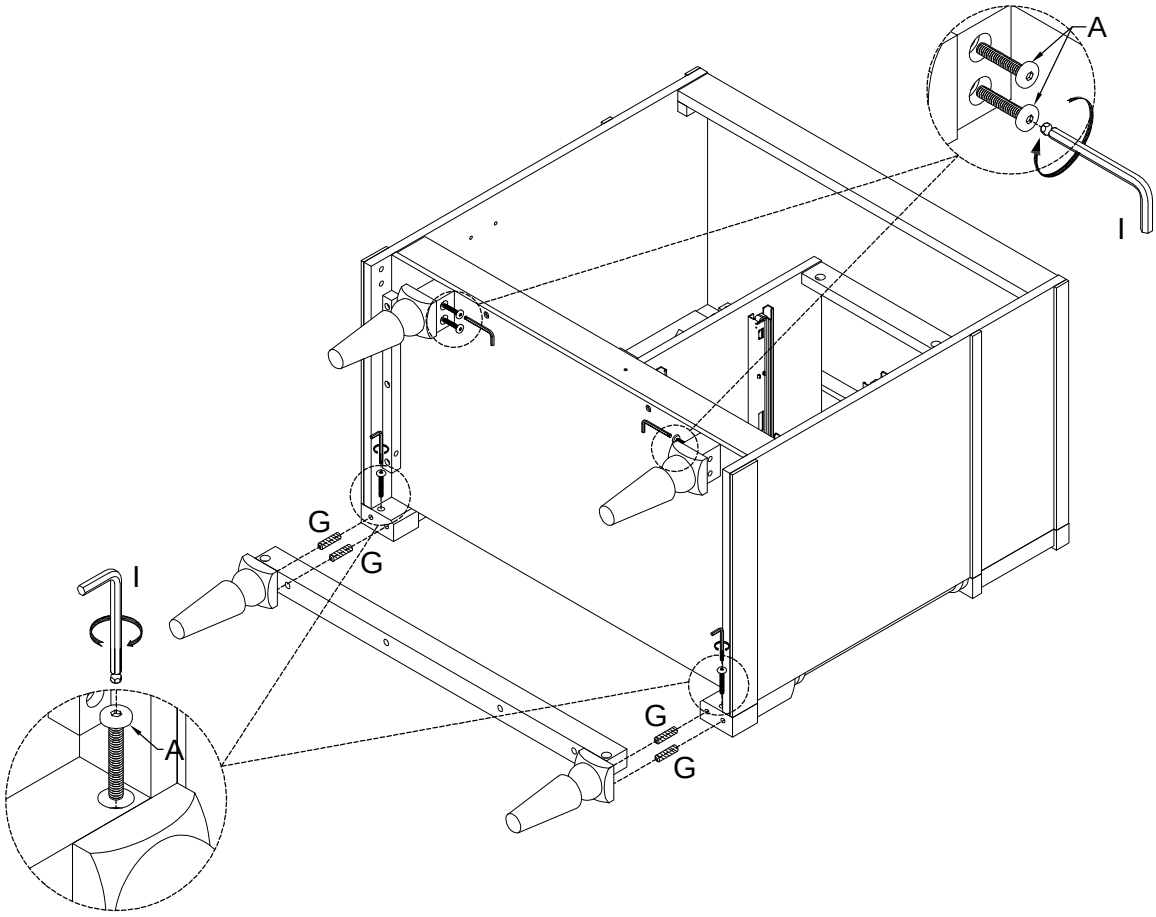

A



6pcs

G




4pcs


STEP:10

J


3pcs



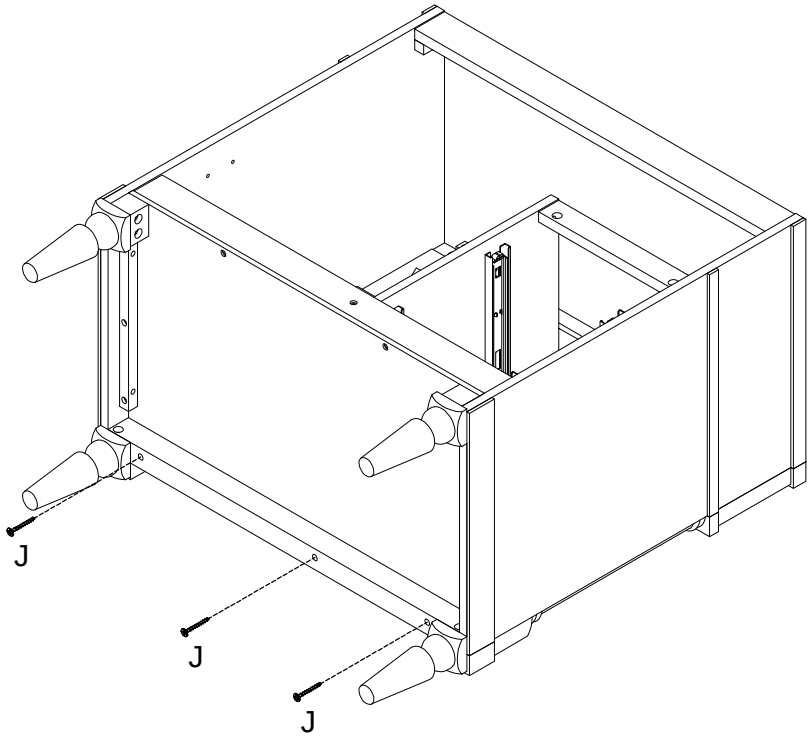



STEP:11


F	N
	
4pcs	1pc


STEP:12

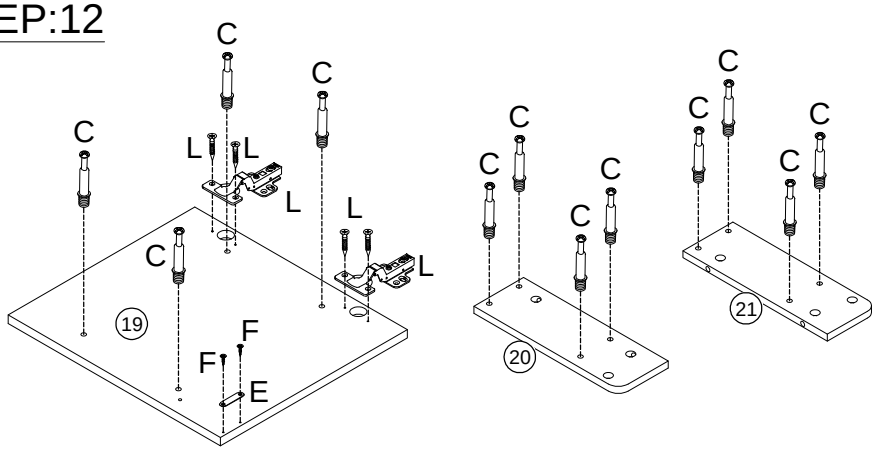



C	D
	
12pcs	12pcs
F	**E**
	
2pcs	1pc
L	**L**
	
2pcs	4pcs

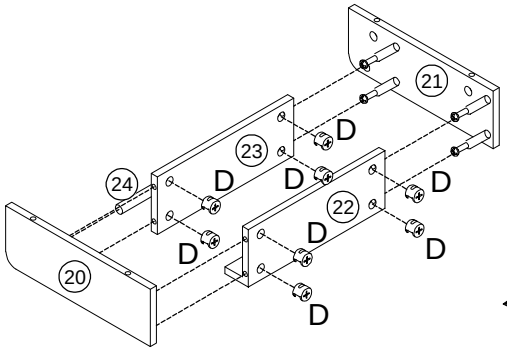

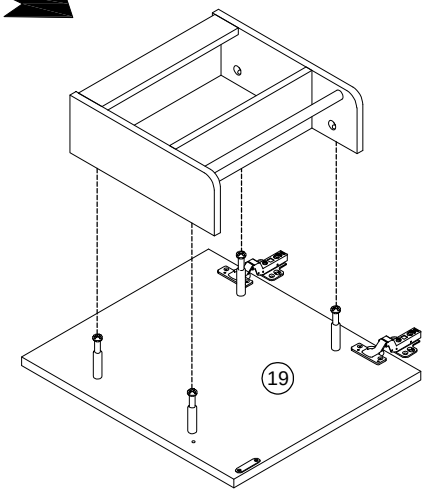

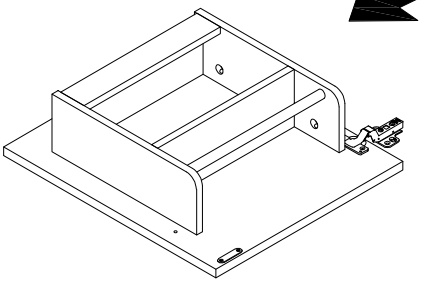


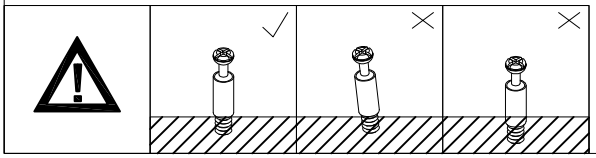


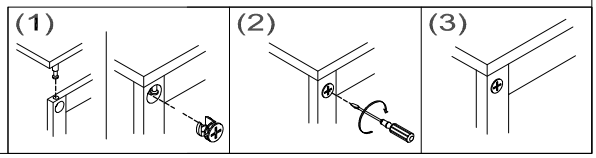


STEP:13

R	L	S
1pc	8pcs	1pc

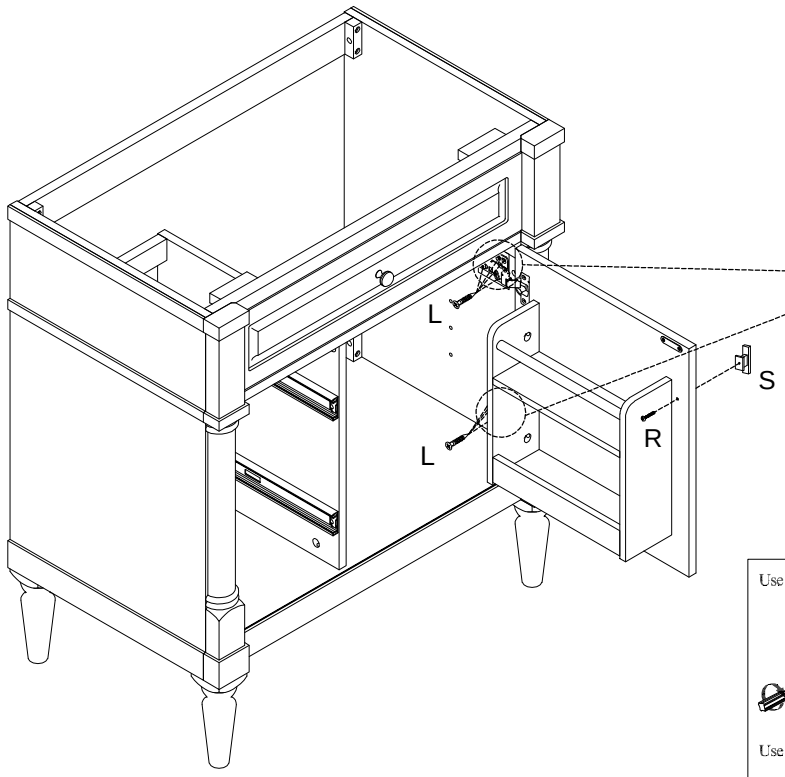

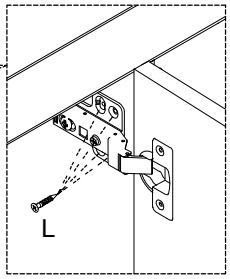


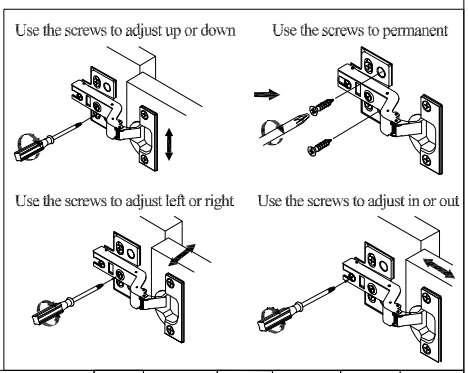



STEP:14


C	D	R
8pcs	8pcs	2pcs

K	P	Q
2pcs	8pcs	8pcs

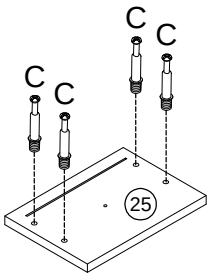

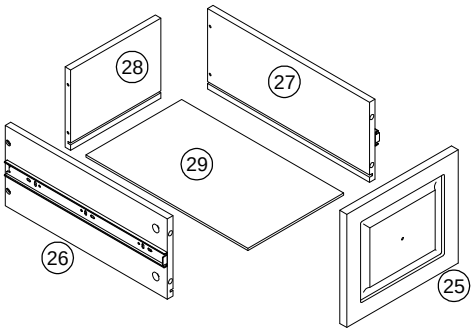


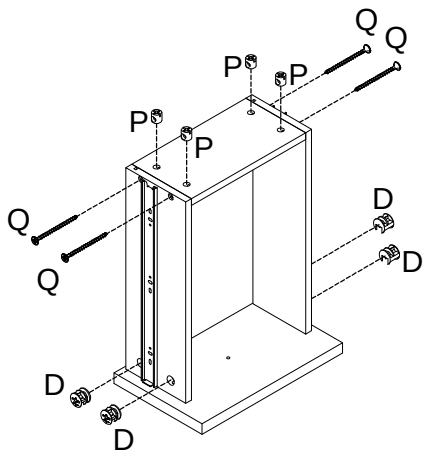

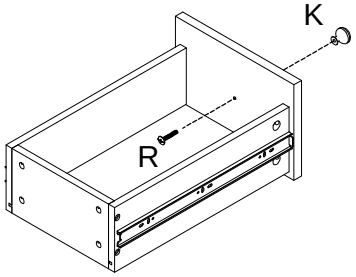



X2


STEP:15

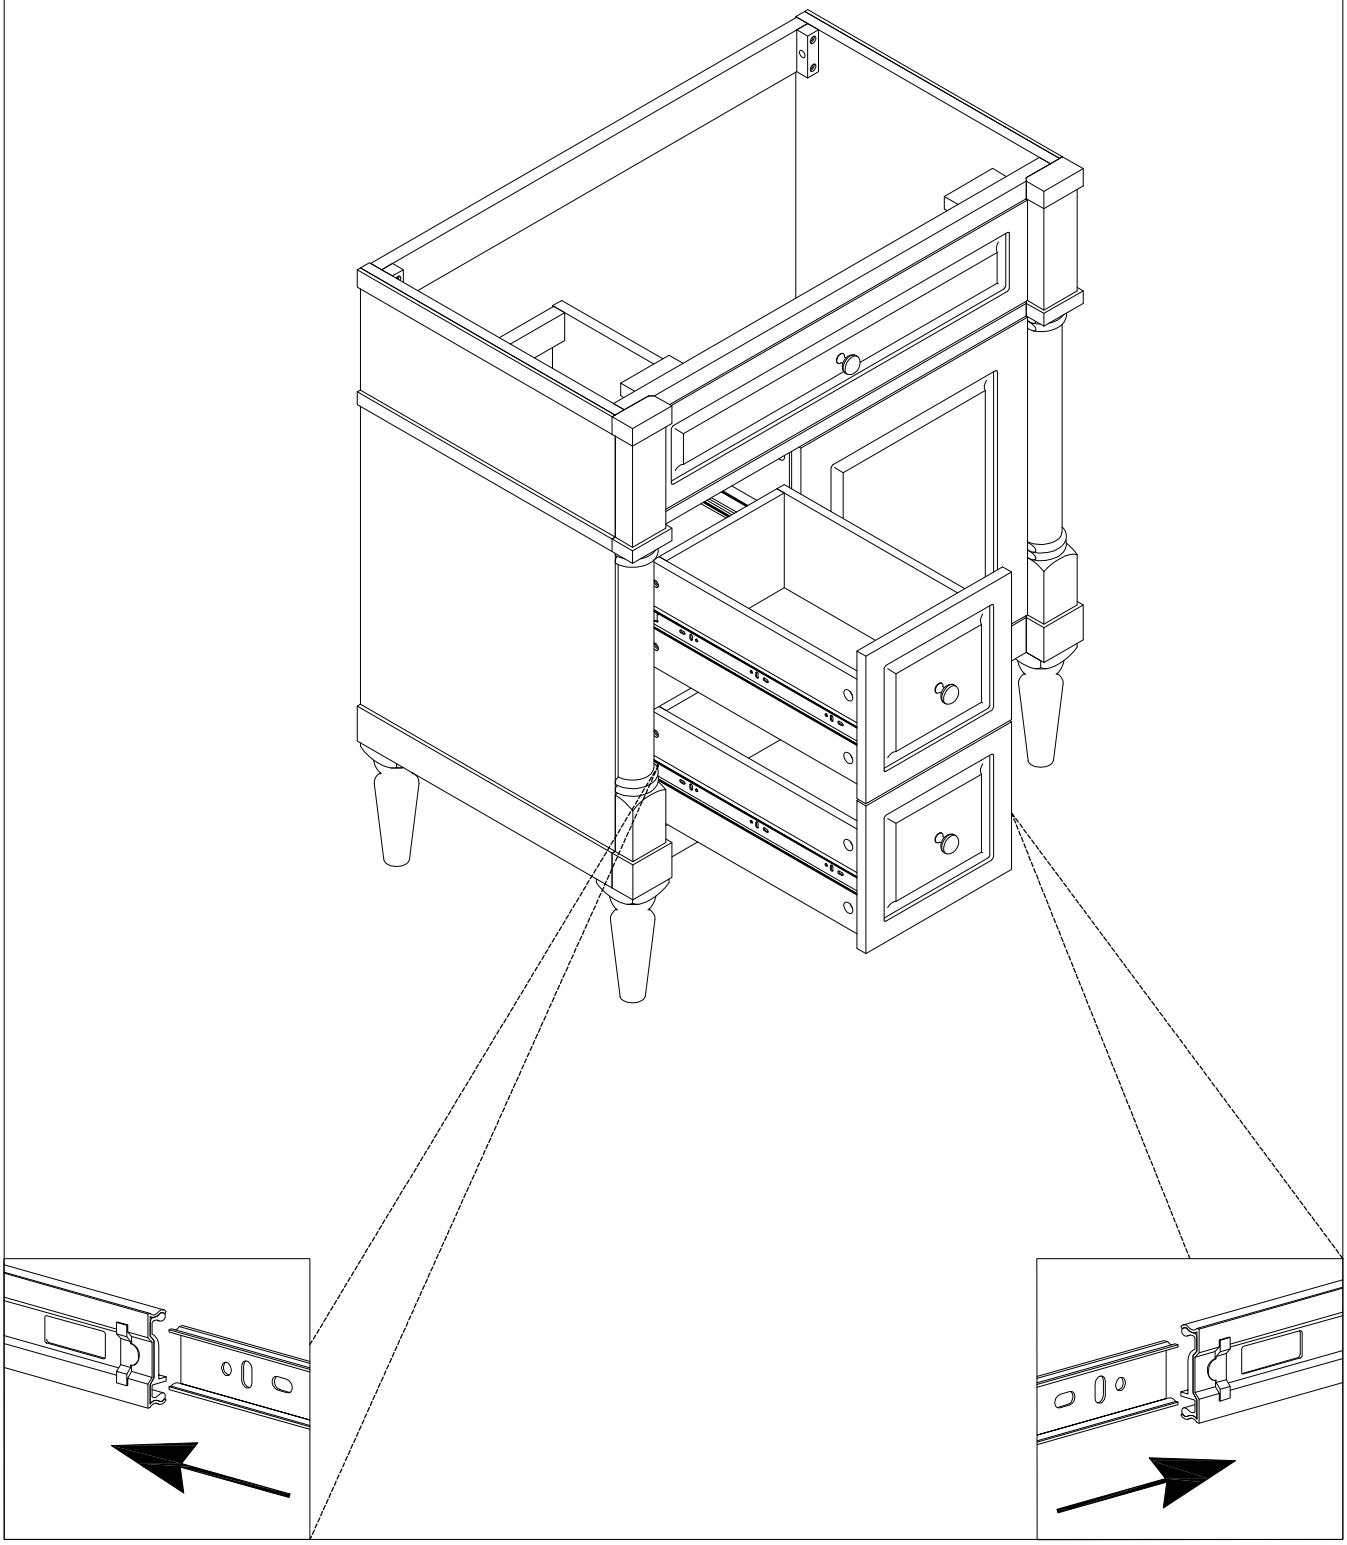


STEP:16

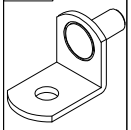
F	H
	
4pcs	4pcs

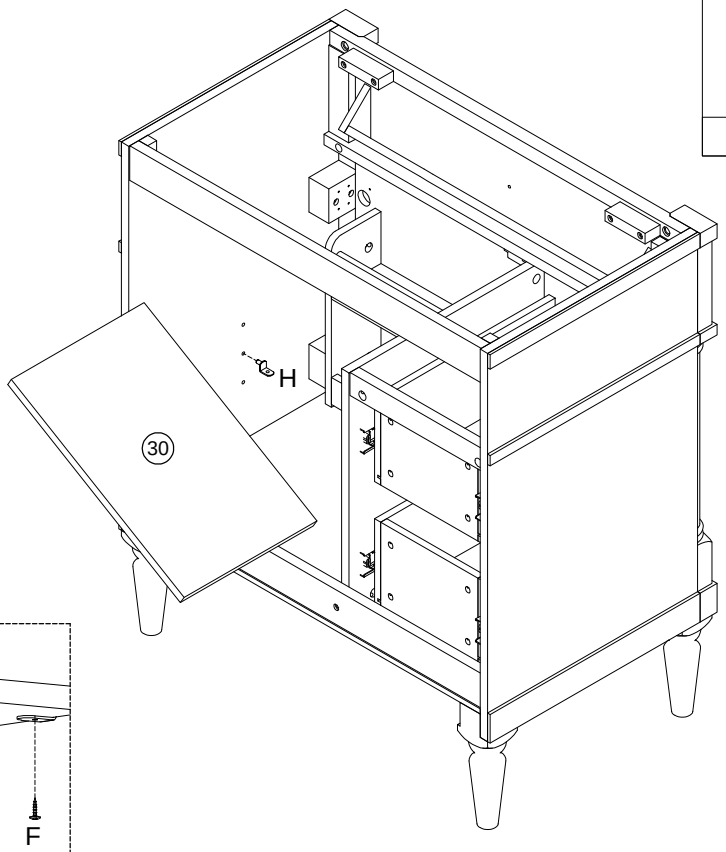

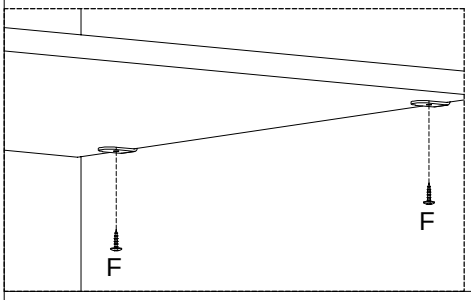


STEP:17


U

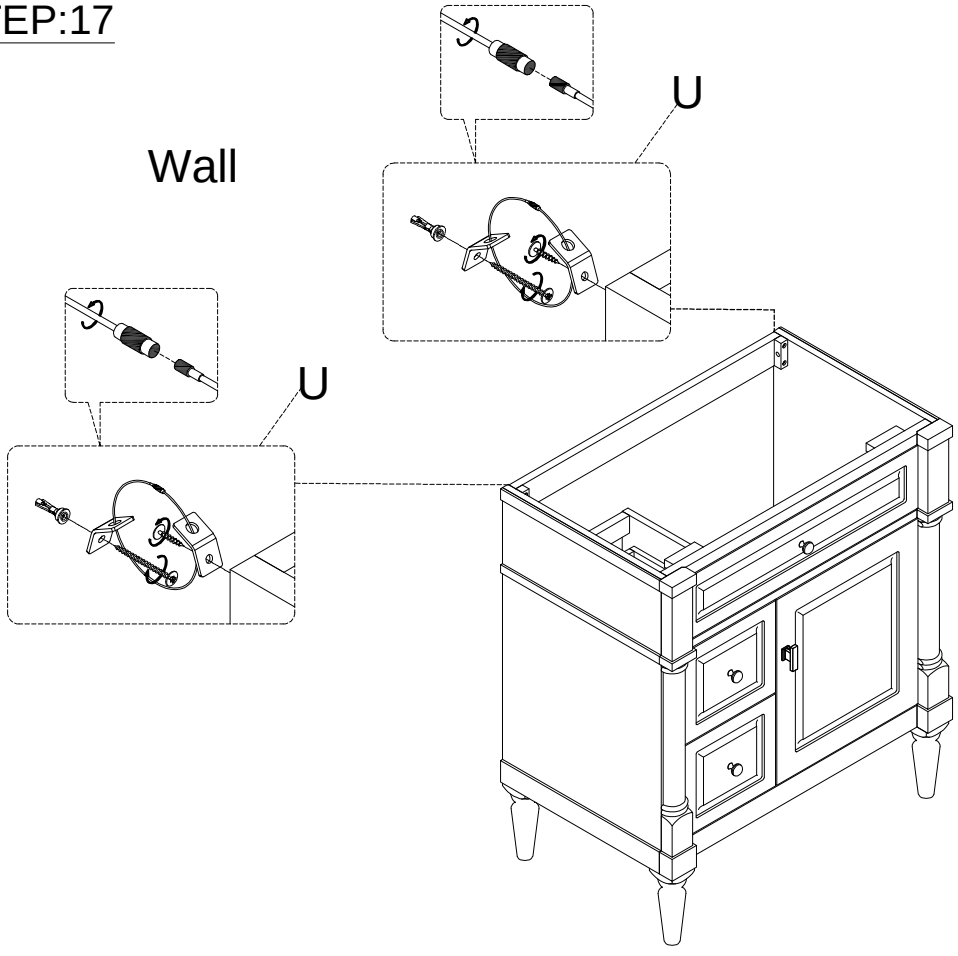2pcs




STEP:18

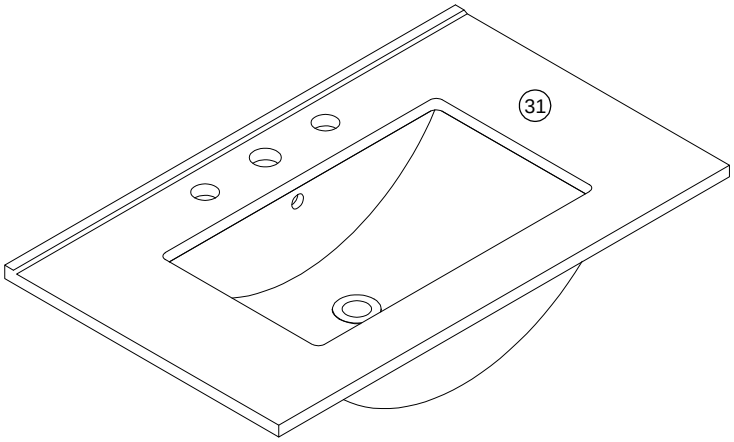
Install the sink on the cabinet with glue.
Let stand for 24 hours

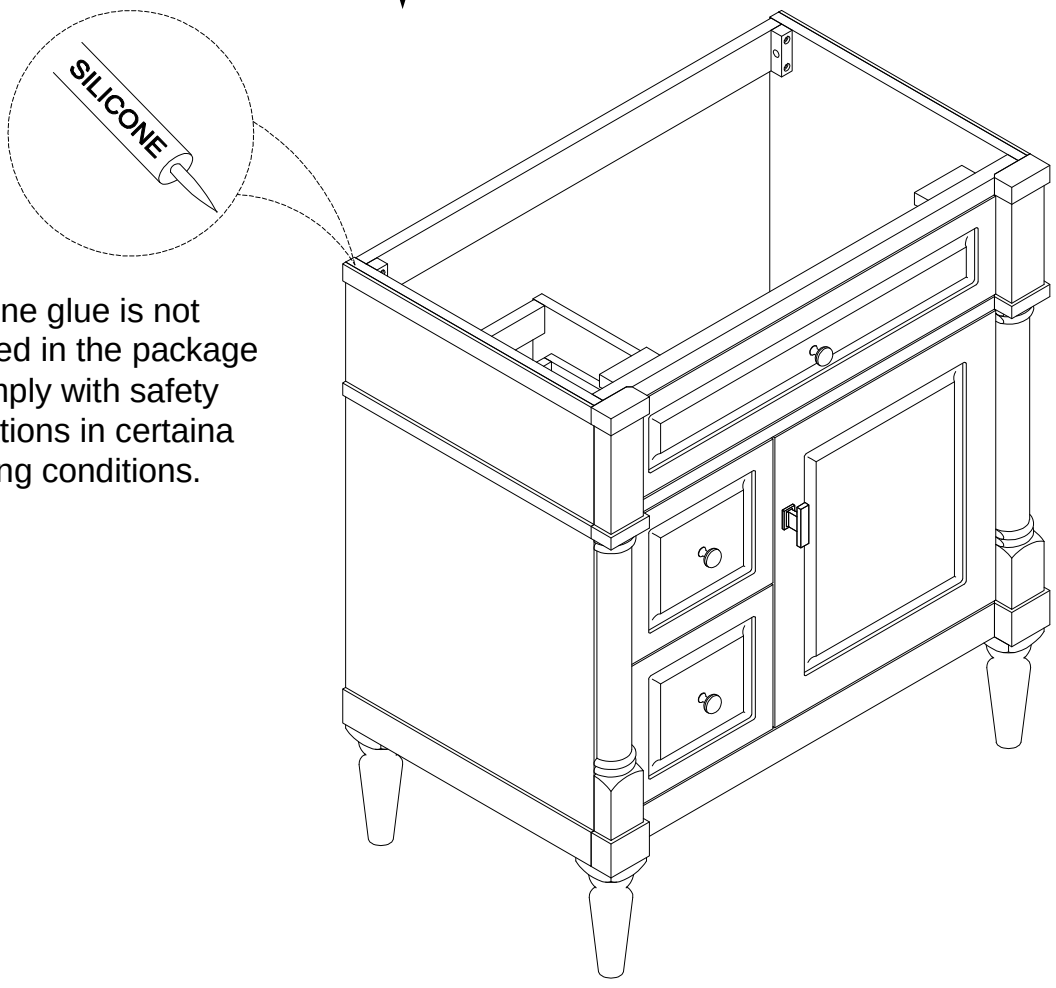




*Silicone glue is not included in the package to comply with safety regulations in certaina shipping conditions.

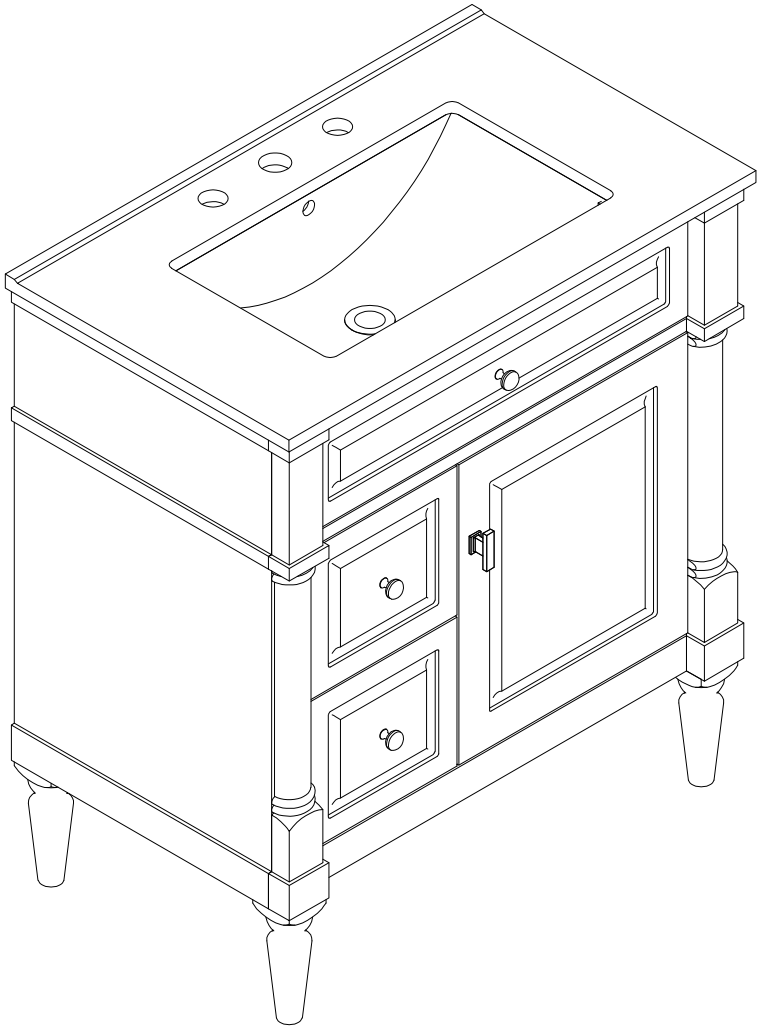


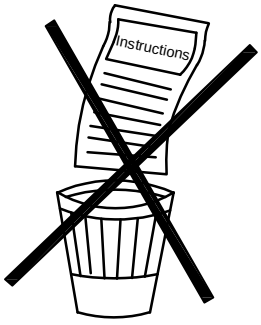
Instructions

HINGE ADJUSTMENTS

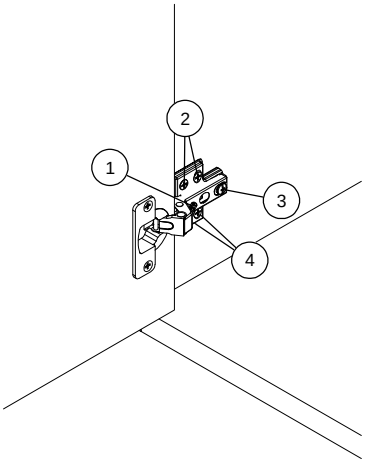


(1) Sideways / Tilt adjustment

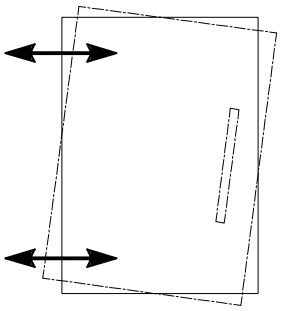

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

(2) (4) Height adjustment

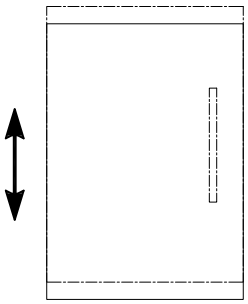

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

(3) Forward and back adjustment

