
FULL/FULL BUNK

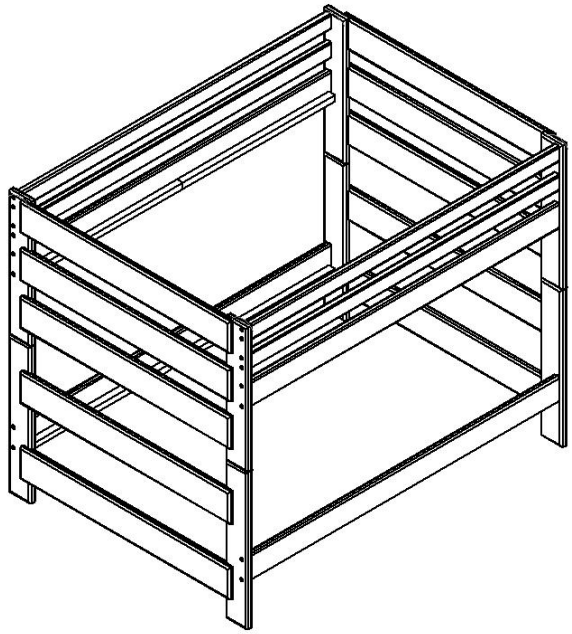

PARTS LIST:

A) 32-4 1/4" Lag Bolts
B) 32-Black Steel Washers
C) 2 -Bottom End Assemblies
D) 2 -Top End Assemblies
E) 4 –5 ¼" x 75" Mattress Rails w/Support Cleats
F) 4 –3 ¼" x 75" Guard Rails
G) 4 -1/2" x 3" Wooden Dowels
H) 6 -3 1/2" x 53 1/2" Mattress Supports
I) 12-1 1/4" Wood Screws

TOOLS REQUIRED:

1) 7/16" Wrench or Socket Wrench
2) Phillips Head Screwdriver

NOTE: Tool recommended: Electric driver with 7/16" socket

ASSEMBLY INSTRUCTIONS:

NOTE:

Make sure you have all parts before beginning assembly. If you need a part, contact the dealer where you purchased your bed.

1) Attach two mattress rails(E) to two bottom end assemblies(C) with 8 lag bolts and 8 washers, and tighten.
2) Attach two mattress rails(E) and four guard rails(F) to top end assembly(D) with 24 lag bolts and 24 washers, and tighten.
3) Place four wooden dowels in the four holes in top edge of bottom bunk assembly.
4) Place the top bunk assembly on the bottom bunk assembly, ensuring that the dowels are inserted in holes in the top bunk assembly.
5) **Place 6 mattress supports on mattress rail support cleats on both bed assemblies, with one support in the center, and a support pushed tightly against each end assembly.**
6) **Secure mattress supports with 12 wood screws.** A FOUNDATION IS REUIRED WITH 3 SLAT CONFIGURATIONS
7) Add the foundation and proper thickness mattress.(See dealer for details)