


ASSEMBLY INSTRUCTION

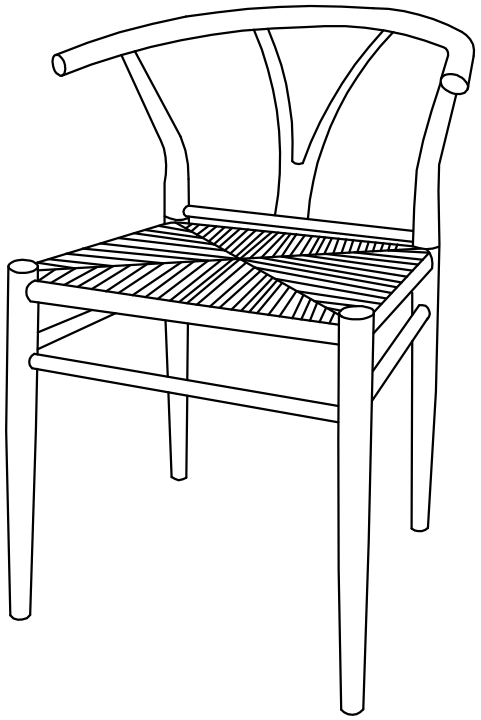

STEP 1

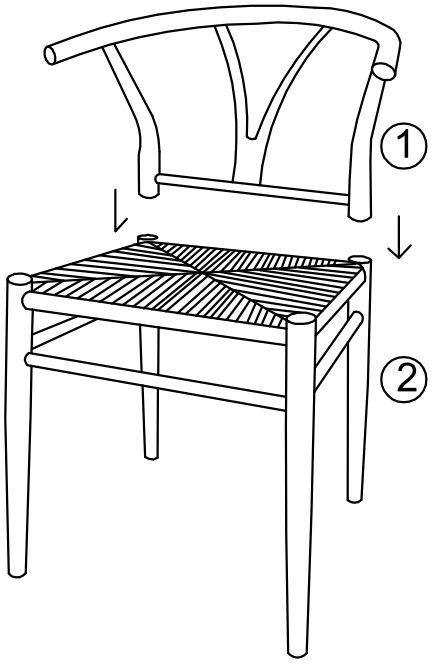


STEP 2

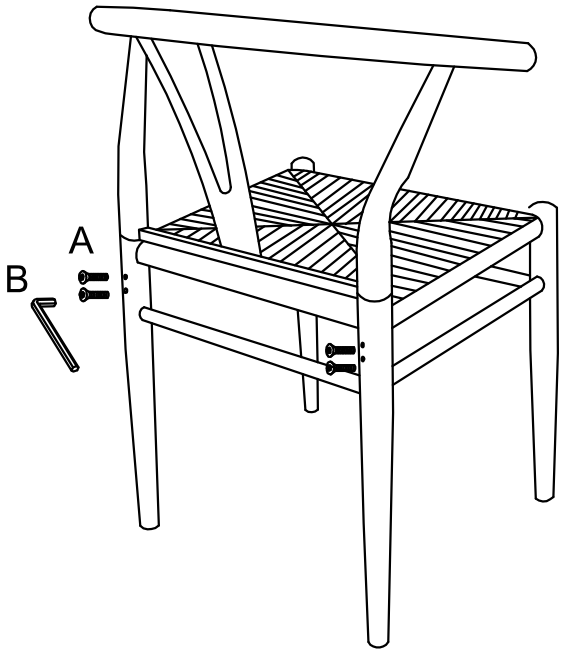








NO	A	B
TYPE	 M6 X 13	 ALLEN KEY M4
QTY	4 PCS	1 PCS

ASSEMBLY INSTRUCTION

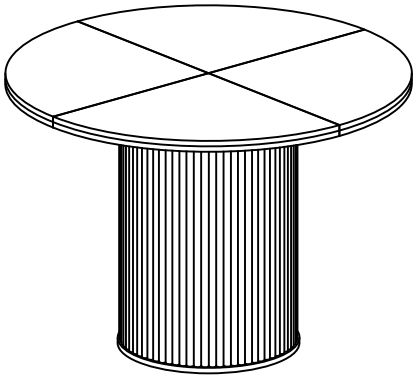


A	B	C	D	E	F	G
6*13 24pcs	8*30 4pcs	Ø25 6pcs	8*18 24pcs	M5 1pcs	4pcs	8*20 4pcs

H
6*20 16pcs

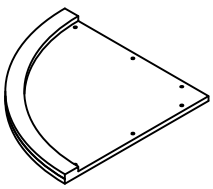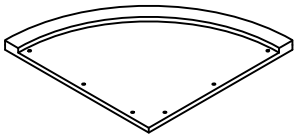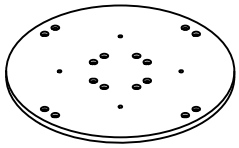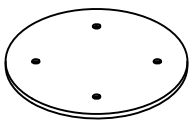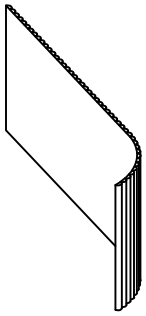
①  2pcs	②  2pcs	③  1pcs
④  1pcs	⑤  1pcs	⑥  1pcs
⑦  1pcs	⑧  4pcs	

ASSEMBLY INSTRUCTION


STEP1

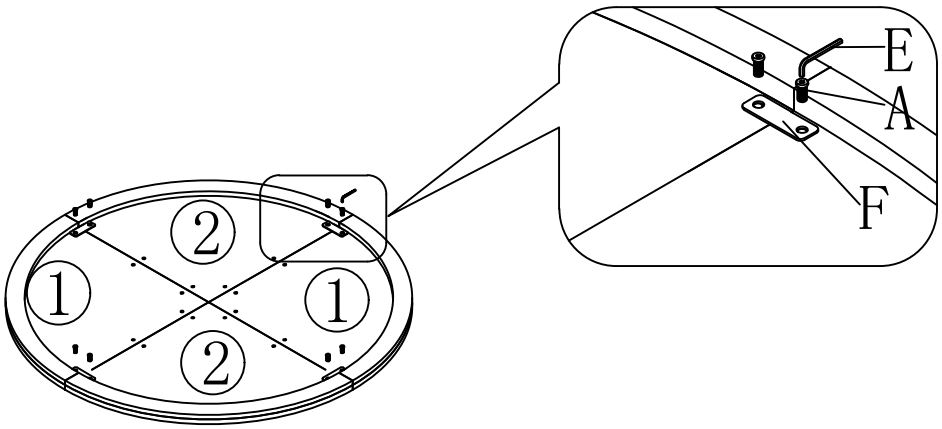

STEP2

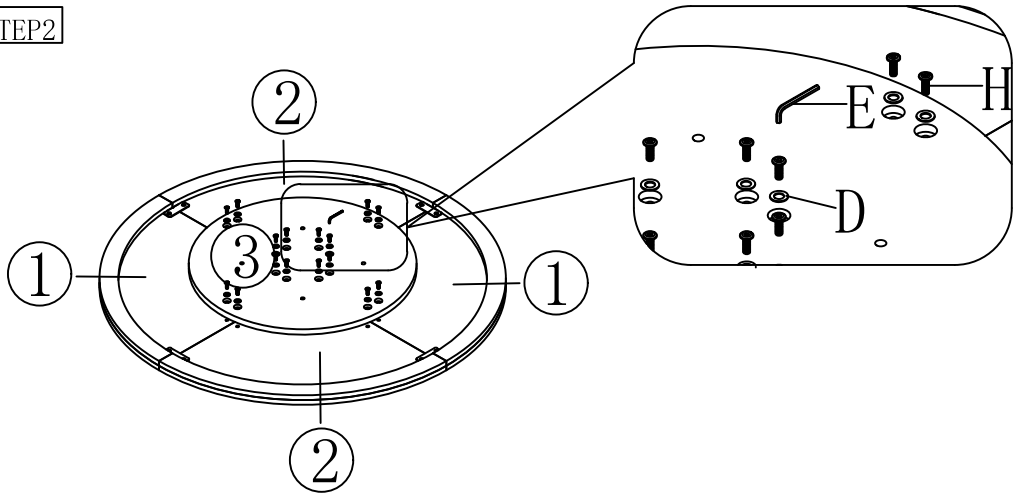


STEP3

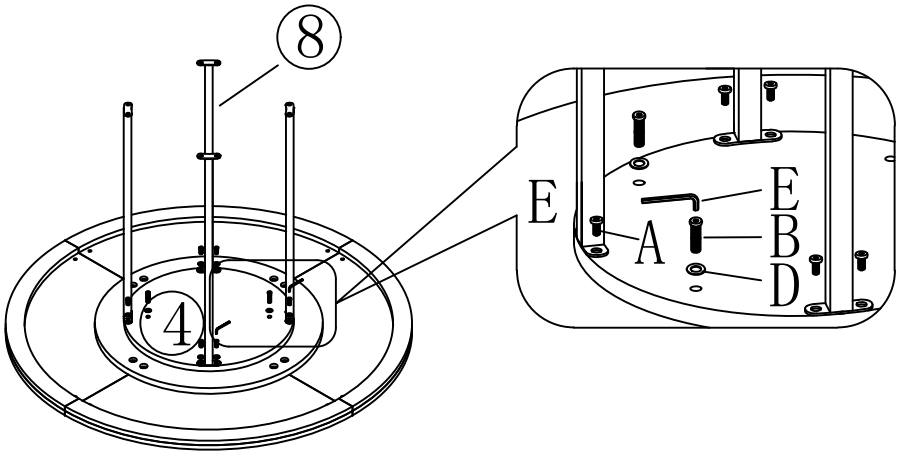


ASSEMBLY INSTRUCTION

STEP4

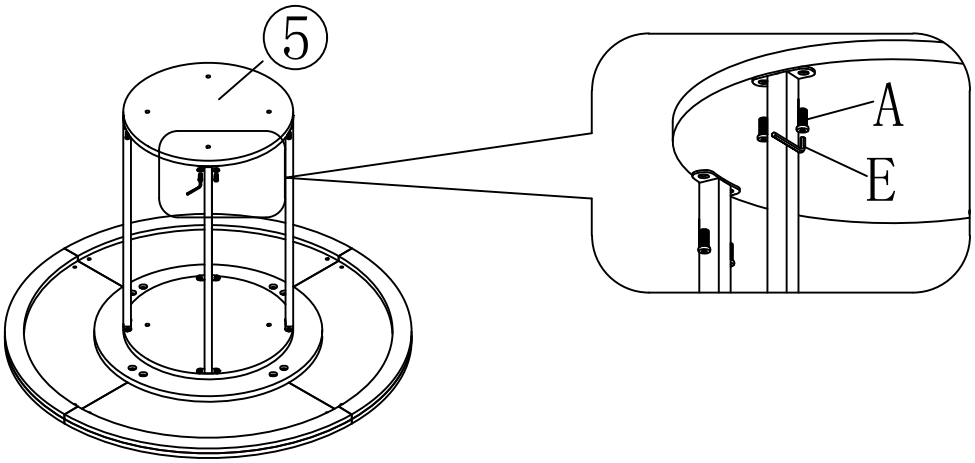

STEP5

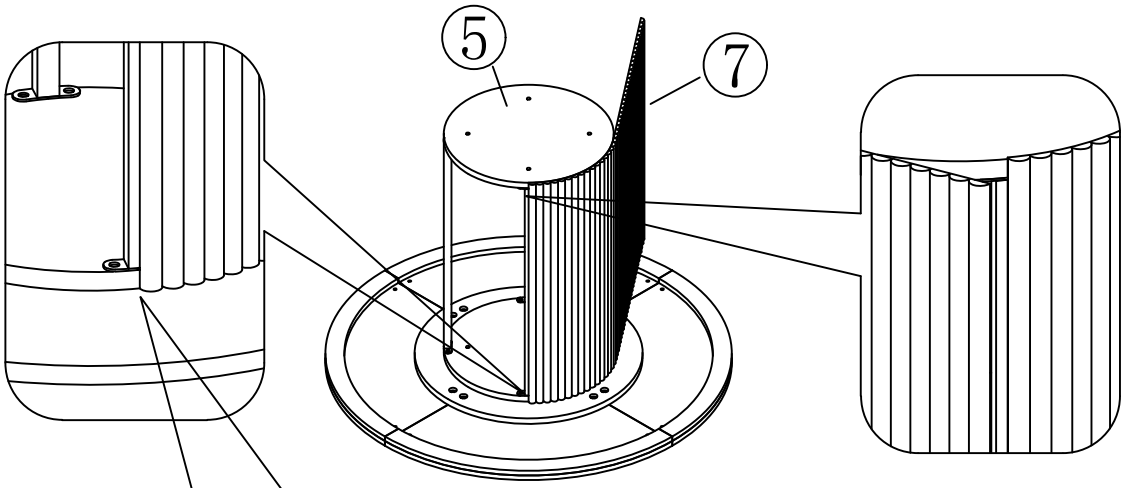

Align the middle part of the link bar when the coaming board is surrounded. If there is a gap after the whole encirclement, please open it and straighten it and re-wrap it.

STEP6

