(B1&B2)
EASTERN KING SIZE BED

ASSEMBLY INSTRUCTIONS
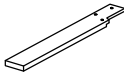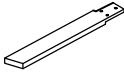
ASSEMBLY TIPS:

1.Remove hardware from box and sort by size.

2.Please check to see that all hardware and parts are present prior to start of assembly.

3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.
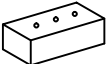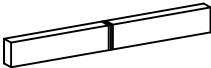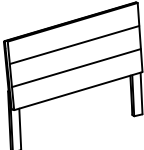
Warning!

1.Don't attempt to repair or modify parts that are broken of defective. Please contact the store immediately.

2.This product is for home use only and not intended for commercial establishment.
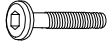
PARTS IDENTIFICATION

B1 (BOX 1)

A		HEADBOARD PANEL	1PC
B		RIGHT HEADBOARD LEG	1PC
C		LEFT HEADBOARD LEG	1PC

B2 (BOX 2)
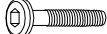
D		BED SLAT	4PCS
E		BED SLAT SUPPORT WITH LEVELER	8PCS

F		BED RAIL	2PCS
G		FOOTBOARD LEG	2PCS
H		FOOTBOARD PANEL	1PC
HB		*FROM BOX 1 HEADBOARD COMPLETE	1PC

HARDWARE IDENTIFICATION

Z - B1 (BOX 1) - Hardware pack is located in (B1)

1		BOLT	6PCS
2		SMALL ALLEN WRENCH	1PC
3		FLAT WASHER	6PCS
4		LOCK WASHER	6PCS

Z - B2 (BOX 2) - Hardware pack is located in (B2)

5		SHORT FLAT HEAD SCREW	8PCS
6		LONG FLAT HEAD SCREW	6PCS
7		BOLT	8PCS
8		SMALL ALLEN WRENCH	1PC
9		BIG ALLEN WRENCH	1PC

(B1) - BOX 1

STEP 1

Place headboard panel (A) facing downward on soft surface,and install right (B) & left (C) headboard legs to headboard panel (A) as per diagram shown.
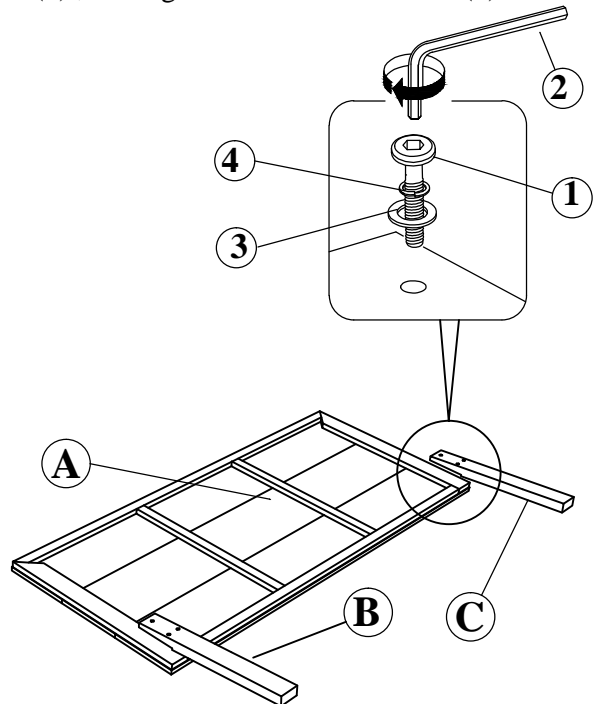
STICKER LEFT

A

B   **C**

STICKER RIGHT
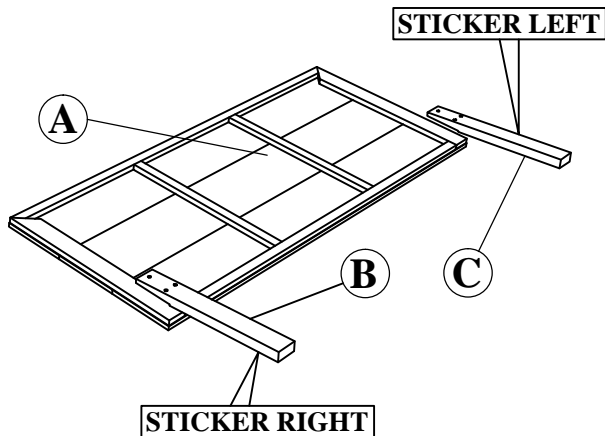
**BACK VIEW

**Please take note the marking on the leg **

STEP 2

Align and fasten right (B) & left (C) headboard legs to headboard panel (A) using bolt(1), lock washer (4) &flat washer (3) ,then tighten with Allen wrench(2).

2

4   **1**

3

A

B   **C**

IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS
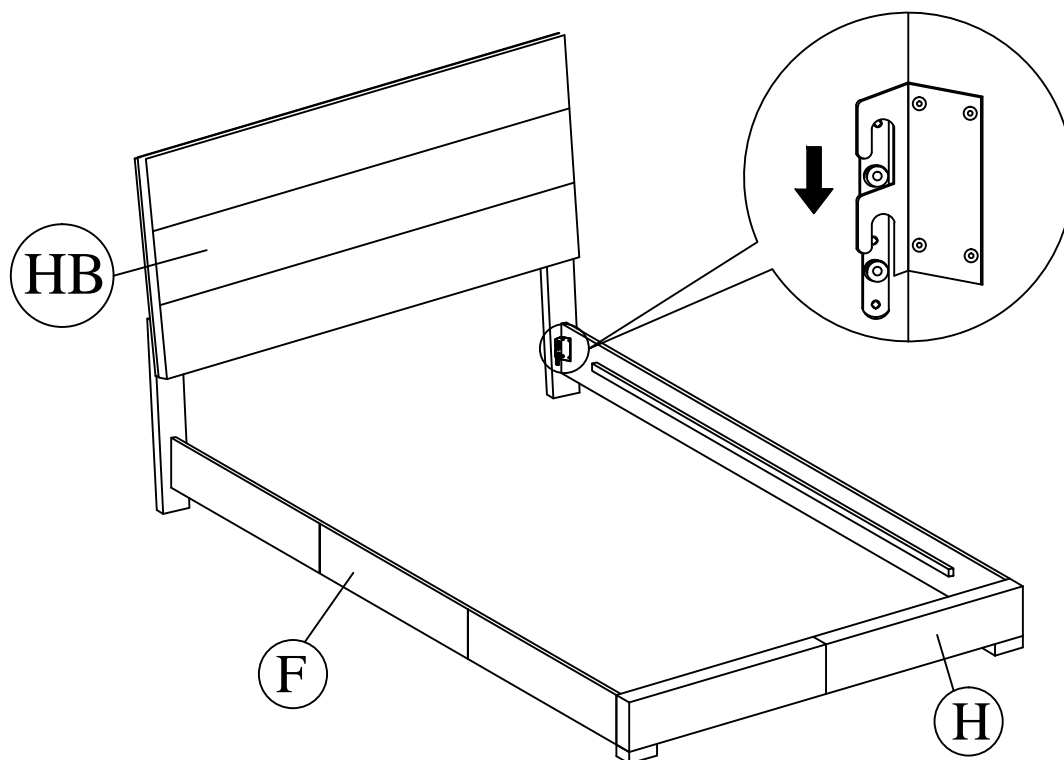
(B1 & B2) - BOX 1 & BOX 2

STEP 3

Align and fasten footboard leg (G) to footboard panel (H) using long flat head screw (6) and tighten with screw driver (Not included).
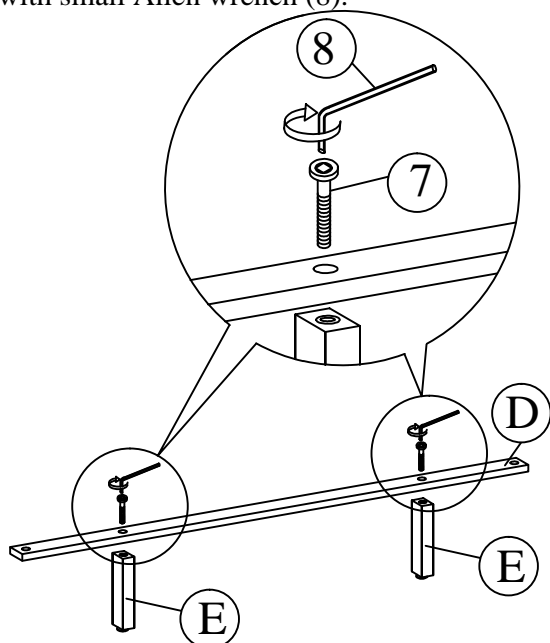
H

6

G

PLEASE REMOVE THE PROTECTIVE FILM BEFORE ASSEMBLY
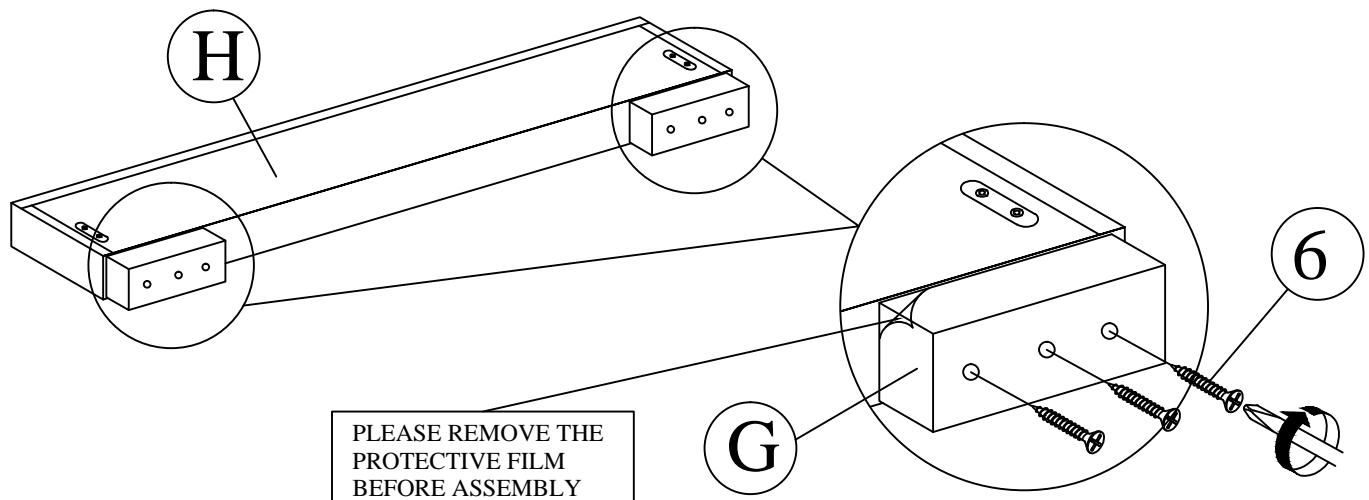
STEP 4

Loosen the bolt.
Align & hook bed rail (F) to headboard (HB) & footboard (H).

HB

F

H

STEP 5

Align and fasten bed slat support with
leveler (E) to bed slat (D) using bolt (7) & tighten
with small Allen wrench (8).

8

7

D

E

E

STEP 6

6.1) Fully tighten all the bolts at step 4 with big Allen wrench (9).

6.2) Align & fasten bed slat (D) to bed rail (F) using short flat head
screw (5) & tighten with screw driver (NOT INCLUDED).
Then adjust leveler to touch the floor.

6.1

6.2

9

D

5