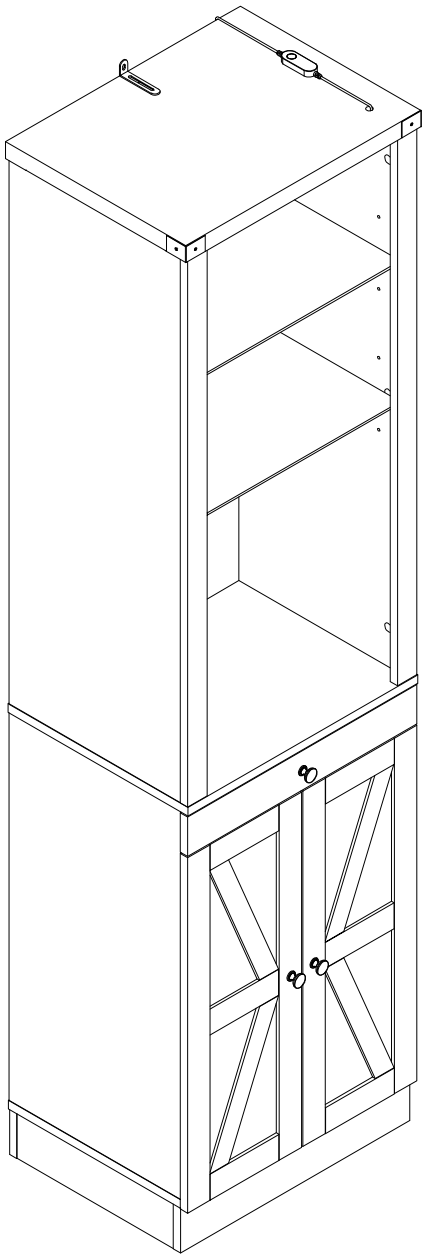
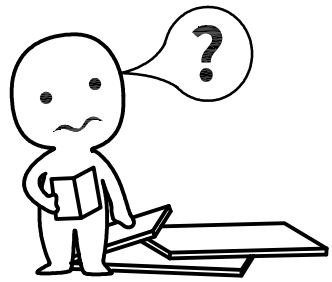
# 70” Tall Bar Cabinet



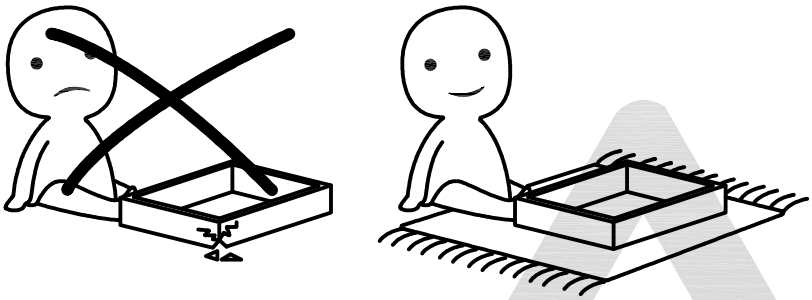
Assembly Video QR

support@fnkhome.com



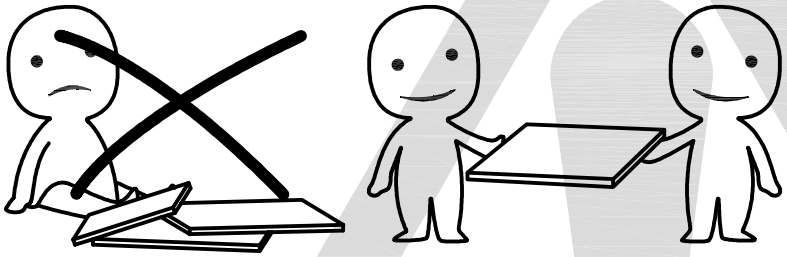
### *IMPORTANT INFORMATION!*

Please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.



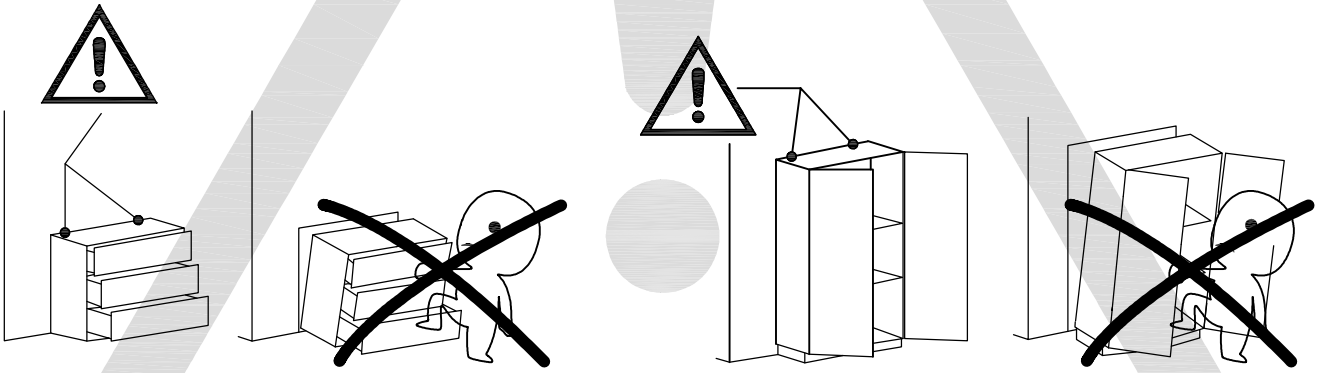
### *AVOID SCRATCHES!*

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



### *IMPROVE EFFICIENCY !*

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.



### *ANTI-TOPPLE WARNING !*

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professlonal advice. Please read and follow each step of the instructions carefully.

### *IMPORTANT !*

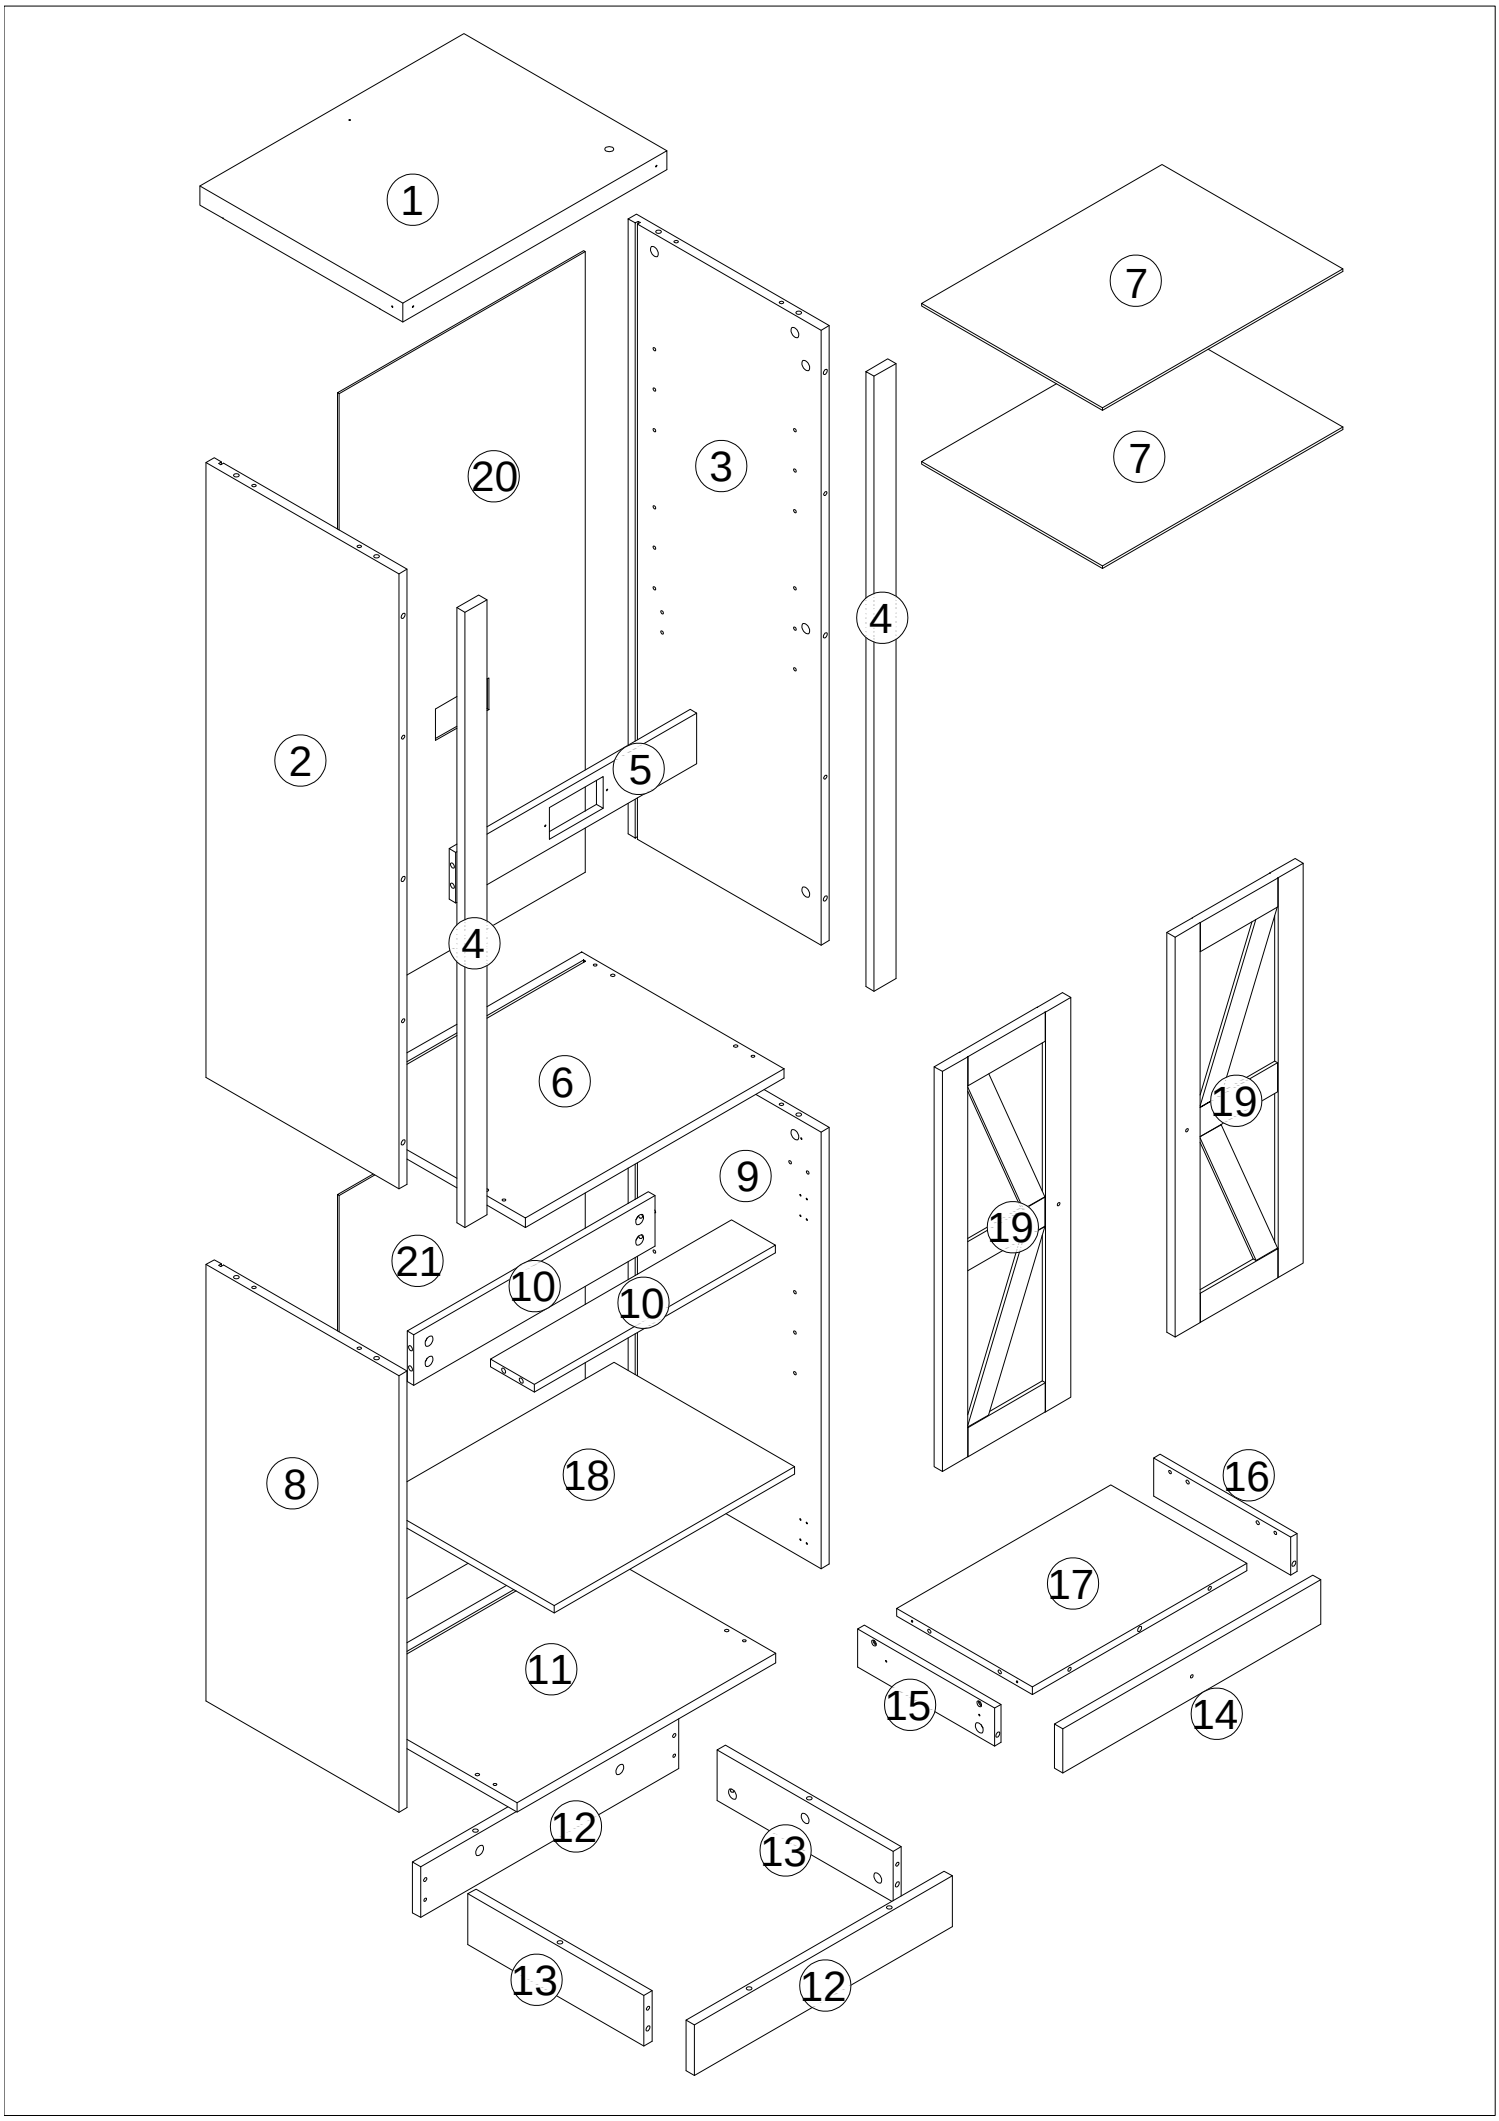
It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stabllity through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

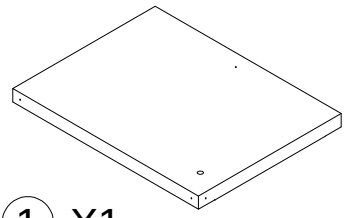
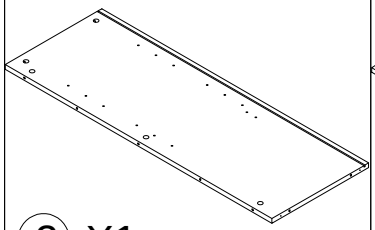
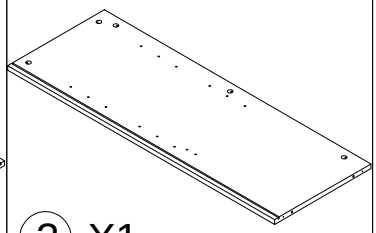
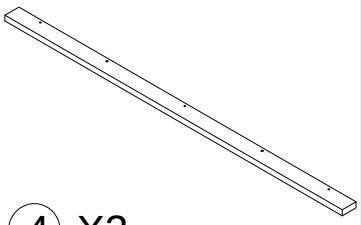
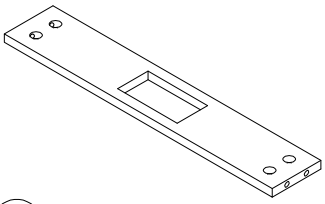
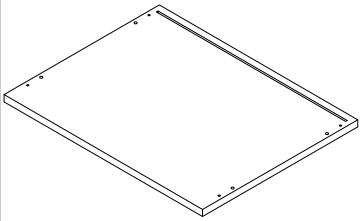
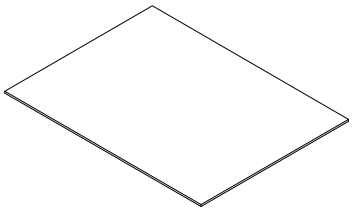
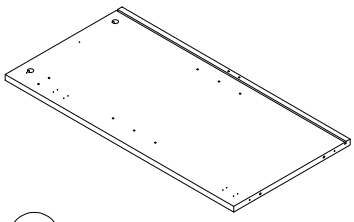
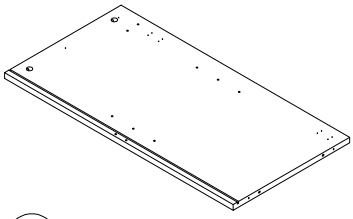
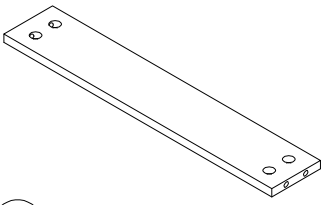
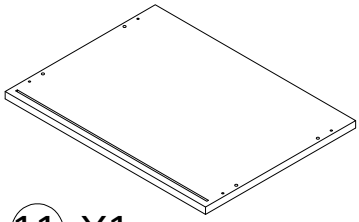
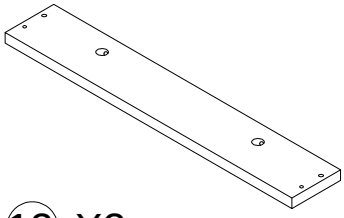
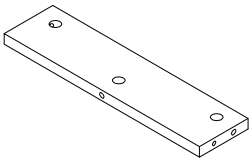
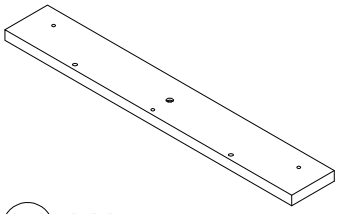
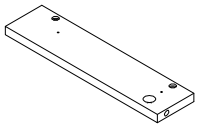
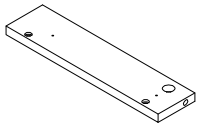
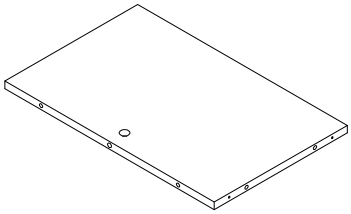
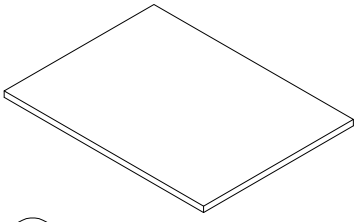
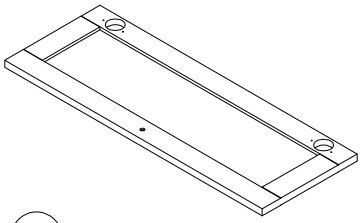
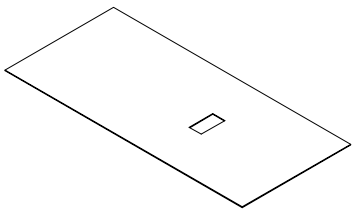
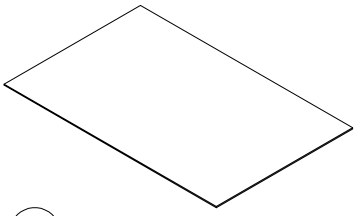
Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

### *SAFETY TIPS:*




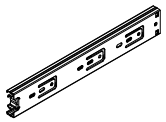
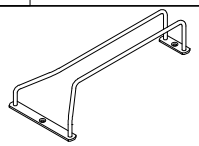
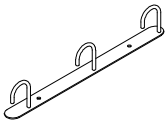


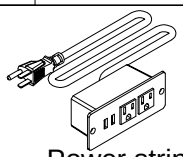
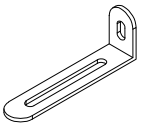
Static charge may cause dustom foam-clean with a dry or damp cloth.Small foam strands may present a handling hazard - handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines.


1
20
3
7
7
4
2
5
4
6
9
21
10
10
19
19
8
18
16
17
11
15
14
12
13
13
12

# Parts List

| | | | |
|---|---|---|---|
|  1 X1 |  2 X1 |  3 X1 |  4 X2 |
|  5 X1 |  6 X1 |  7 X2 |  8 X1 |
|  9 X1 |  10 X2 |  11 X1 |  12 X2 |
|  13 X2 |  14 X1 |  15 X1 |  16 X1 |
|  17 X1 |  18 X1 |  19 X2 |  20 X1 |
|  21 X1 | | | |

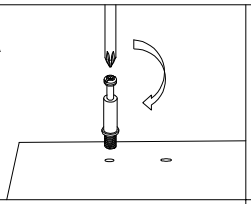
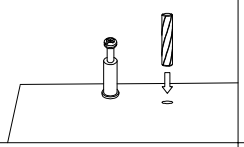
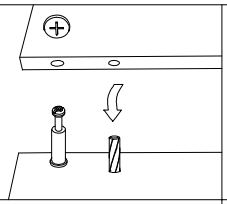
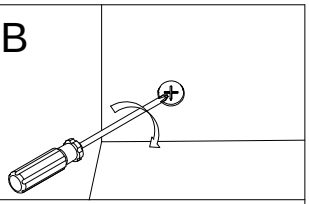
# Hardware

| | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
|  6x35mm Cam bolt | A | 39+2 |  15x9.6mm Cam Lock | B | 39+2 |  6x30mm Wood dowel | C | 30+2 |  4x35mm screw | D | 13+2 |  3.5x12mm screw | E | 18+2 |
|  3x14mm screw | F | 13+2 |  Back bracket | G | 10 |  Door handle | H | 3 |  4x18mm screw | I | 3 |  4x14mm screw | J | 24+2 |
|  Hinge | K | 4 |  sticker | L | 39 |  240mm | M | 2 |  Stemware rack | N | 1 |  Hook rail | O | 1 |
|  | P | 2 |  | Q | 1 |  | R | 3 |  Power strip | S | 1 |  sticker | T | 8 |
|  Shelf supports | U | 4 |  4x12mm screw | V | 1 |  L wall fixing | W | 1 |  30mm wall plug | X | 1 | | | |




SPARE BAG

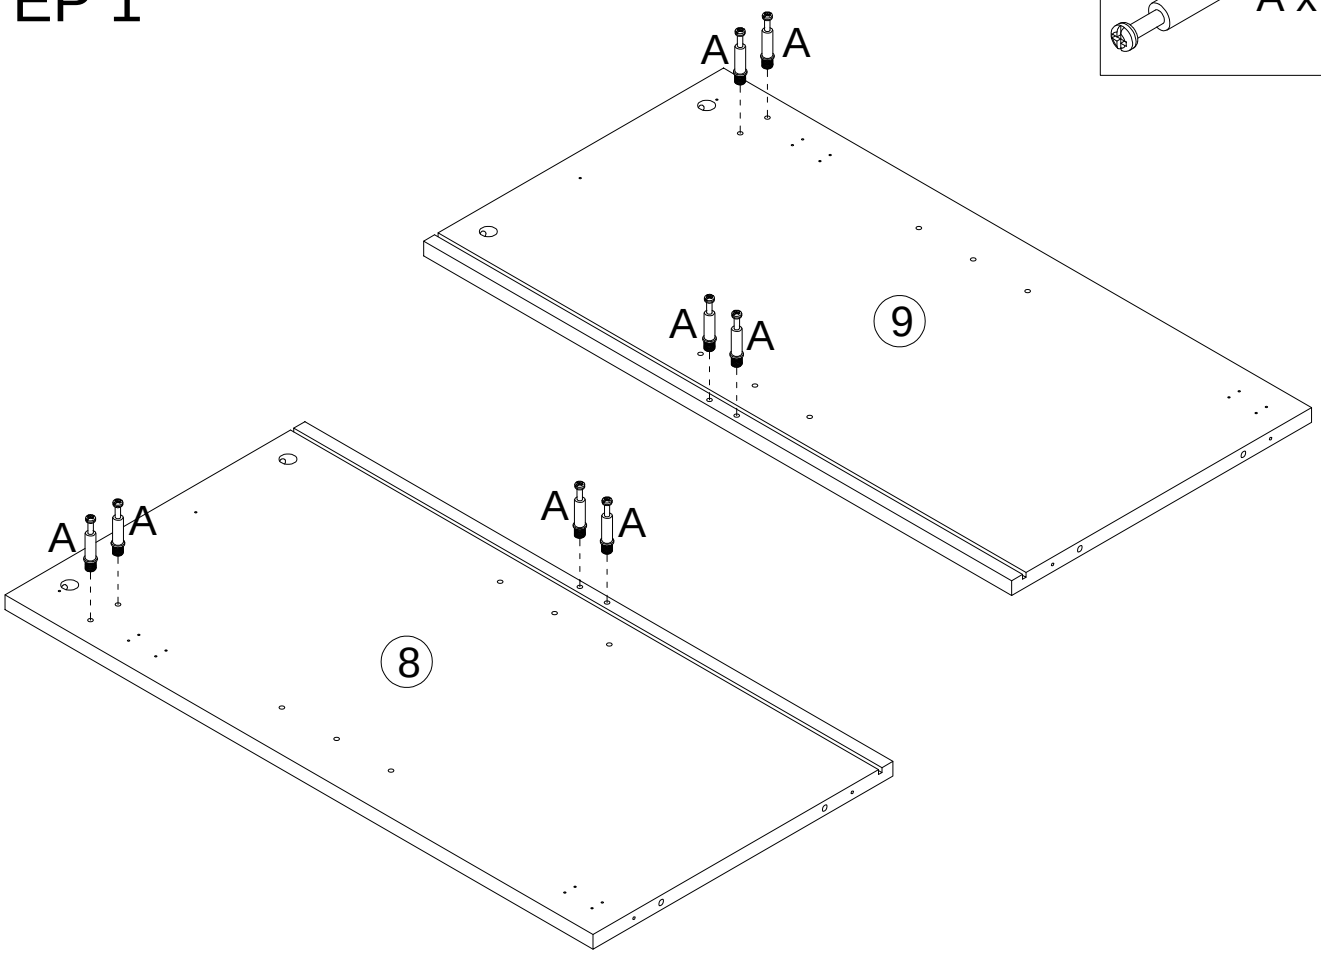
THE SPARE BAG INCLUED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

| A | C | Arrow must face hole | B |
|---|---|---|---|
|  |  |  |  |
| Gently screw cam bolt into the threaded anchor. | Insert the wood dowel halfway into hole. | | Screw the camlock firmly into locked position. |

# STEP 1



A x 8




# STEP 2



B x 4


# STEP 3



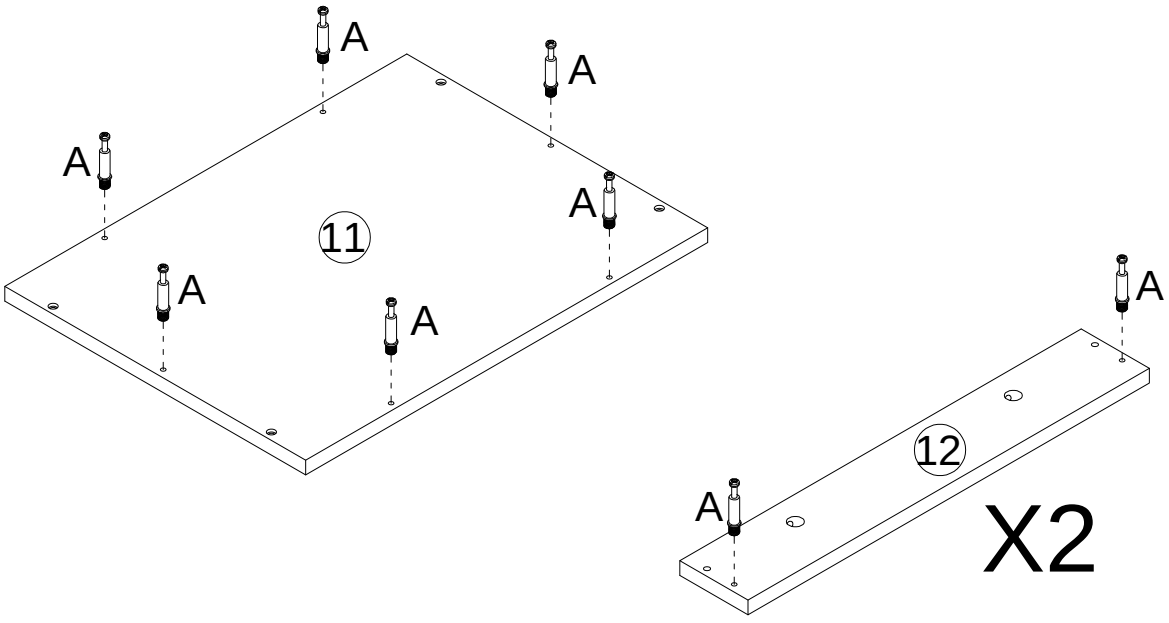
B x 4



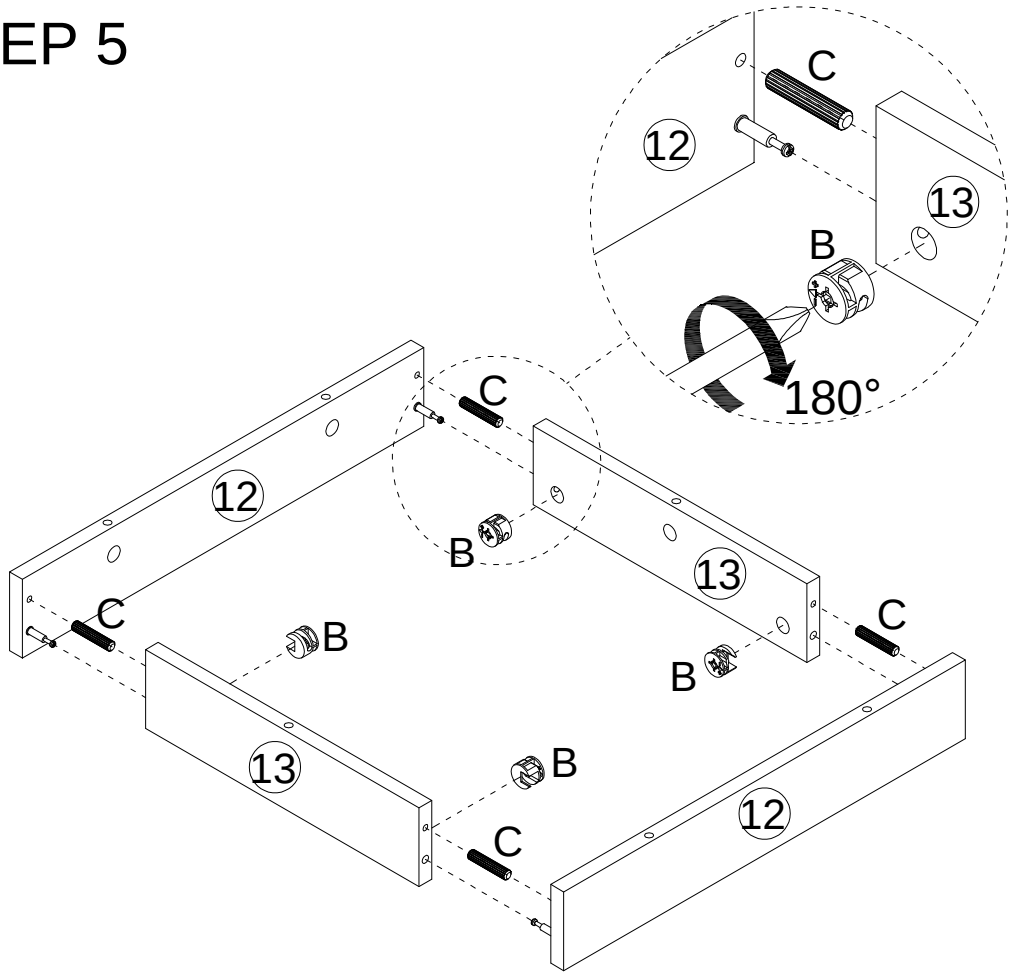

# STEP 4





A x 10



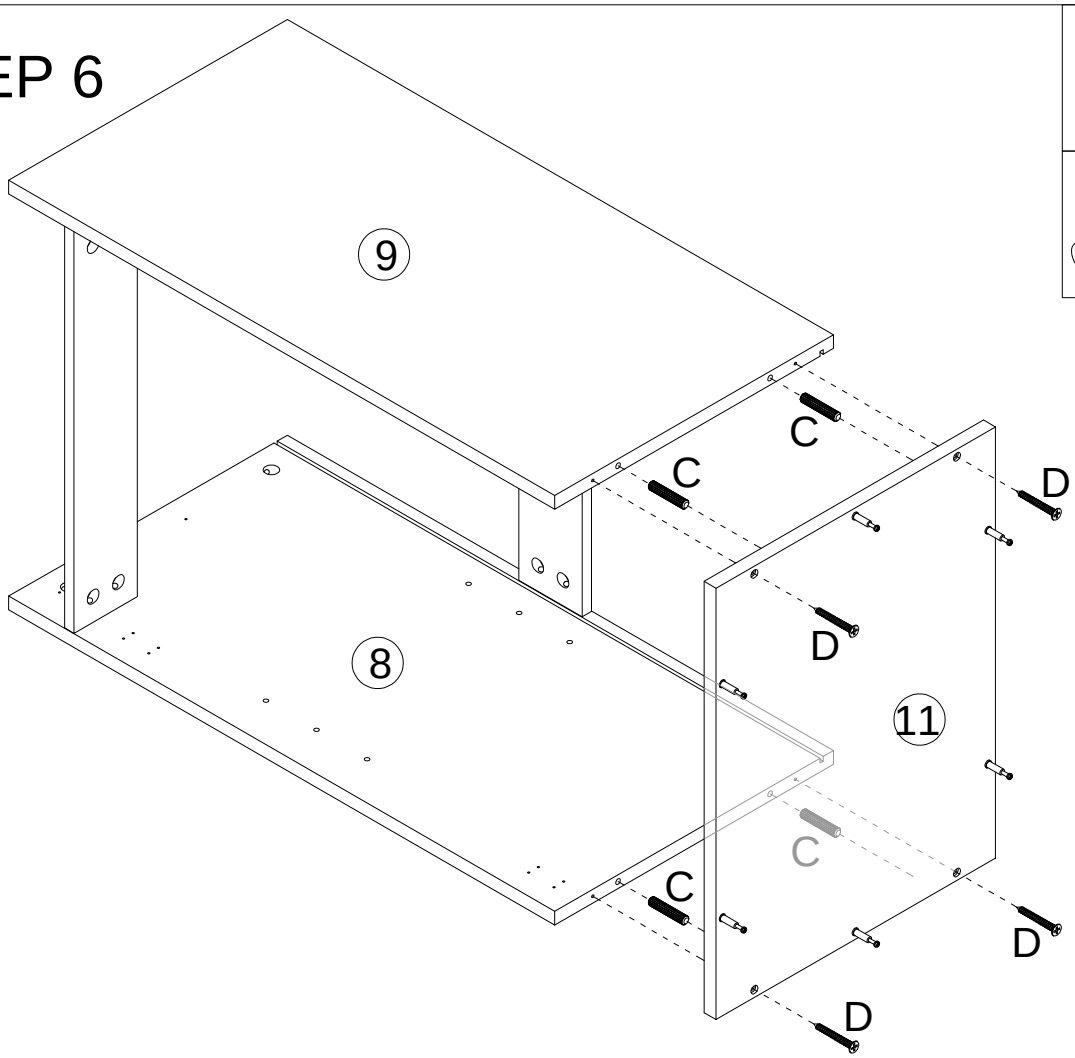
# STEP 5






B x 4


C x 4


# STEP 6



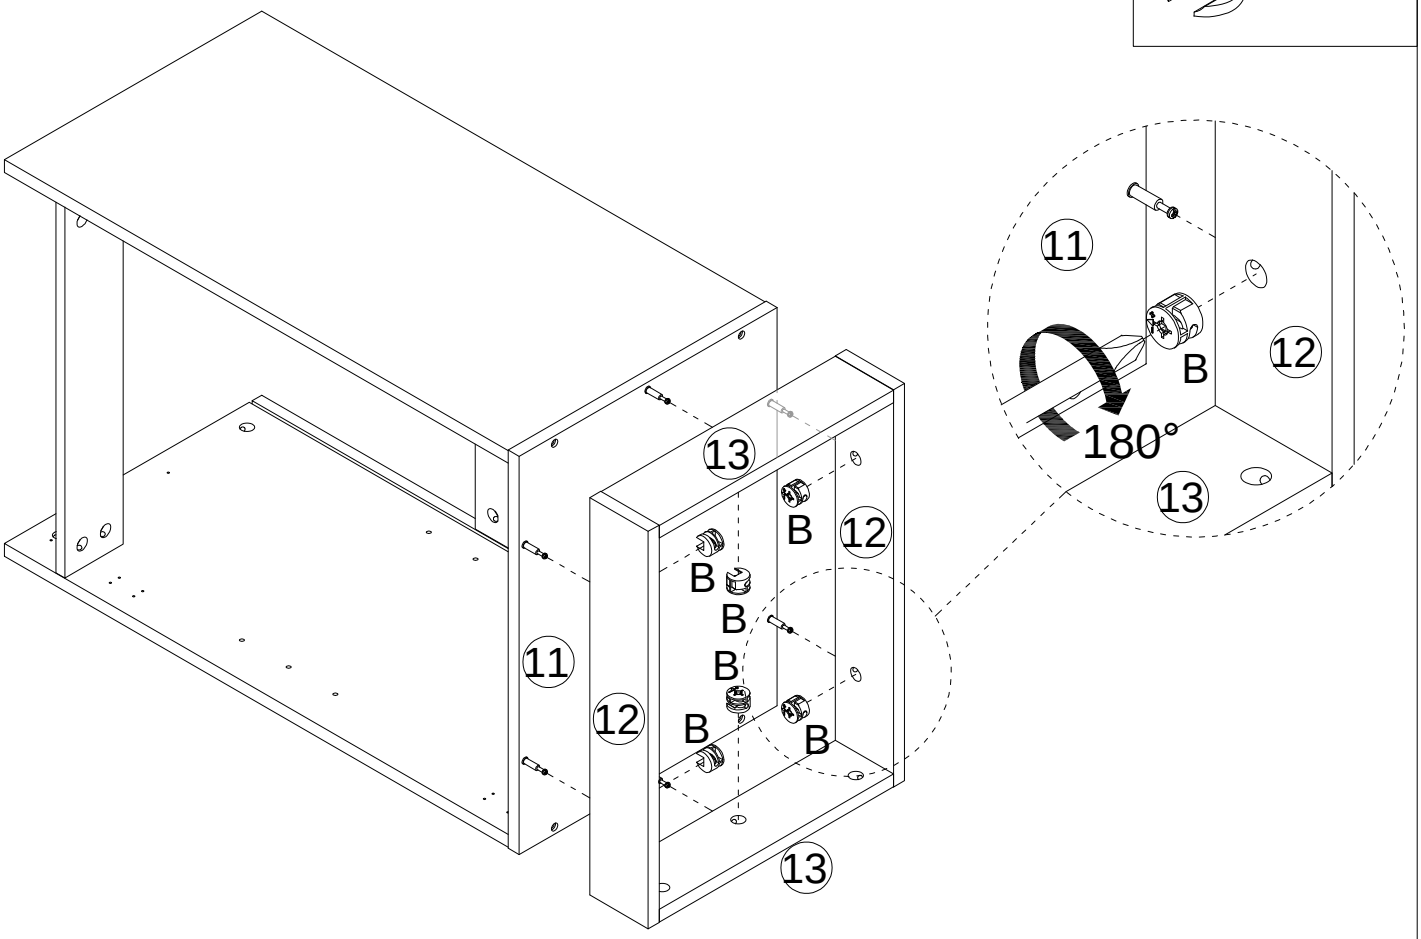


C x 4


D x 4

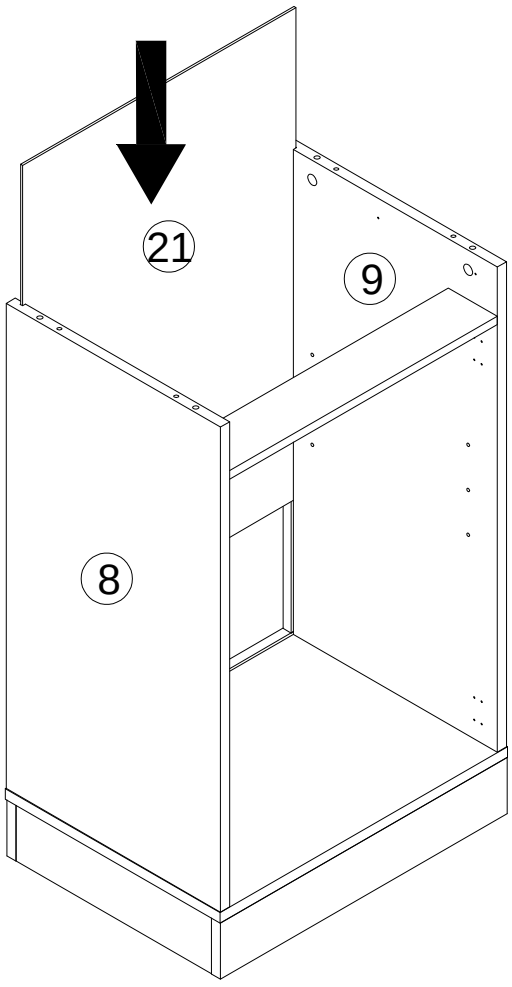
# STEP 7



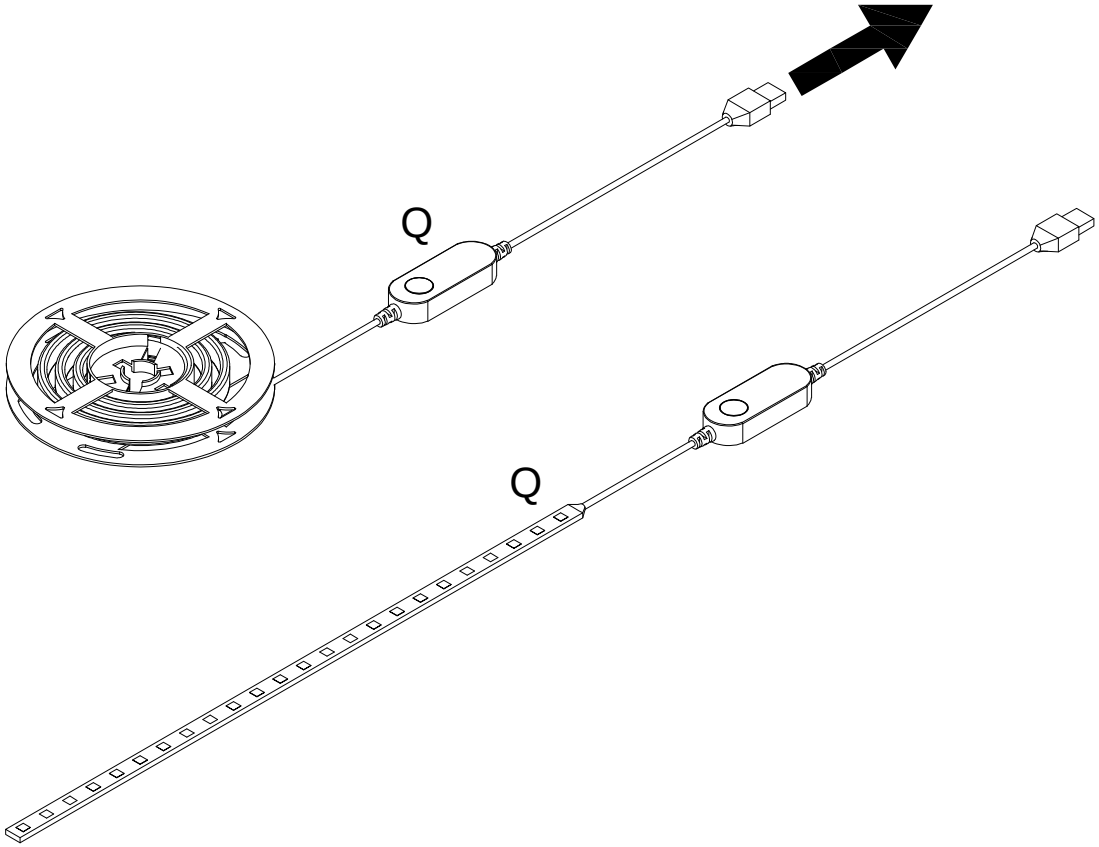
B x 6


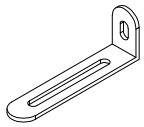


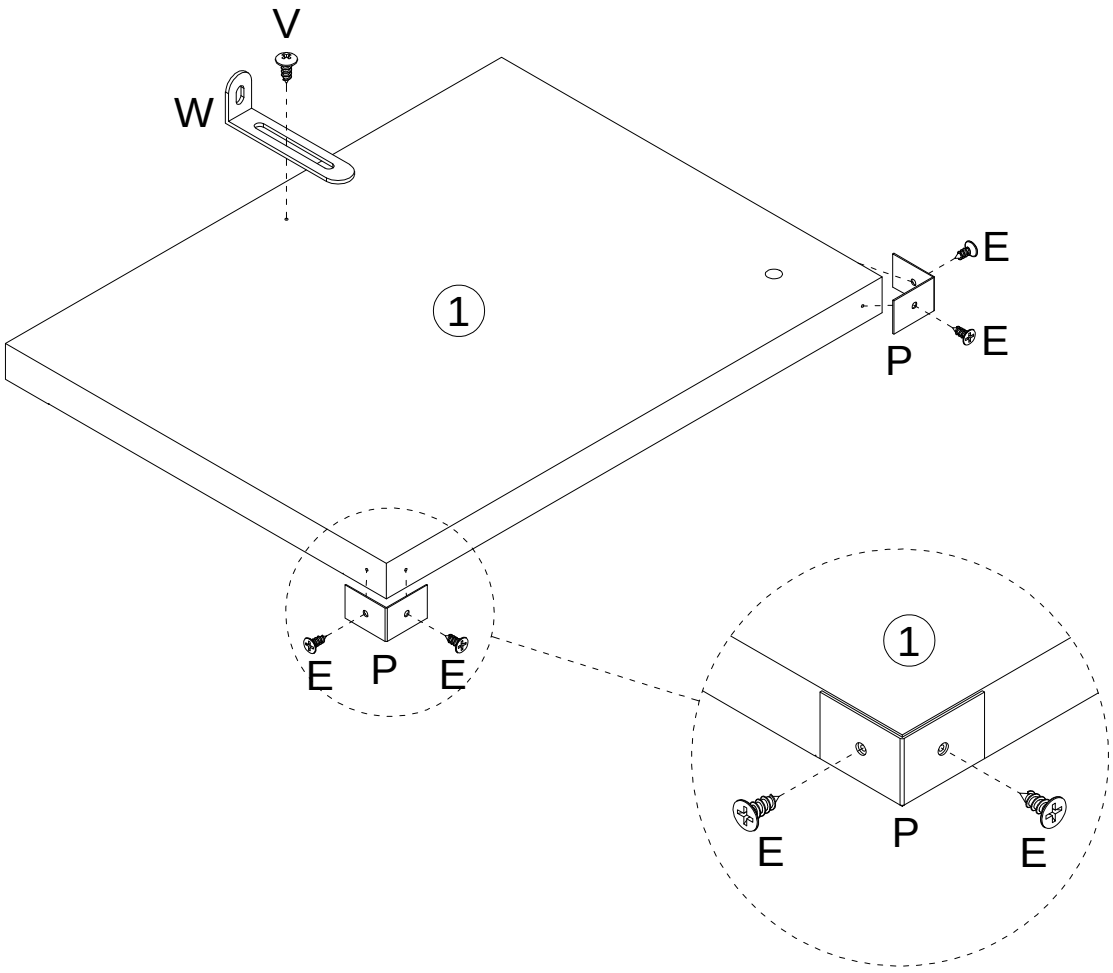

# STEP 8



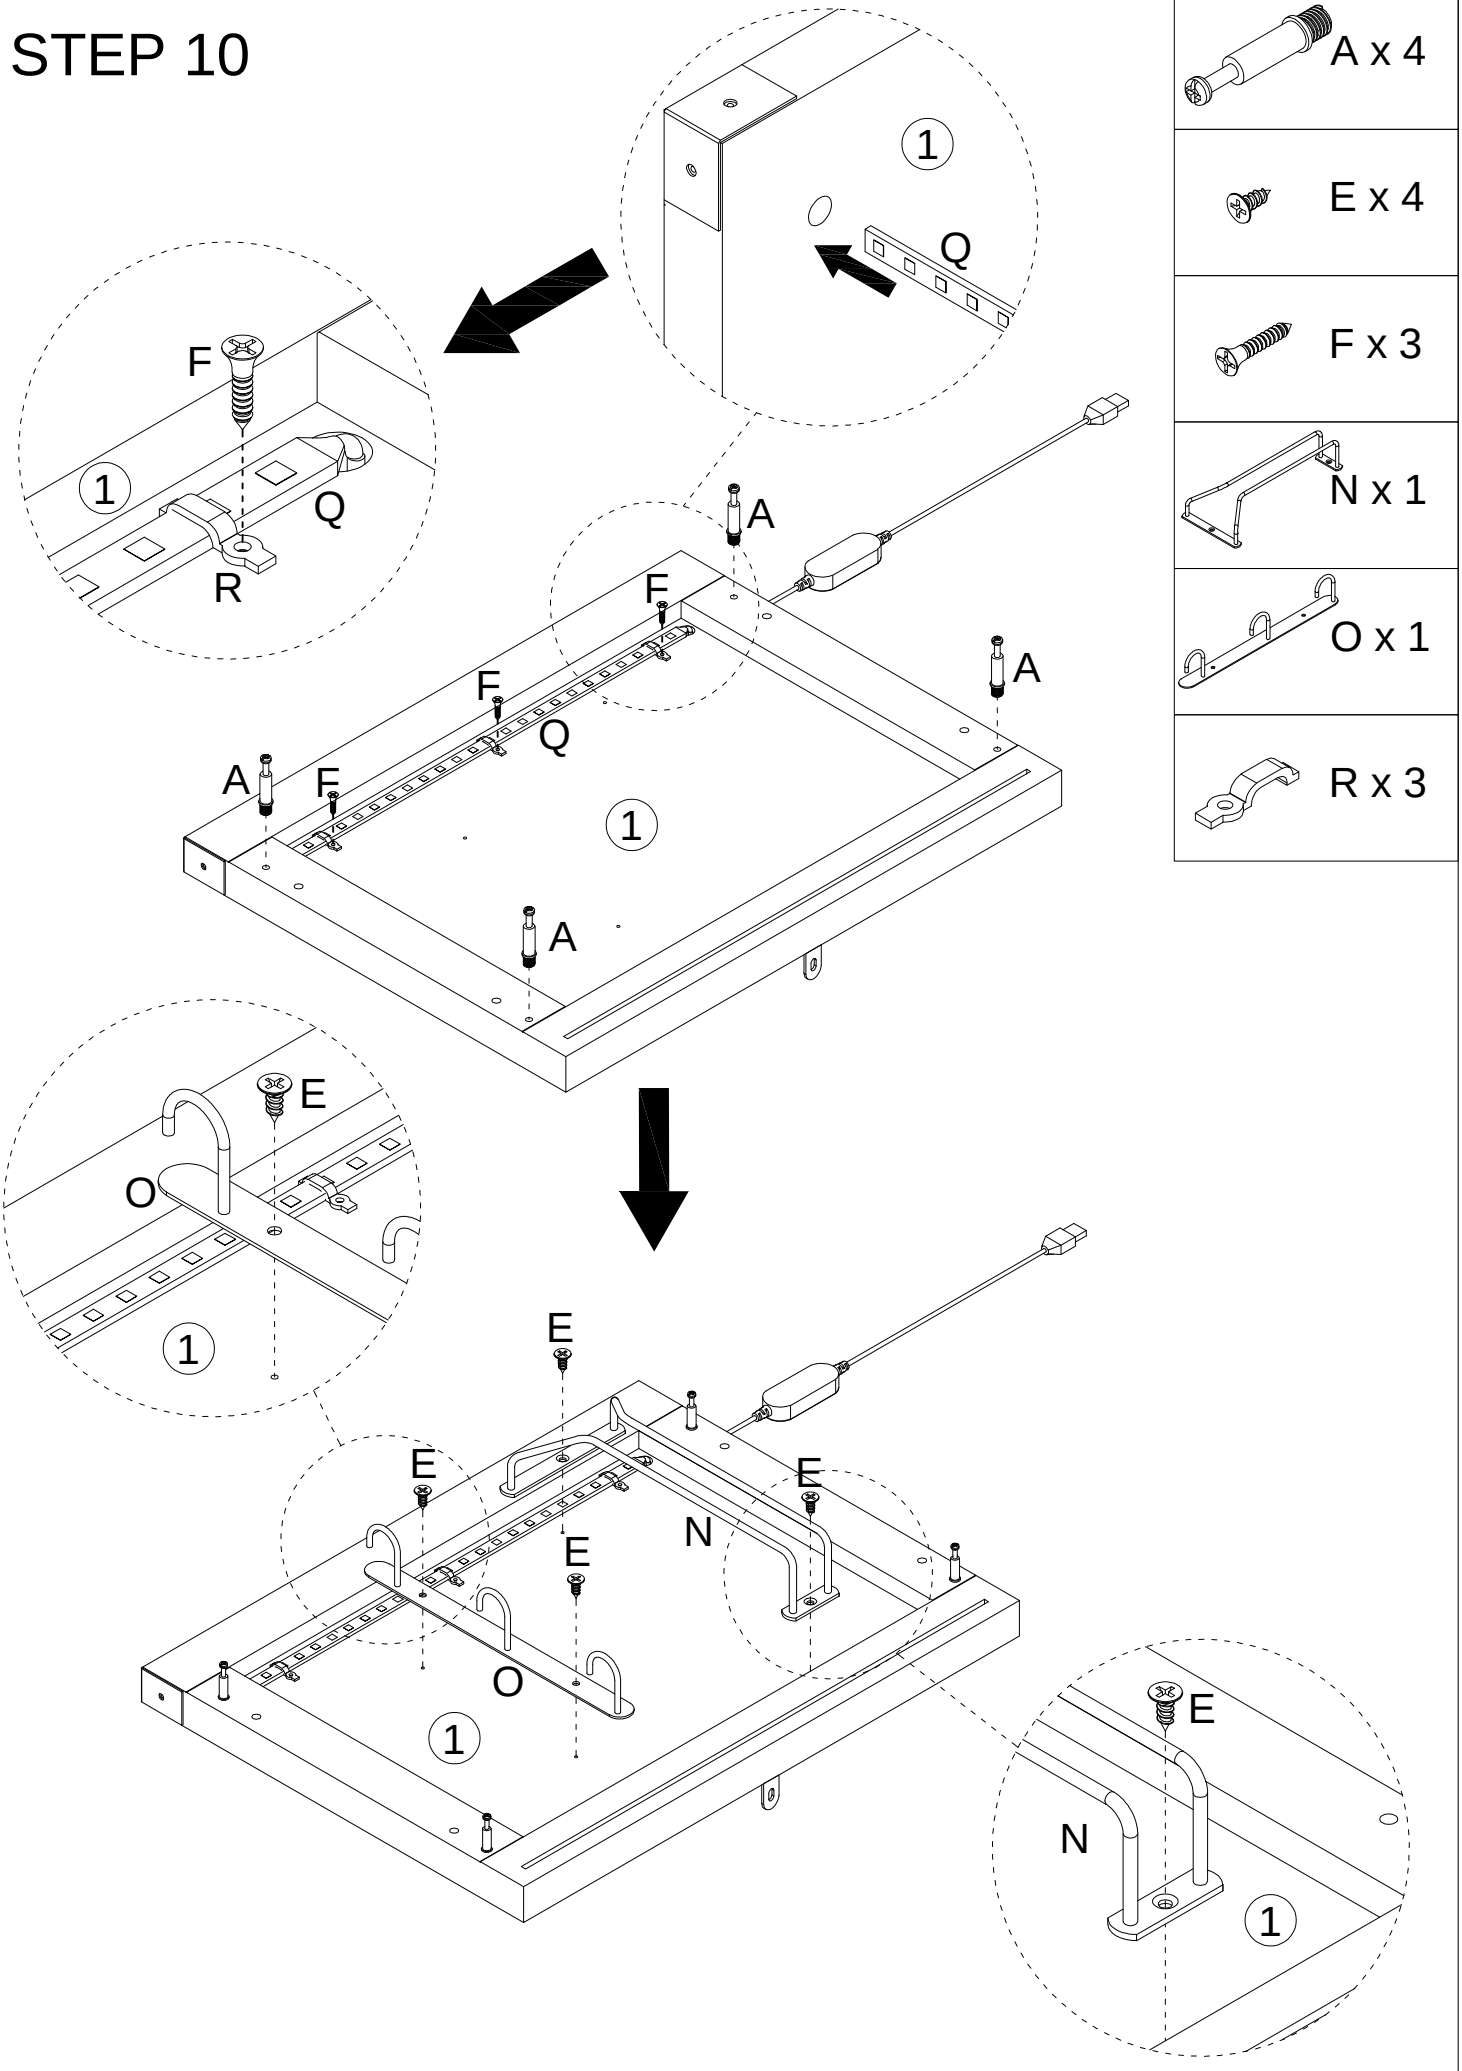
# STEP 9





| | |
|---|---|
|  | E x 4 |
|  | P x 2 |
|  | Q x 1 |
|  | V x 1 |
|  | W x 1 |

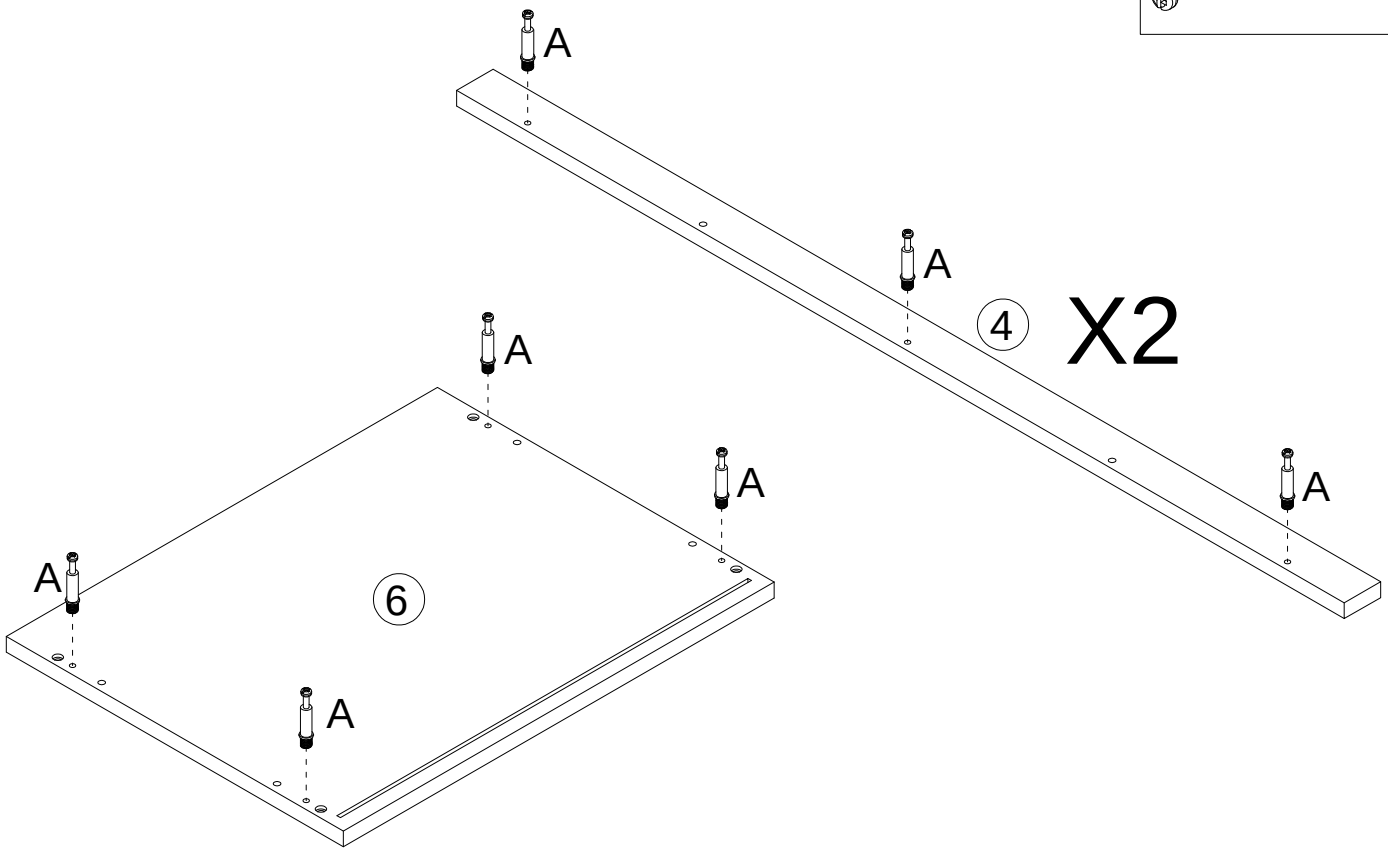


# STEP 10




# STEP 11






# STEP 12



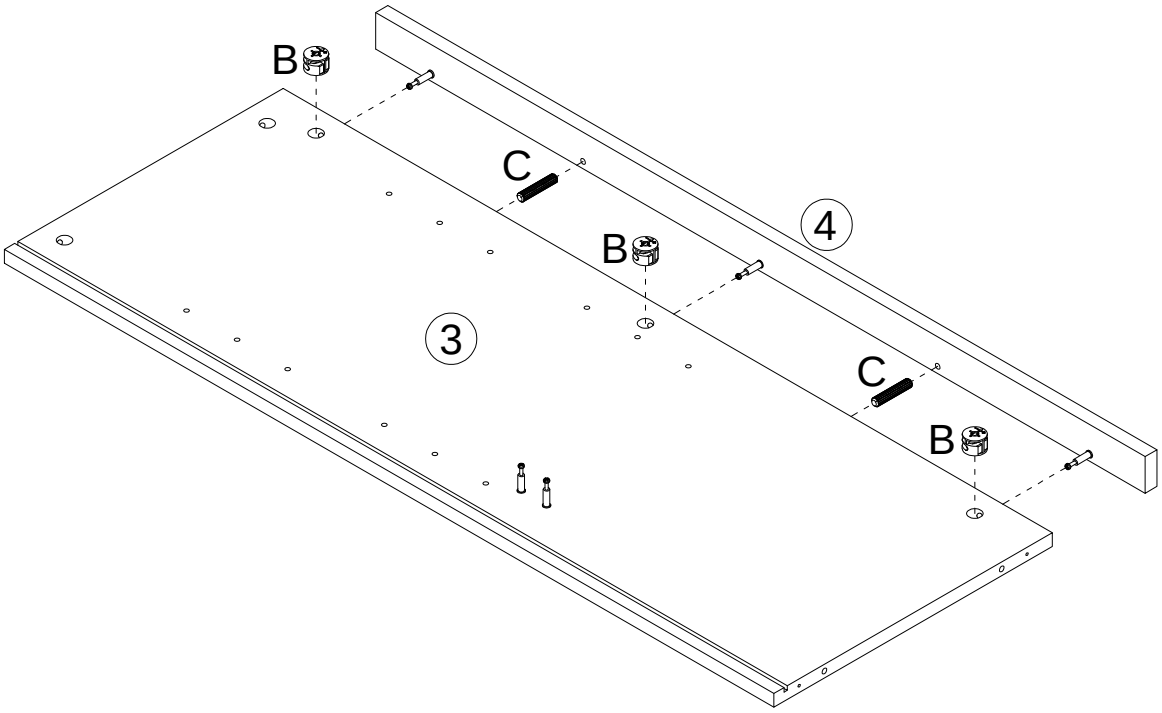
# STEP 13

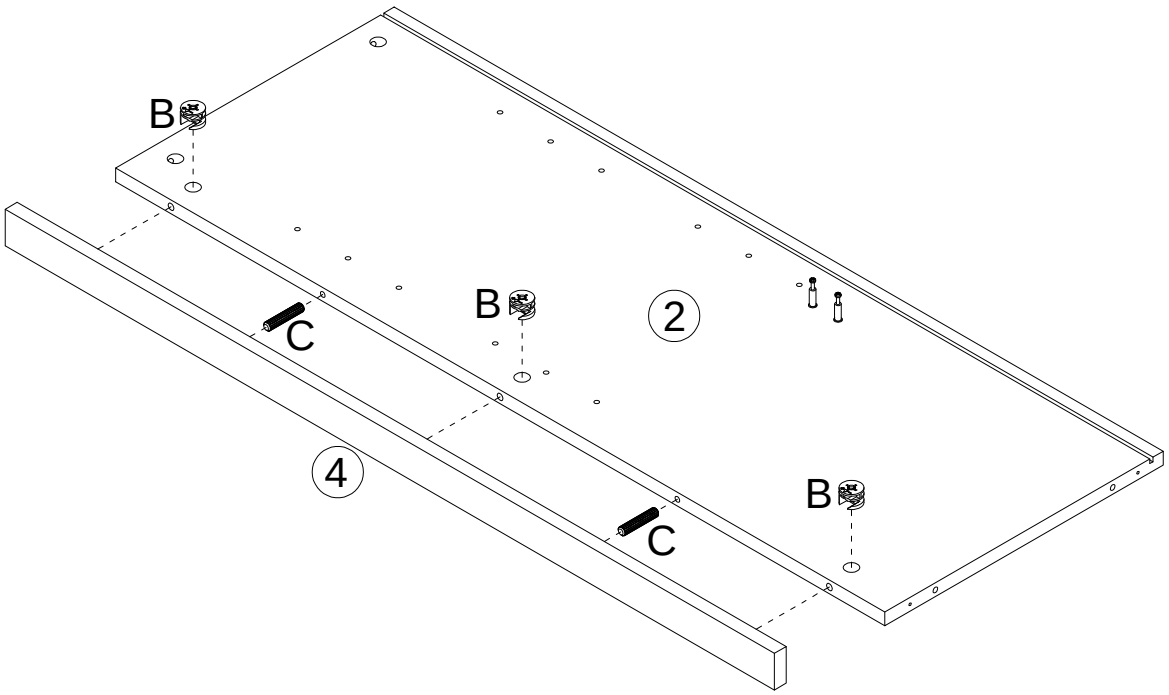


B x 6



C x 4



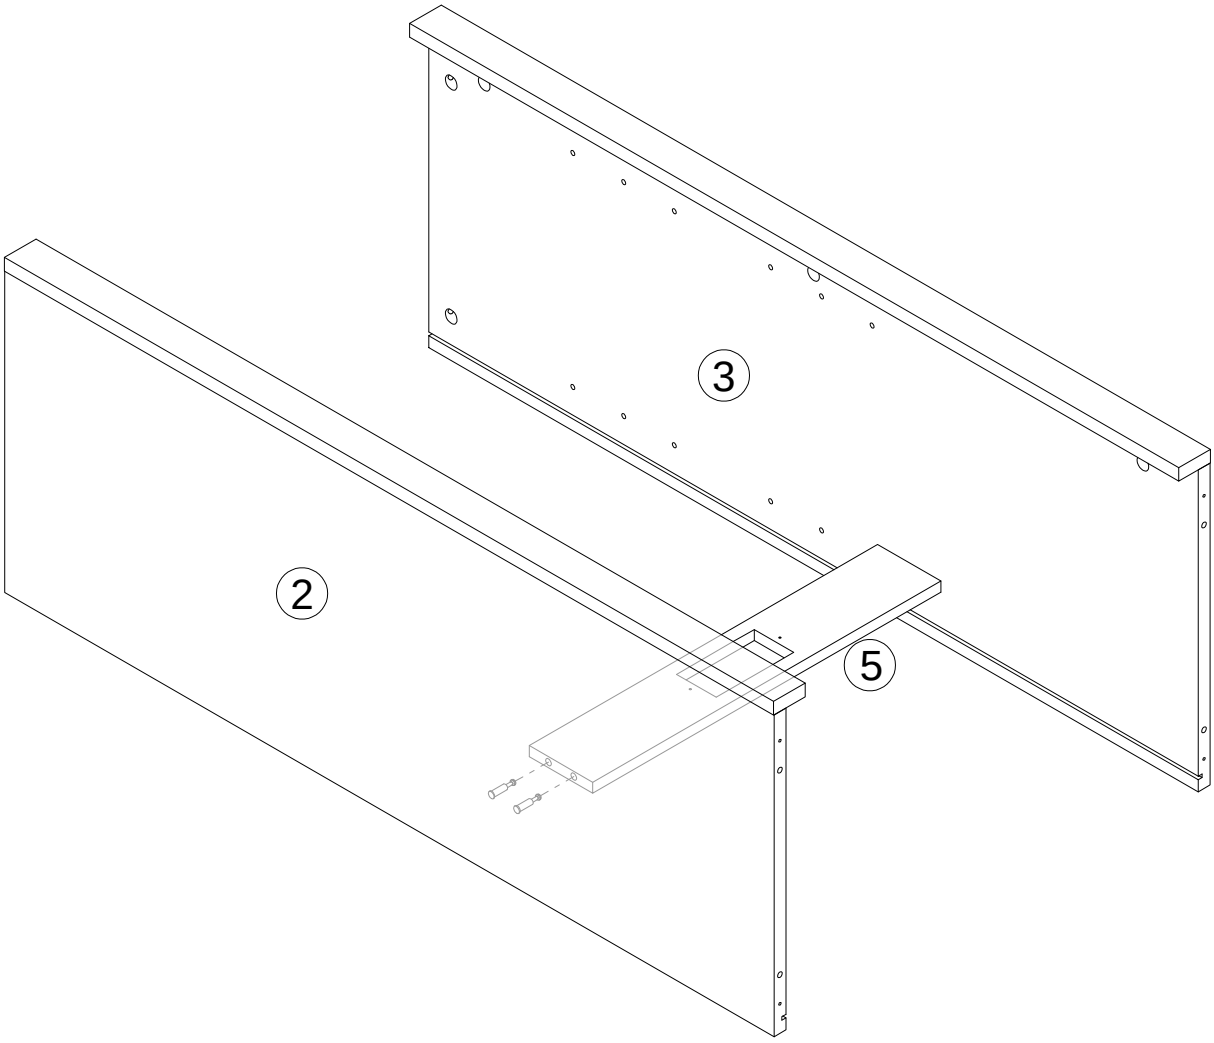



# STEP 14




B x 2




# STEP 15

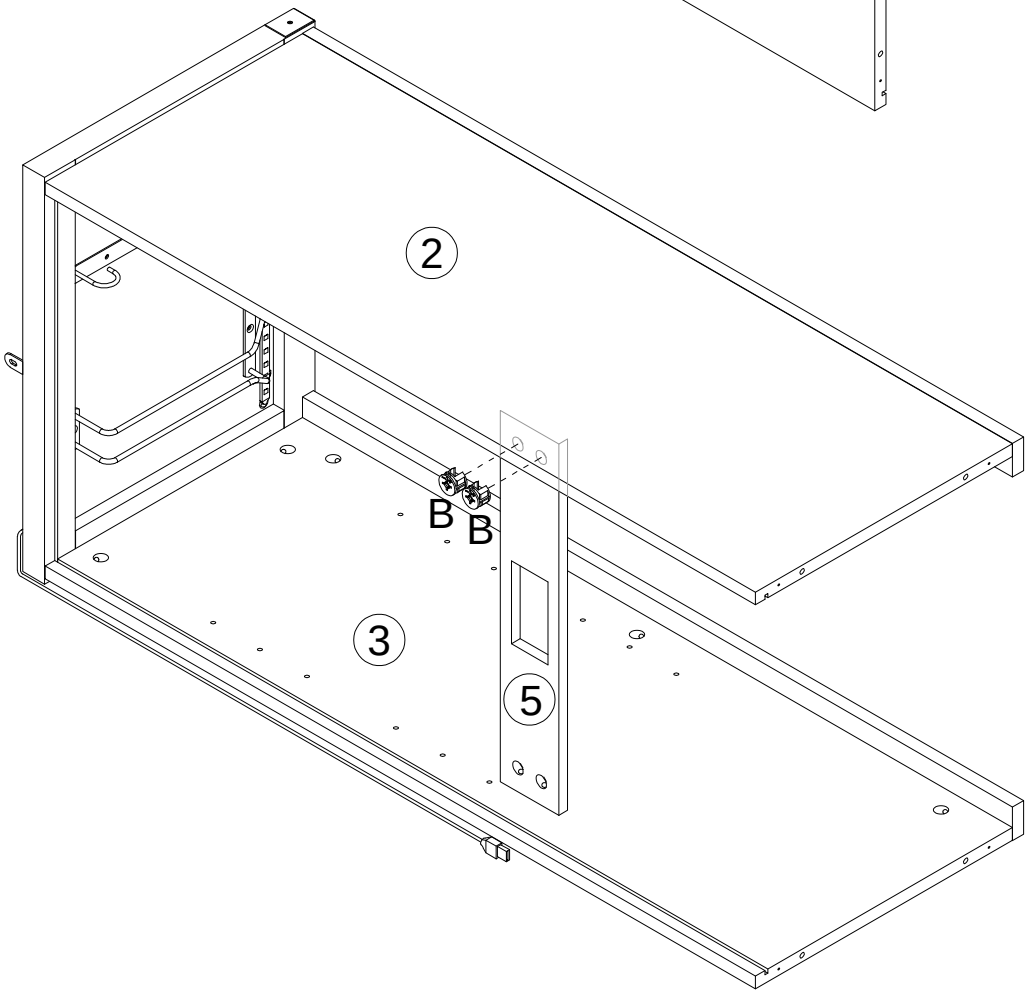


B x 6

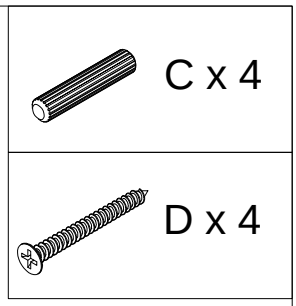


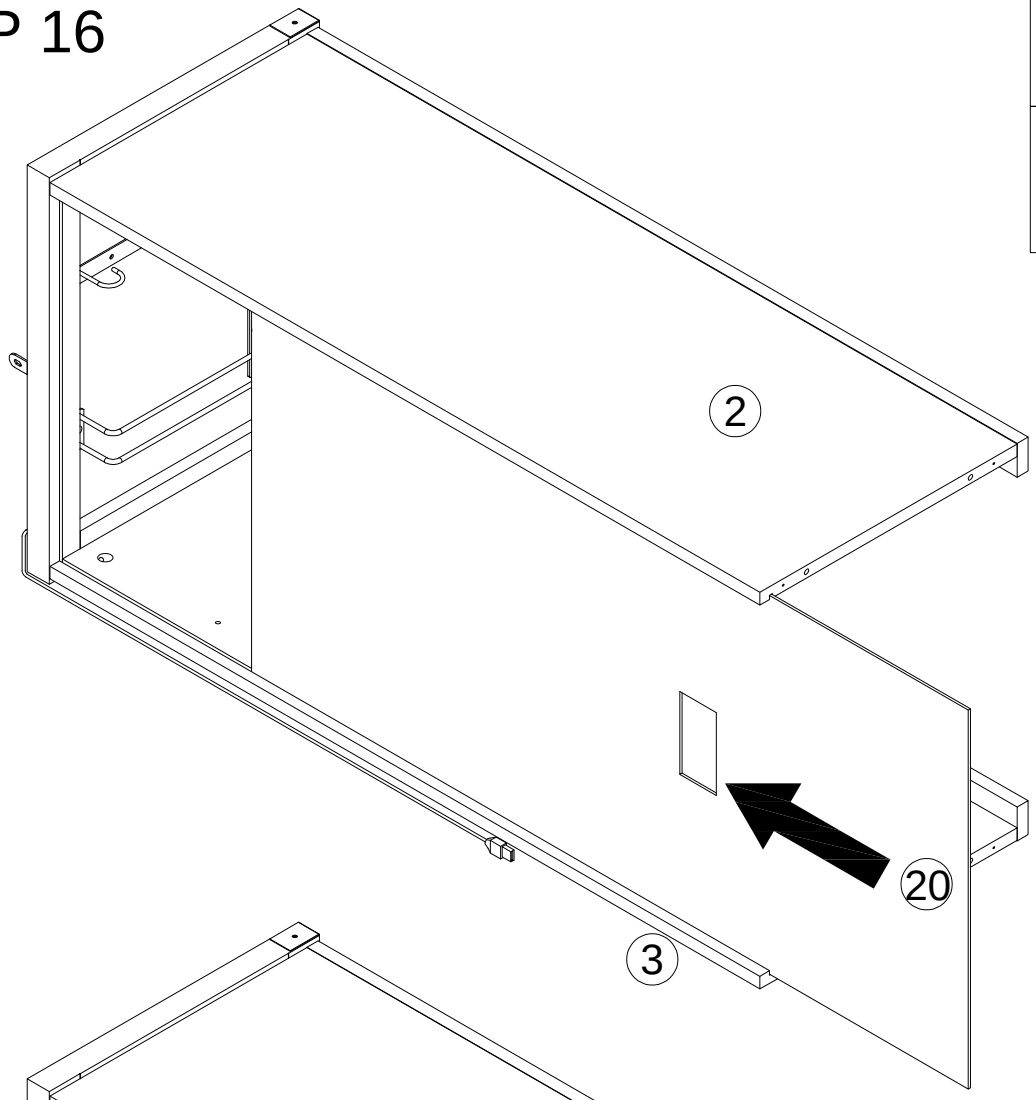
C x 4

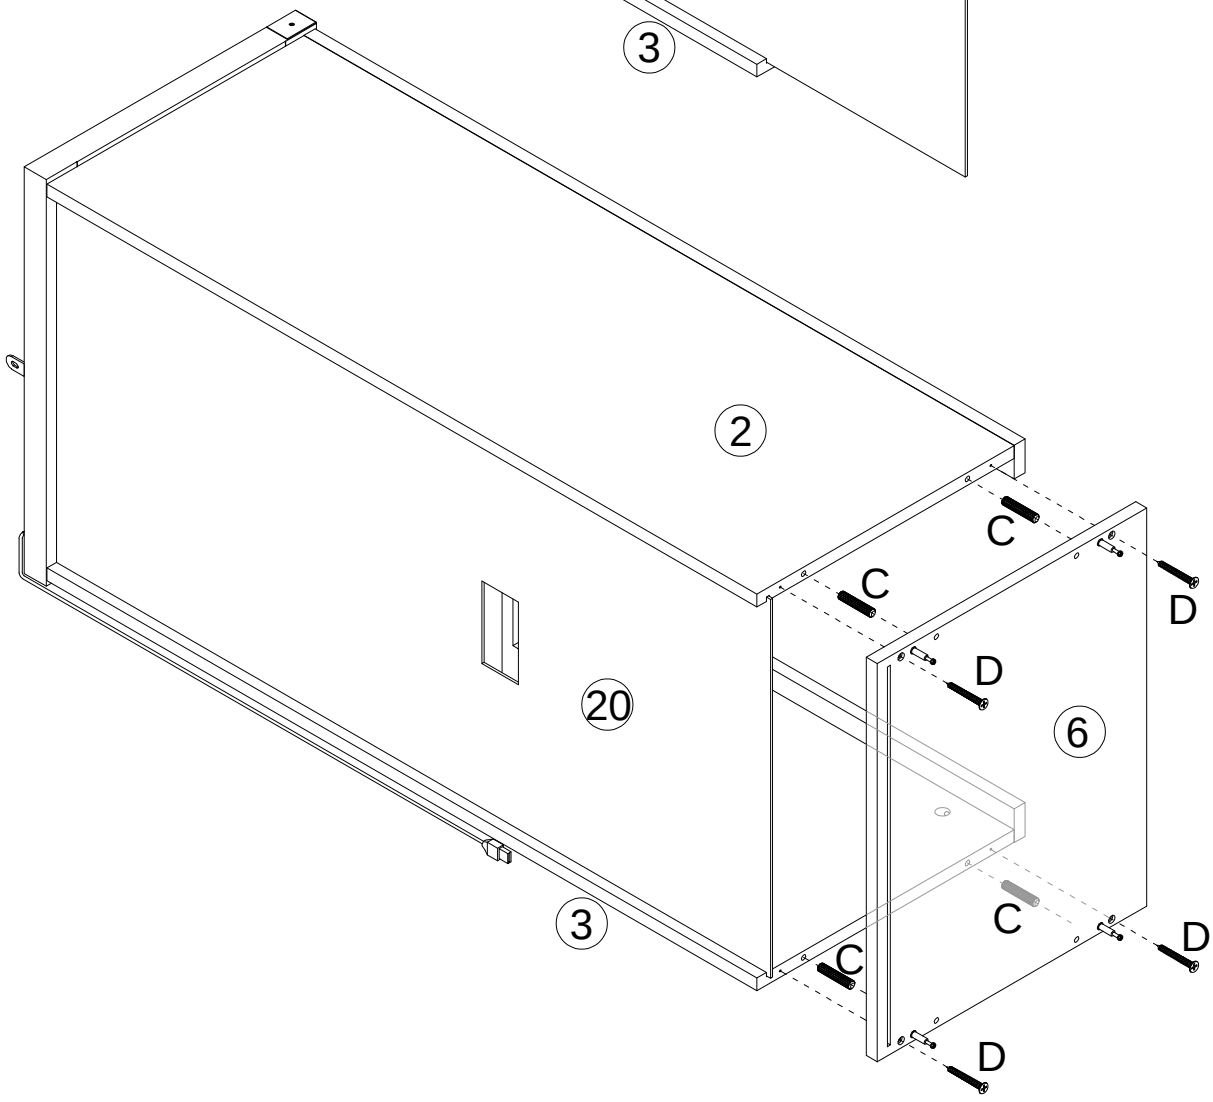


# STEP 16

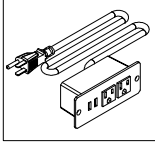


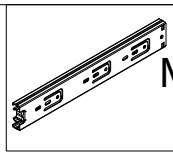
# STEP 17

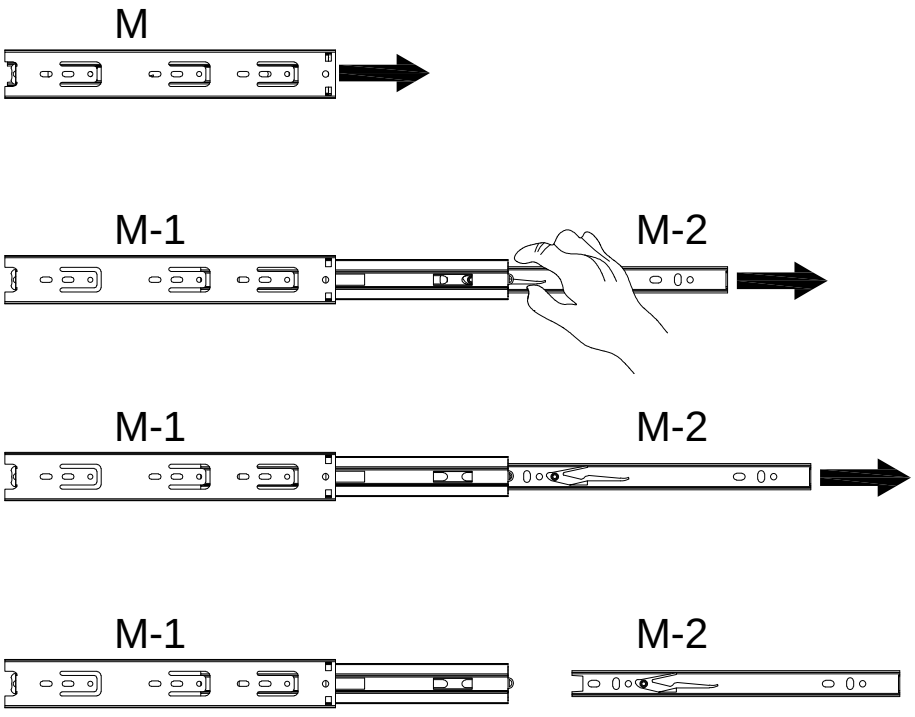

E x 2


S x 1

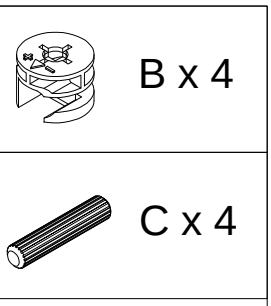



# STEP 18


M x 2

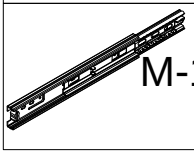


# STEP 19

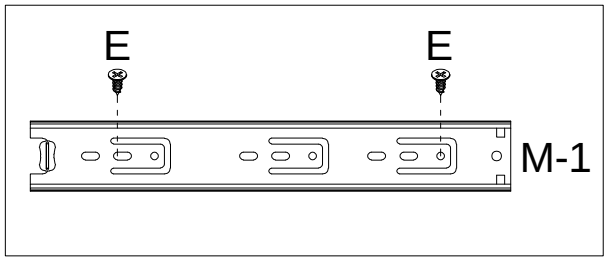


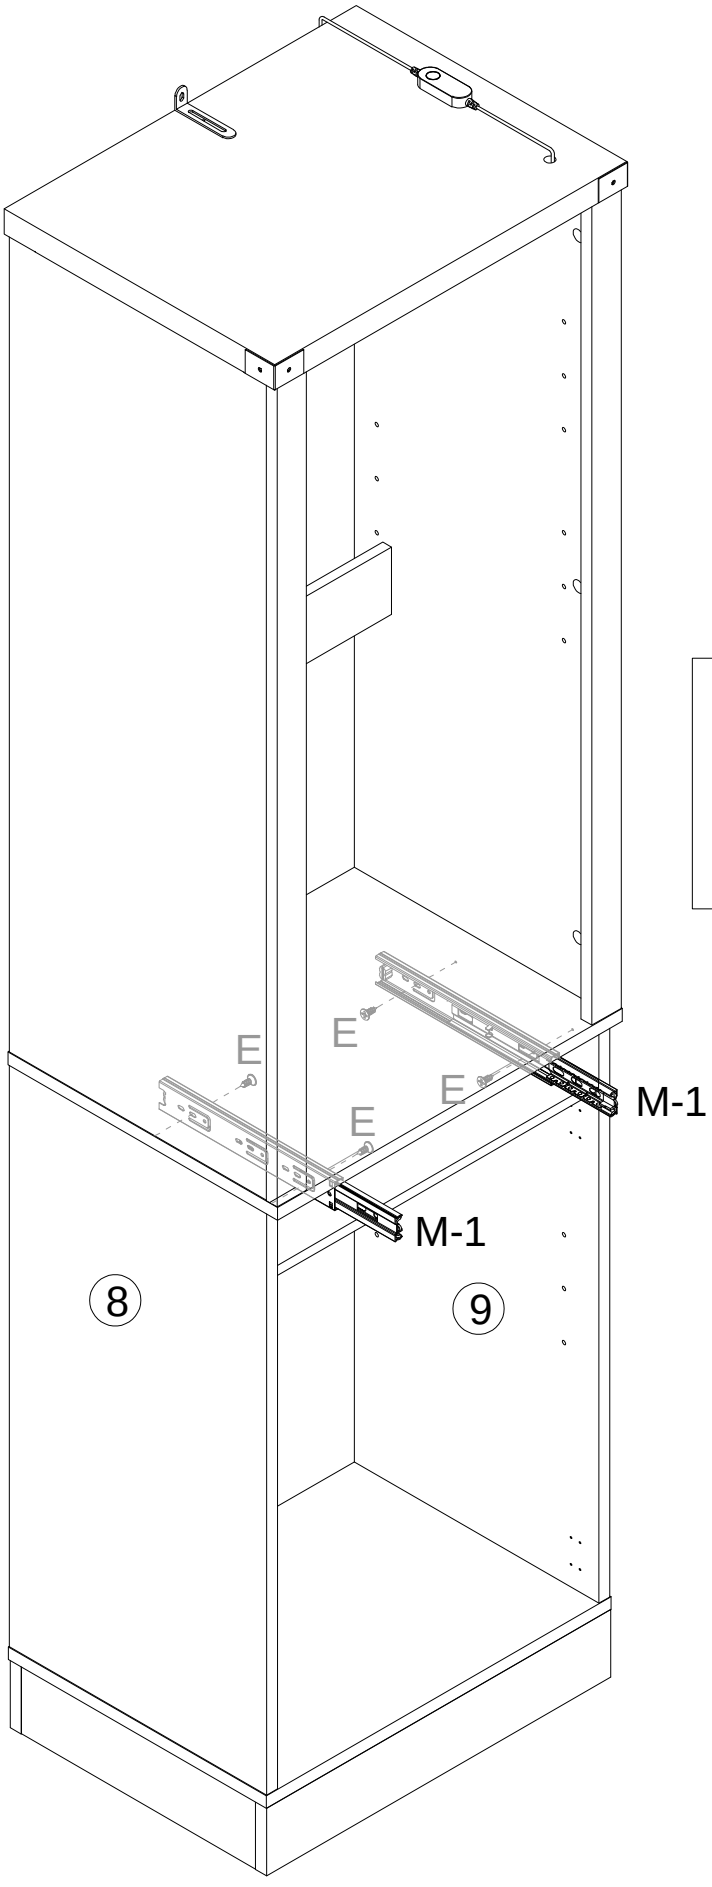
# STEP 20

E x 4



M-1 x 2

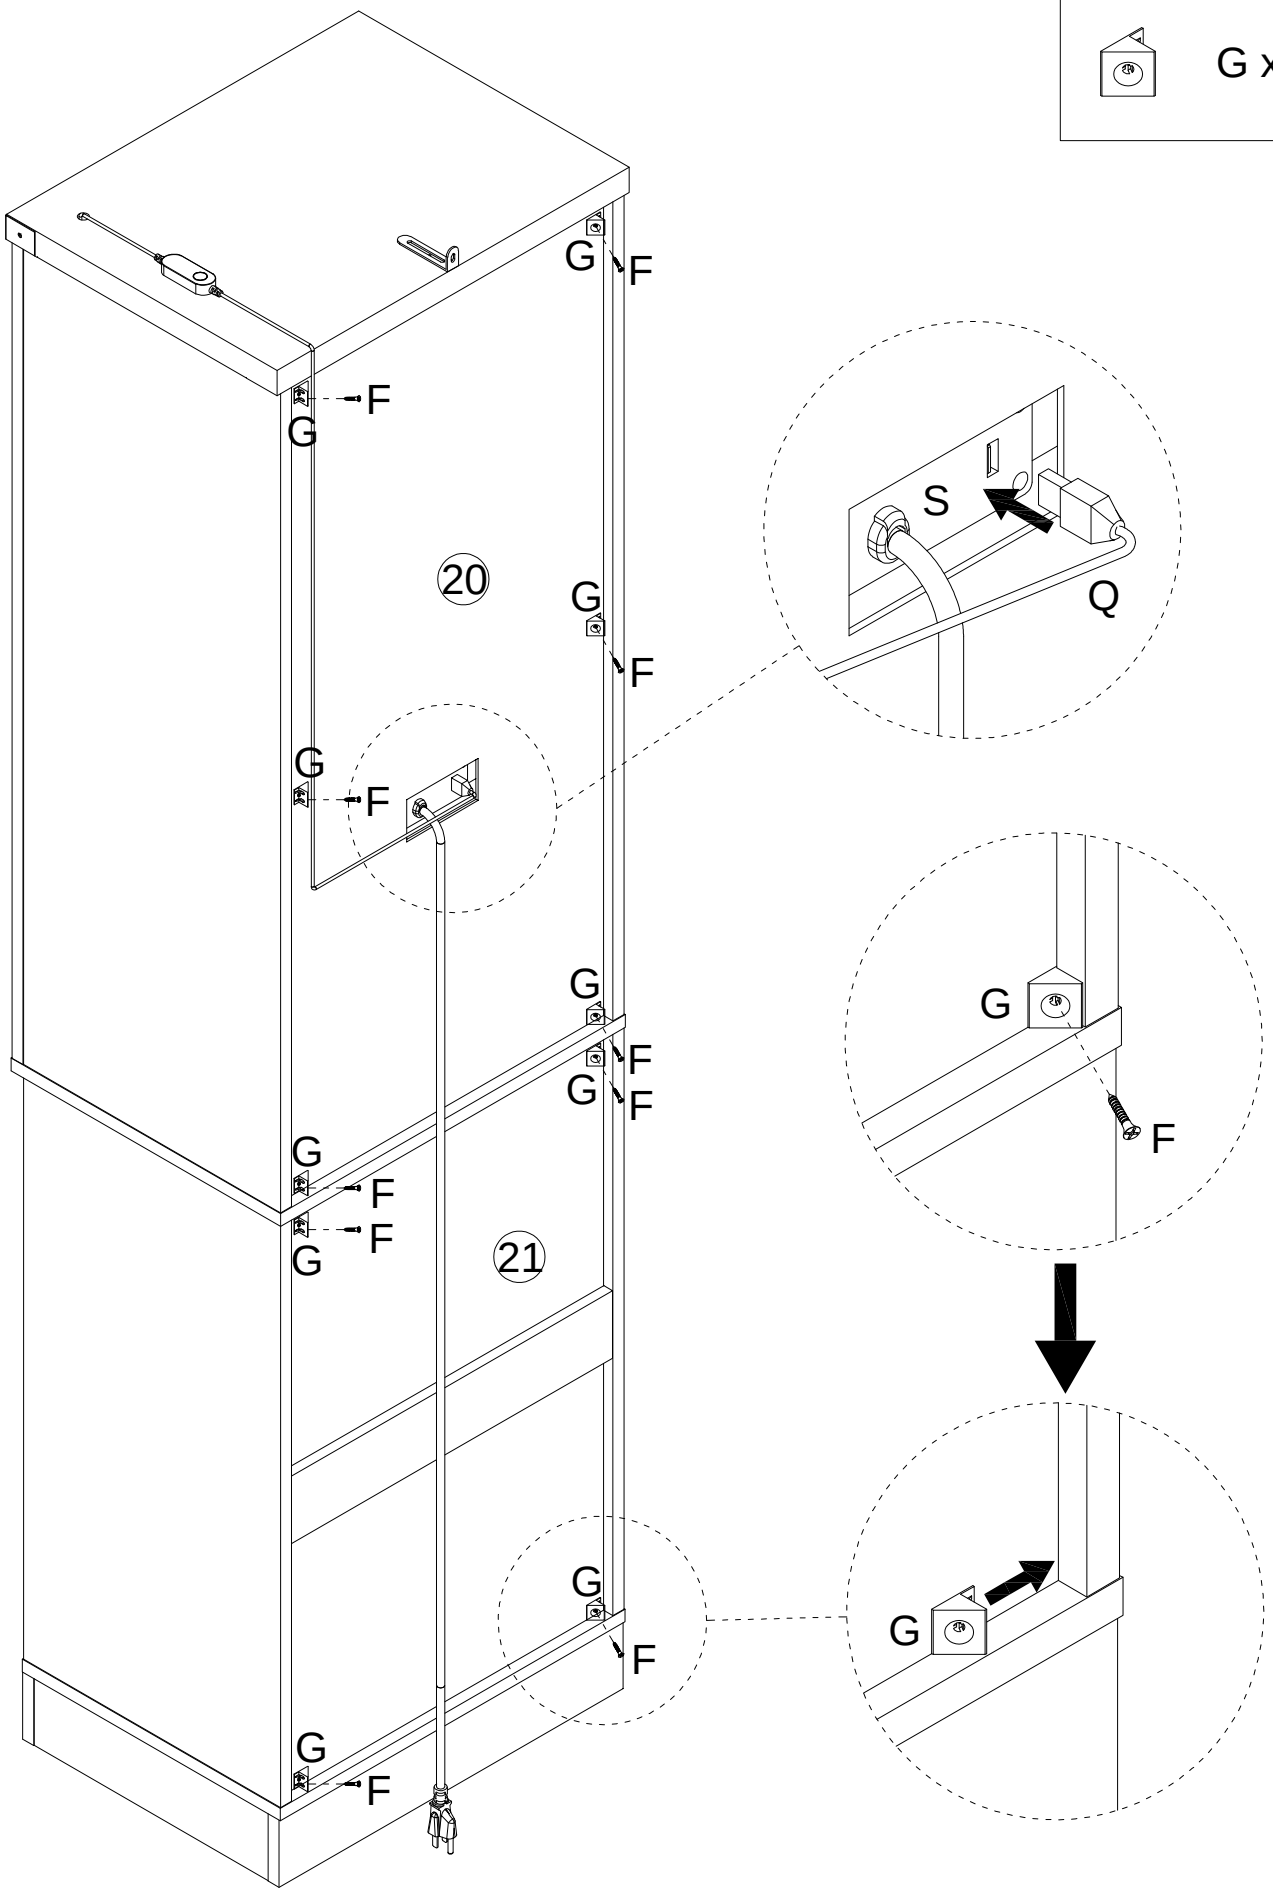


# STEP 21

F x 10

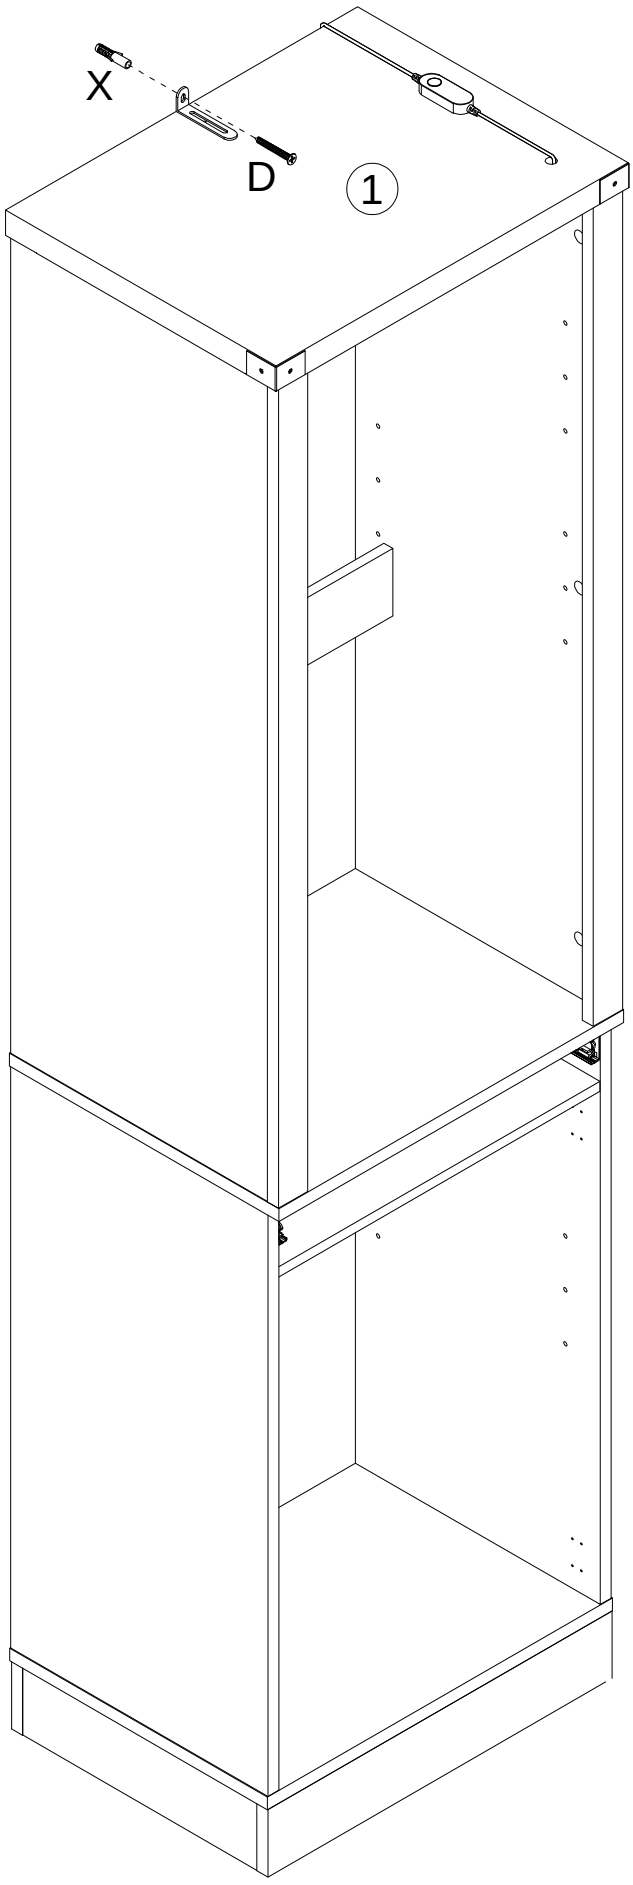
G x 10



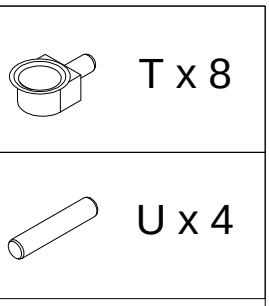
# STEP 22

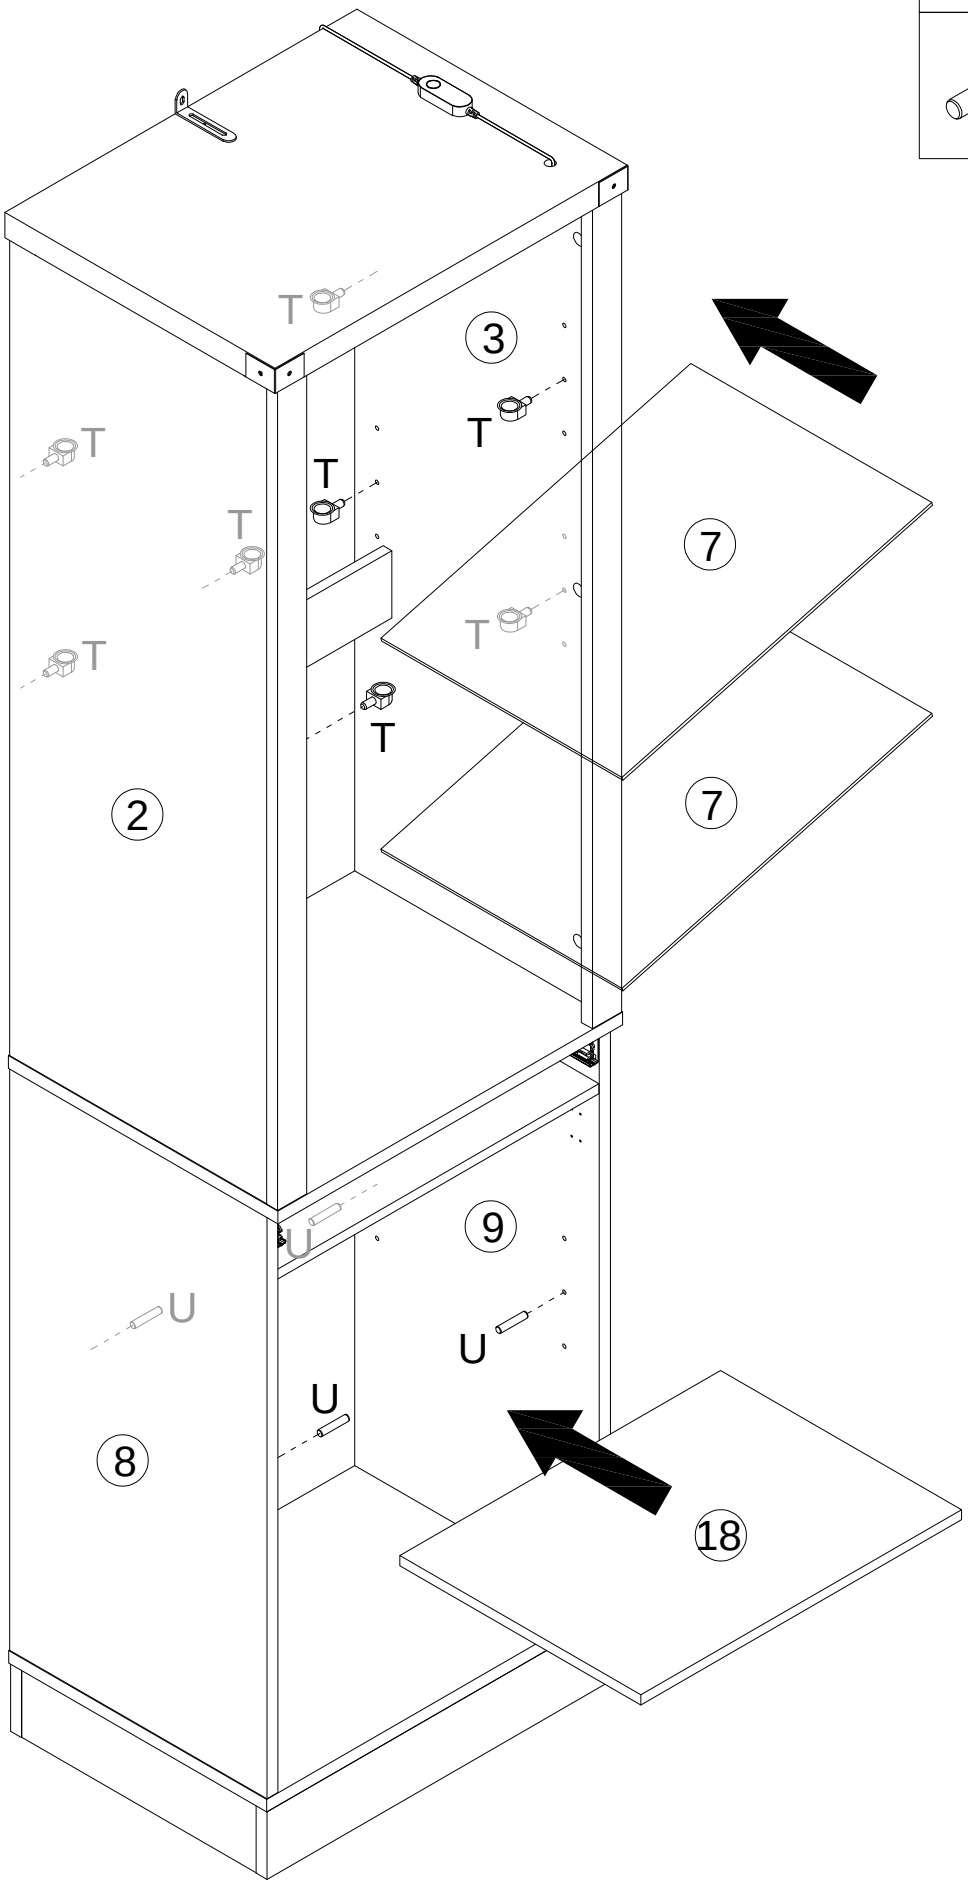

D x 1


X x 1

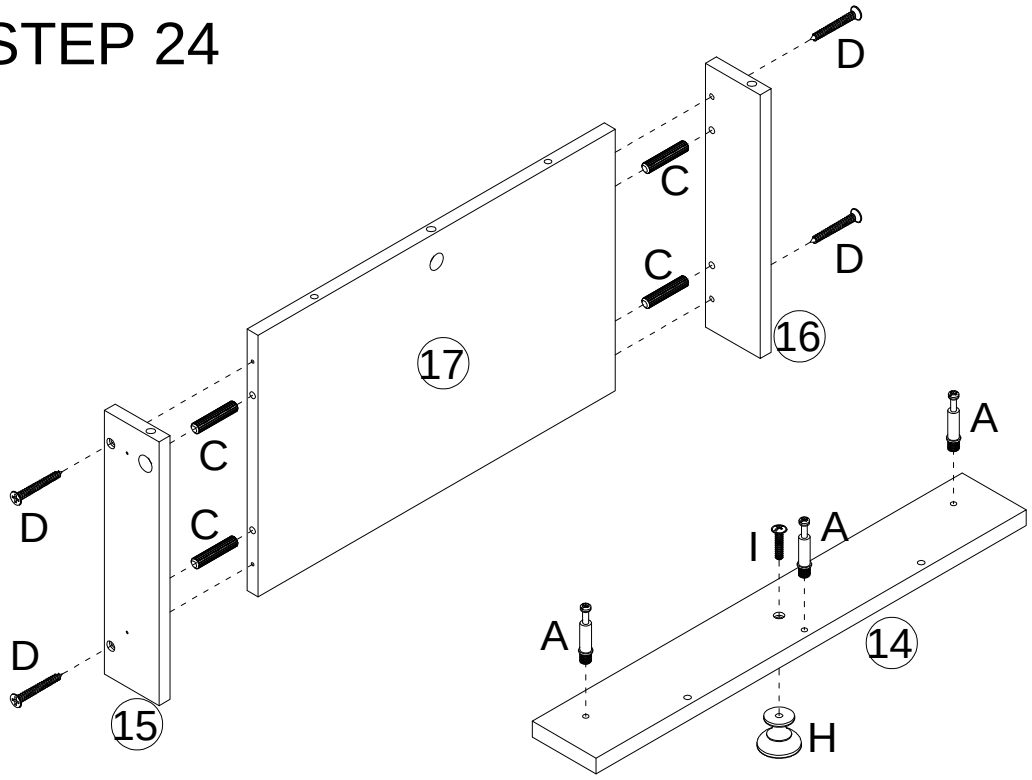


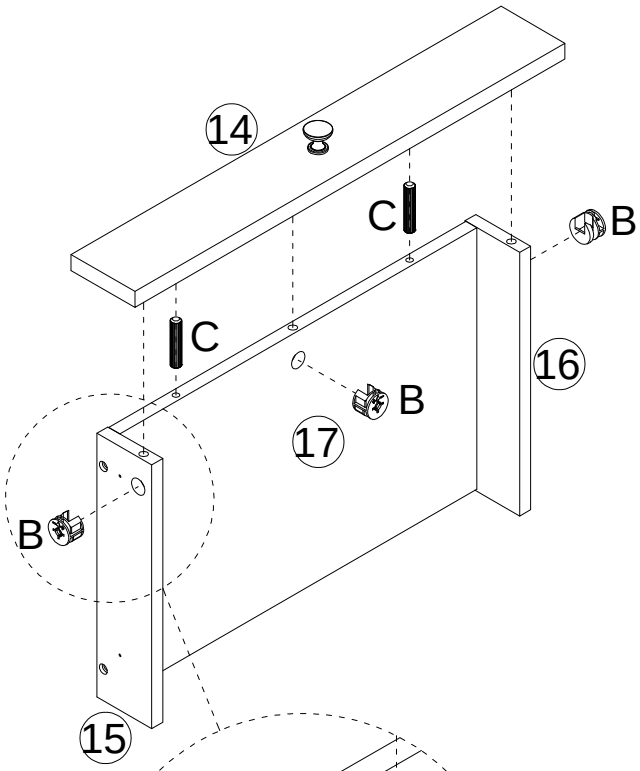
# STEP 23

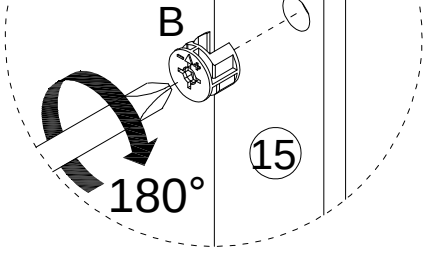


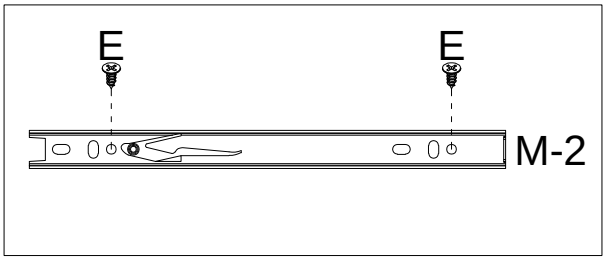



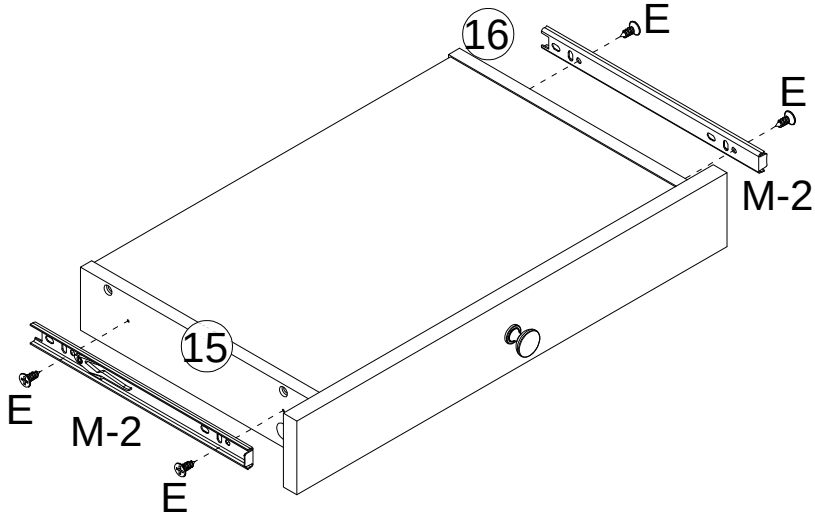
# STEP 24

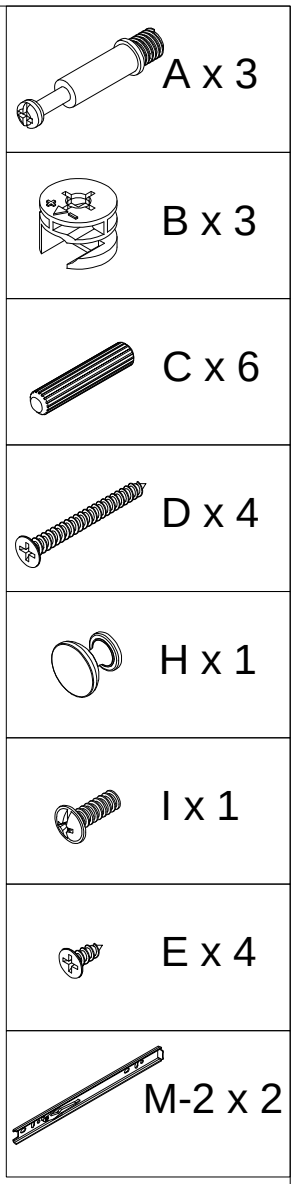

D
C
C
D
16
17
C
C
D
D
15
A
I
A
A
14
H


14
C
B
C
16
B
17
B
15

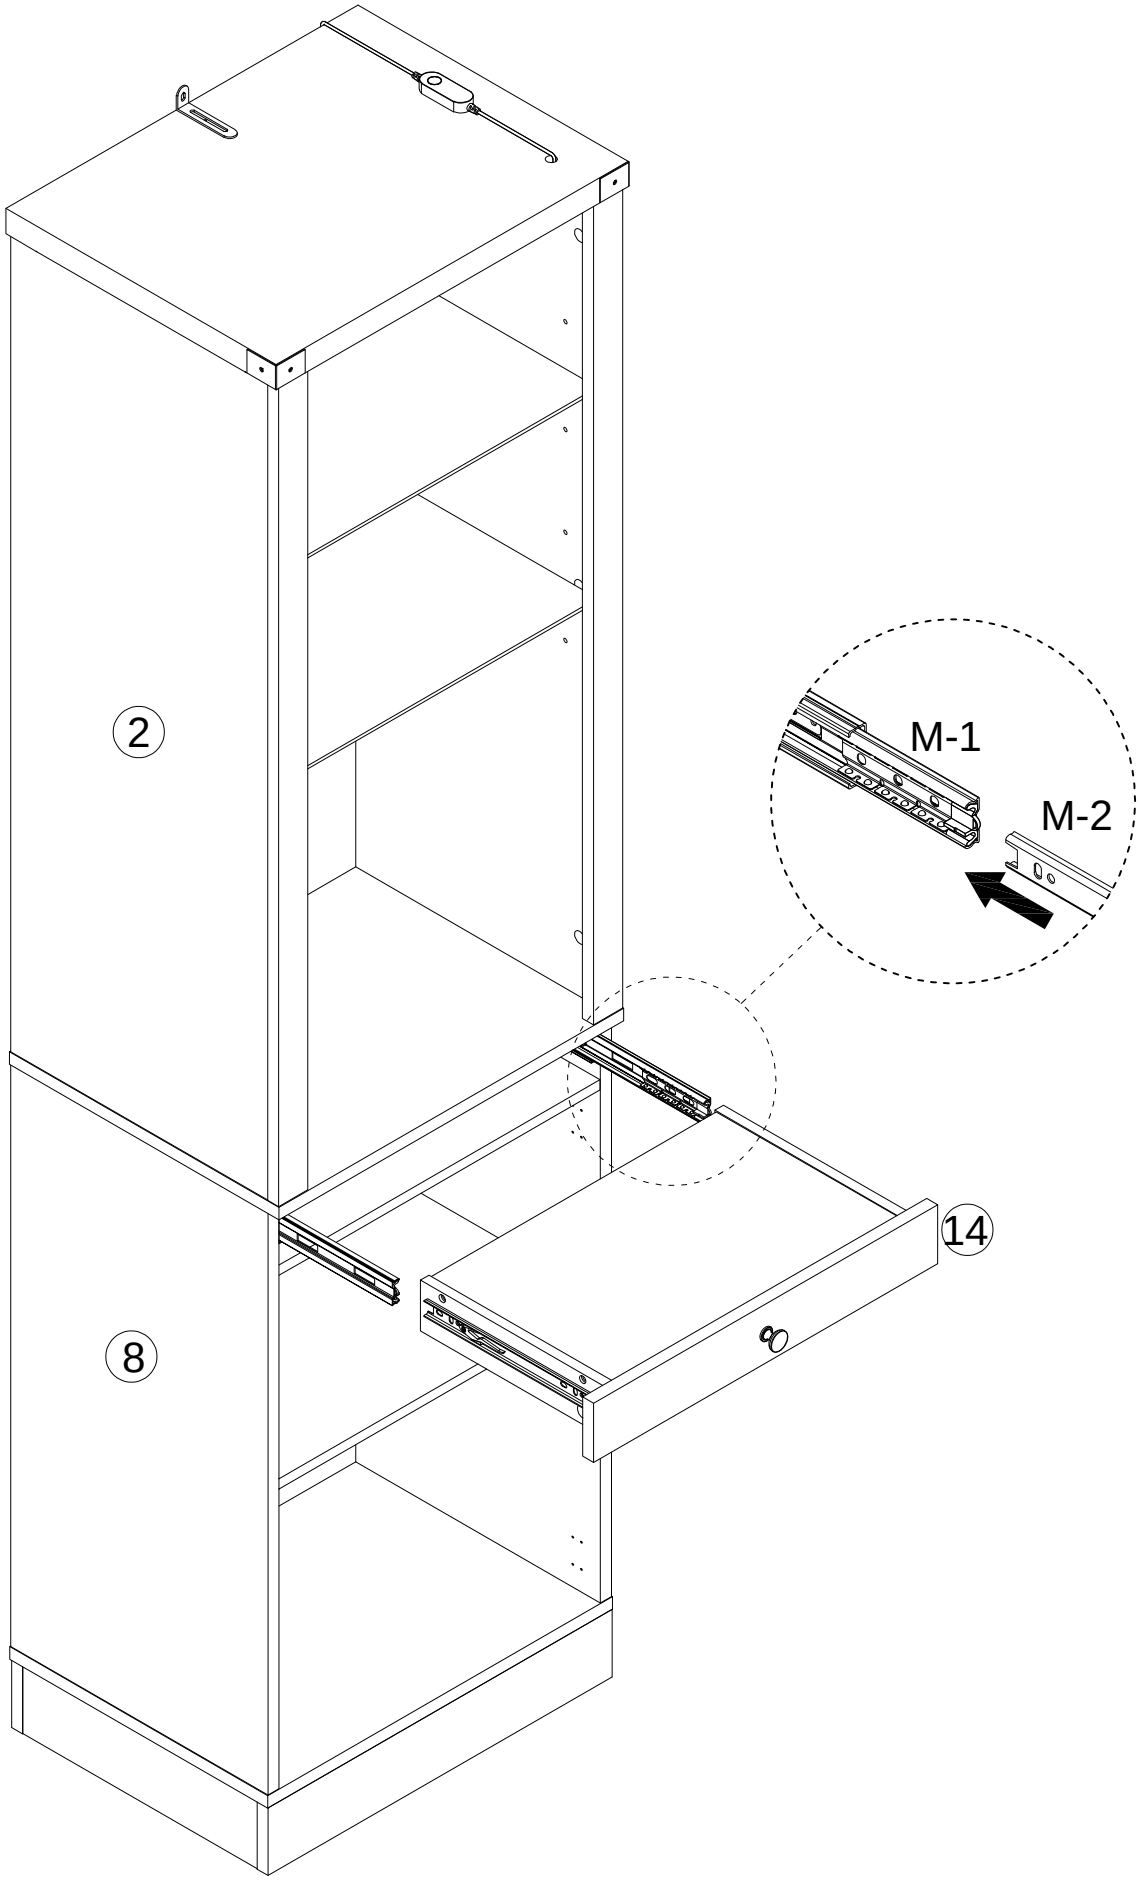

B
180°
15


E
E
M-2



16
E
E
M-2
15
E
M-2
E

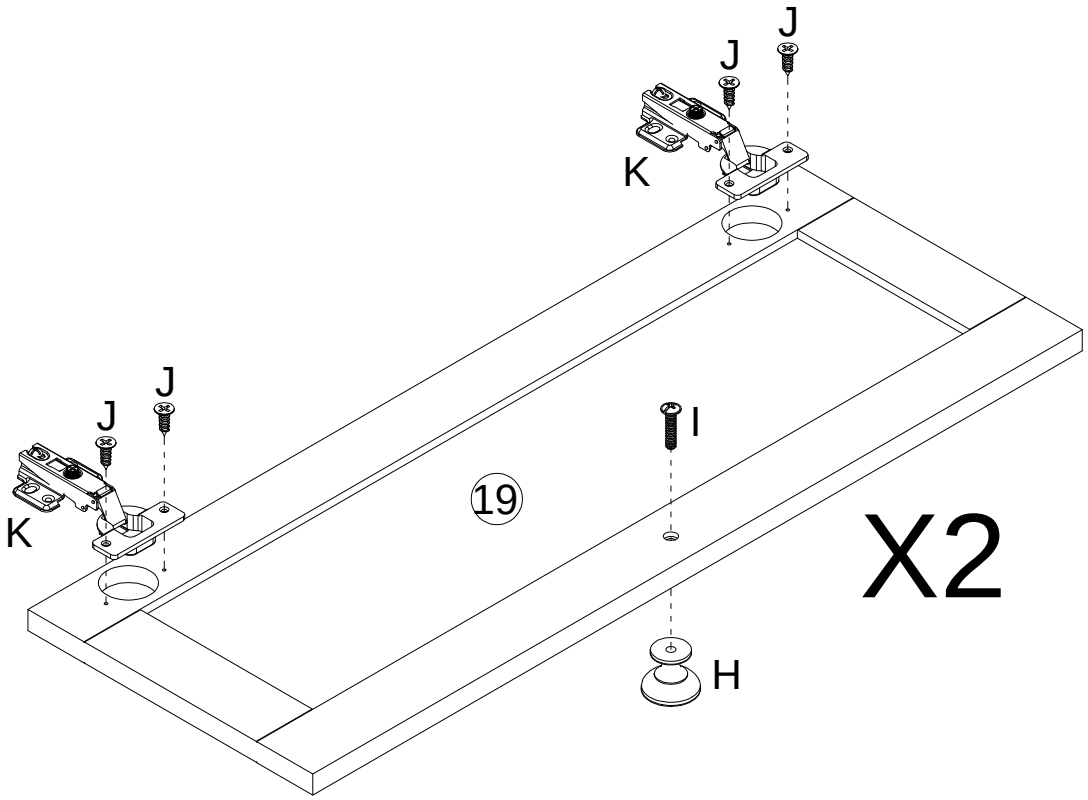

A x 3
B x 3
C x 6
D x 4
H x 1
I x 1
E x 4
M-2 x 2

# STEP 25



# STEP 26

| | |
|---|---|
|  | H x 2 |
|  | I x 2 |
|  | J x 8 |
|  | K x 4 |



# STEP 27

J x 16

L x 39

