


Installation & Assembly

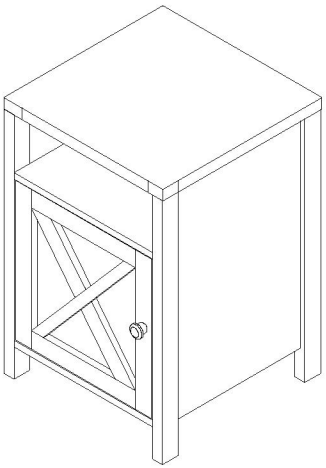


LEFT

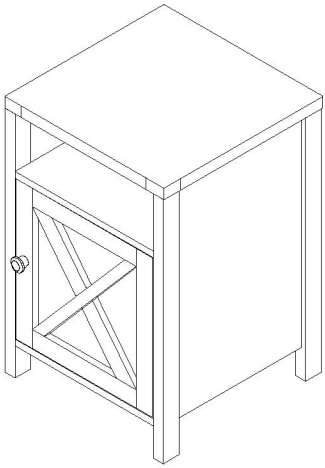

RIGHT




1	1PC




2	2PC




3	1PC




4	1PC




5	1PC



6	1PC




7	1PC



8	1PC



9	1PC




10	1PC



A	24PC



B	24PC



ø8*30mm

C	20PC



D	1PC




M4*22mm

E	1PC



F	2PC




G	1PC




ø3*14mm

H	6PC





I	2PC

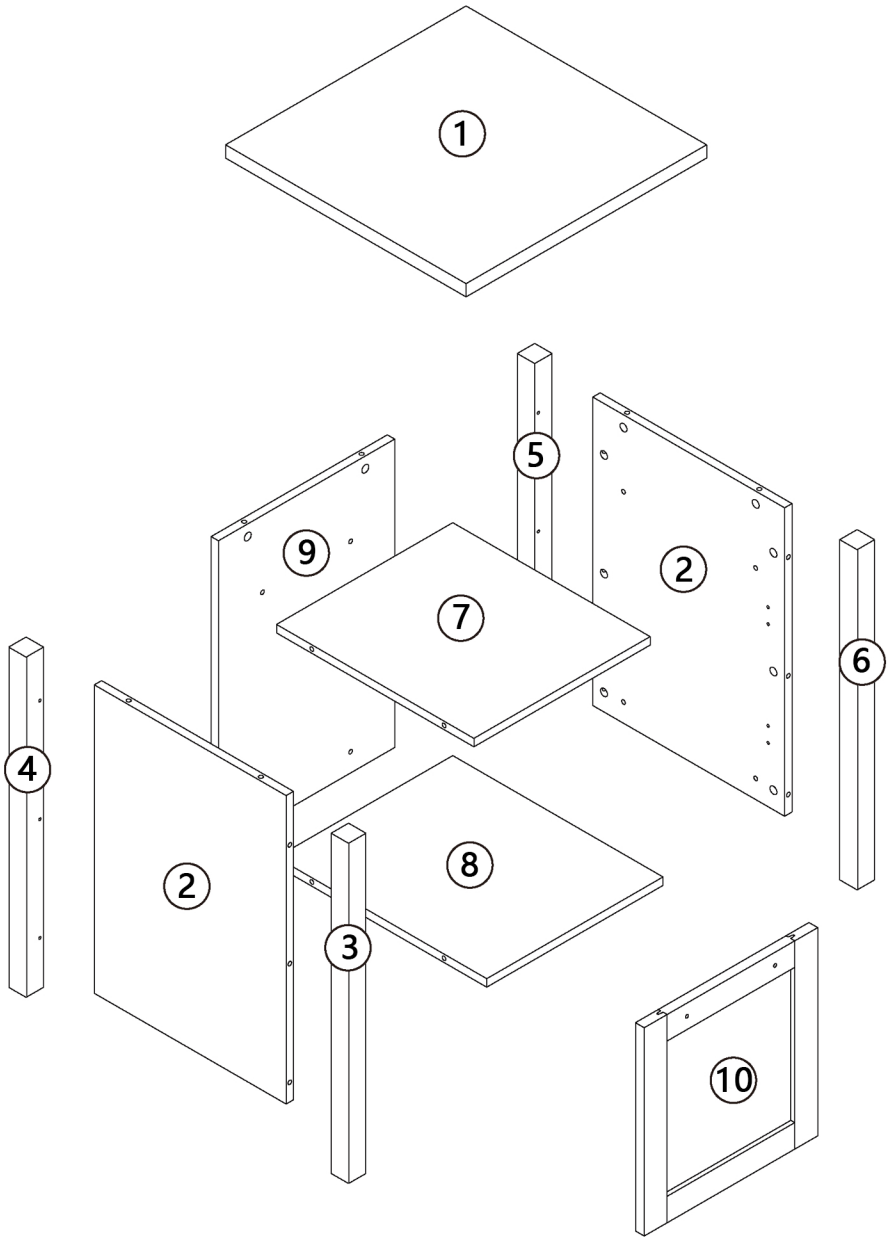

1
5
9
2
7
6
4
2
8
3
10


STEP 1

Attach cam bolt (A) to Part (3,2,4) with screwdriver.
Insert wooden dowel (C) into Part (3,2,4).
Insert and secure lock (B) to Part (2).

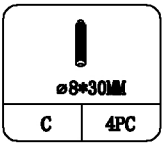

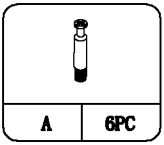


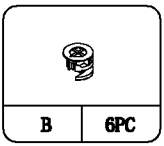


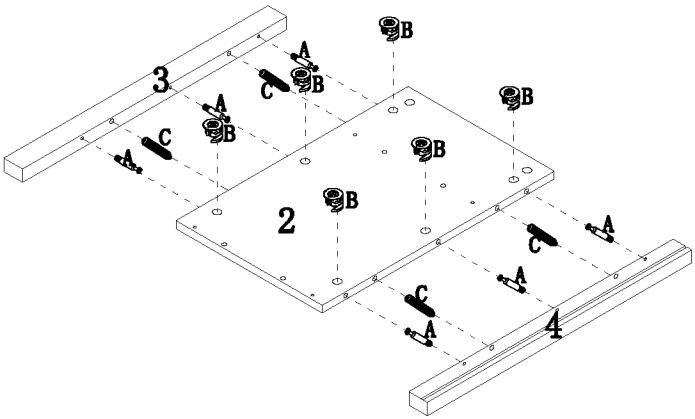



STEP 2

Repeat step 1.
Attach cam bolt (A) to Part (5,2,6) with screwdriver.
Insert wooden dowel (C) into Part (5,2,6).
Insert and secure lock Part (B) to Part (2).

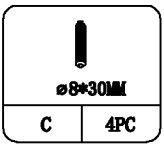

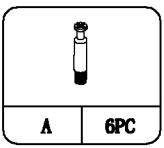


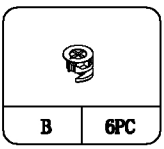


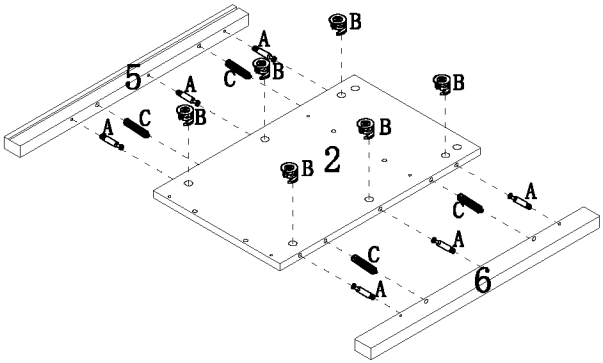



STEP 3

Attach Part (G) to Part (10) with Part (H).
Attach Part (G) to Part (7) with Part (H).

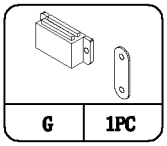

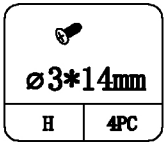


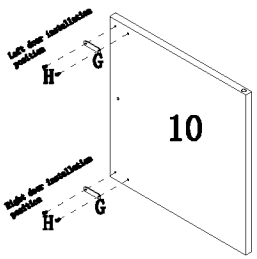


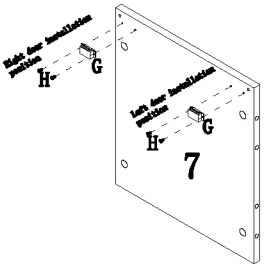



STEP 4

Attach Part(7,8) to Part (2,3,4) and Part (2,5,6) with cam bolt Part (A) and wooden dowel Part (C).
Insert and secure lock (B) to Part (8) and Part (7).

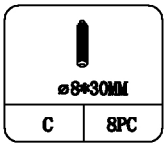

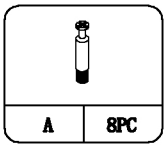


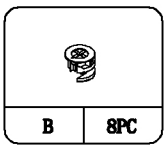

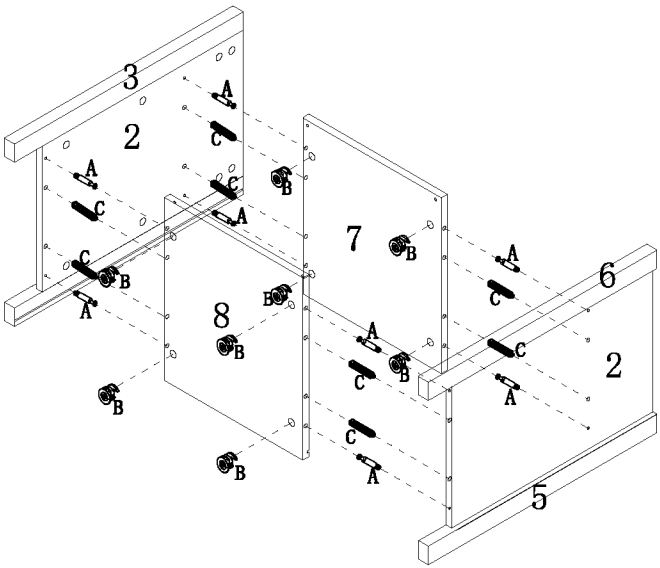


STEP 5


Slide back panel Part (9) into grooves as per diagram.

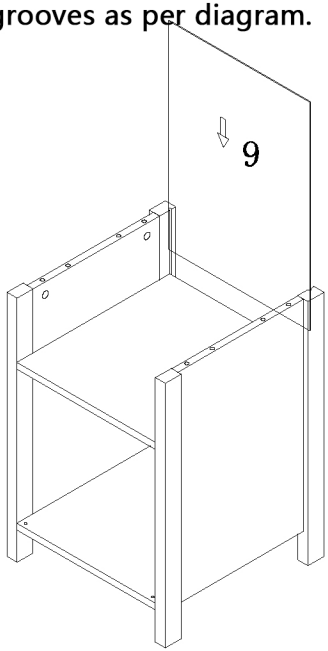



STEP 6

Attach Part (1) to both side of Part (2) with cam bolt Part (A) and wooden dowel Part (C).
Insert and secure lock (B) to both side of Part (2).

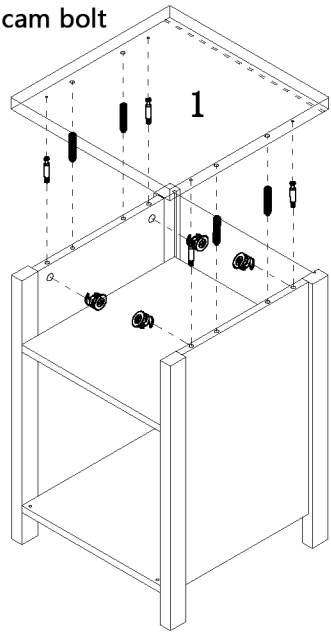

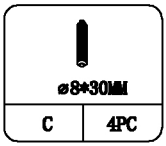


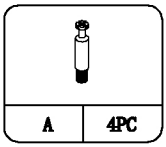


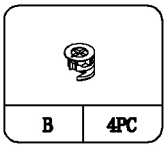



STEP 7

Attach 2 Part (F) to Part (10).
Attach Part (D) to Part (10) with Part (E).

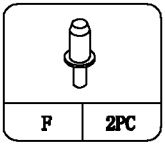

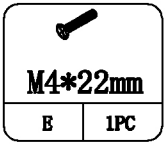


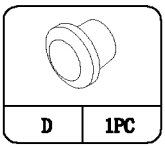

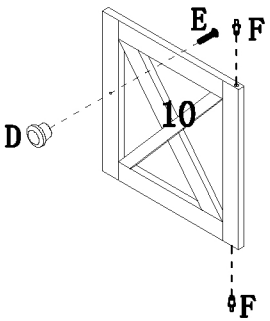

STEP 8

Attach Part (10) to Part (7) and Part (8) with Part (F).

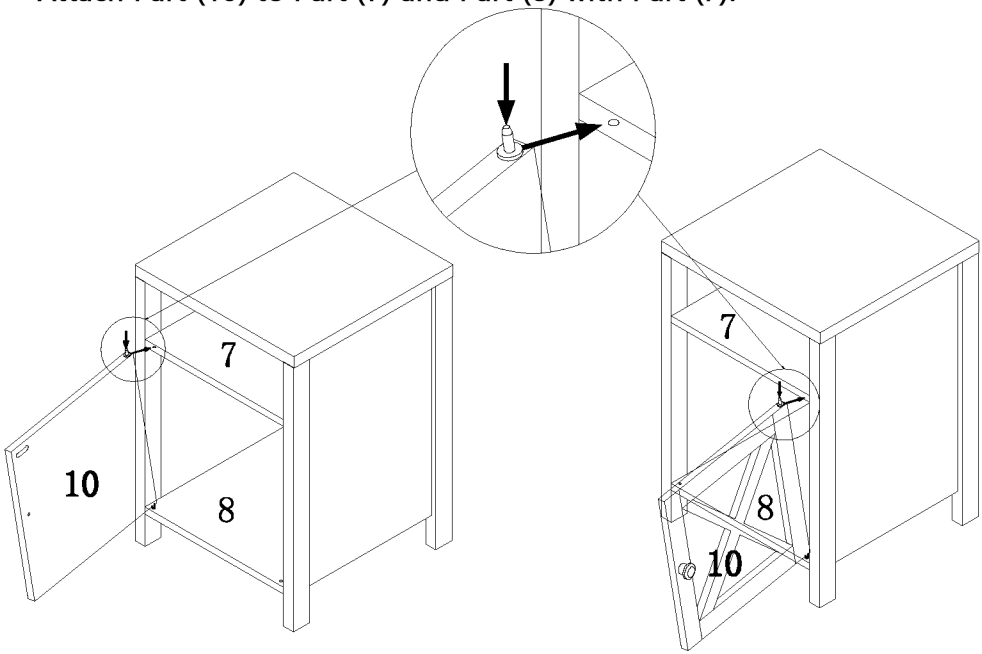

STEP 9

Attach 2 angle brackets Part (I) to the Part (9) with Part (H).

