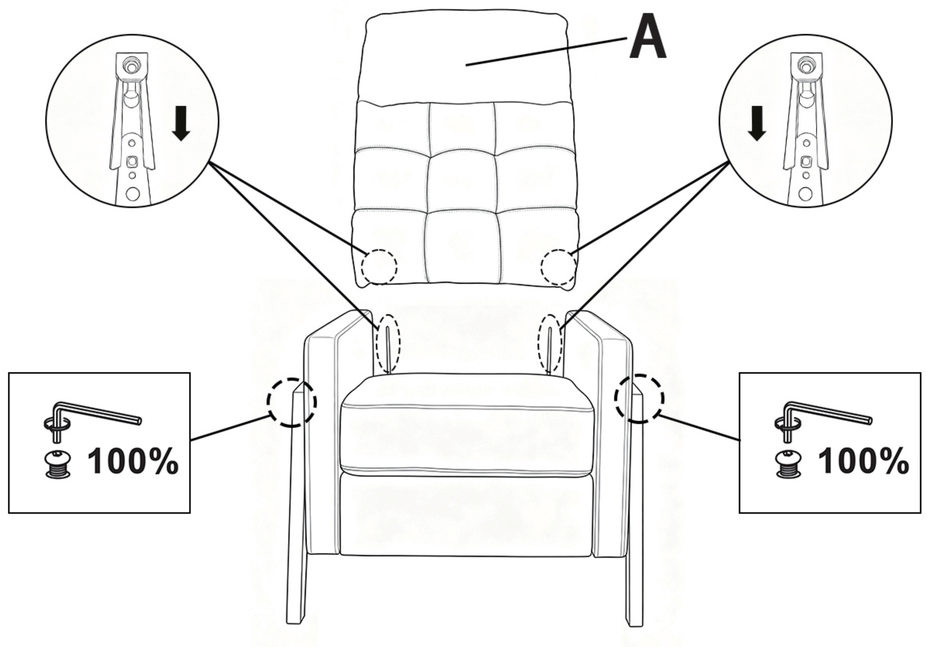
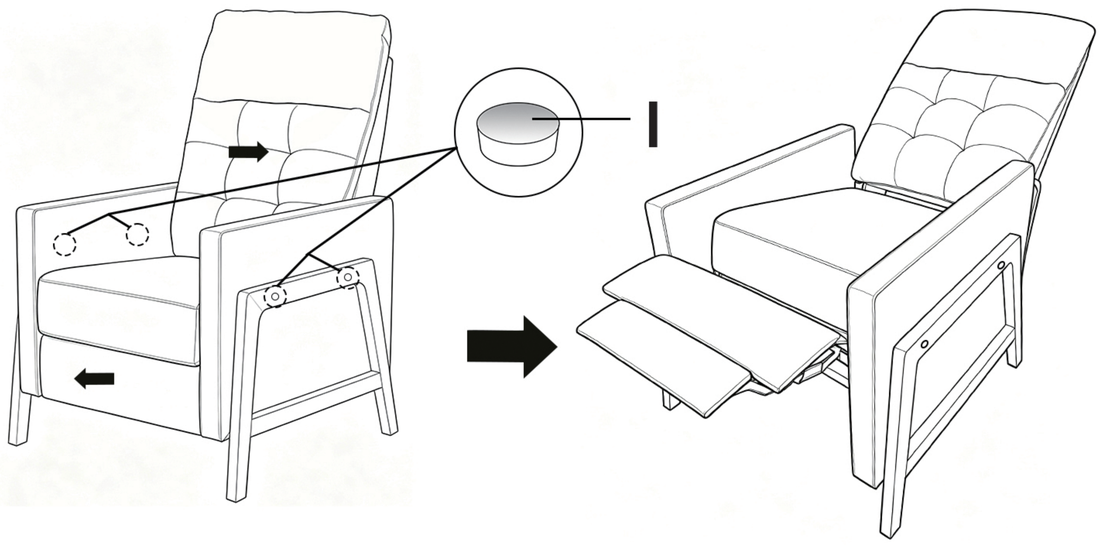
STEP3 Set the legged base level. Tighten the left and right pre tightened screws to 100%, then fit the backrest correctly onto the tabs.



STEP4 Install the wood plugs as shown. Sit on the assembled chair and lean back firmly to unfold it.



Push Back Recliner

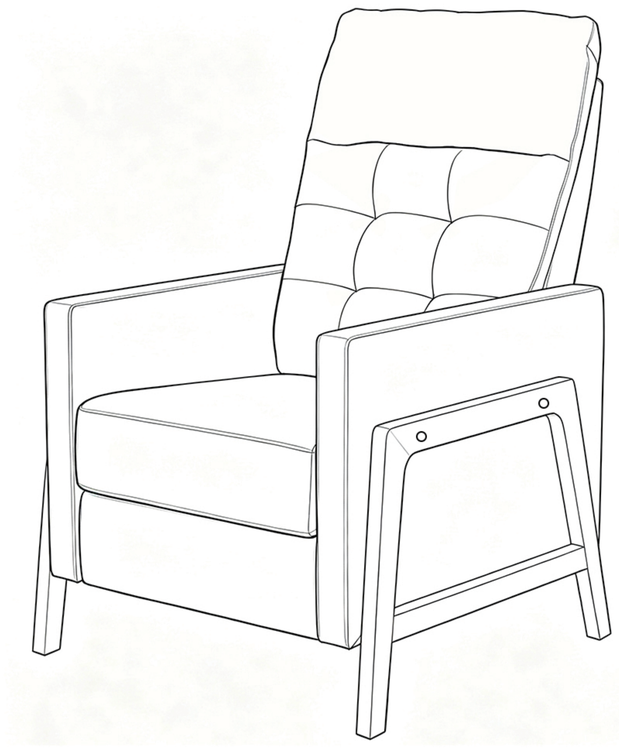
Friendly Reminders:

1. Patience with cushions – The cushions are vacuum-sealed and may arrive wrinkled. Smooth creases with an iron, or fluff up seat & back cushions by gentle tapping.

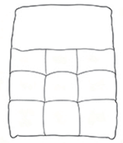
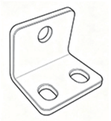
2.Please check all parts first before unpacking & assembly. Verify complete & undamaged accessories prior to installation.

3. Need help? – If any parts are missing or damaged (please take photos for reference), feel free to contact us. Our support team will assist you promptly!



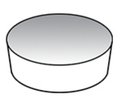
Thank you for choosing us – your comfort zone starts here!



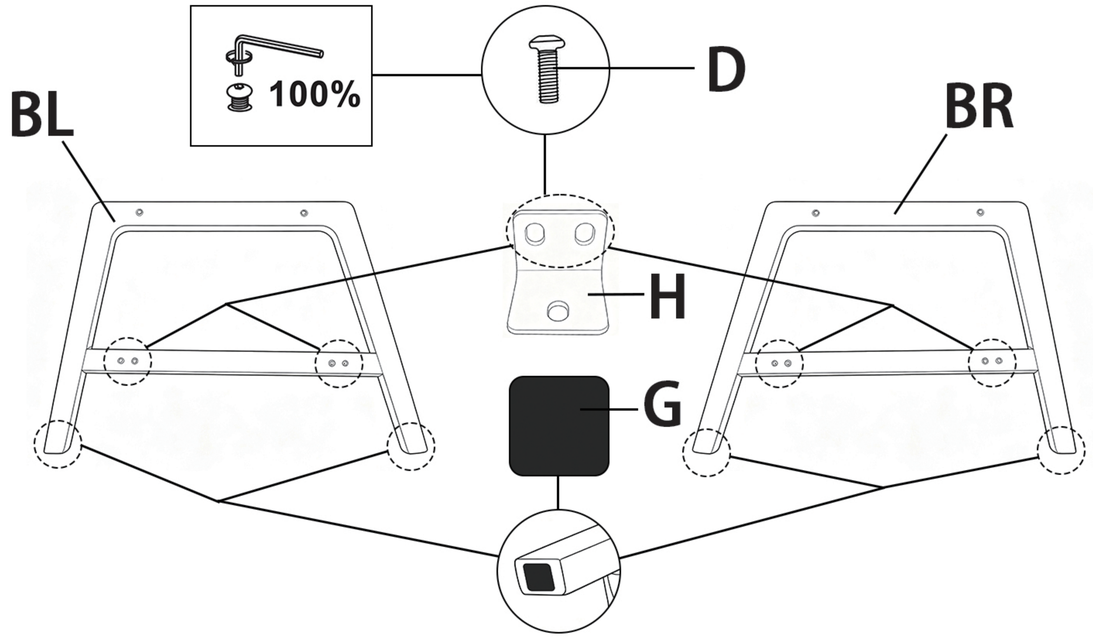
PARTSLIST

Backrest  **AX1pc**	**Wooden Leg-L**  **BLX1pc**	**Wooden Leg-R**  **BRX1pc**	**Frame Base**  **CX1pc**
L Bracket  **HX4pc**			

HARDWARE

Screws M6*18mm  **DX12pc**	**Screws M6*45mm**  **EX4pc**	**Allen Key**  **FX1pc**	**Floor Pads**  **GX4pc**
Cover cap  **IX4pc**			

STEP 1 As shown in the figure, first install the L Brackets and foot pads onto the left and right wooden legs.



STEP 2 Fit two wooden legs to chair base both sides as shown.
Note: Pre tighten two armrest side screws to 50%. Next tighten base bottom screws to 100%.

