PRODUCT USER MANUAL

COMPONENTS LIST

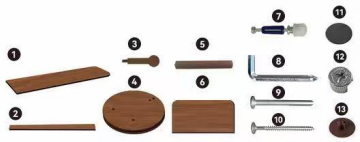

❶ Mirror panel x 1
❷ Support panel x 1
❸ Coat hooks x 4
❹ Base plate x 1
❺ Solid wood rod x 1
❻ Shelves x 2
❼ Connecting rods x 8
❽ Screwdriver x 1
❾ Flat head screw x 1
❿ Pointed screws x 2
⓫ Anti-slip pads x 4
⓬ Eccentric wheels x 8
⓭ Decorative caps x 8

HELPFUL TIPS

1. Installing the base: Before installing the base, place the mirror panel flat on a level, stable surface. As mirrors are fragile, please handle them with care during both installation and disassembly.

2. Ensure all eccentric wheels are securely tightened to prevent loosening.

3. Do not place the product in excessively humid or overly dry environments, as this may lead to mold growth or material cracking.

4. This product features eco-friendly, paint-free boards. Some yellowing may occur over time. To clean, gently wipe the surface with a cloth dampened with a small amount of toothpaste. Avoid applying excessive pressure.

5. Keep the mirror surface away from hard or sharp objects to prevent scratches or structural damage.

6. Avoid hanging heavy items on the coat hooks for extended periods, as this may cause deformation of the structure.

INSTALLATION STEPS

Step 1: Remove the plastic caps from the connecting rods and install them onto the base (4 mounting holes) and the mirror panel (4 mounting holes). Then, screw the connecting rods tightly into these plastic caps. (Make sure the rods are fully screwed in.)



Step 2: Install the double-layer shelves by aligning the holes in the shelves with the connecting rods already fixed on the mirror panel, then slide the shelves onto the rods. Insert the eccentric wheels into the shelves and tighten them with a screwdriver. Also, screw the solid wood rod to the mirror panel.



Step 3: Align the holes in the support panel with the solid wood rod and the shelves. Secure the support panel to the solid wood rod using one flat-head screw, and attach it to the shelves using two pointed screws. Then, lift the mirror panel, align the base with the holes on the mirror panel, and insert it. Tighten all the eccentric wheels.



Step 4: Attach the anti-slip pads to the four corners of the base. Press the decorative caps over the eccentric wheel holes. Stand the mirror panel upright and assemble the coat hooks—the assembly is now complete.

