Pedicure Chair Instruction




Part List

			
A: 1PC	B: 1PC	C: 1PC	D: 1PC
			
E: 1PC	F: 1PC	G: 1PC	H: 1PC
			
I: 1PC	J: 1PC	K: 1PC	L: 1PC
			
S: 1PC	M: 1PC	N: 1PC	P: 5PCS
			
Q: 1PC	R: 6PCS	T: 1PC	U: 2PCS
			
V: 4PCS	W: 4PCS	X: 4PCS	


Step 1: Insert “U” into the base “E” by screws “V” and gaskets “W” ,tighten .(pay attention to the direction of part “U”)




Step 2: Insert plank “T” into the base“E”by screws“X”,tighten .(Please tighten the screws after you align the plank “T”)

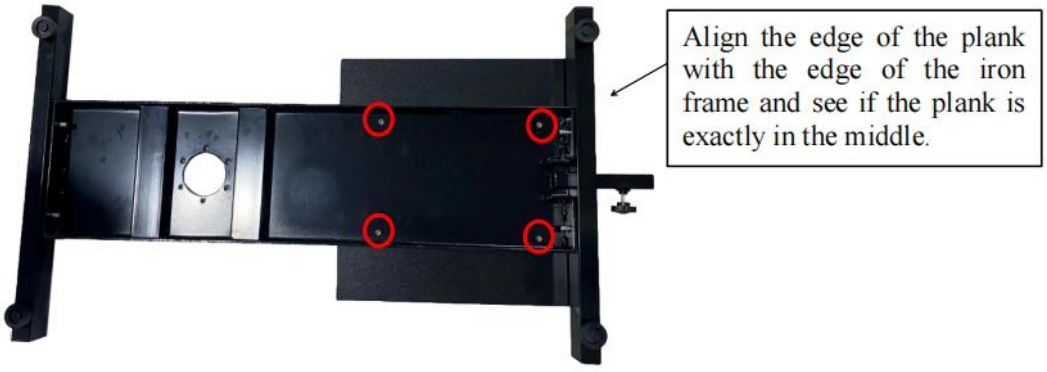

Step 3: Insert “N” into the holes on top of “E”.Tighten and locking by “R”.

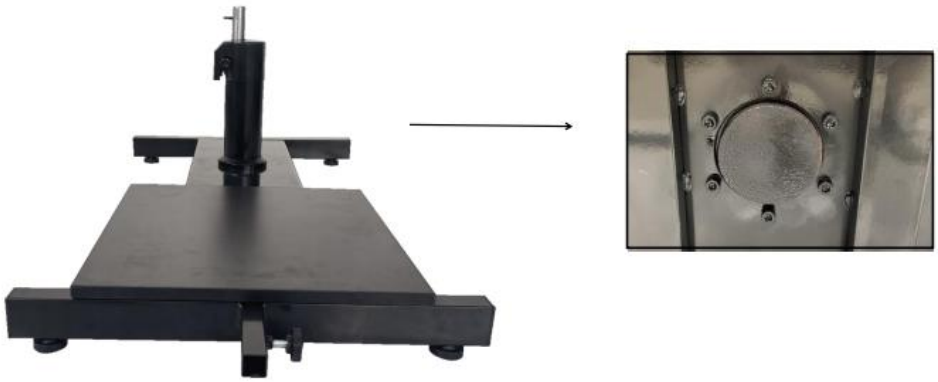

Step 4: Insert “K” into “N”,tighten the screws on the both sides.(please noted the direction of “K”).

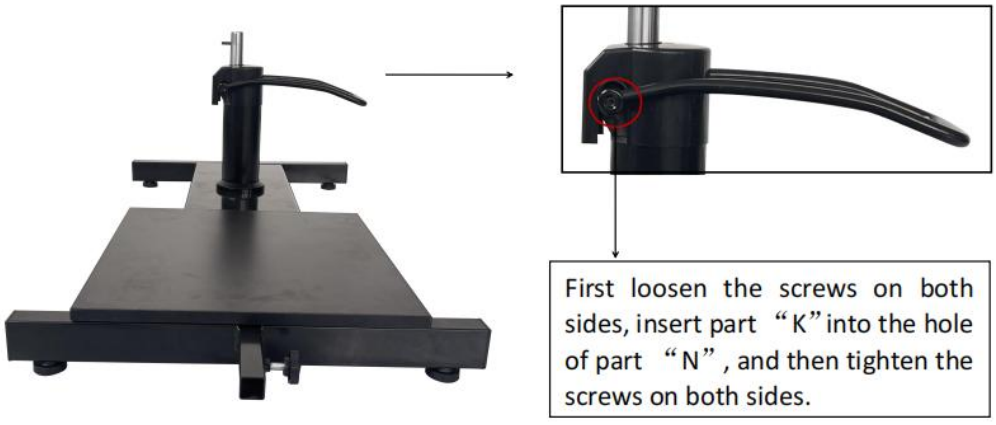

Step 5: Put Parts S(1pc) on the parts L,attach Parts P (5 pcs:) onto the five feet on the back of Part L (1 pc:): Insert the Part Q (1 pc:) into Part L (1 pc:):




Step 6: Unscrew 2screws on the “J”,assemble the backrest “I” to “J” by those screws,tighten:




Step 7: Put the assembled cushion “J” on the “Q” :



Step 8: Unscrew 6screws on the armrests “C” and “D”， assemble armrests “C” and “D”to seat cushion by those screws,tighten.(Please pay attention to the direction of the armrests and install it exactly as shown in the picture)

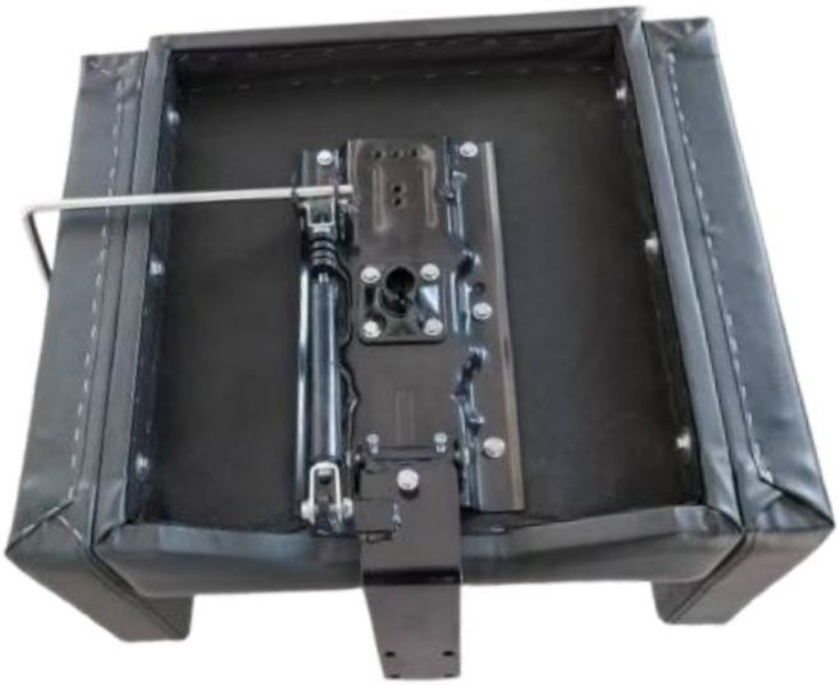

Step 9: Put the assembled seat to the hydraulic pump.

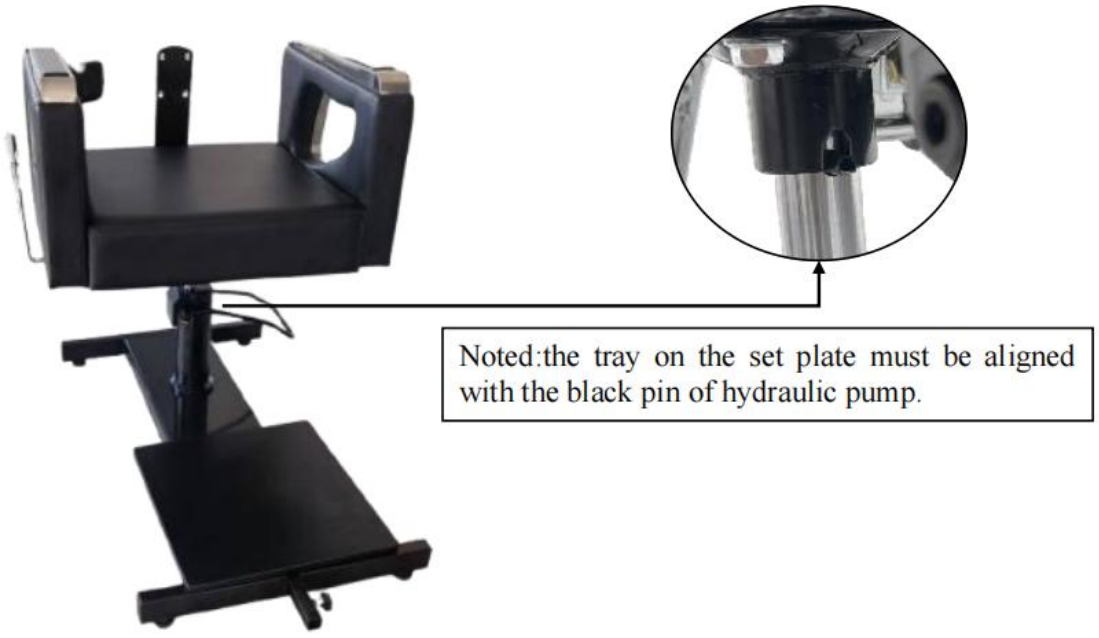

Step 10: Unscrew 4screws on the backrest “A”,assemble backrest “A” to backrest iron of seat cushion by those screws,tighten.



Step 11: Insert “F” into the hole of “E”,then insert “G” into the hole of “F”.

