
# Installation Instruction

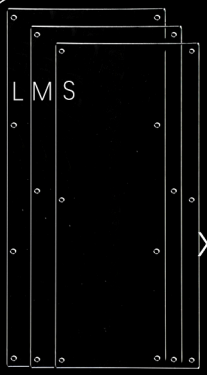


x2




x2






x 108



x 16




x 24


(Note: The width of Board A should be greater than that of Board B.)

Board A


Board B

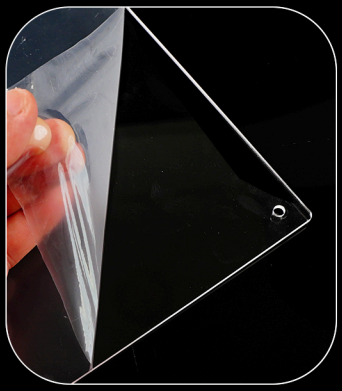


Tear off the protective film.

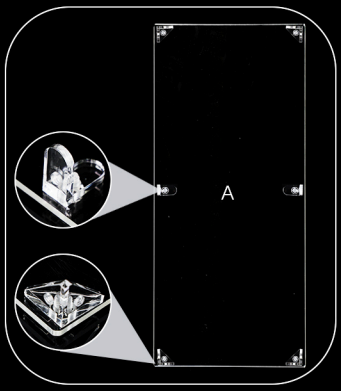



Install the parts at the four corners and on both sides of the middle of Board A.

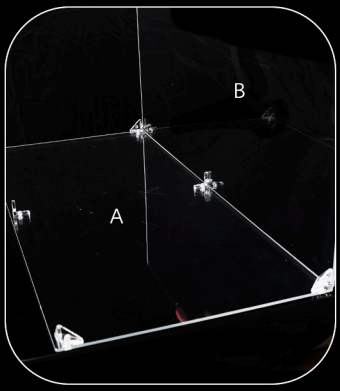



Place Board B on the side of Board A and fix it with screws.

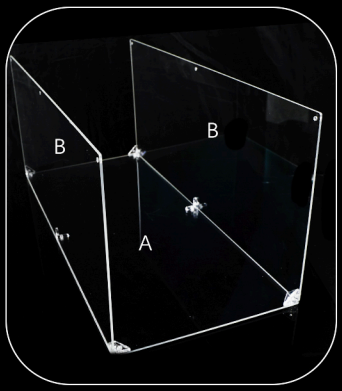


Place another Board B on the other side of Board A.

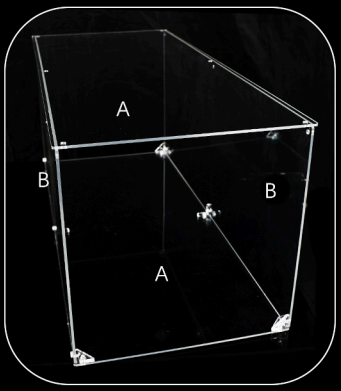


Place the last Board A and install parts from the inside to fix it.

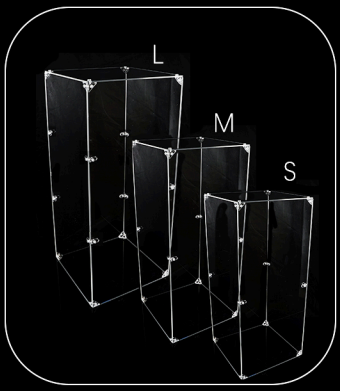


Erect the product, install the top board and secure it.