ORIGINAL BRAND

Installation Manual

Step 1



Let your panels acclimate for 24 hours

Step 2



Wipe walls of any dust & fix any paint peeling

Step 3



Measure and mark your starting points

Step 4

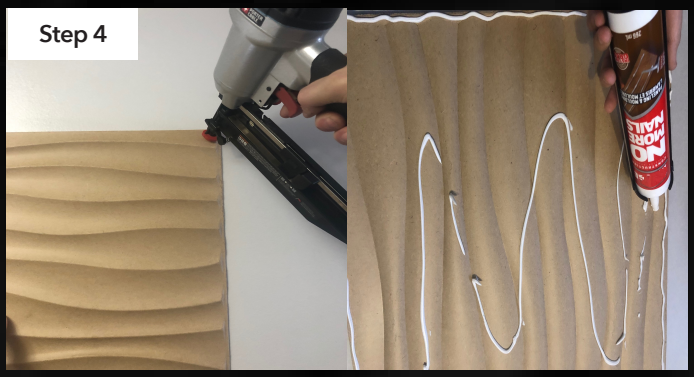

Apply construction adhesive along the sides and middle areas. Using a nail gun is optional but secures panels flat.

Step 5



Install each panel as per your starting point

Step 6



Using a nail gun is optional but helps maintain panels flat against the surface

Step 7



Apply paintable wood filler or caulking along the seams

Step 8



Apply a coat of Oil based primer & sealer

Step 9



Let Oil based primer completely dry before next step

Step 10



Apply your choice of latex paint color and choice of finish

Step 11



Mitre panels for corner applications

Step 12



We sell frames for outlets, switches or vents





Your Beautiful Wall Completed!