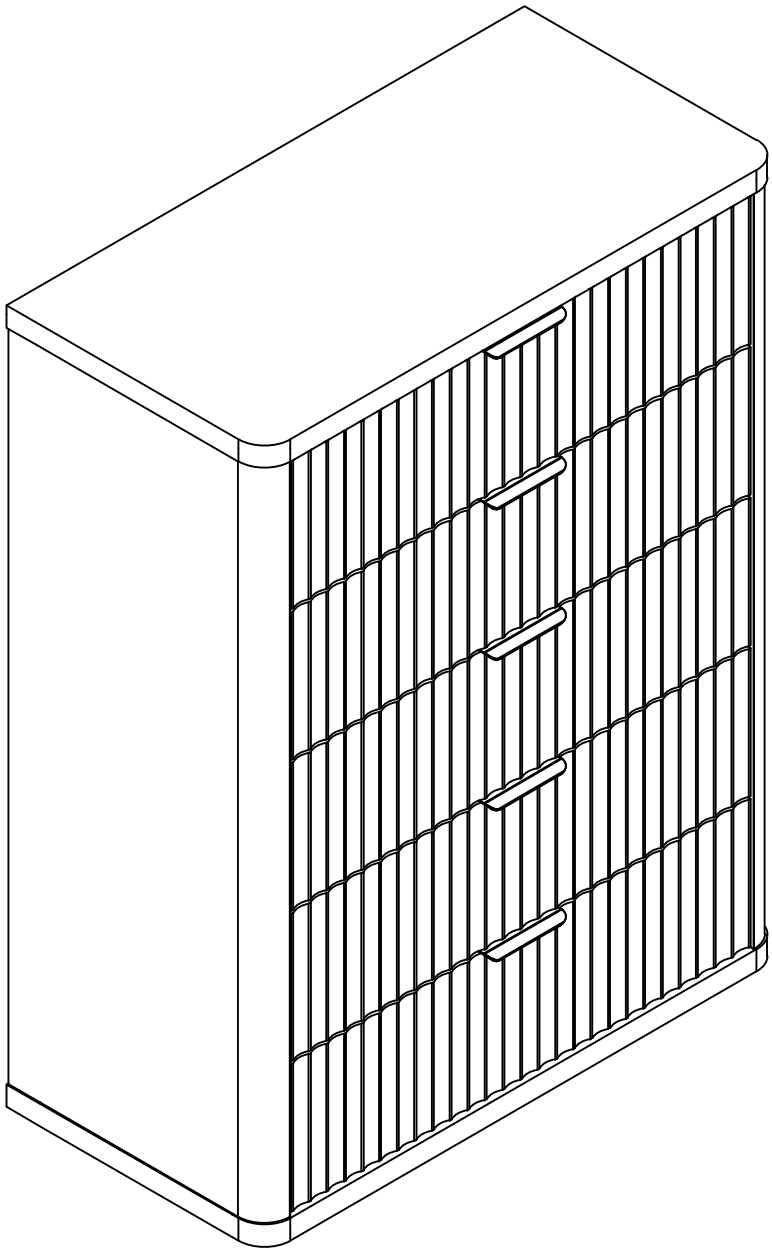



ATTENTION


If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.
















Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.

PART LIST







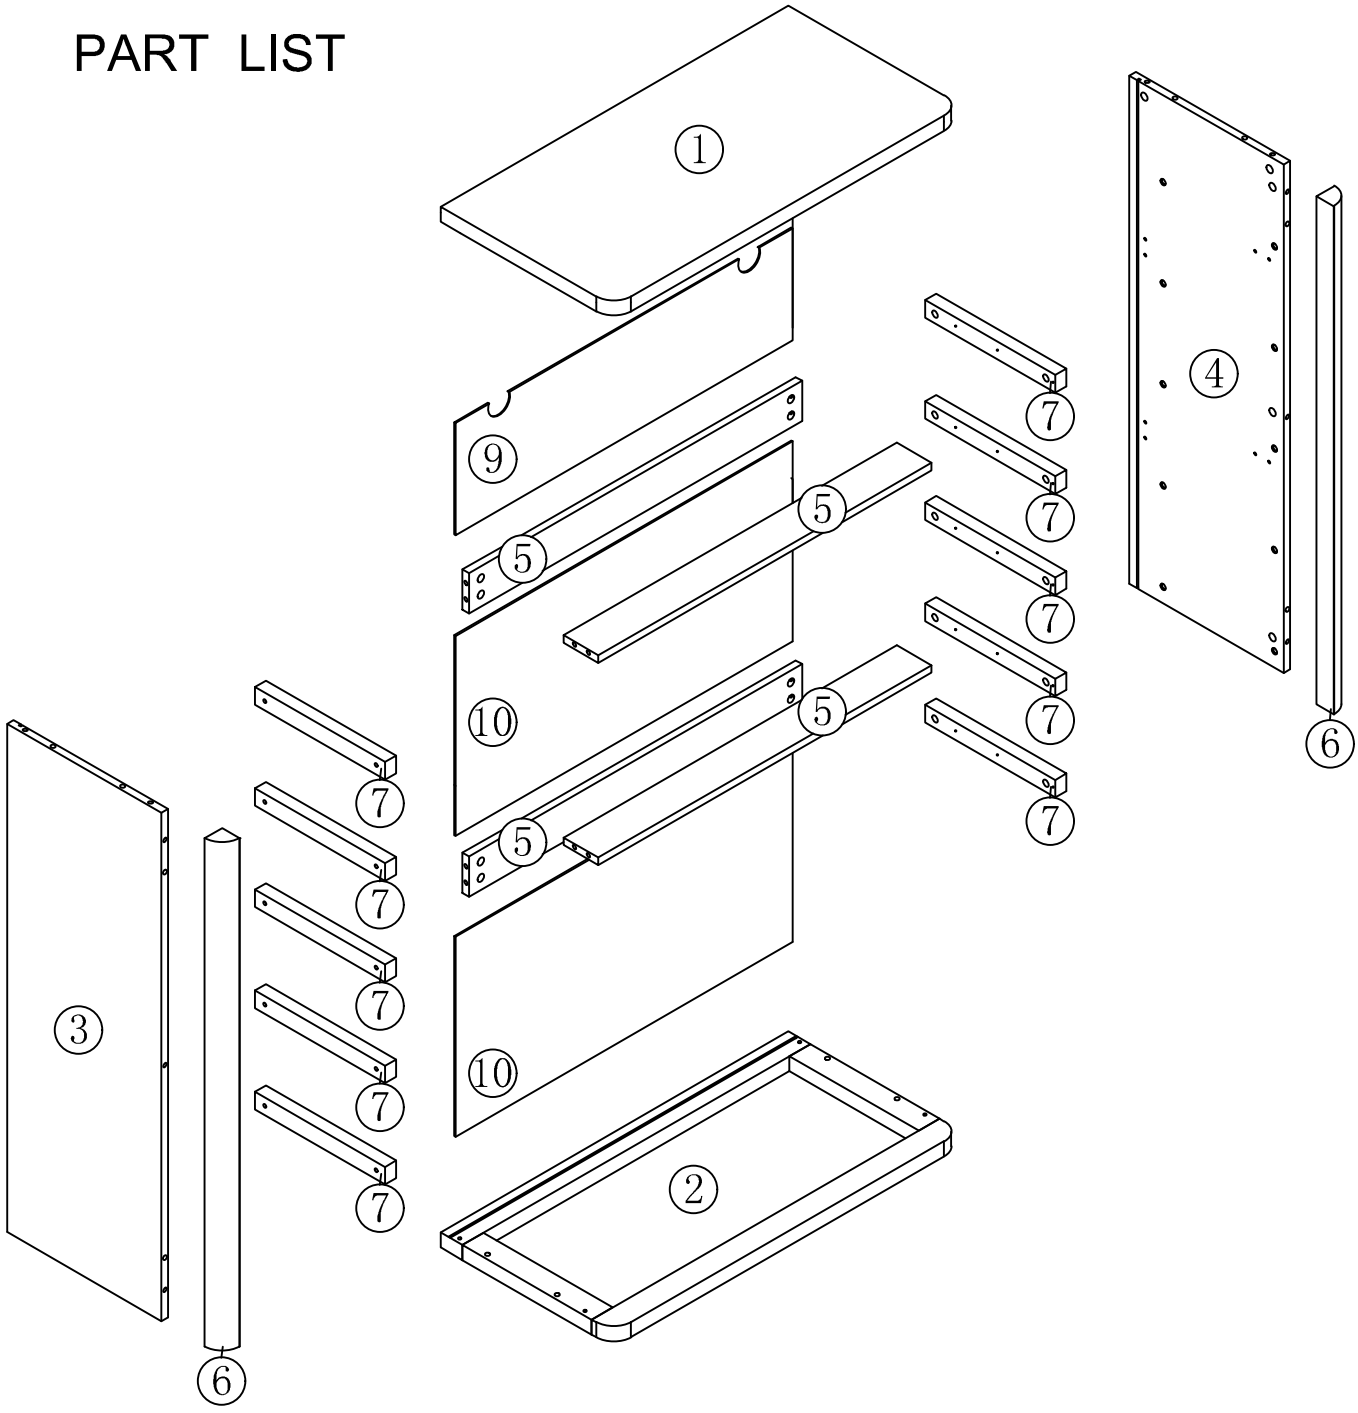


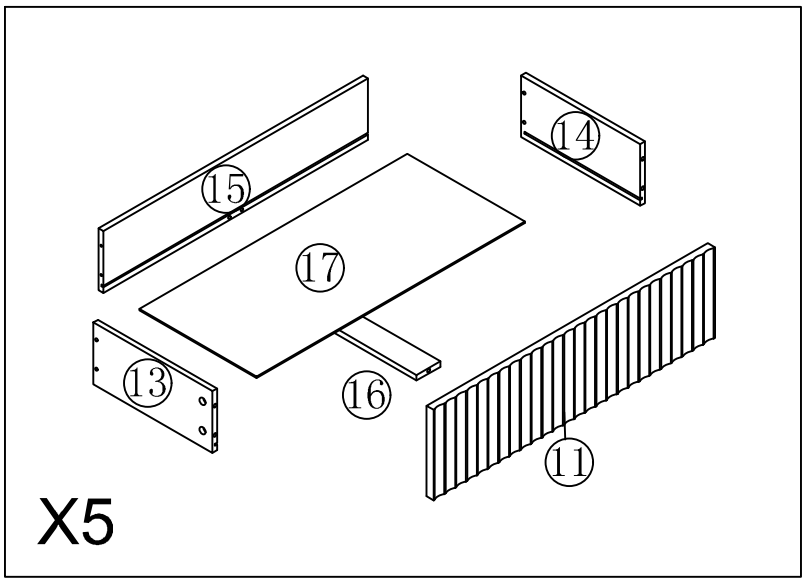


PART LIST

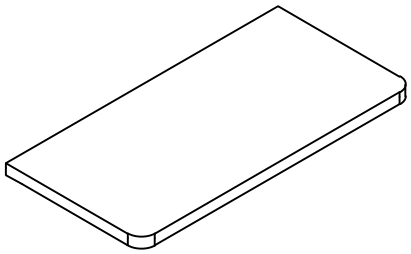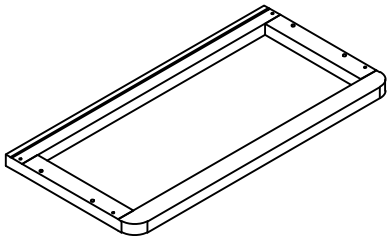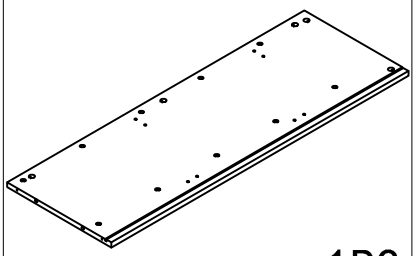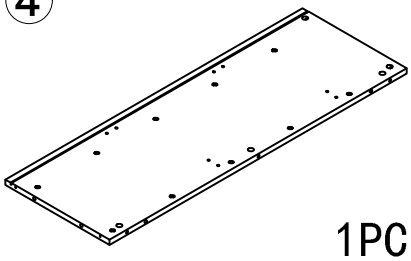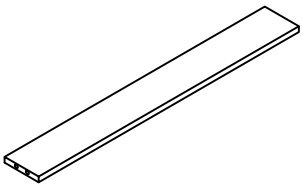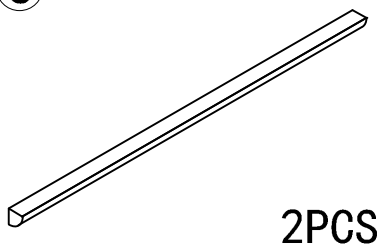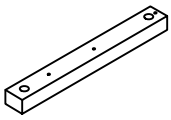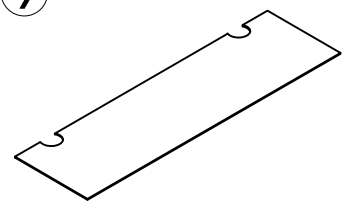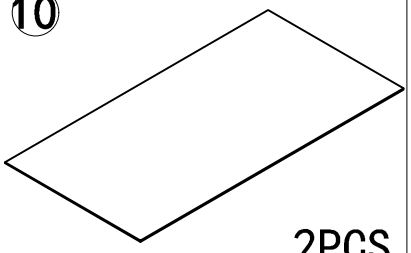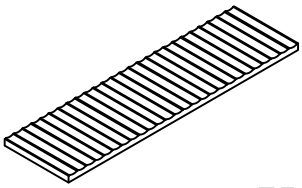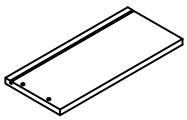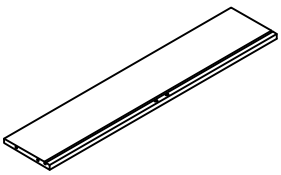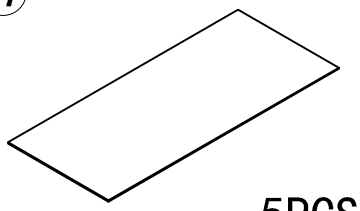
①  1PC	②  1PC	③  1PC
④  1PC	⑤  4PCS	⑥  2PCS
⑦  10PCS	⑨  1PC	⑩  2PCS
⑪  5PCS	⑬  5PCS	⑭  5PCS
⑮  5PCS	⑯  5PCS	⑰  5PCS

HARDWARE LIST

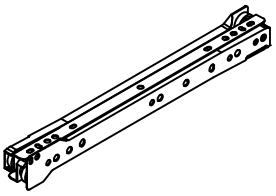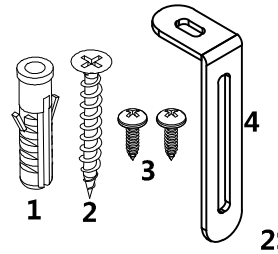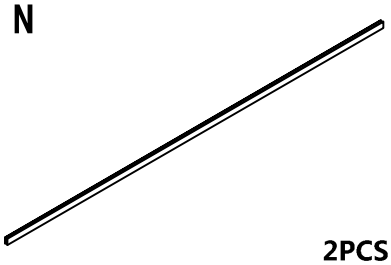A  ϕ6X35 (51+3)PCS	B  ϕ15X9.5 (51+3)PCS	C  ϕ1/4X25 (20+2)PCS
D  ϕ8X30 (12+1)PCS	E  ϕ5X40 (34+2)PCS	F  5PCS
G  (4+1)PCS	H  (10+1)PCS	I  ϕ3X15 (10+1)PCS
J  5PCS	K  ϕ3X12 (70+3)PCS	M  2SET
N  2PCS	 3PCS	 1PC


J X 5SET

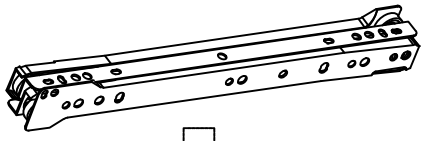

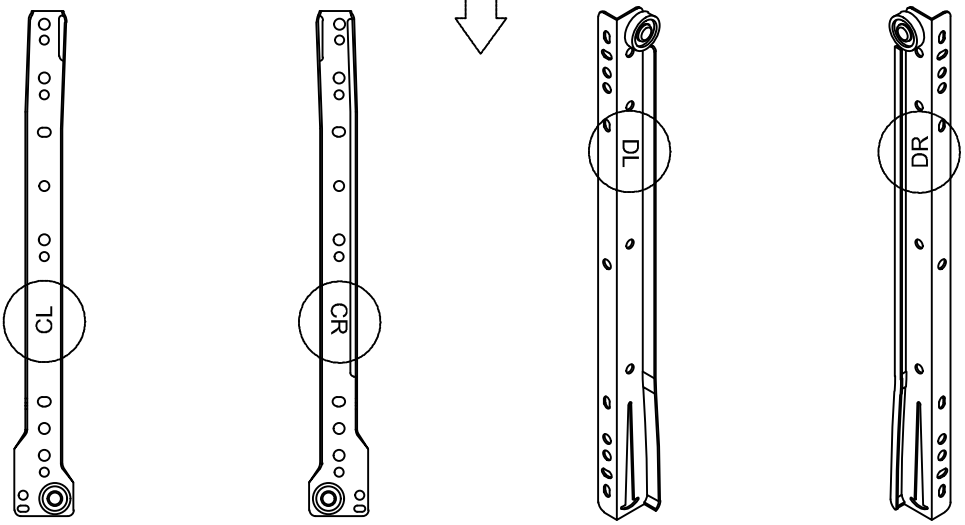


CL CR DL DR

M =

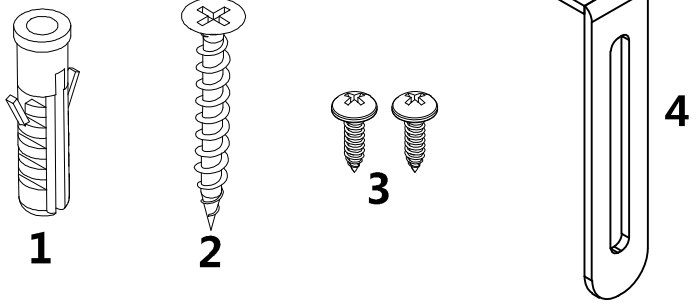


STEP 1

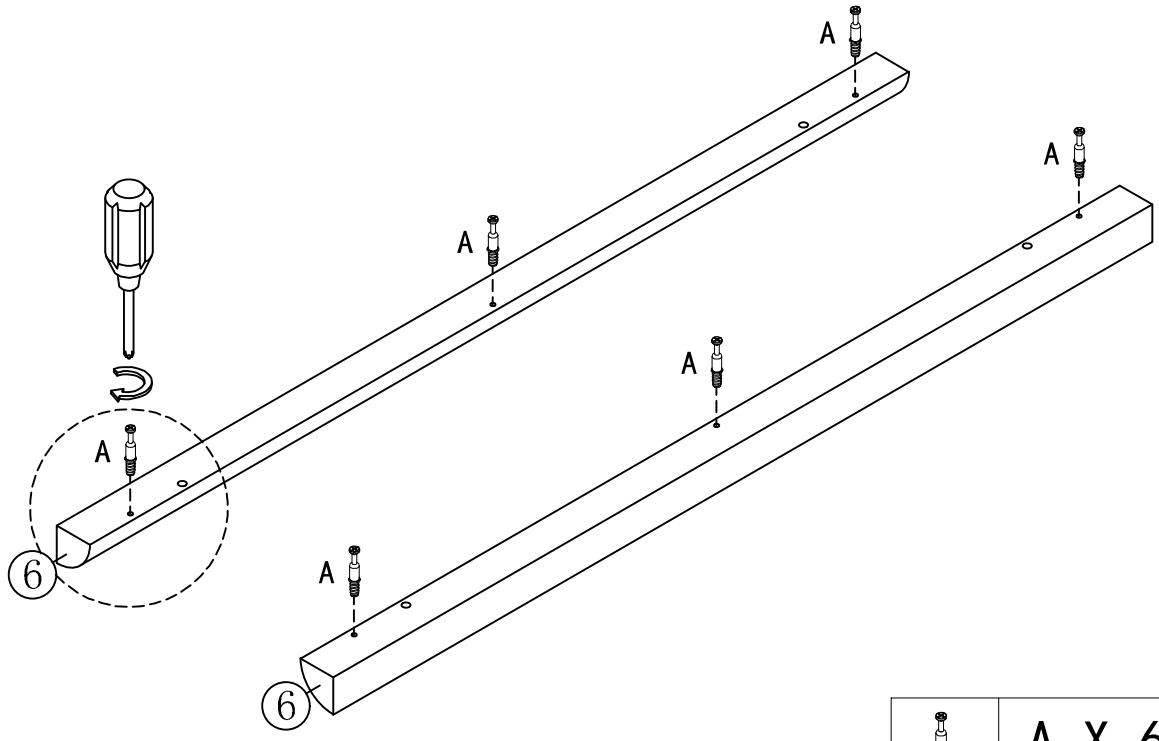


	A X 6PCS

STEP 2

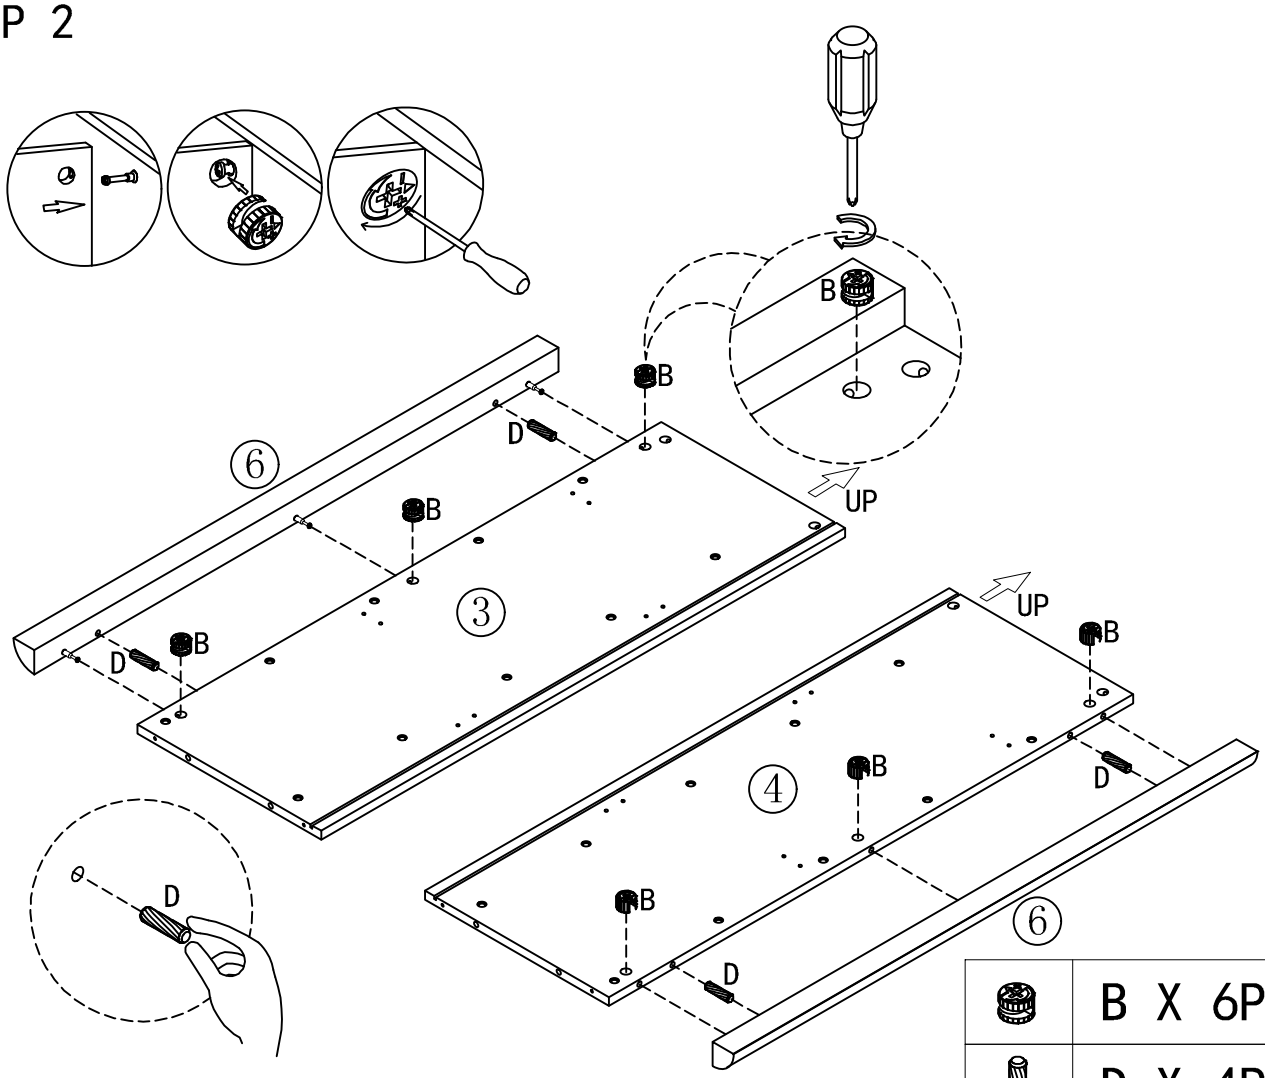


	B X 6PCS
	D X 4PCS

STEP 3

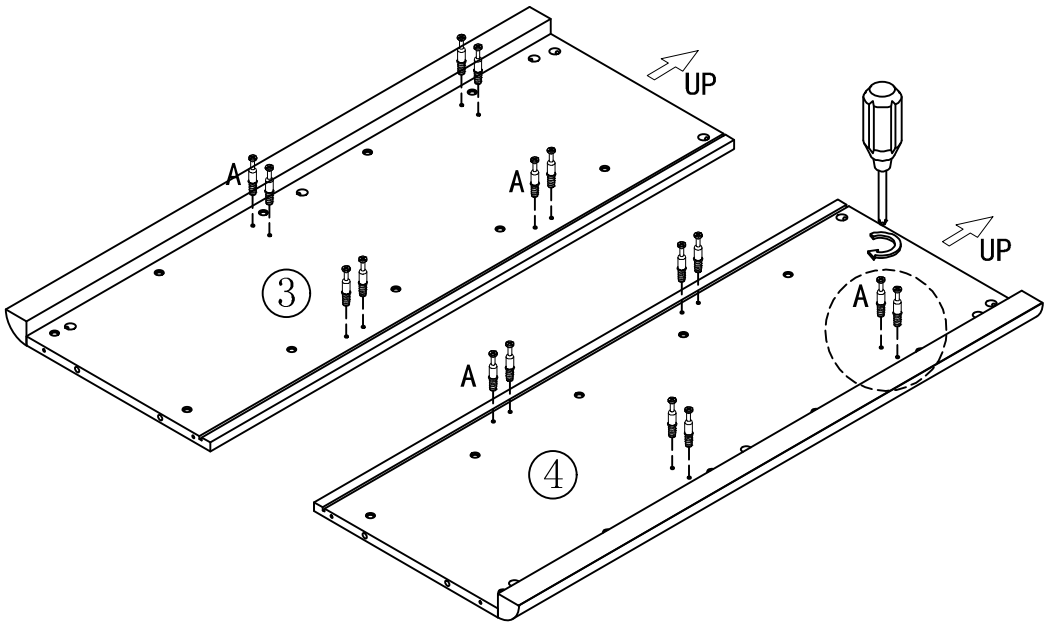


	A X 16PCS

STEP 4

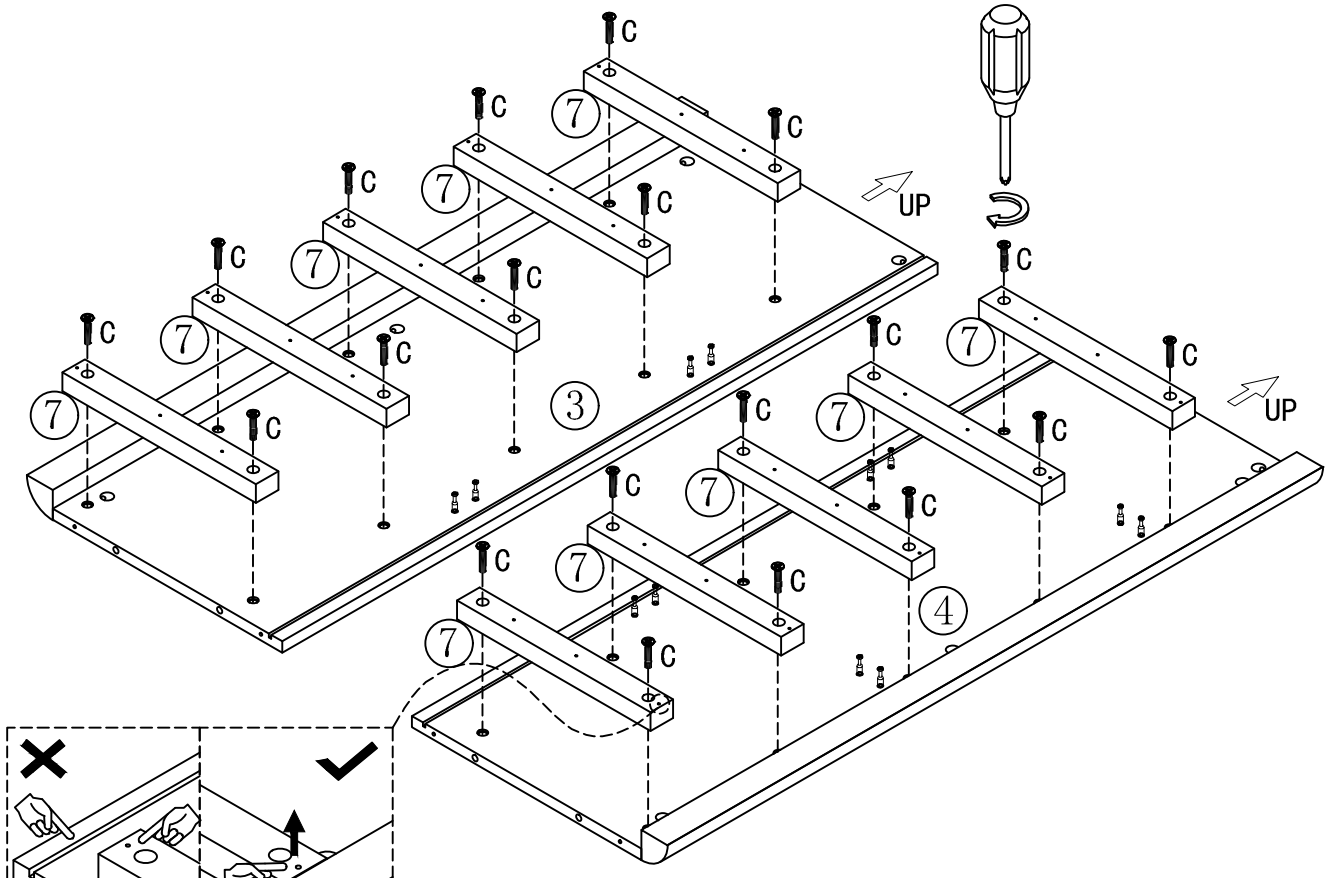



	C X 20PCS


STEP 5

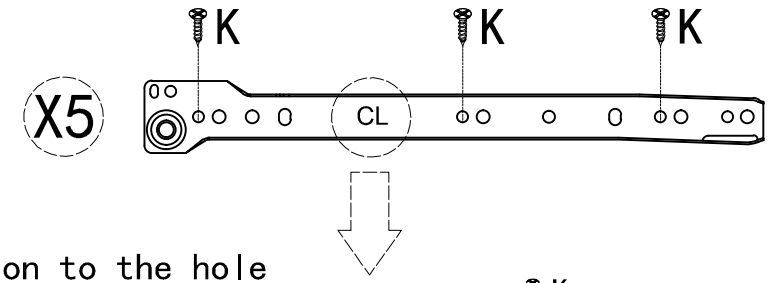

Pay attention to the hole position.

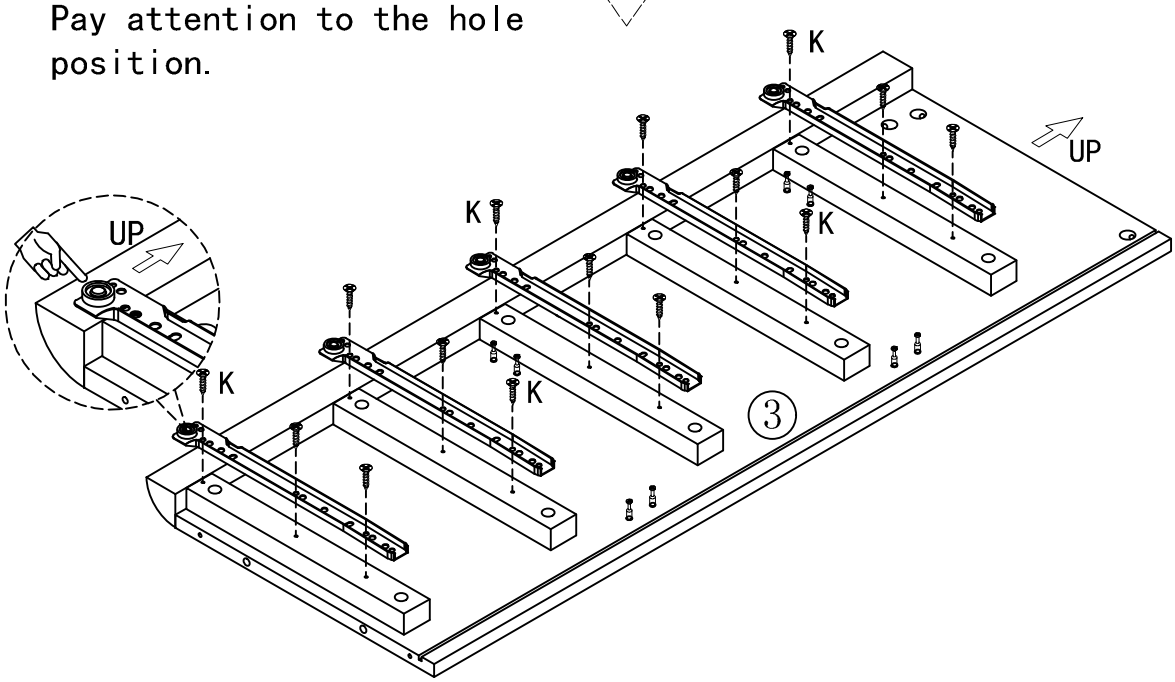


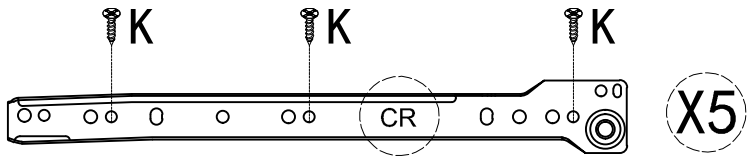


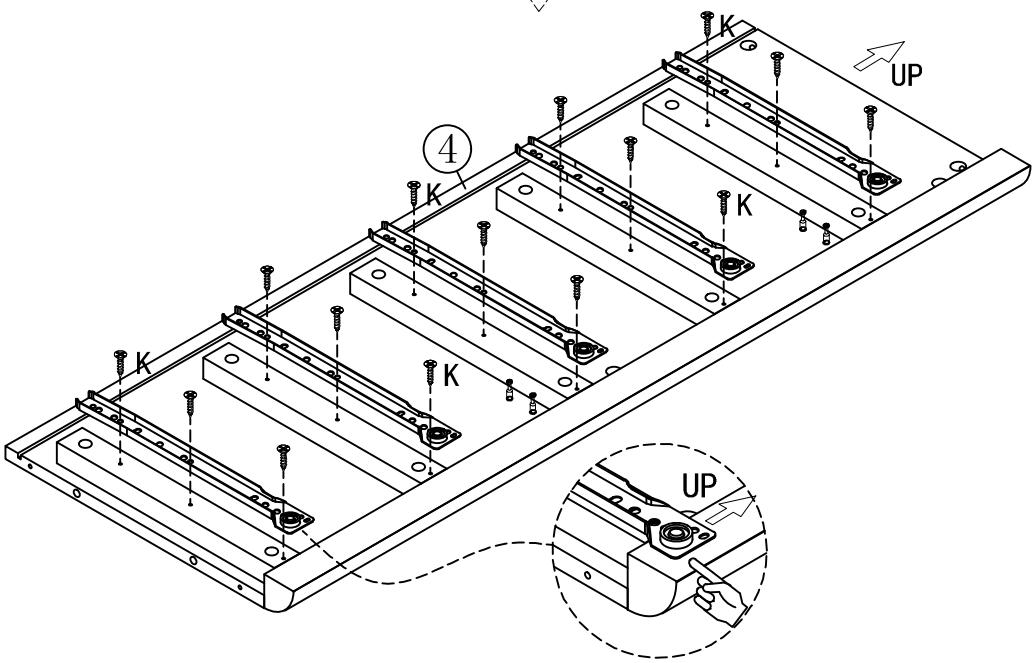

	K X 30PCS


STEP 6

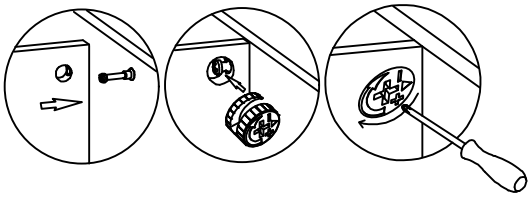

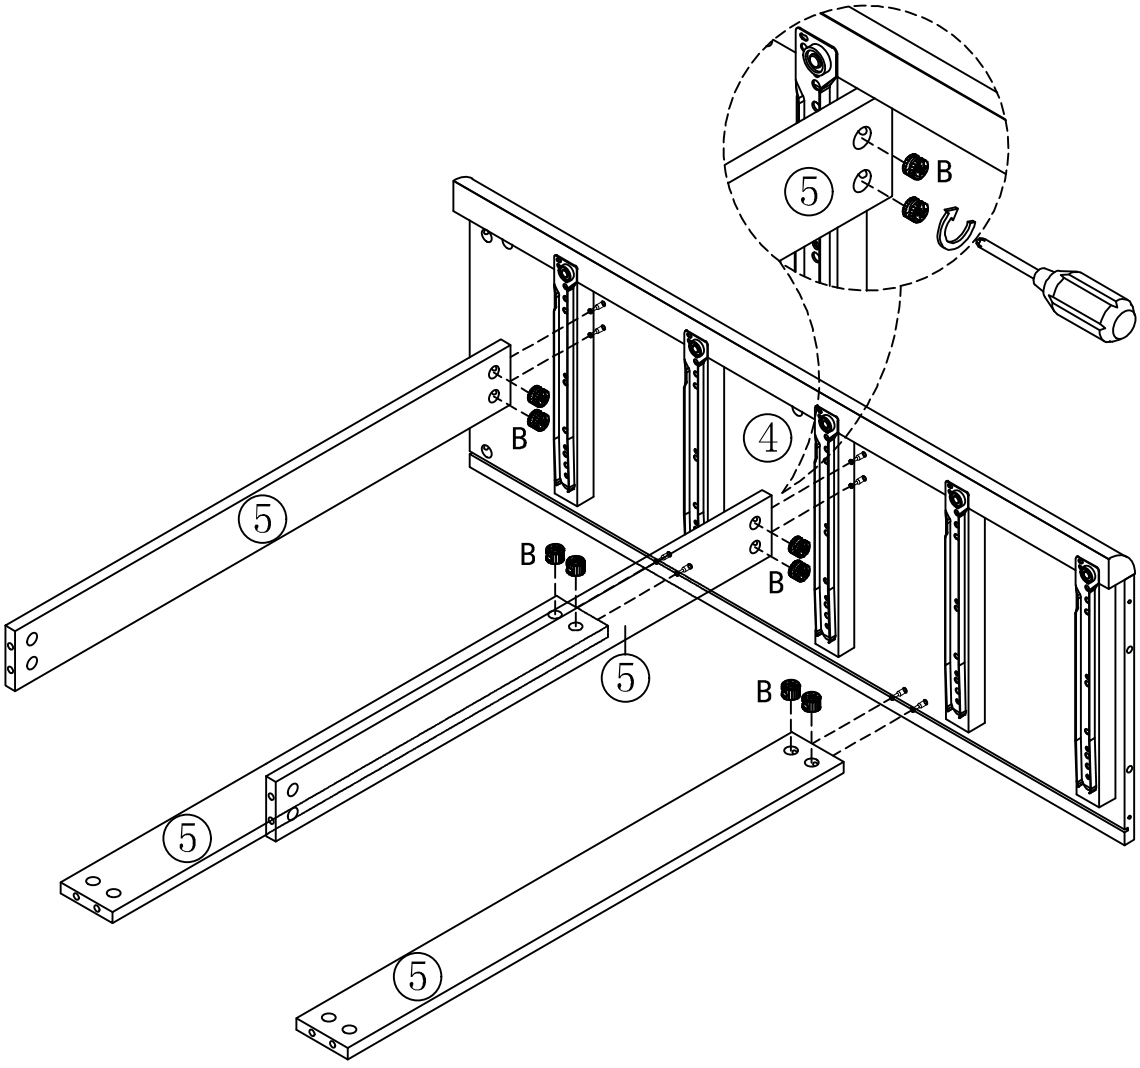


	B X 8PCS

STEP 7

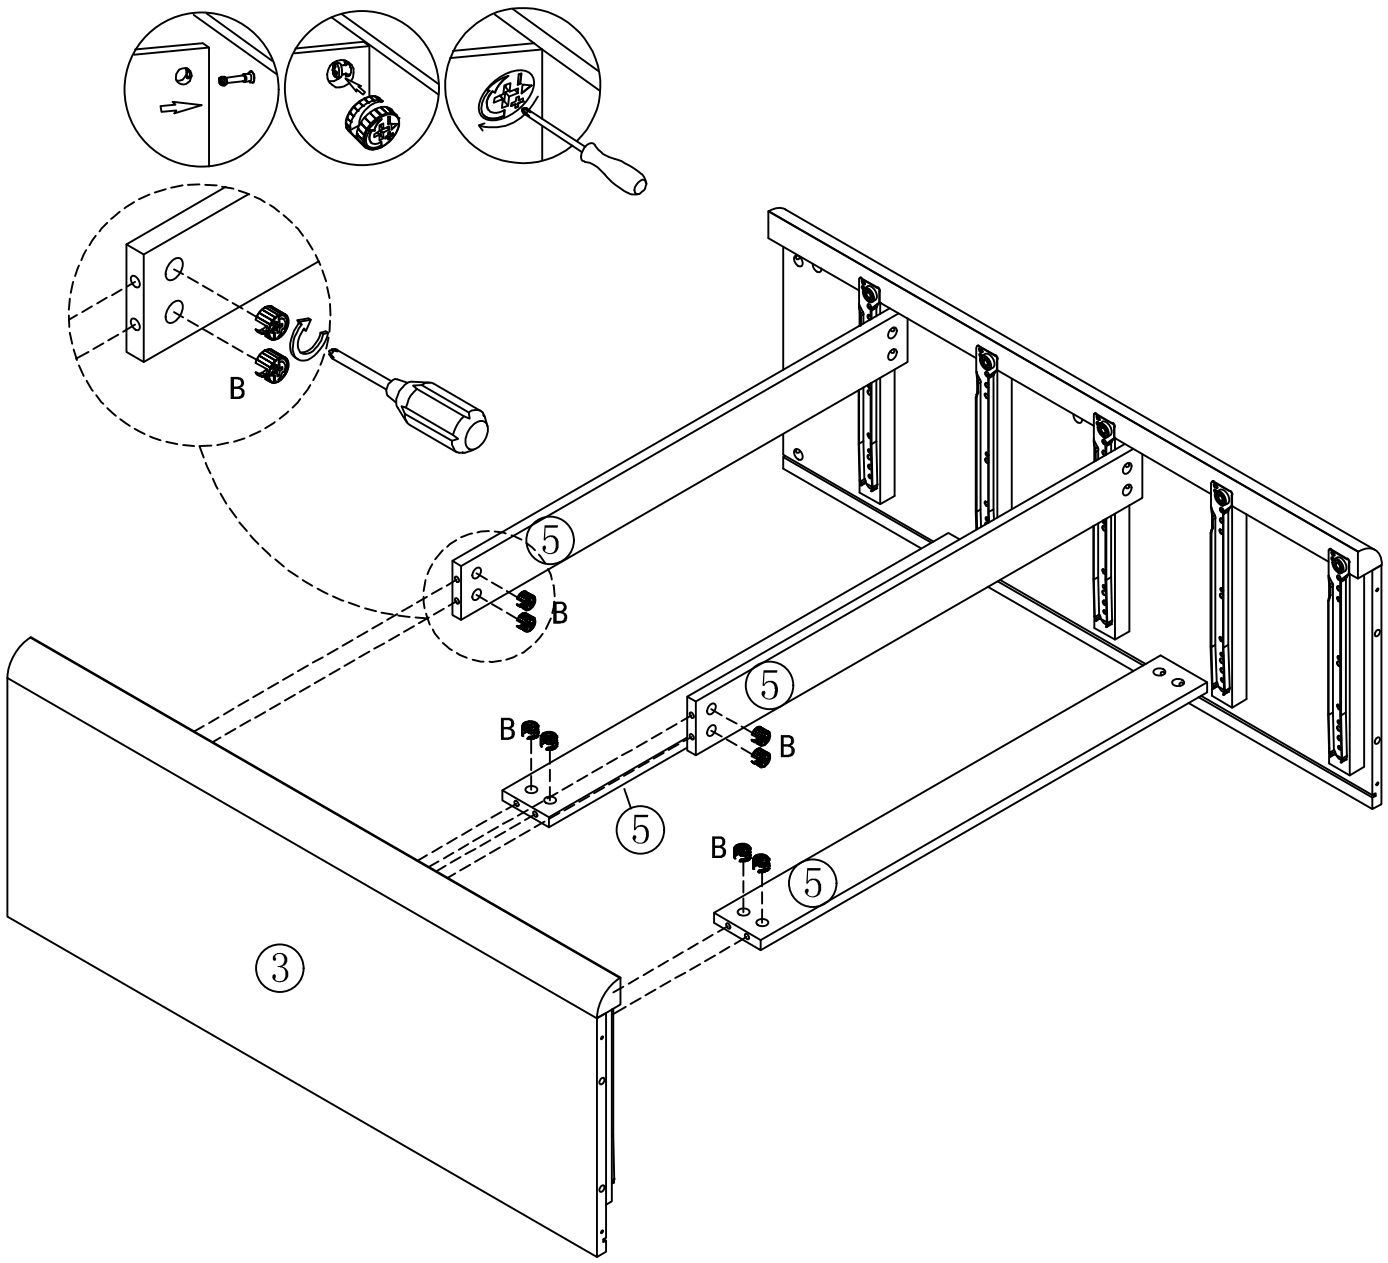


	B X 8PCS

STEP 8

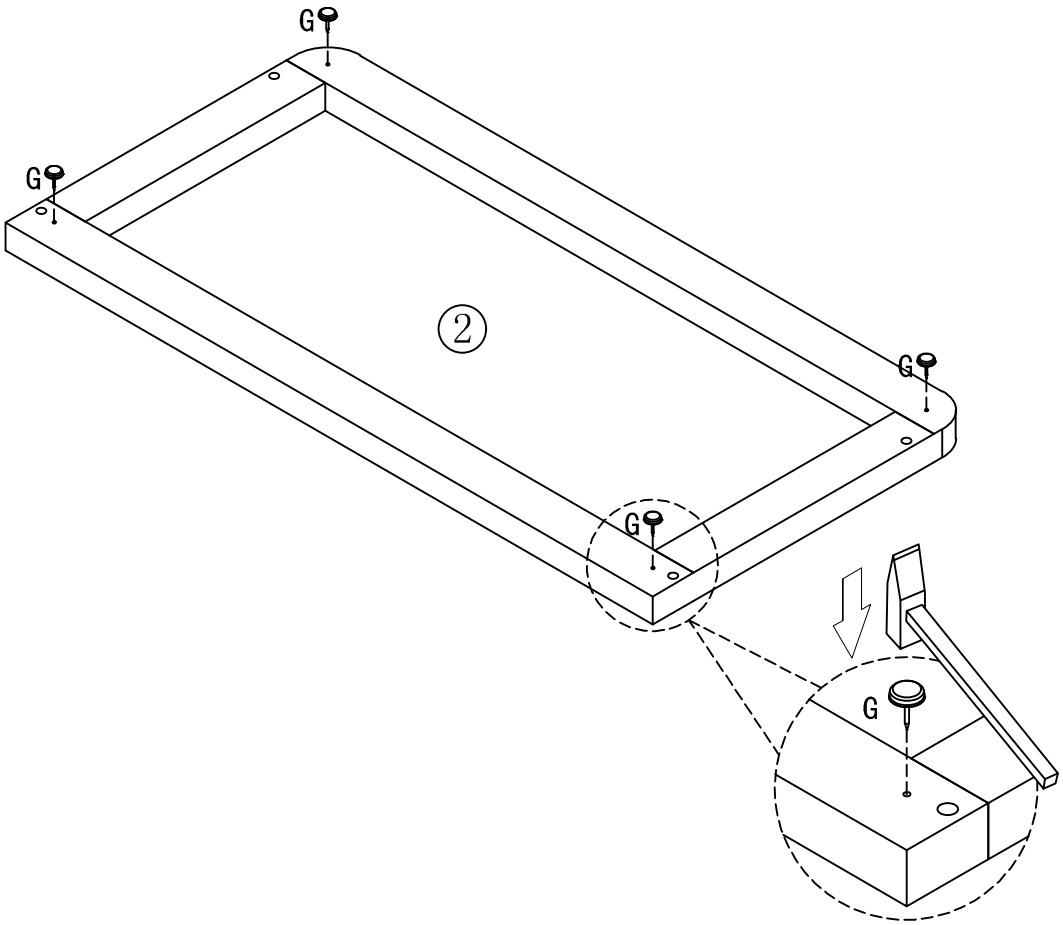


	G X 4PCS

STEP 9

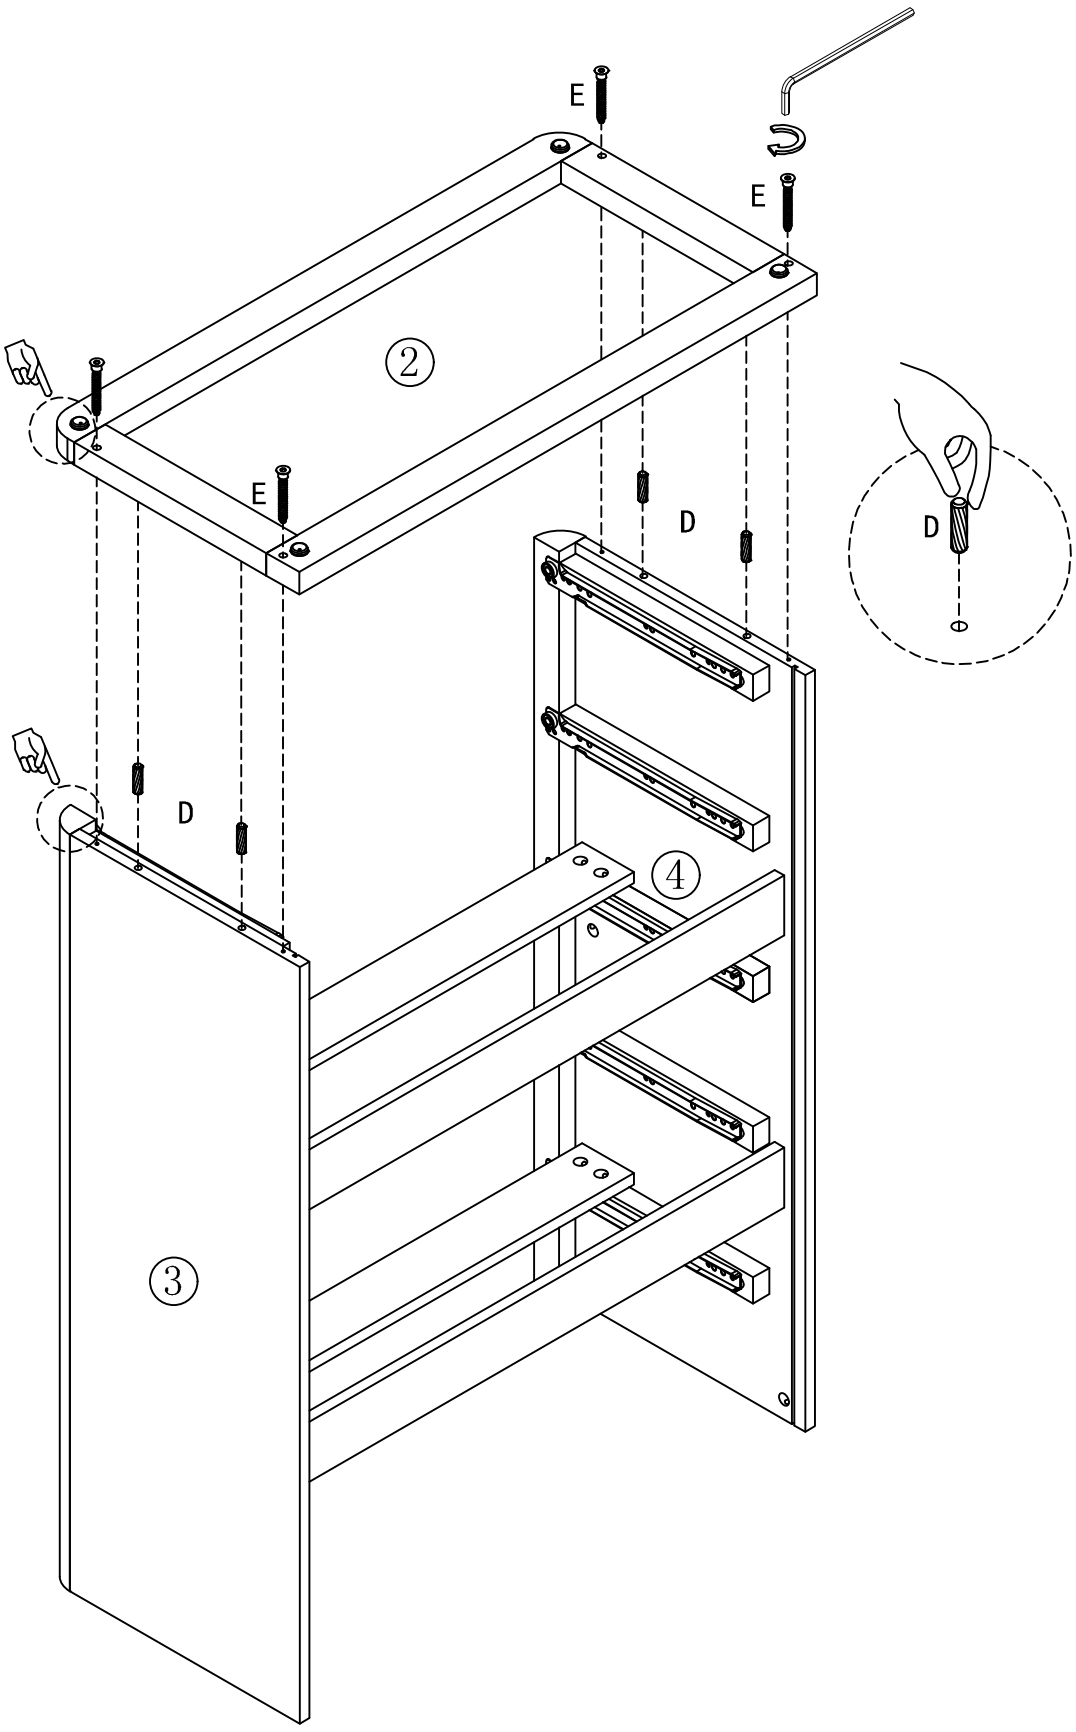


	D X 4PCS
	E X 4PCS


STEP 10

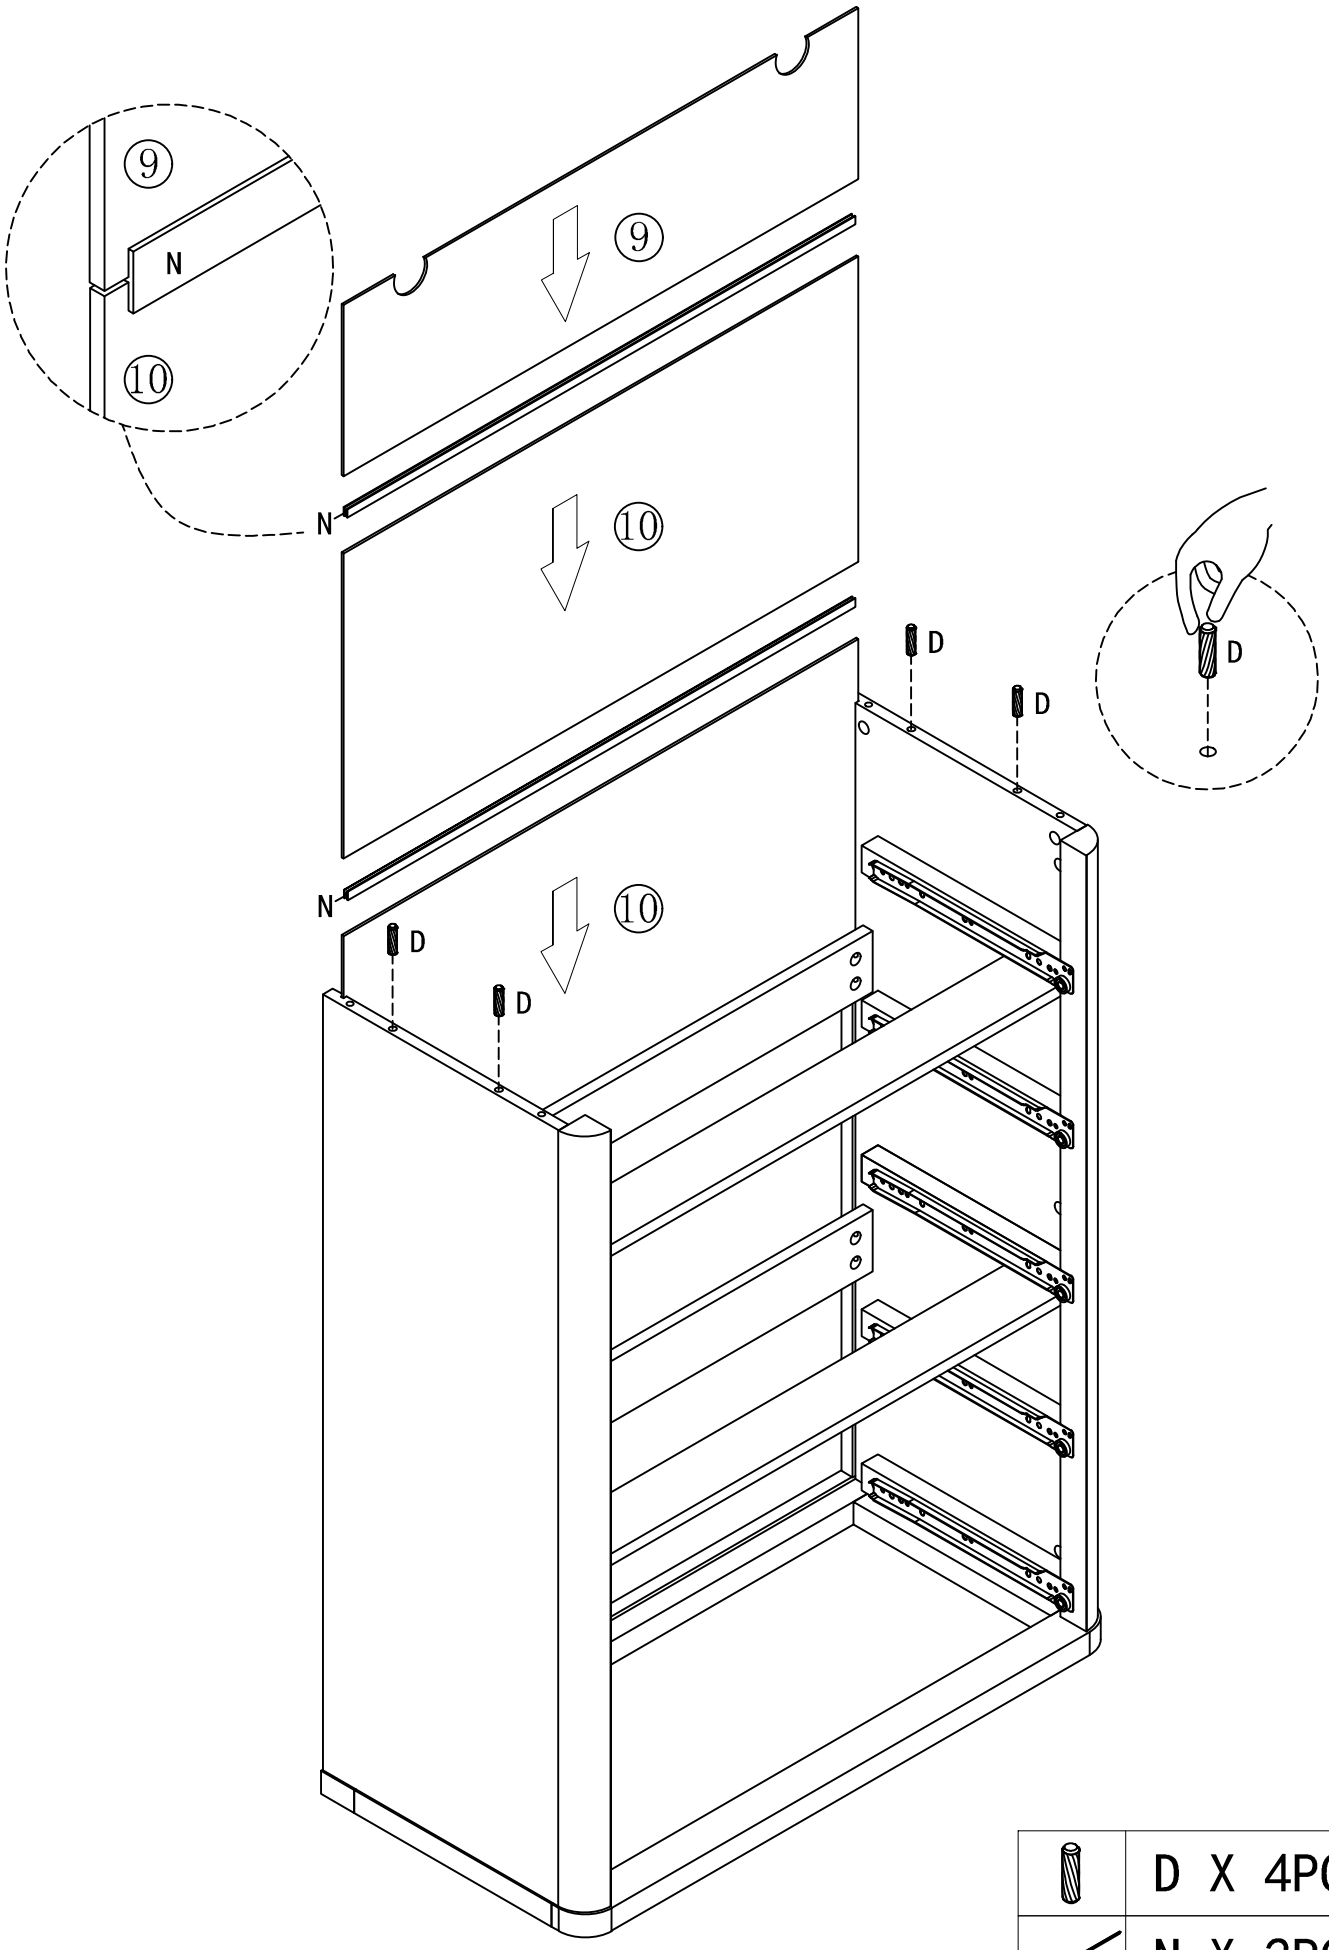

	D X 4PCS
	N X 2PCS

STEP 11

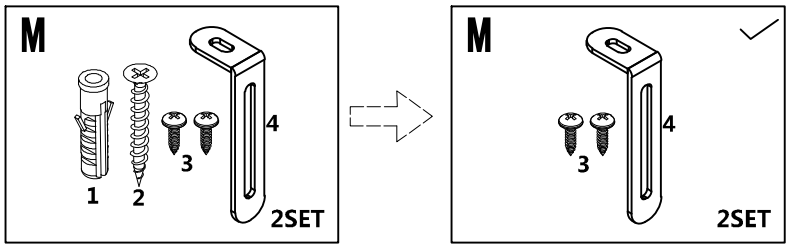


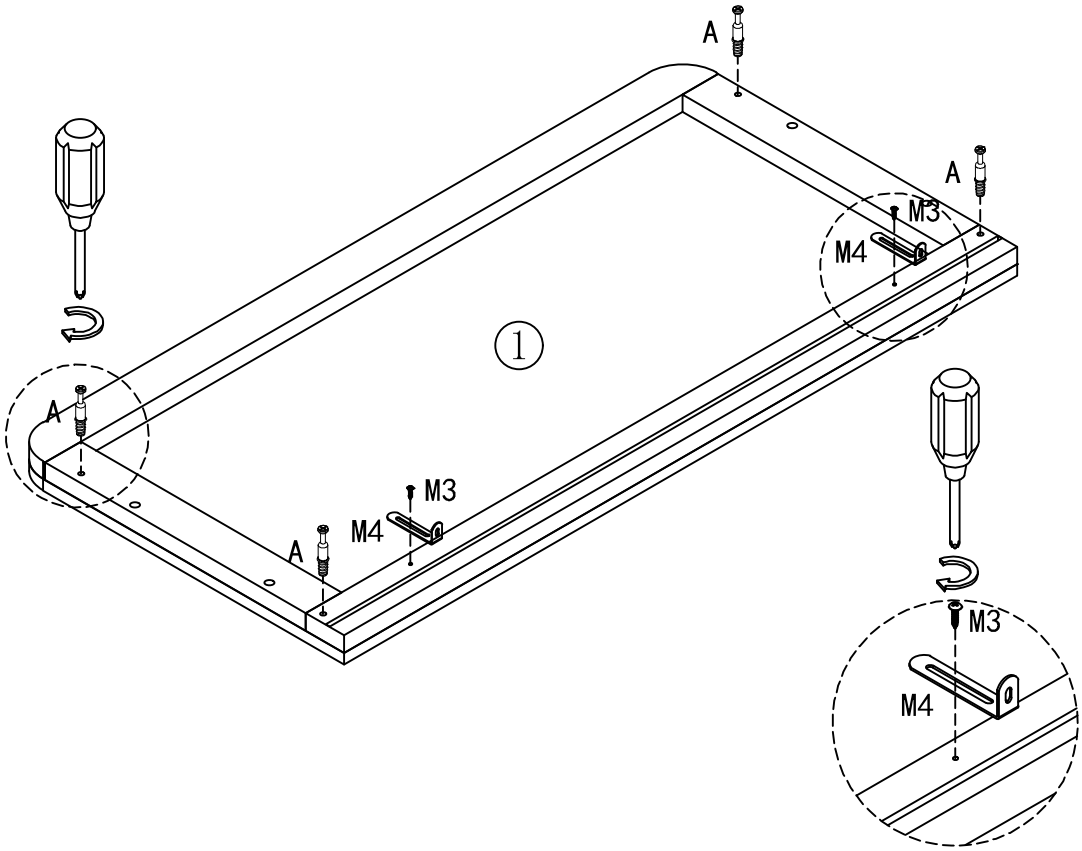

Note: Put the anti-tip device M4
on the top, near theback side,
and fix it with a screw M3.

	A X 4PCS
	M X 2SET


STEP 12

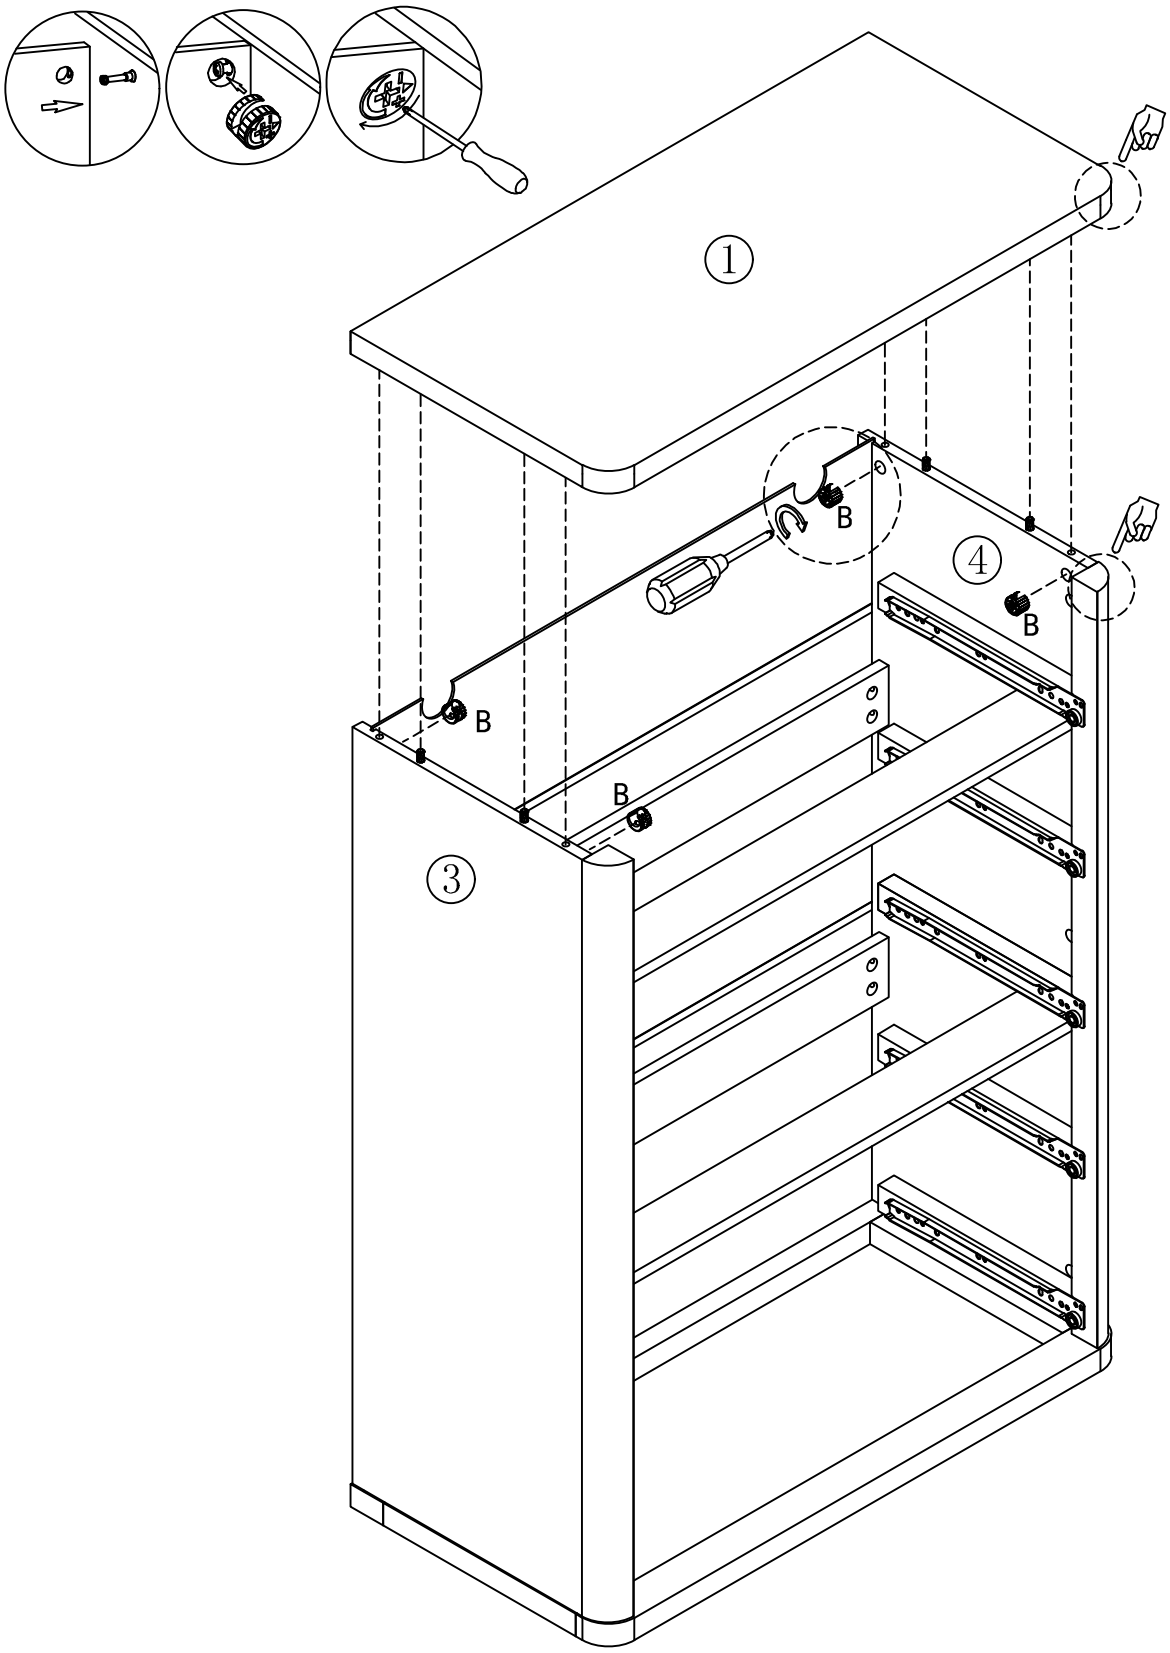

	B X 4PCS


STEP 13

NOTE:To prevent the cabinet from wobbling
please be sure to install the back panel fasteners.

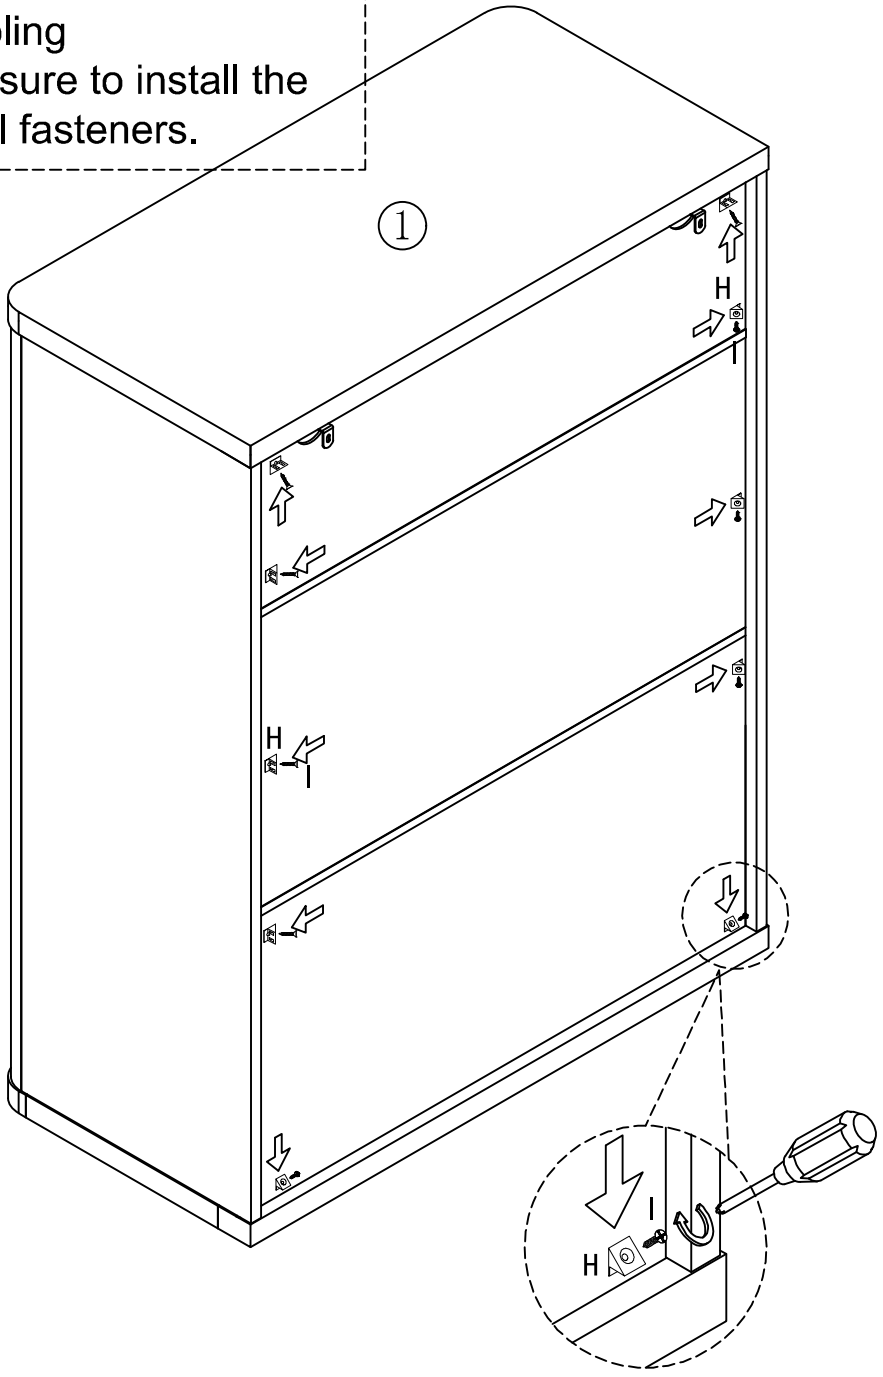

	H X 10PCS
	I X 10PCS


STEP 14

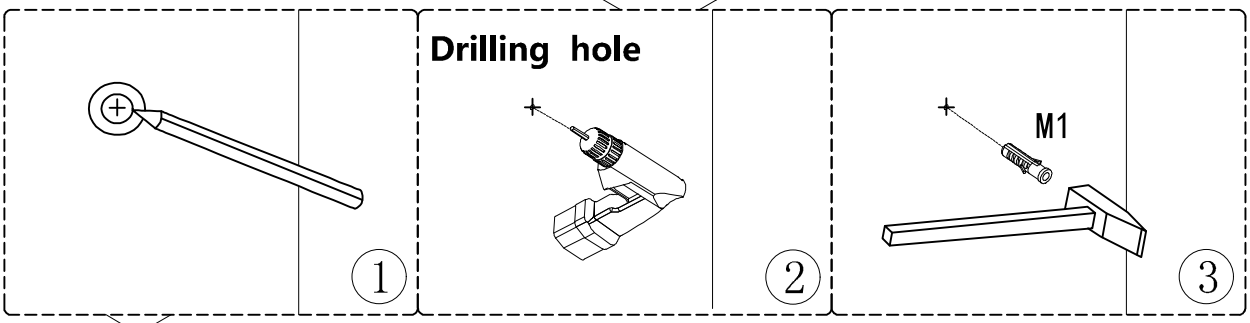


Drill a hole in the wall, then hammer the M1 into the wall with a hammer


WALL

Note: Follow step
Link M4 and M1 with a M2 using a screwdriver,and assembly it tightly.

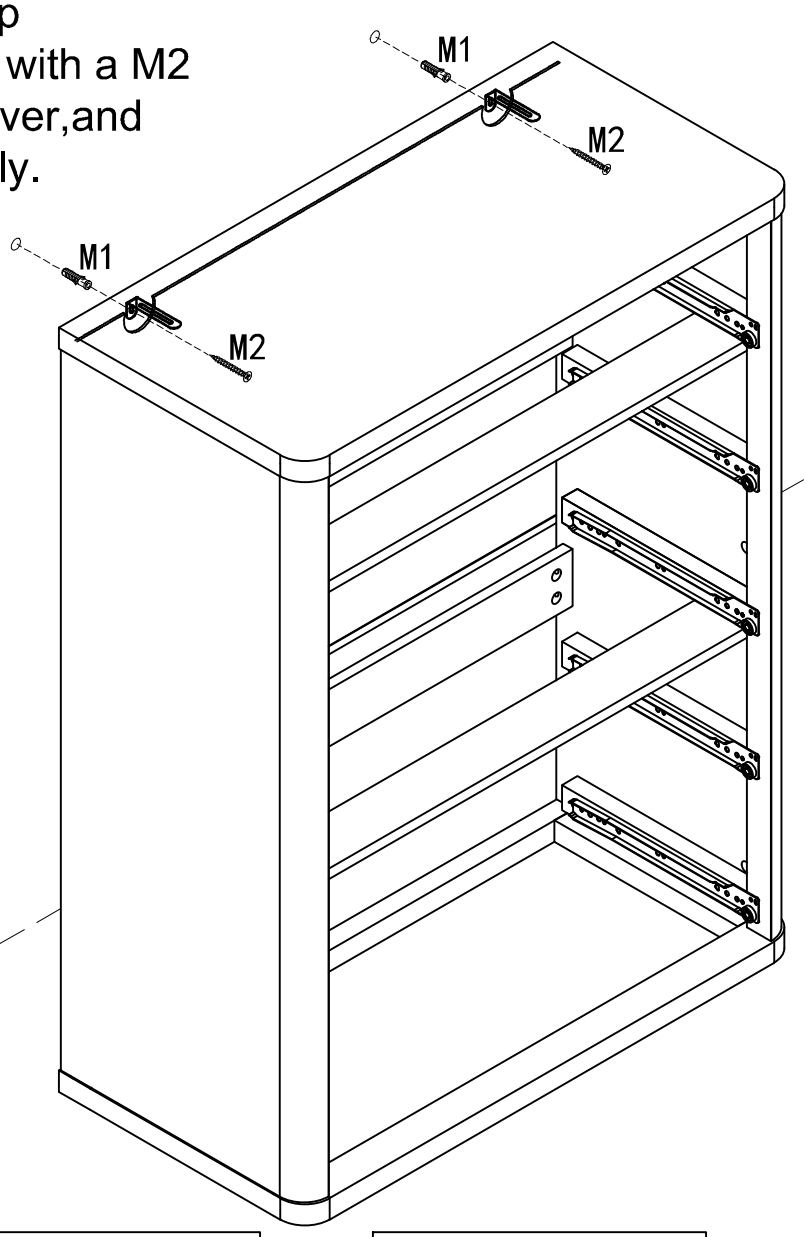


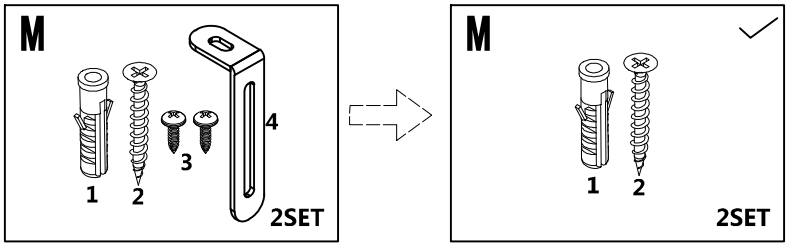

STEP 15

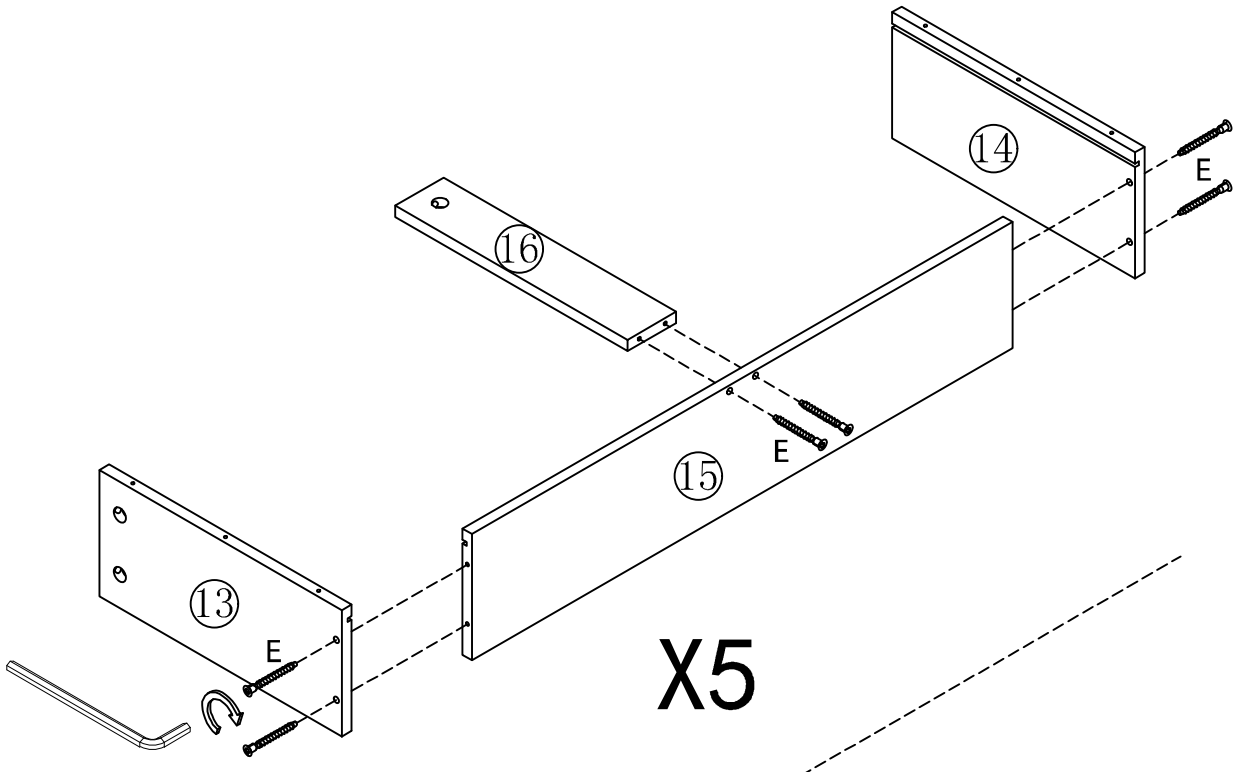


X5

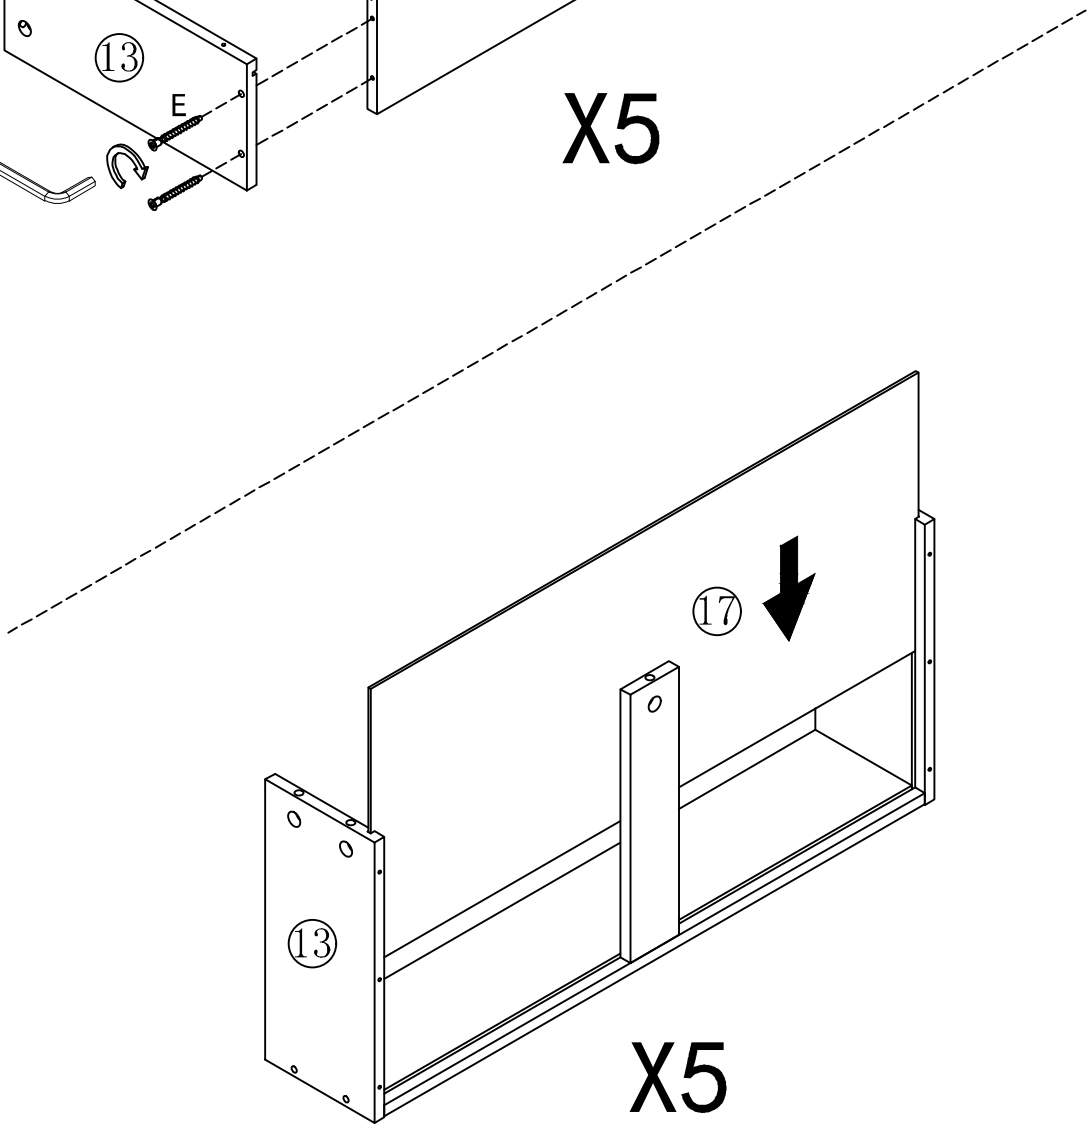


X5

E X 30PCS

STEP 16

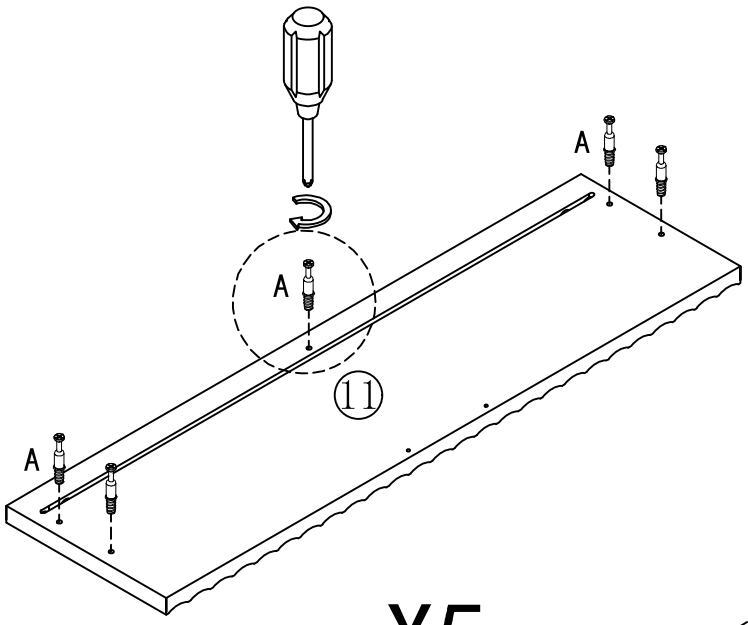


X5

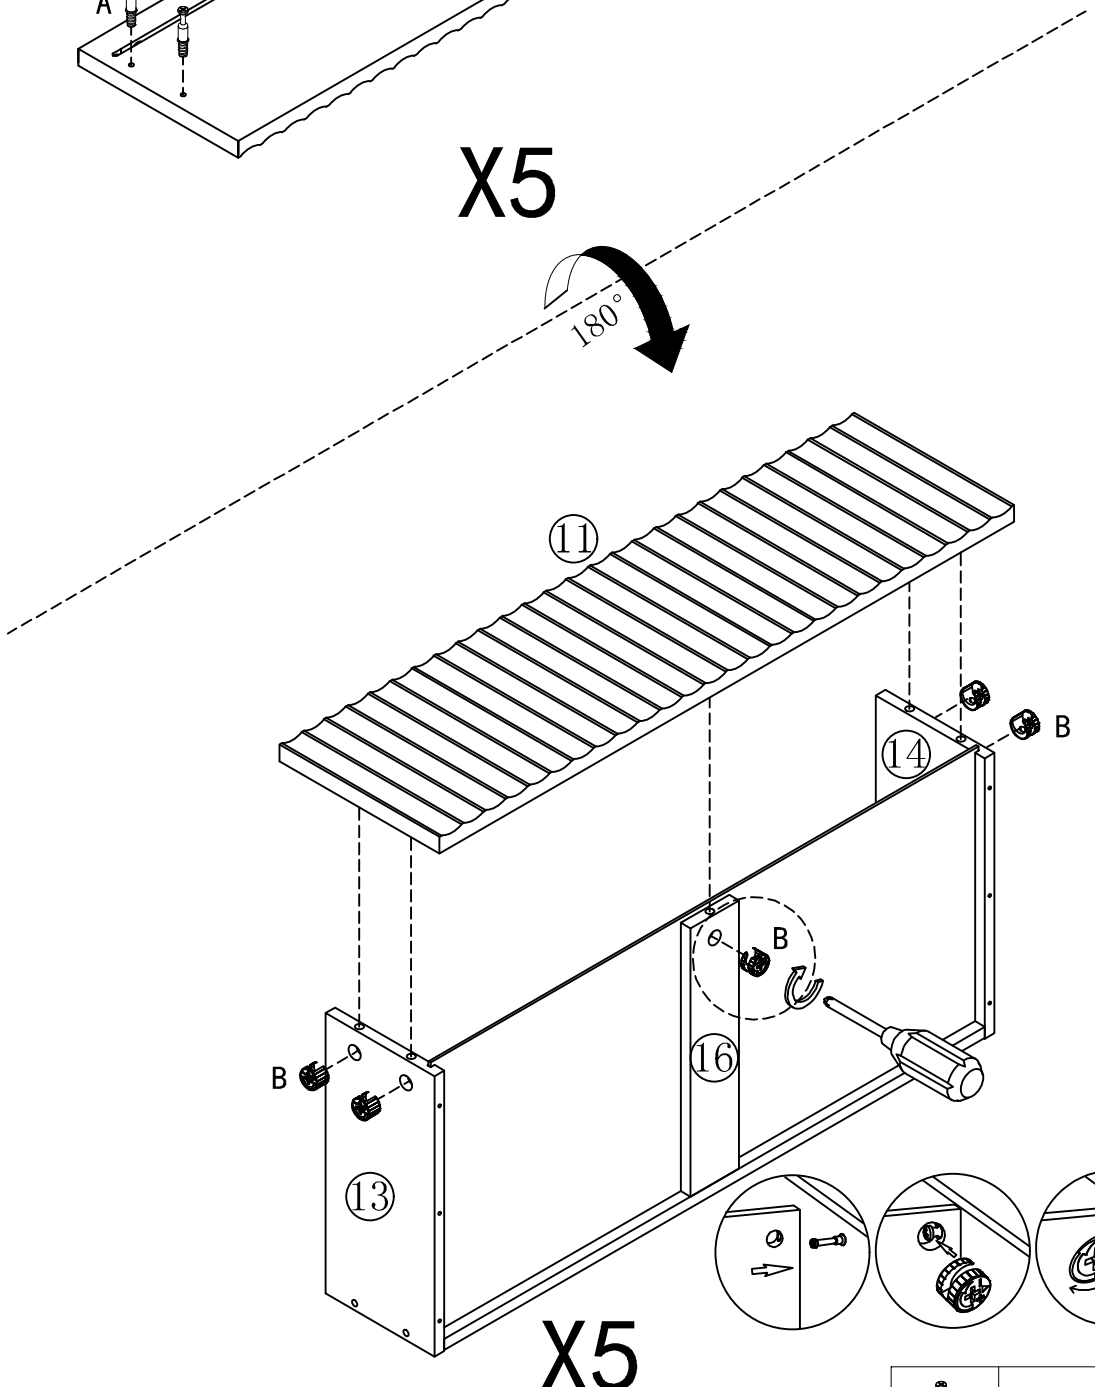

X5


	A X 25PCS
	B X 25PCS

STEP 17

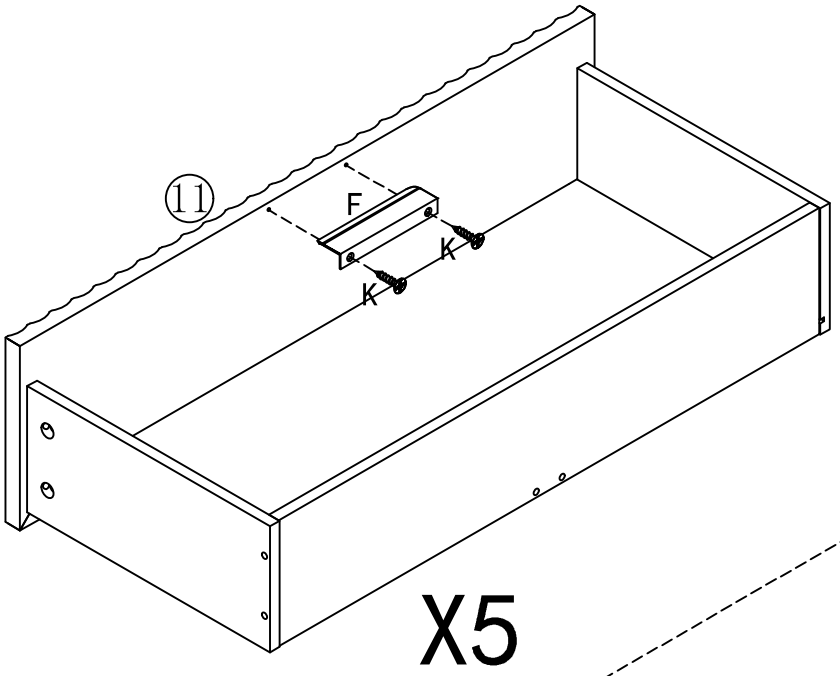

X5

Pay attention to the hole position.

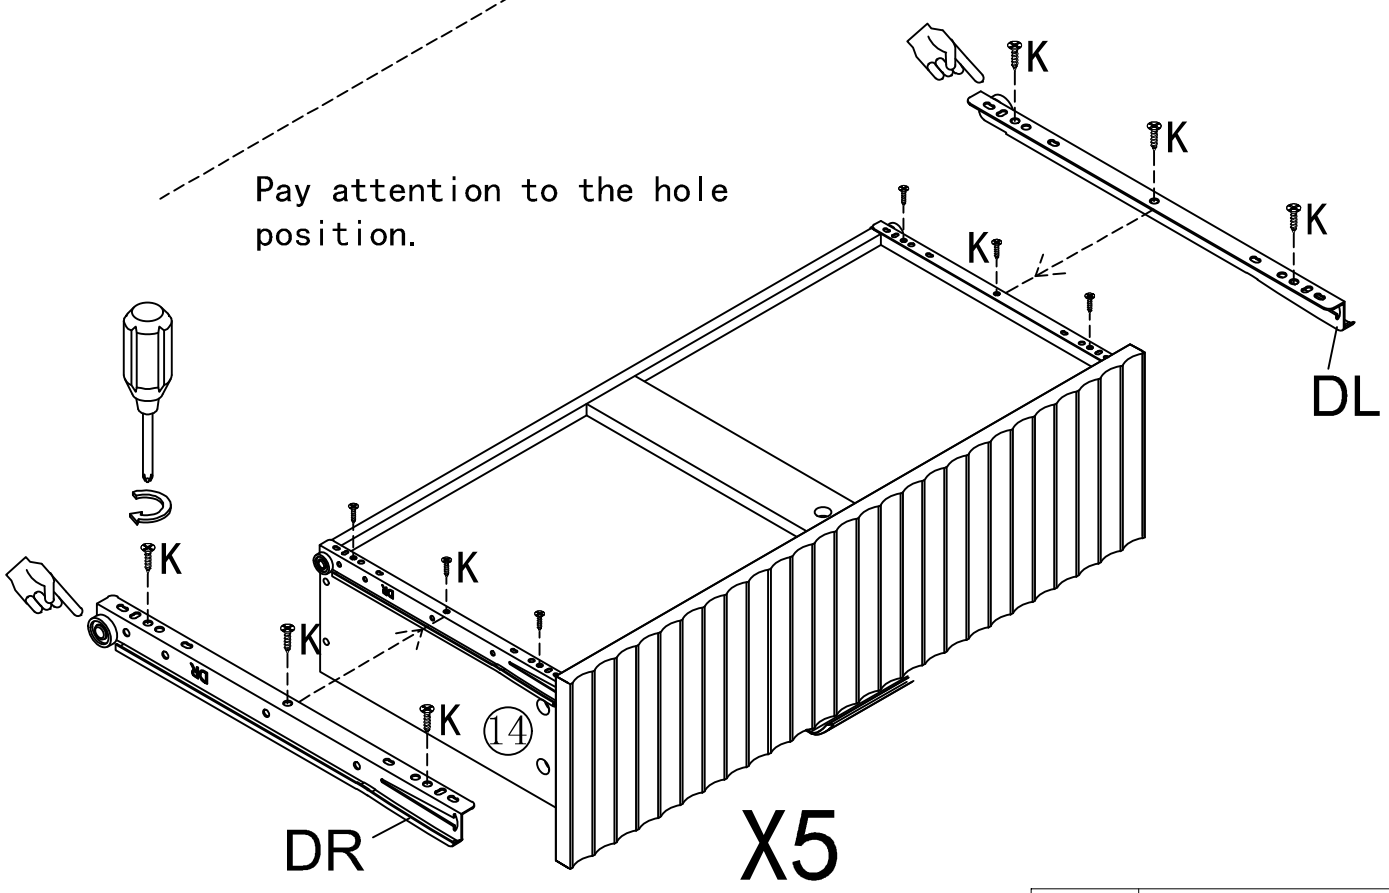

X5

	F X 5PCS
	K X 40PCS

STEP 18

