Installation Manual

Installation manual for:

D8. 66"H14.1"

Installation instructions:

1. Black wire from ceiling(junction box) attaches to "L"wire from the fixture.
2. White wire from ceiling(junction box) attaches to "N"wire from the fixture.
3. The "E" green line is connected from the clamp to the mounting bracket and attached
   The "E" green line on the mounting bracket must be fixed to the junction box.
4. Secure mounting bracket to the junction box.
5. Insert screws（P4） in side of top unit the mounting bracket.
6. Put the canopy (P5) on the mounting bracket(P1) and use the screw(P8) to screw tighten.
7. Install E26 light source,no include bulb.

The end!

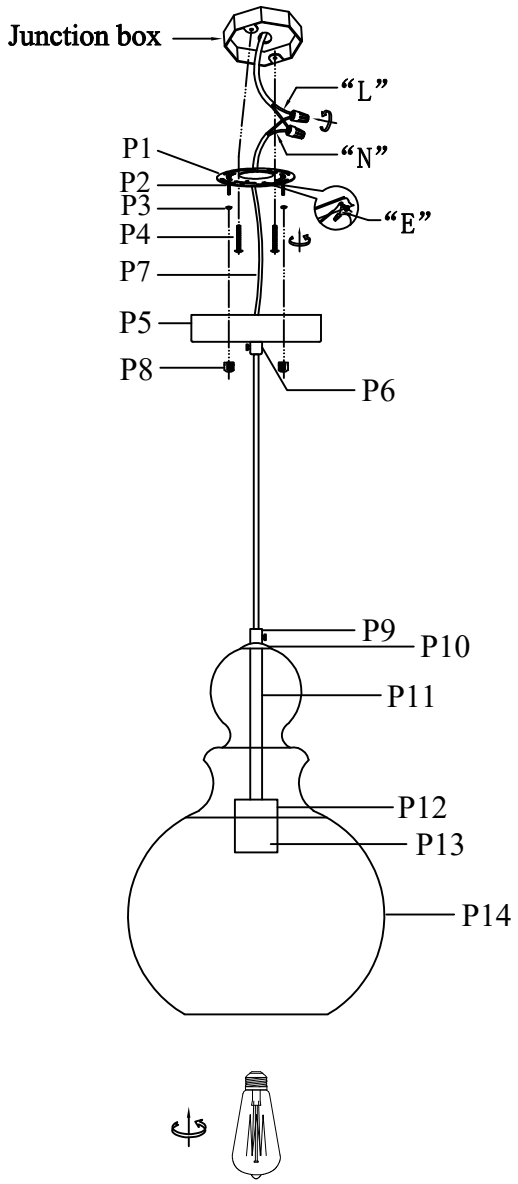

"L" = Hot wire
"N" = Neutral wire
"E" = Ground wire

PARTS LIST

part	picture	Description	Qty	Check list
P1		D4" Mounting bracket	1	
P2		5/32-32 Screw	2	
P3		Hex nut	2	
P4		5/32-32 Screw	2	
P5		D5.1"*H1" Canopy plat	1	
P6		Car iron parts	1	
P7		Power Cord 1' Black	1	
P8		Cap nut	2	
P9		Coupling	1	
P10		D1.57" Round lid	1	
P11		L4.72"Tube	1	
P12		D2" Socket cover	1	
P13		E26 Socket	1	
P13		D8.66" Glass shade	1	