
VANITY TABLE

918S-W, 918S-B
INSTALLATION

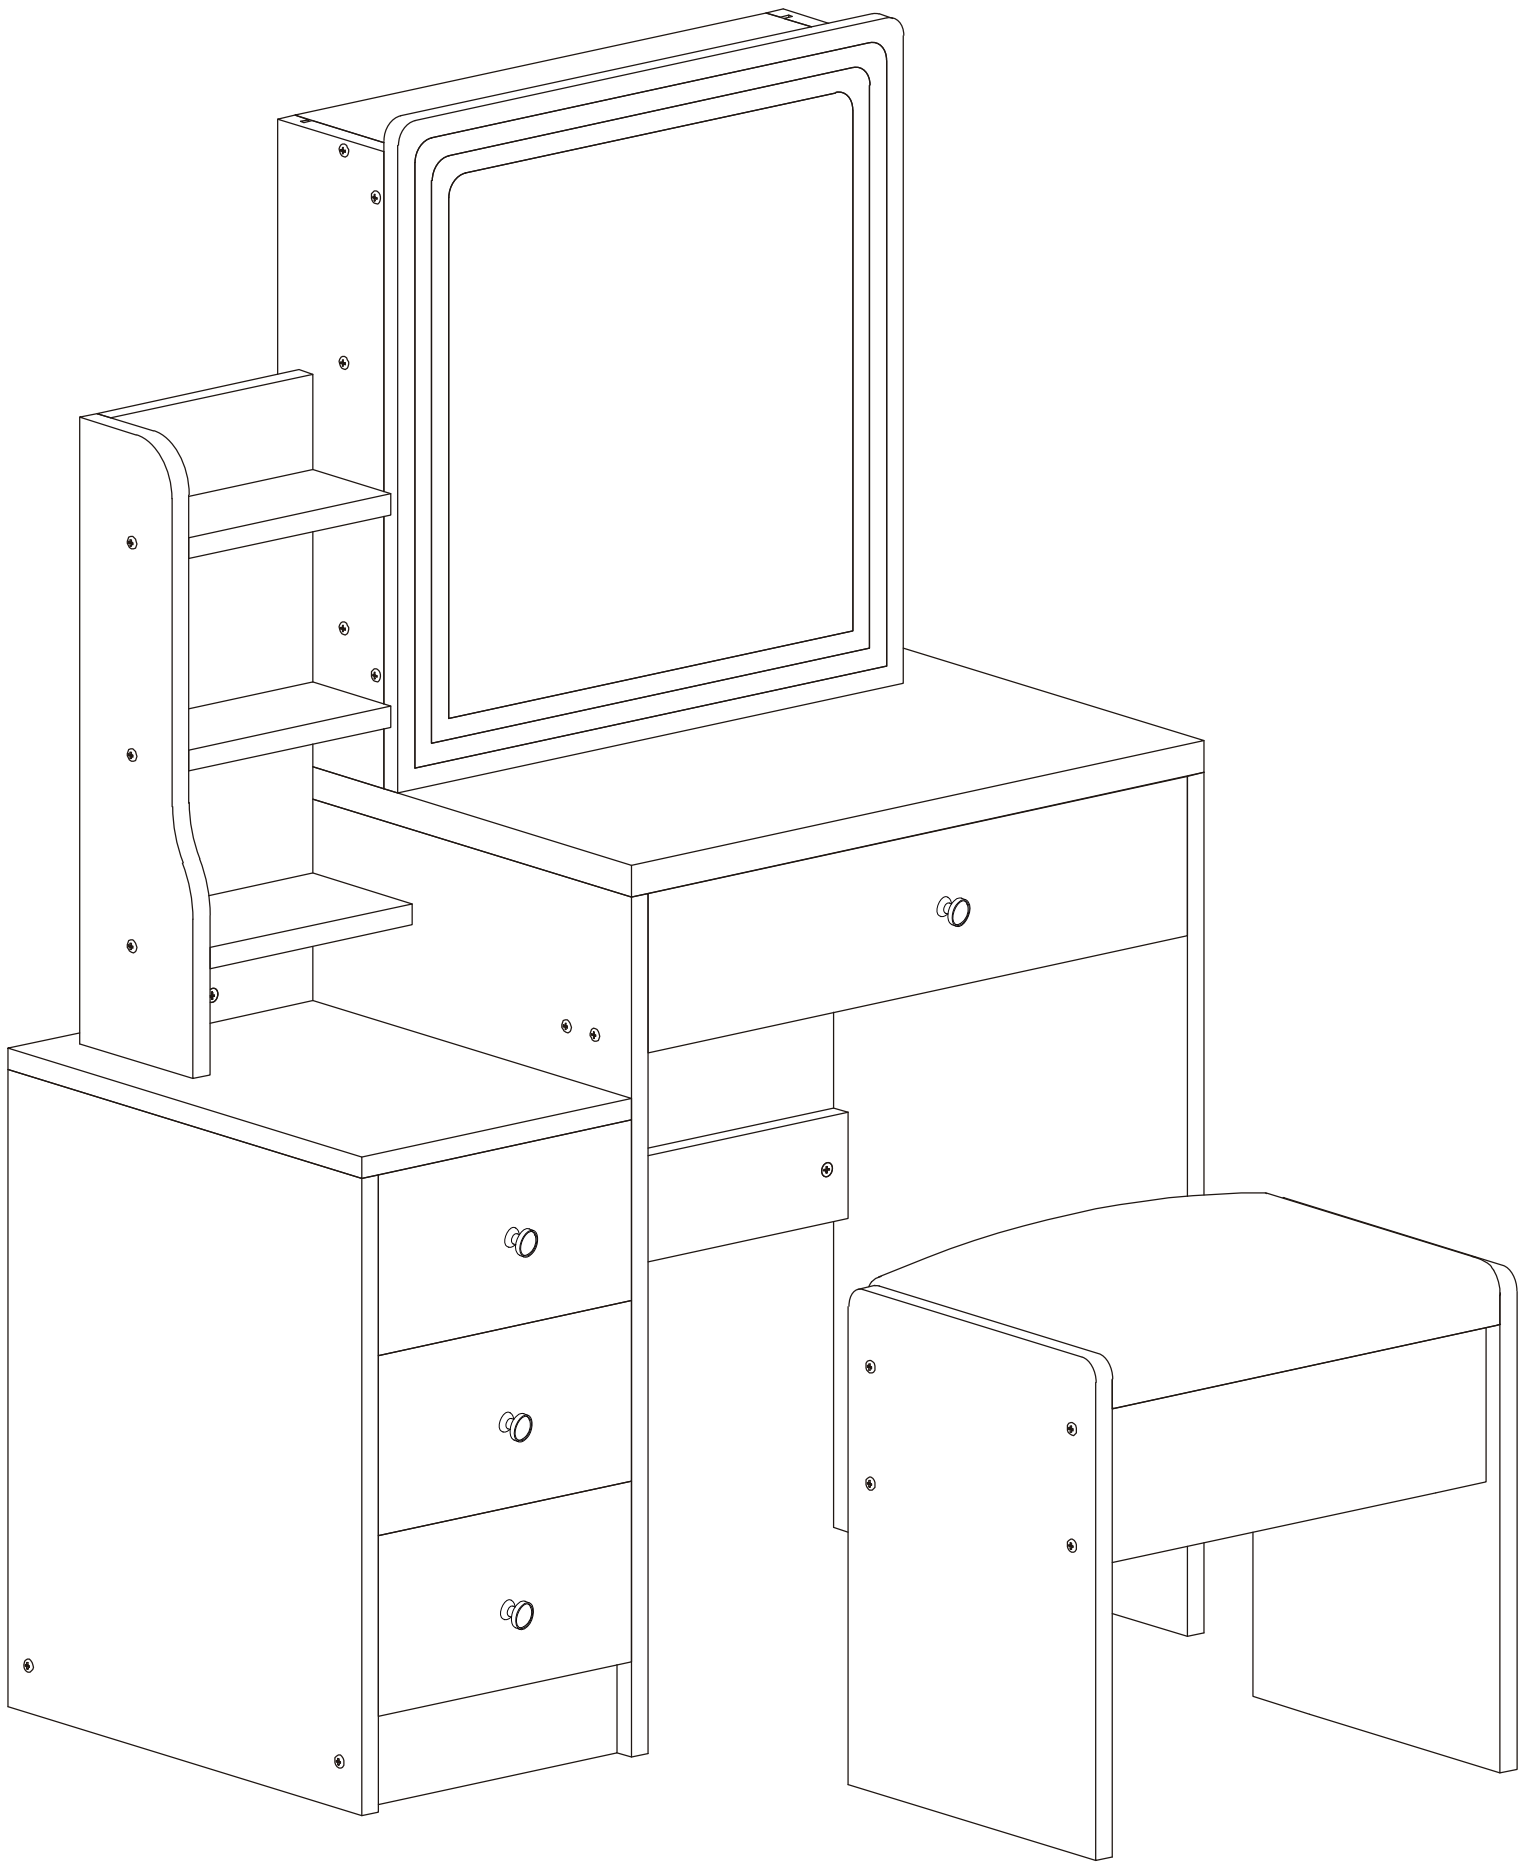

918s (small-sized) vanity tables have three version: simple, basic, and luxury.

Simple version: without mirror light, built-in socket, and hair dryer bracket, therefore there is no mirror light power plug, built-in socket, and hair dryer bracket in the accessories.

Basic version: with mirror light, without built-in socket, hair dryer stand. Therefore, there is no built-in socket and hair dryer stand in the accessories.

Luxury version: with mirror light, built-in socket, hair dryer stand, therefore, there are power plug, built-in socket, and hair dryer bracket in the accessories.

This is simple version 918s

Please notice:

Screw C is a drawer positioning pin that prevents the drawer from falling off when opened. After installation, please confirm that all positioning screws C have been installed.







Before assembly please scan the code to get the installation video.


How to install the rail and mirror? please scan the code to get the video.


How to adjust the mirror light? please scan the code to get the video.


918s real show video.

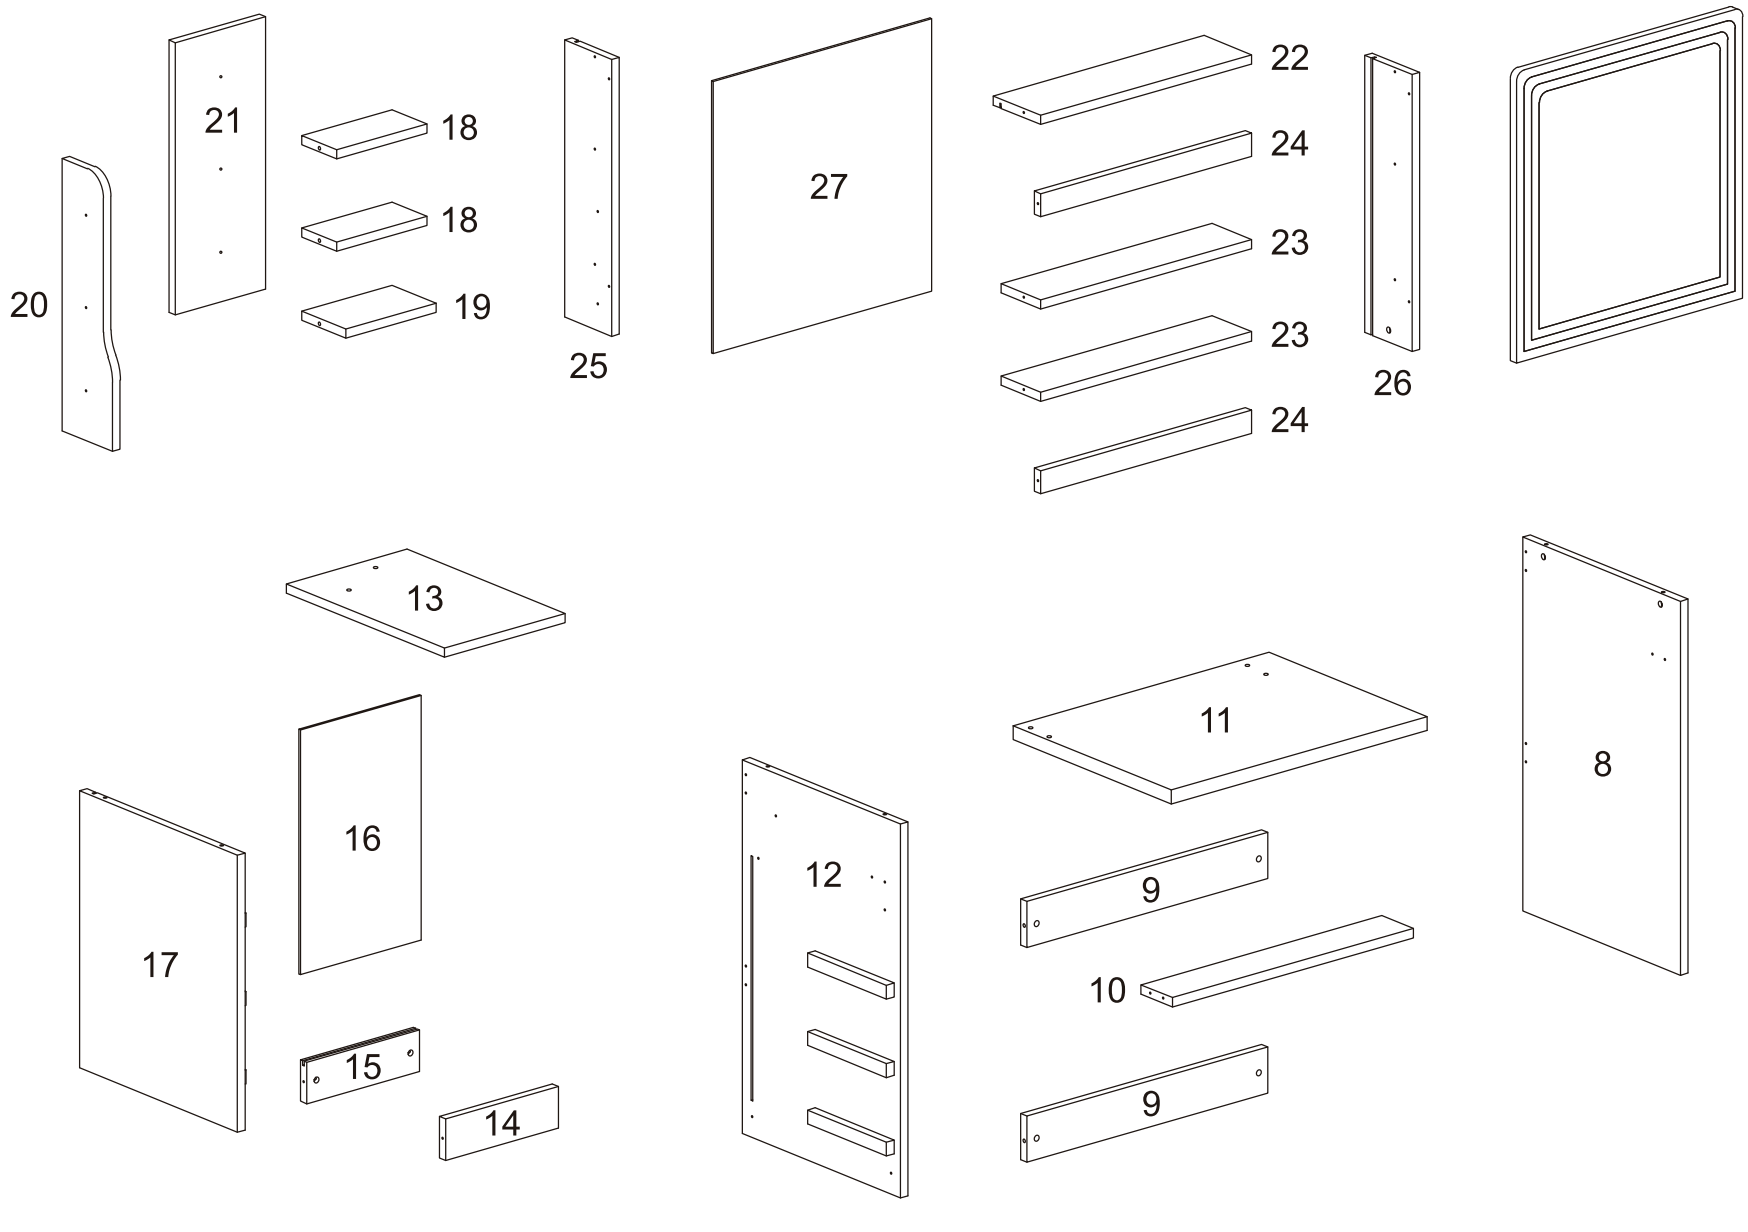


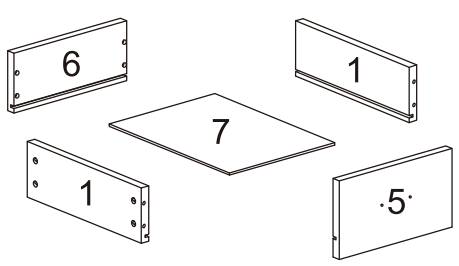

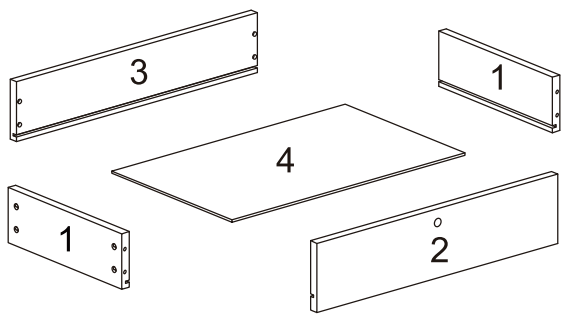

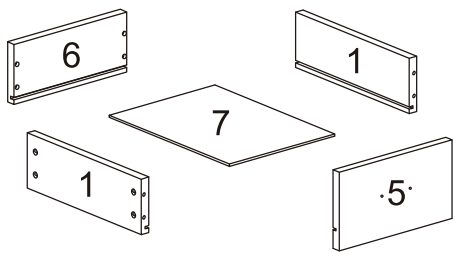

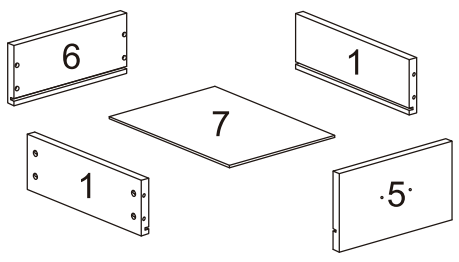

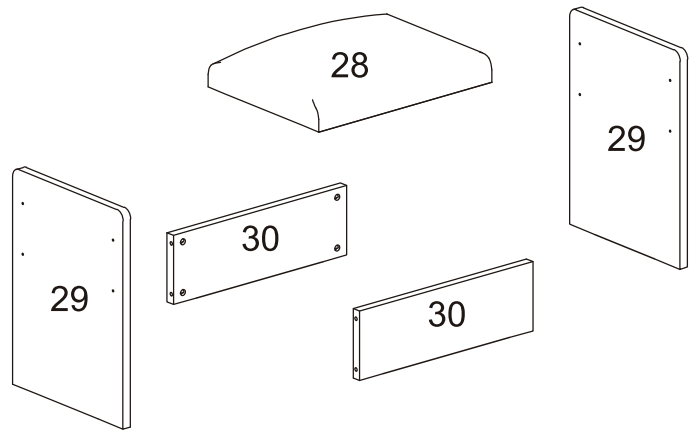

1 - x8	16 - x1
2 - x1	17 - x1
3 - x1	18 - x2
4 - x1	19 - x1
5 - x3	20 - x1
6 - x3	21 - x1
7 - x3	22 - x1
8 - x1	23 - x2
9 - x2	24 - x2
10 - x1	25 - x1
11 - x1	26 - x1
12 - x1	27 - x1
13 - x1	28 - x1
14 - x1	29 - x2
15 - x1	30 - x2



1 -x8



2 -x1



3 -x1



4 -x1



5 -x3



6 -x3



7 -x3



8 -x1



9 -x2



10 -x1



11 -x1




12 -x1



13 -x1



14 -x1

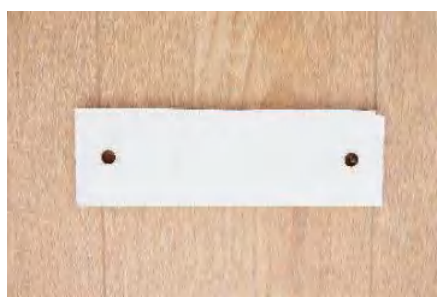

15 -x1



16 -x1



17 -x1



18 -x2



19 -x1



20 -x1



21 -x1



22 -x1



23 -x2



24 -x2



25 -x1



26 -x1



27 -x1



28 -x1



29 -x2




30 -x2



31 -x1


HARDWARE

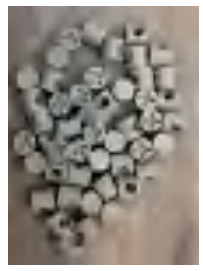A	SCREW & PLASTIC LOCK	X46




B	SCREW & METAL LOCK	X46

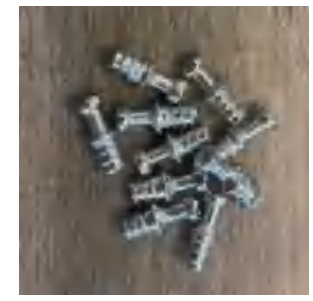

C	SCREW	X8



D	SCREW	X16




E	HANDLE	X4




G	L PLATE	X2



J	RAIL	X2


1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

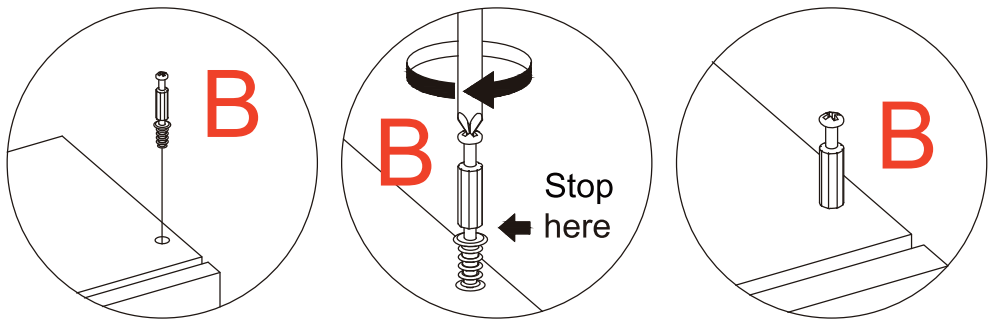


2. Check the Nut direction


This direction of the marked nutis consistent with the direction in which the scre is inserted

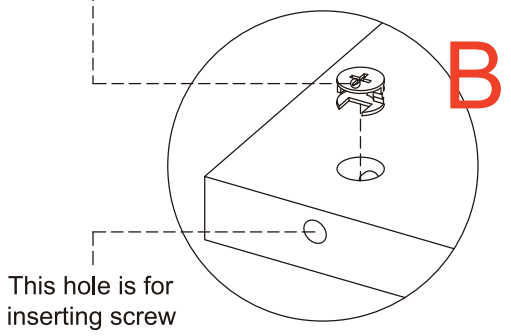


3. Installation on thr board with fixing screws

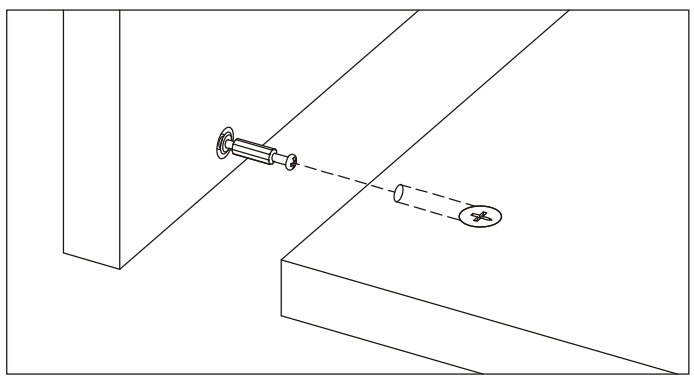


3. Rotate slowlyuntil it stops

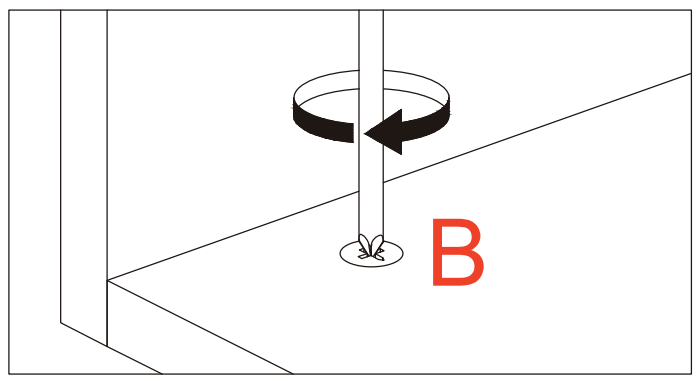


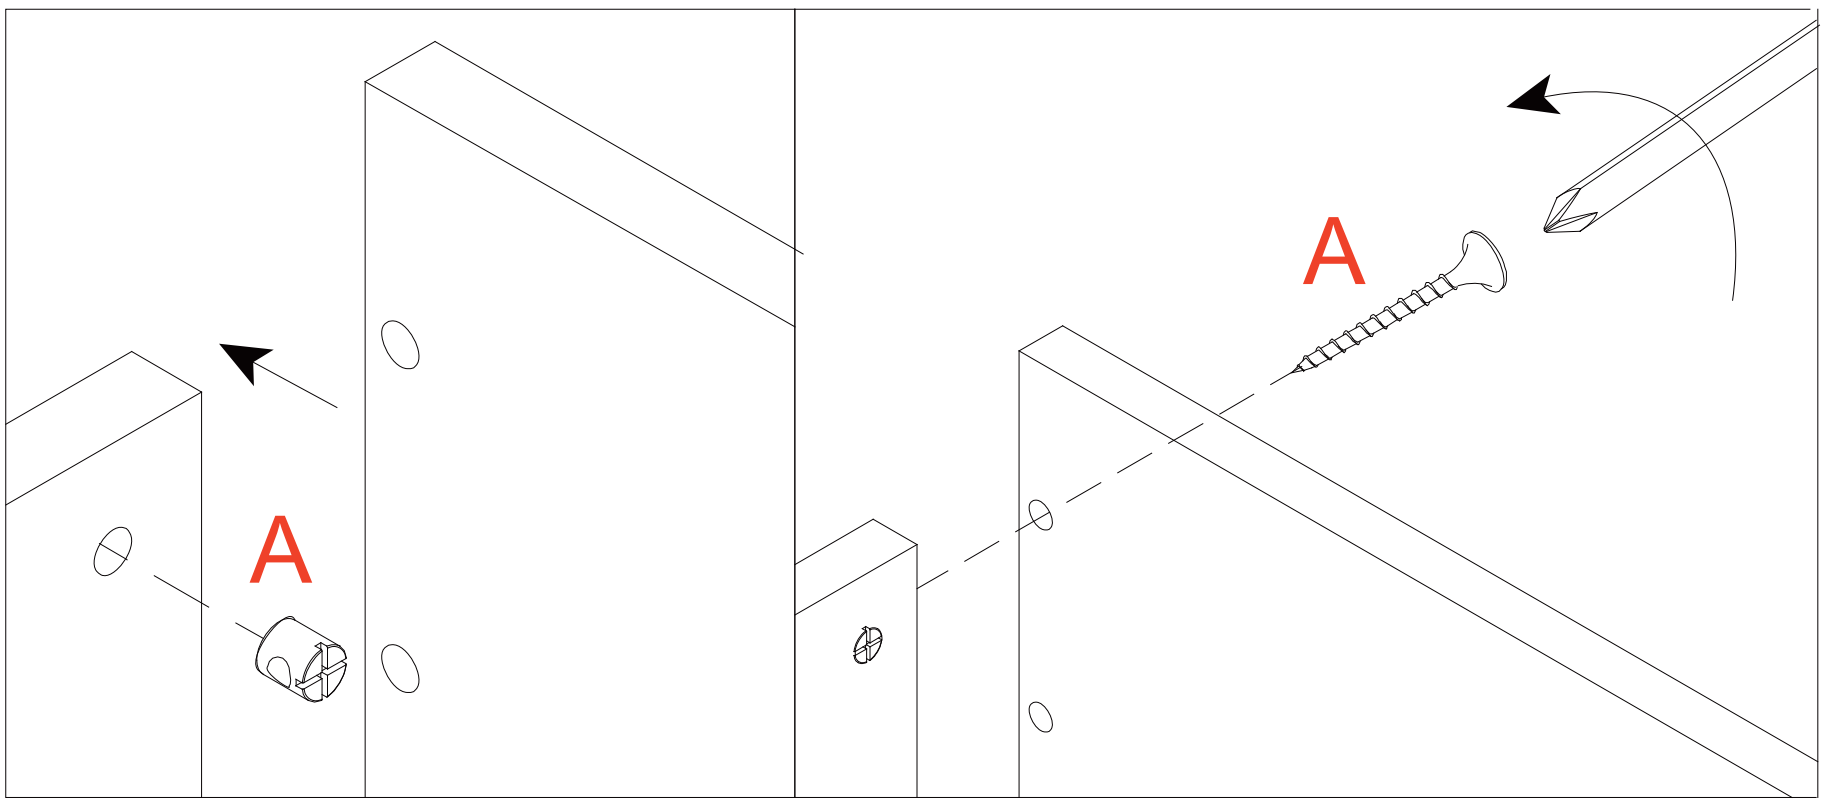


Step 01 pick up①x2,②x1,③x1,④x1

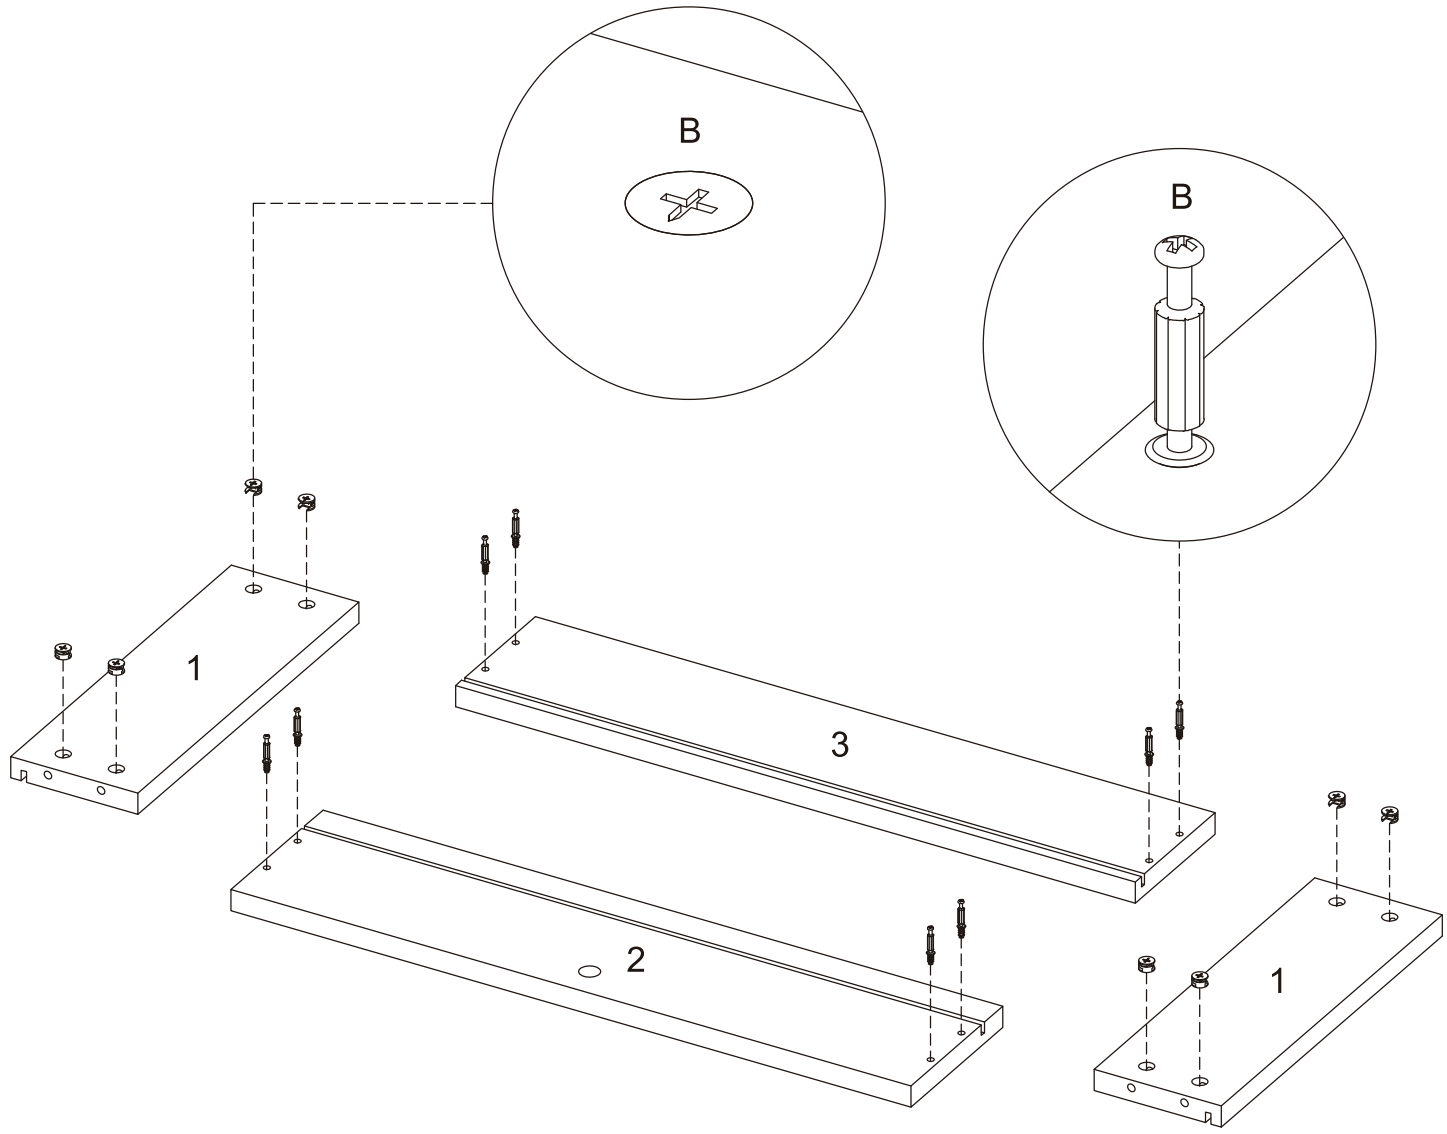


Step 02

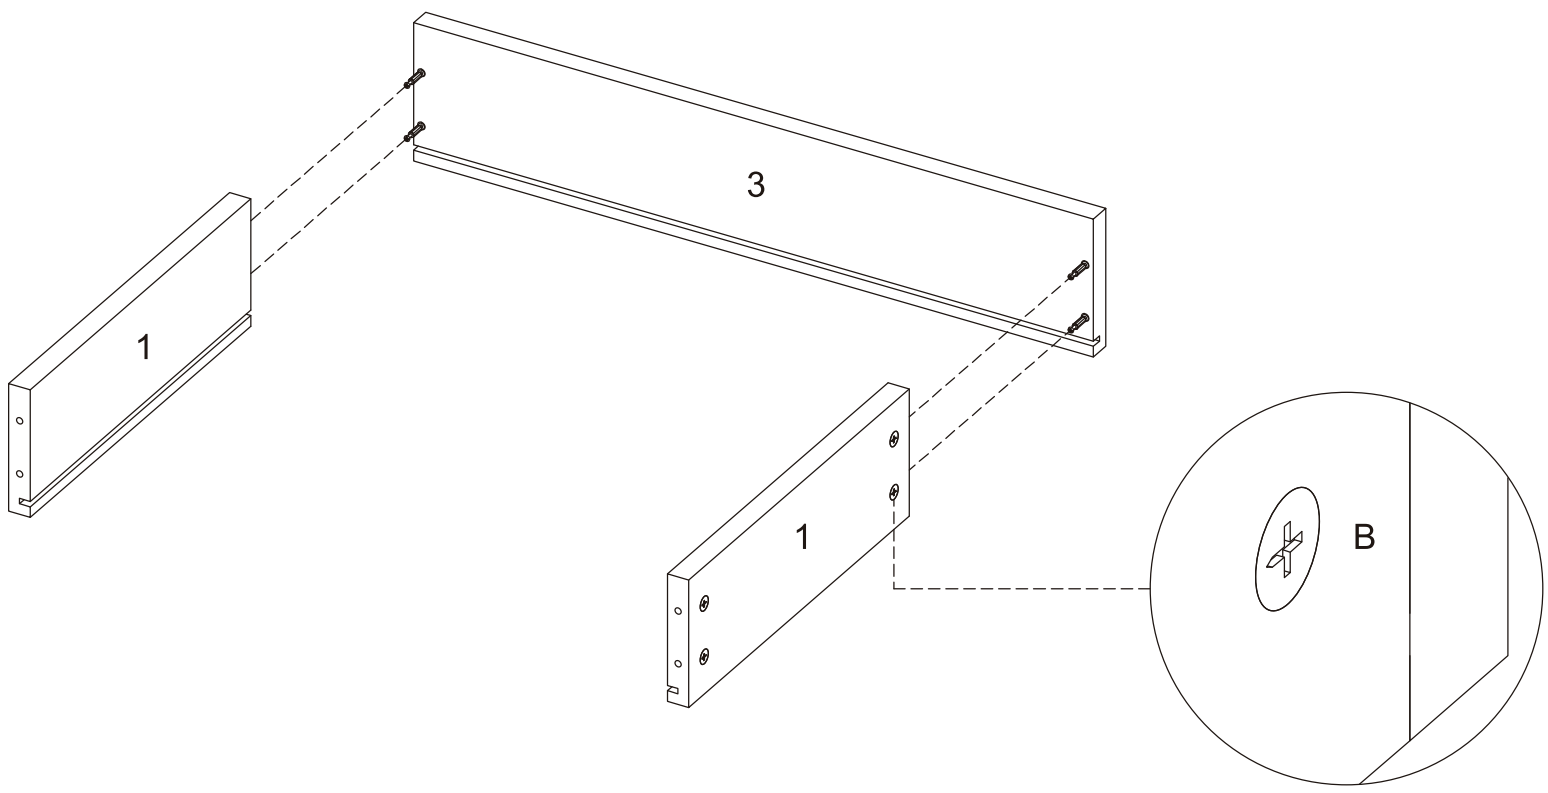


Step 03

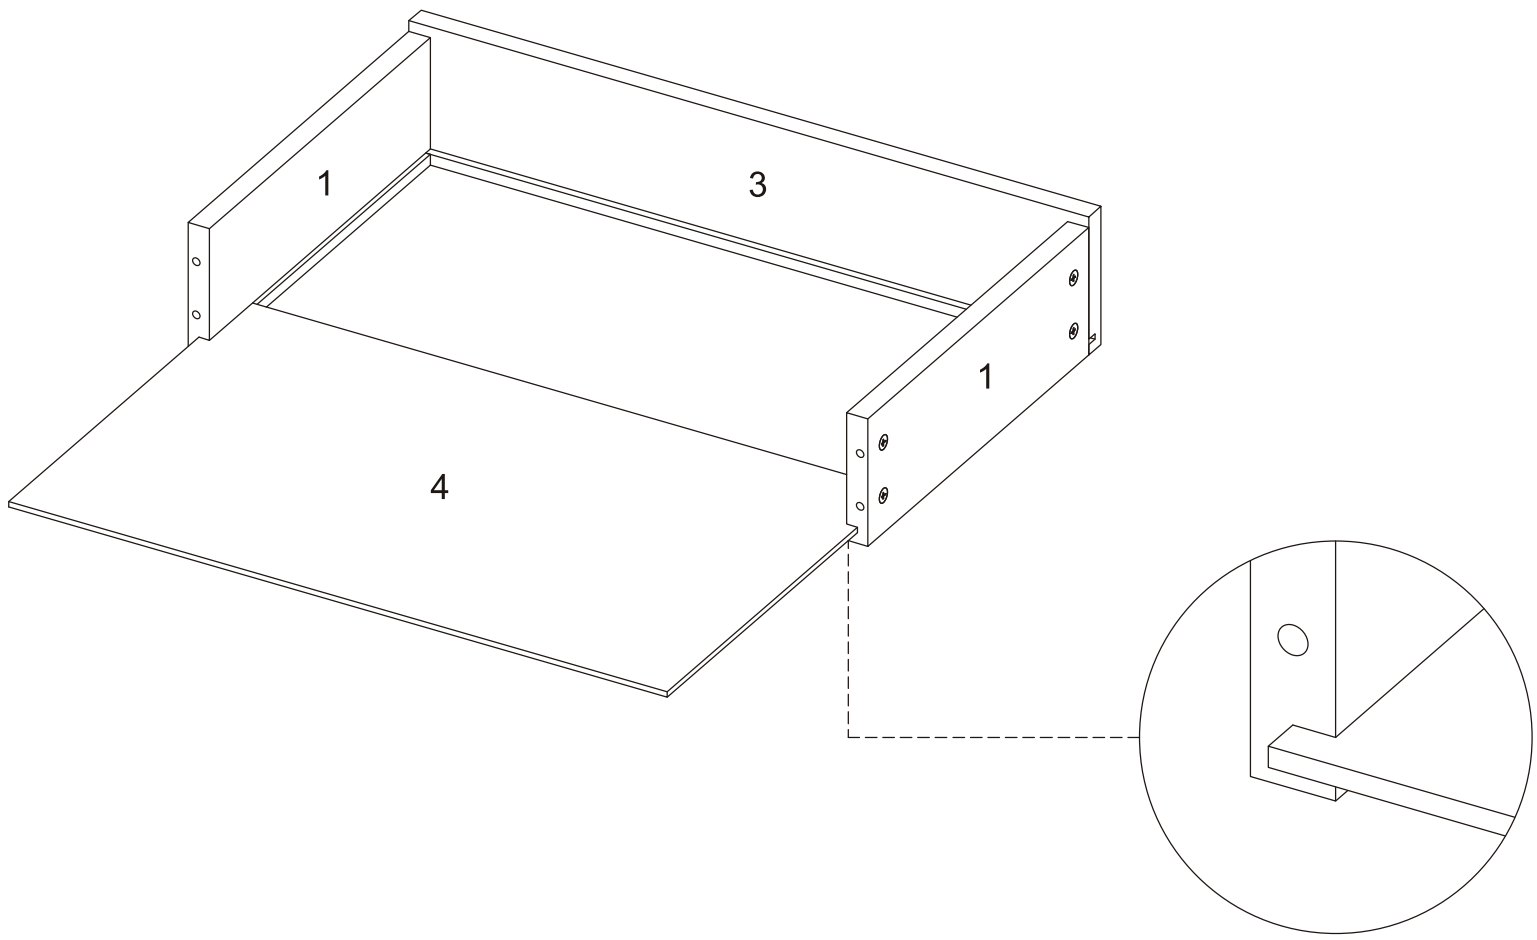


Step 04

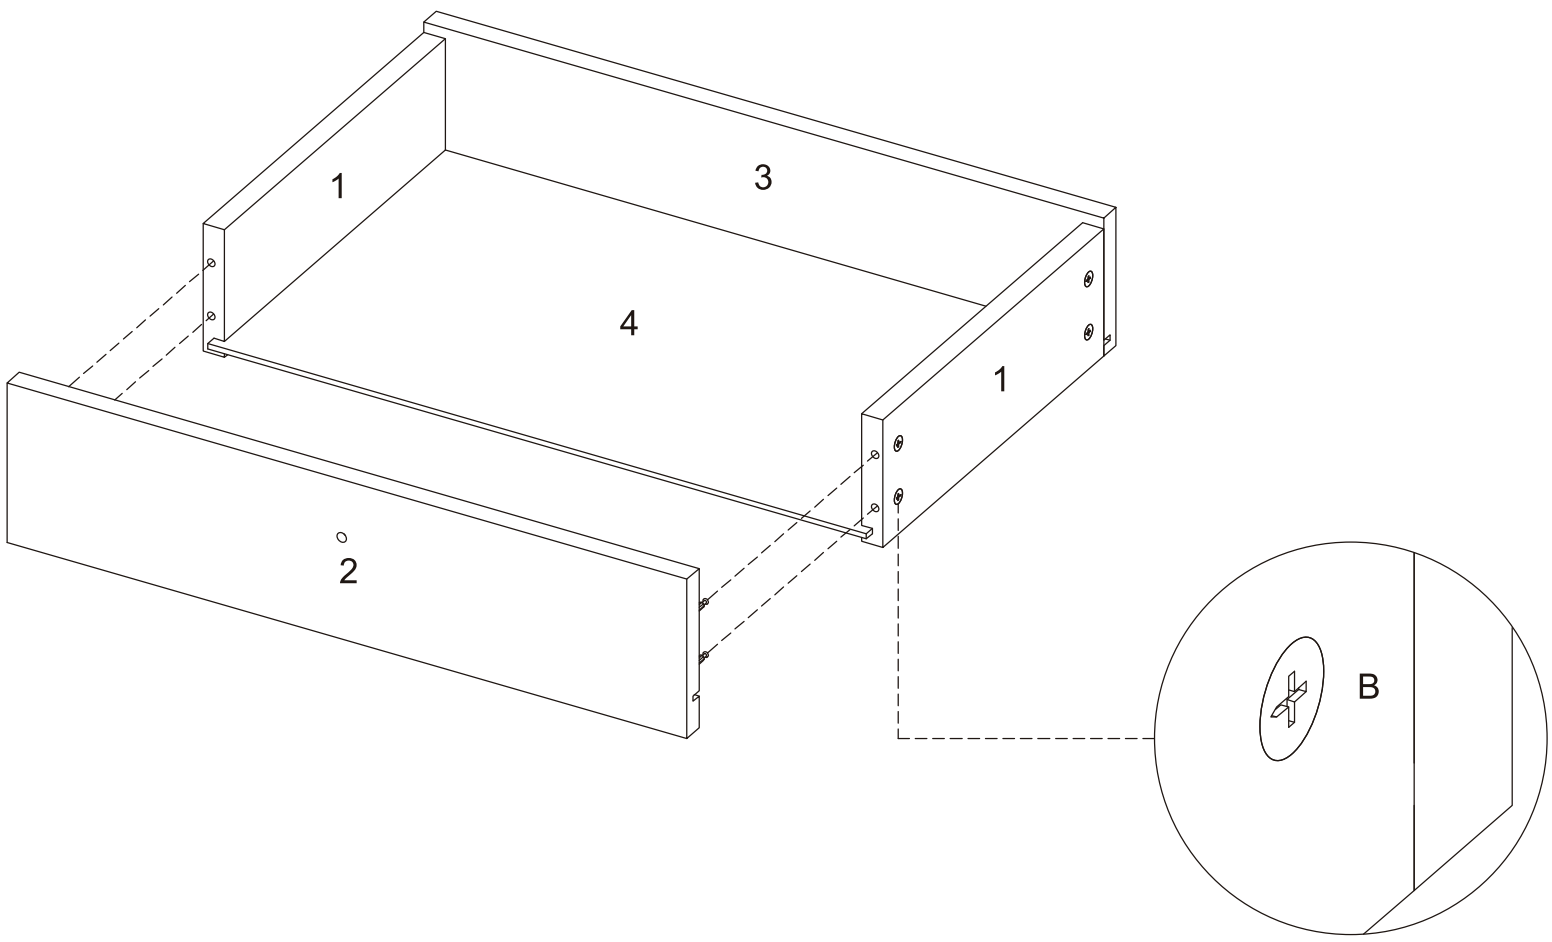

Step 05

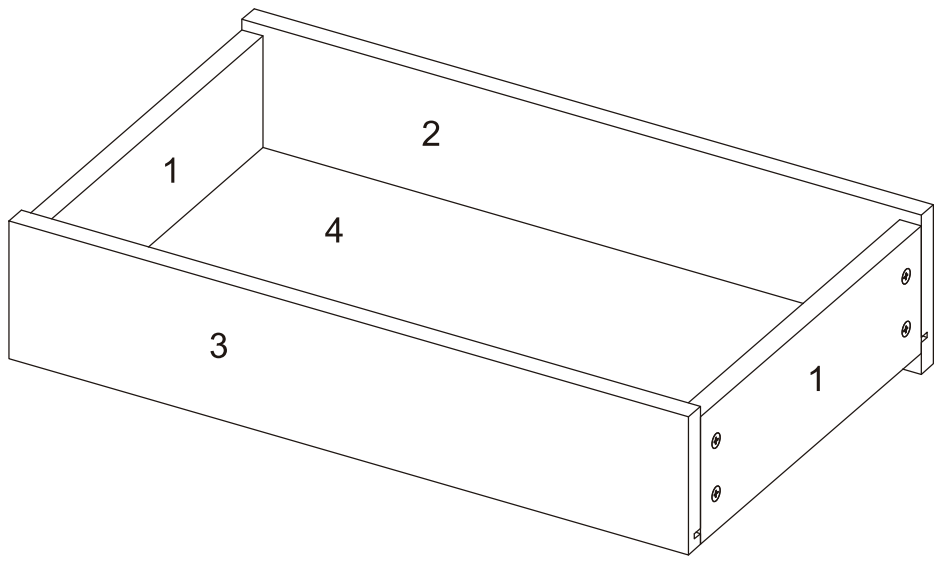


Step 06

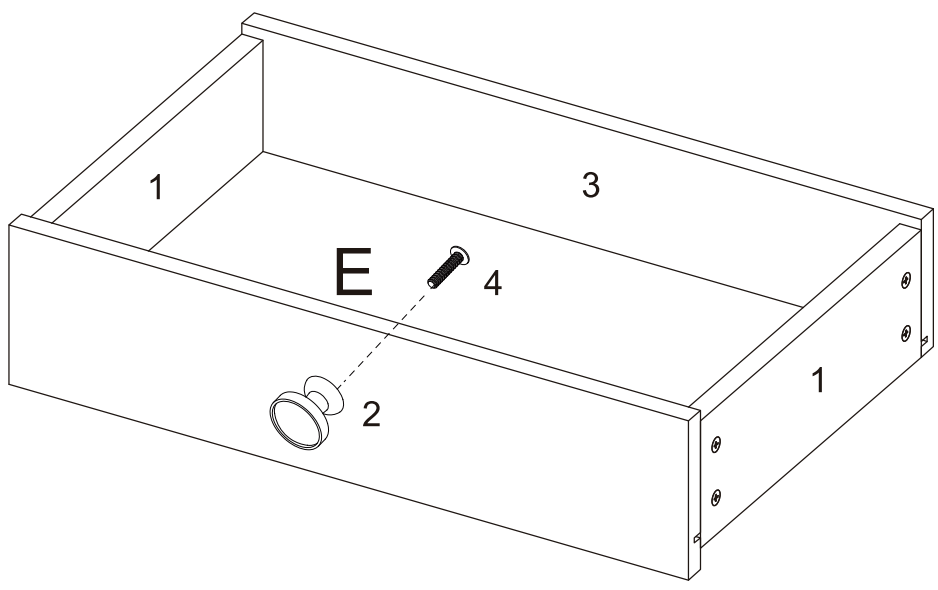


Step 07


pick up①x6,⑤x3,⑥x3,⑦x3

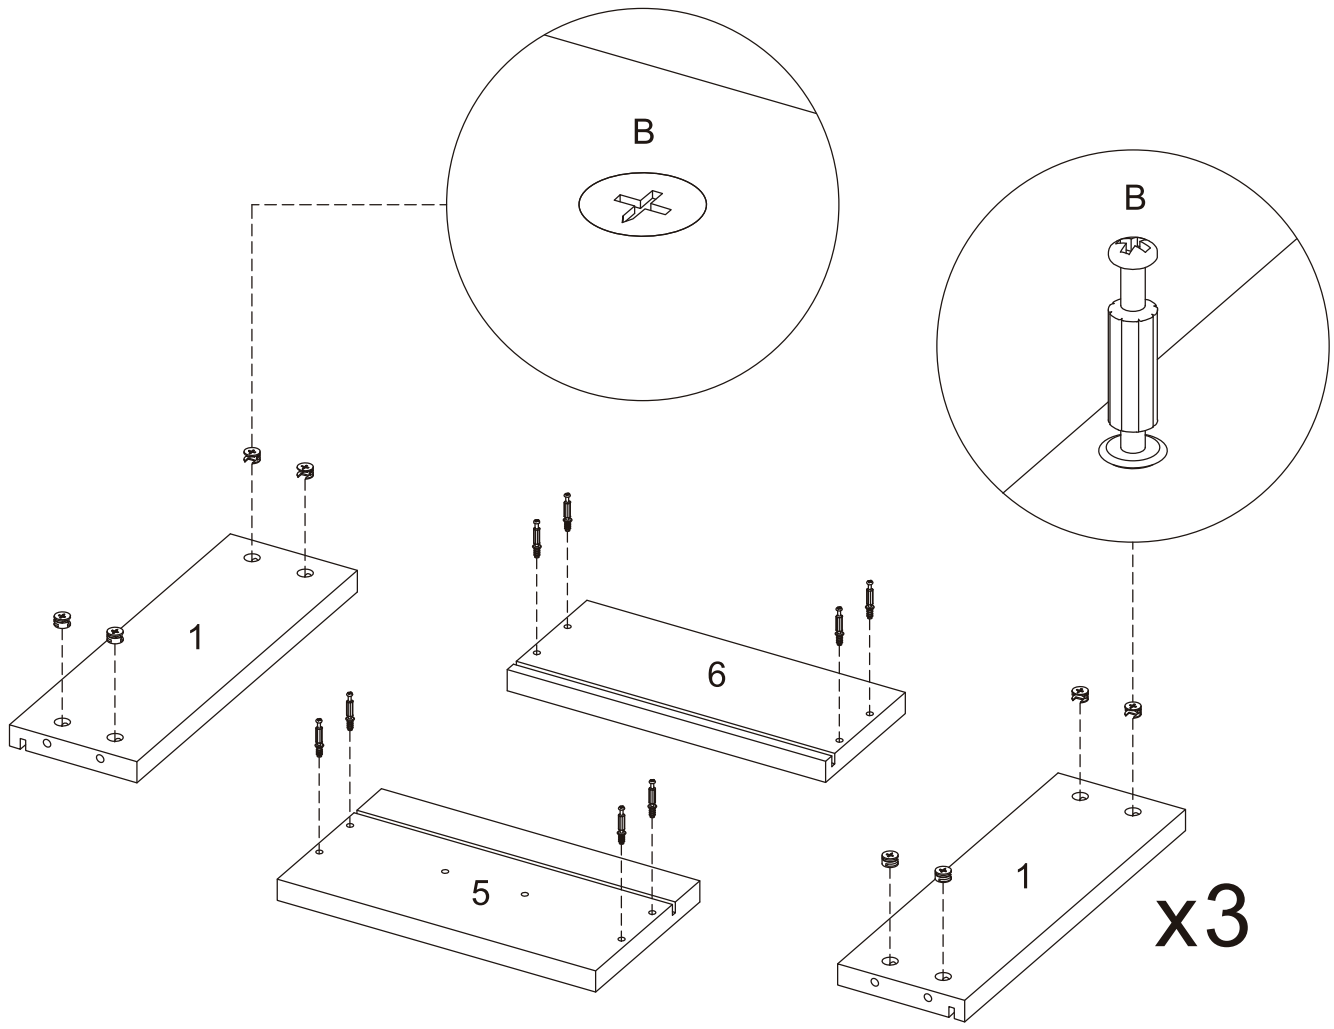


Step 08

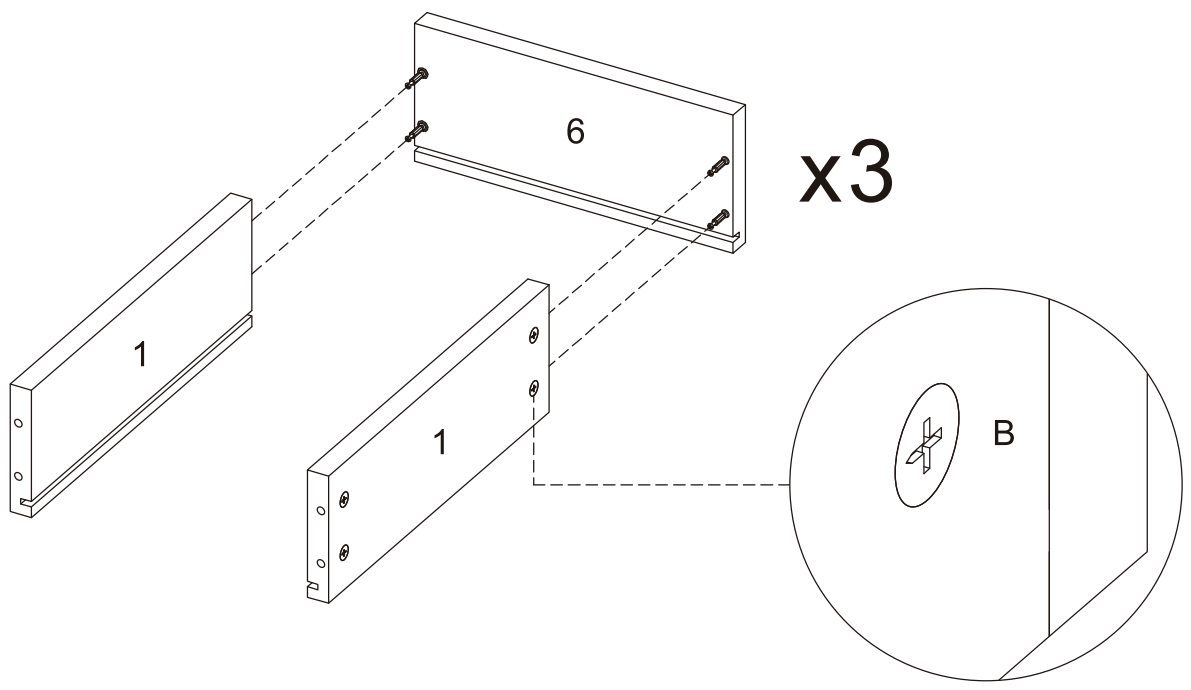


Step 09

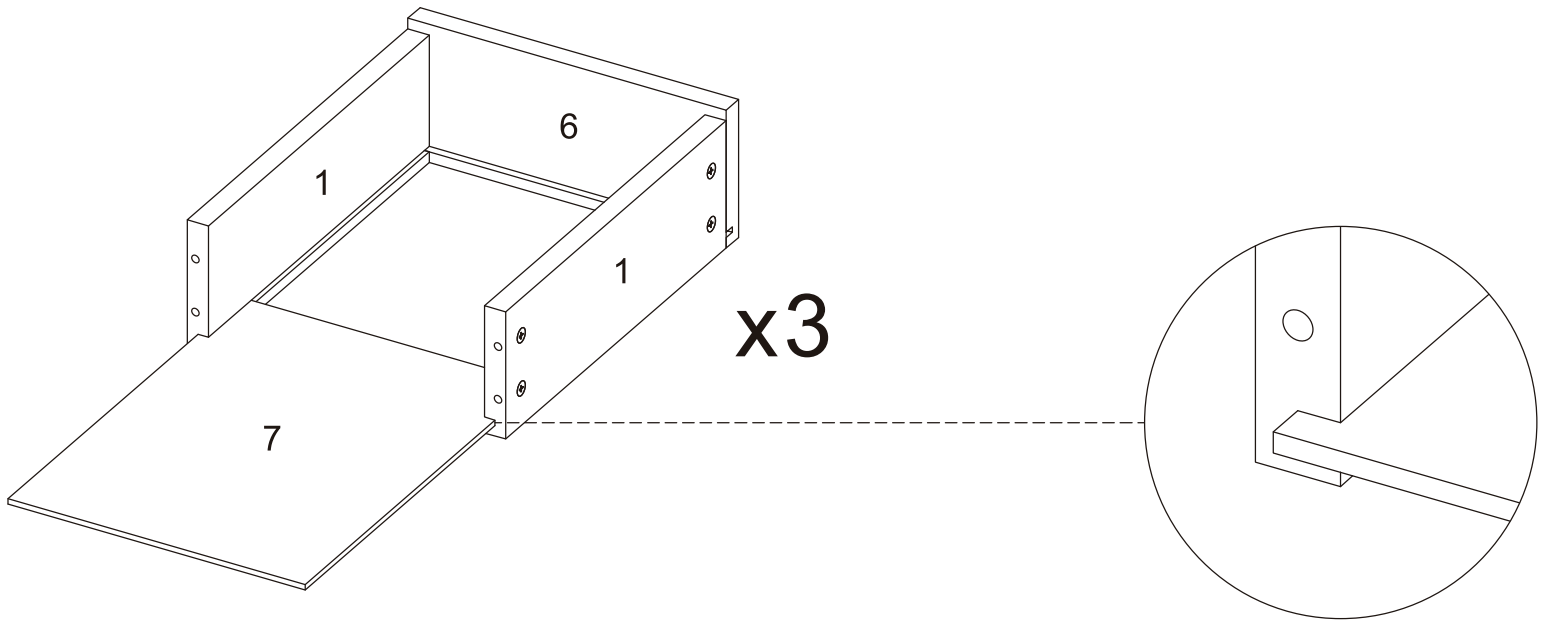


Step 10

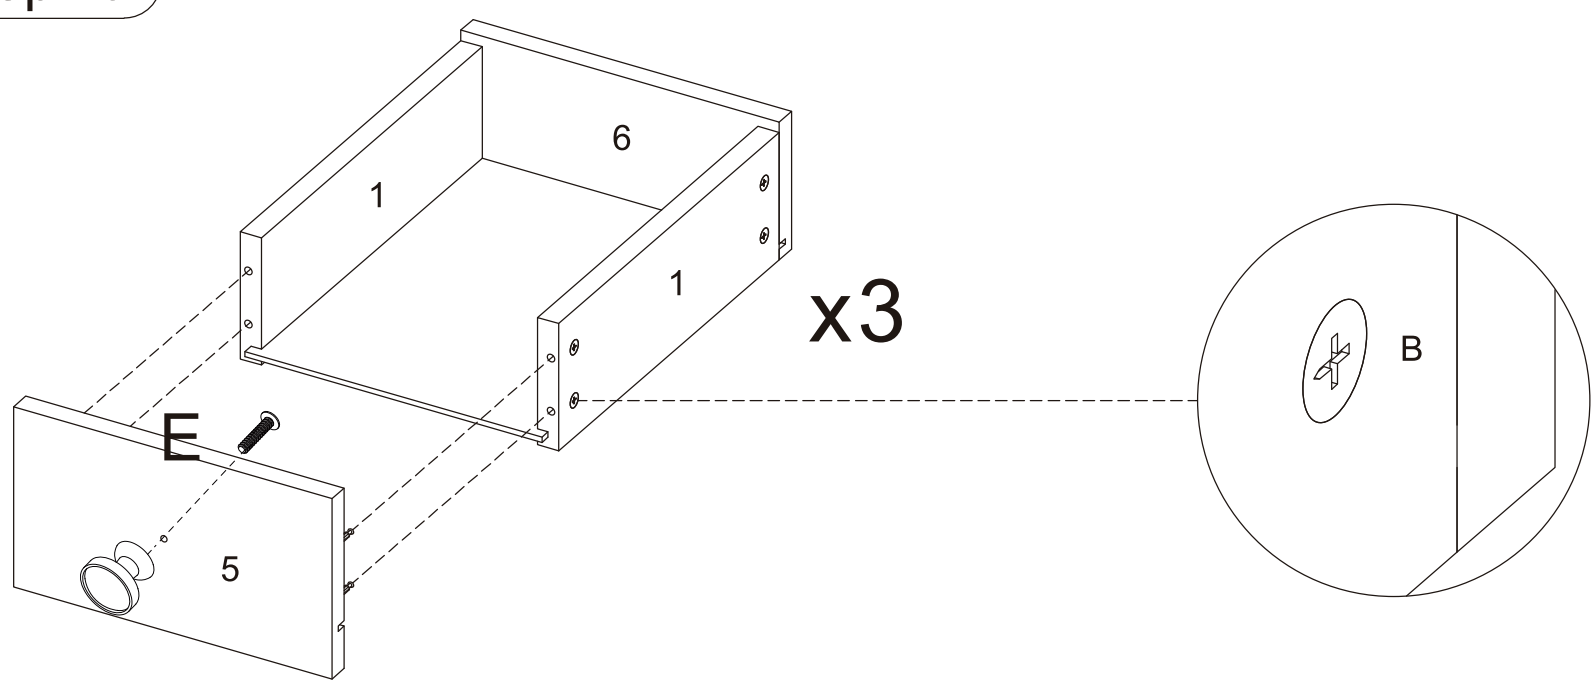


Step 11

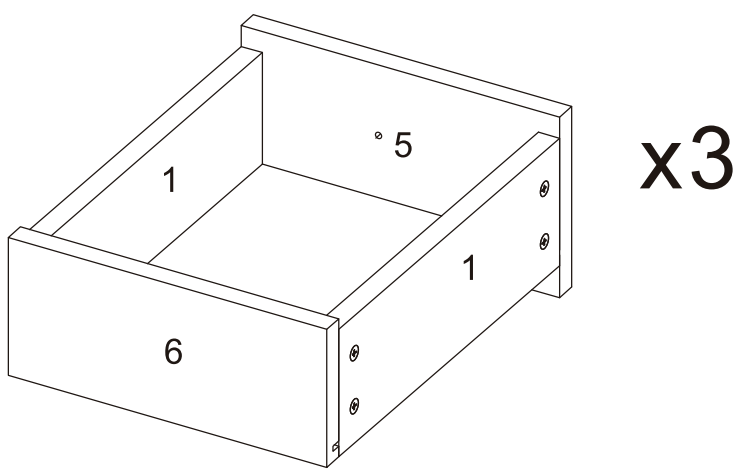


Step 12 pick up ⑧ x1, ⑨ x2, ⑩ x1, ⑫ x1, ⑪ x1

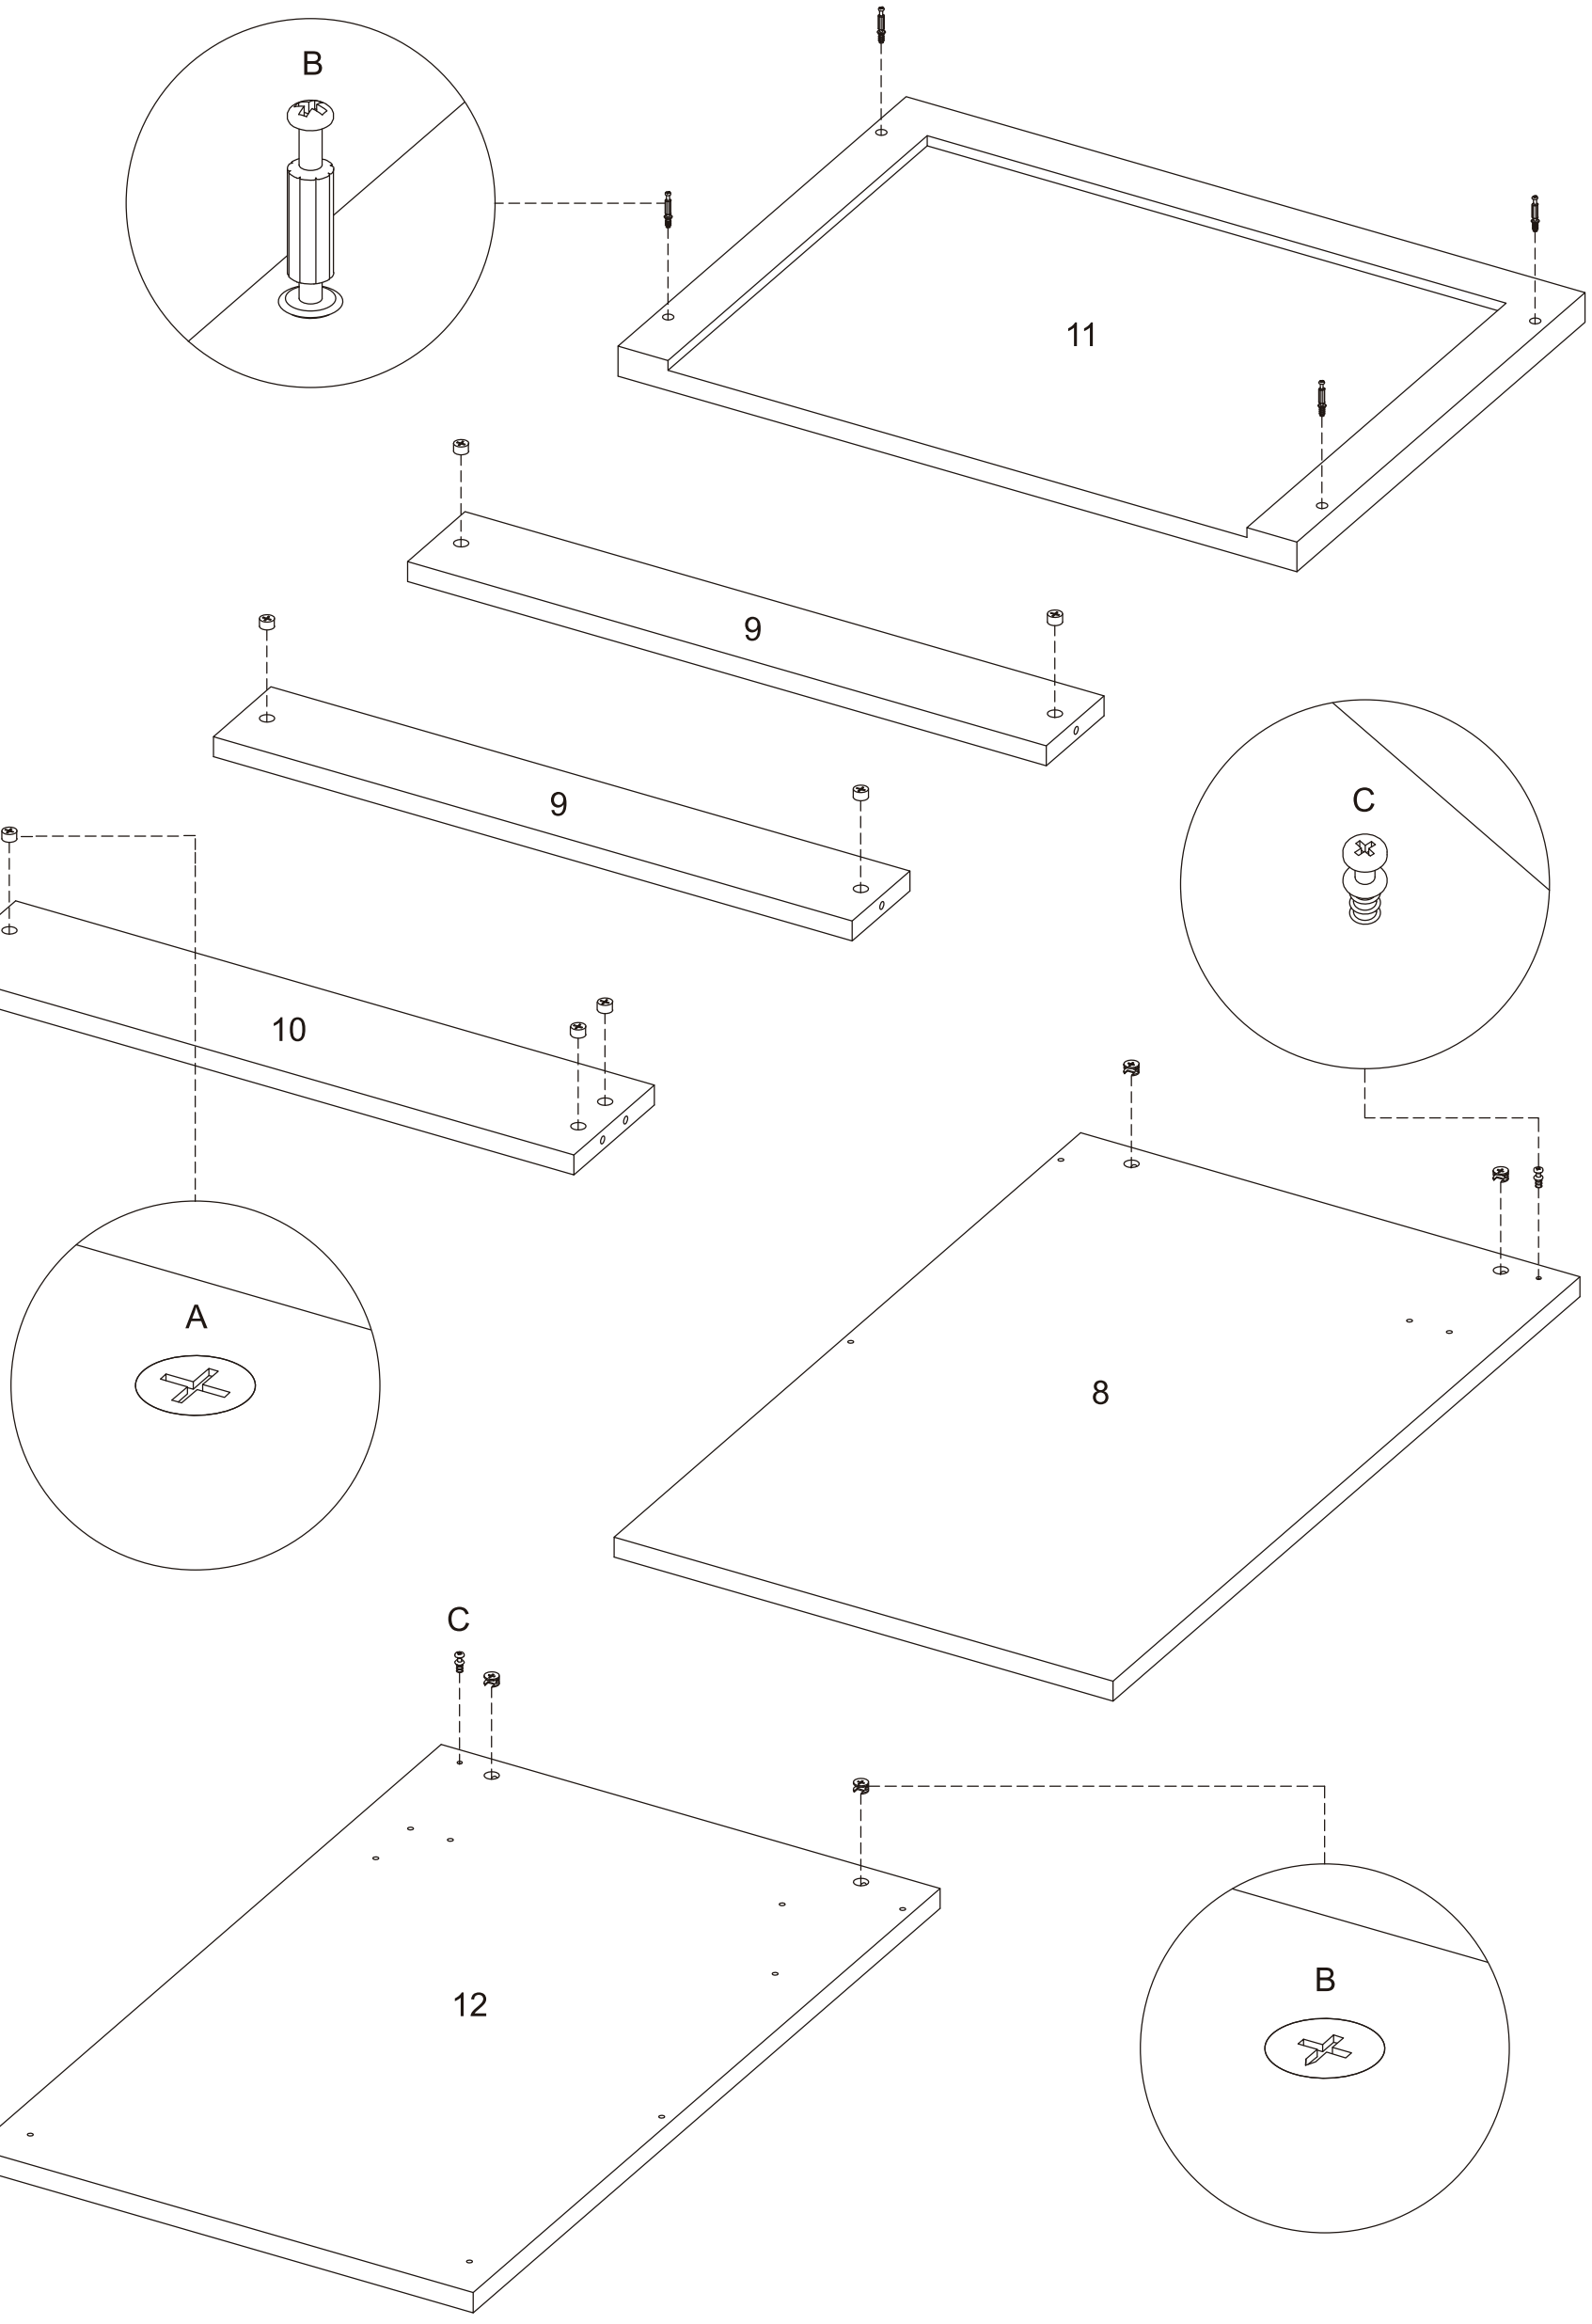


Step 13

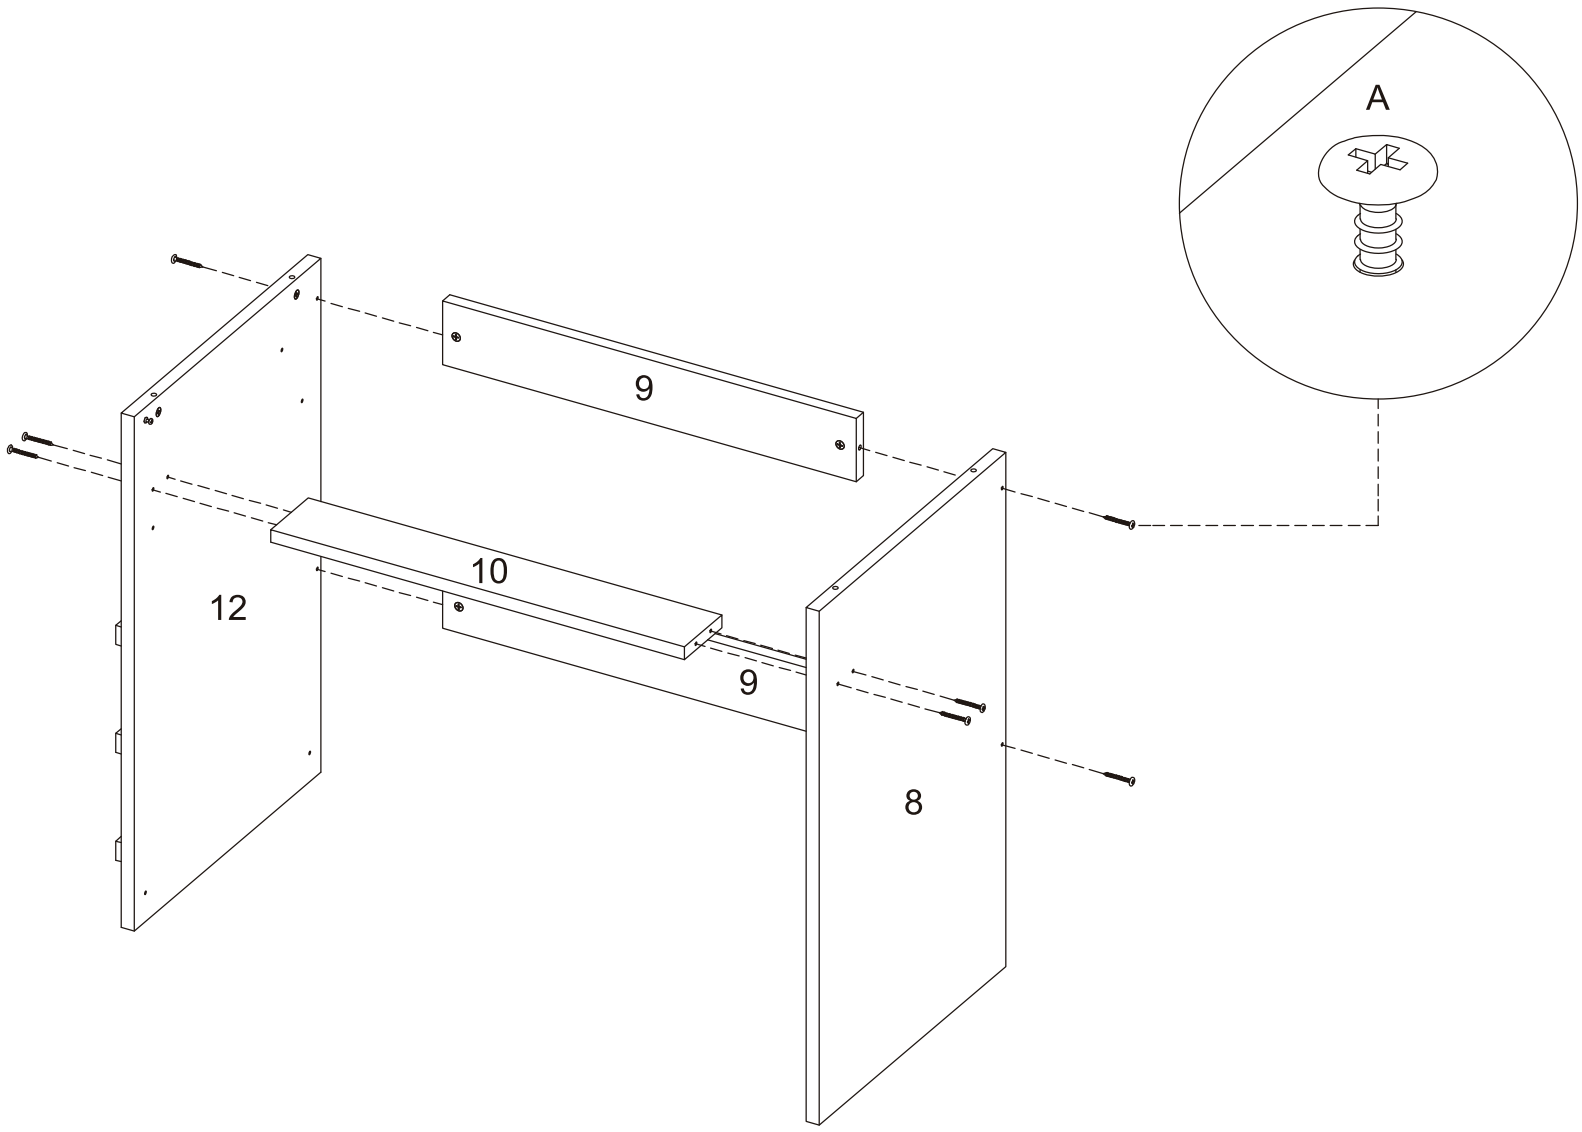


Step 14

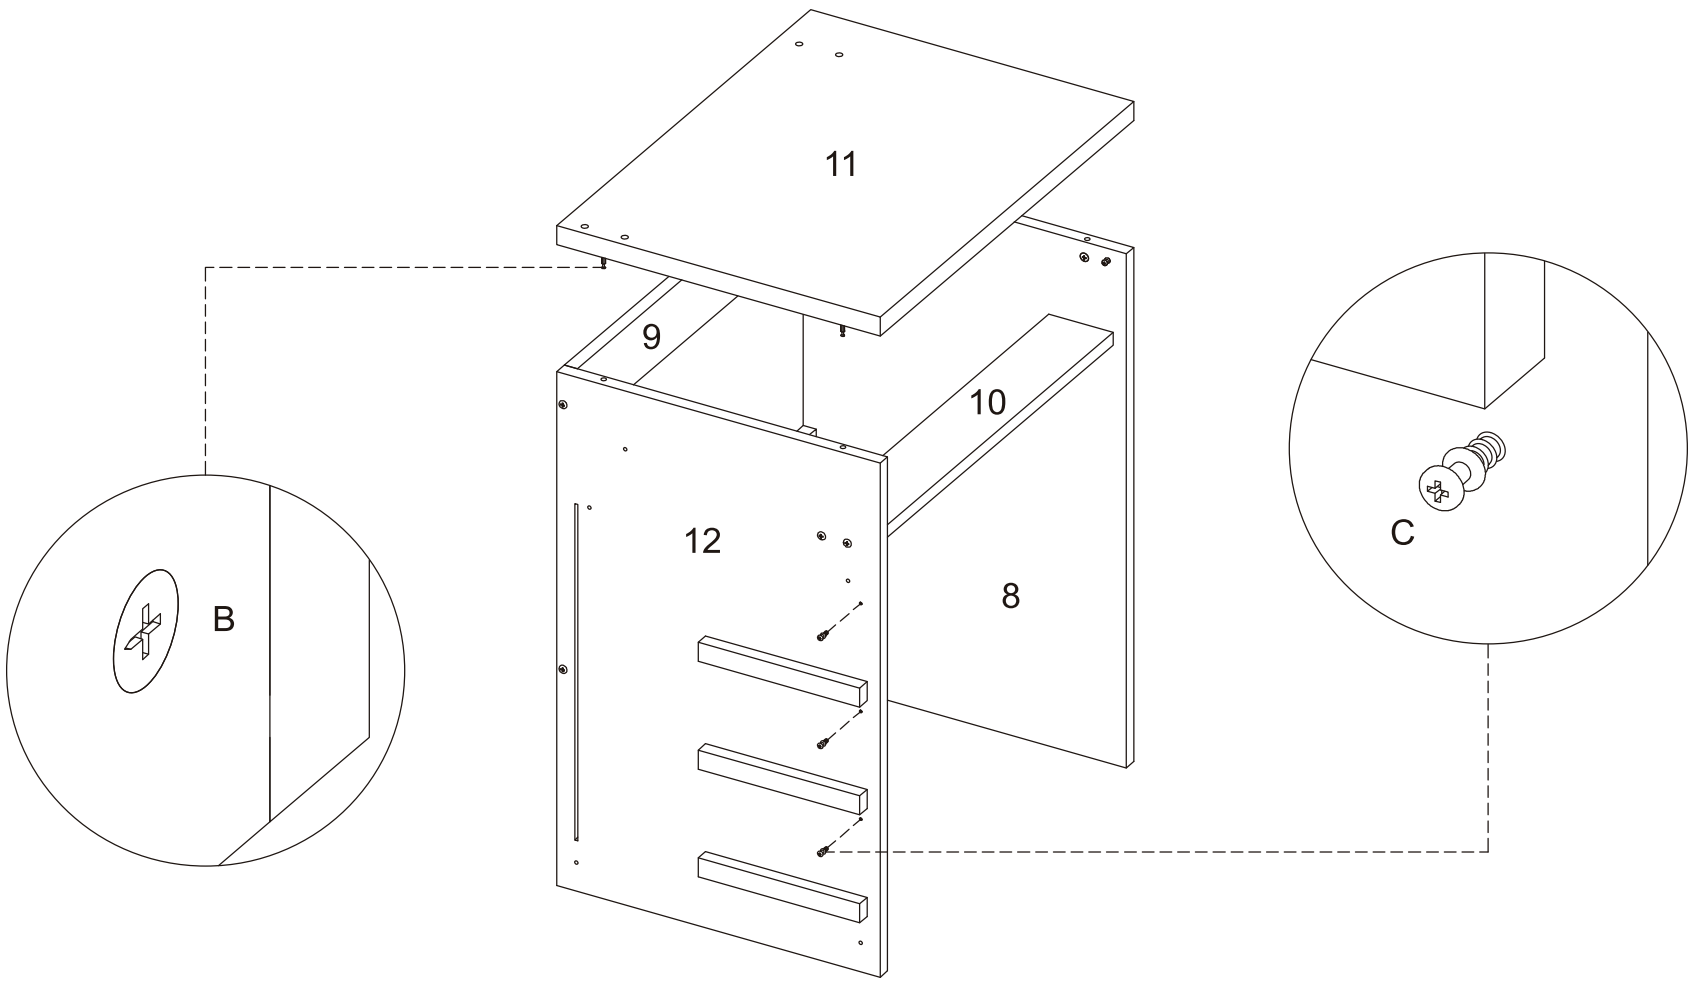


Step 15 pick up (13) x1, (14) x1, (15) x1, (16) x1, (17) x1

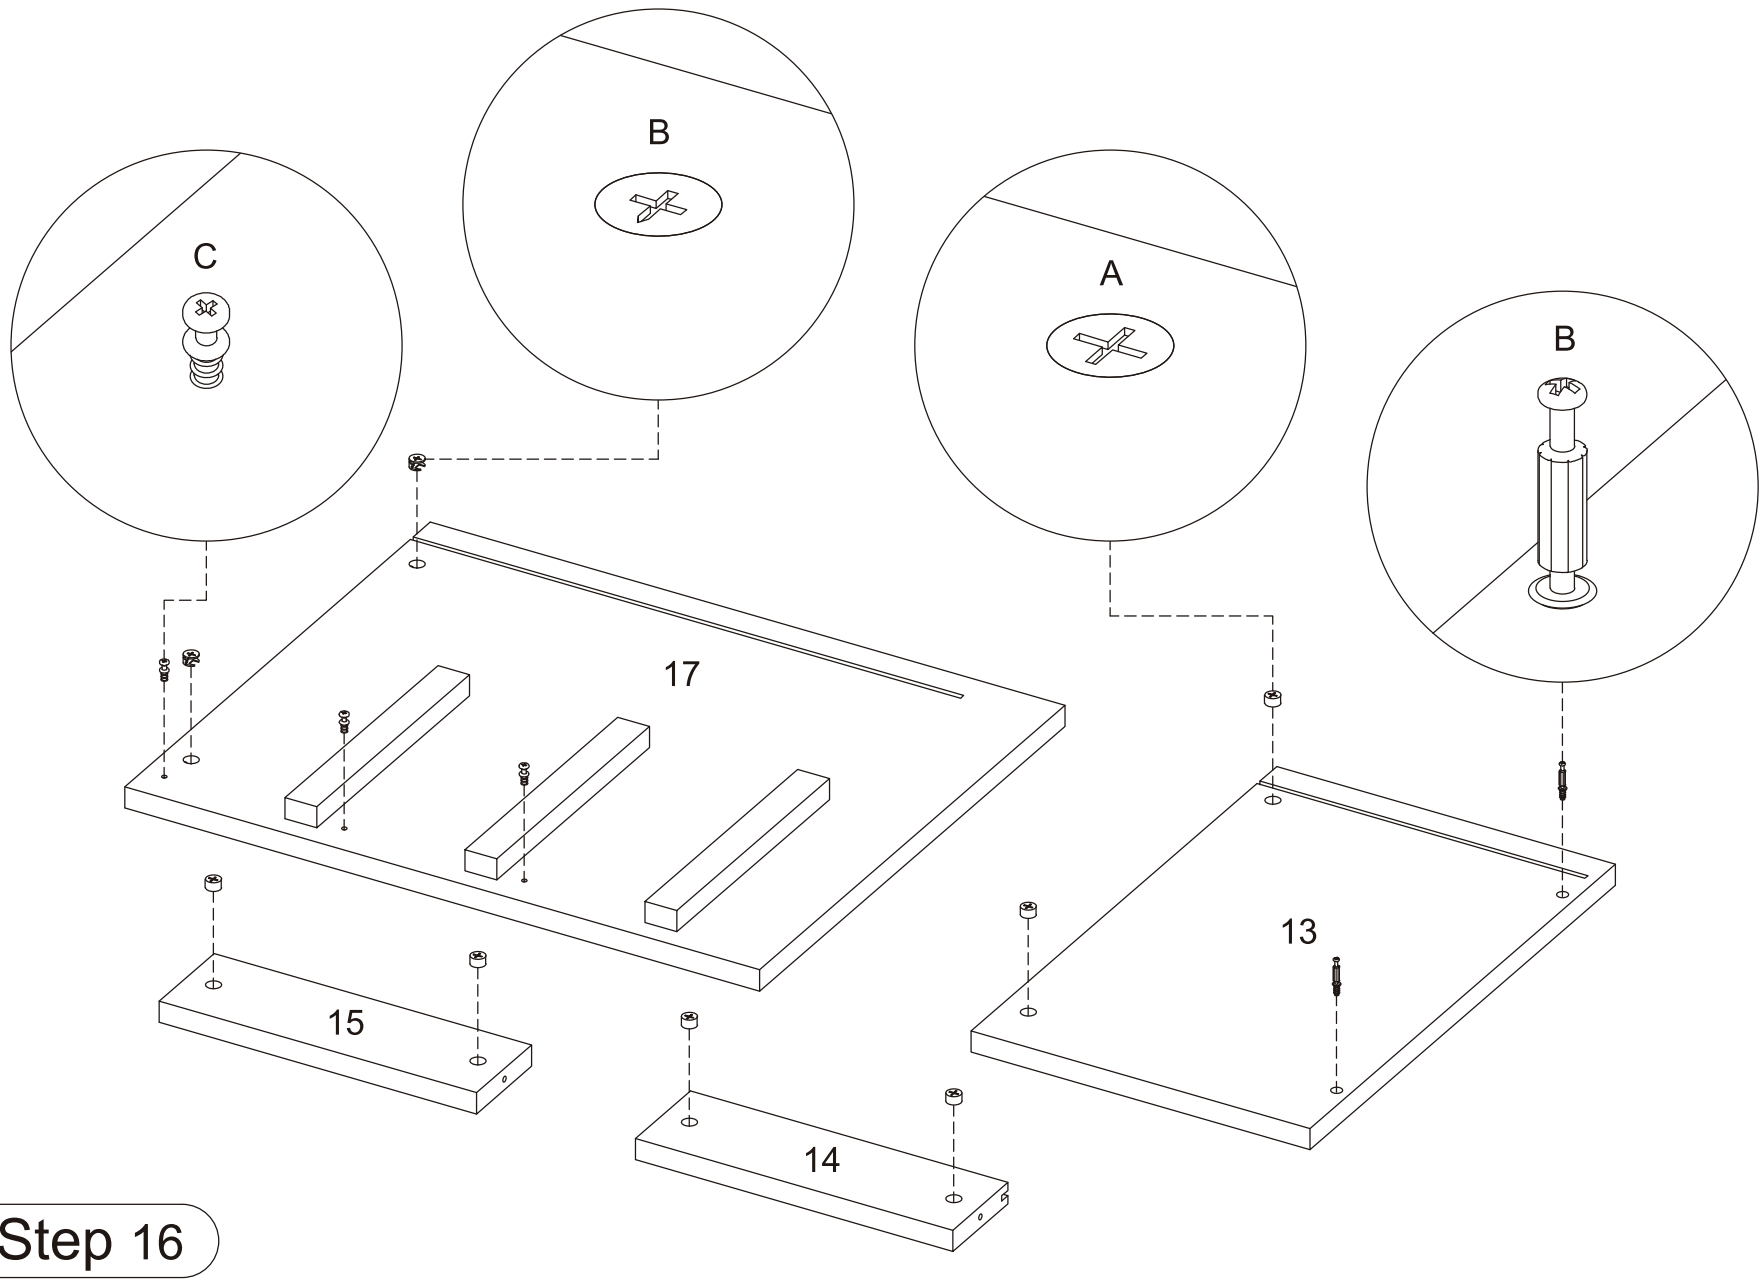


Step 16

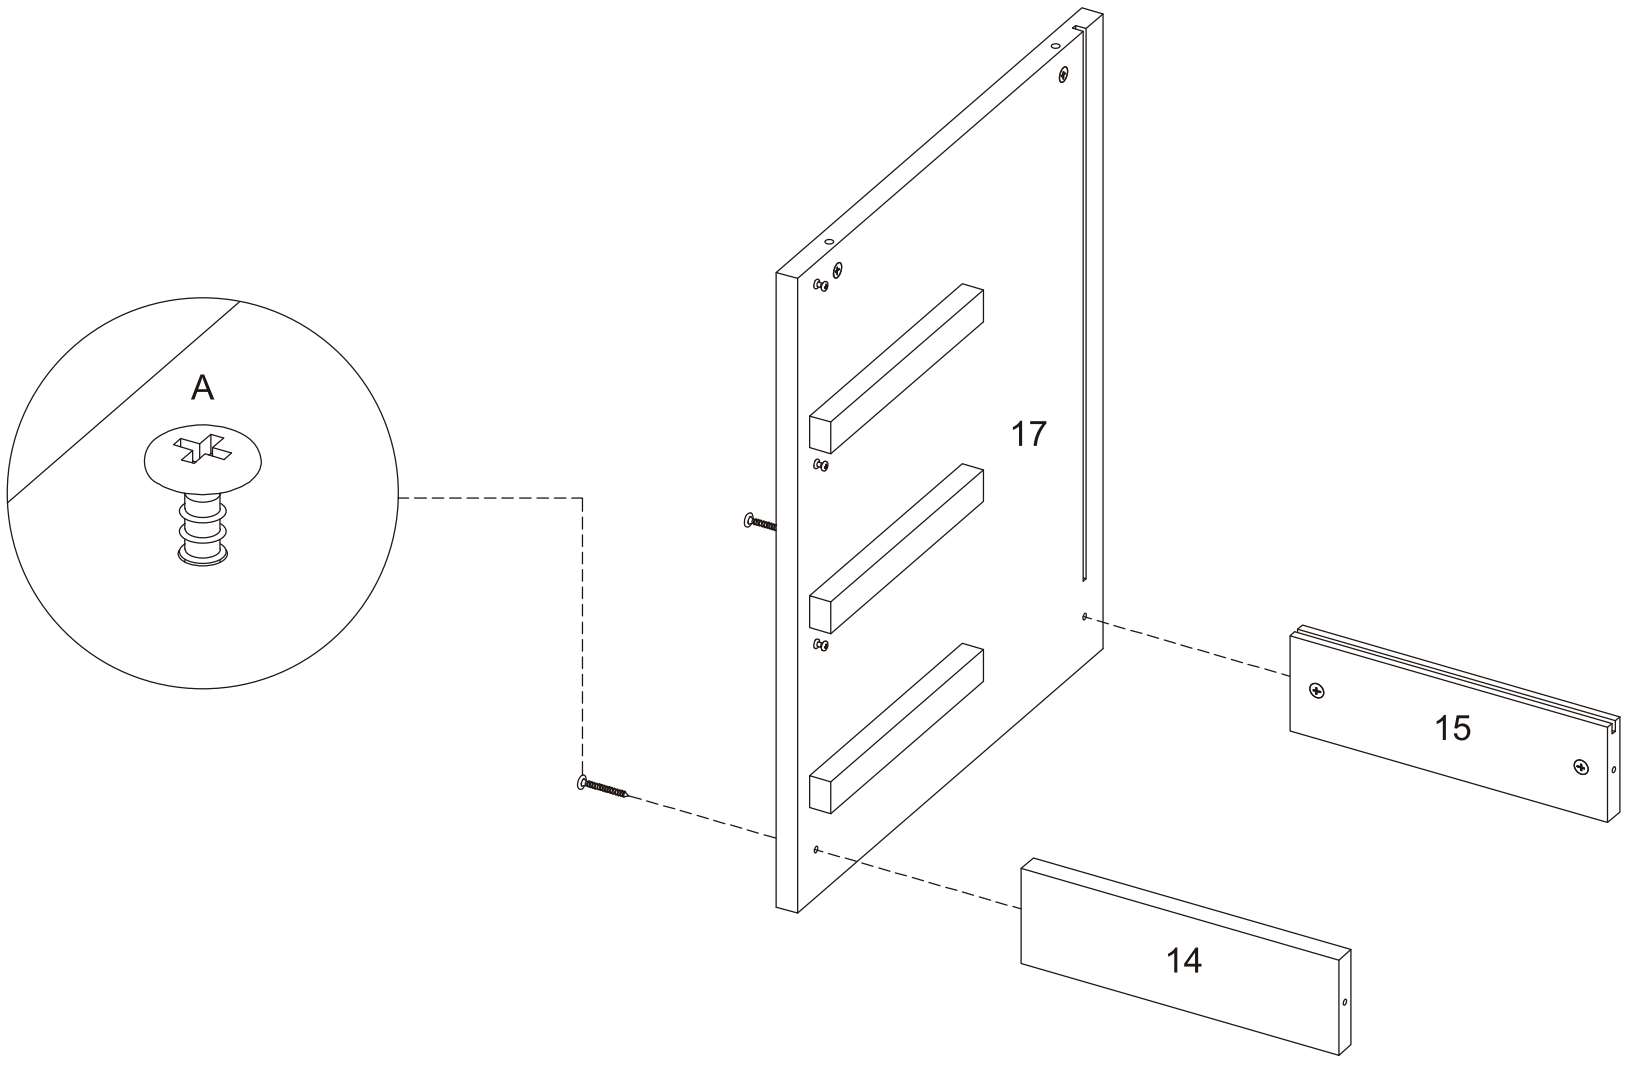


Step 17

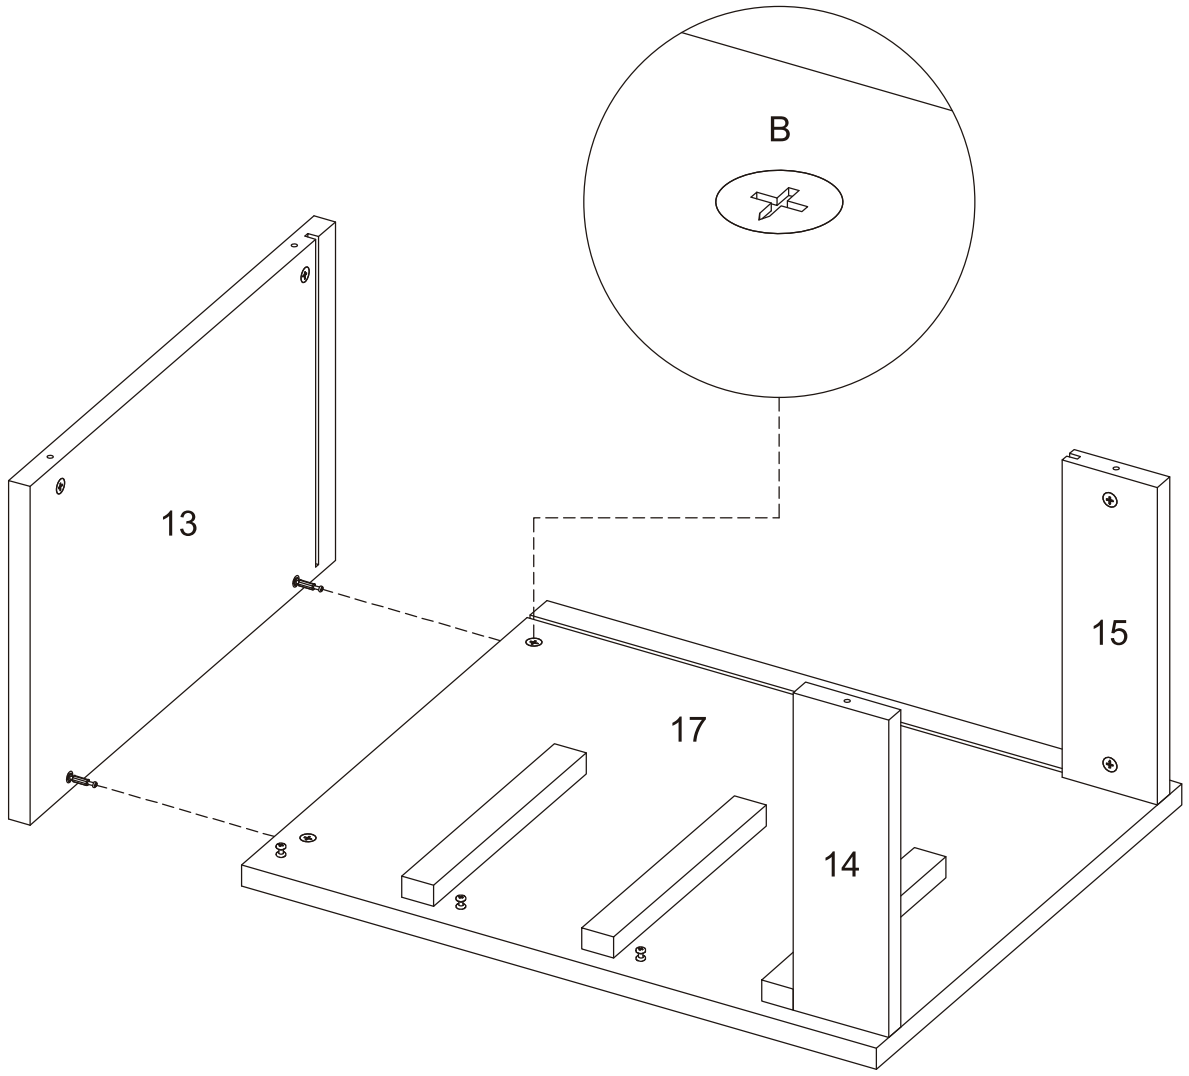


Step 18

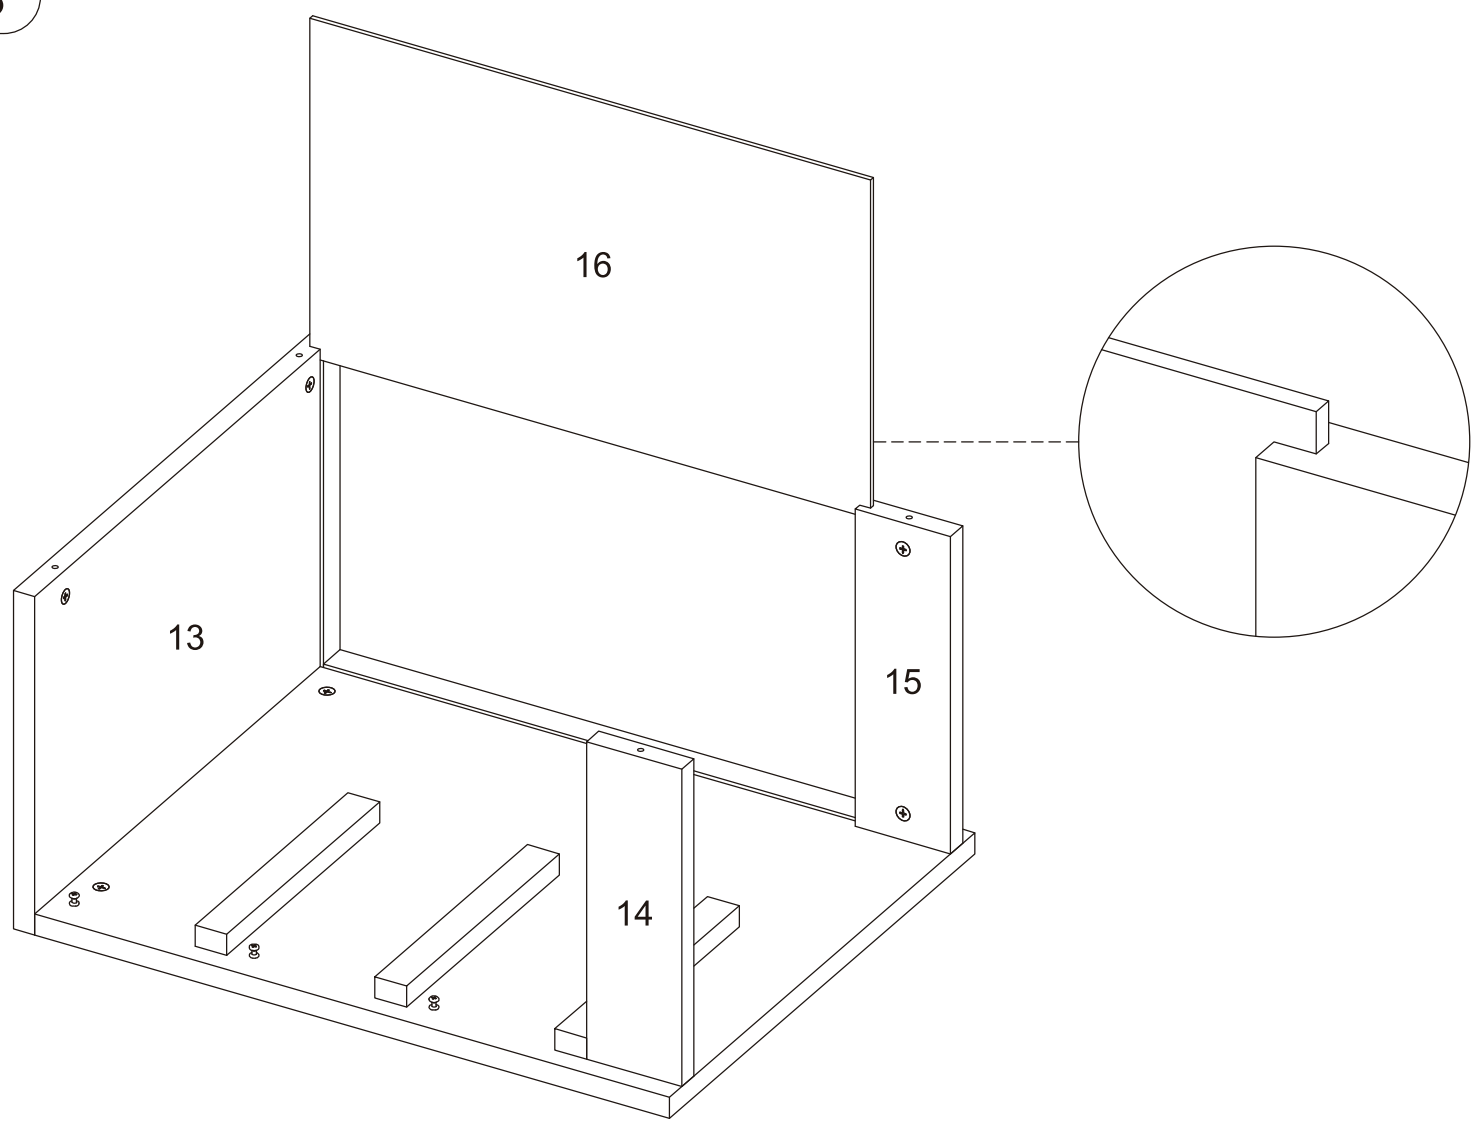


Step 19

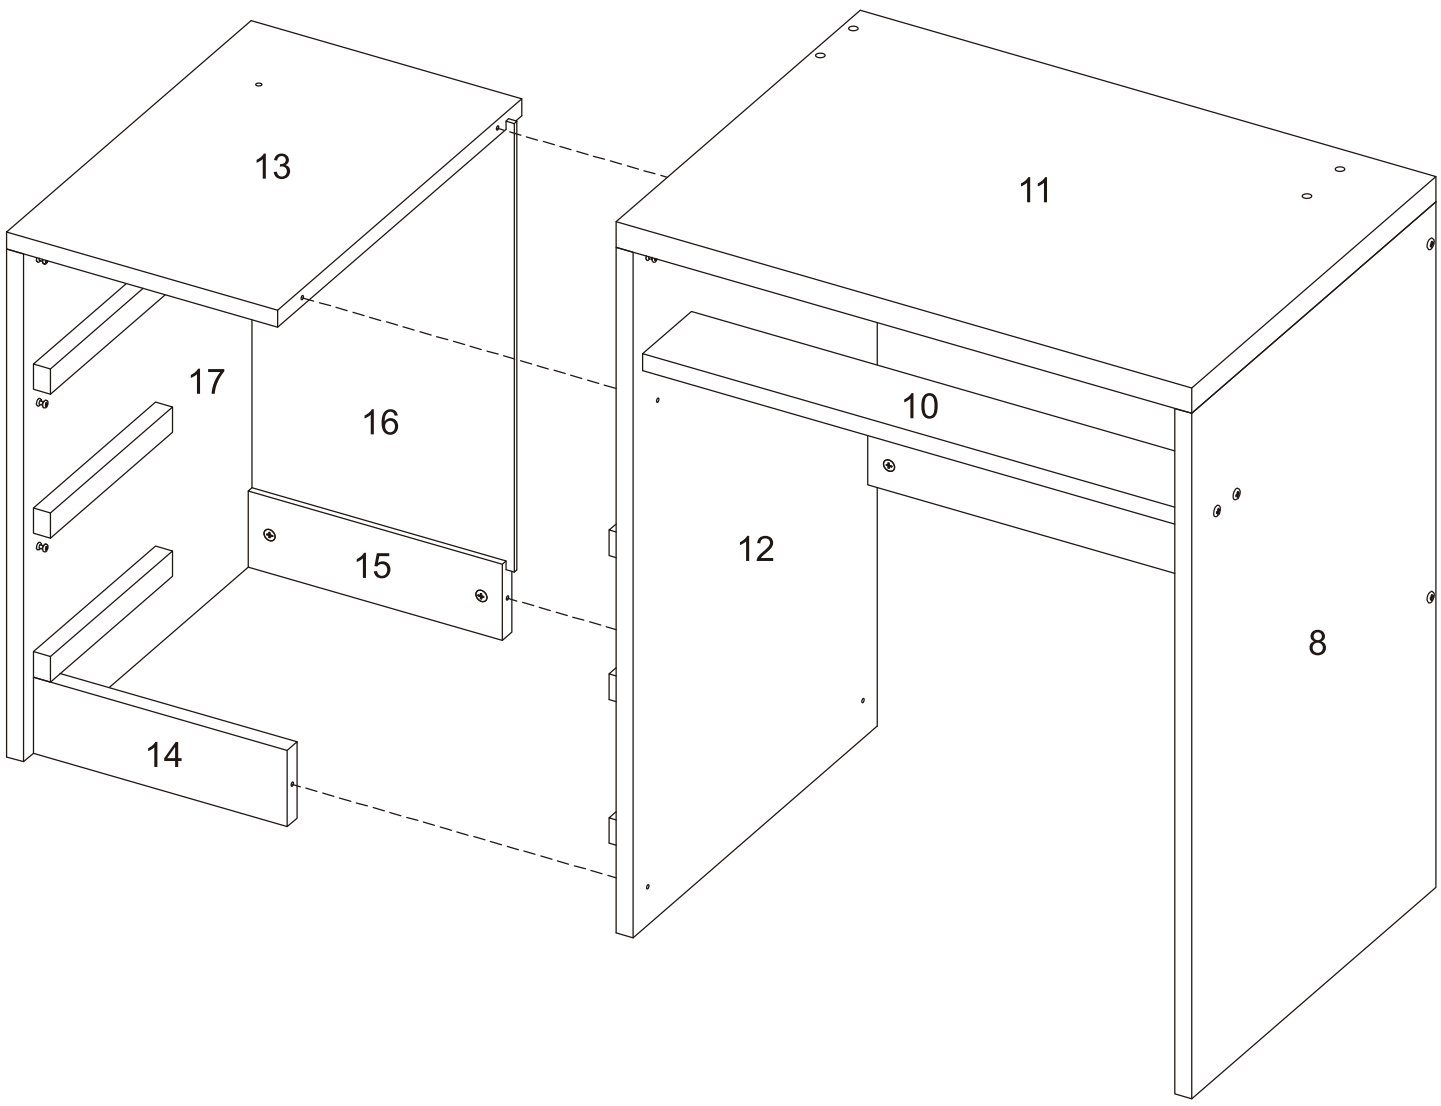


Step 20

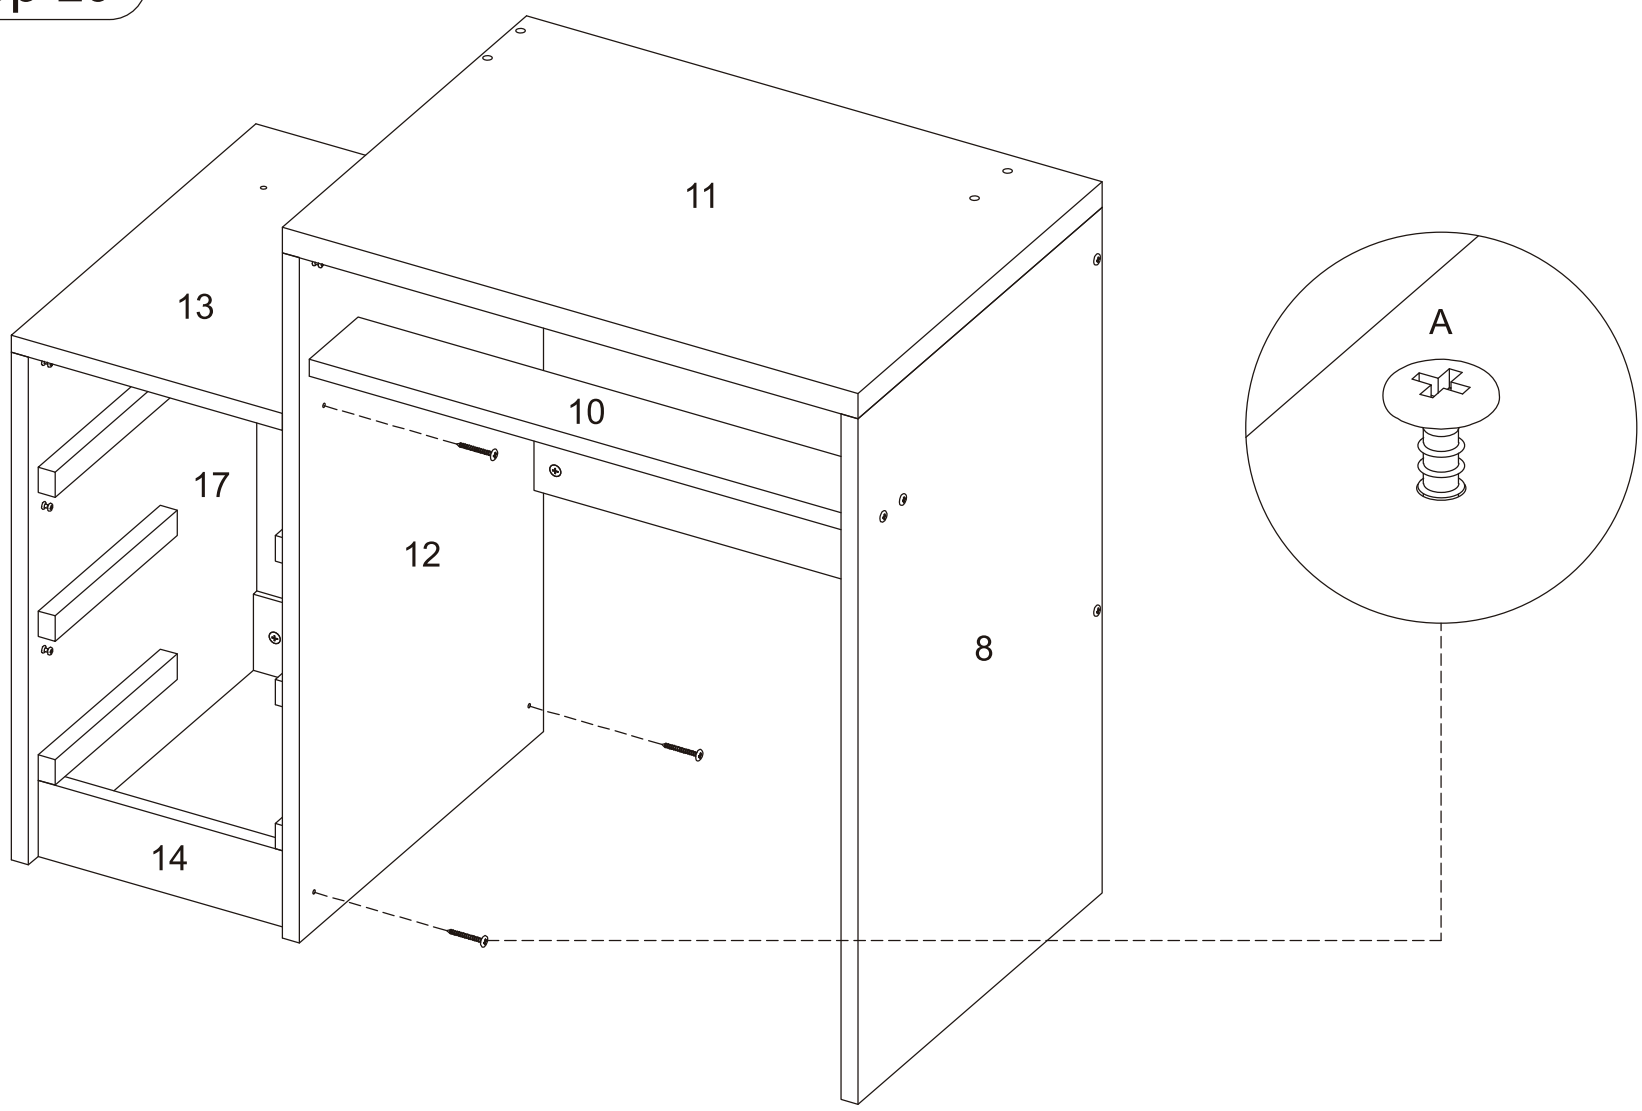


Step 21 pick up ⑱ x2, ⑲ x1, ⑳ x1, ㉑ x1

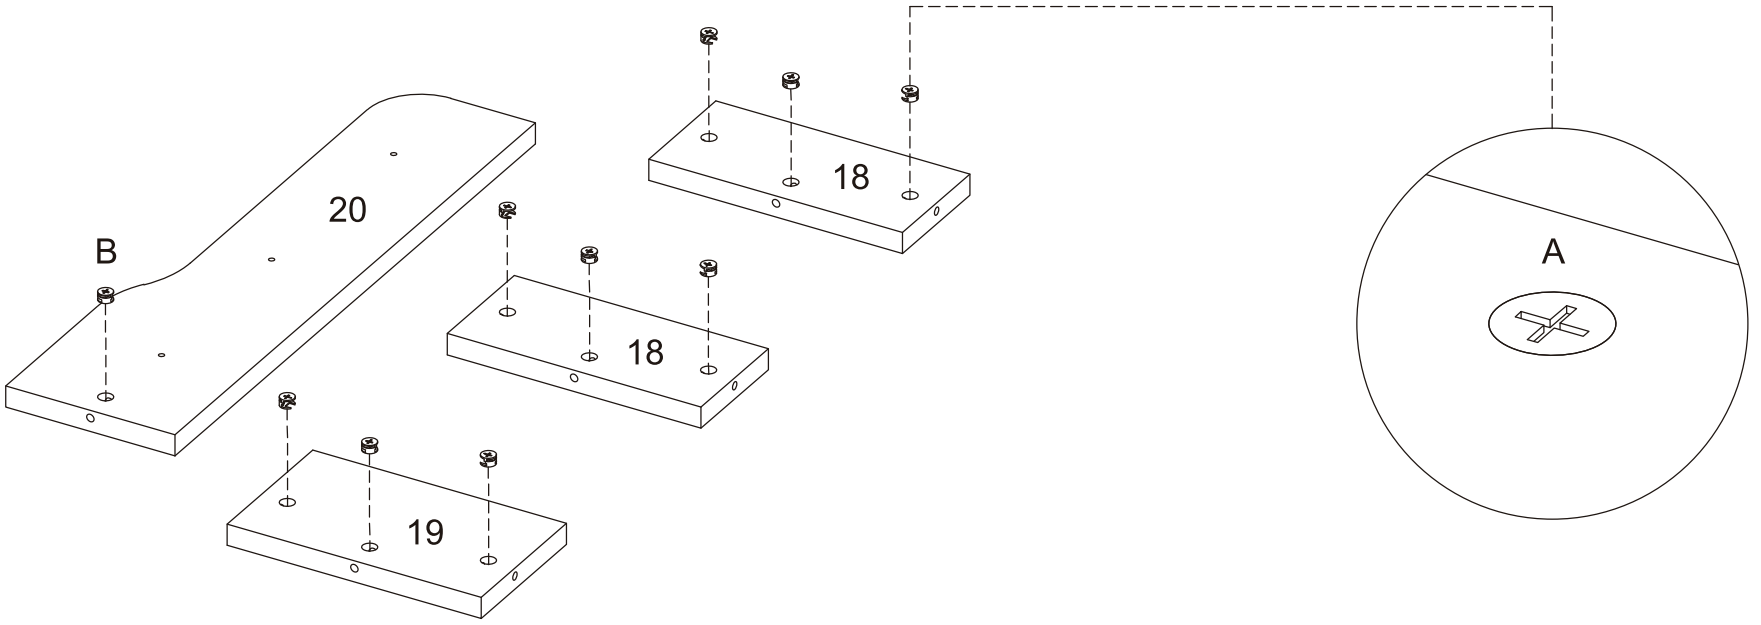


Step 22

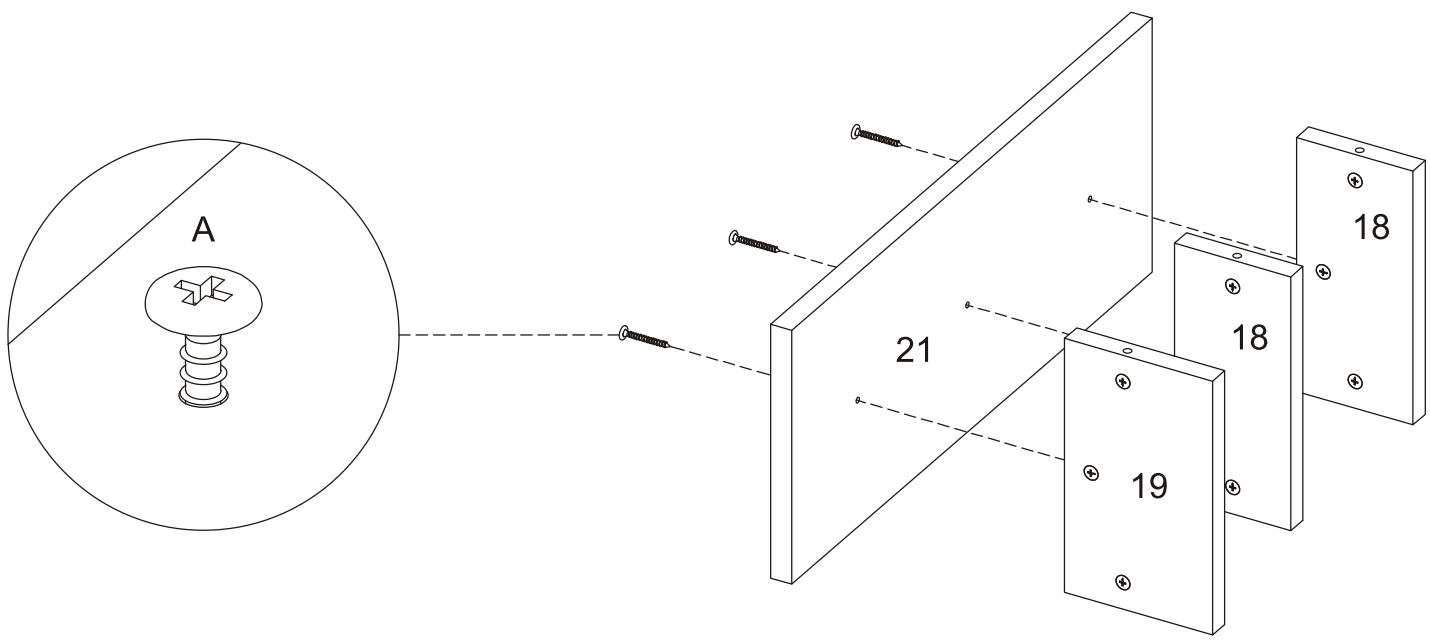


Step 23

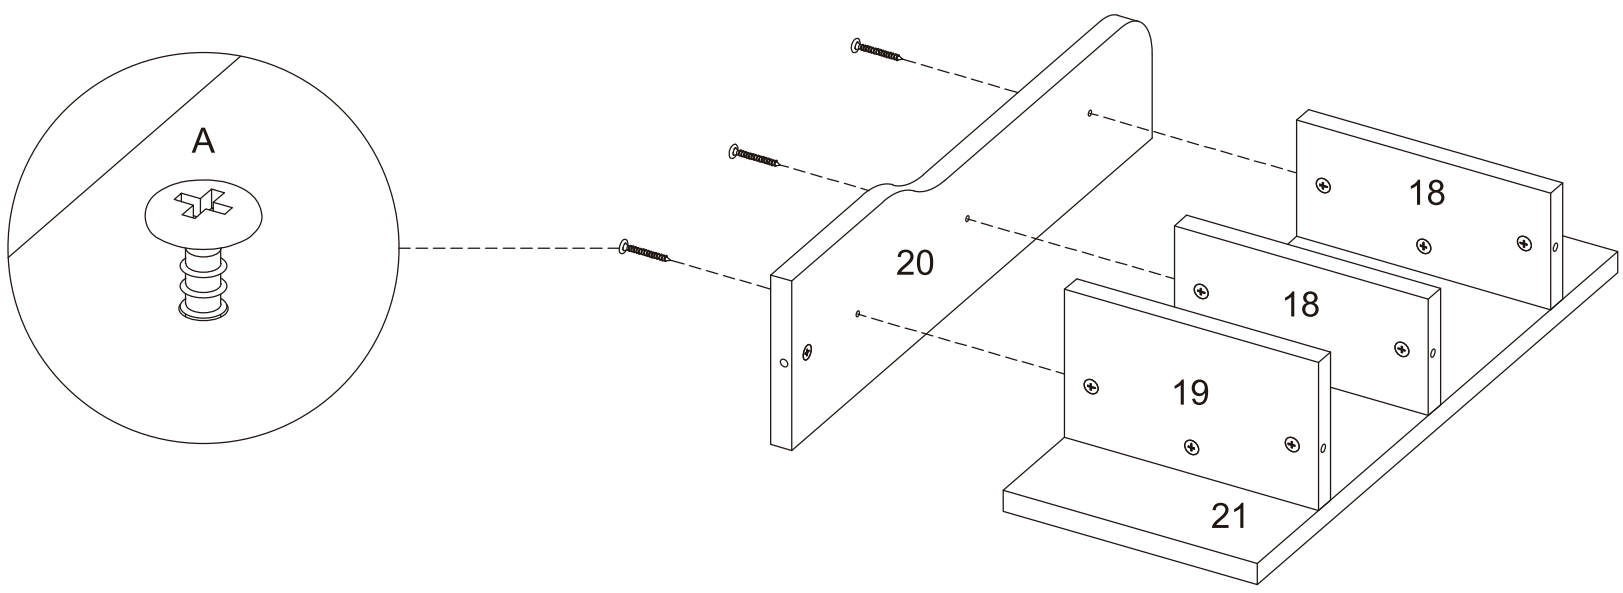


Step 24 pick up (22) x1, (23) x2, (24) x2, (25) x1, (26) x1, (27) x1

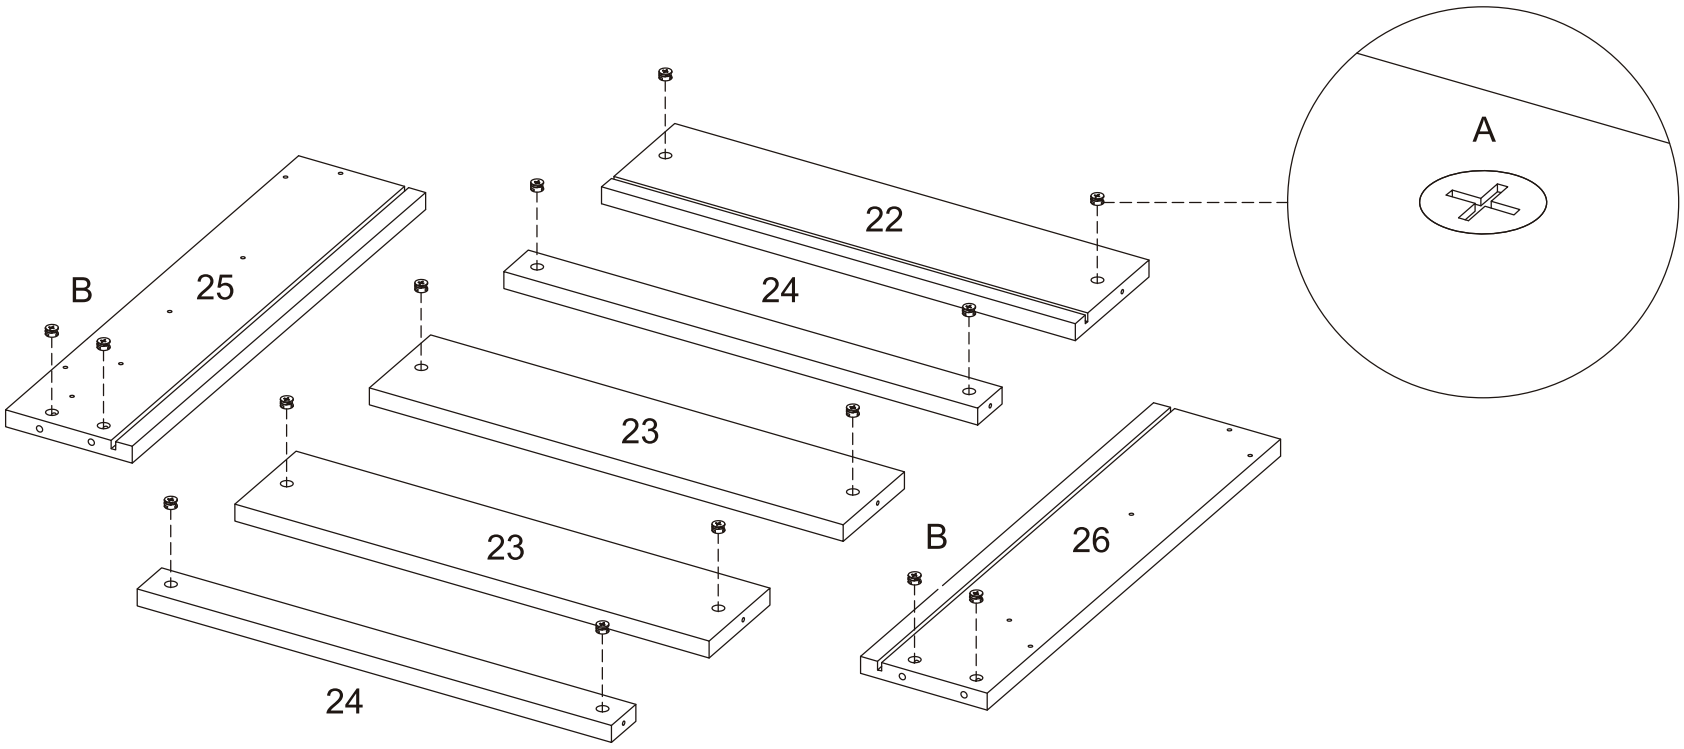


Step 25

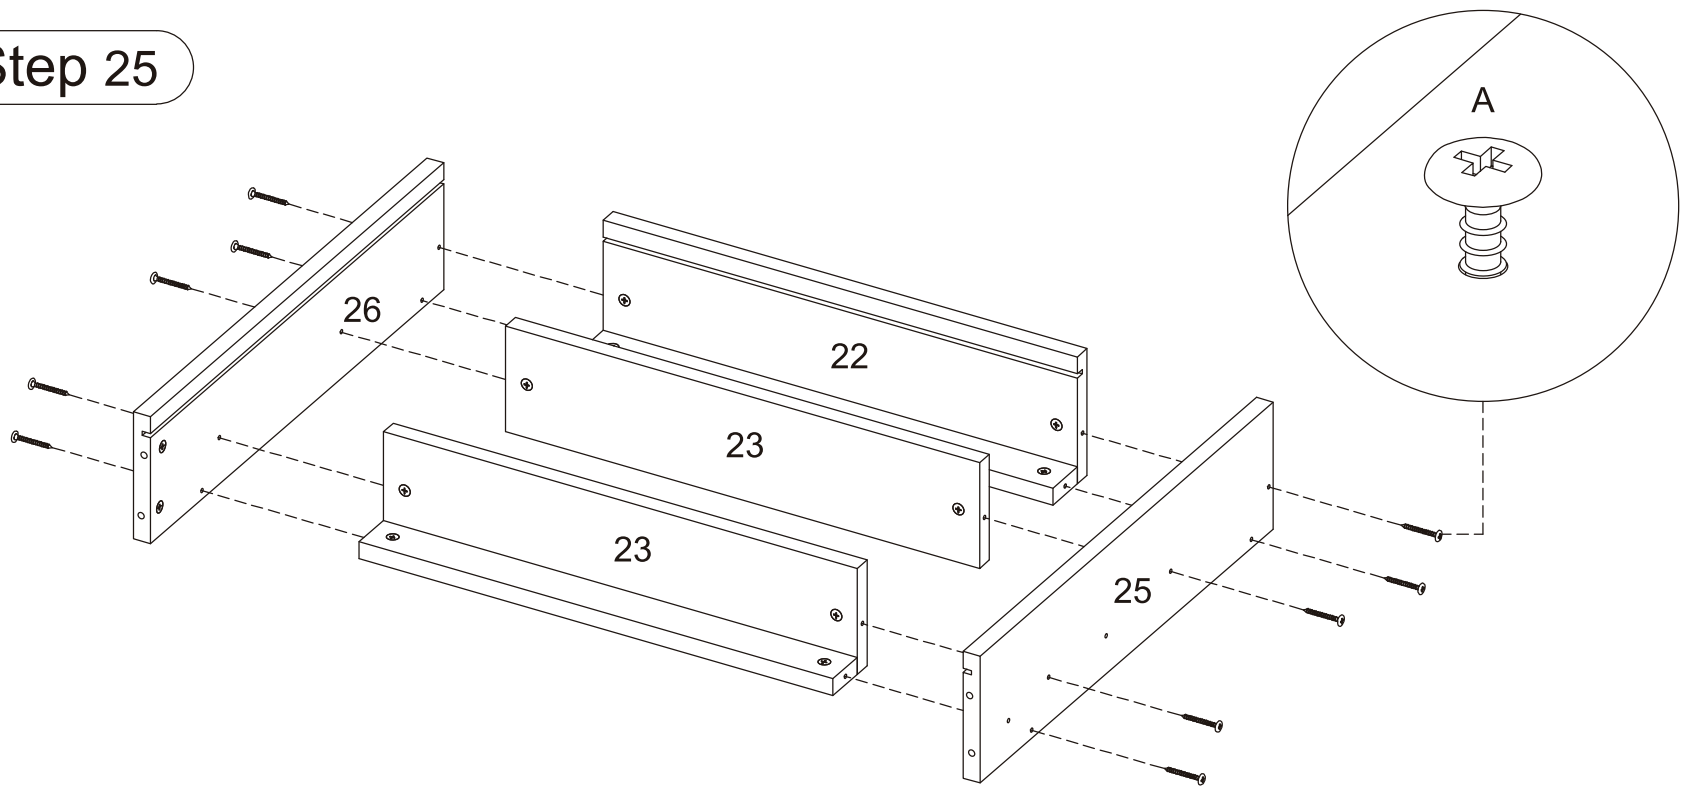


Step 26

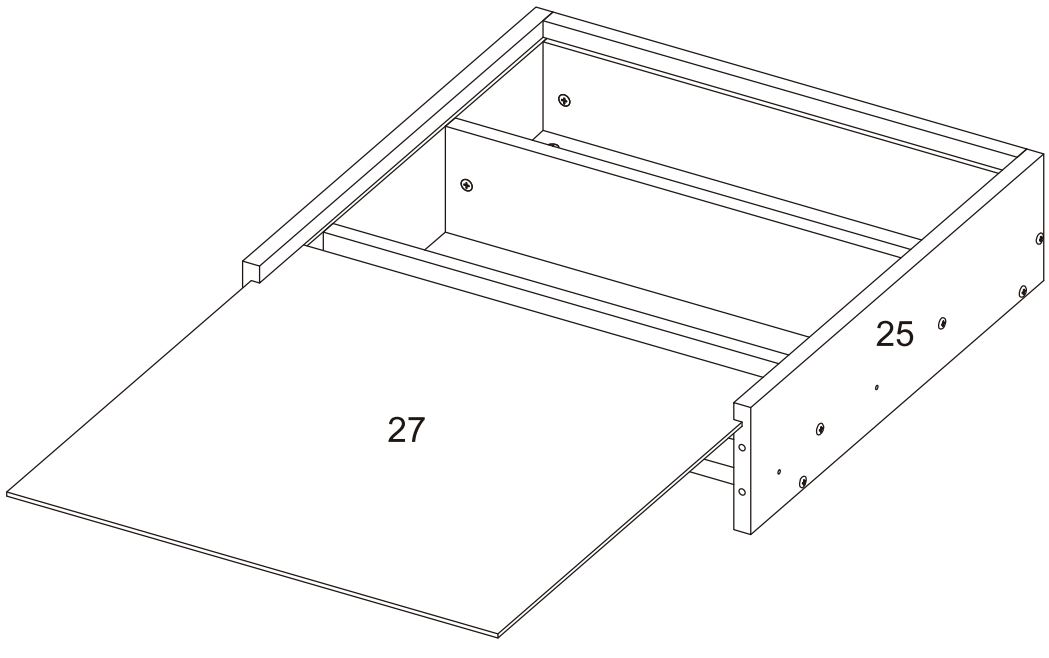


Step 27

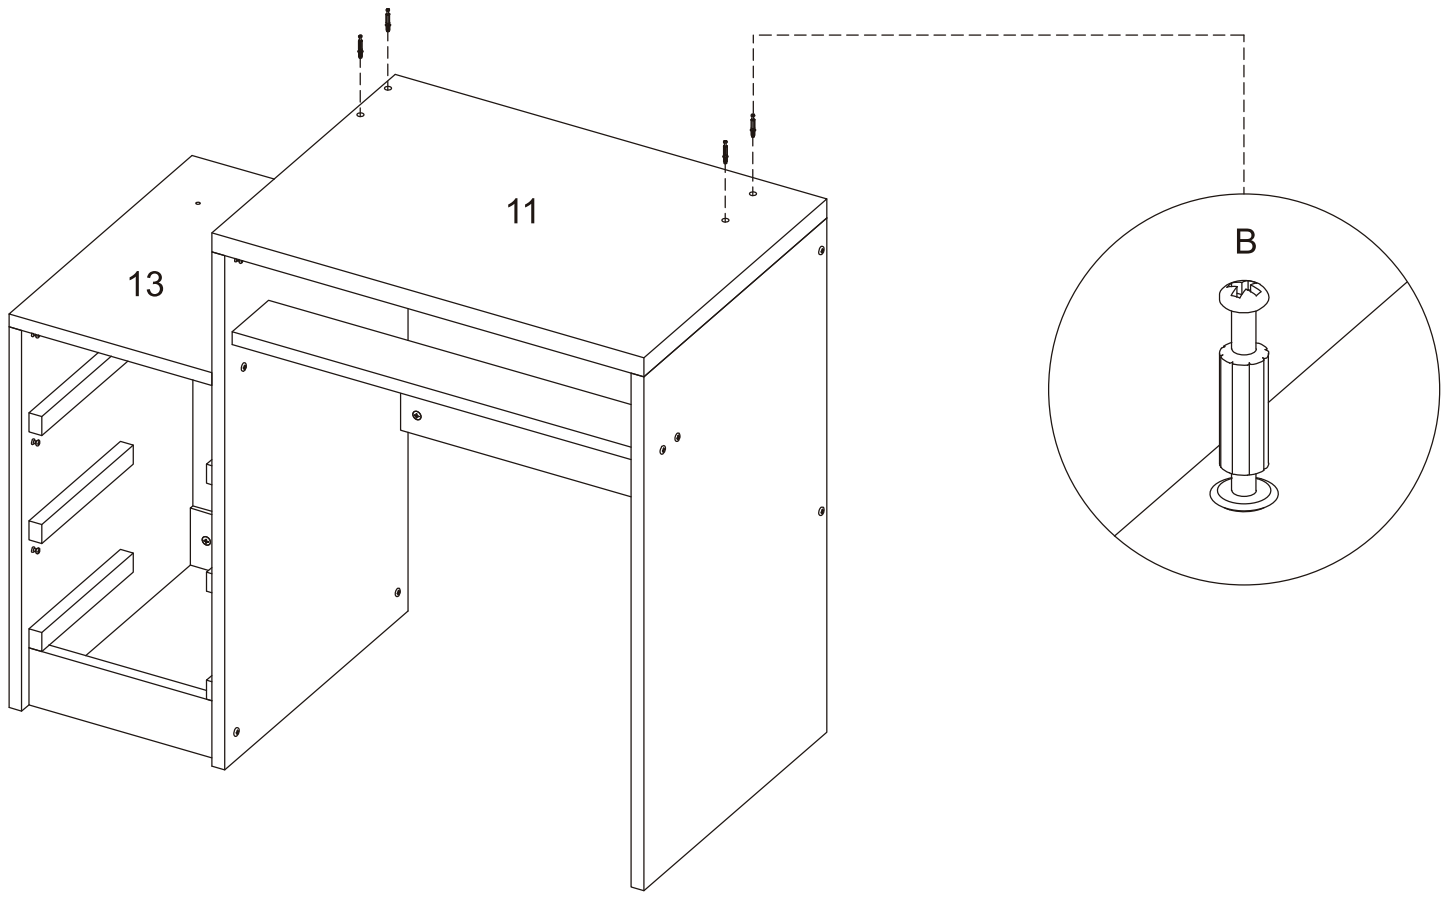


Step 28

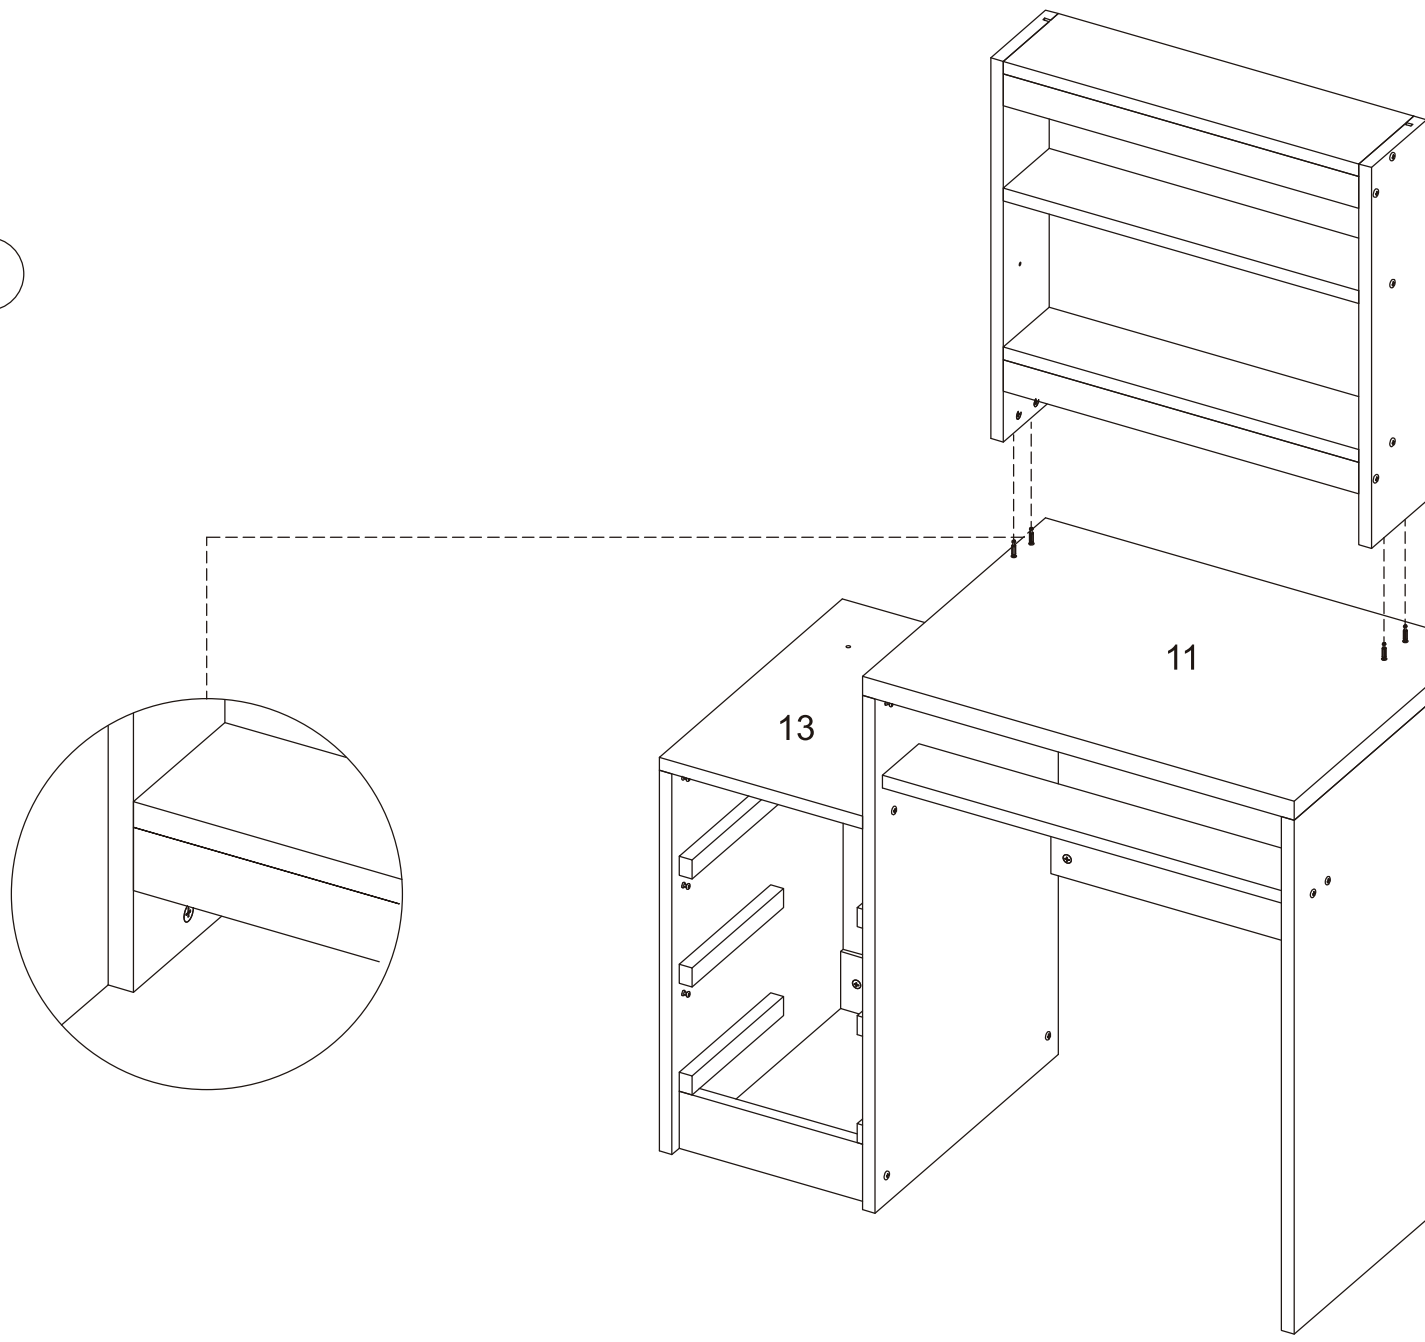


Step 29

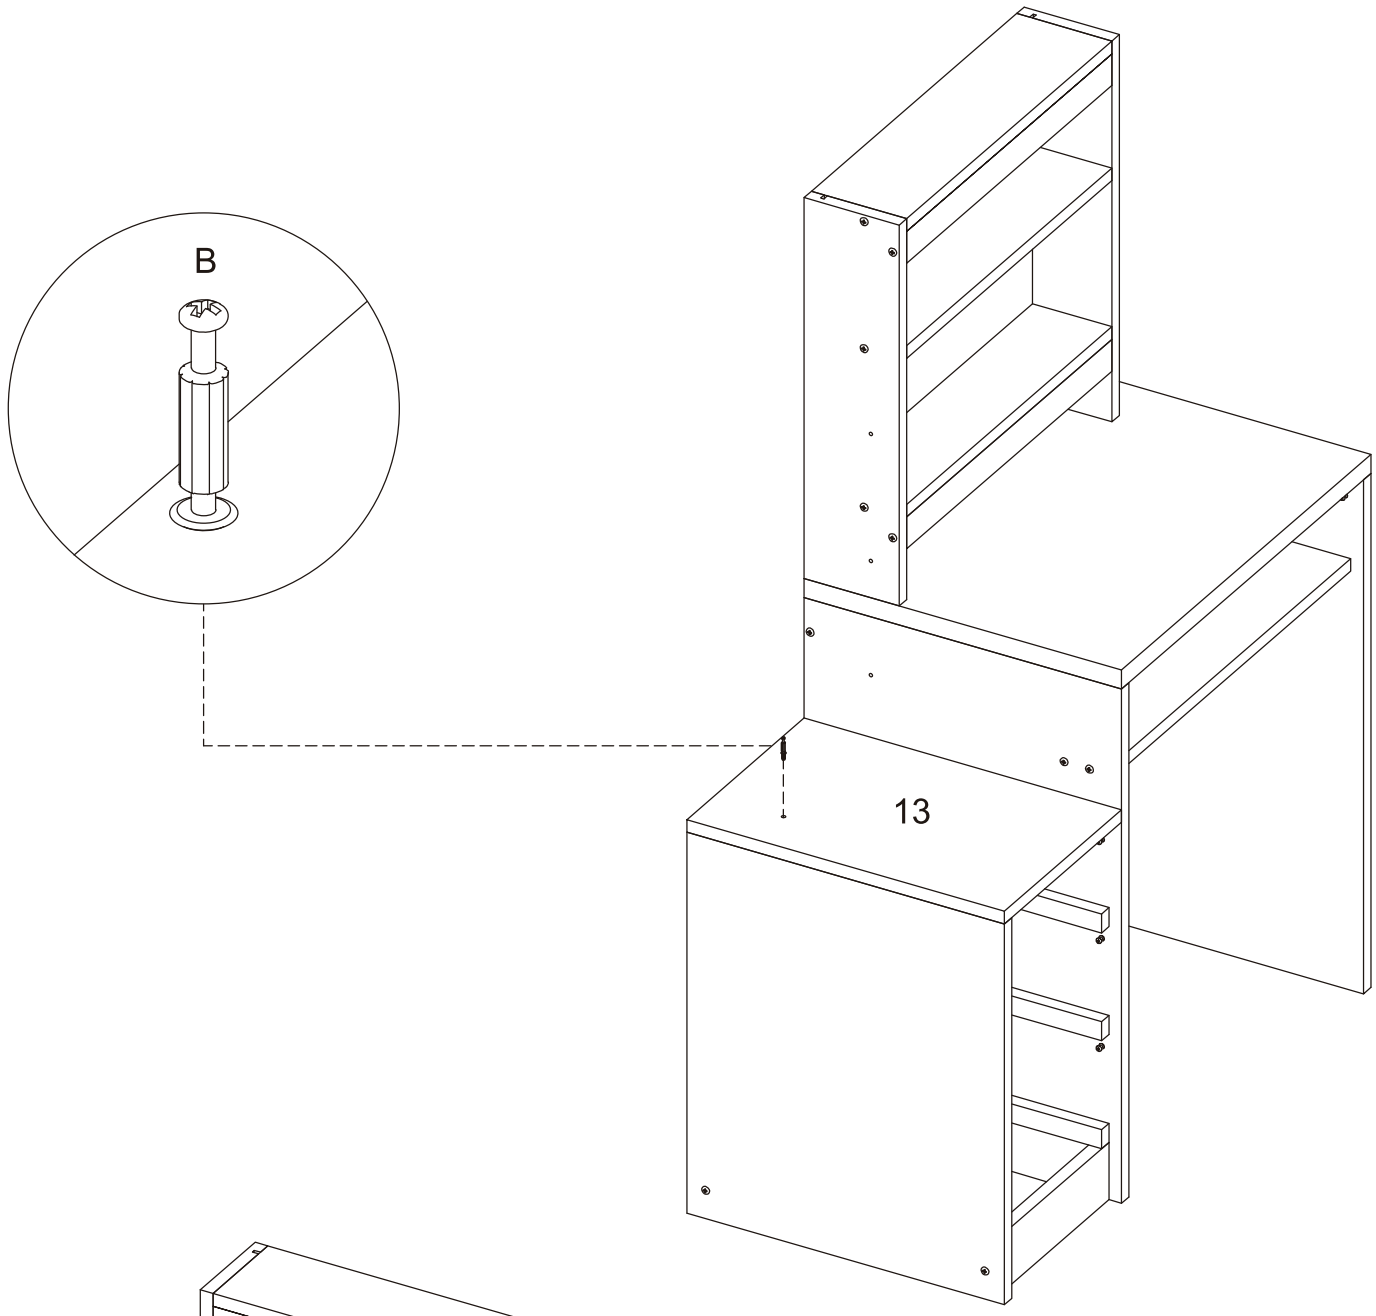


Step 30

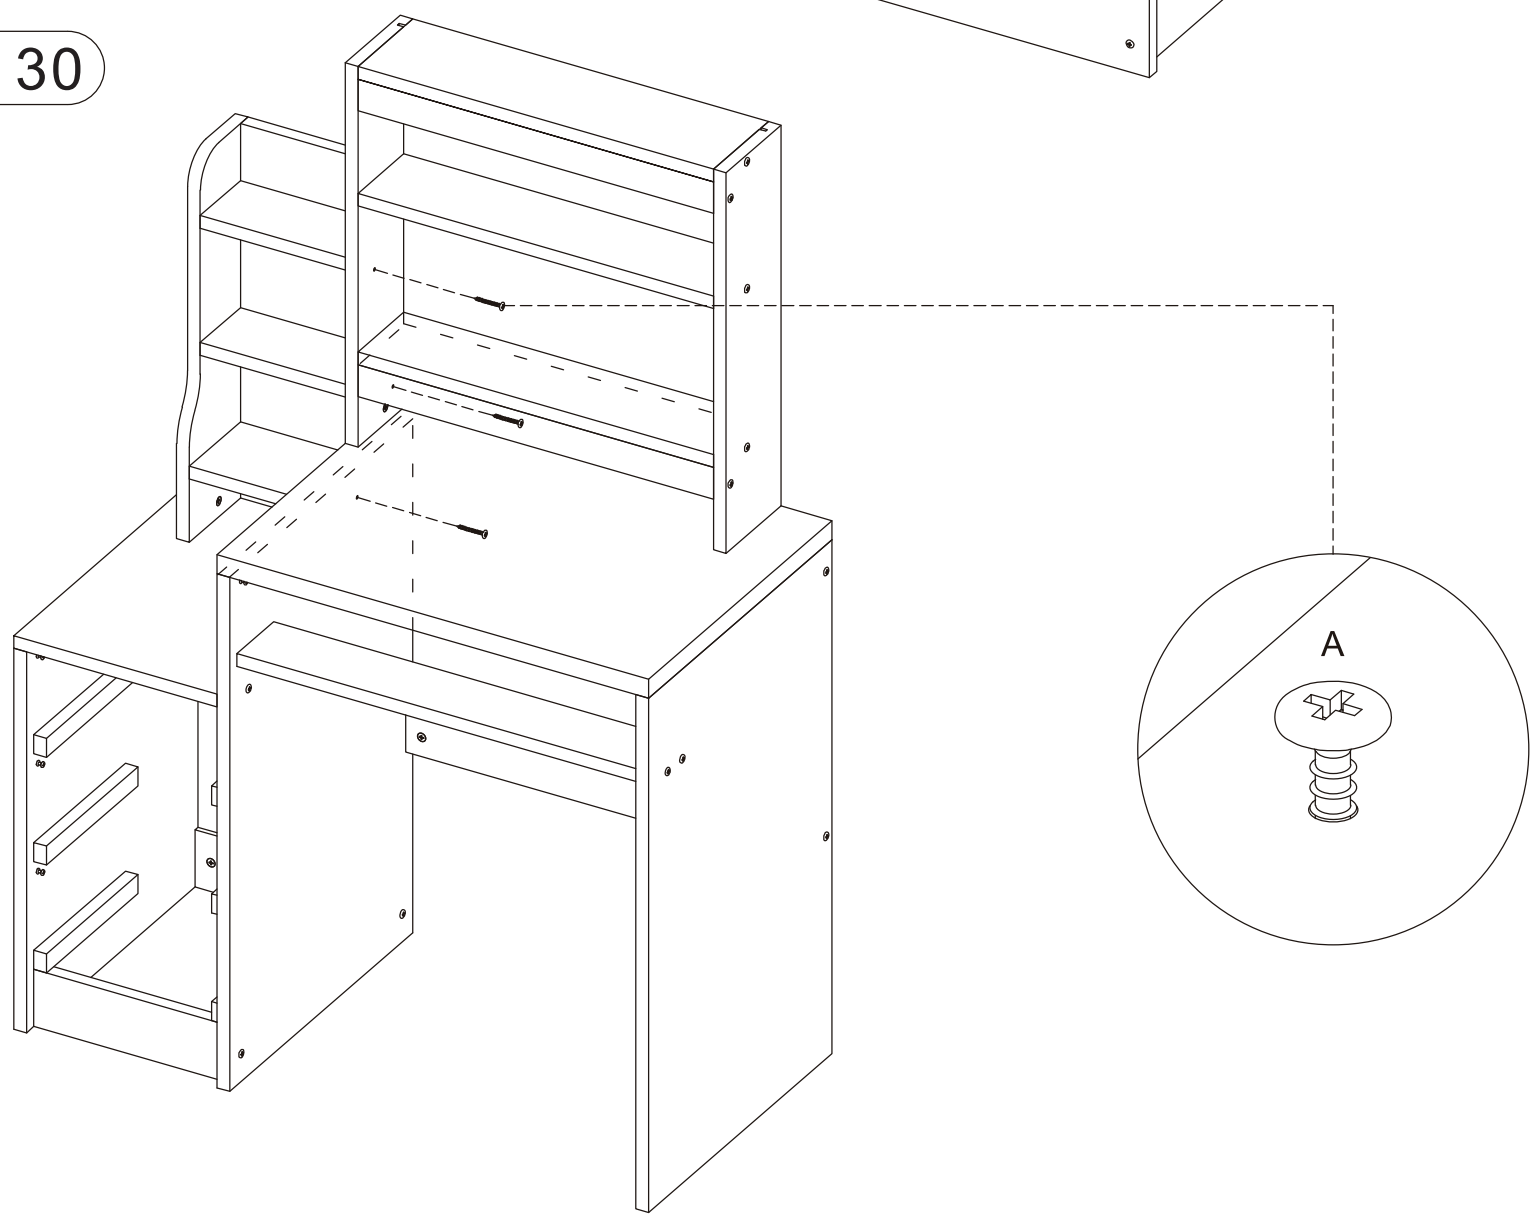

Step 32

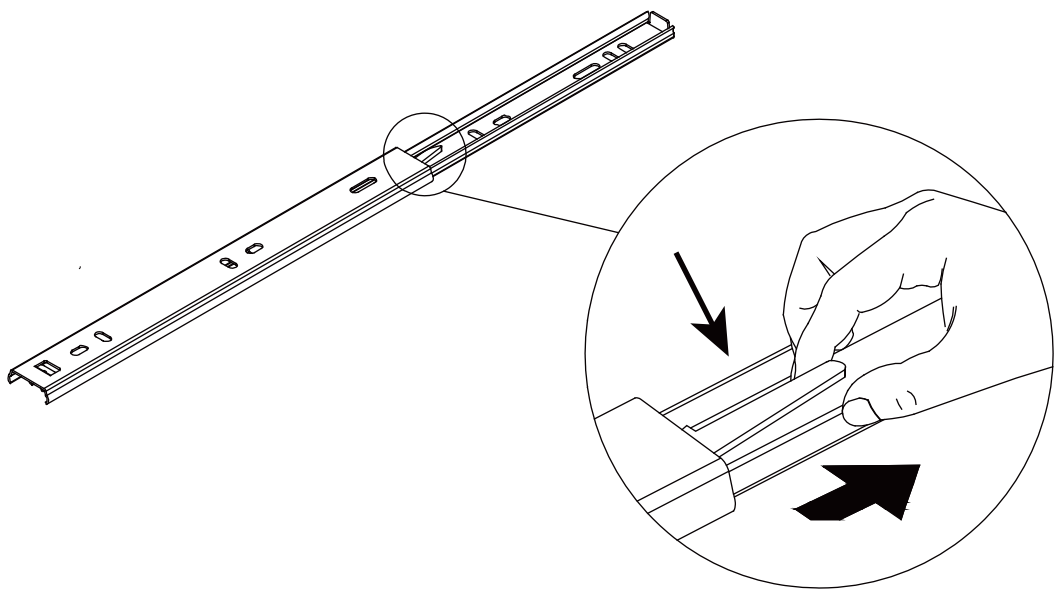

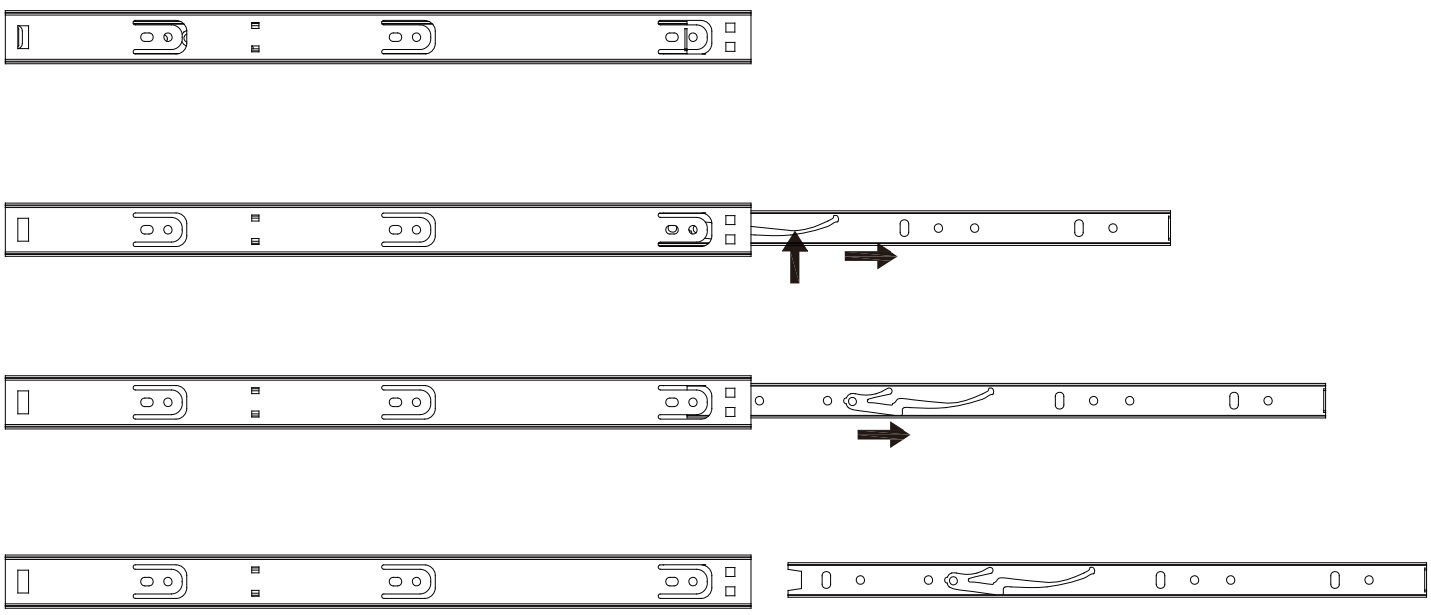


J-1

J-2



Step 33

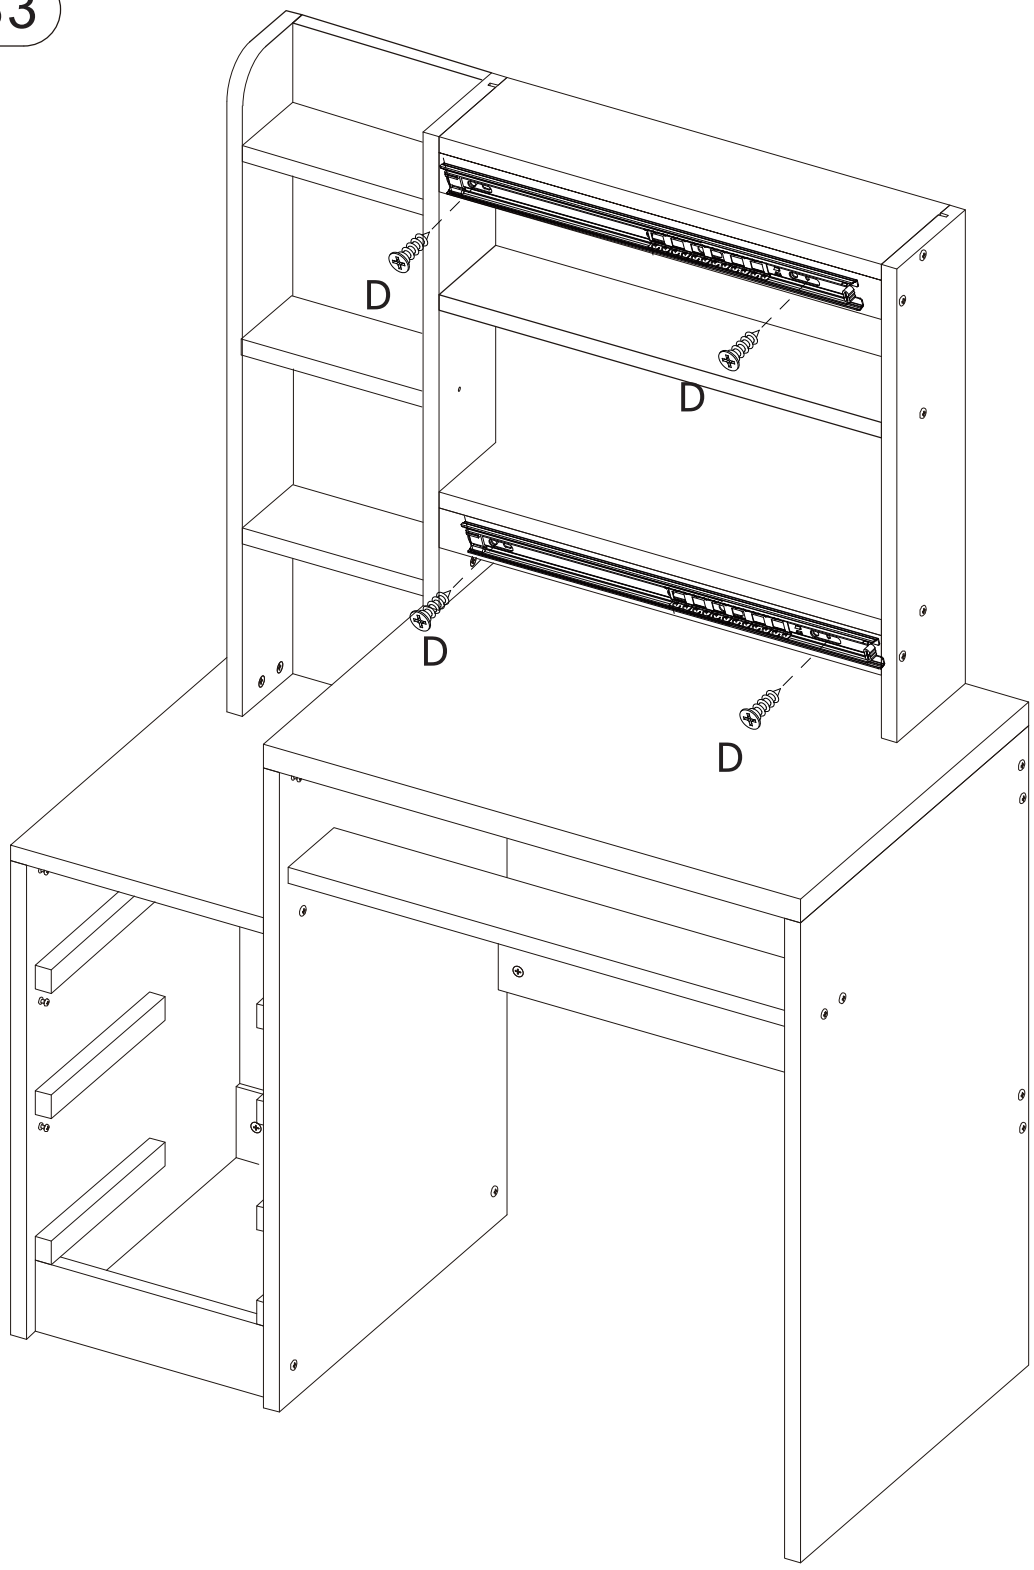










Step 34

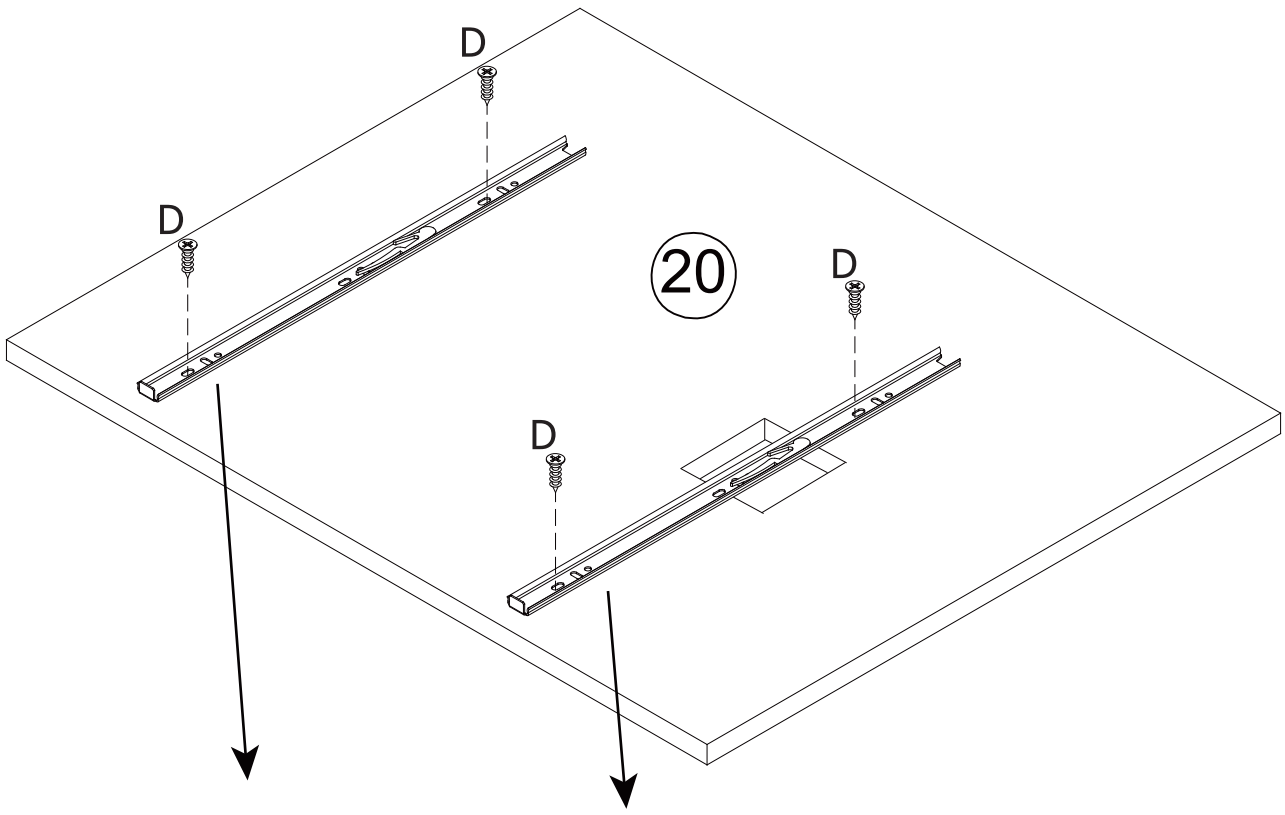


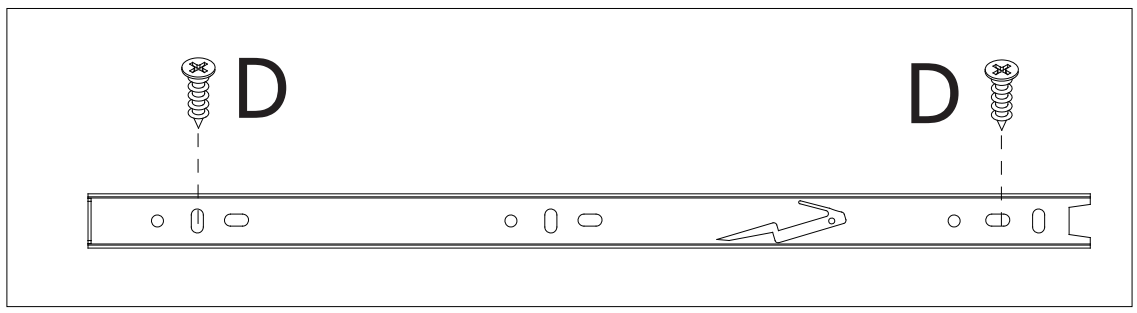



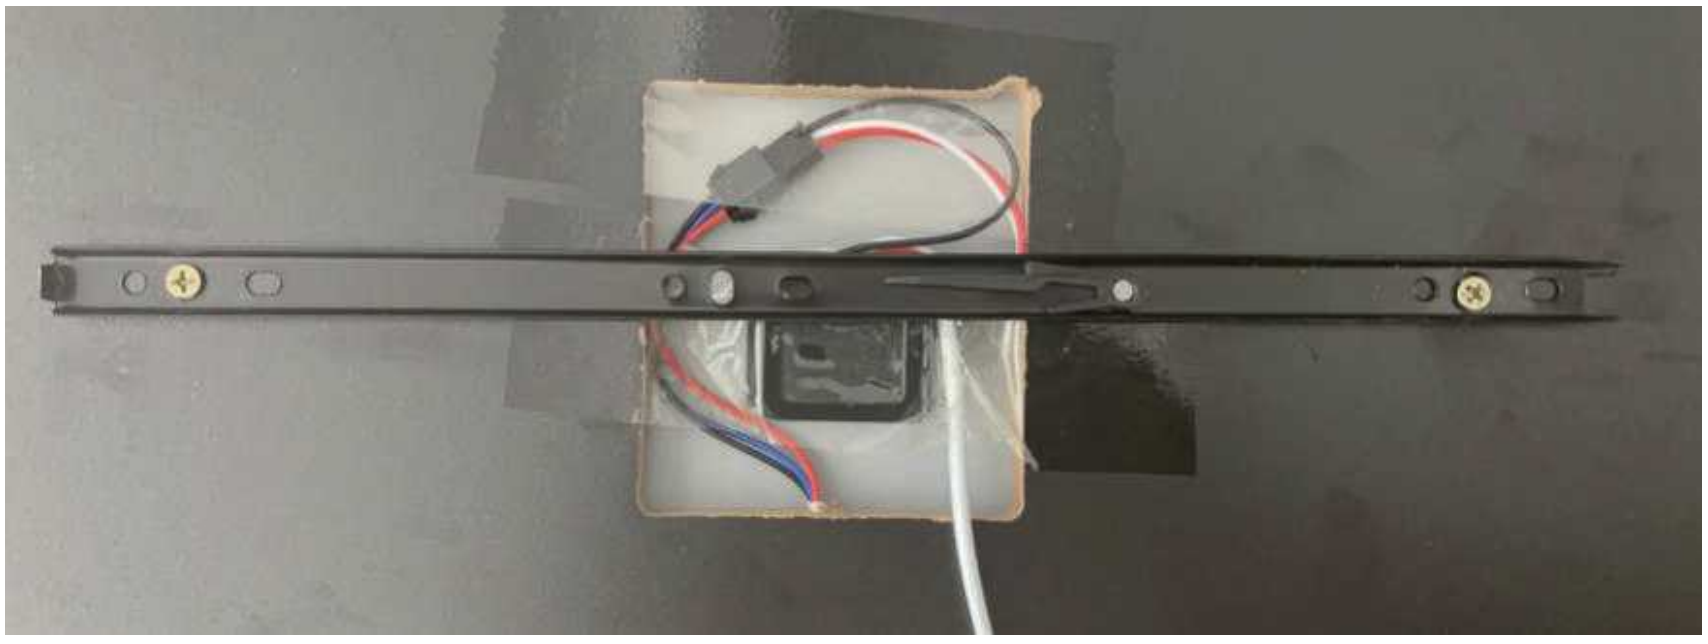

Step 35

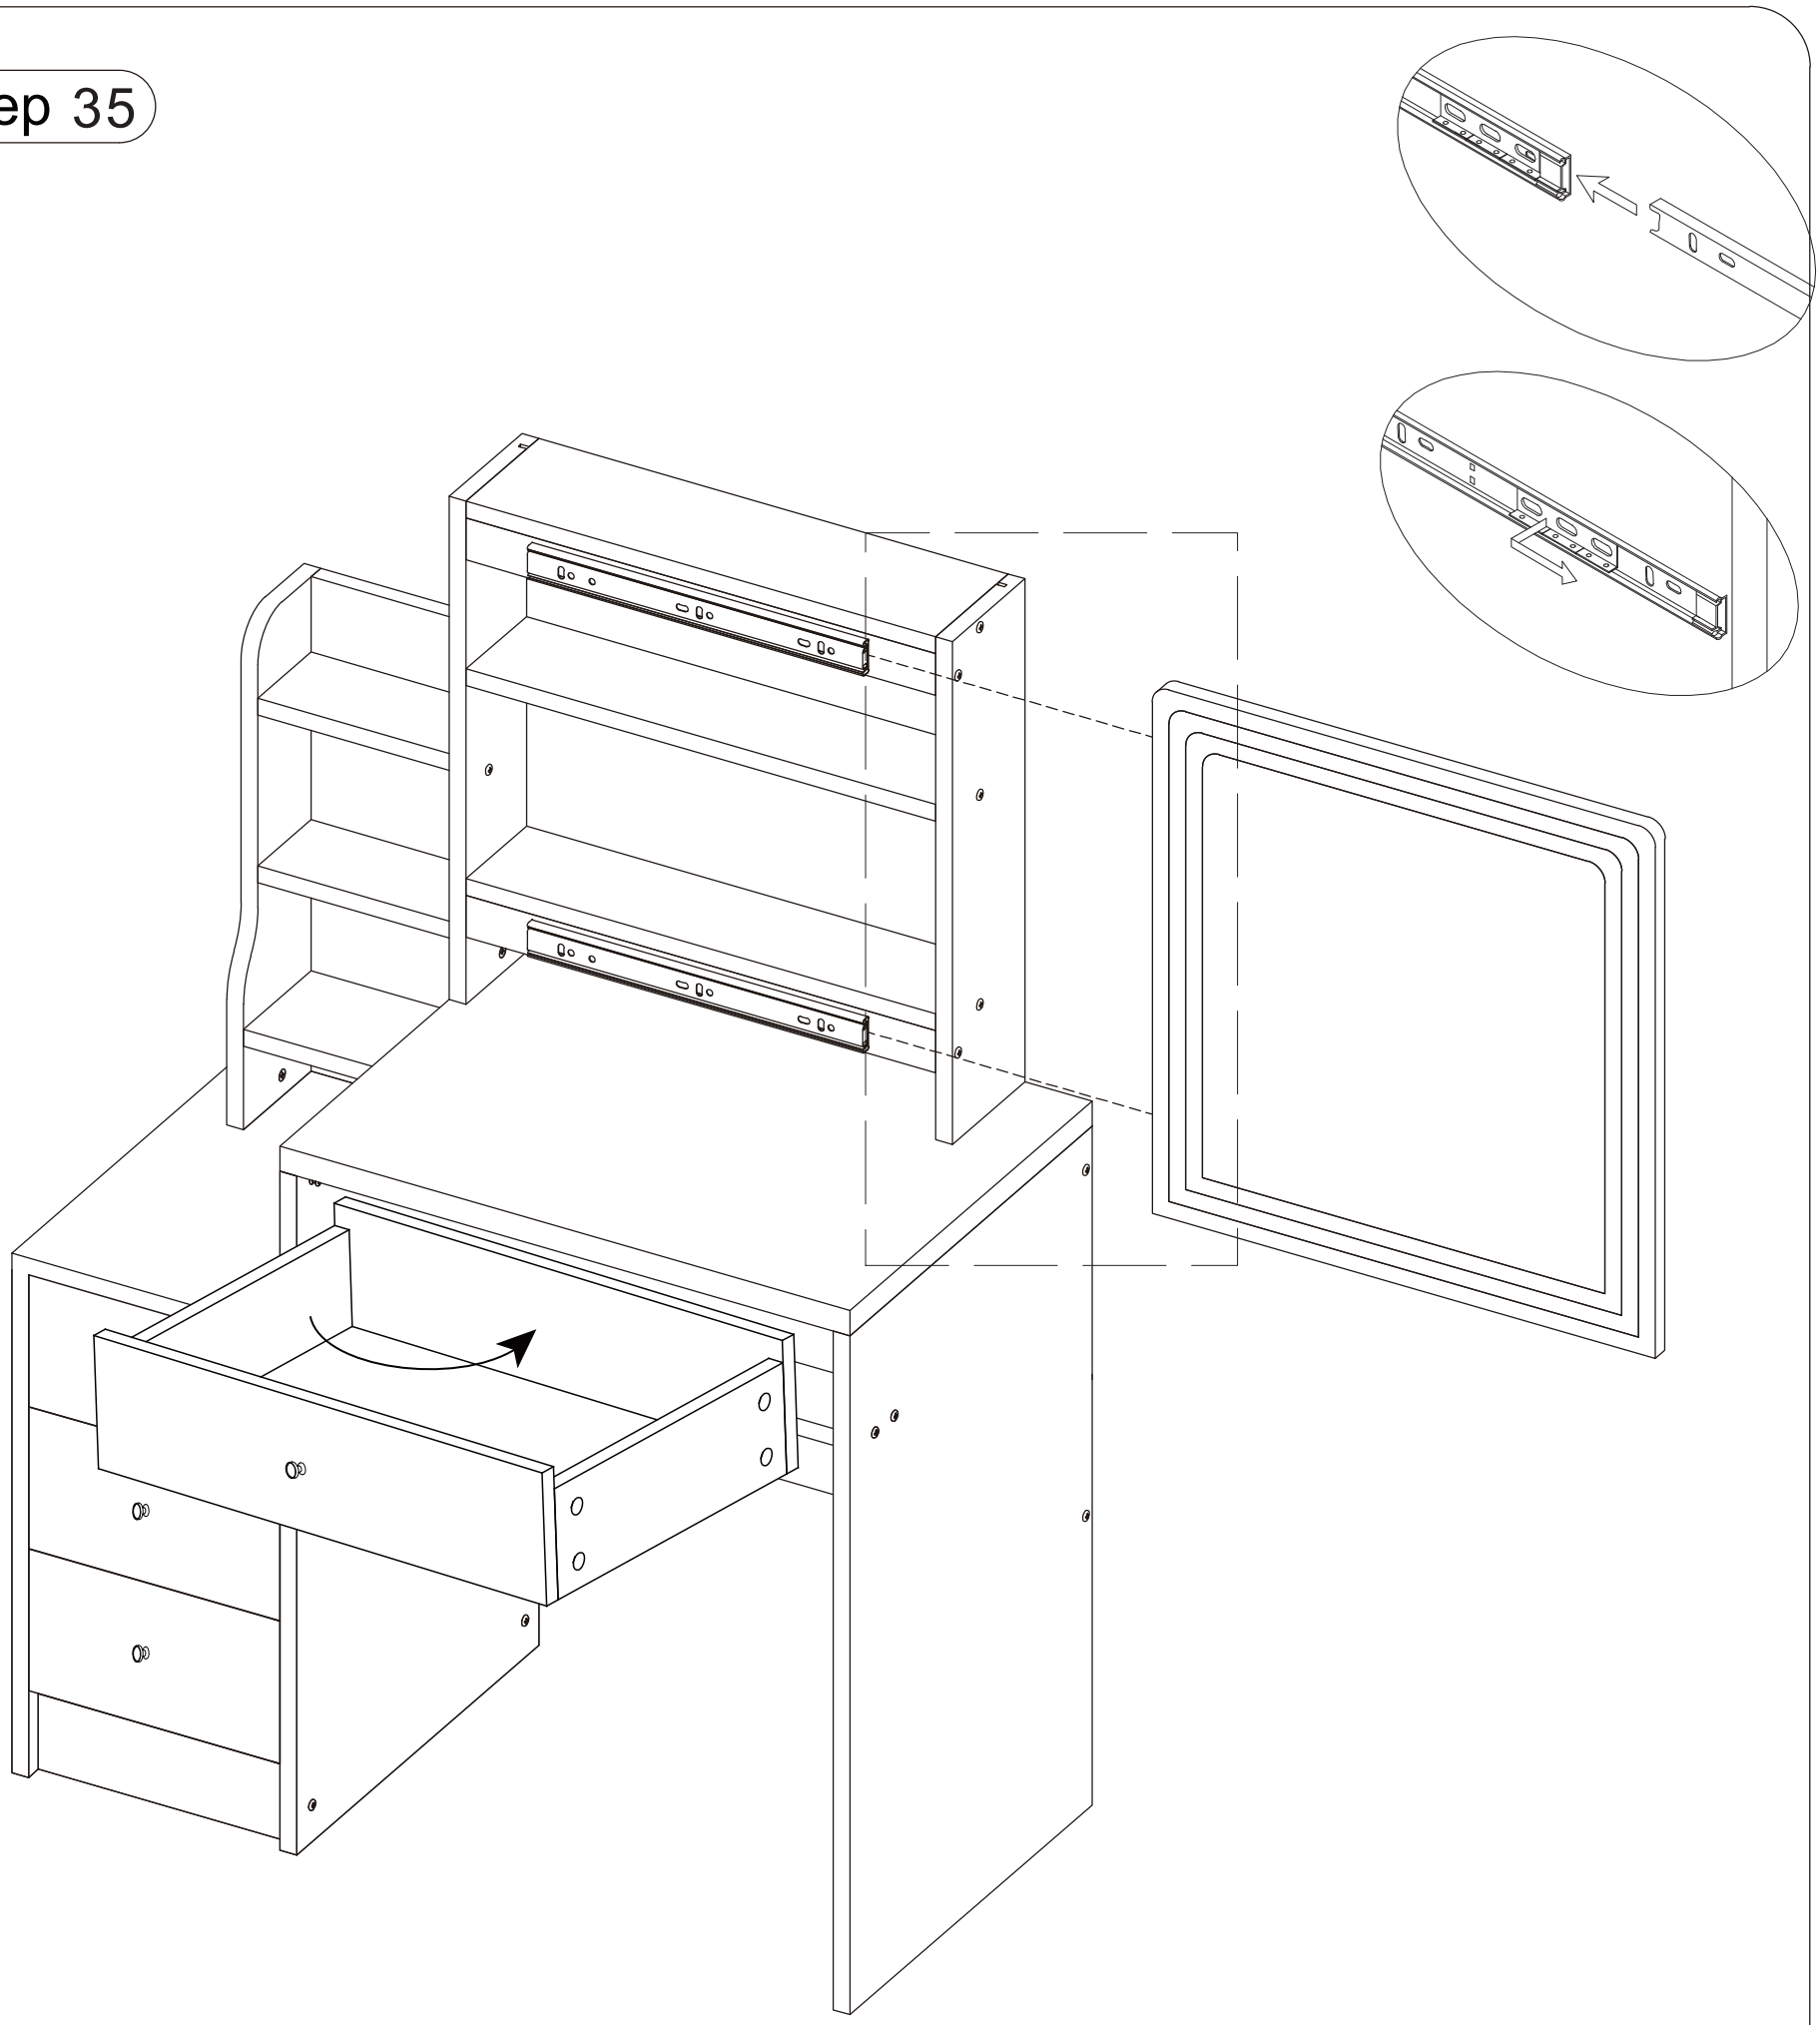

Please note that when placing the drawer in, the drawer positioning pin will block the drawer. Therefore, please follow the diagram to first insert the inner edge of the drawer using a concave method, and then push the drawer flat.


Step 36









Step 37

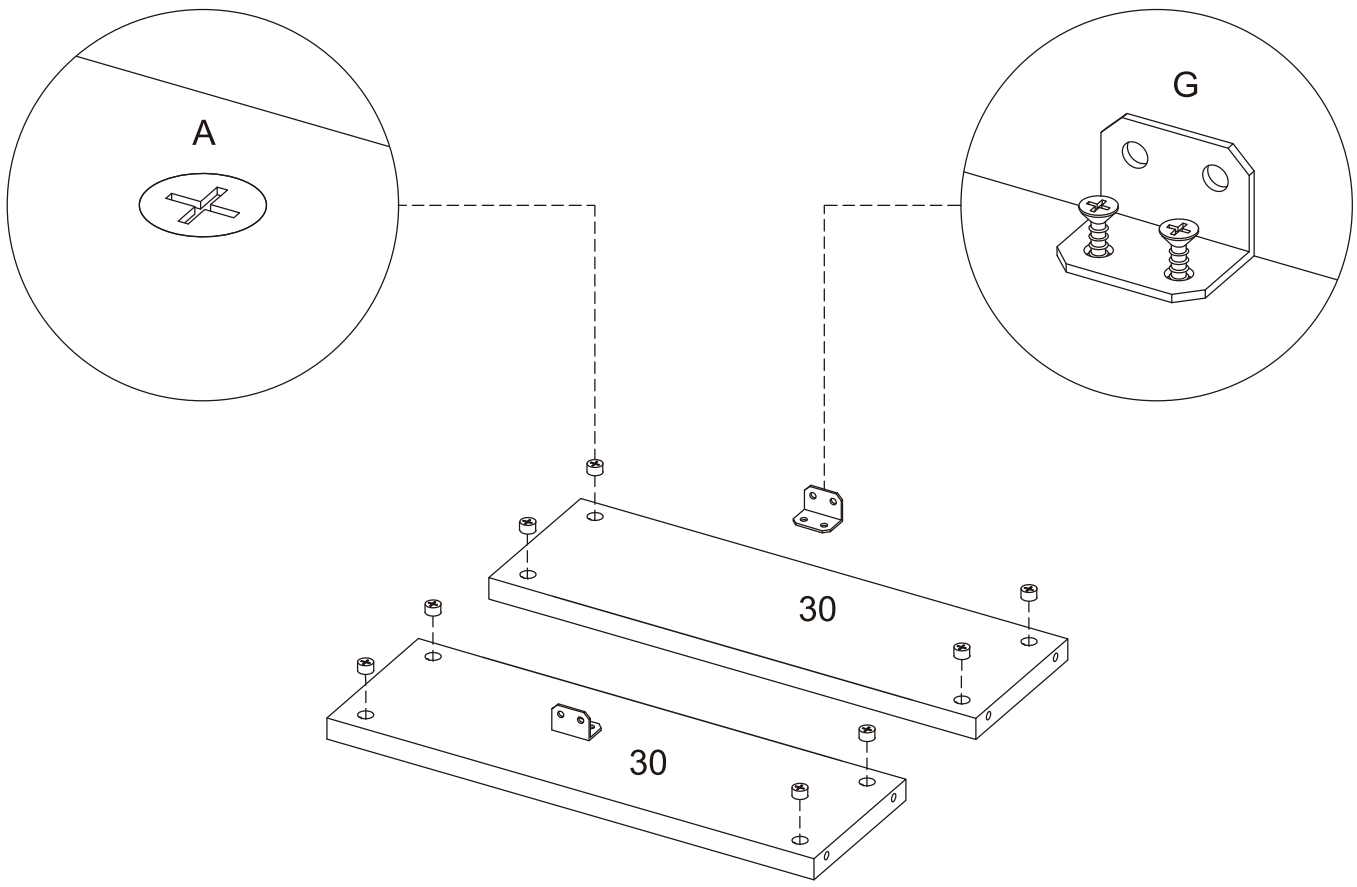

Step 38

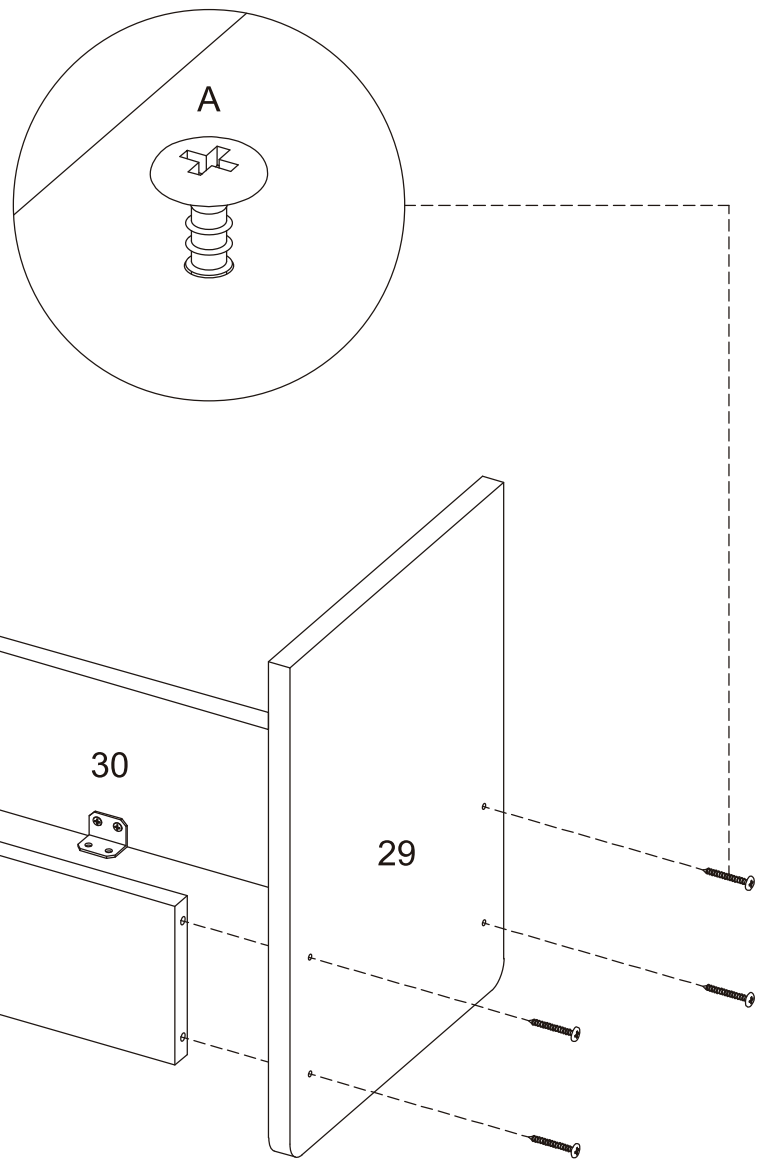

Step 39

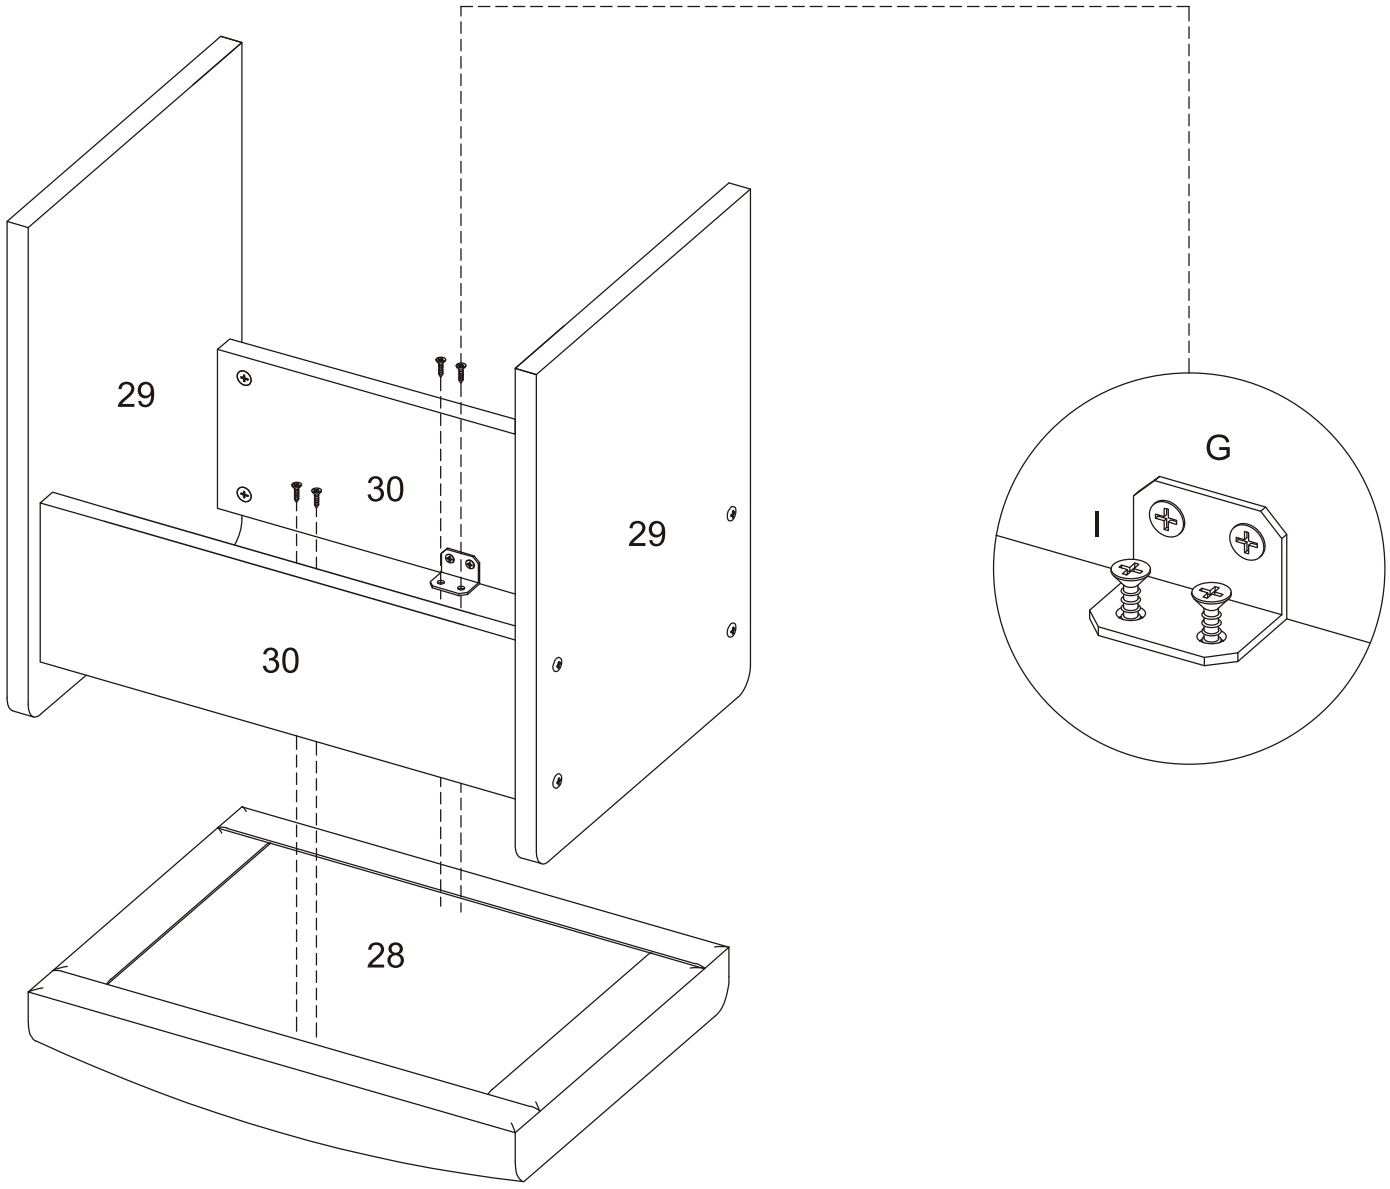

Step 40

