Assembly instruction

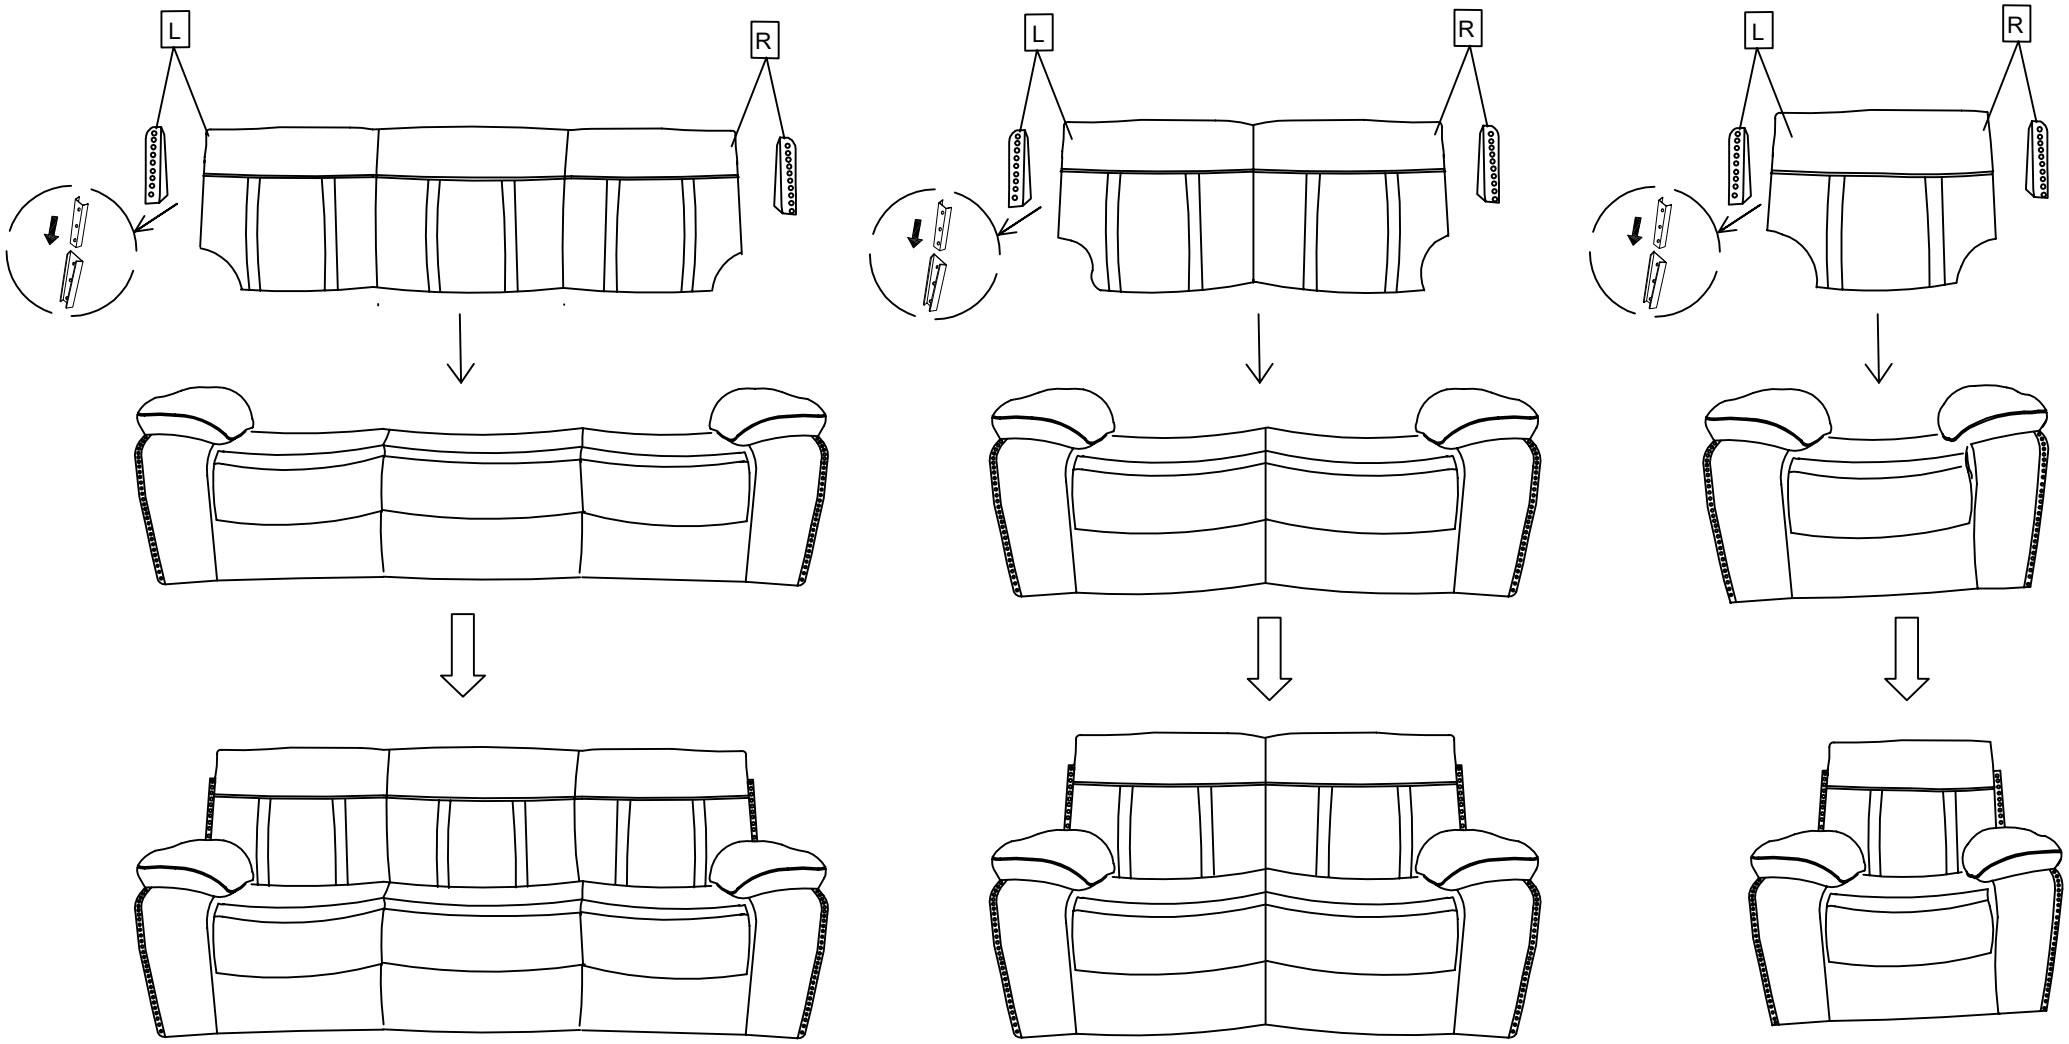

STEP 1. Hold up the Backrests,while standing behind,insert the small metal arms on the under-insides of the Backrest into the prefabricated slide lock gadget on the Seat Base,push the Backrest downwards until the Backrest is fully slotted and locked into position.