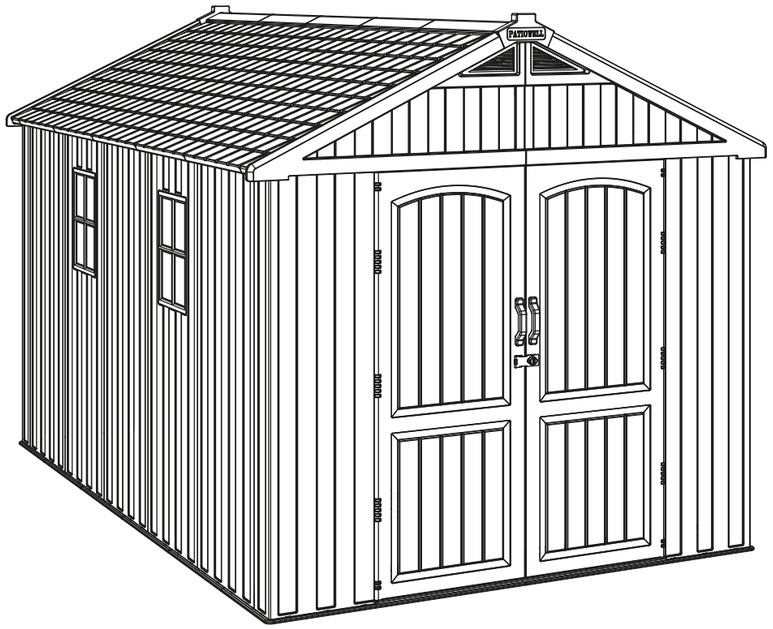


Patiowell

ASSEMBLY INSTRUCTIONS

RESIN GARDEN SHED

SKU: T-PS23-0404-812BG

BE
YOUR
LIFE BUILDER

www.patiowell.com

Patiowell
Resin Garden House
Installation Tutorial
https://www.patiowell.com
pages/video-T-PS23-0404-812BG


saleservice@patiowell.com


SITE PREPARATION


Level the ground surface.



Recommendation: Construct a wooden or concrete base as a foundation.

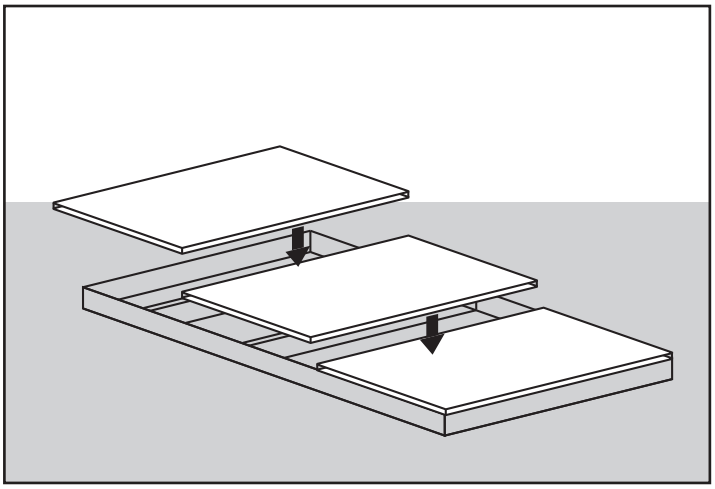

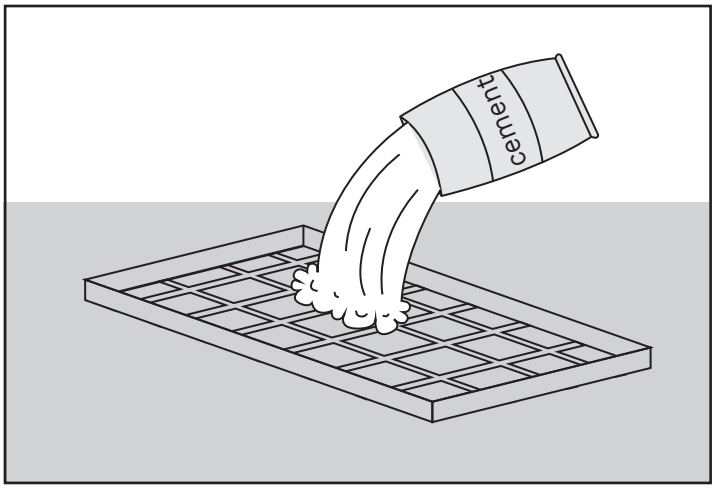

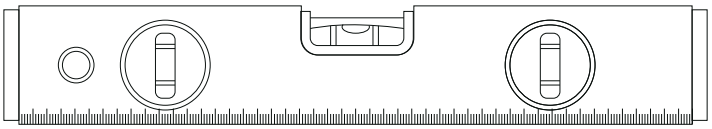


Before installation, please measure the ground with a tool and make sure the ground is level before installation.

BEFORE STARTING ASSEMBLY

Remove all of the pieces from the 7 packages and spread them out on the ground.
Before installation, please check the type and quantity of parts first.
It is recommended to use a clean work surface to spread the parts out and for pre-assembly steps. Review all instructions before you begin, continue to refer to instructions during assembly.
Be sure to follow all steps thoroughly.
Please prepare these components in advance at the beginning of each stage.

REQUIRED TOOLS

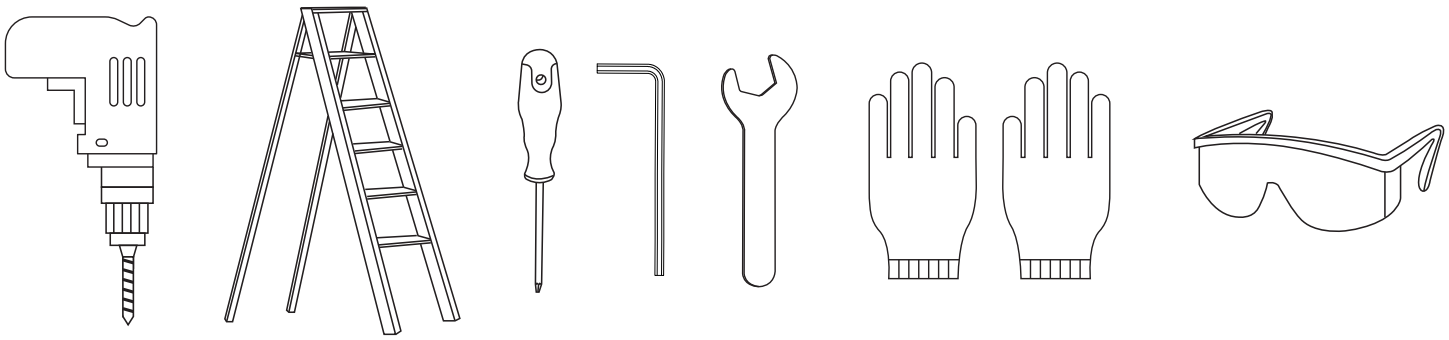

CAUTION


Some parts have steel edges. Please be careful when handling components. Always wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your shed. Do not attempt assembly on days with strong winds or low temperatures.




Requires two people and takes 3-4 hours for Installation.
Recommended to wear gloves to avoid scratches.
Please read the manual carefully before installation.

DO NOT RETURN YOUR UNIT
TO THE STORE
Contact us first
saleservice@patiowell.com


FLOOR PARTS

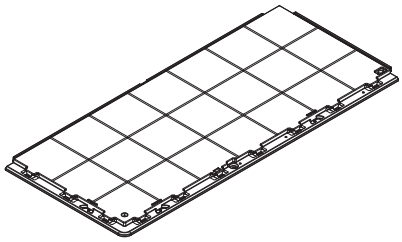


A1 X2

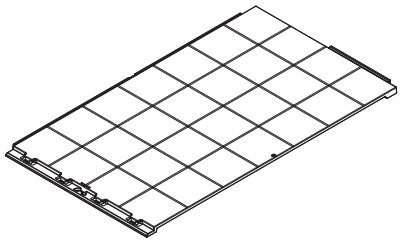

A2 X8

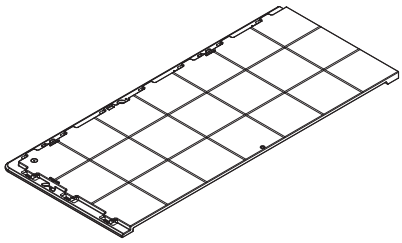


A3 X2

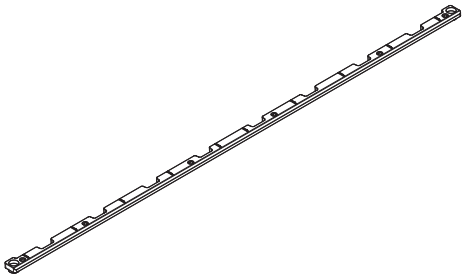

A4 X1


WALL PARTS

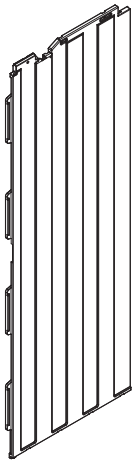

B1 X1



B2 X9

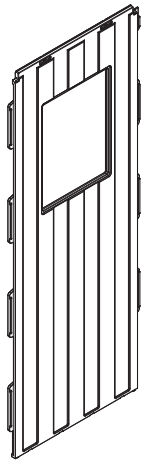


B3 X4



B4 X1


WALL PARTS

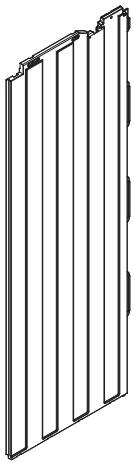


B5 X1




B6 X1

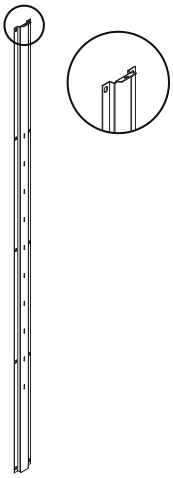


B2-1 X12

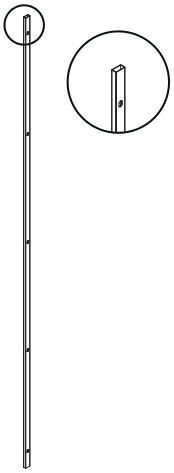

B2-2 X2

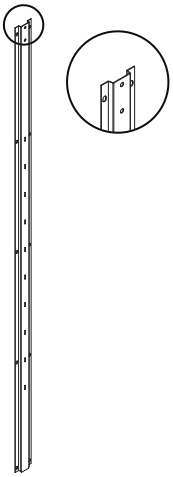


B2-3 X4

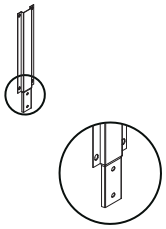


B2-4 X2

WINDOW PARTS

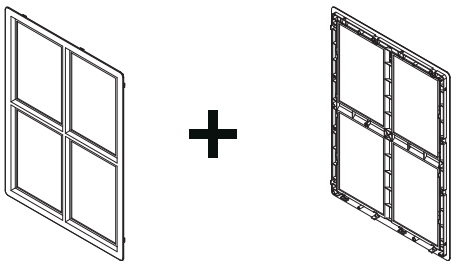



W1 X8





W2 X4


ROOF PARTS

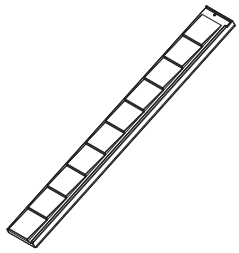

D1 X2

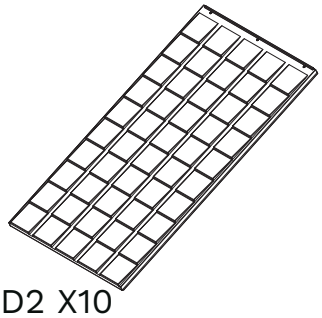

D2 X10

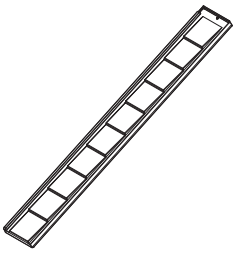

D3 X2

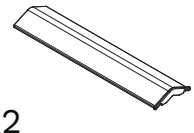
E1 X2



E2 X3

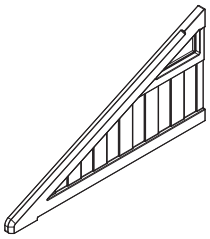
CL X2

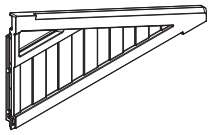

CR X2

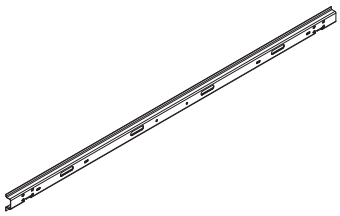

DD X1



D2-1 X8


D2-2 X4



D2-4 X2

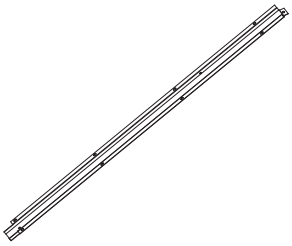

D2-3 X4

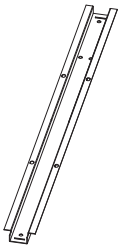
E1-1 X2


E2-1 X3

DOOR PARTS










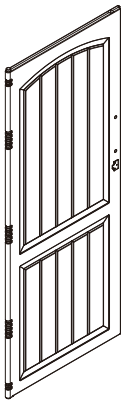

DL X1

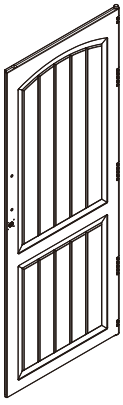
DR X1


DF X2

DZ X2

ACCESSORIES

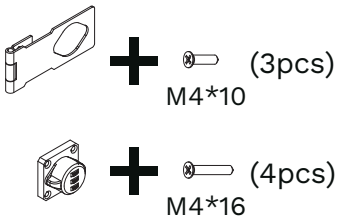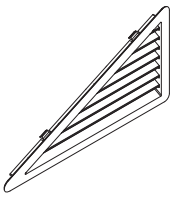
 DH1 X2	 DH2 X2	 DG X2	 DS X1
 DC X1	 DDZ X2	 E3 X2	 E4 X4
 CRI X2	 CLI X2	 D4 X16	 A5 X2
 A1-1 X1	 B1-1 X2	 D2-5 X2	 D2-6 X8
 M6 X59	 Z6 X12		

SCREW

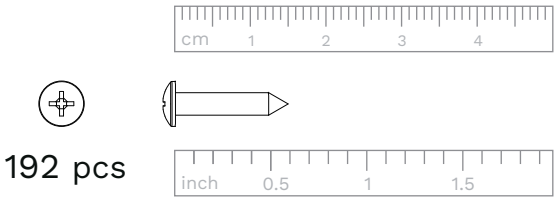


192 pcs

SP6-15 M6*15

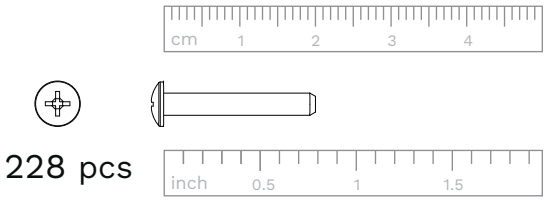


228 pcs

SP6-20 M6*20

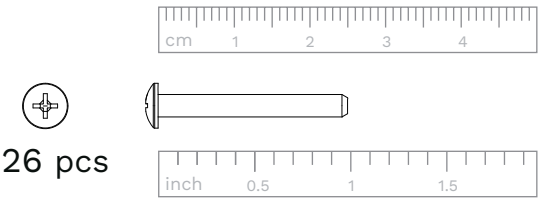


26 pcs

SP6-25 M6*25

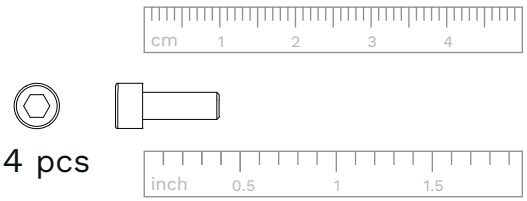


4 pcs

M6-10 M6*10

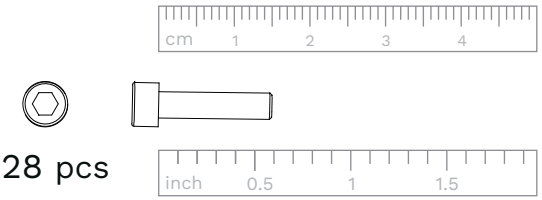


28 pcs

M6-15 M6*15

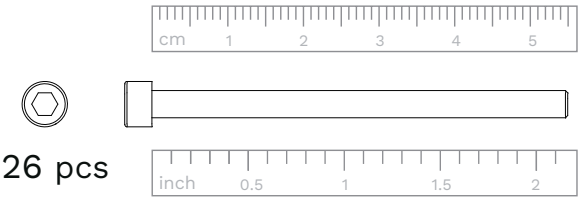


26 pcs

M6-55 M6*55

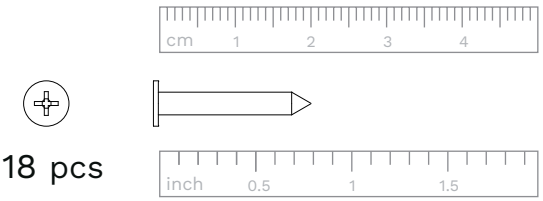


18 pcs

SPF6-20 M6*20

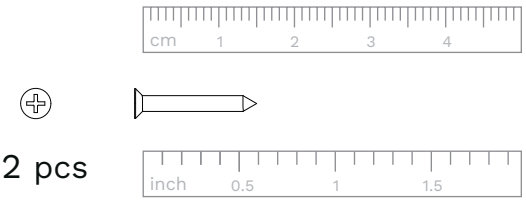


2 pcs

SF4-15 M4*15

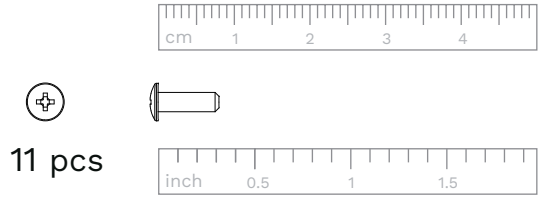

11 pcs


M5-8 M5*8

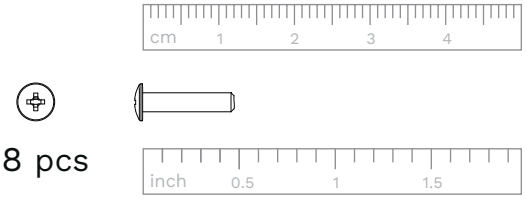


8 pcs

M5-12 M5*12


CONTENTS

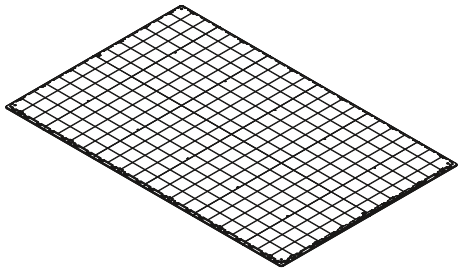


Floor Part Instruction 10-17 (page)

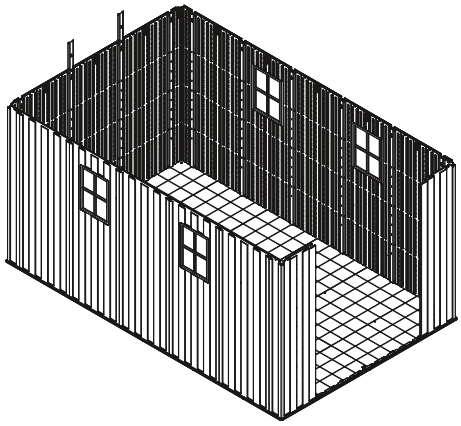

Wall Part Instruction 17-32 (page)

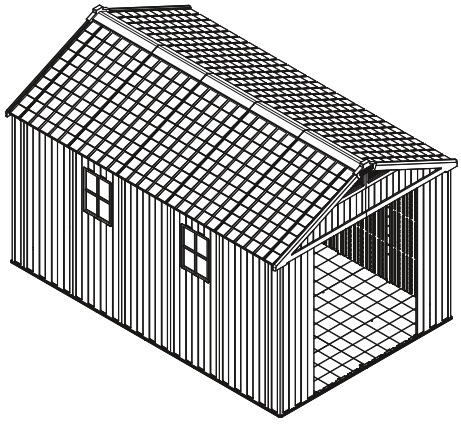


Roof Part Instruction 33-45 (page)

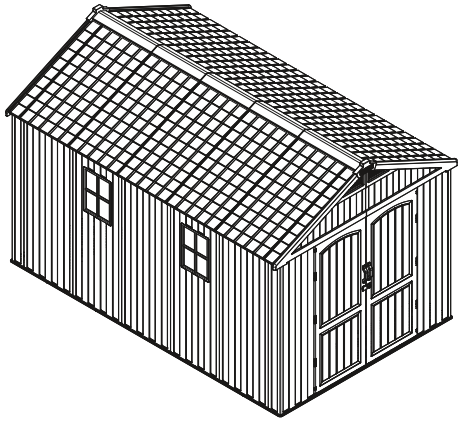


Door Part Instruction 46-50 (page)


STEP 1

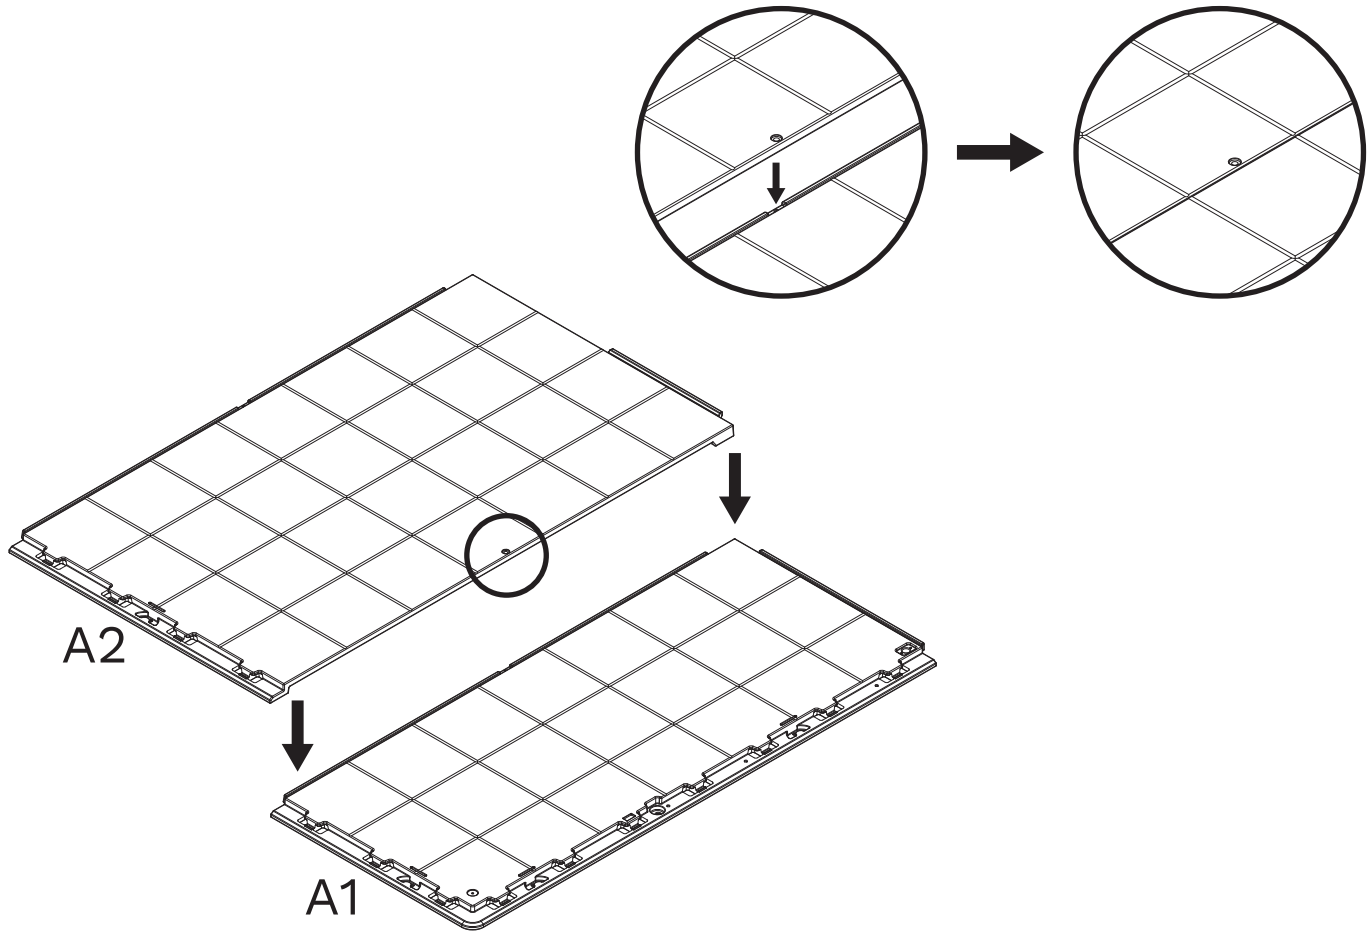


STEP 2

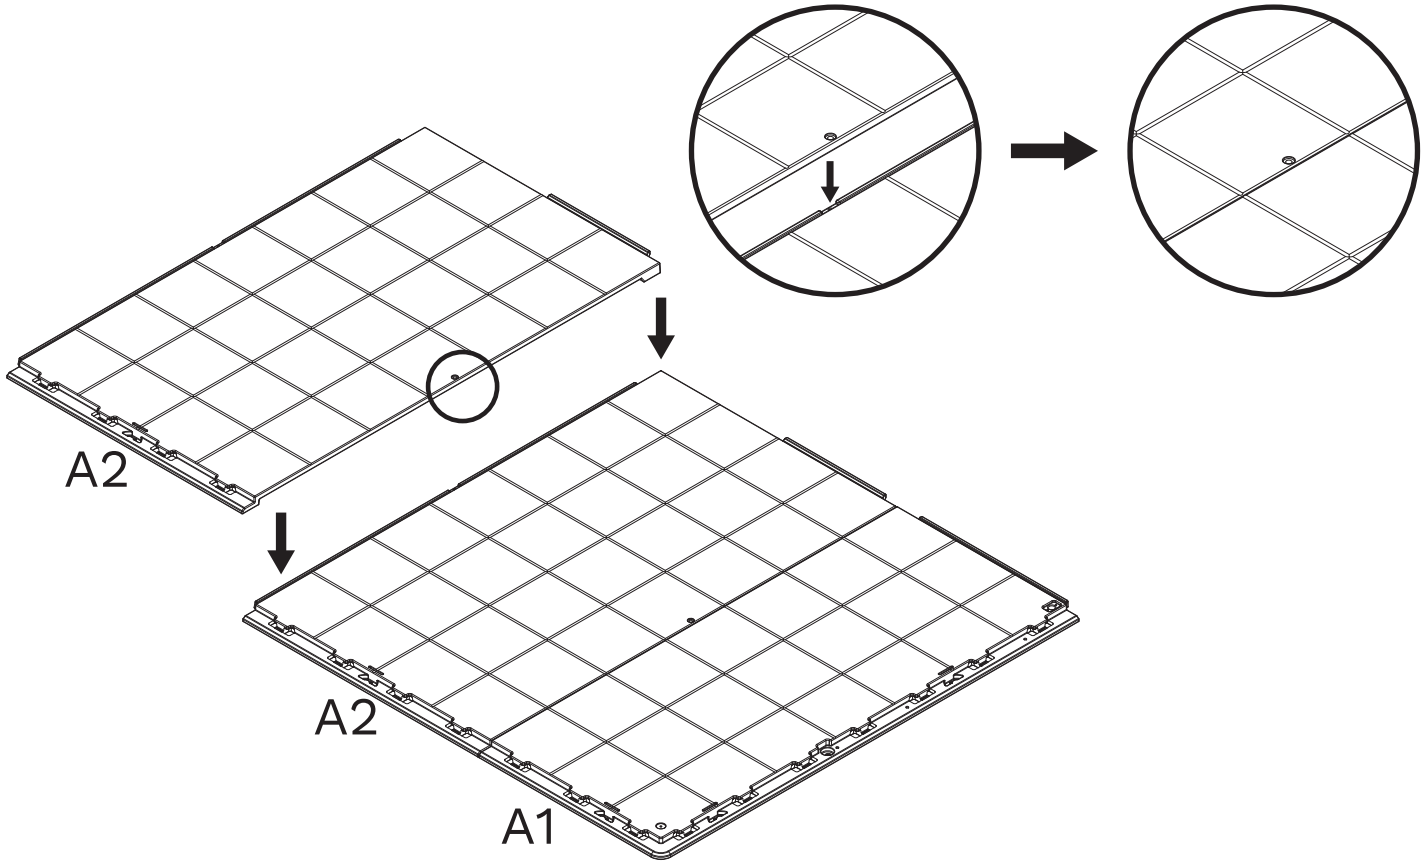


STEP 3

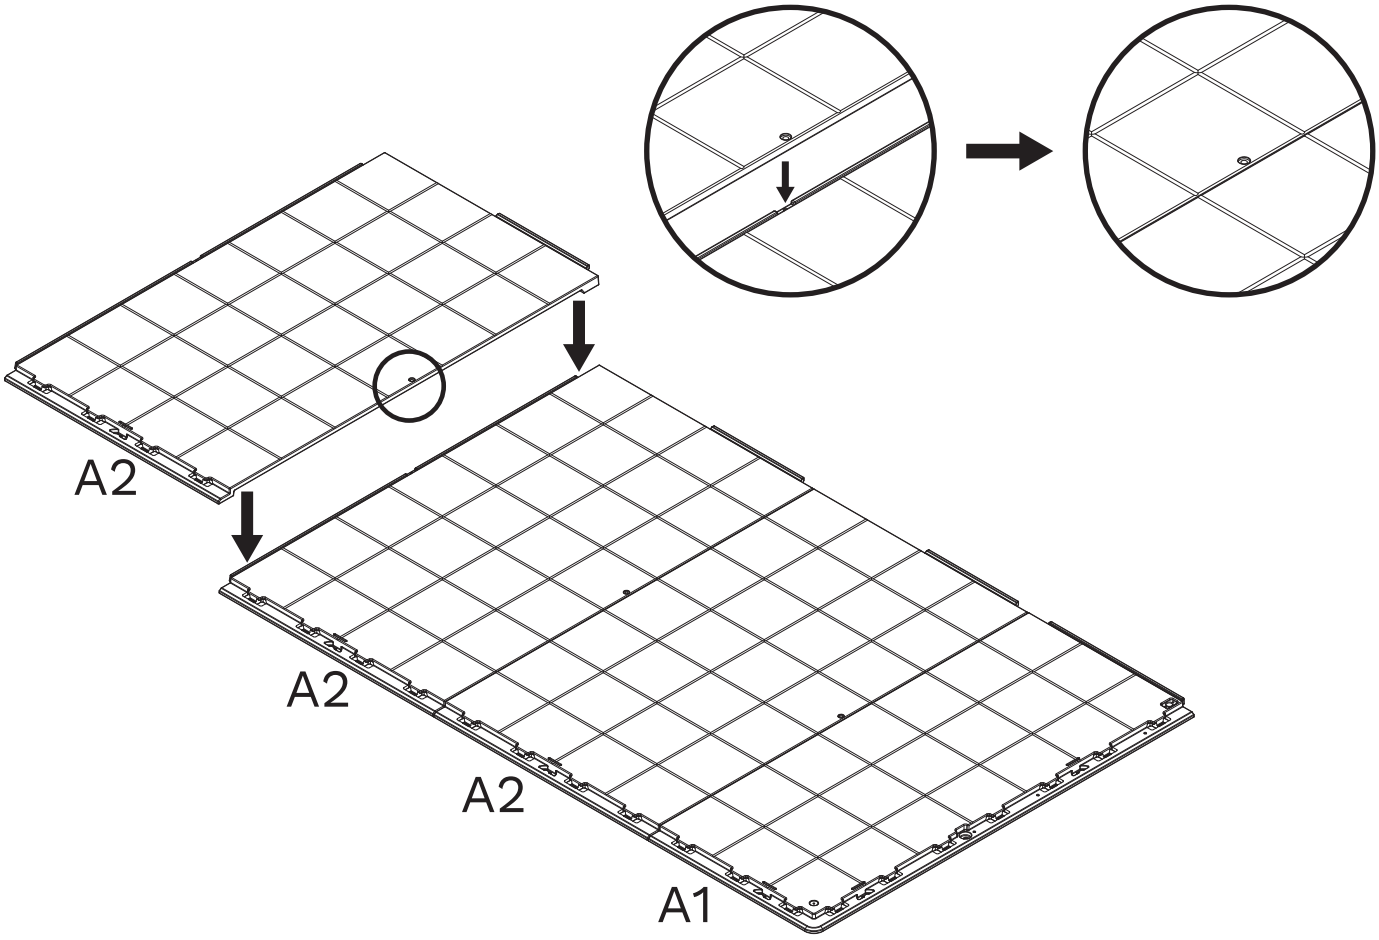


STEP 4

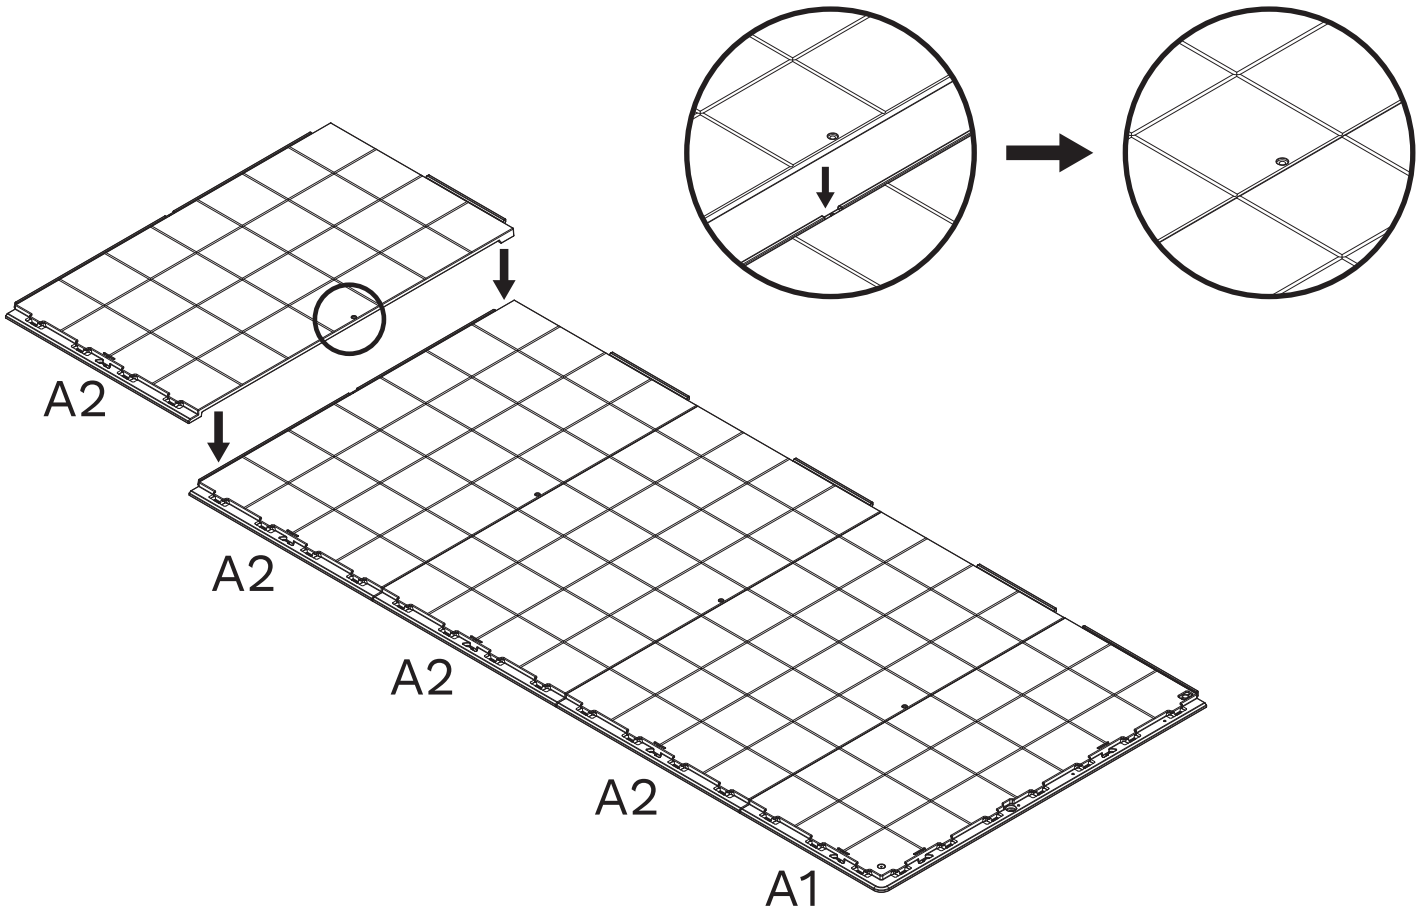


STEP 5

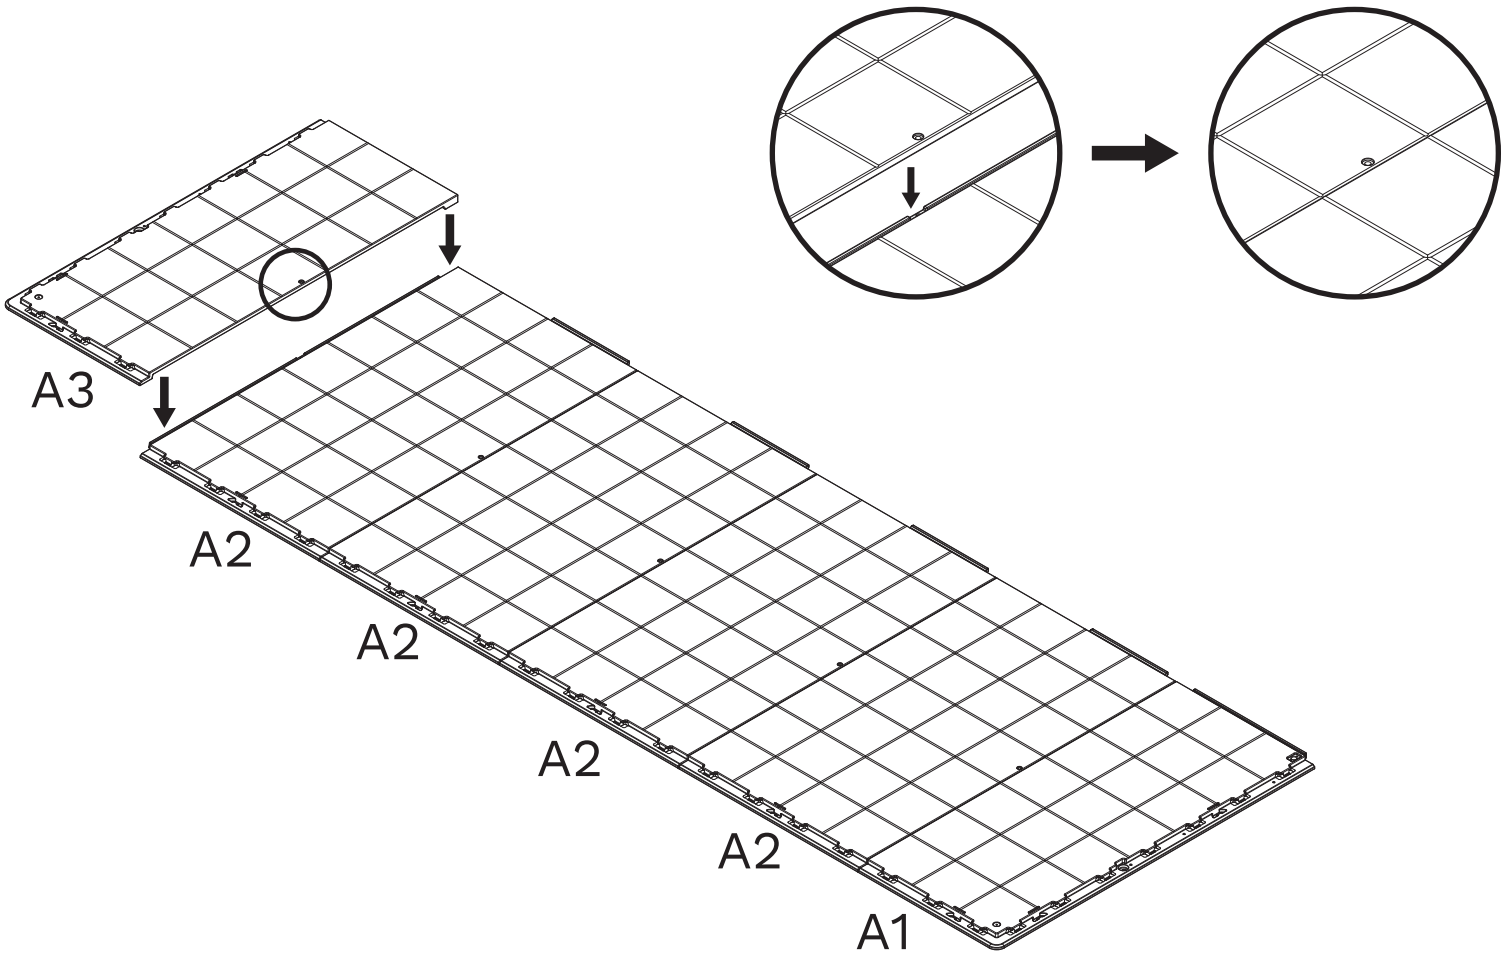



STEP 6

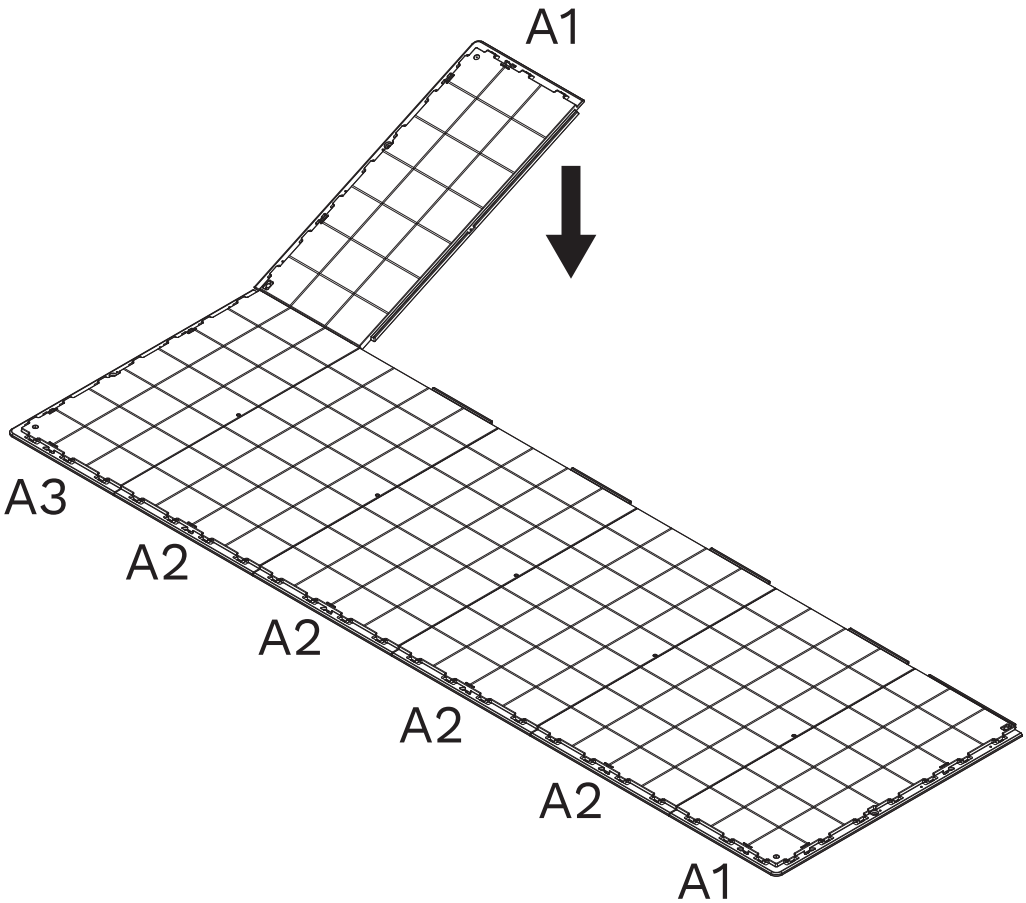

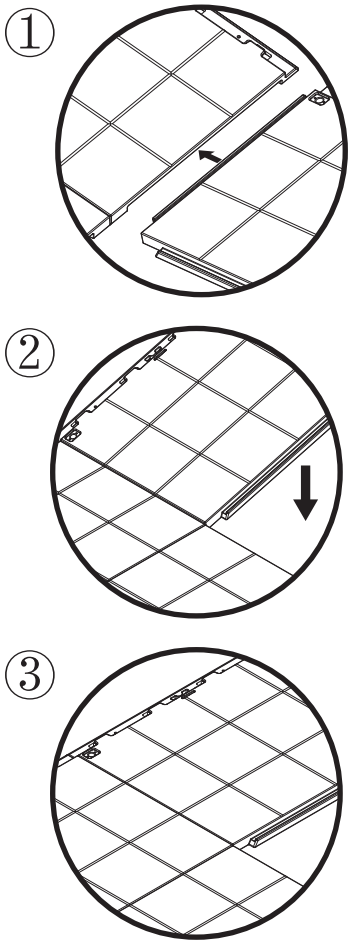



STEP 7

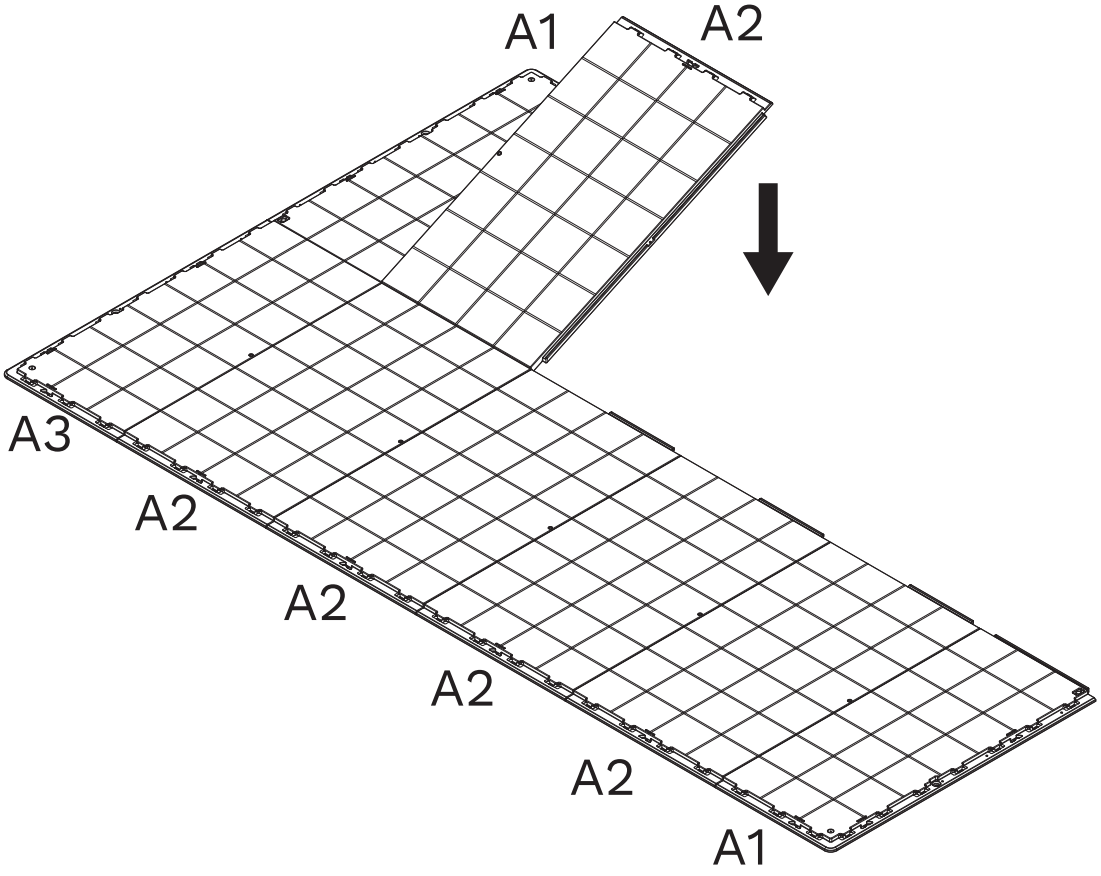

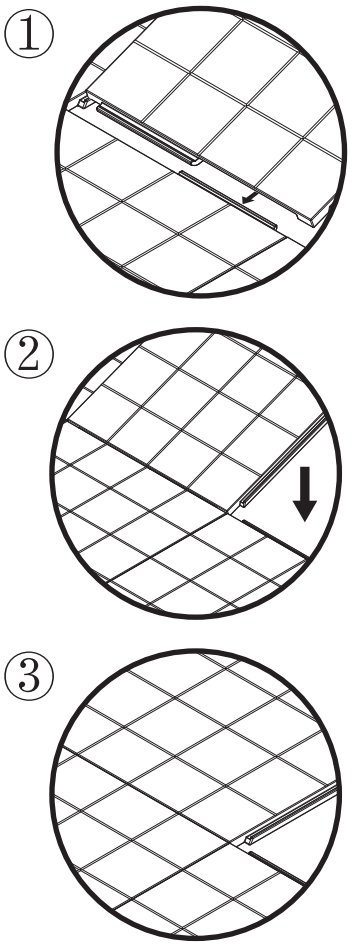


STEP 8

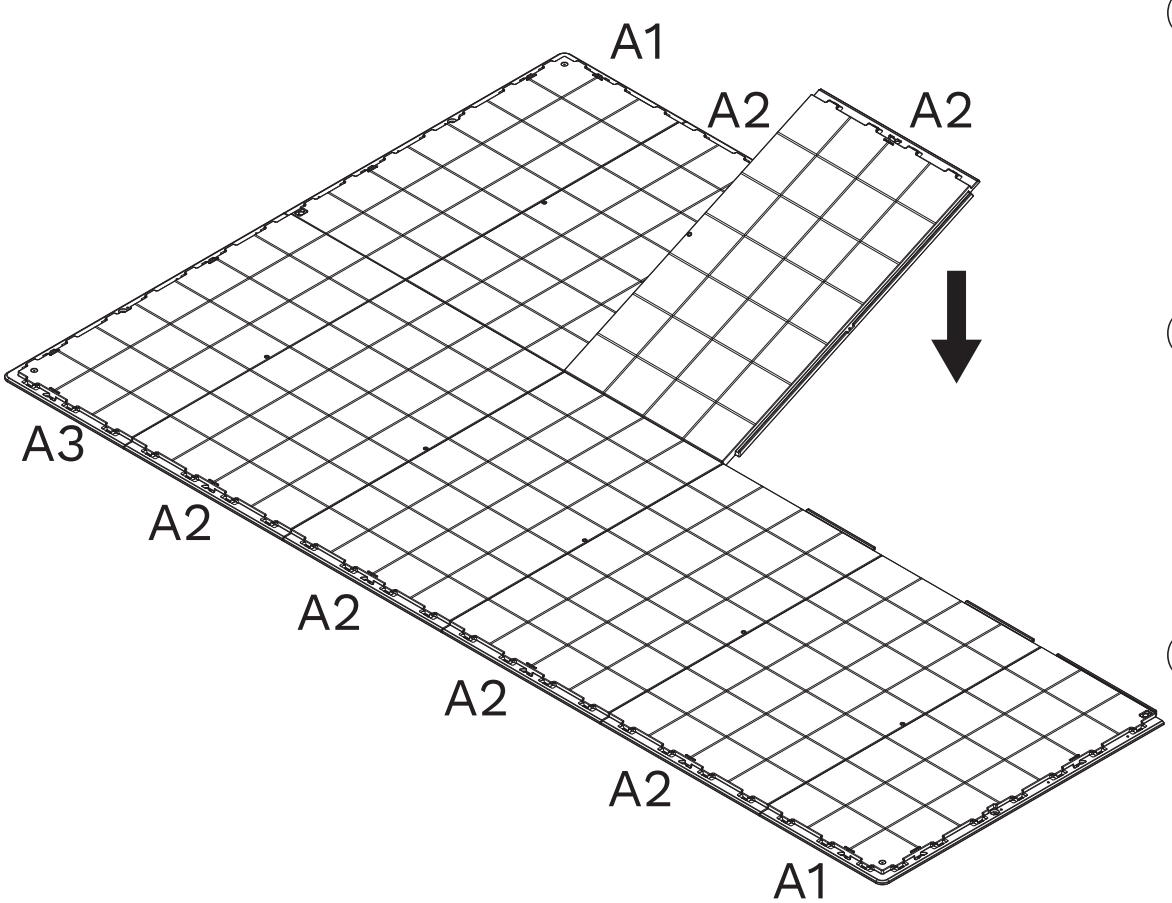


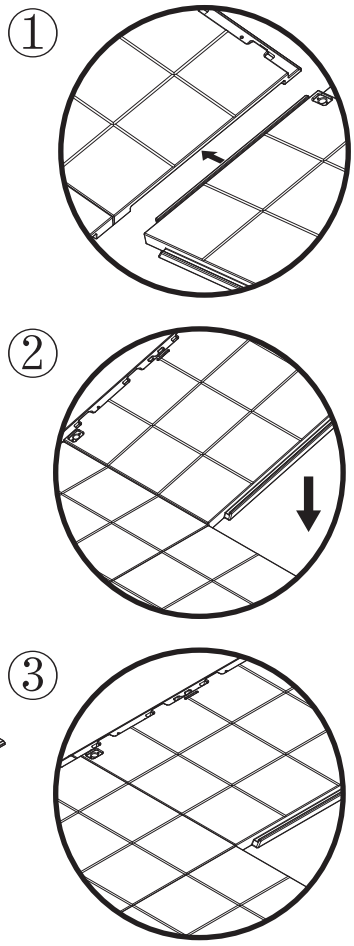


STEP 9

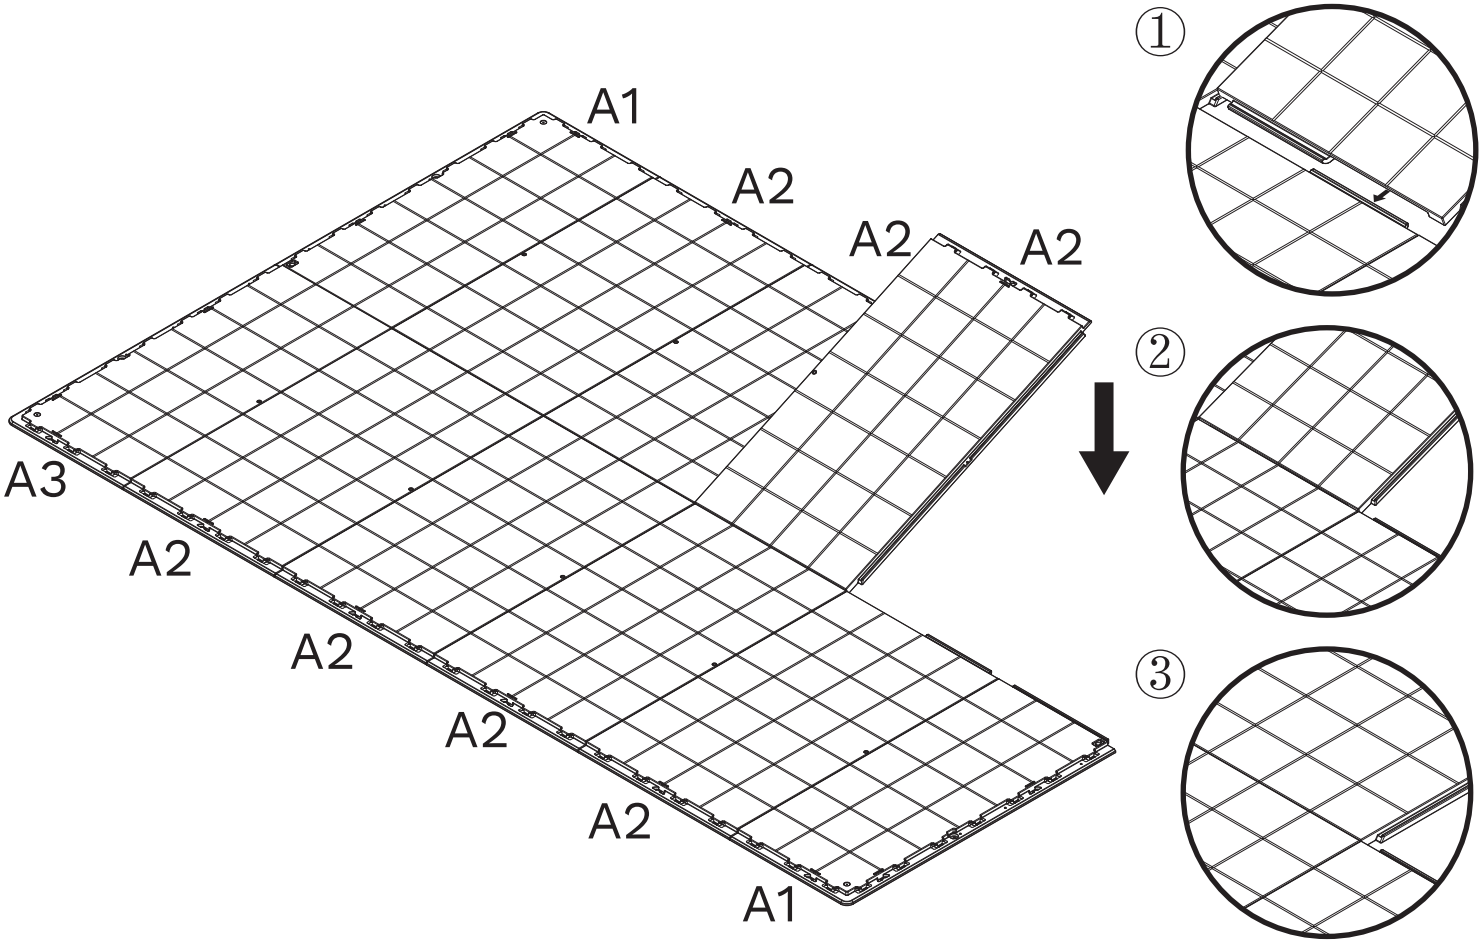


STEP 10

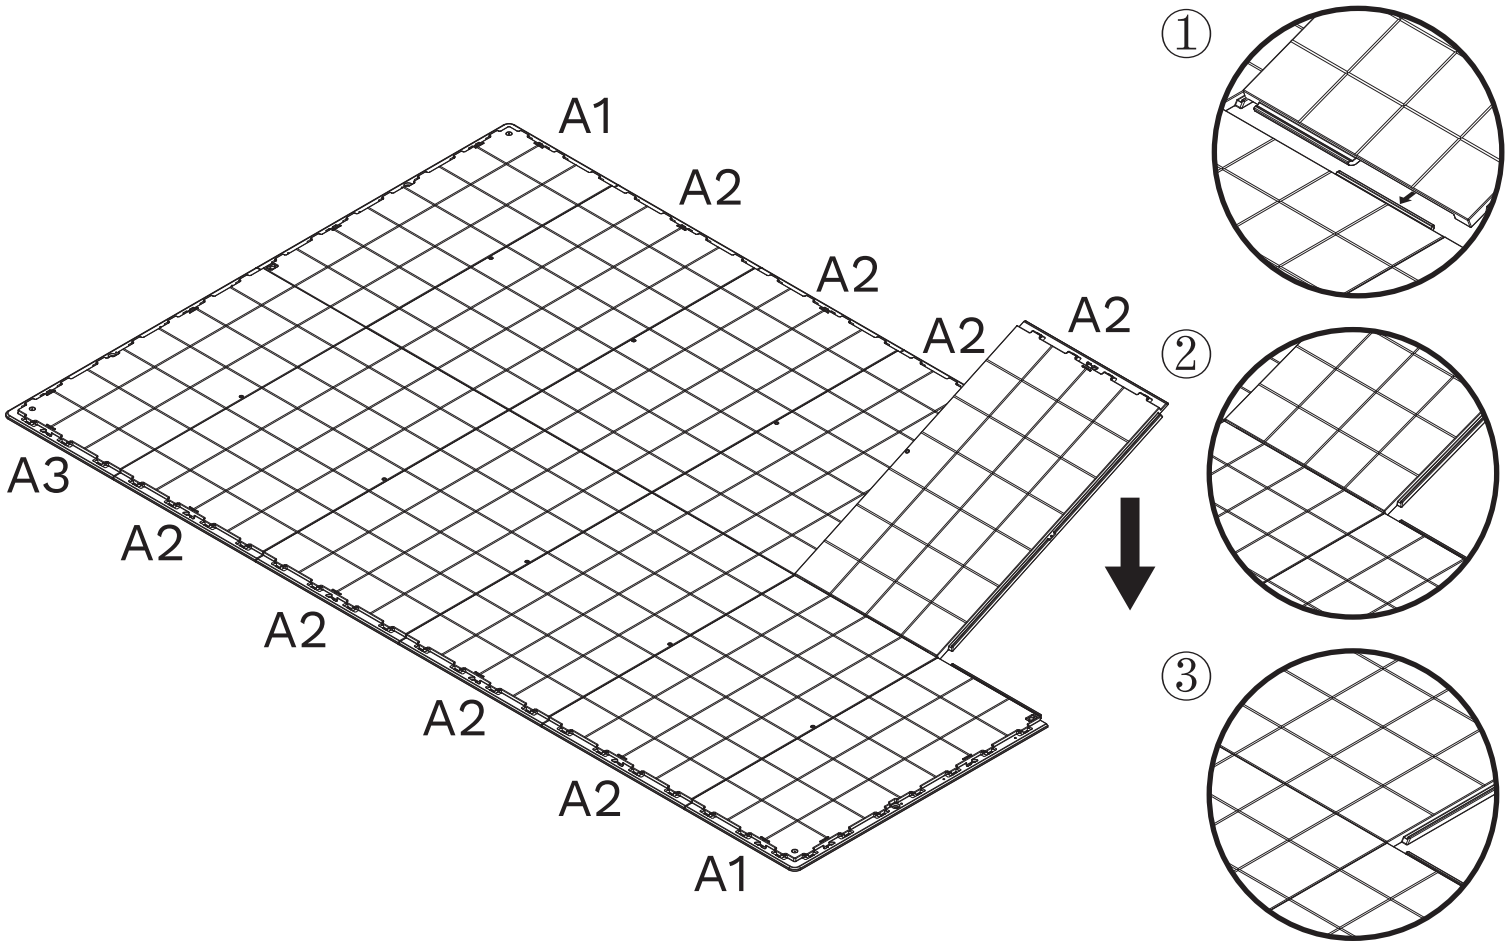


STEP 11

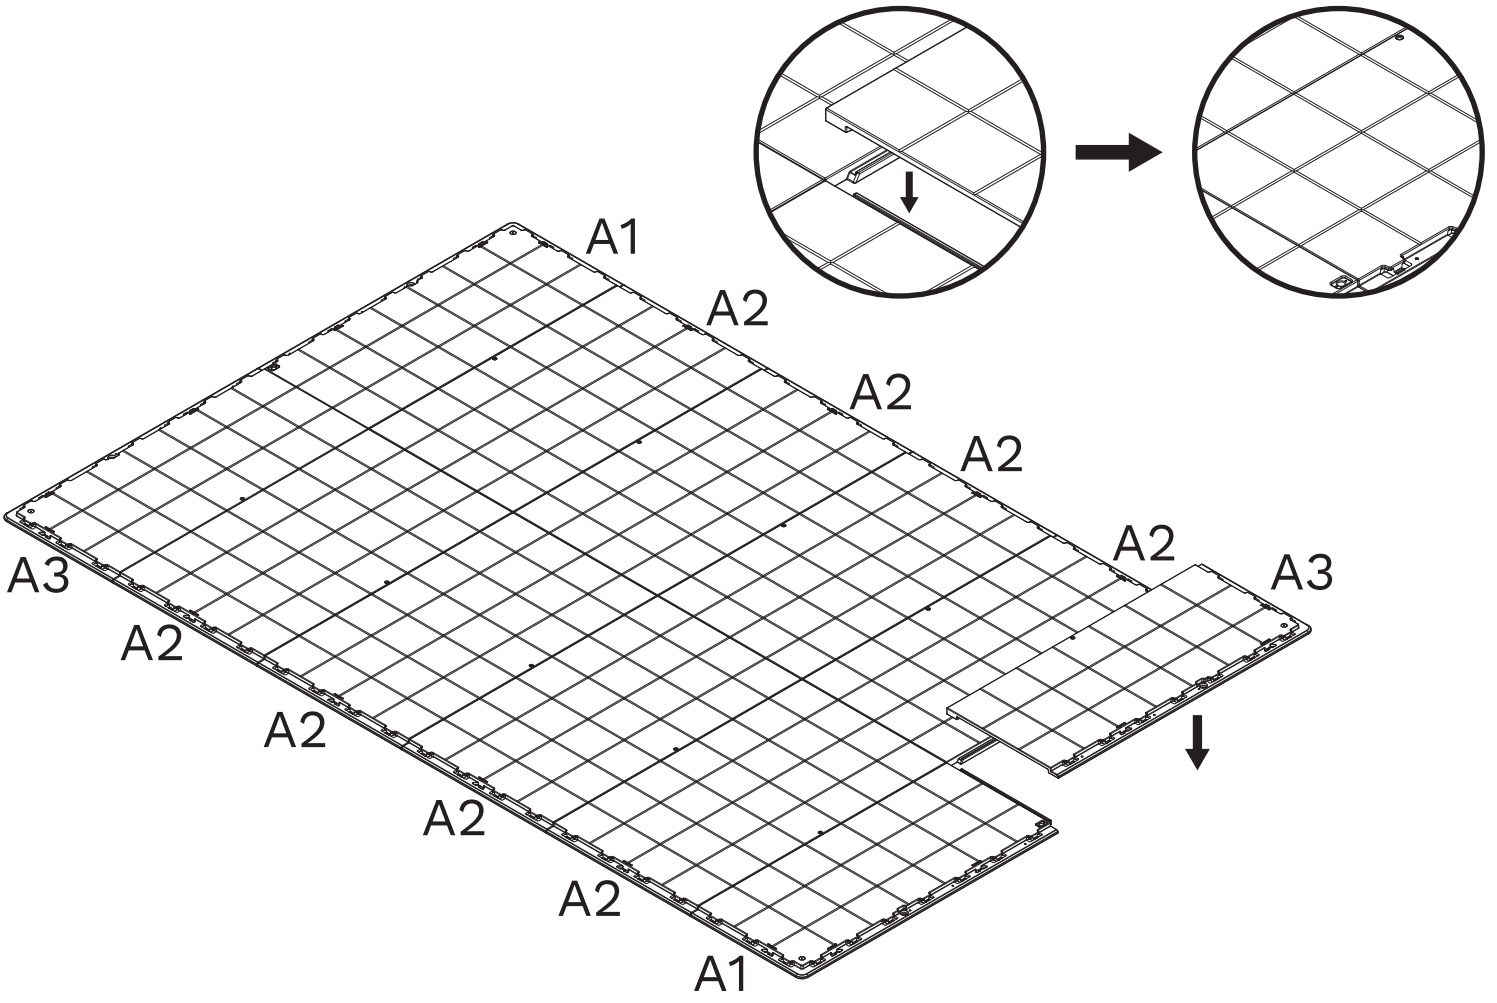

STEP 12

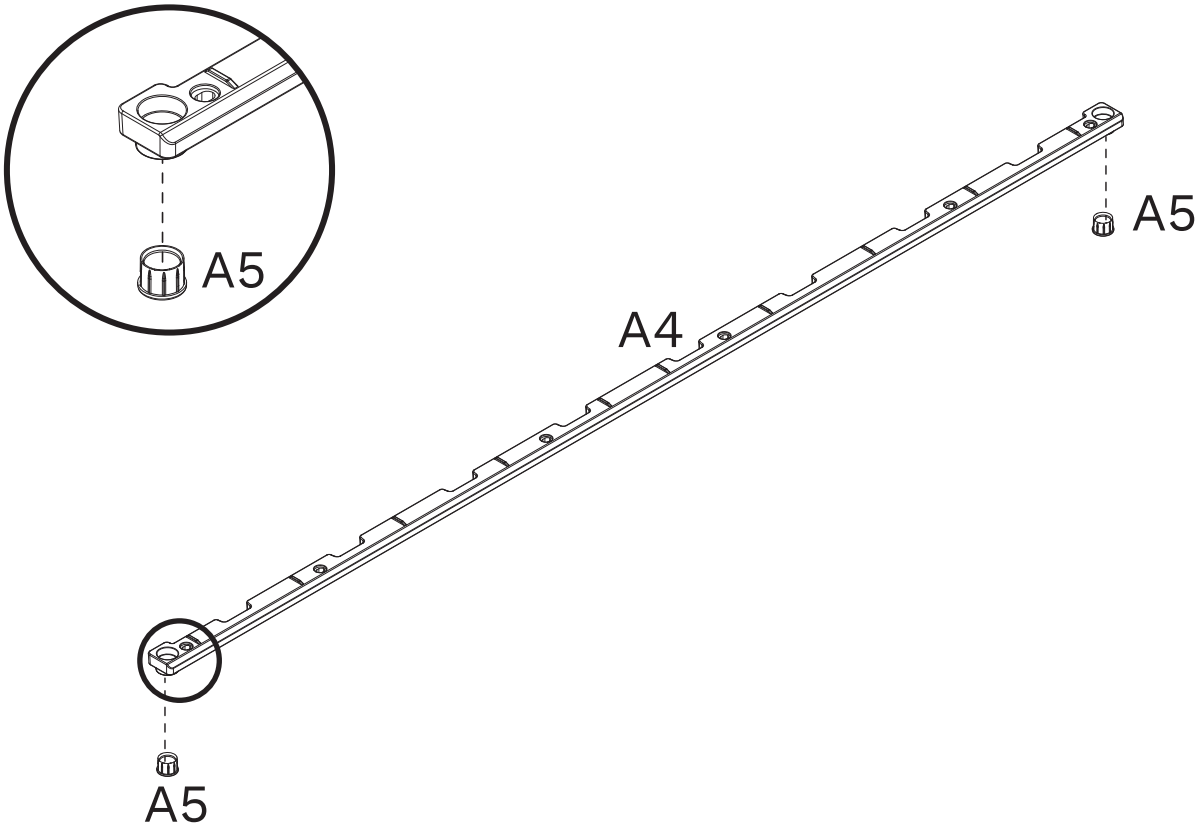


STEP 13

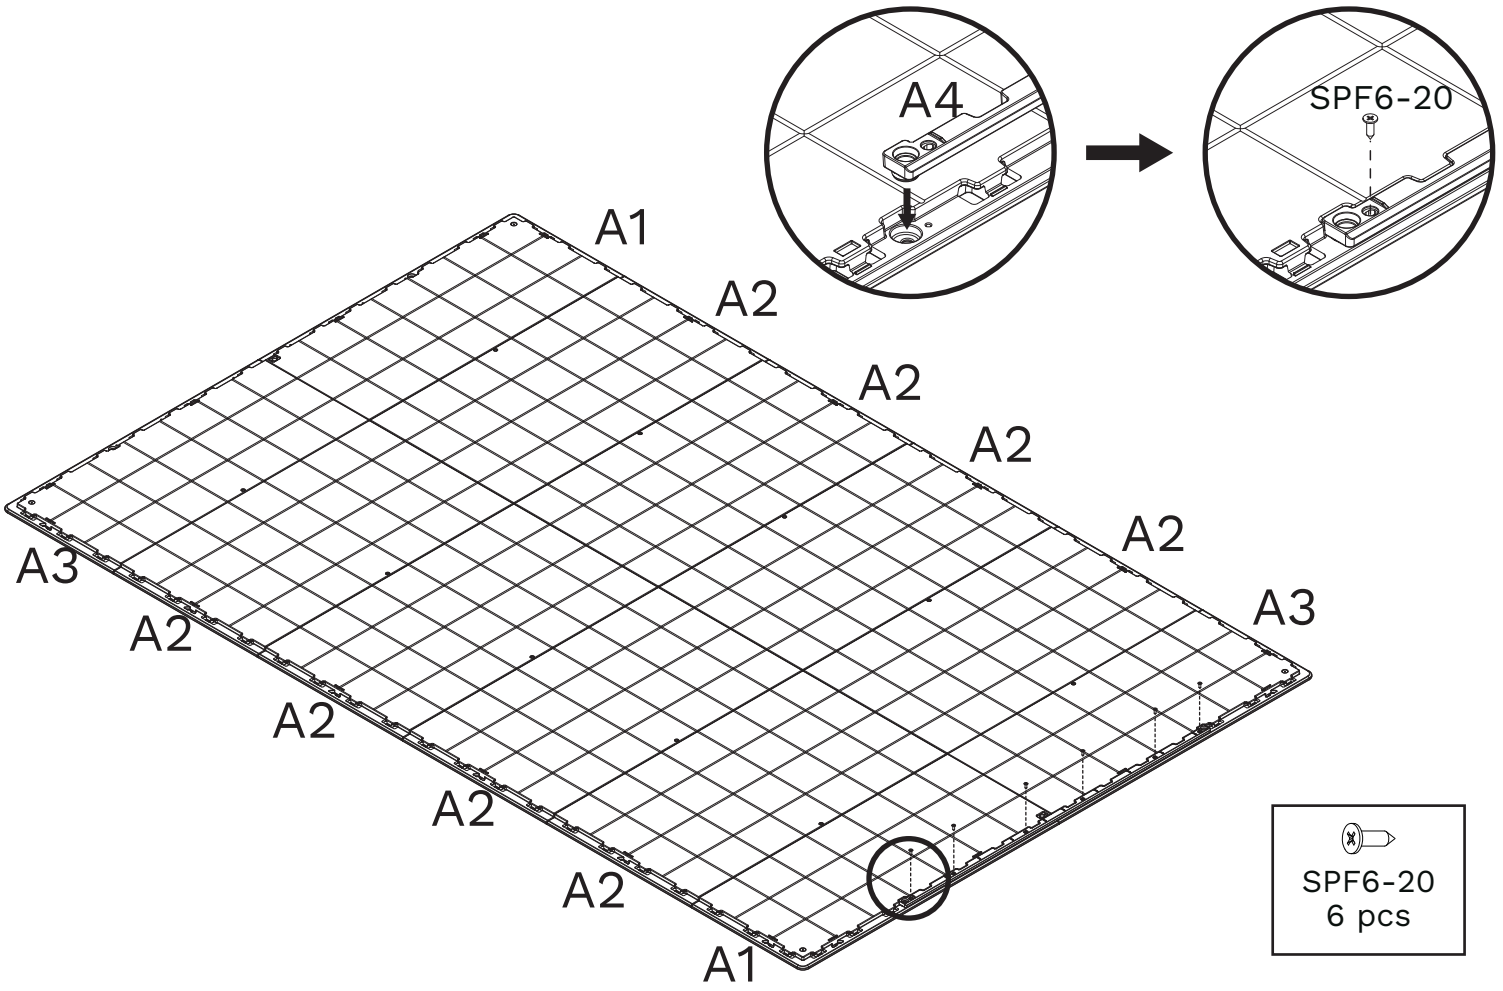


SPF6-20
6 pcs

STEP 14

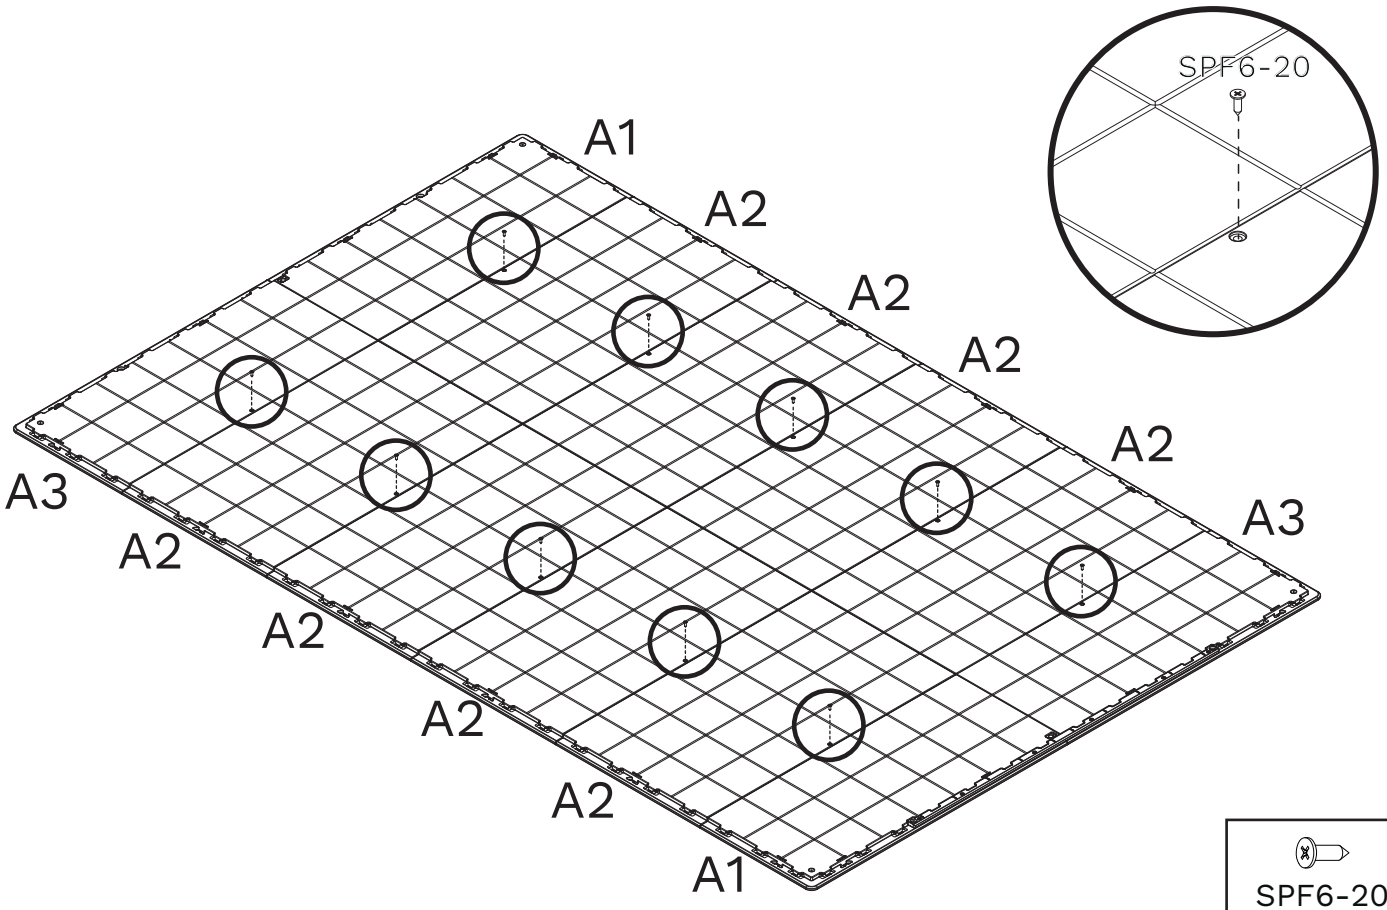



SPF6-20
10 pcs


STEP 15

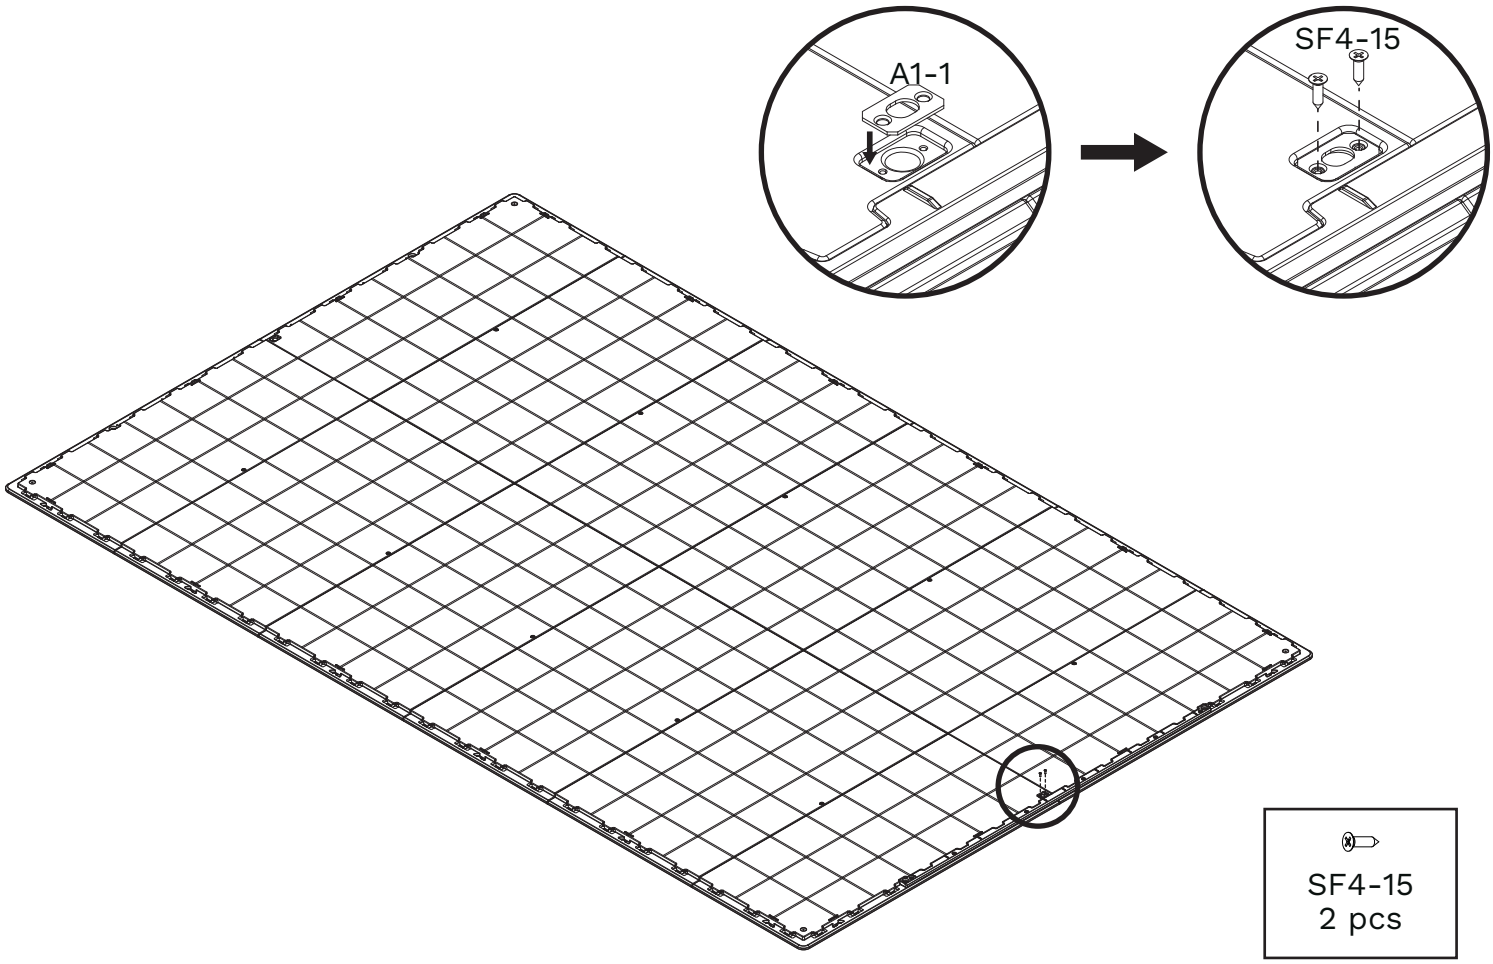


STEP 16

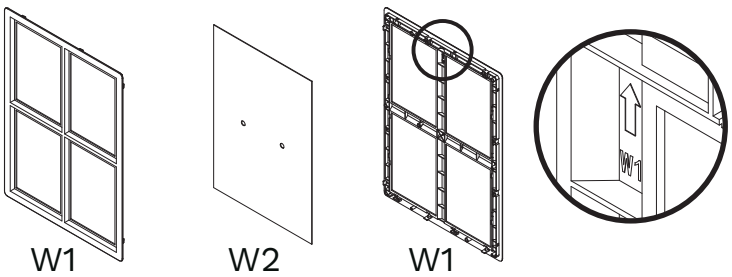


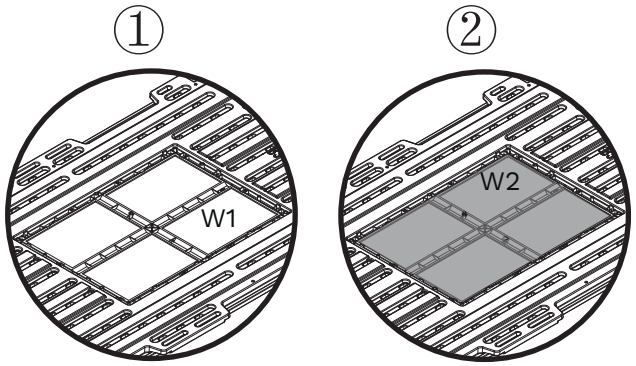

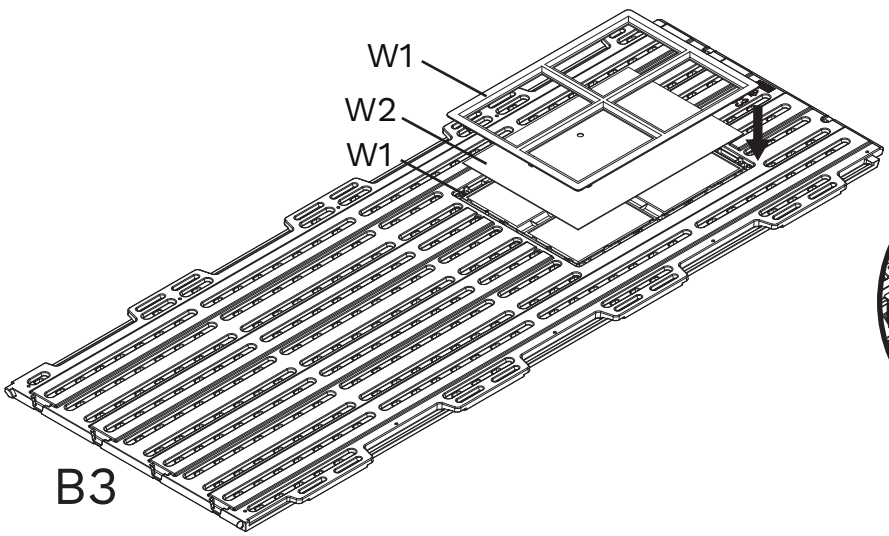

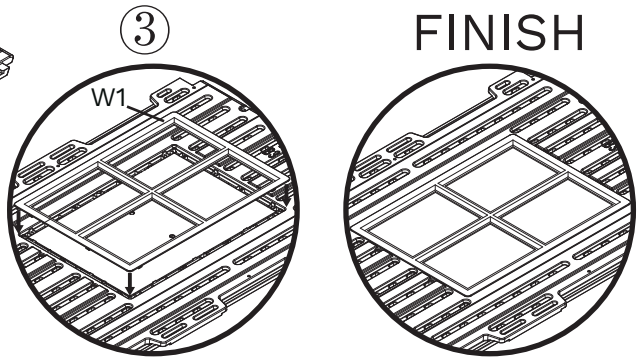


STEP 17

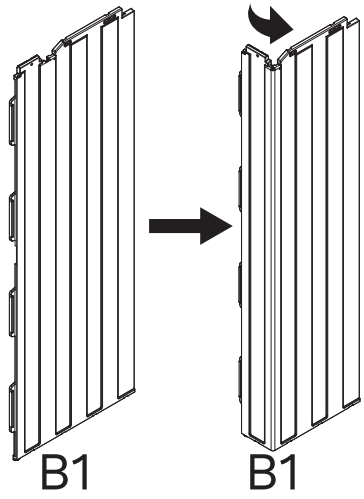


Before installation, please watch the video. Please follow the installation details in the video to avoid product damage.

First pre-fold B1, B1 placed in a U-shaped groove on the floor, bend 90 degrees after alignment.

(When installing B1, press on the top of B1 so that the clips below B1 are flush with the floor clips.You can use your foot to kick B1 flat.)

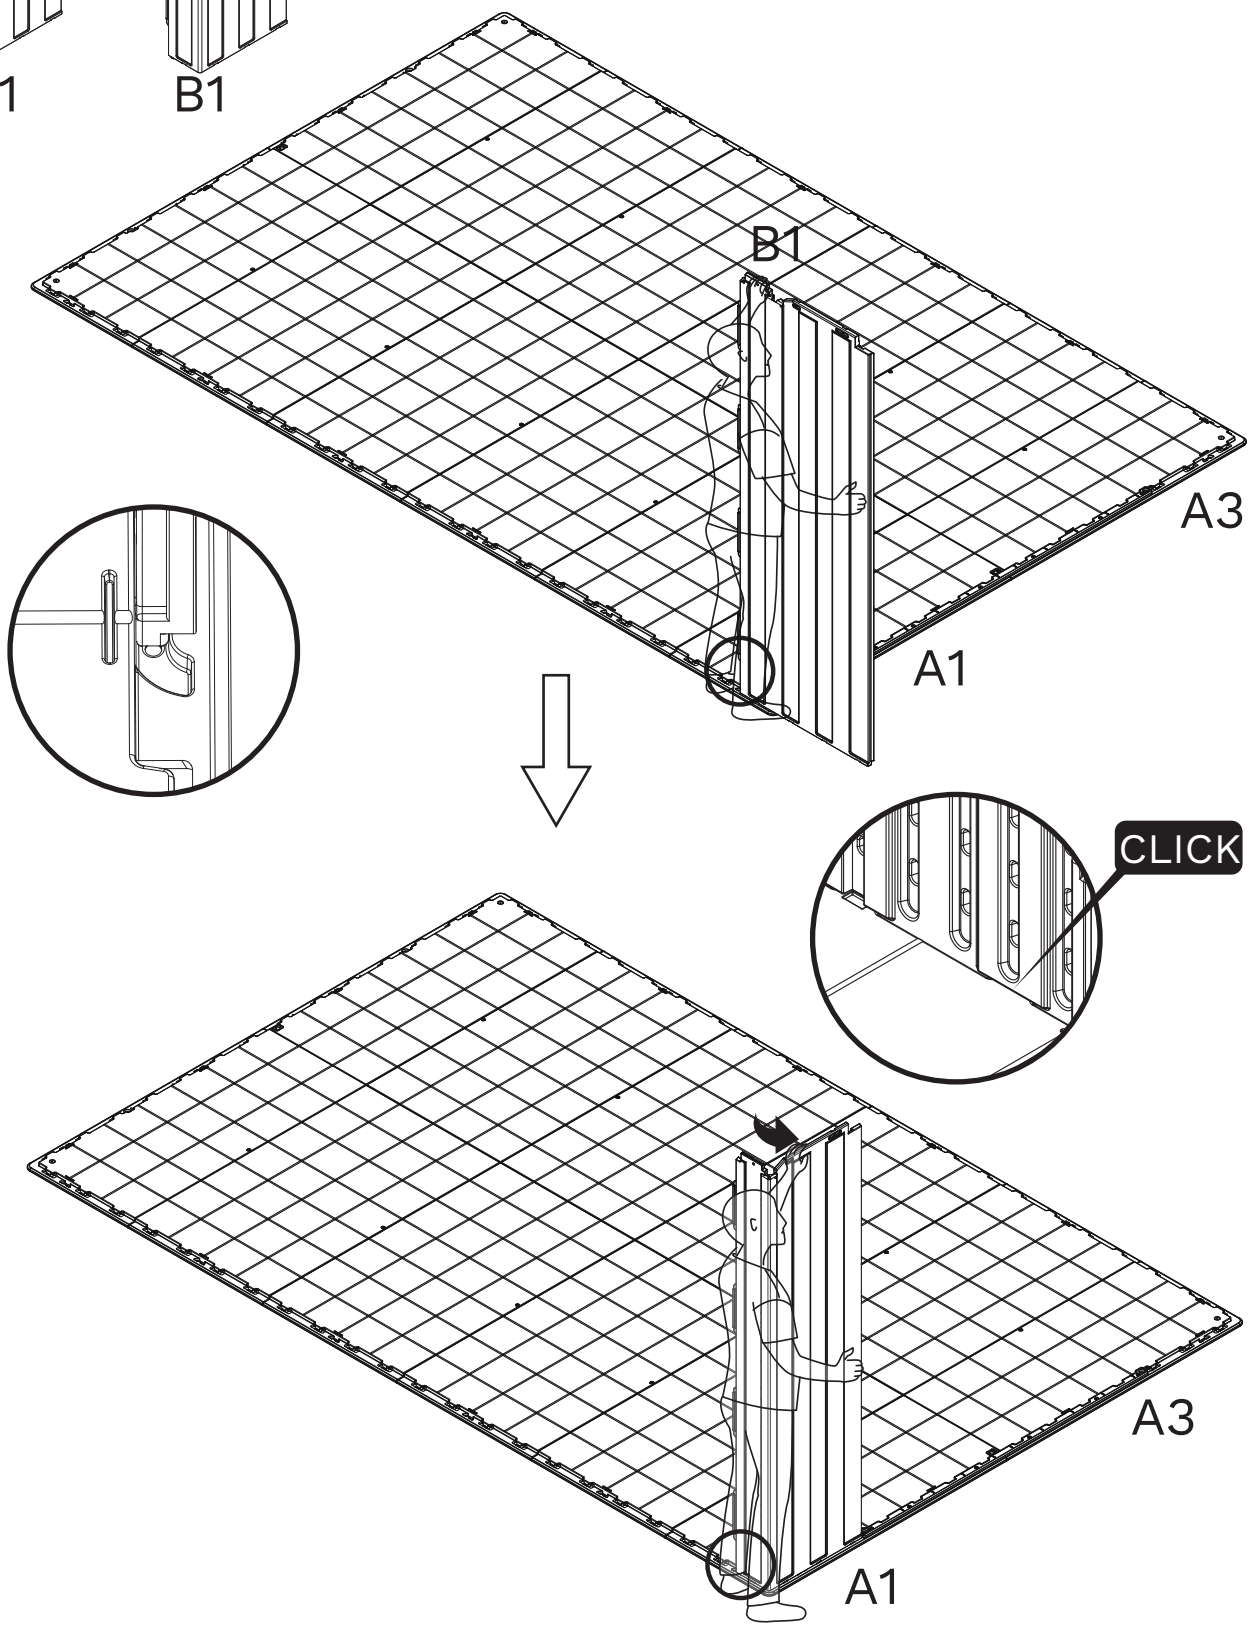


STEP 18

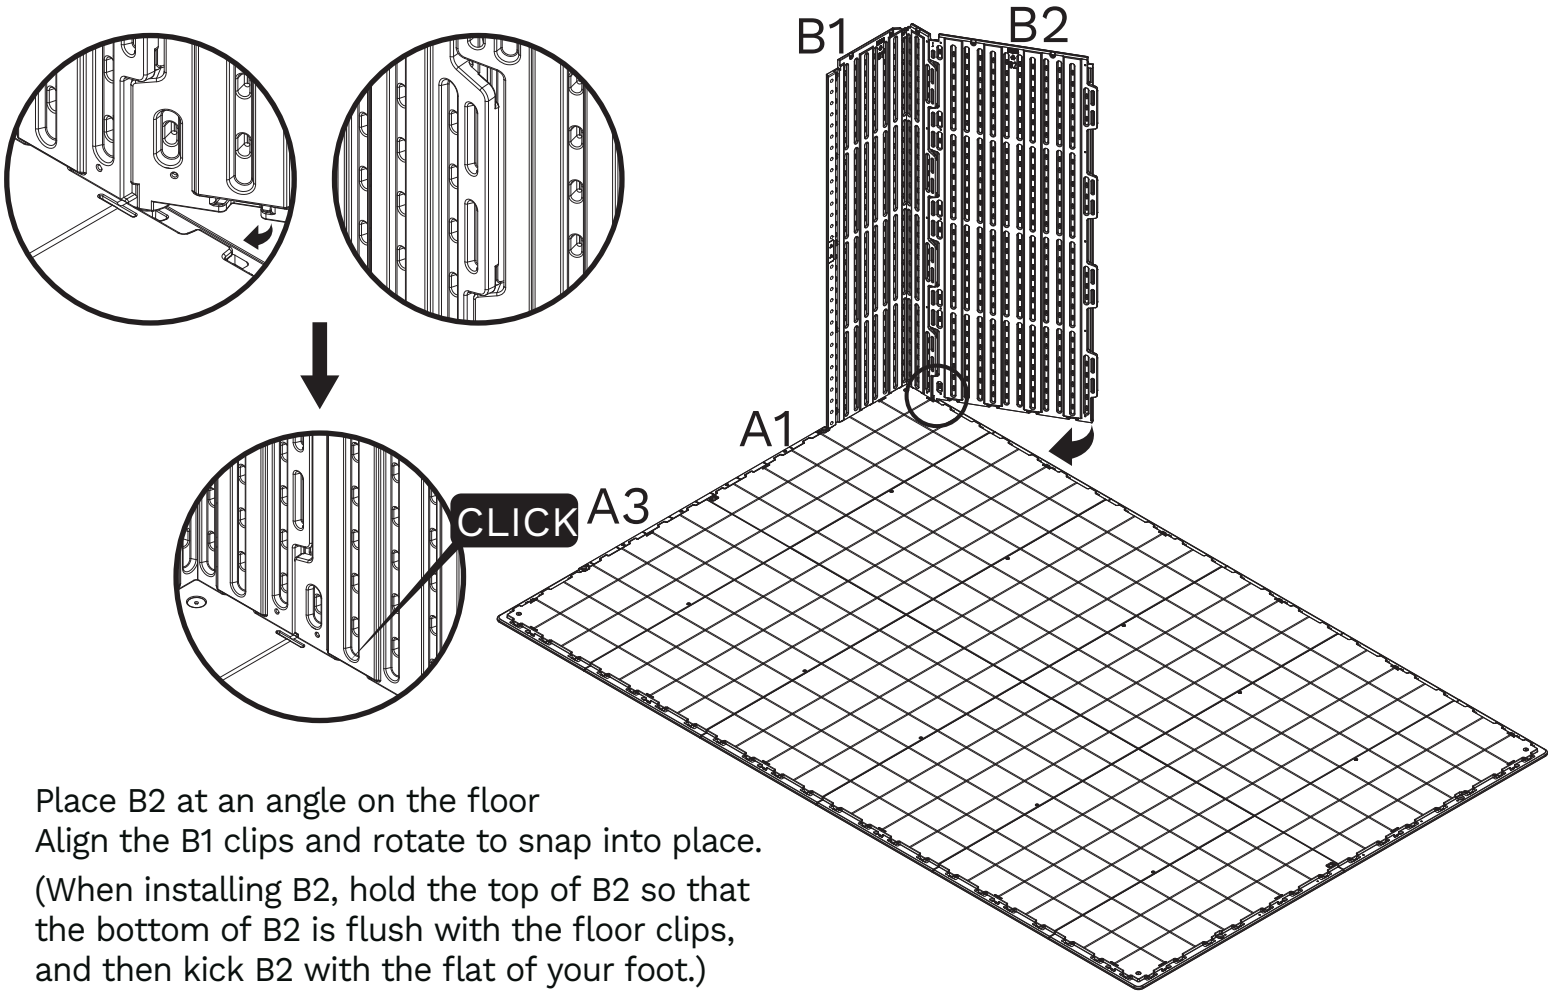


Place B2 at an angle on the floor
Align the B1 clips and rotate to snap into place.
(When installing B2, hold the top of B2 so that the bottom of B2 is flush with the floor clips, and then kick B2 with the flat of your foot.)

STEP 19


Refer to the STEP 18 installation procedure.

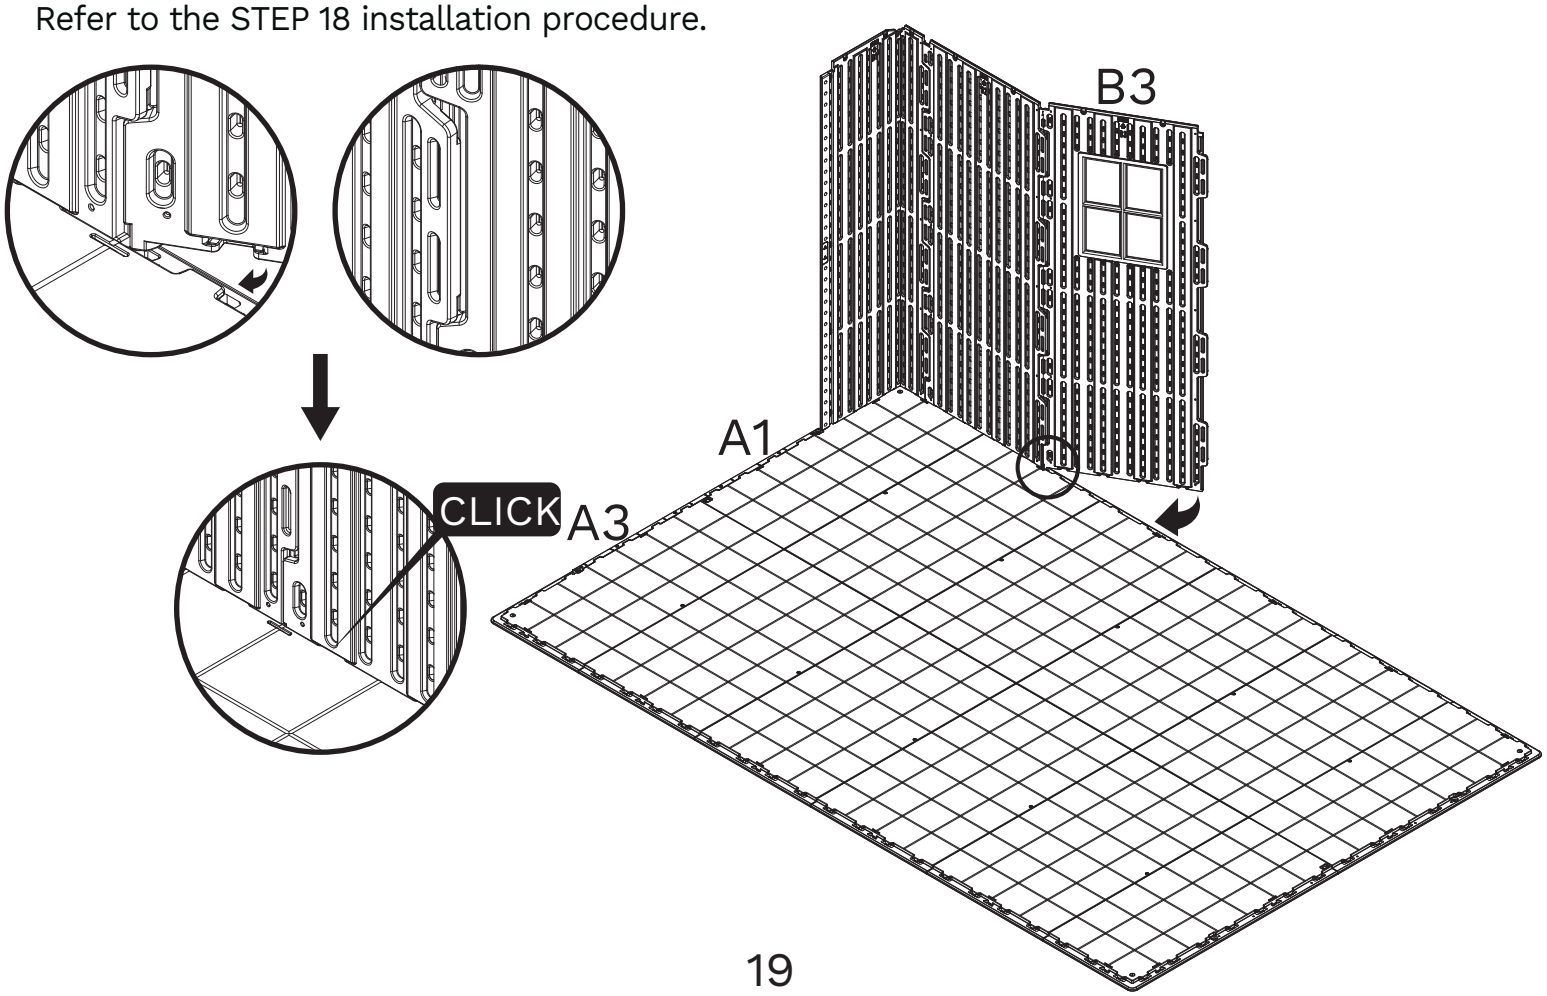


STEP 20

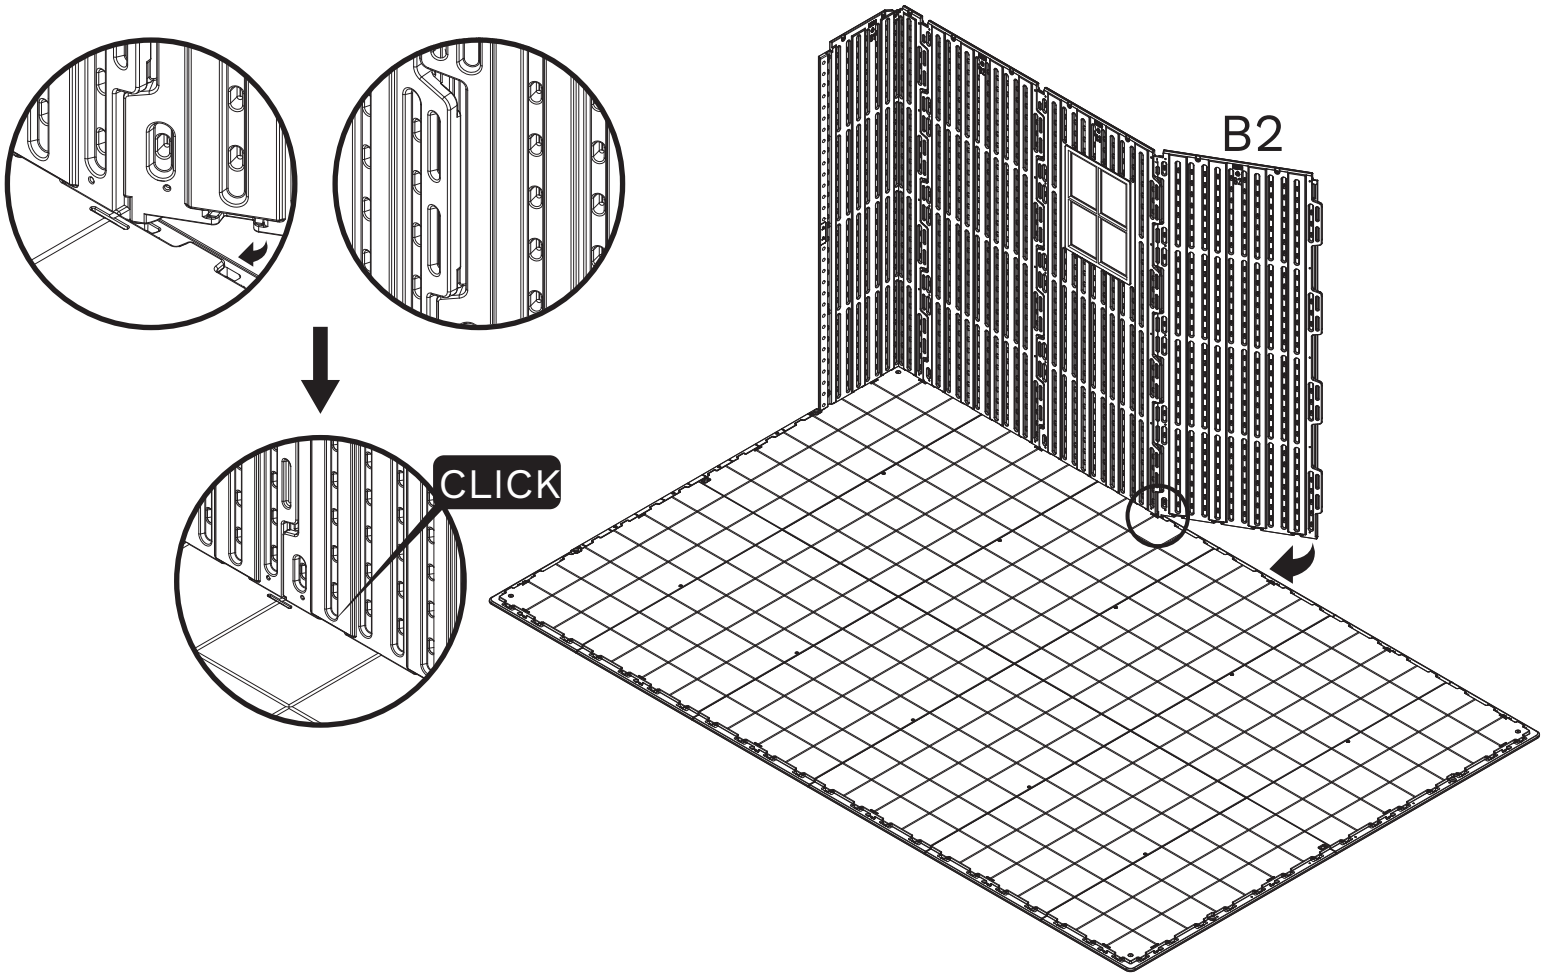


STEP 21

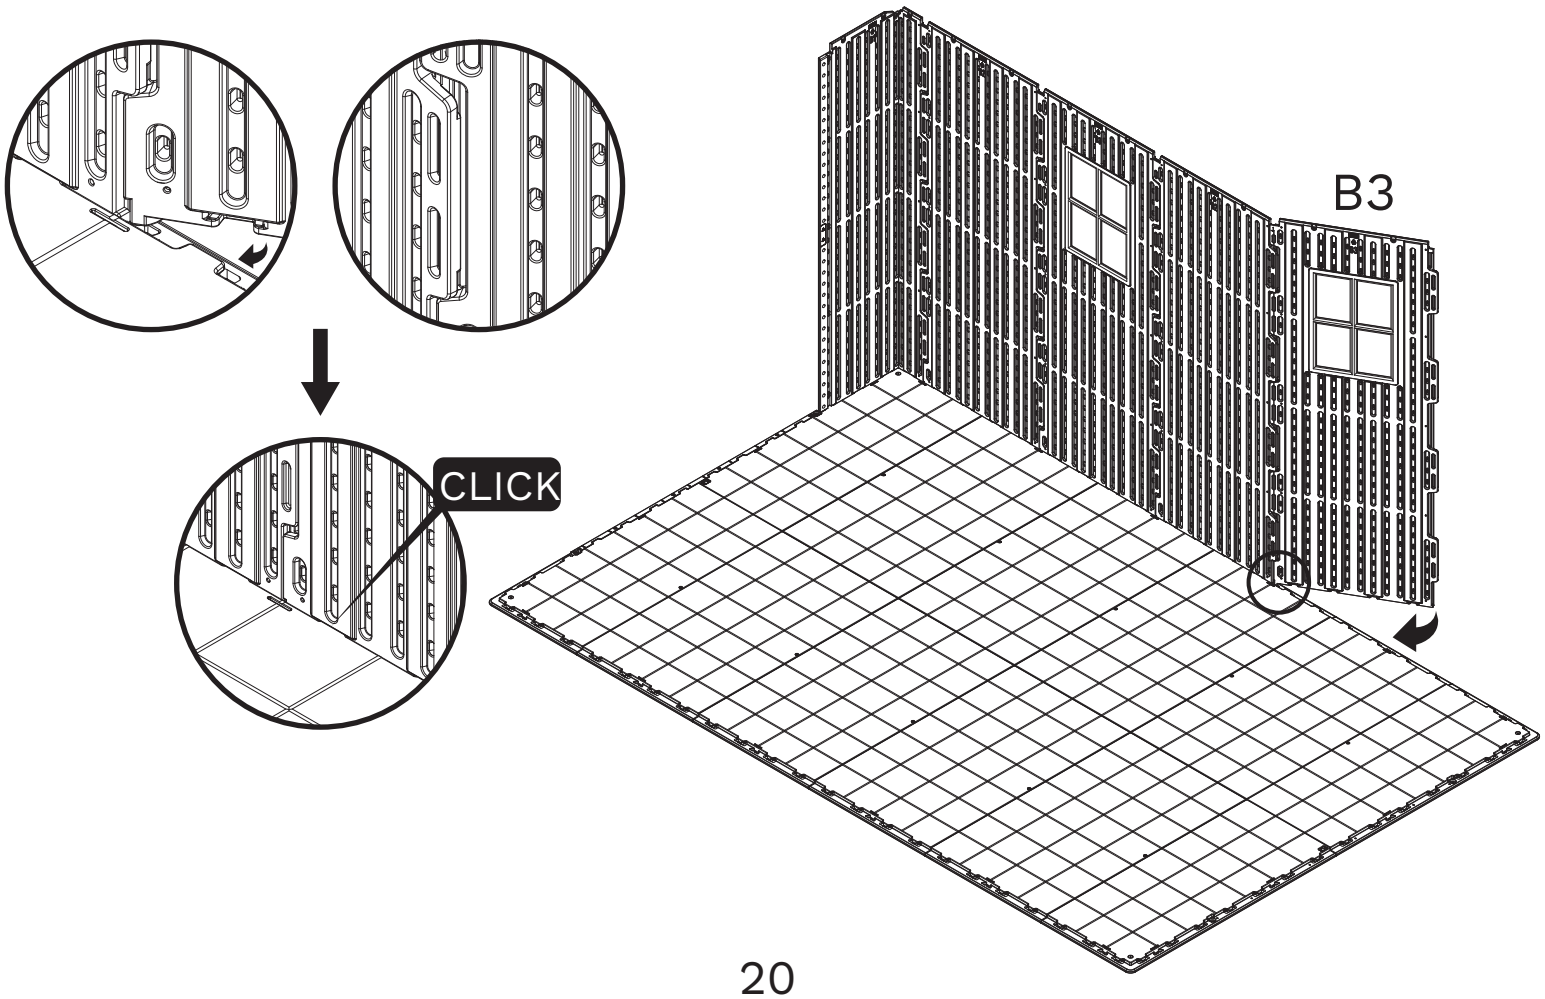


STEP 22

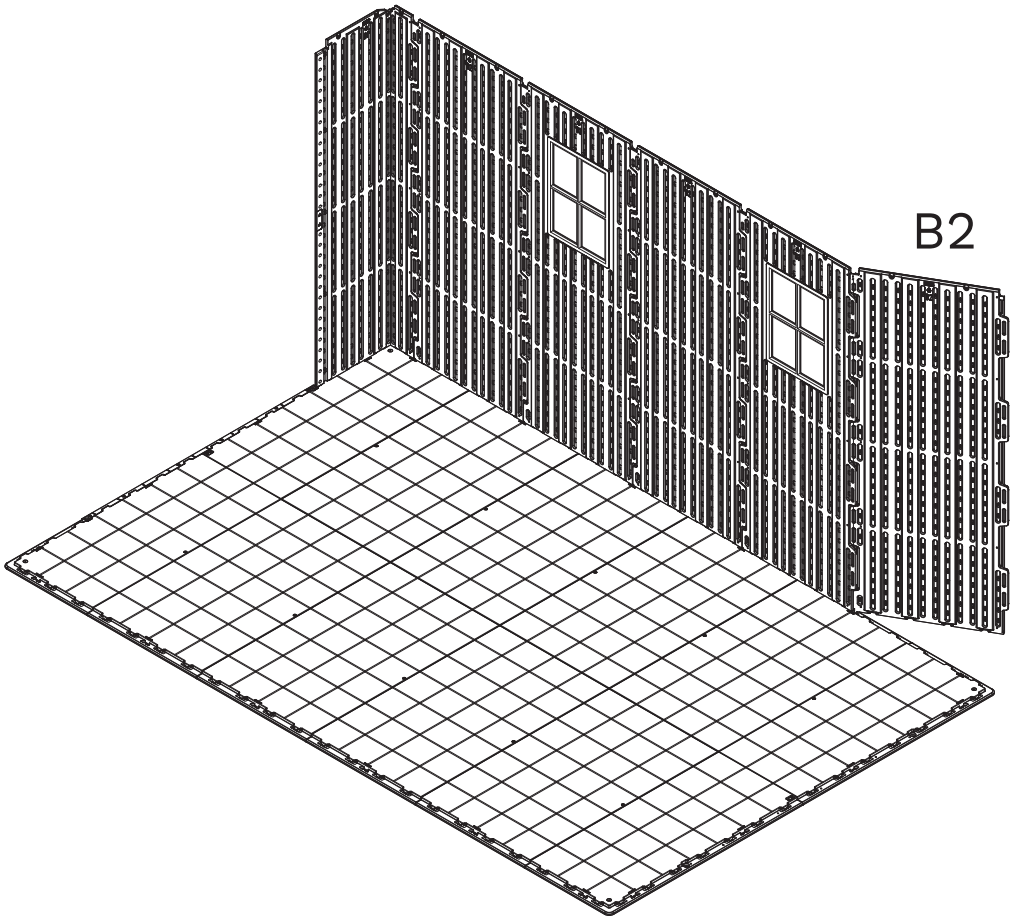


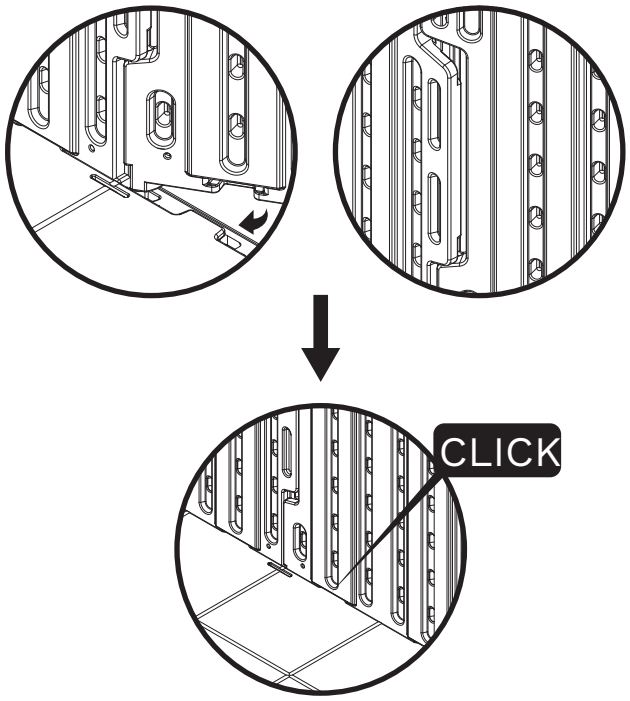



STEP 23

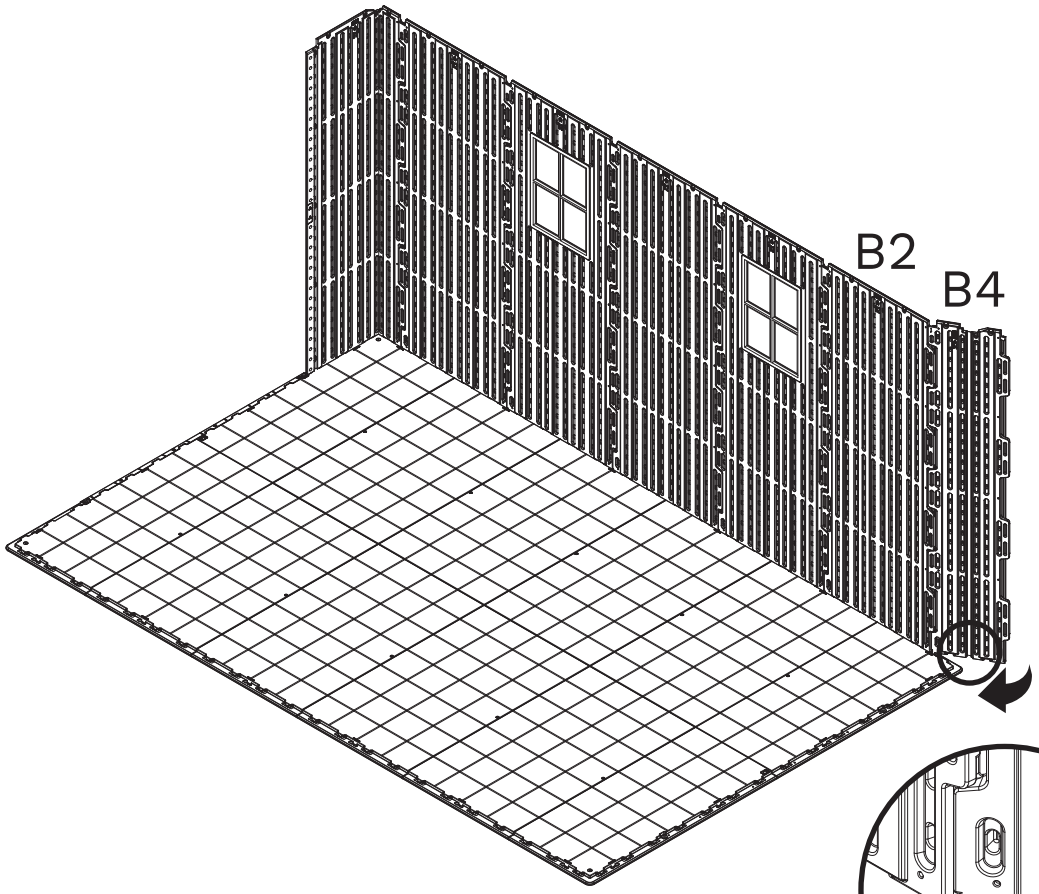



Pre-fold B4.

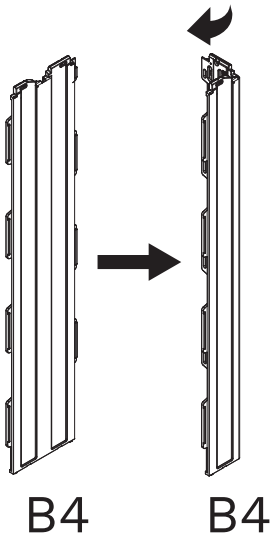

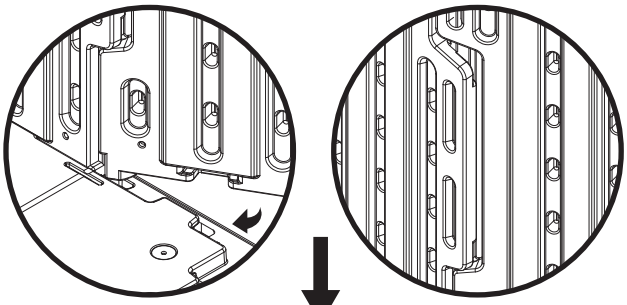


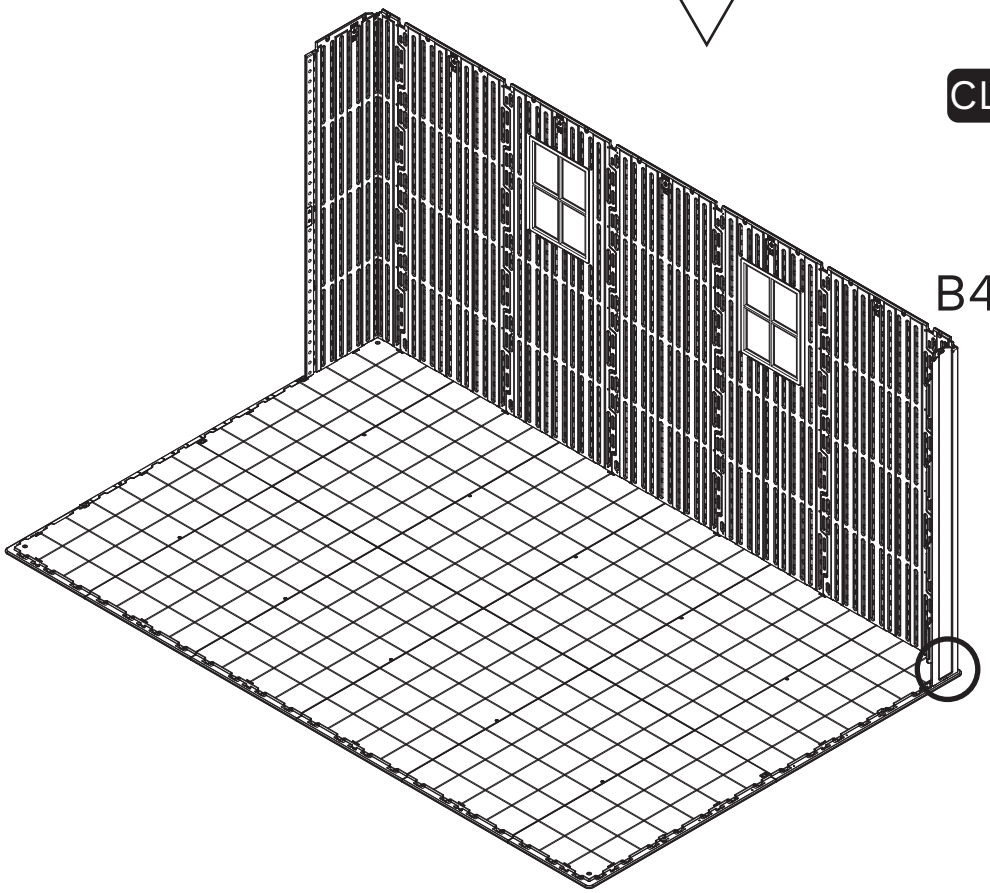

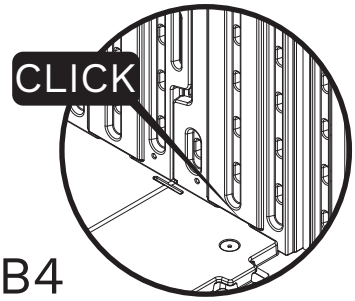


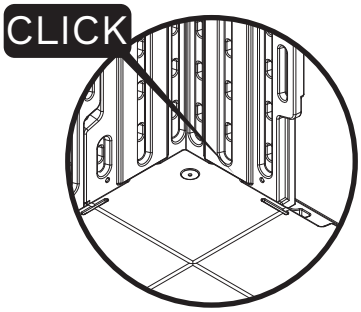


STEP 24

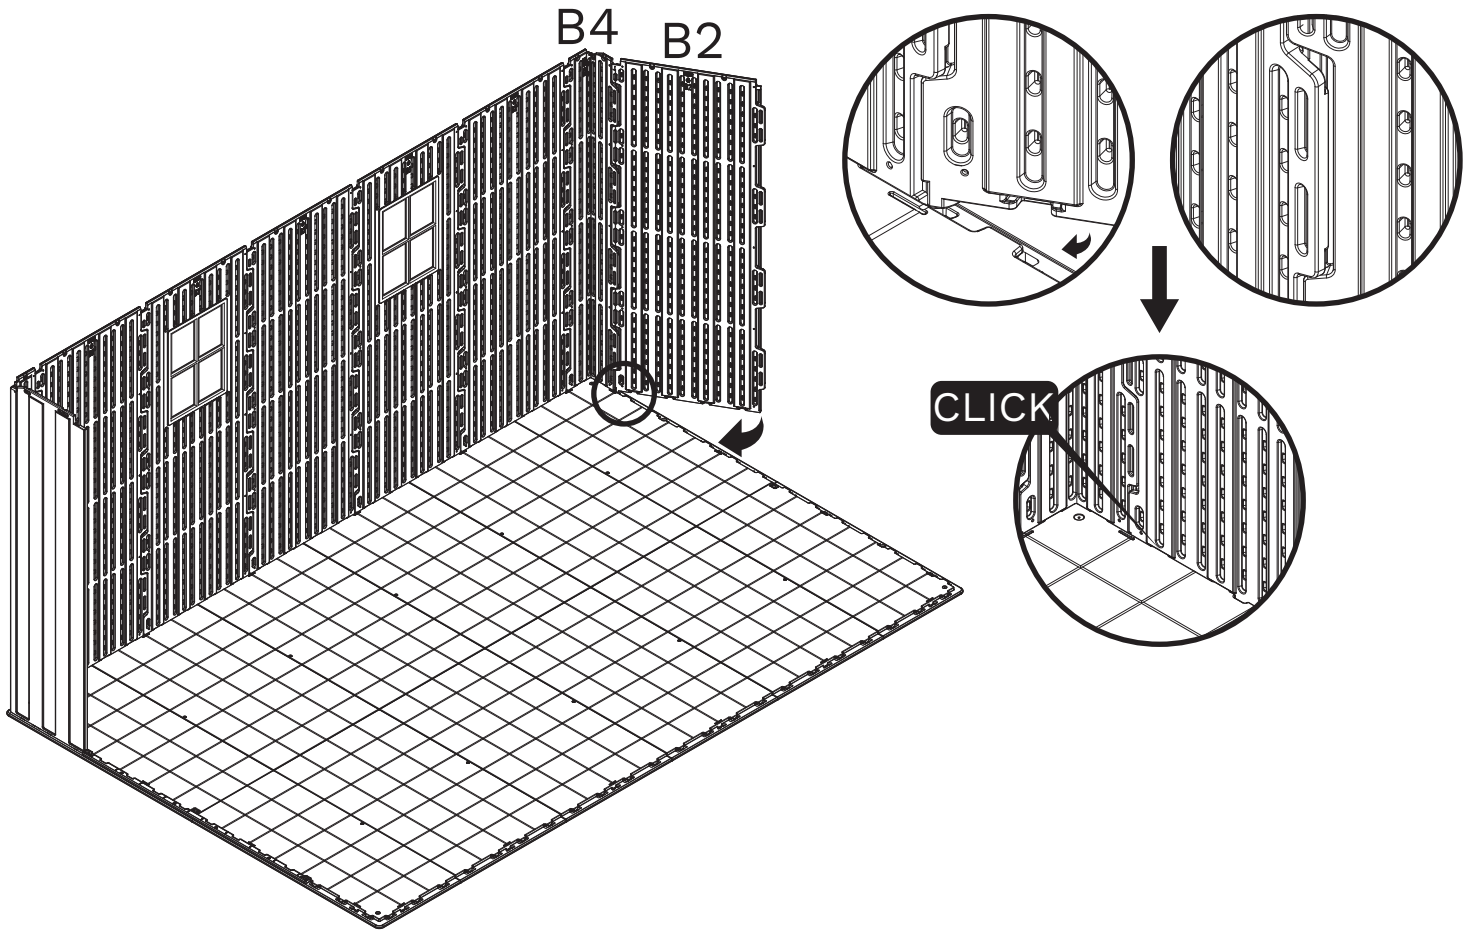


STEP 25

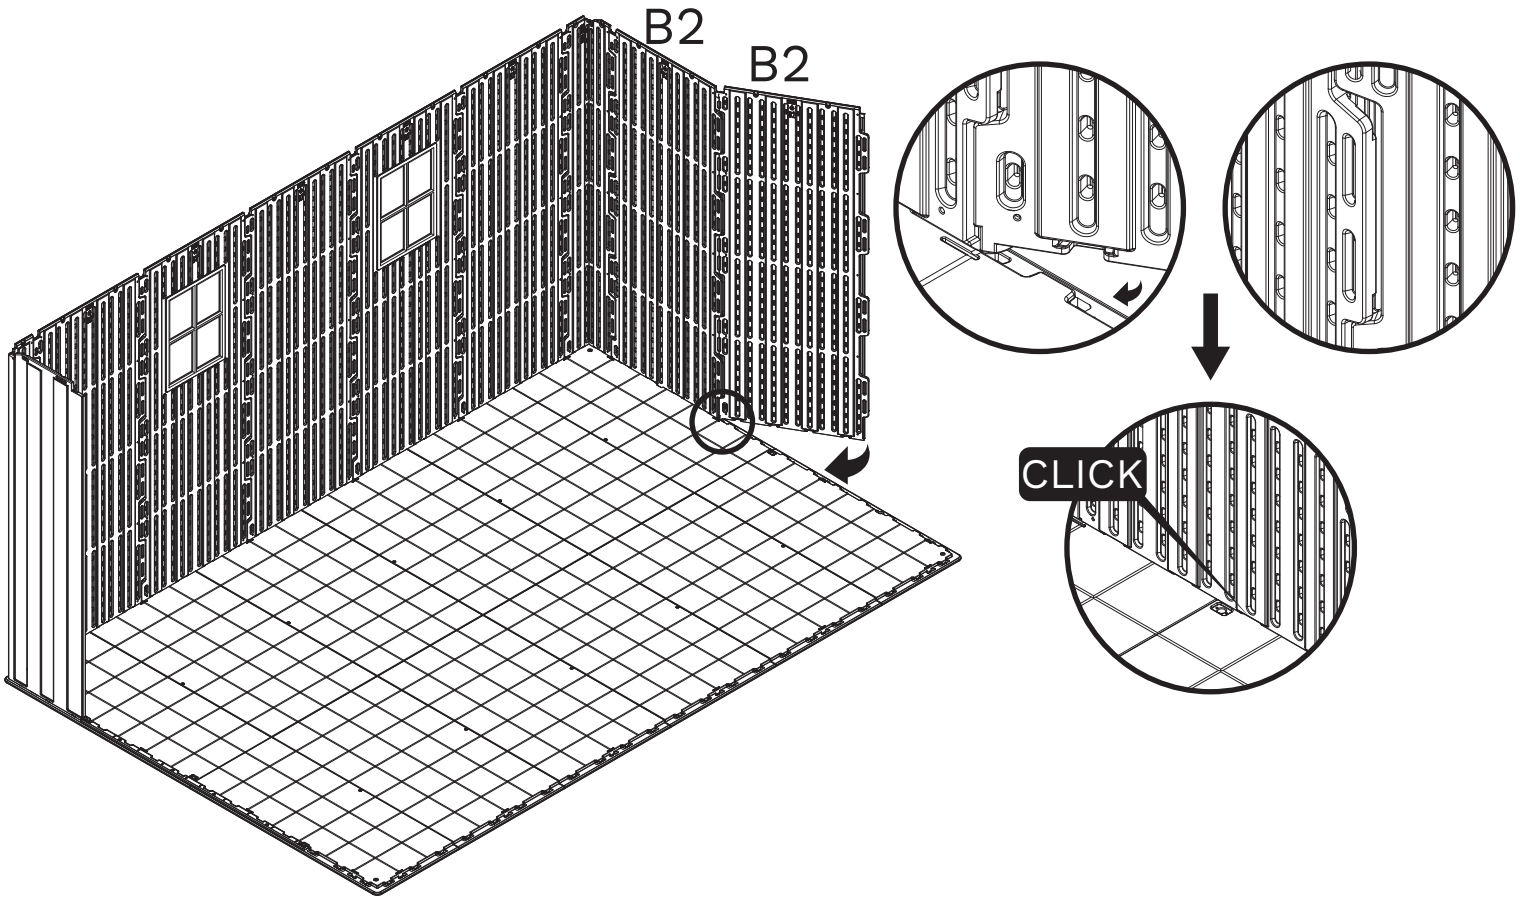



STEP 26

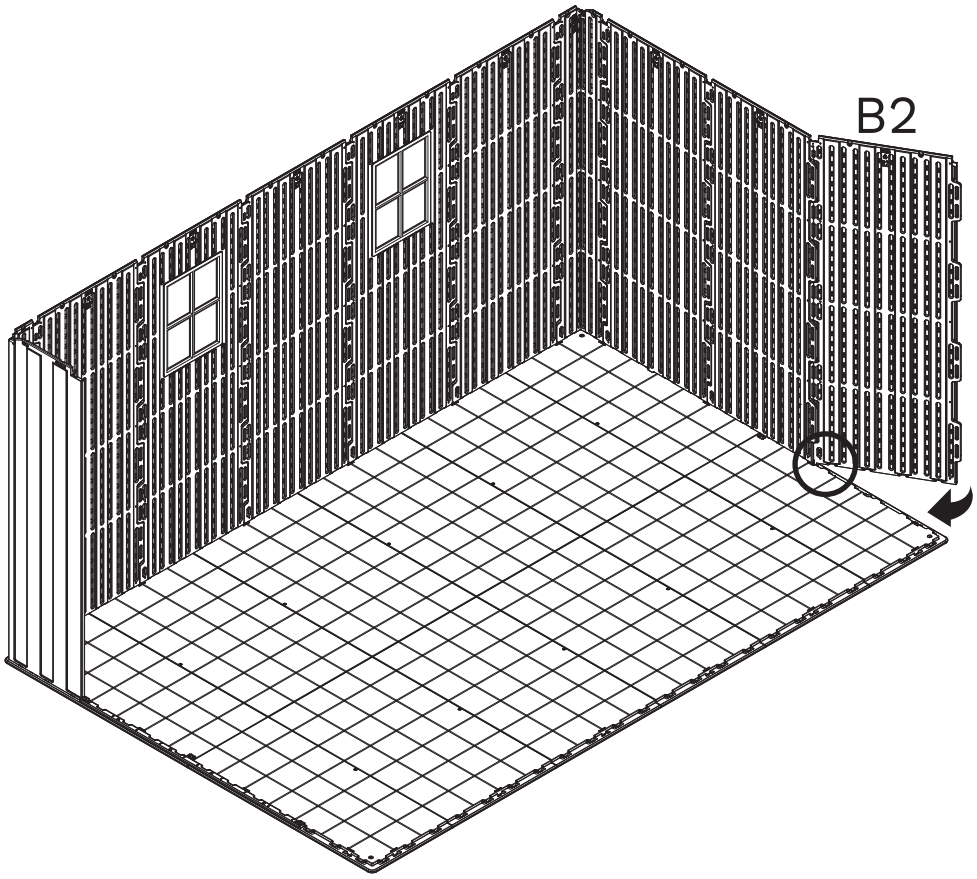


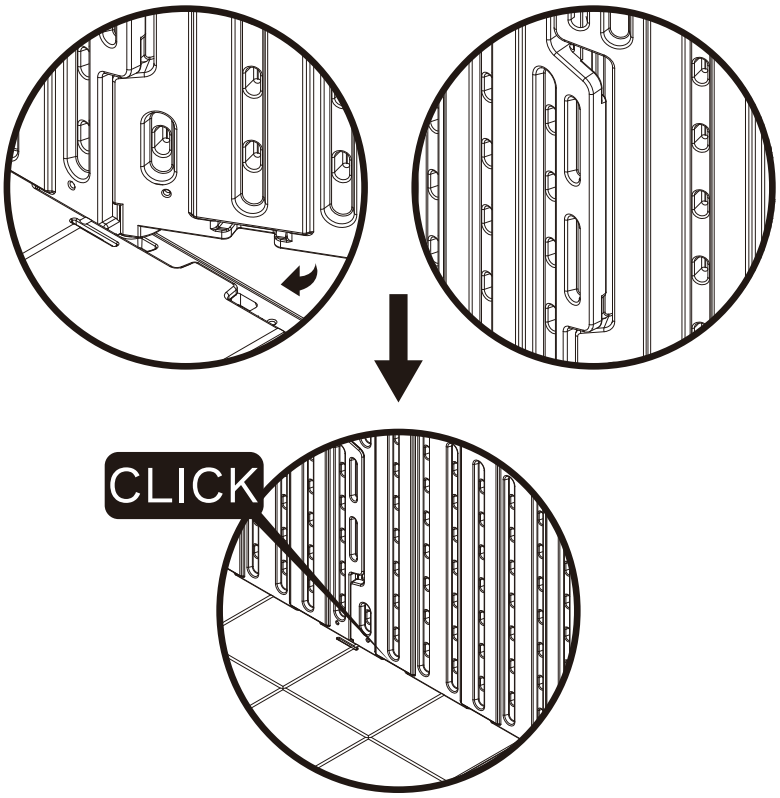



STEP 27

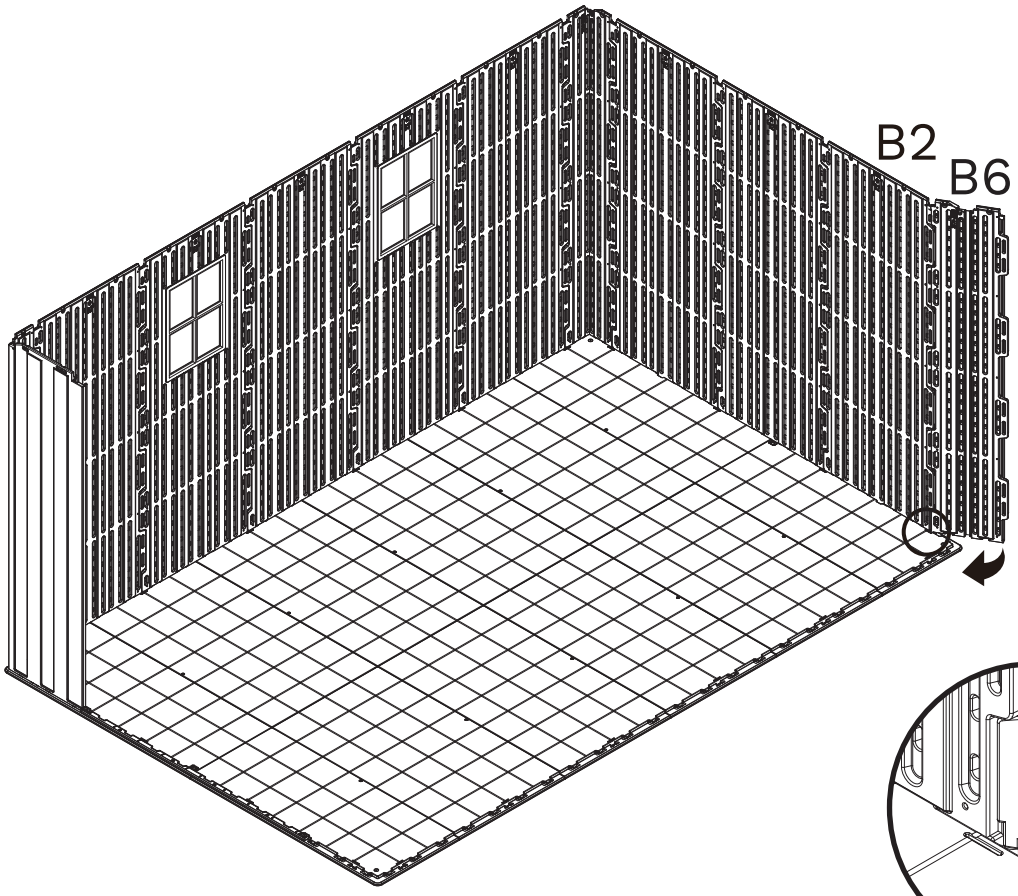


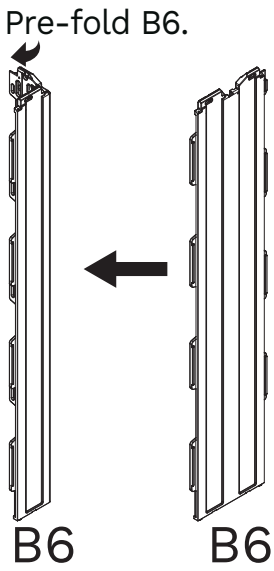

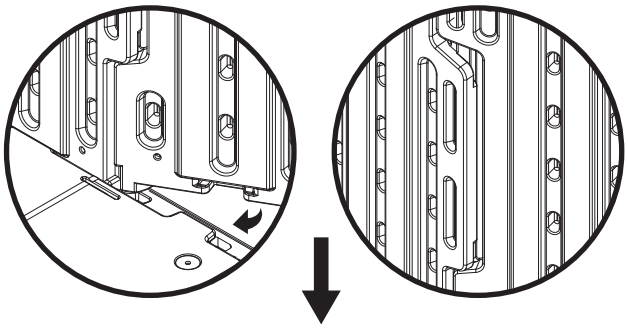


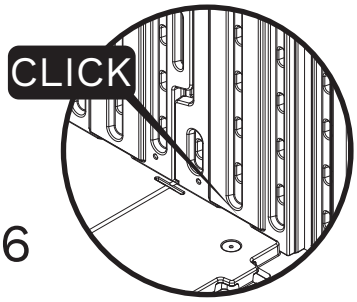

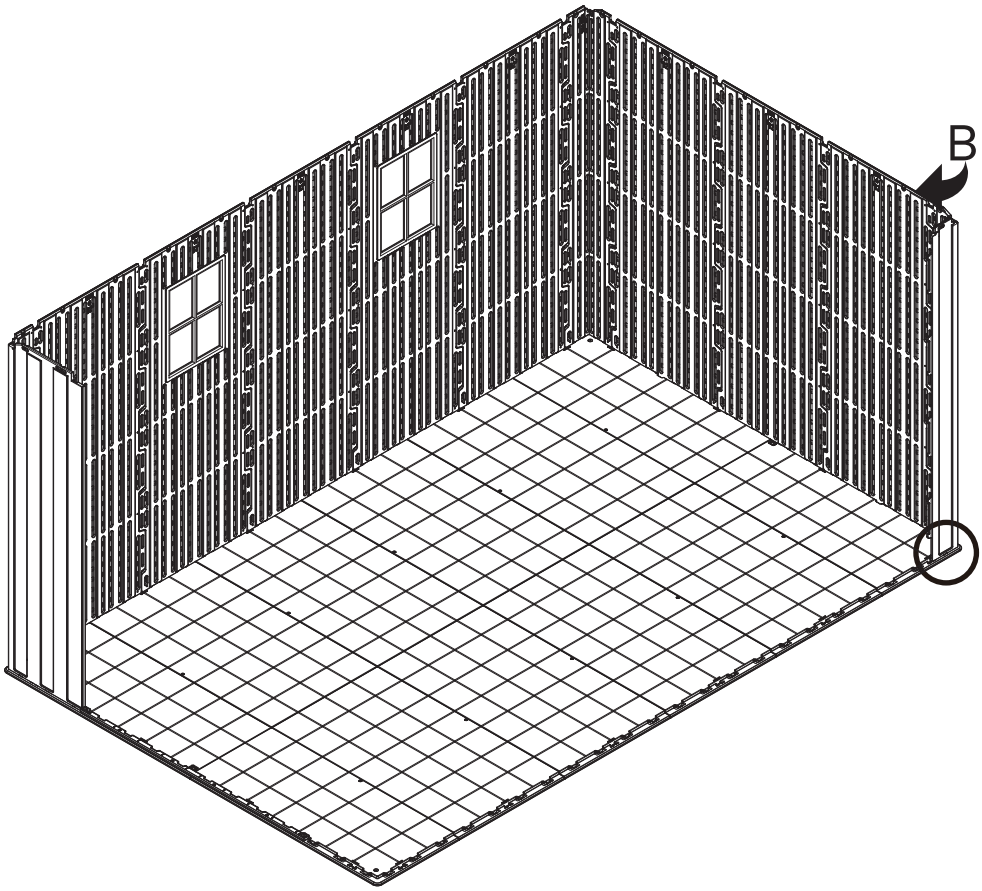


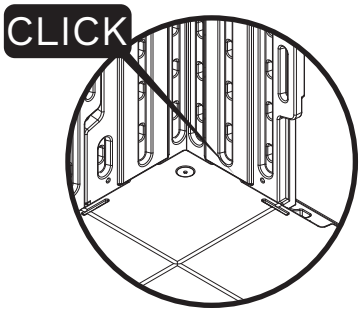


STEP 28

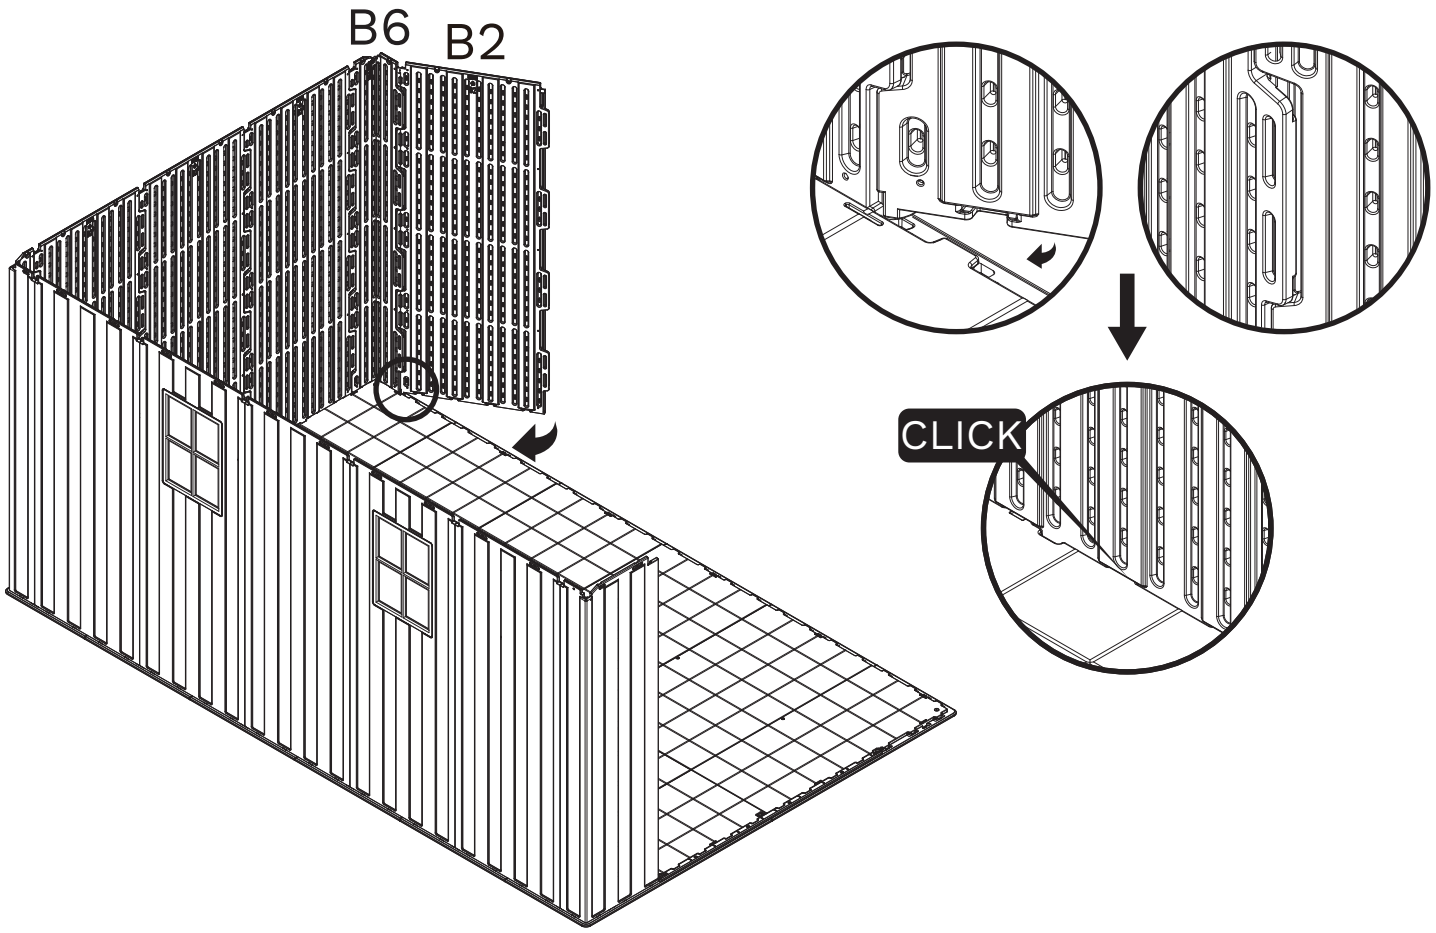


STEP 29

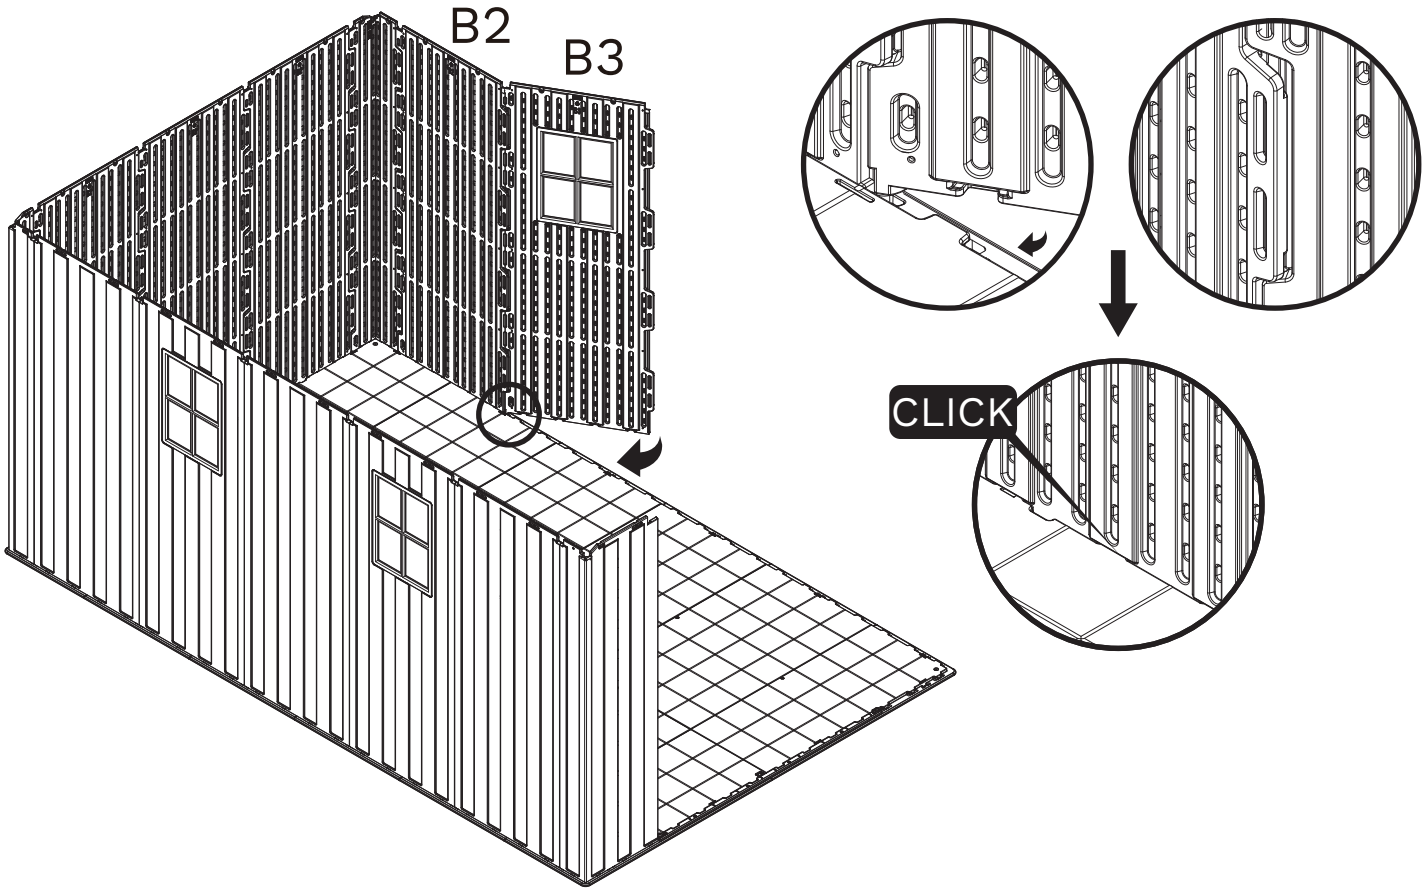


STEP 30

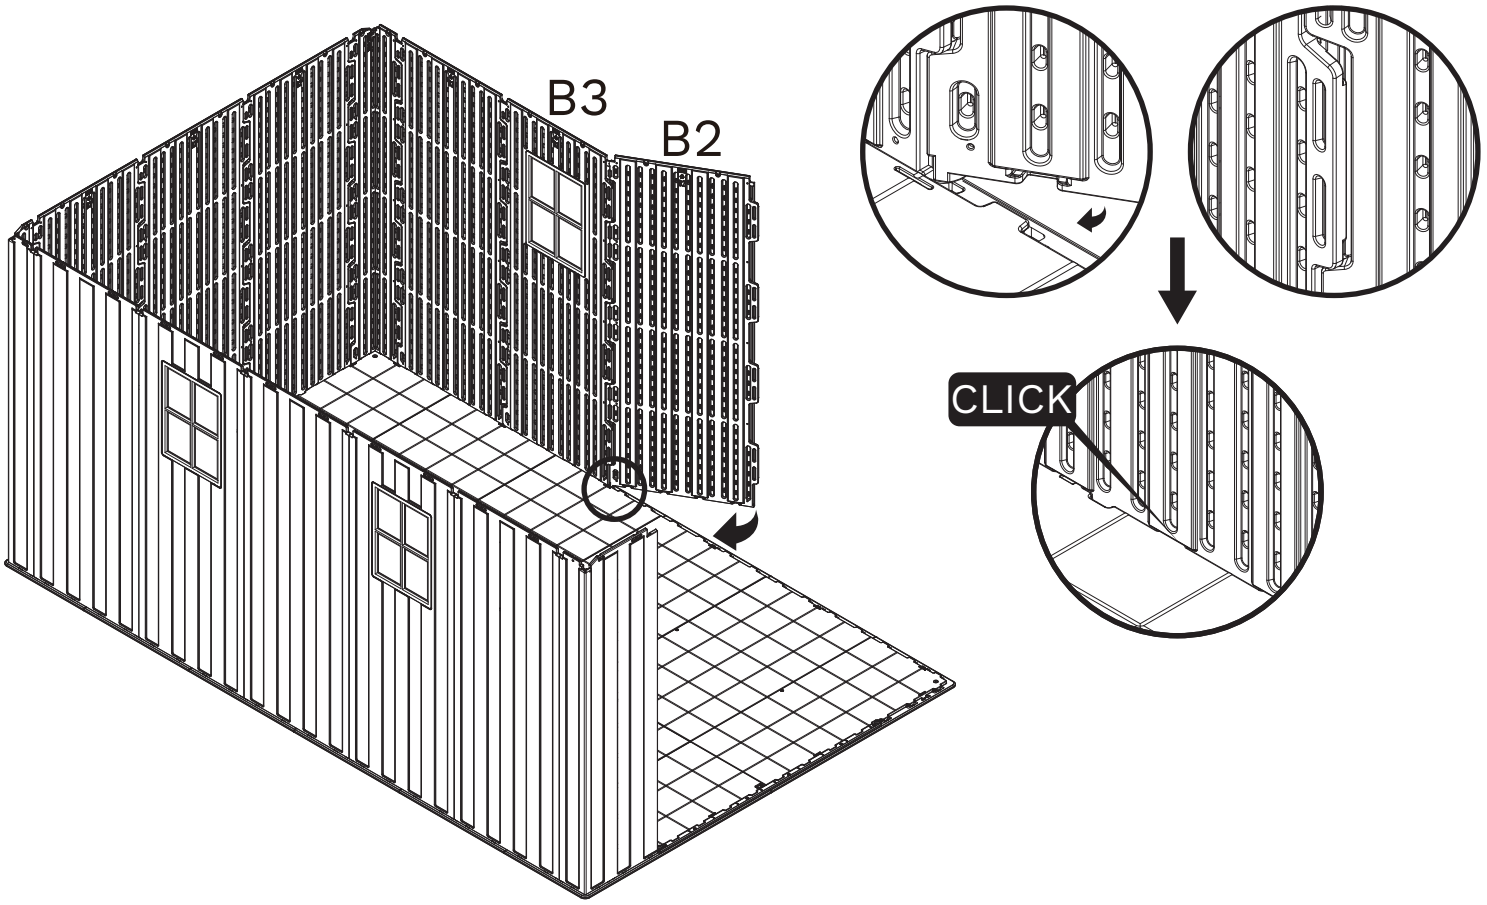


STEP 31

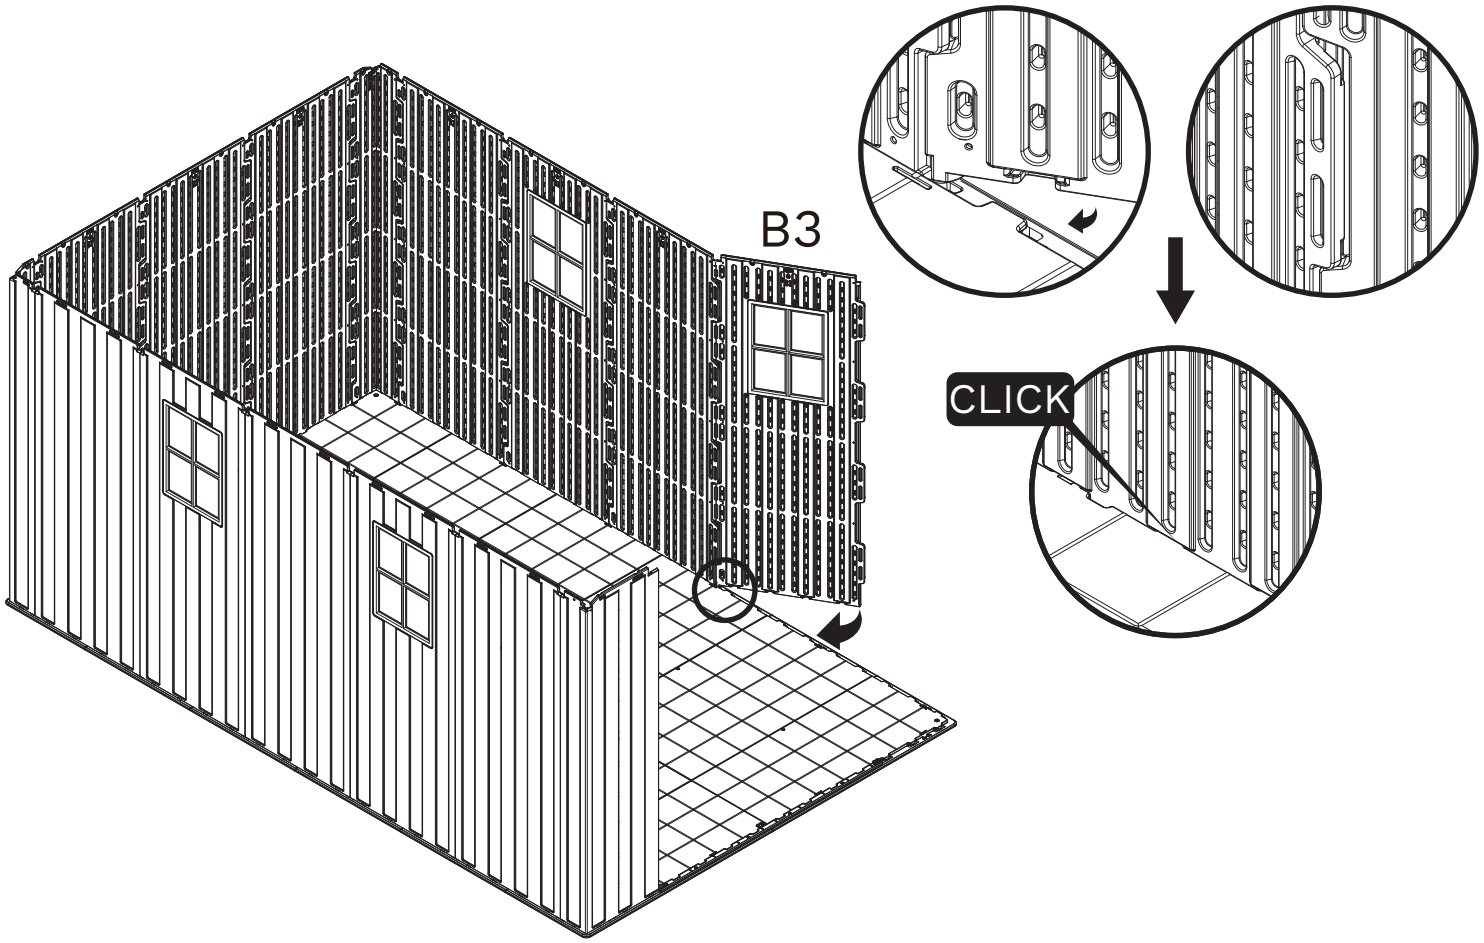


STEP 32

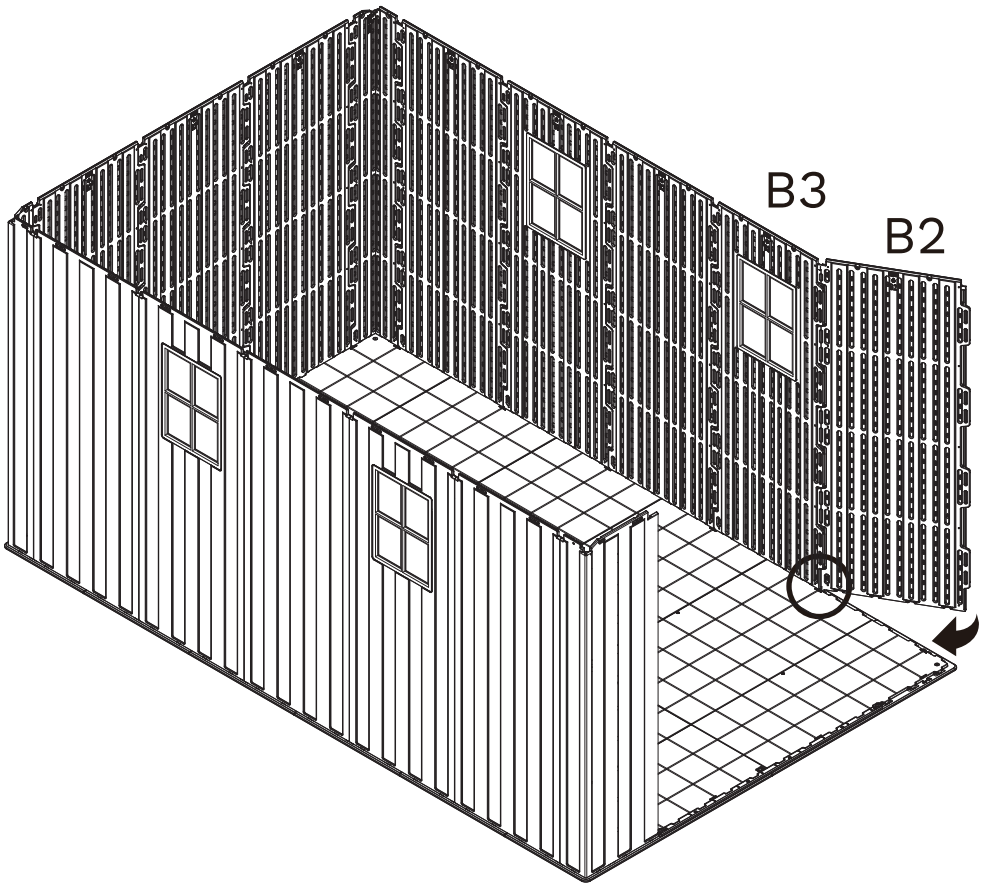


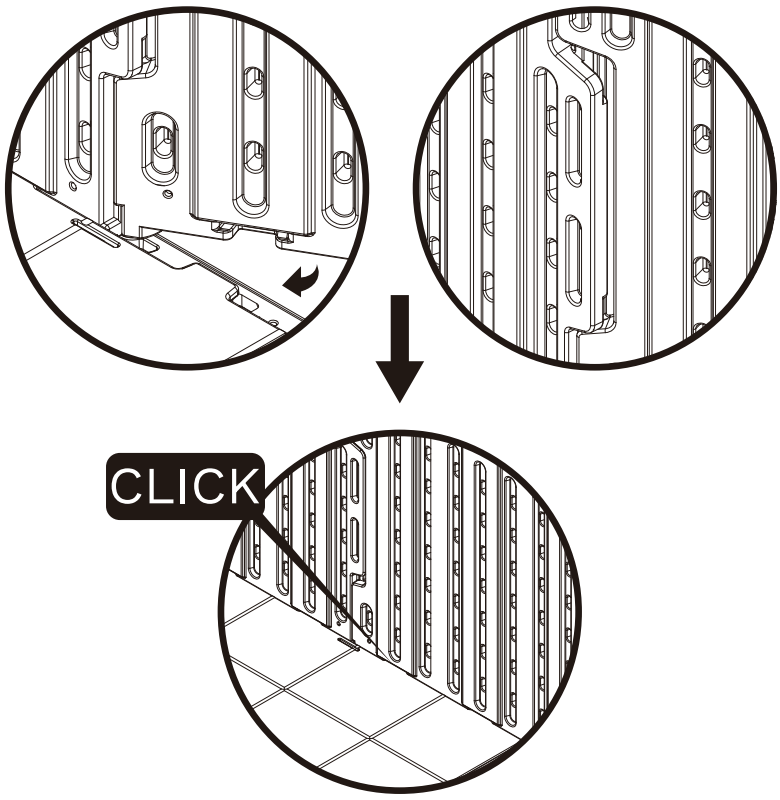



STEP 33

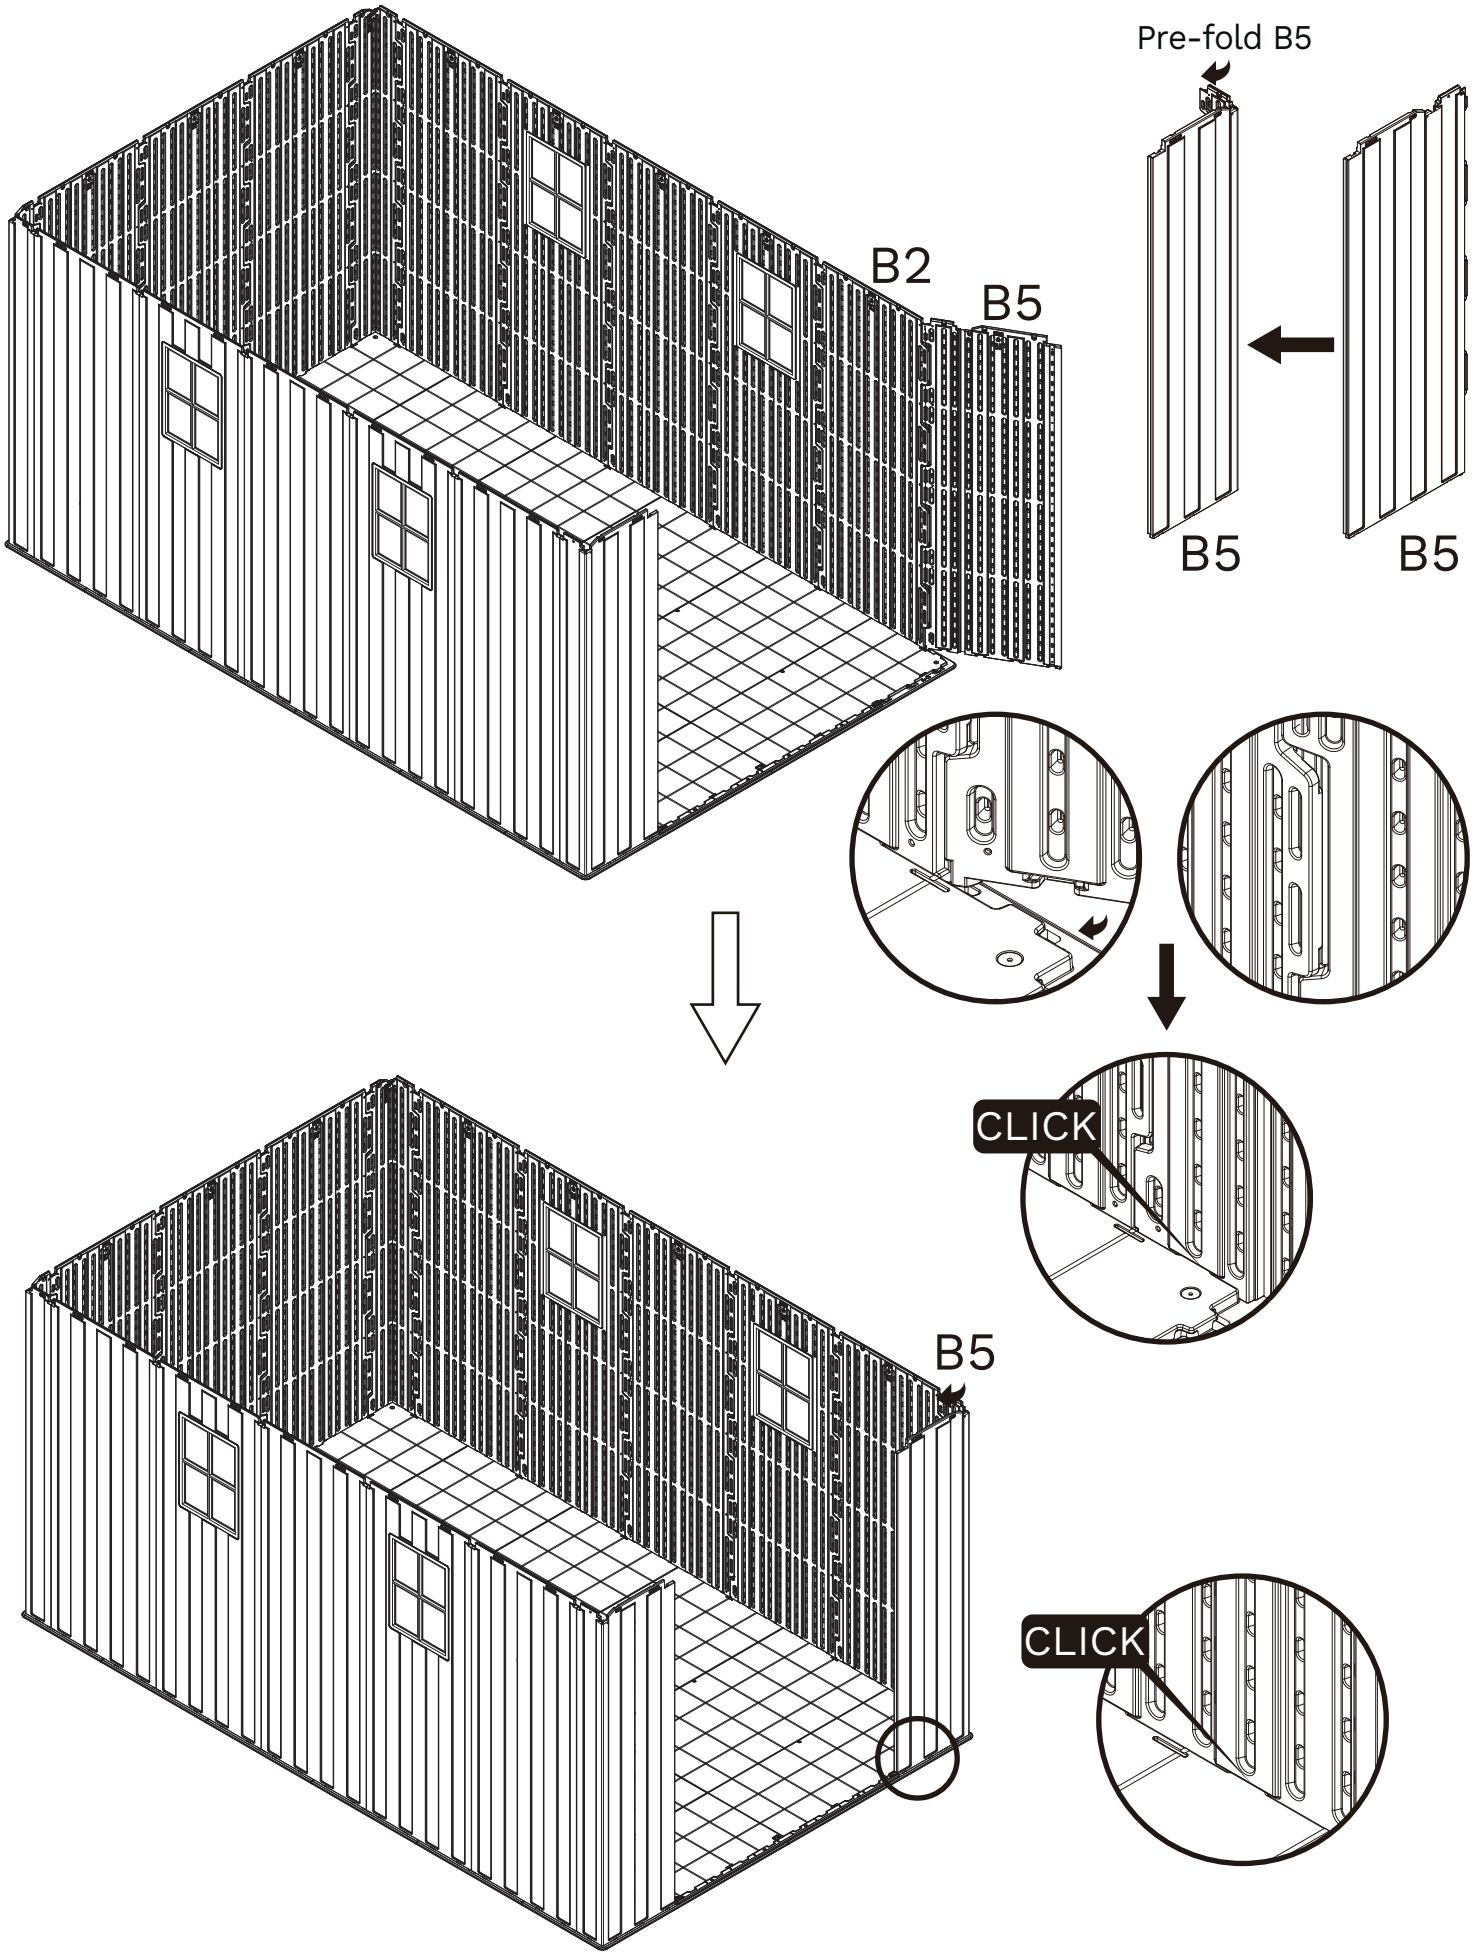

STEP 34

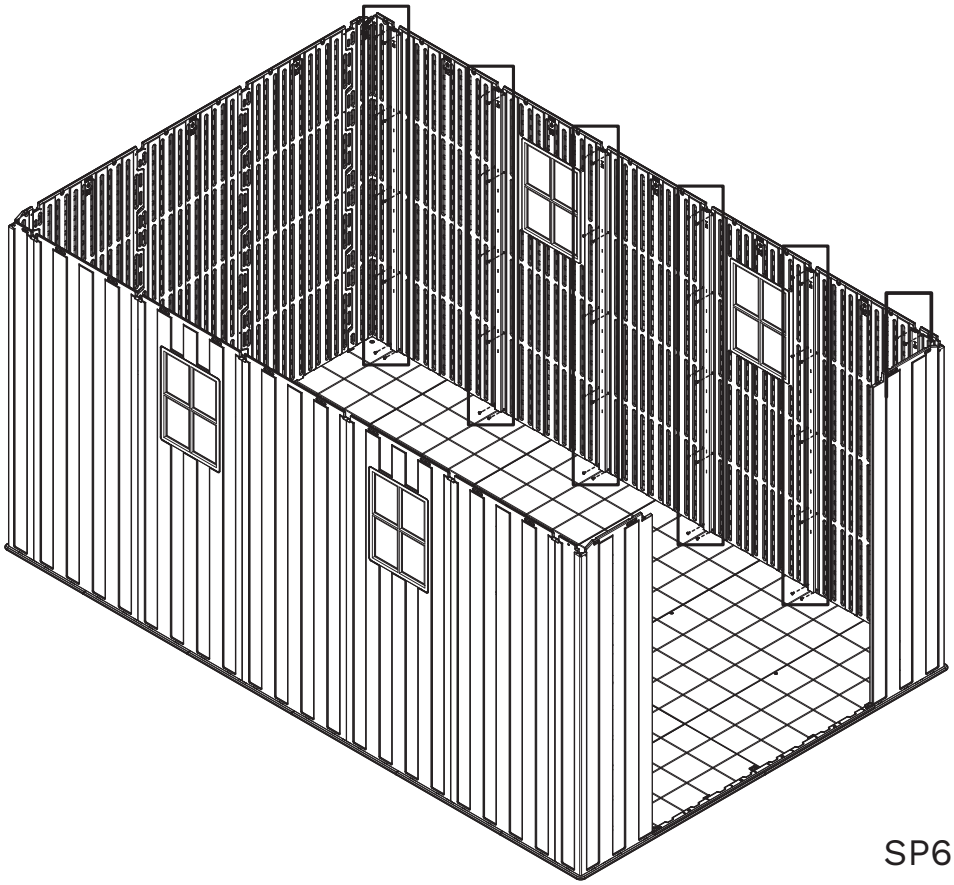


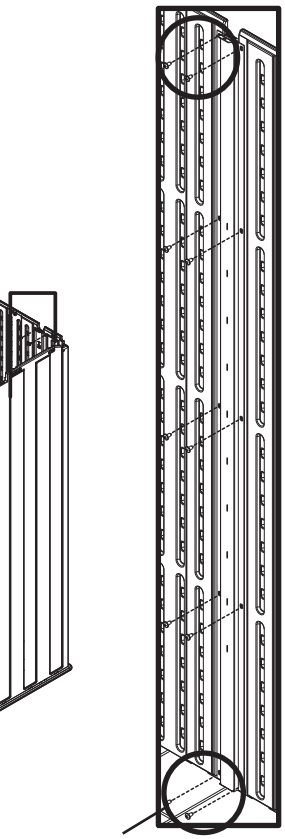


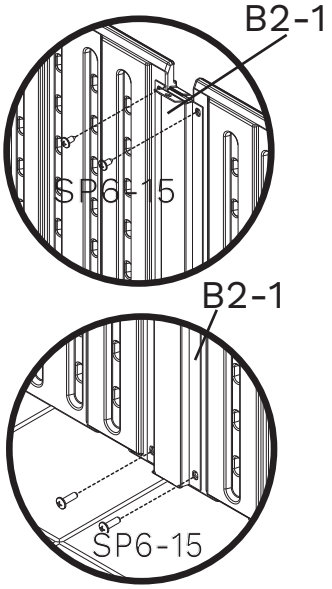


SP6-15
60 pcs

STEP 35

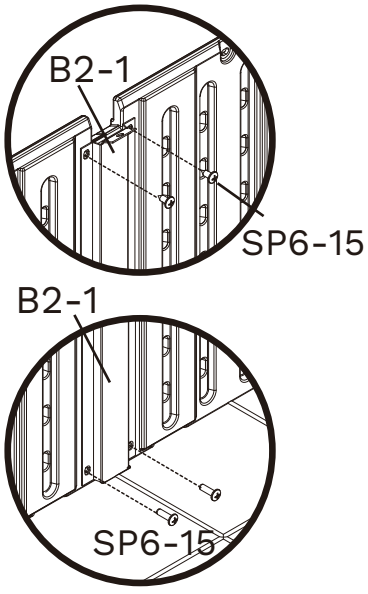


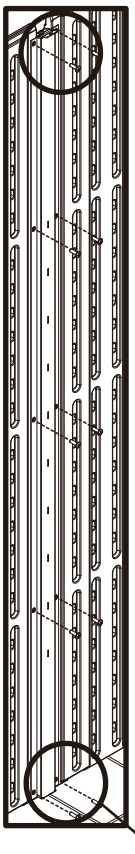

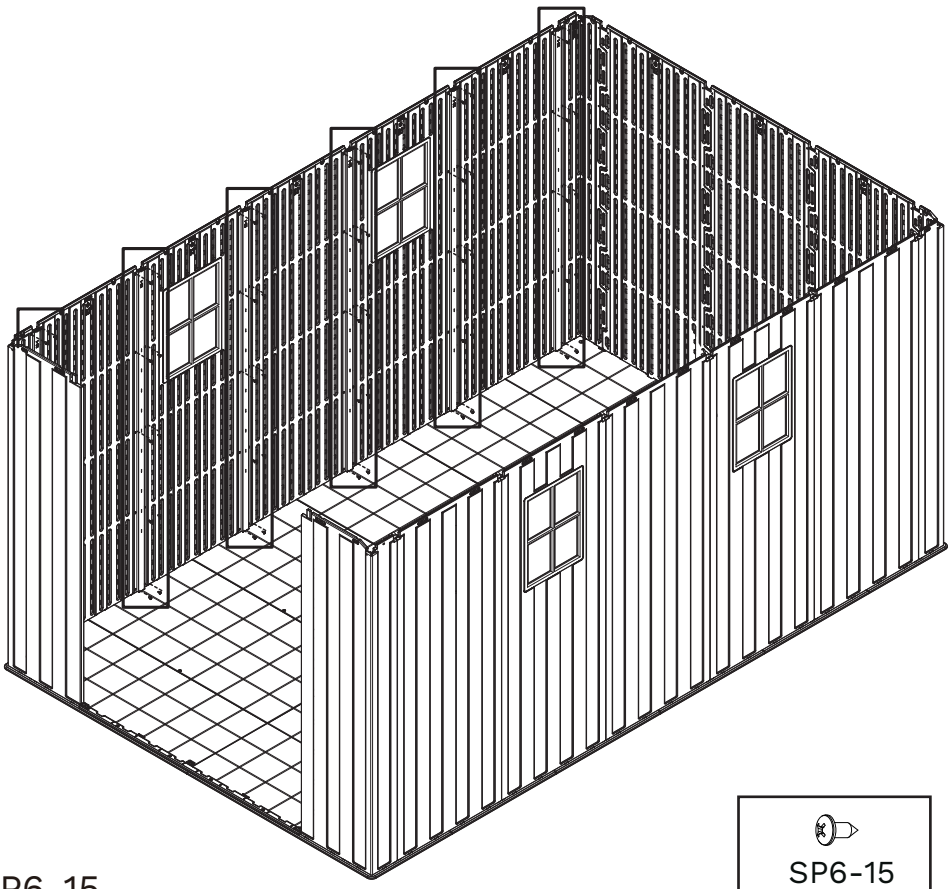

SP6-15
60 pcs


STEP 36

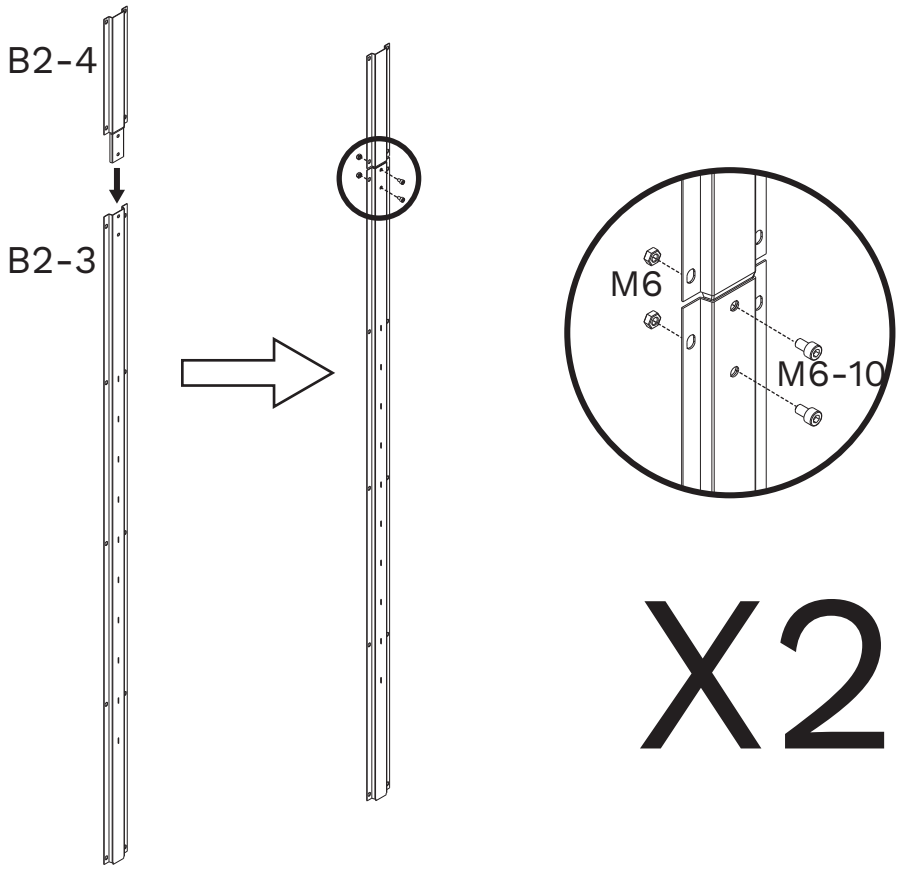

X2


M6-10	M6
4 pcs	4 pcs


STEP 37

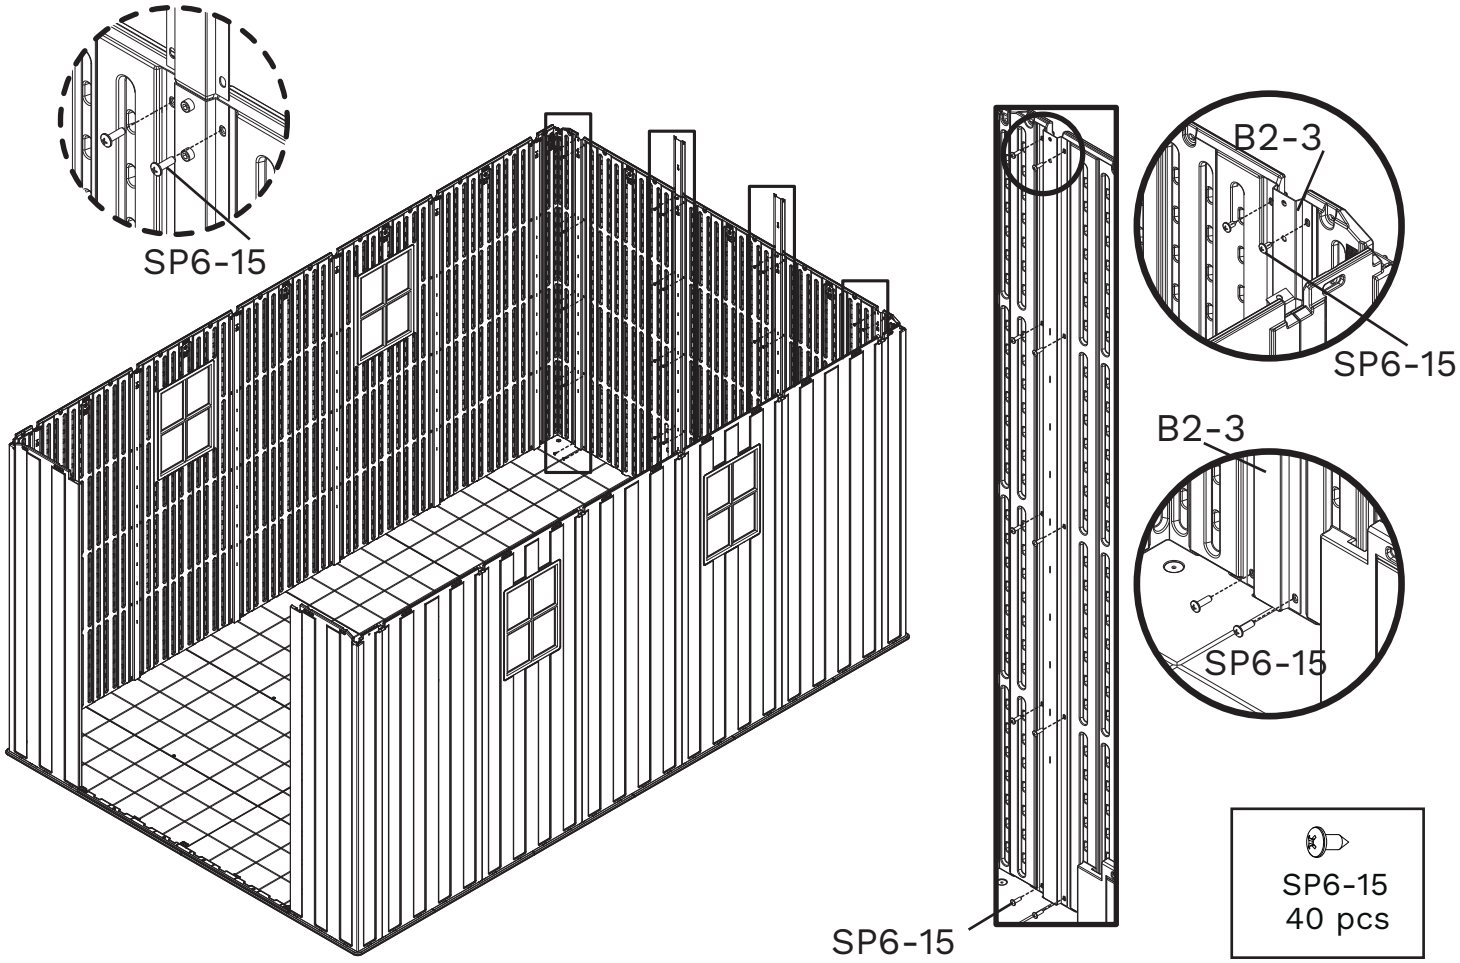


SP6-15
40 pcs


STEP 38

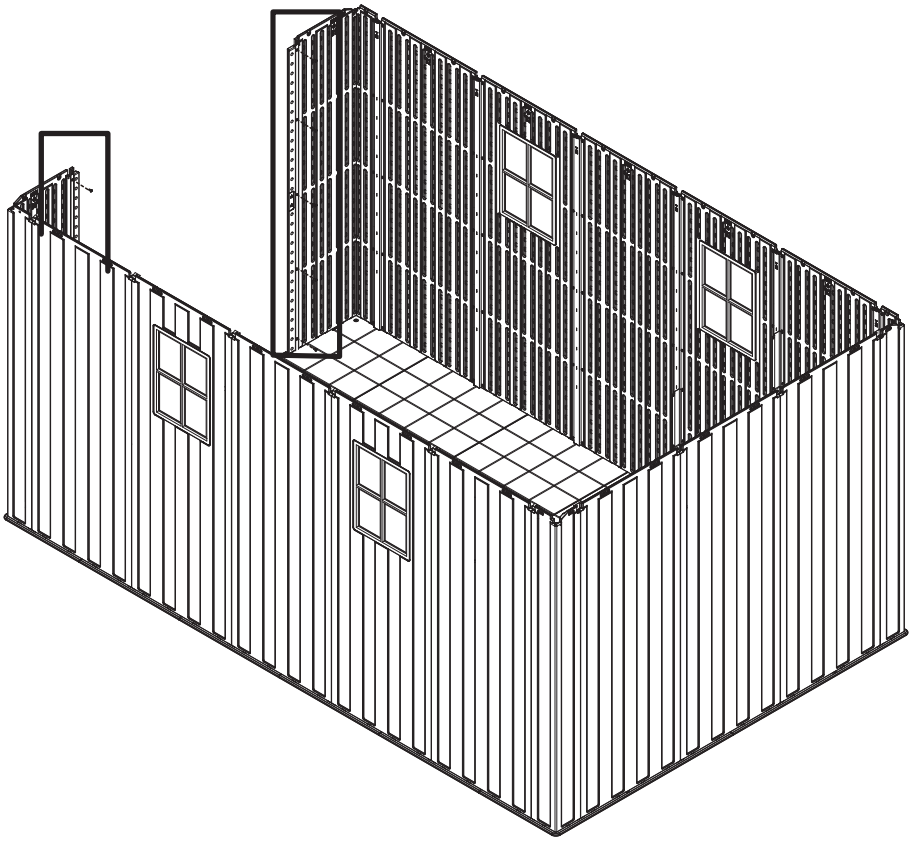

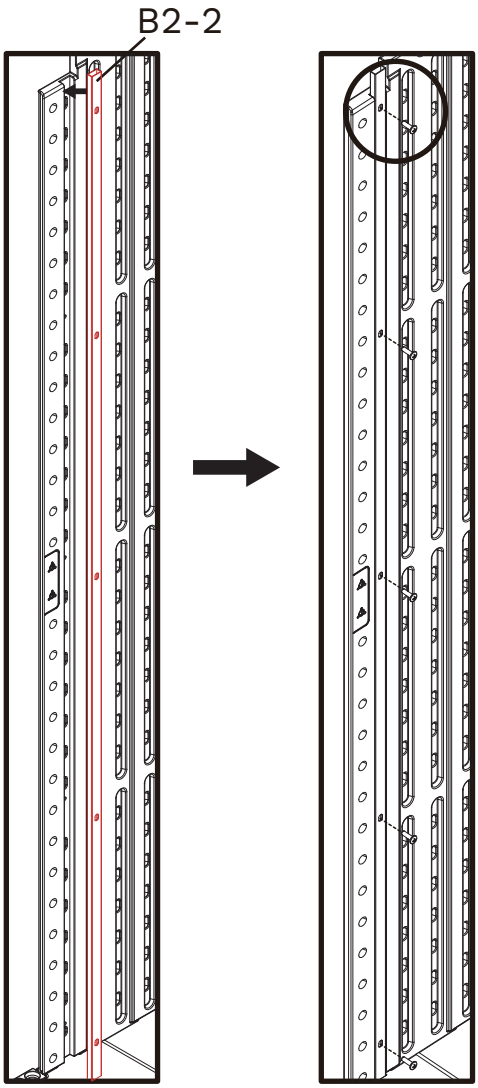

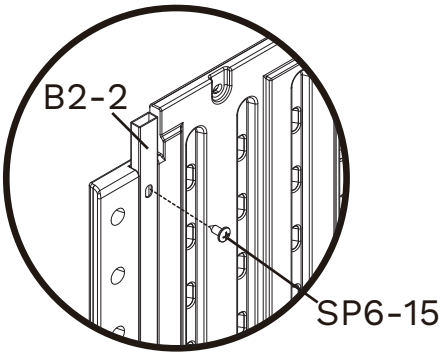



SP6-15
10 pcs

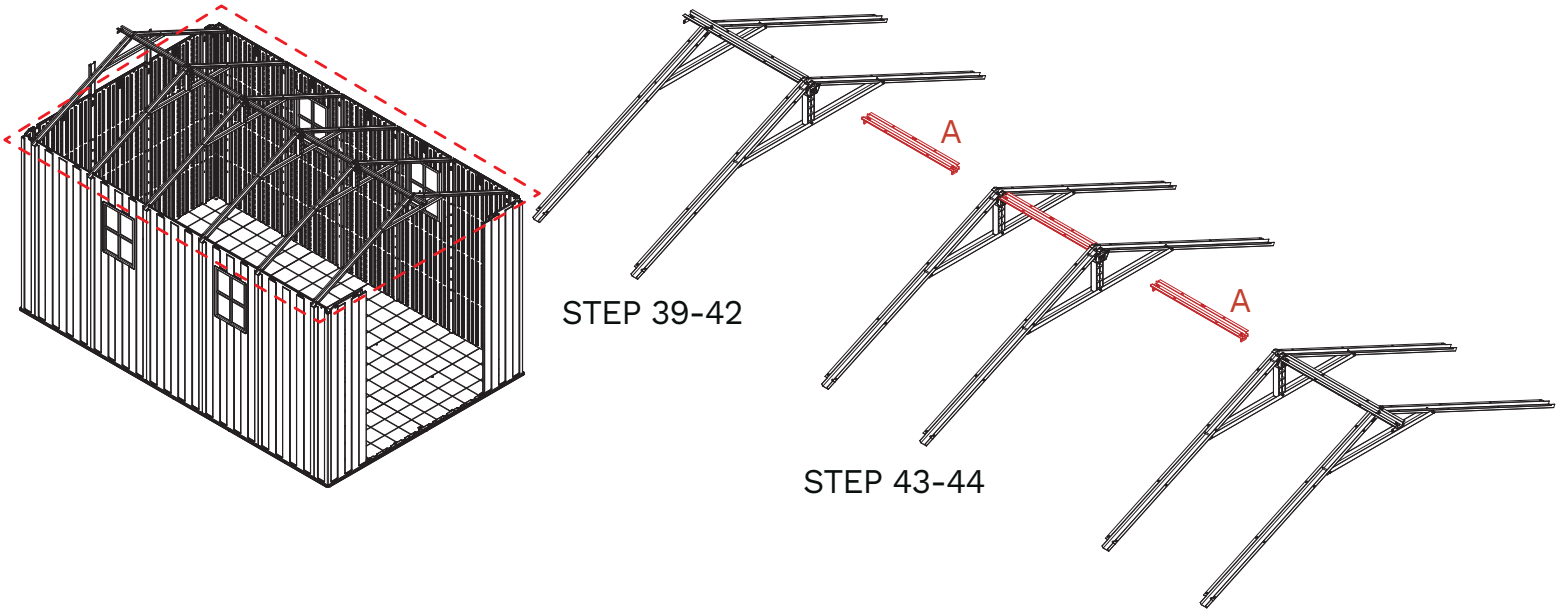


Beam installation can be divided into three groups: the installation steps for the front and rear components can be found in STEP 39-42, while the installation steps for the middle components are detailed in STEP 43-44. Install the front and rear components first, then install the middle components. When installing the middle components, please use your hands to support Area A.


STEP 39

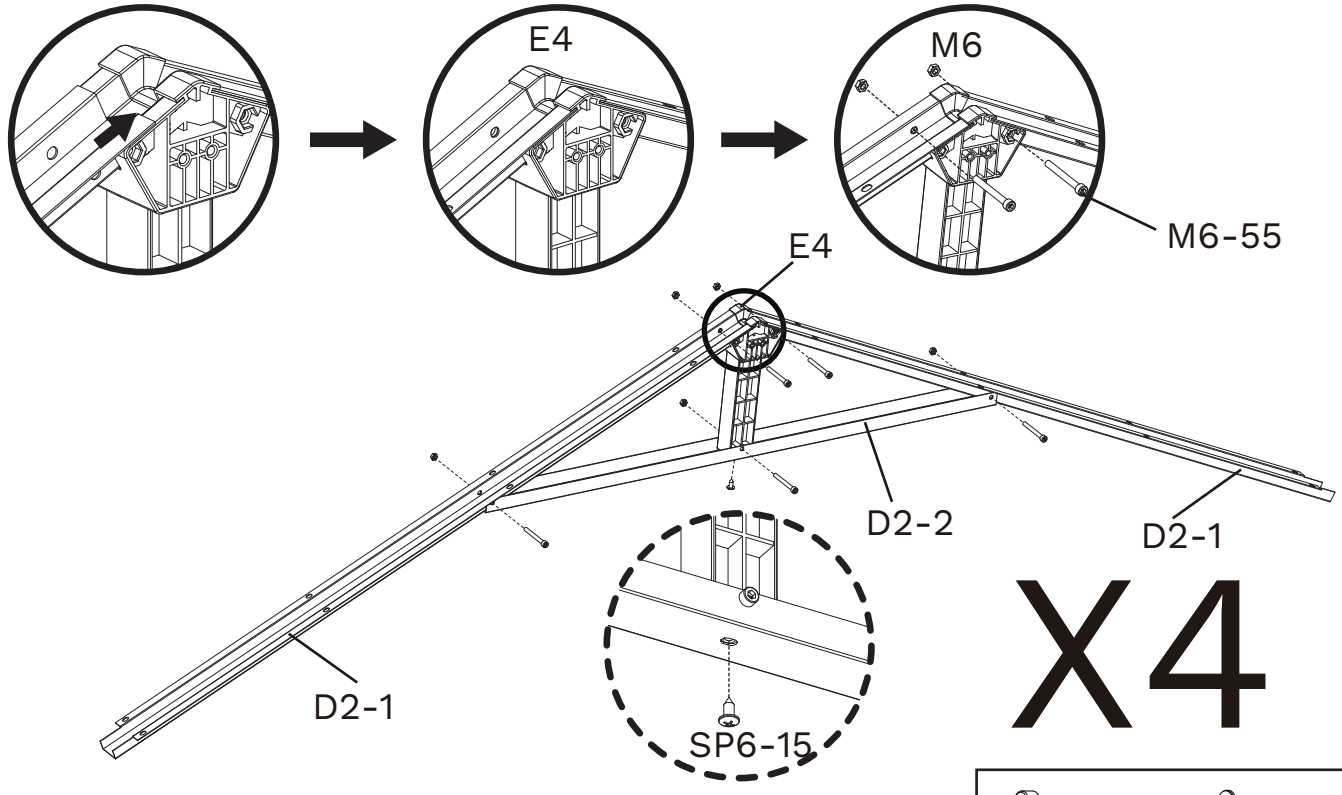

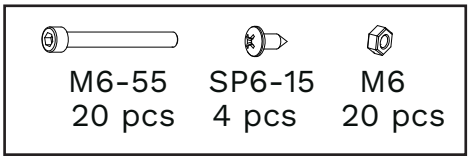


STEP 40

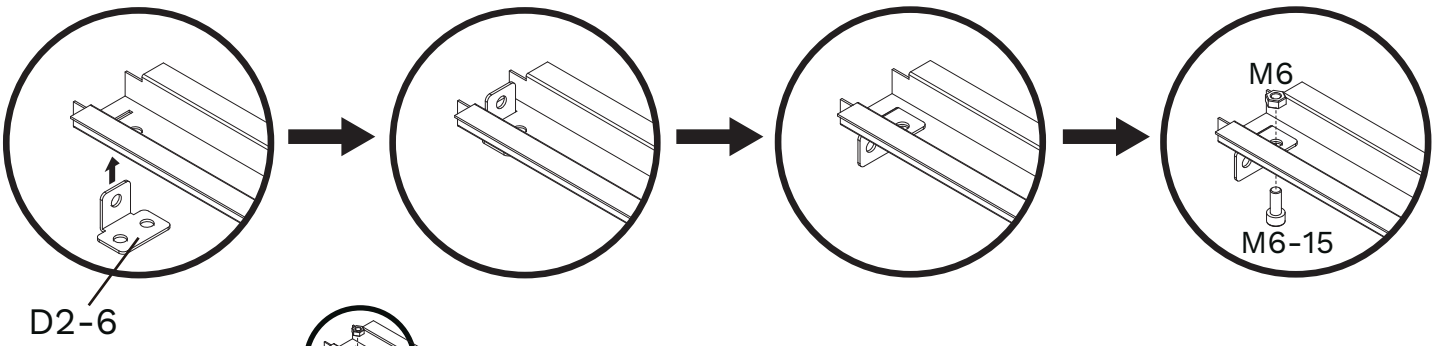

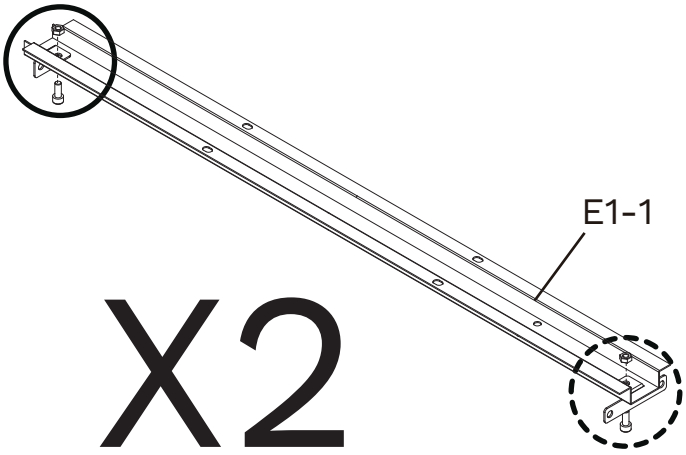


X2

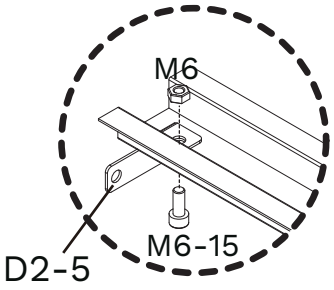

M6-15	M6
4 pcs	4 pcs


STEP 41

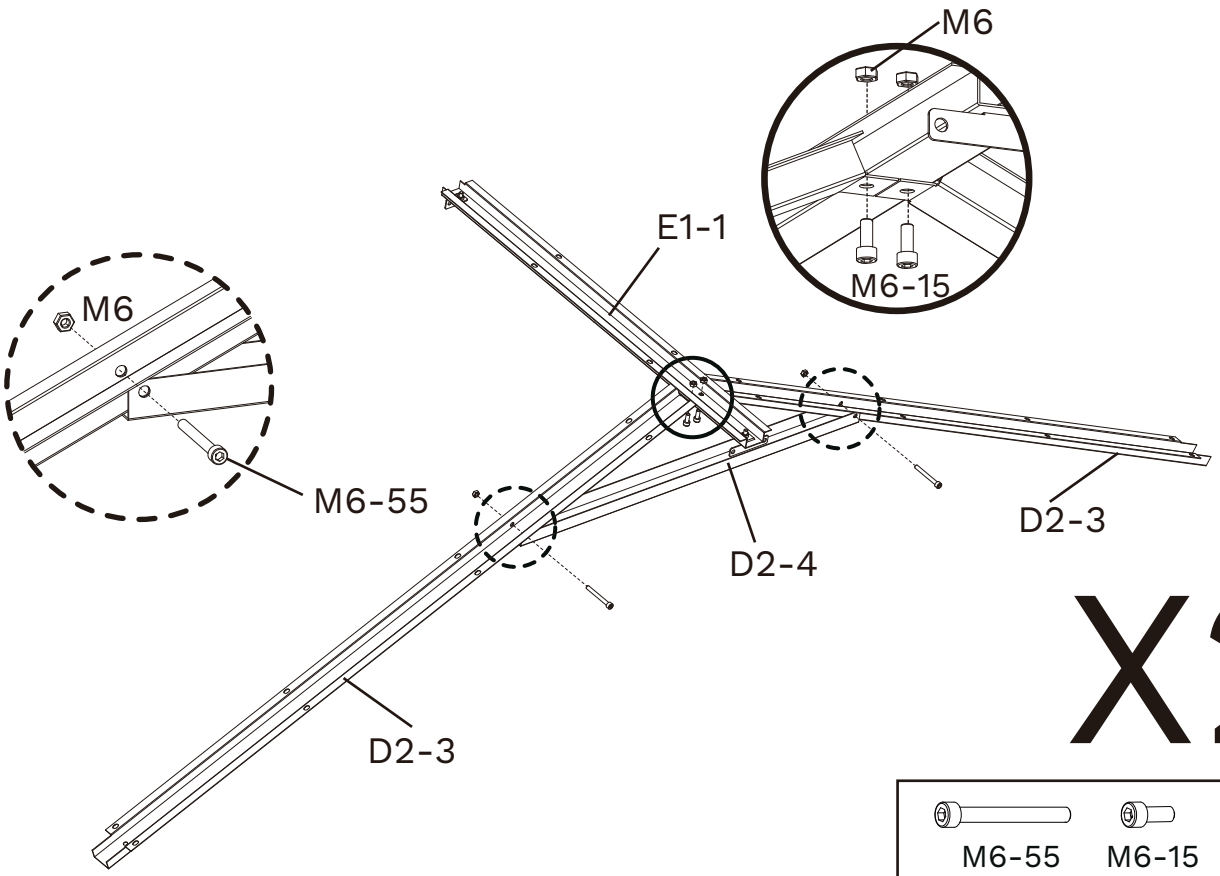

X2


M6-55	M6-15	M6
4pcs	4 pcs	8 pcs

STEP 42

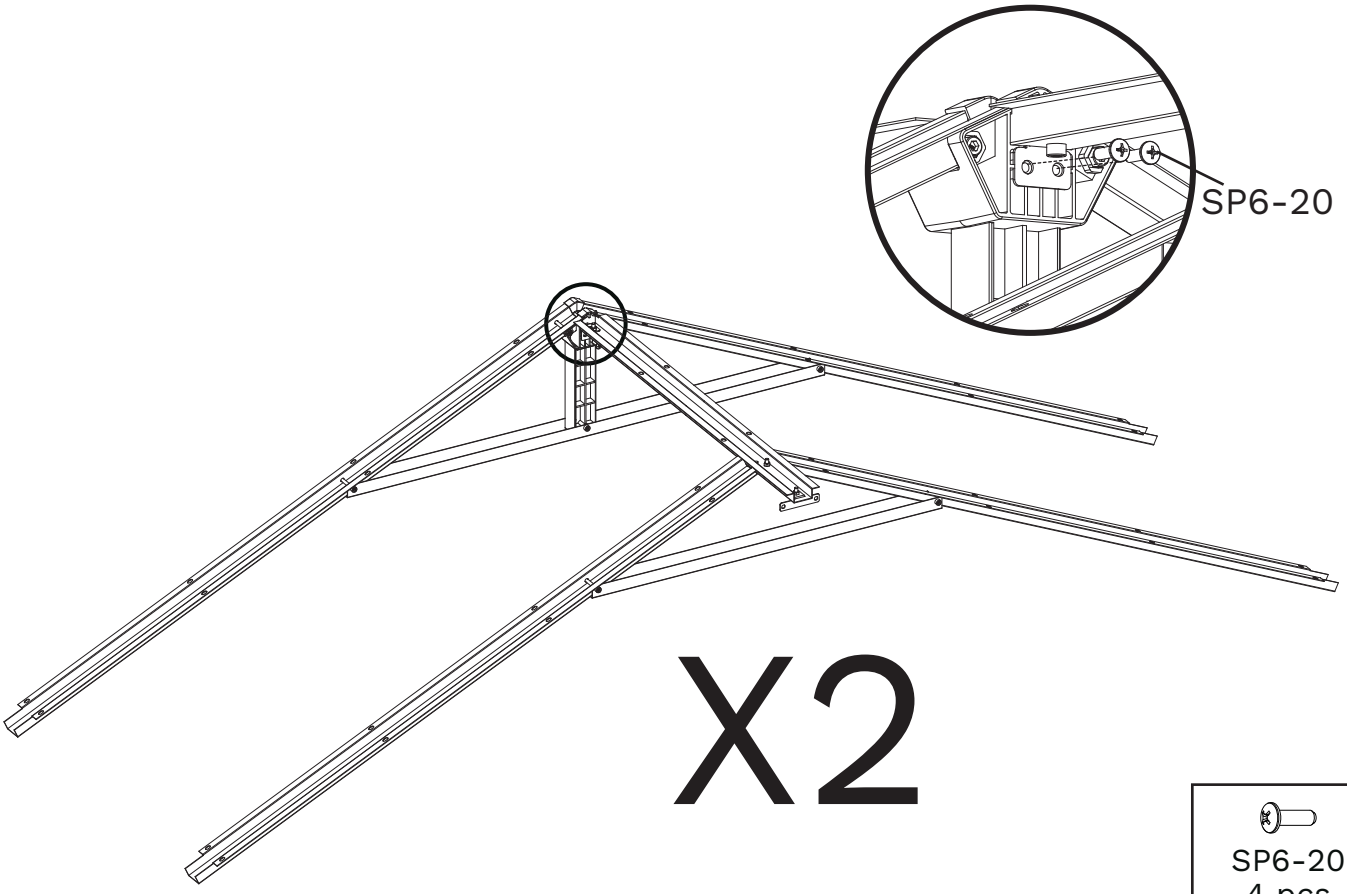

SP6-20
4 pcs


STEP 43

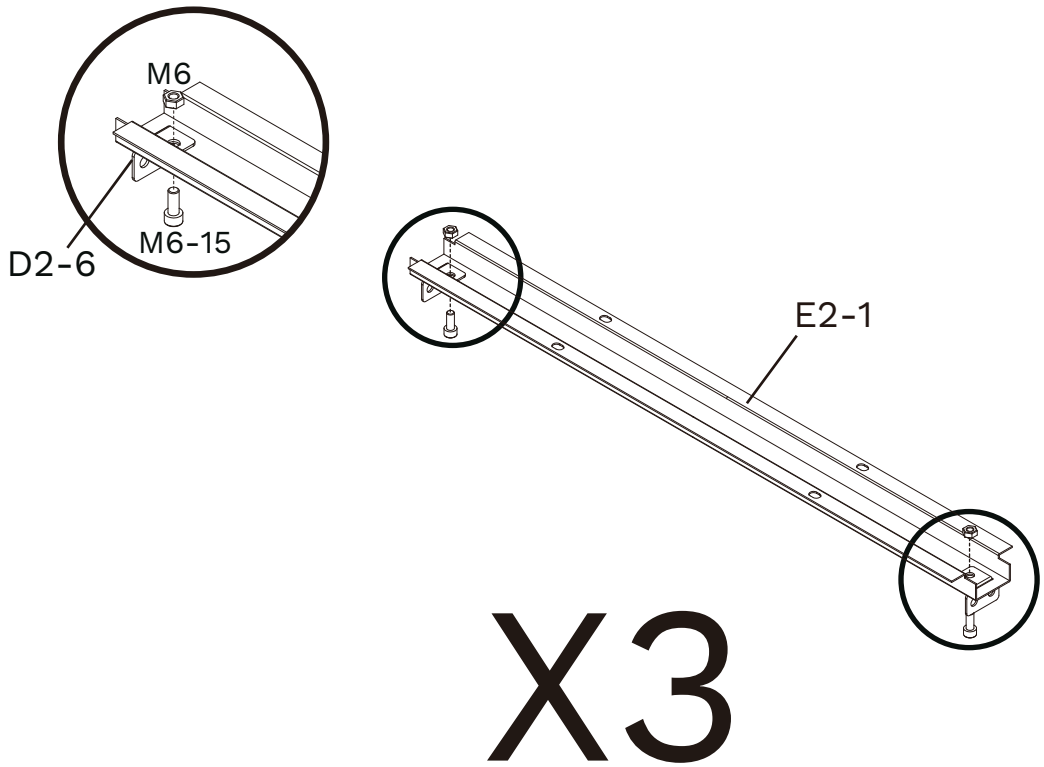

M6-15
6 pcs


M6
6 pcs


STEP 44

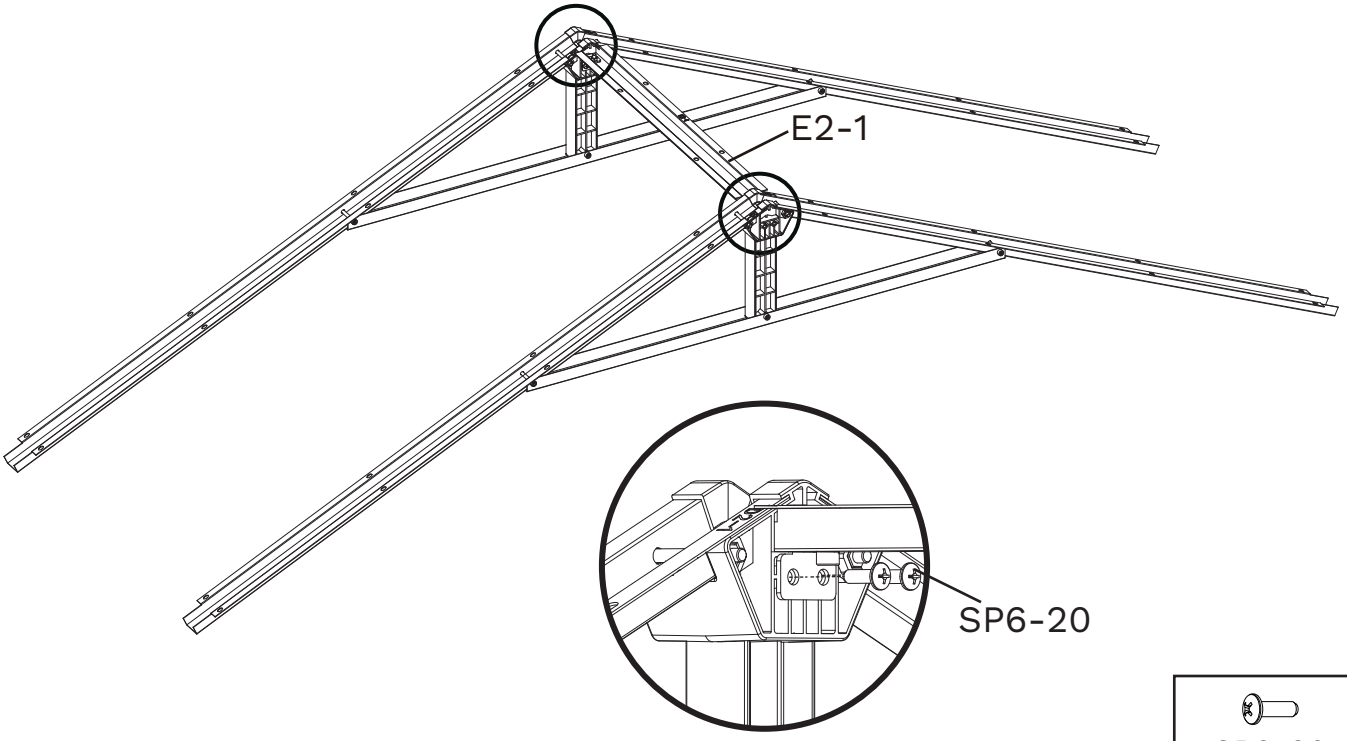

SP6-20
4 pcs


STEP 45

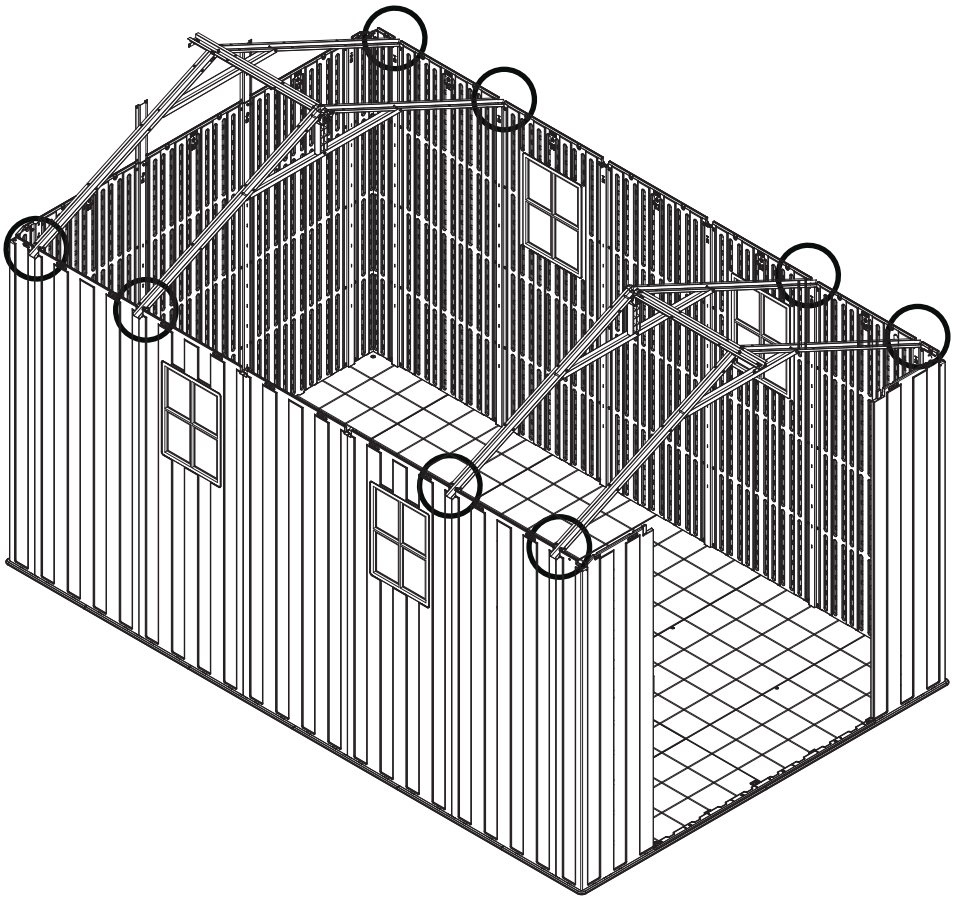


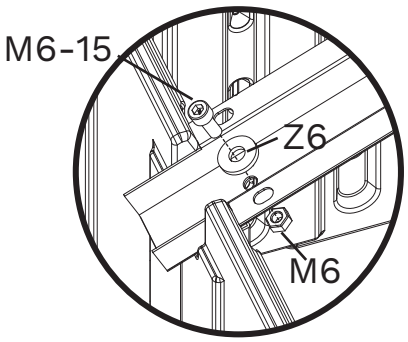

M6-15	M6	Z6
8 pcs	8 pcs	8 pcs

STEP 46

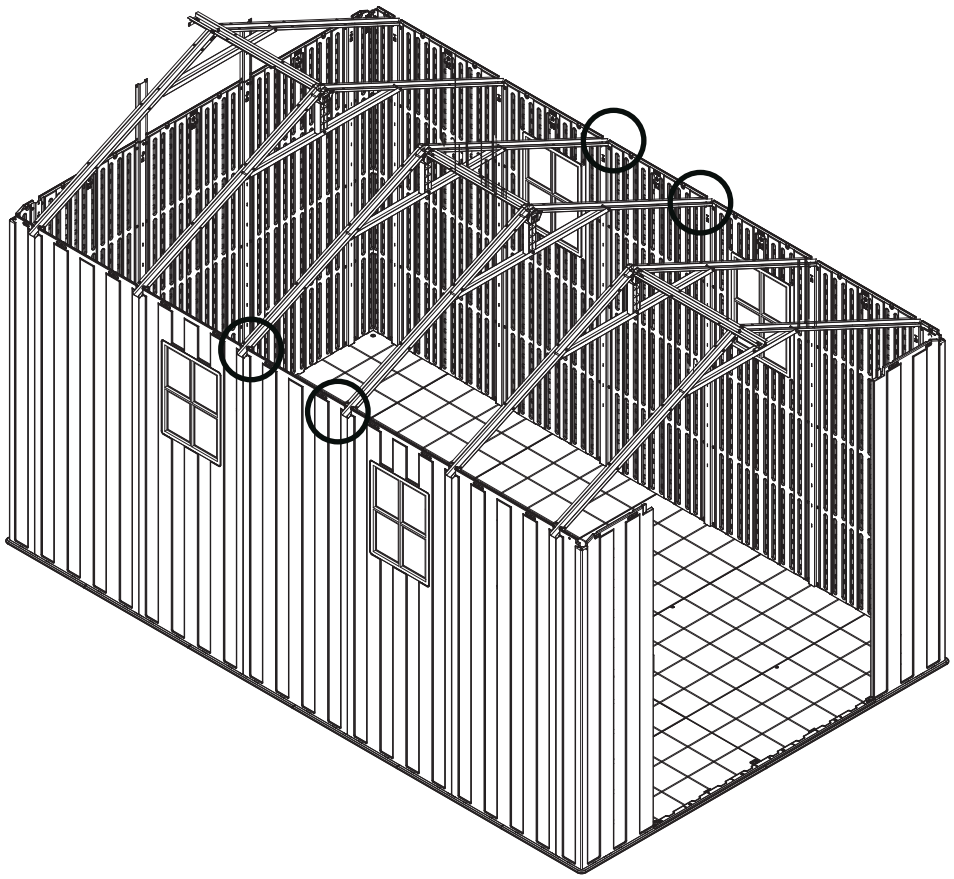

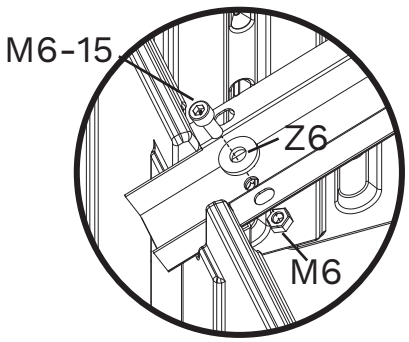




M6-15
4 pcs


M6
4 pcs


Z6
4 pcs


STEP 47

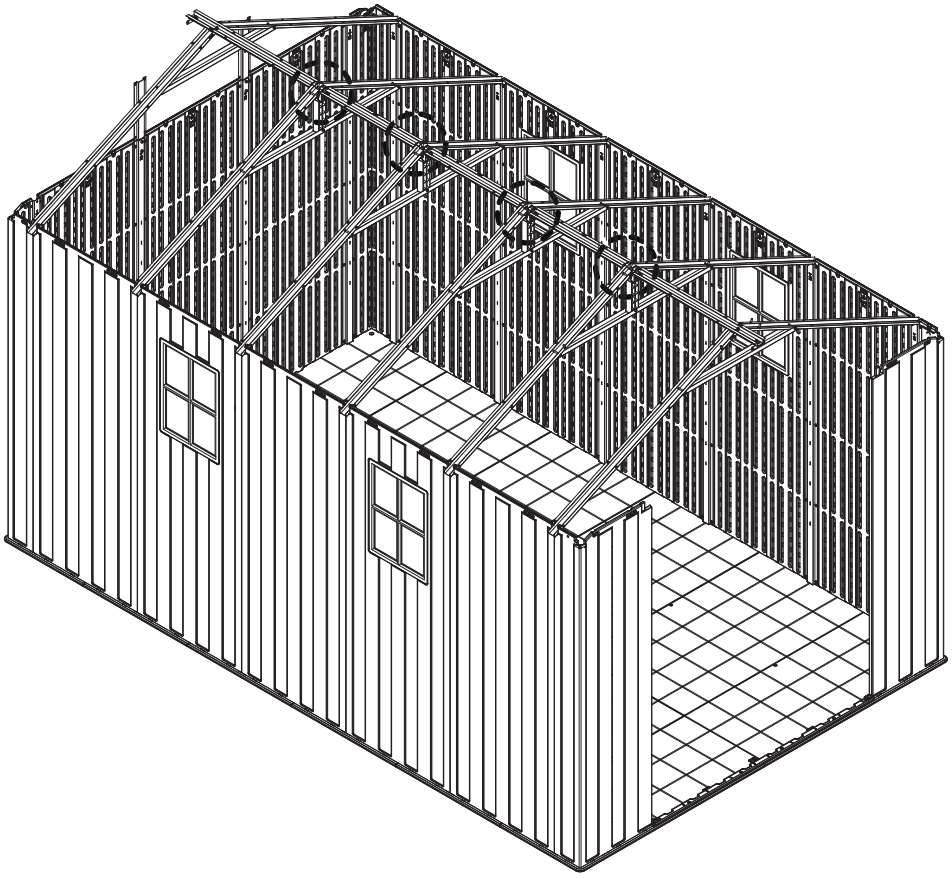

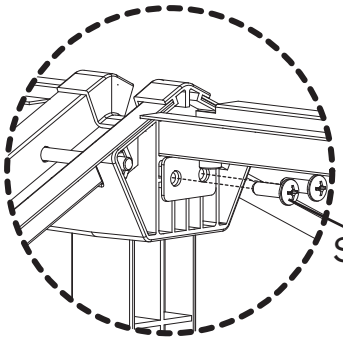



SP6-20
8pcs

STEP 48

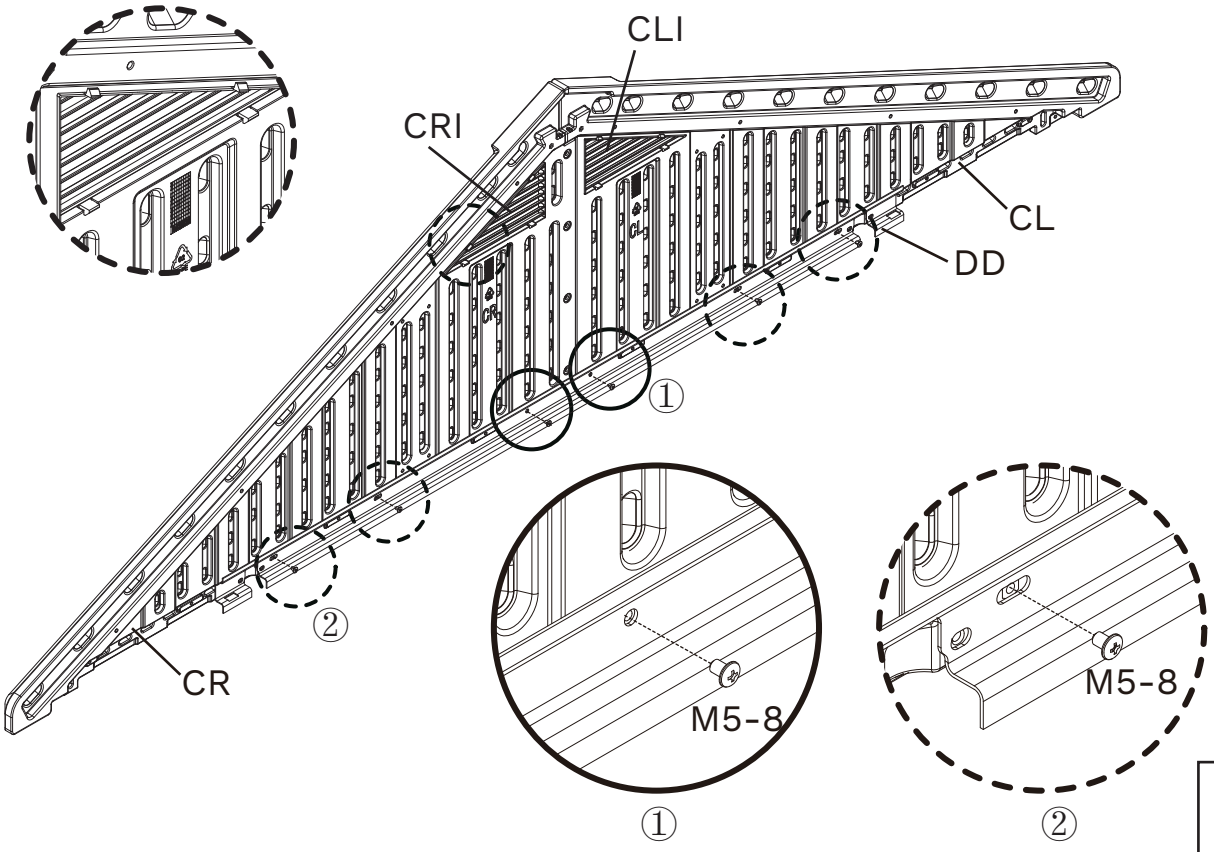


M5-8
6 pcs

STEP 49

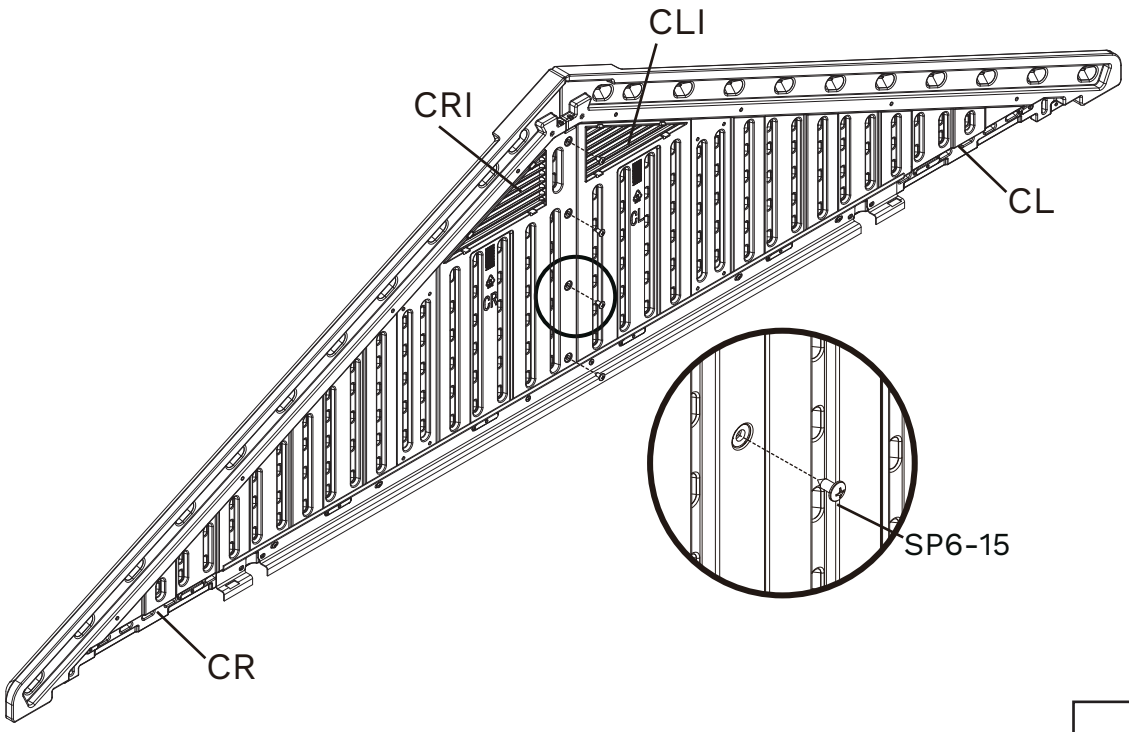


SP6-15
4pcs

STEP 50

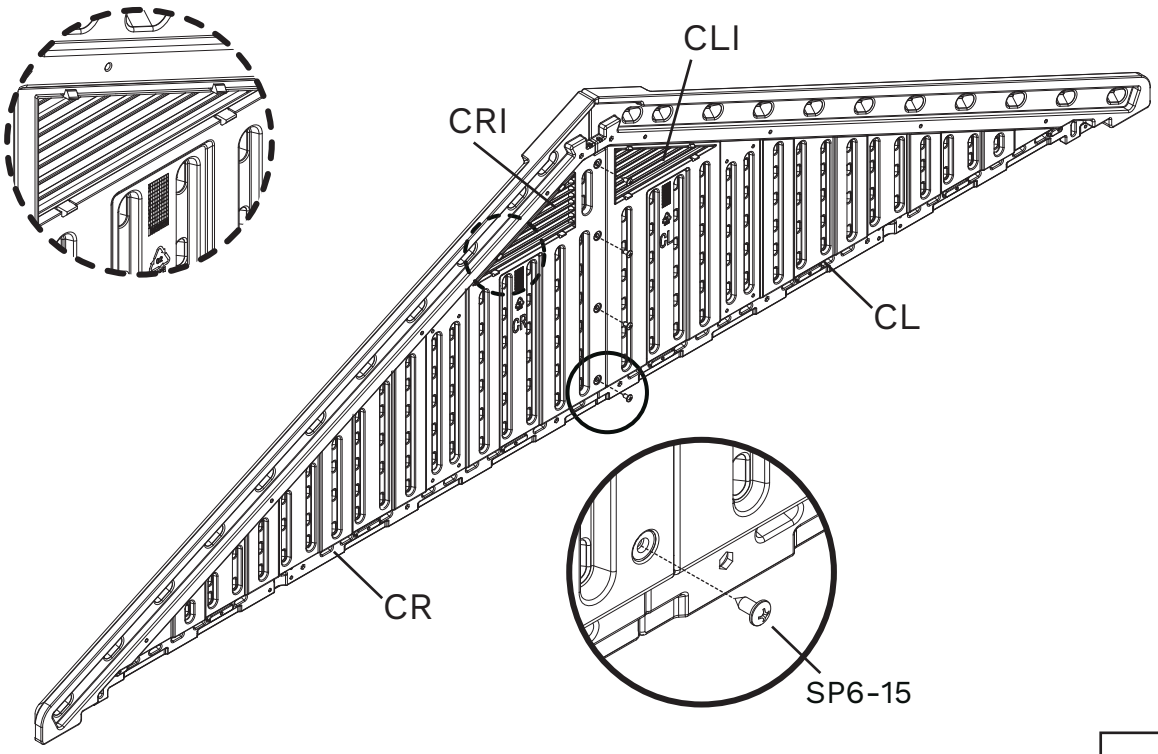


SP6-15
4pcs

STEP 51

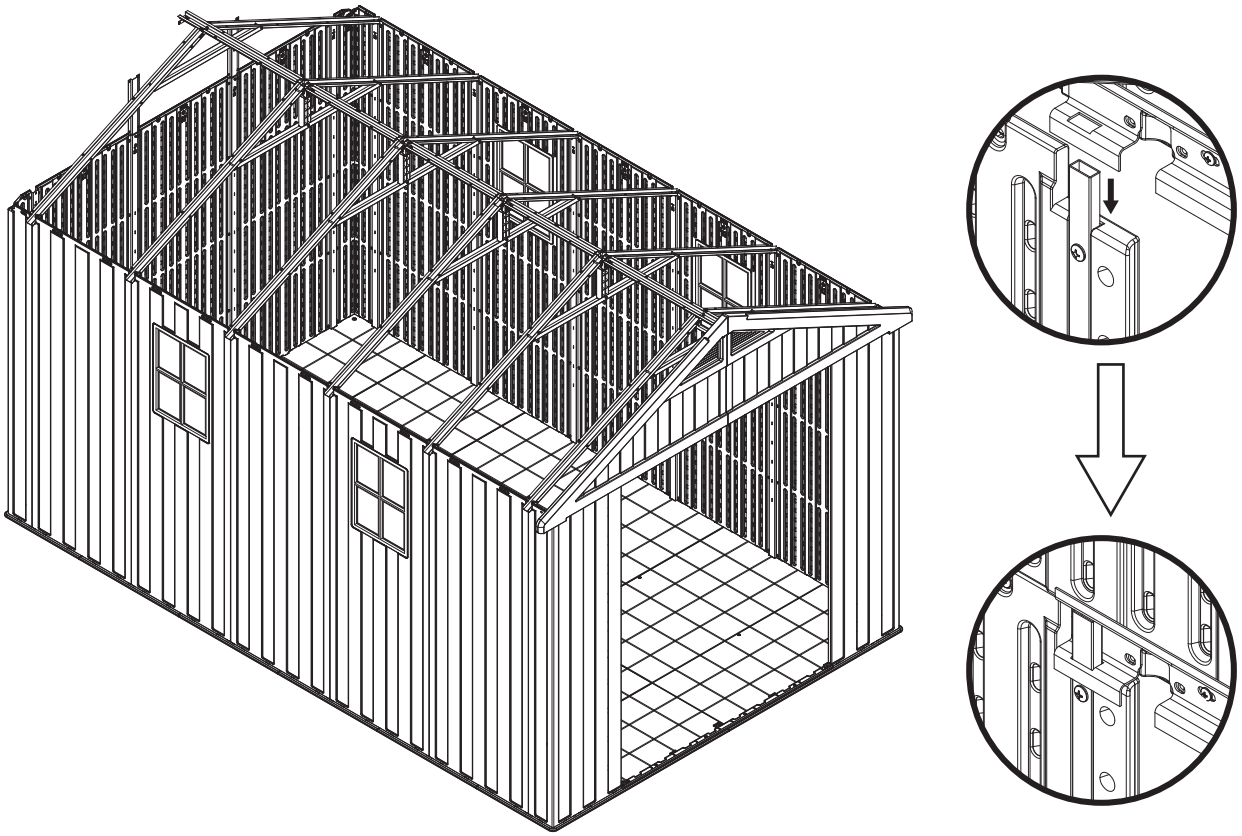


STEP 52

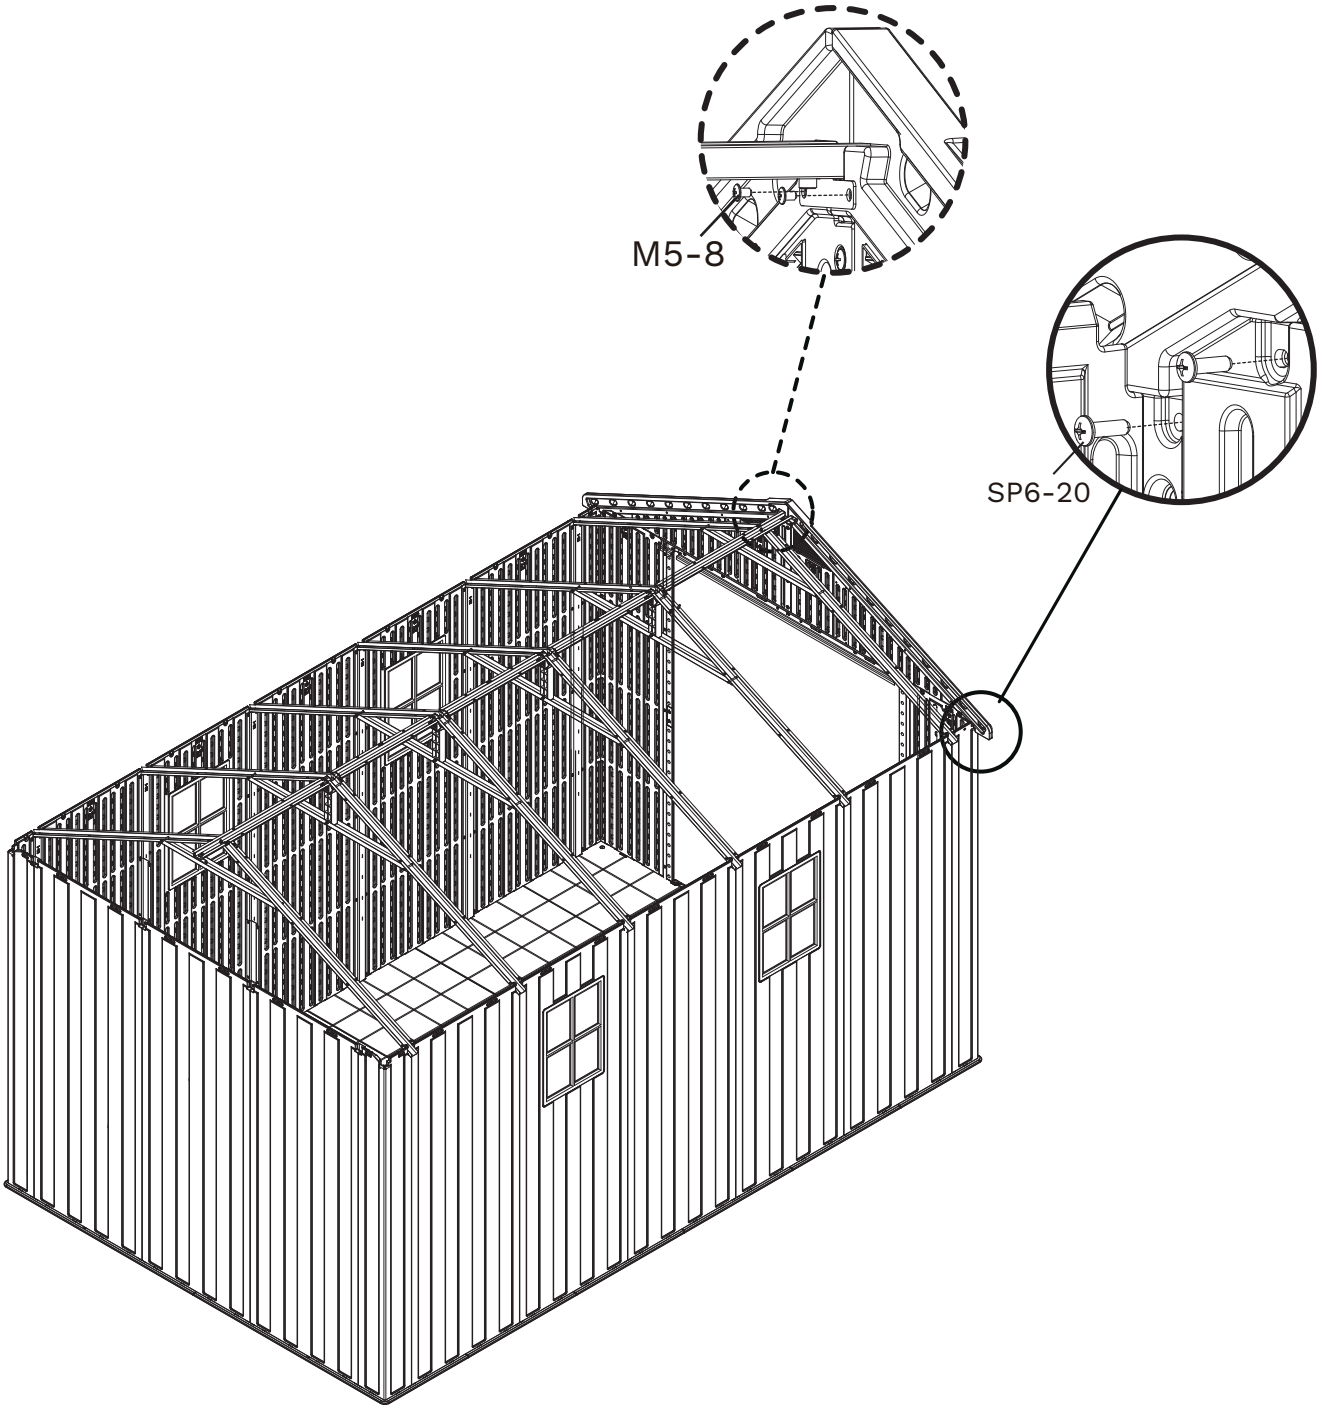


SP6-20	M5-8
6 pcs	2 pcs

STEP 53

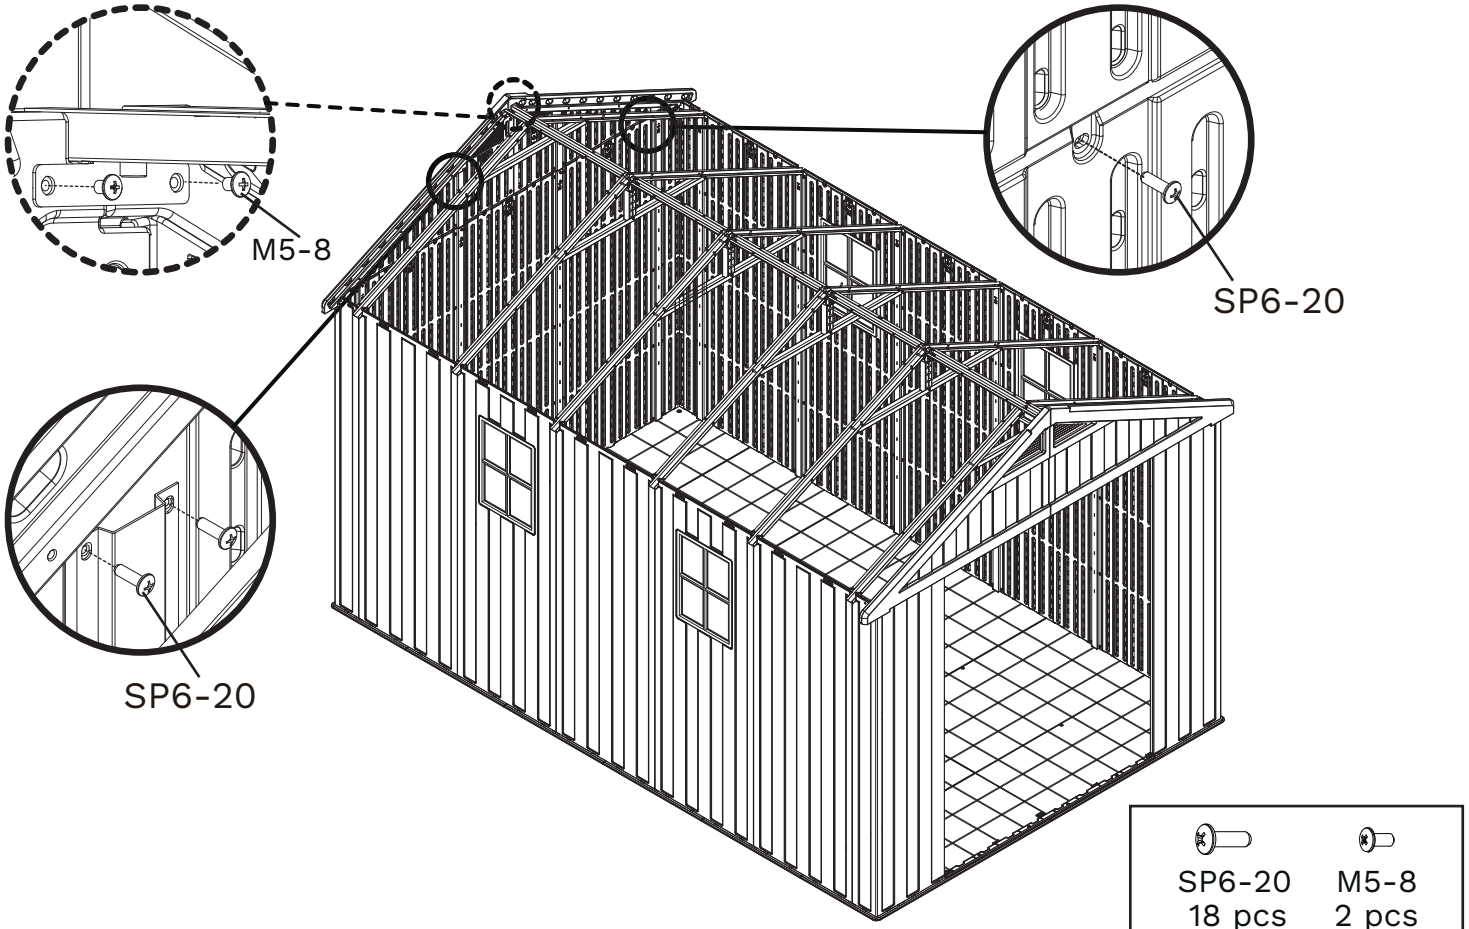


SP6-20	M5-8
18 pcs	2 pcs

STEP 54

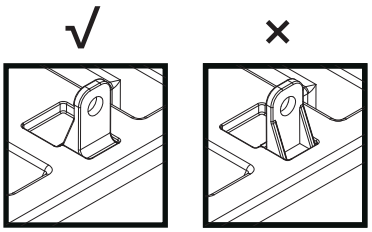



Note the mounting direction of D4.

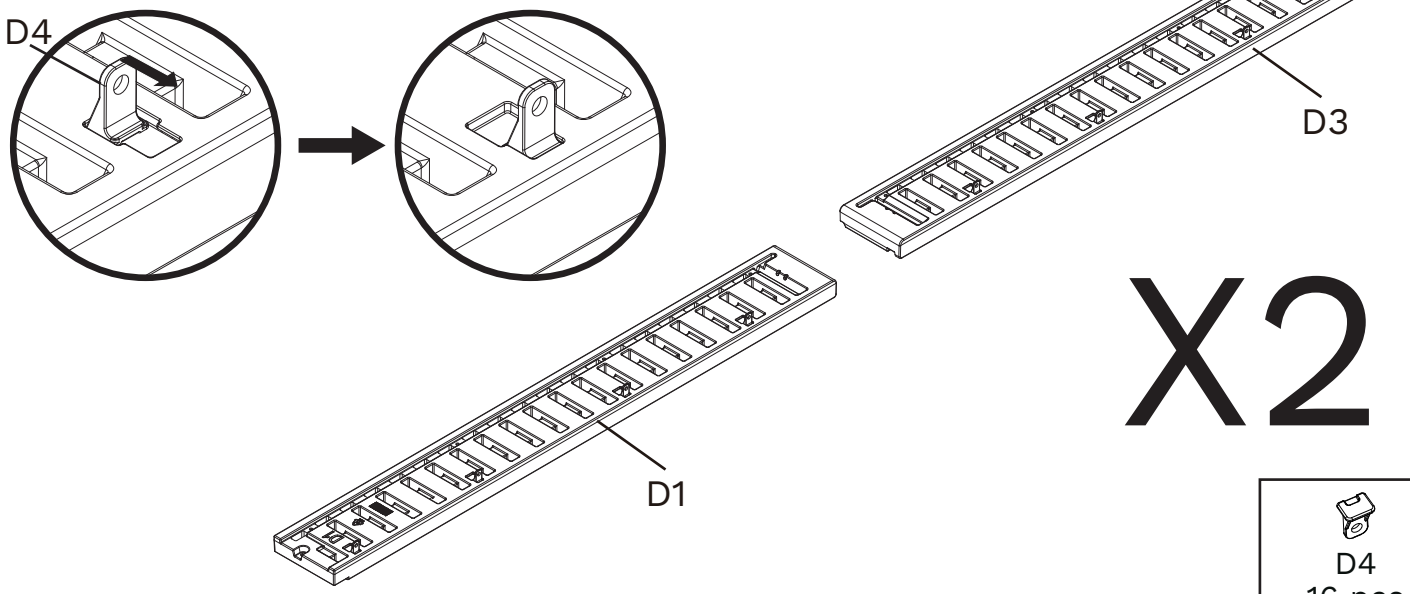


D4
16 pcs


STEP 55

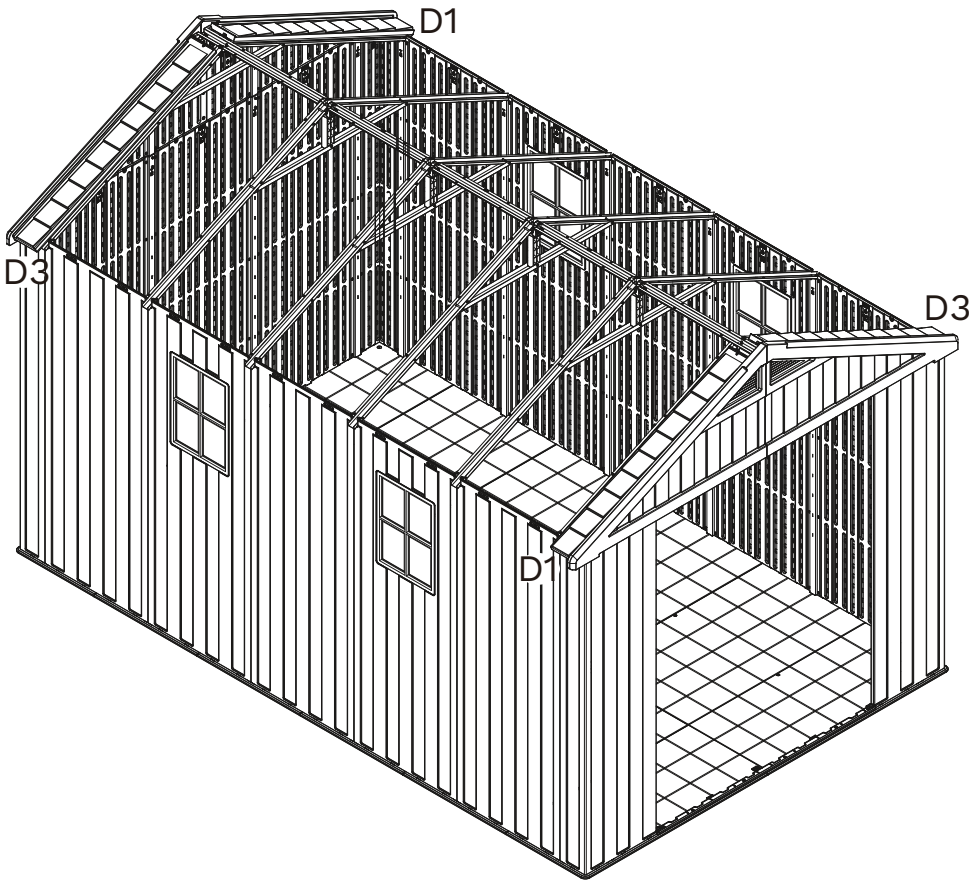


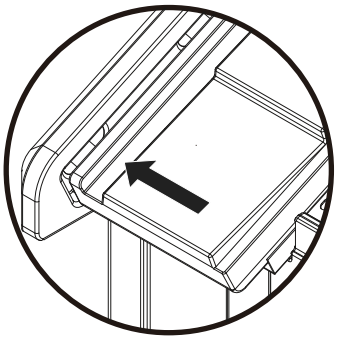


D1 and D3 are placed in the grooves of the iron frame, aligned with the grooves of the CL CR respectively and pushed forward.

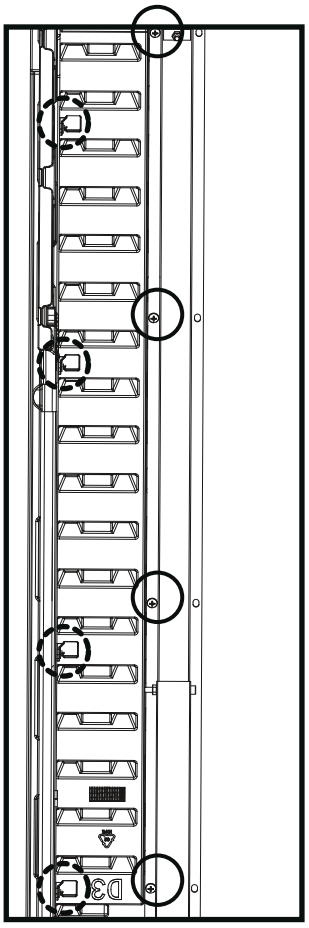

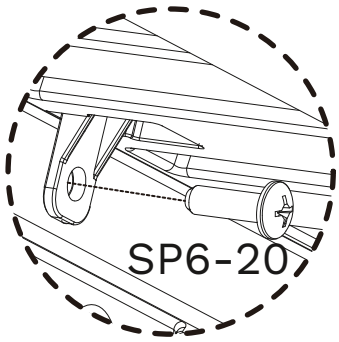

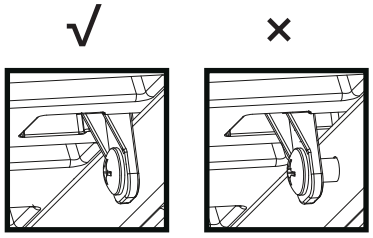


D4 should fit perfectly on the tripod.

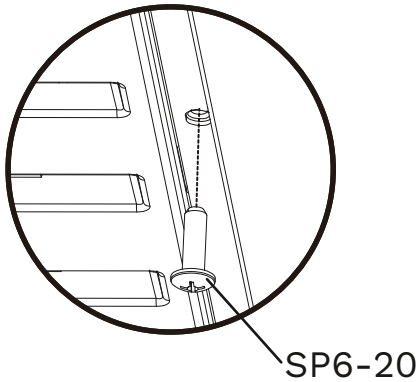






SP6-20
32 pcs

STEP 56

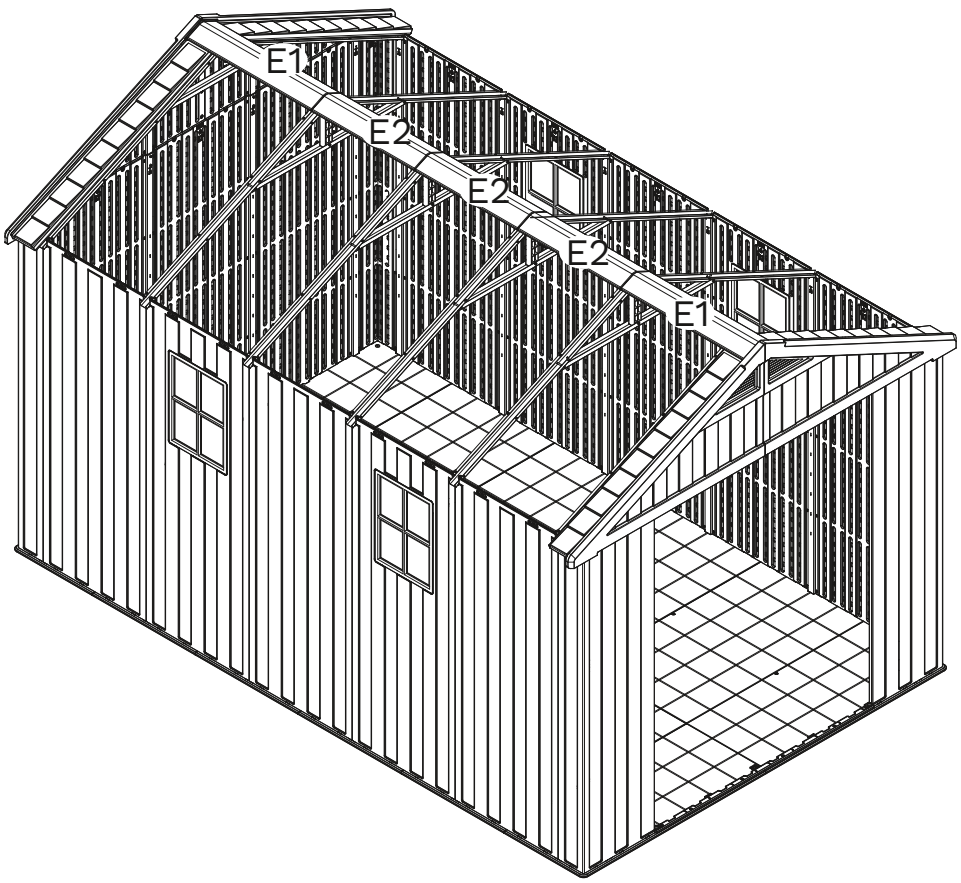

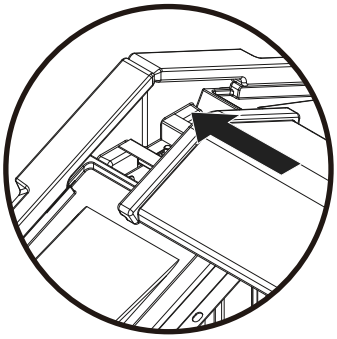

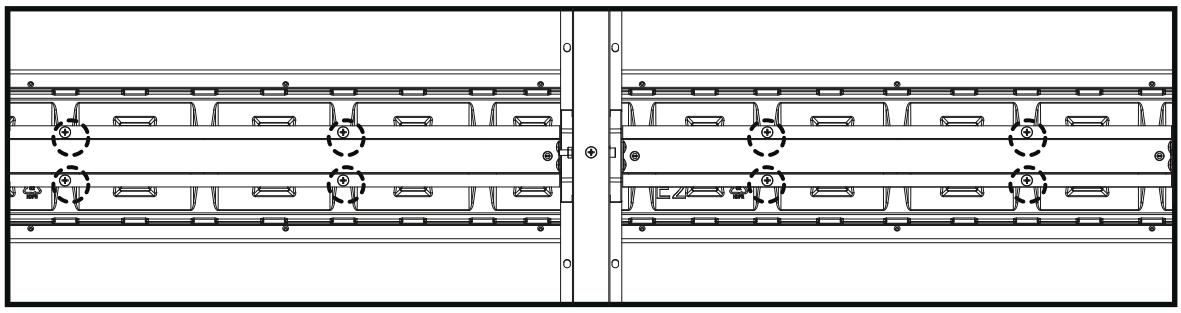


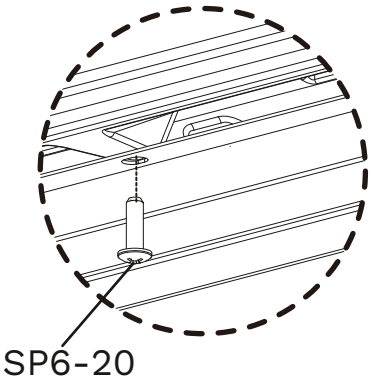





SP6-20
20 pcs


STEP 57

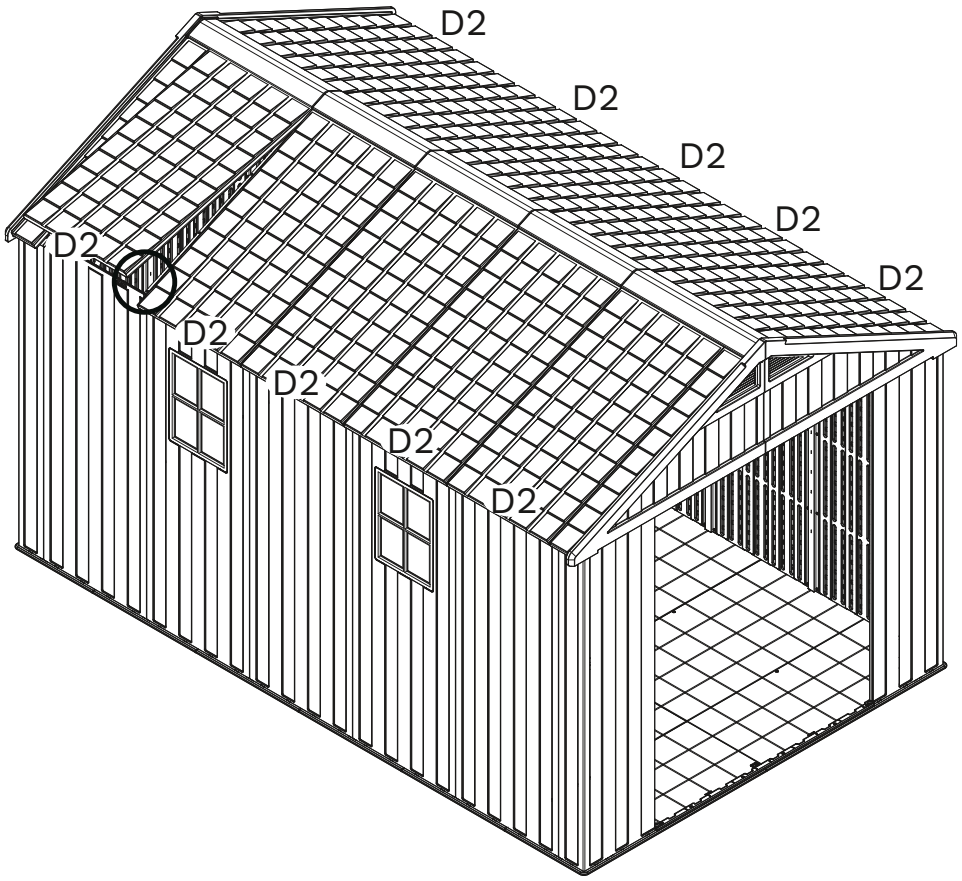

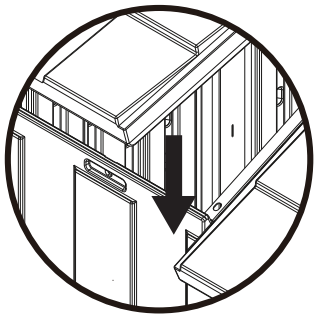


Tilt D2 into place, find the corresponding position and put it down.

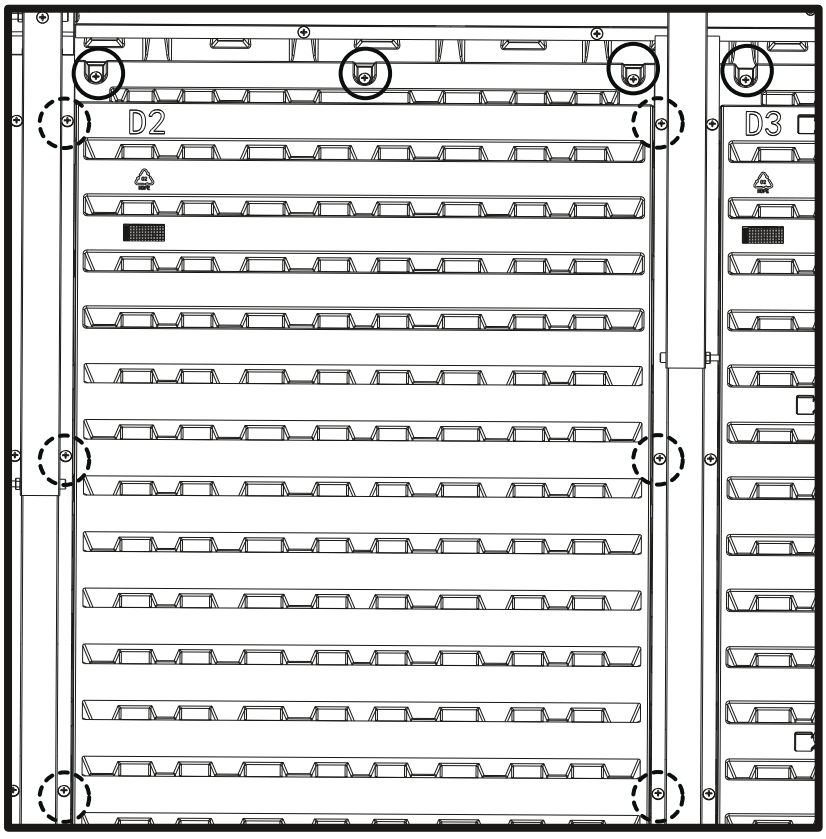

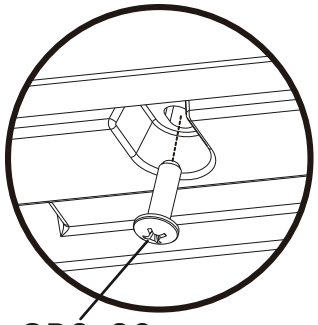

SP6-20

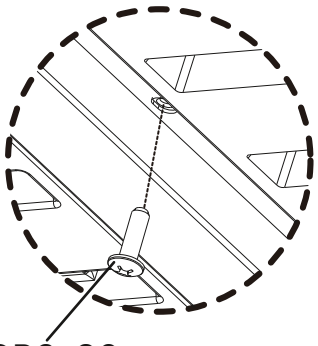



SP6-20




SP6-20
114 pcs


STEP 58

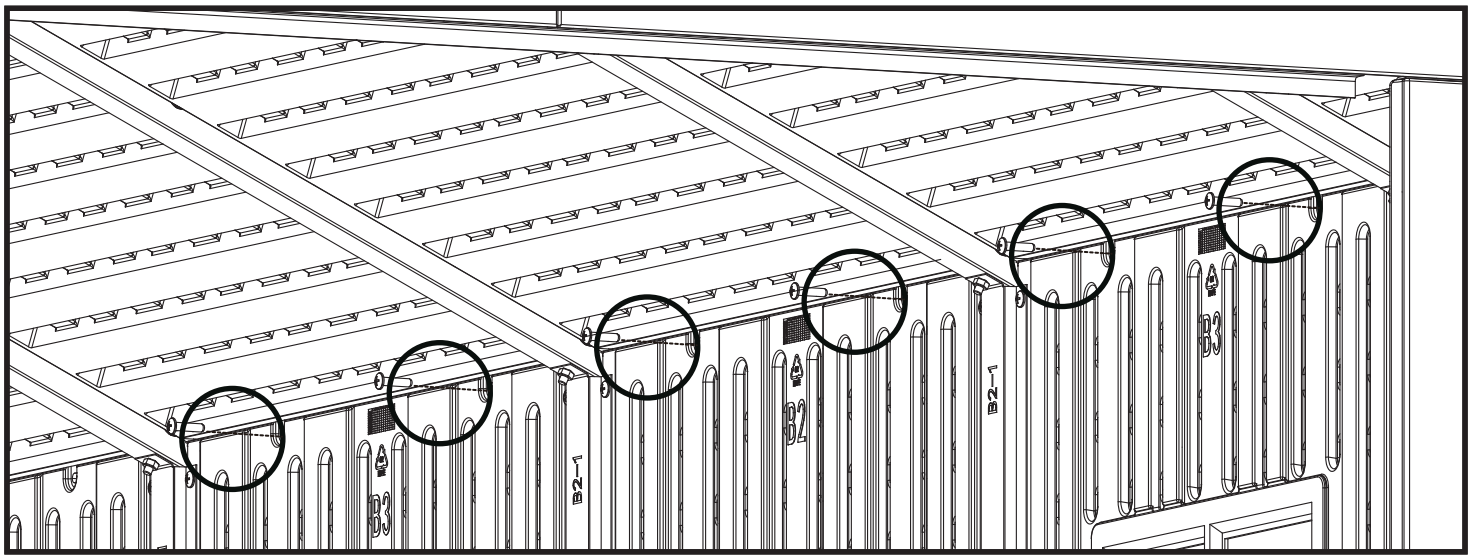


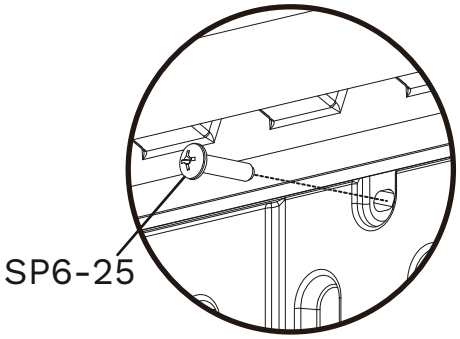

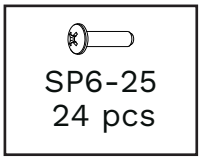


STEP 59

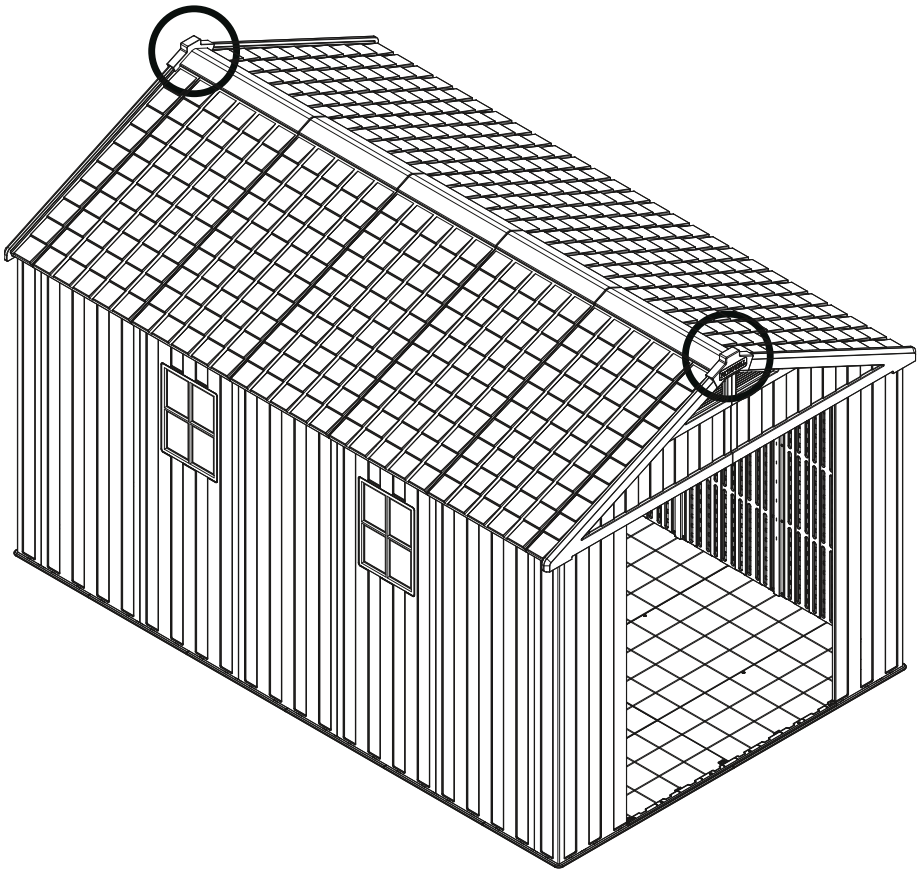


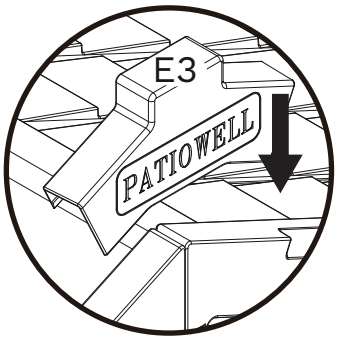

STEP 60

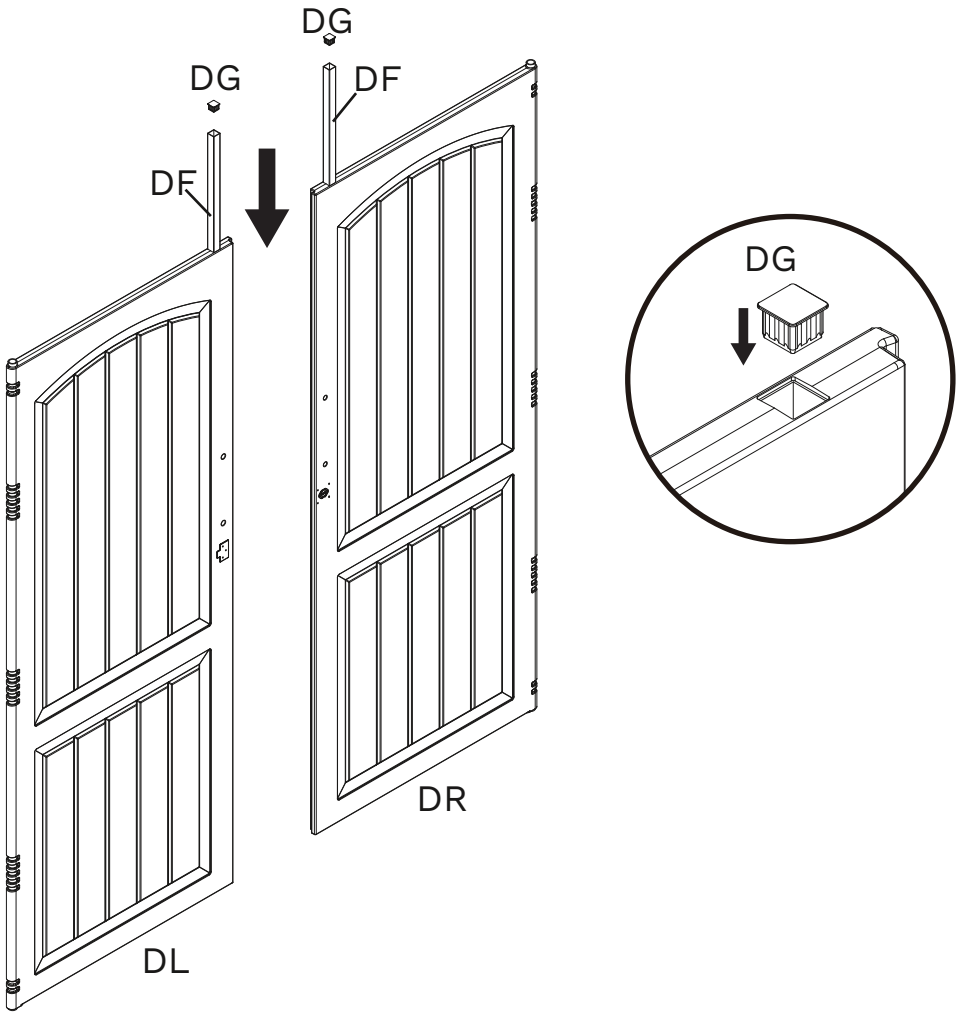


STEP 61

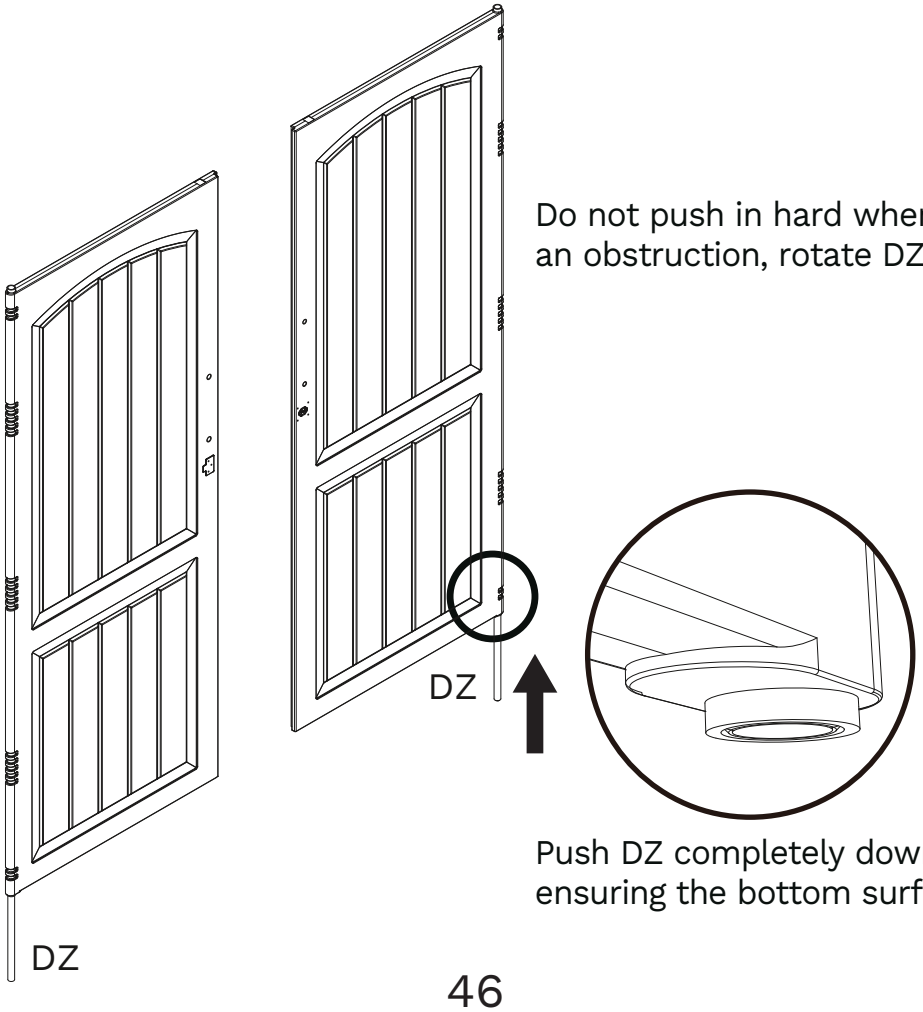


Do not push in hard when there is an obstruction, rotate DZ to adjust.

Push DZ completely down below, ensuring the bottom surface is level.

STEP 62

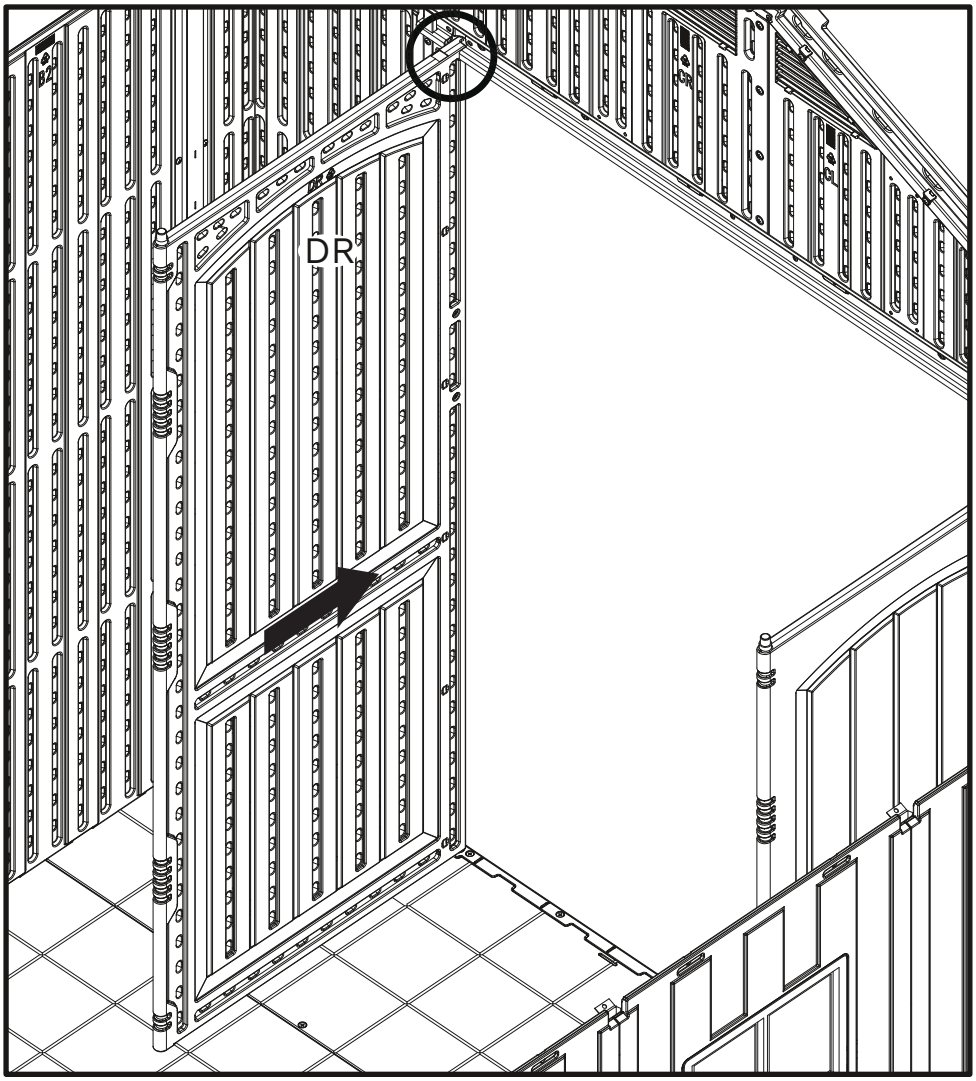


Before installation, please watch the video. Please follow the installation details in the video to avoid product damage.

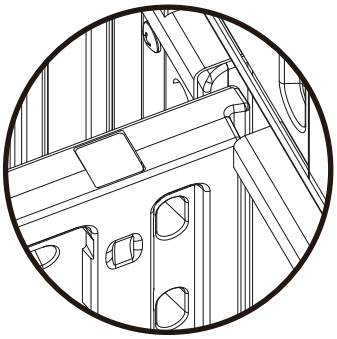


Take the DR and DL inside. Push it forward into position.

①

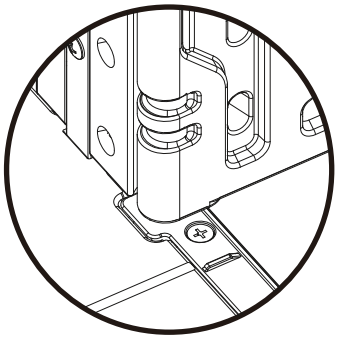


Push it into the groove of the floor.

②

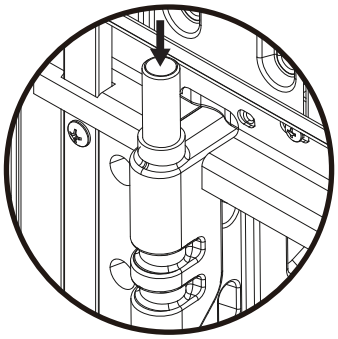


Press the DZ downwards.

③

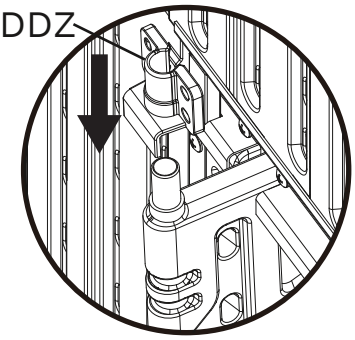


Tilting the DR and DL and snapping it into the DDZ.


④

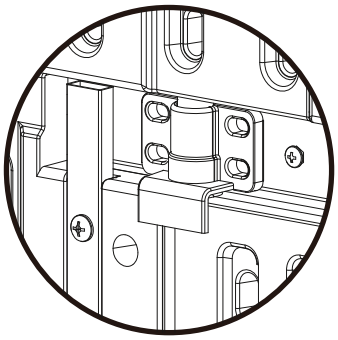



After inserting the DDZ, push the DR and DL to the fitting position.


STEP 63

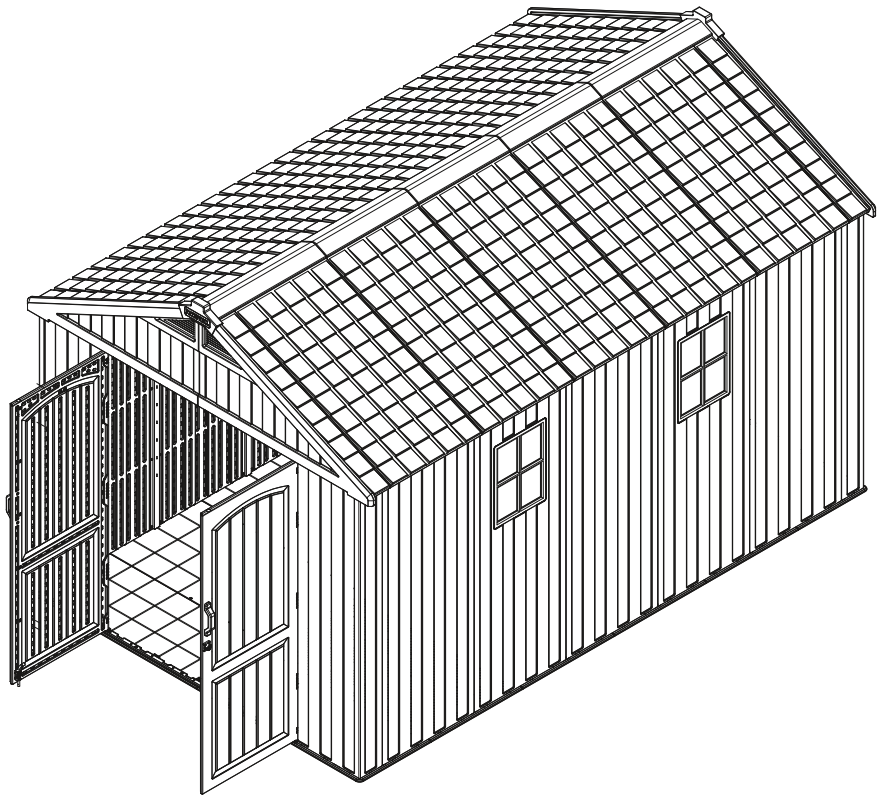


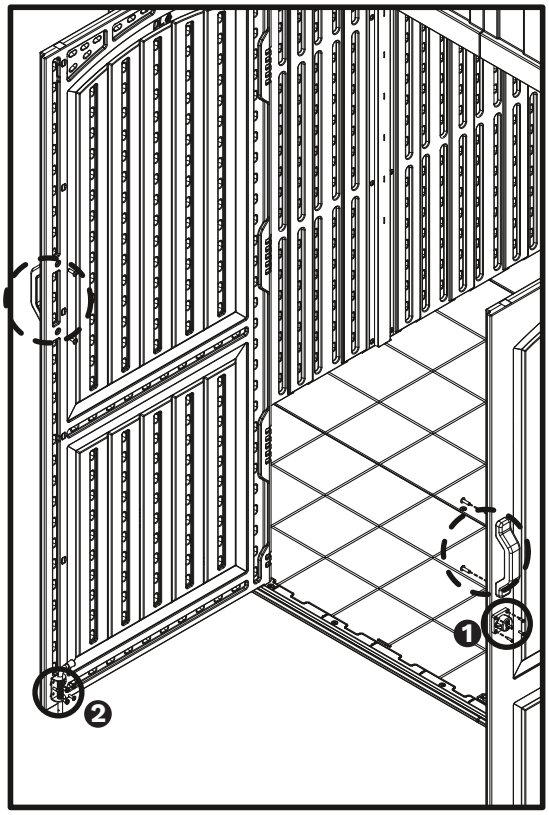

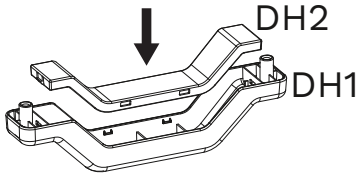

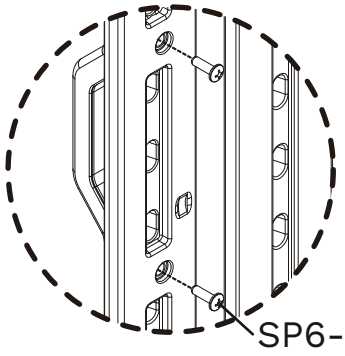

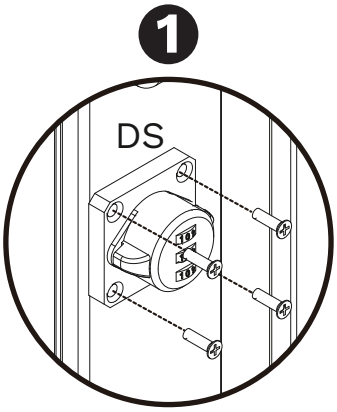


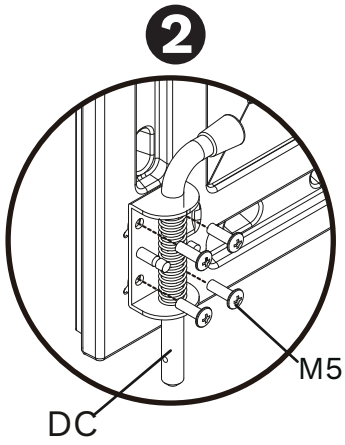


4 long screws for mounting part DS (lock part)


SP6-20	M5-12
4 pcs	4 pcs

STEP 64

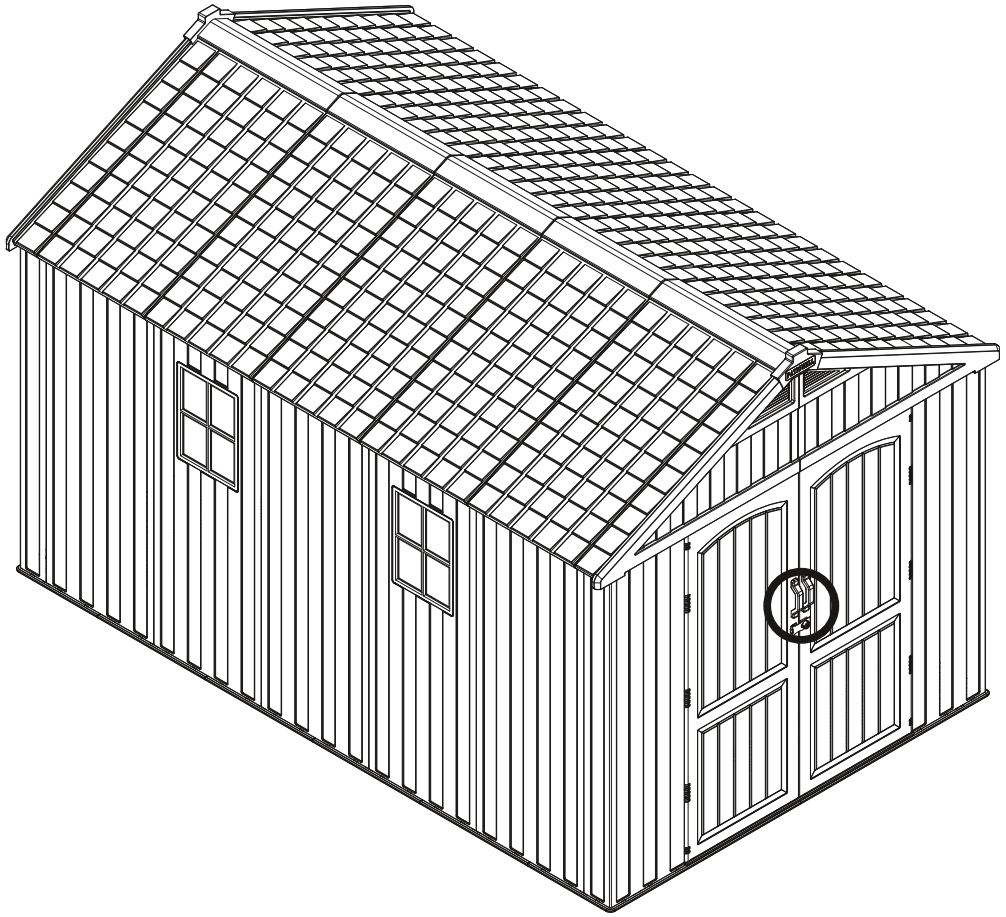

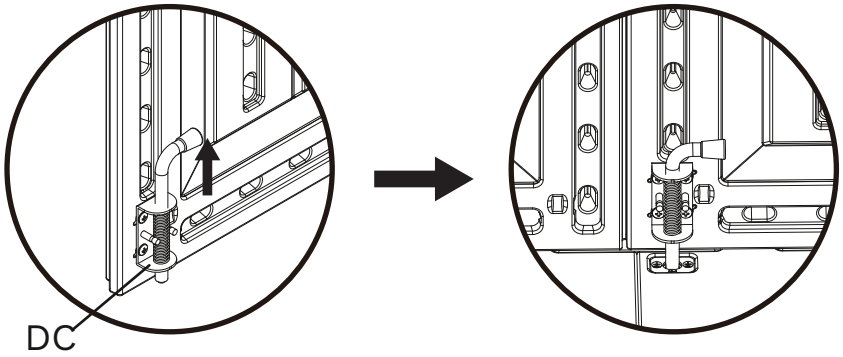


Remember to unplug the DC when closing the door and put it down when the door is closed.

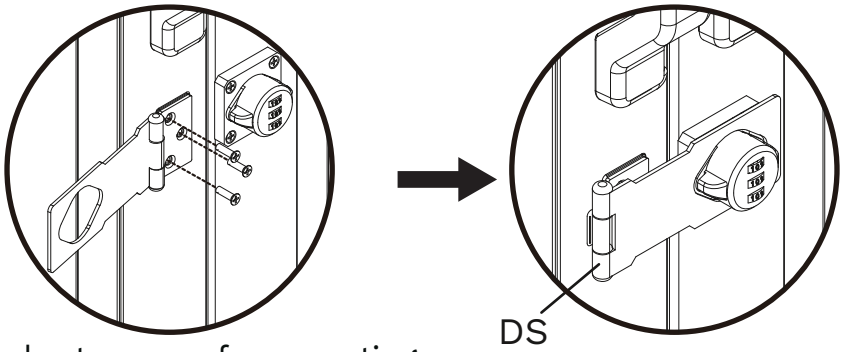



3 short screws for mounting part DS (hinge section)

STEP 65

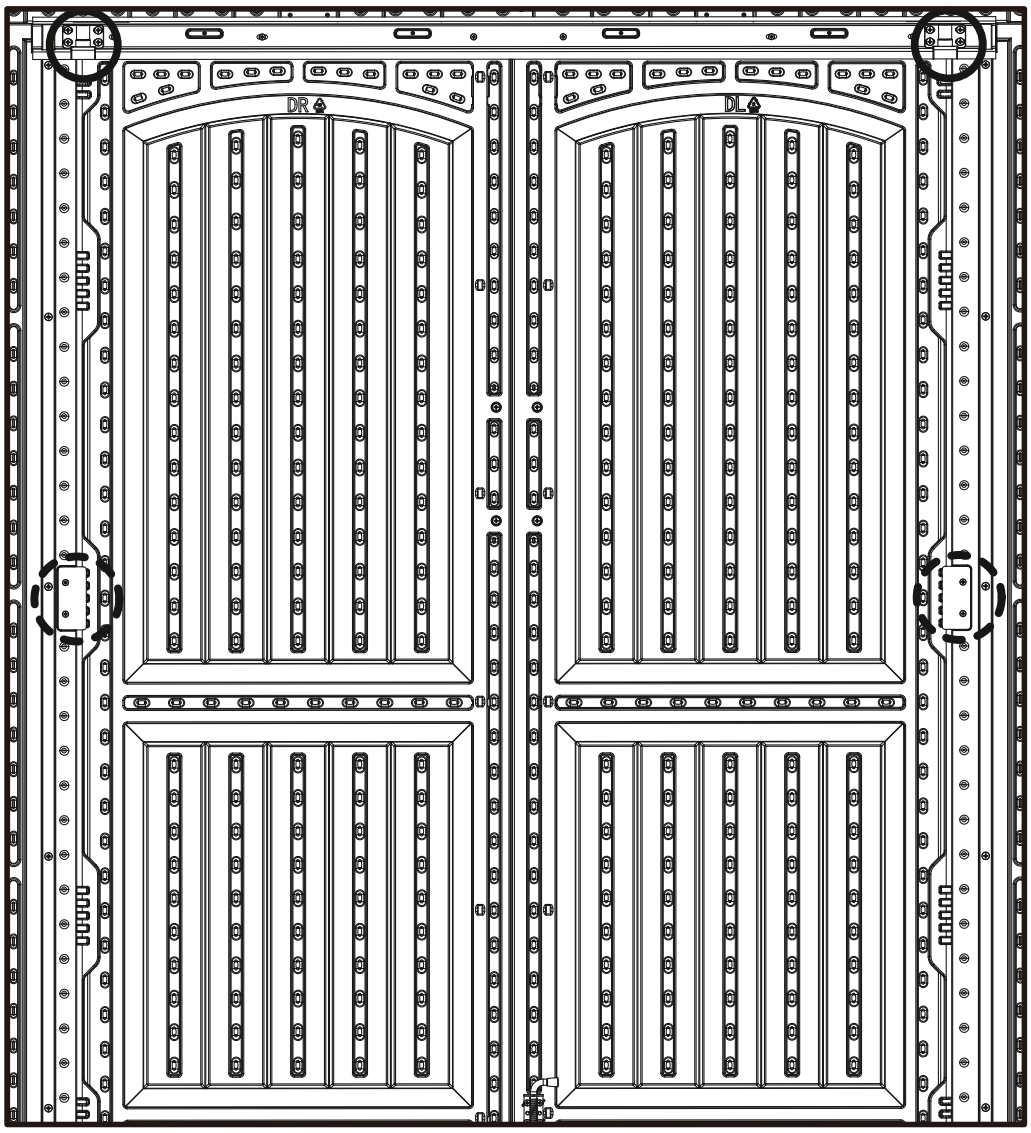

Two people are needed. One person closes the door and inserts the pin, while the other person adjusts the gap outside the door. After making sure the gap is even, the person inside installs DDZ screws SP6-20.

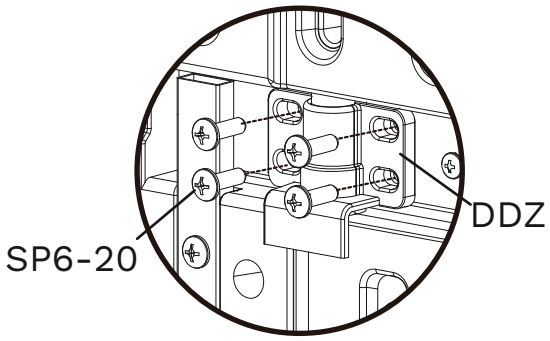

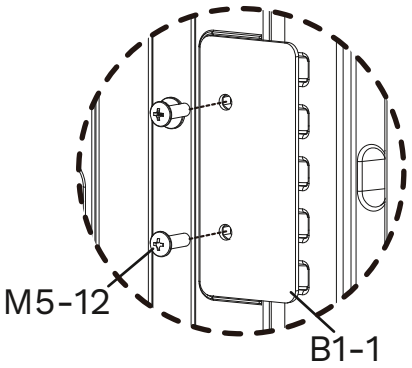

SP6-20	M5-12
8 pcs	4 pcs

- In case of fire, do not attempt to extinguish any burning polypropylene with water Unsuitable for storage of flammable or corrosive substances.
- It is of utmost importance to assemble all of the parts according to the directions. Do not skip any step.
- Please consult your local authorities if any permits are required to erect shed.
- Periodically check shed to assure that it remains stable and that the site remains level.
- It is highly recommended to secure the shed to an immovable object or to the ground by drilling holes in the floor at the pre-marked locations and inserting proper screws into the ground (size: 1.9”-3” ,screws are not included).
- Wear safety-goggles and always follow the manufacturer’s instructions when using power tools.
- Wash shed with garden hose or a mild detergent solution. Using a stiff brush or abrasive cleaner could damage shed.
- Hot items such as recently used grills, blowtorches, etc. must not be stored in the shed.
- Heavy articles should not be leaned against the walls, as this may cause distortion.
- Keep roof clean of snow and leaves. Heavy amounts of snow on roof can damage the shed making it unsafe to enter.
- Although wind direction varies, it is an important factor when taking into account where to place your shed. Therefore, it is recommended to reduce wind exposure of the shed in general, and the door side in particular.
- Keep doors closed and locked to prevent wind damage.
- Do not stand on the roof.