# ASSEMBLY INSTRUCTIONS
## CONSOLE TABLE
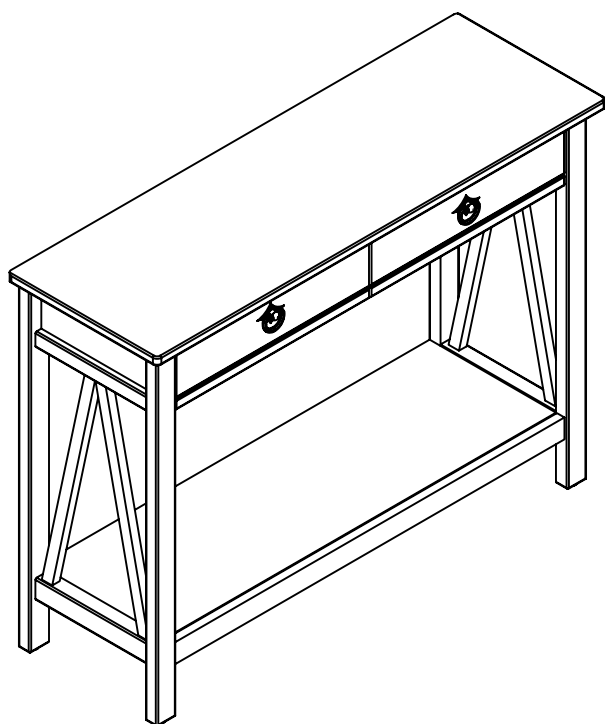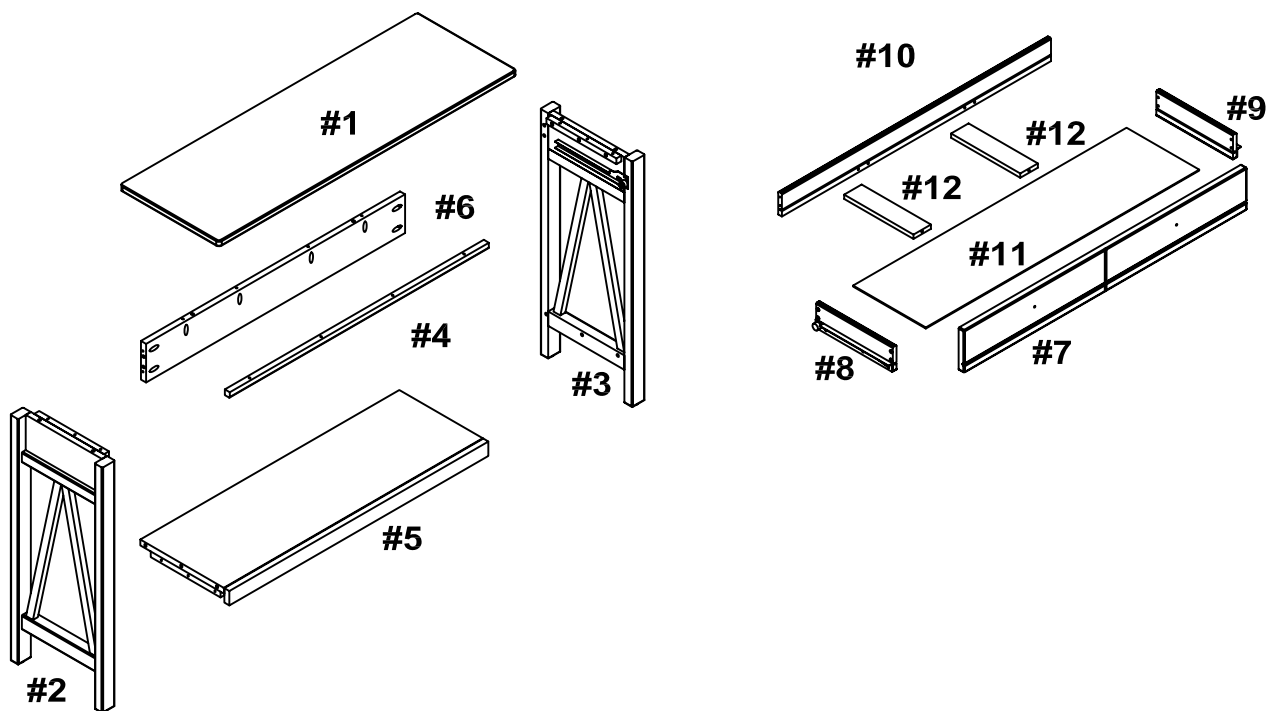
**Front view**

**Back view**

MADE IN CHINA
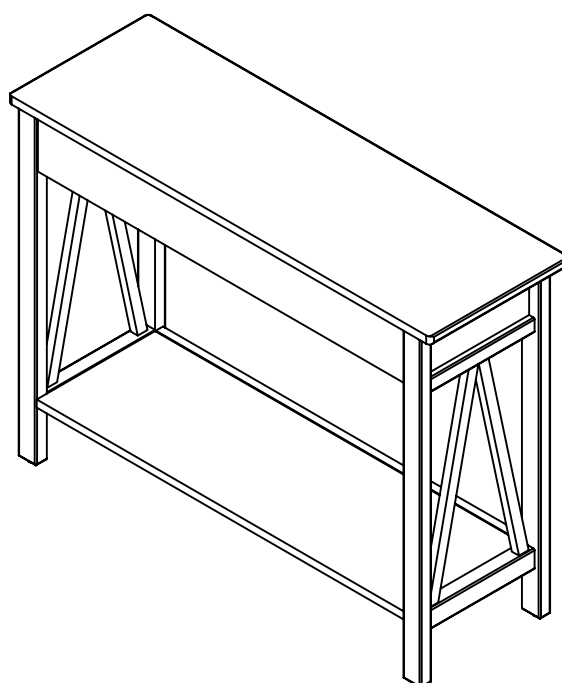
# PARTS IDENTIFICATION
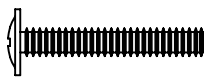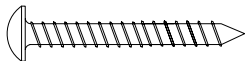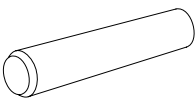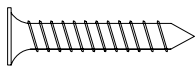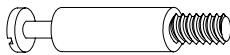
| ITEM | DESCRIPTION | QTY |
|------|-------------|-----|
| #1 | TOP | 01 |
| #2 | LEFT SIDE | 01 |
| #3 | RIGHT SIDE | 01 |
| #4 | PRESS PANEL | 01 |
| #5 | BOTTOM PANEL | 01 |
| #6 | BACK PANEL | 01 |
| #7 | DRAWER FRONT | 01 |
| #8 | DRAWER  LEFT SIDE | 01 |
| #9 | DRAWER  RIGHT SIDE | 01 |
| #10 | DRAWER BACK | 01 |
| #11 | DRAWER BOTTOM | 01 |
| #12 | DRAWER BOTTOM RAIL | 02 |

For ease of identification all parts are labeled to correspond to the Step number in which the part is used.

# HARDWARE IDENTIFICATION

**Please line up the hardware with the correct full size image to make sure you are installing the hardware correctly.**

| ITEM | PICTURE | | DESCRIPTION | QTY |
|------|---------|------|-------------|-----|
| A | | (Ø4)<br>Not to Scale | LARGE BOLT | 02 |
| B | | Not to Scale | KNOB | 02 |
| C | | (Ø4x30mm)<br>Full Size | SCREW | 24 |
| D | | (Ø8x30mm)<br>Full Size | WOOD DOWEL | 16 |
| E | | (Ø3.5x25mm)<br>Not to Scale | SCREW | 12 |
| F | | Not to Scale | CAM BOLT | 02 |
| G | | Not to Scale | CAM LOCK | 02 |

Tools required

Long screwdriver

Short screwdriver

Small hammer

# STEP 1.

knocking the wooden dowels tight by hammer

**#6**

**#6**

**#3**

**#5**

**#2**

SCREWDRIVER
(NOT PROVIDED)

# STEP 2.

knocking the wooden dowels tight by hammer

**#1**

**#1**

**#6**

**#6**

SCREWDRIVER
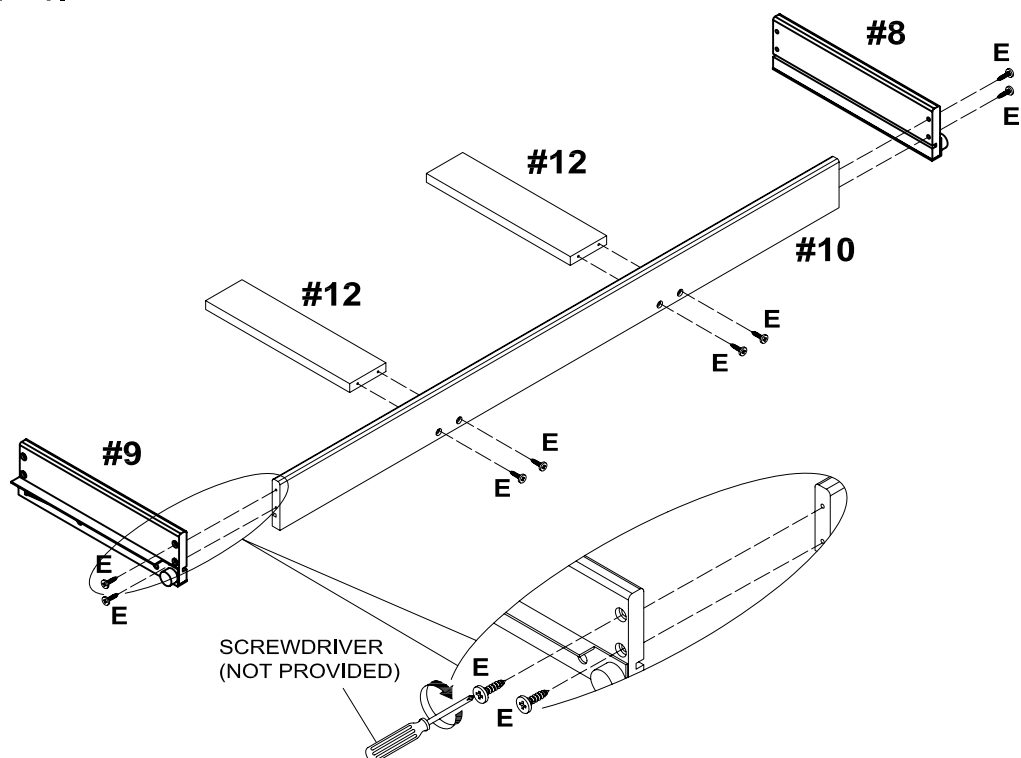(NOT PROVIDED)
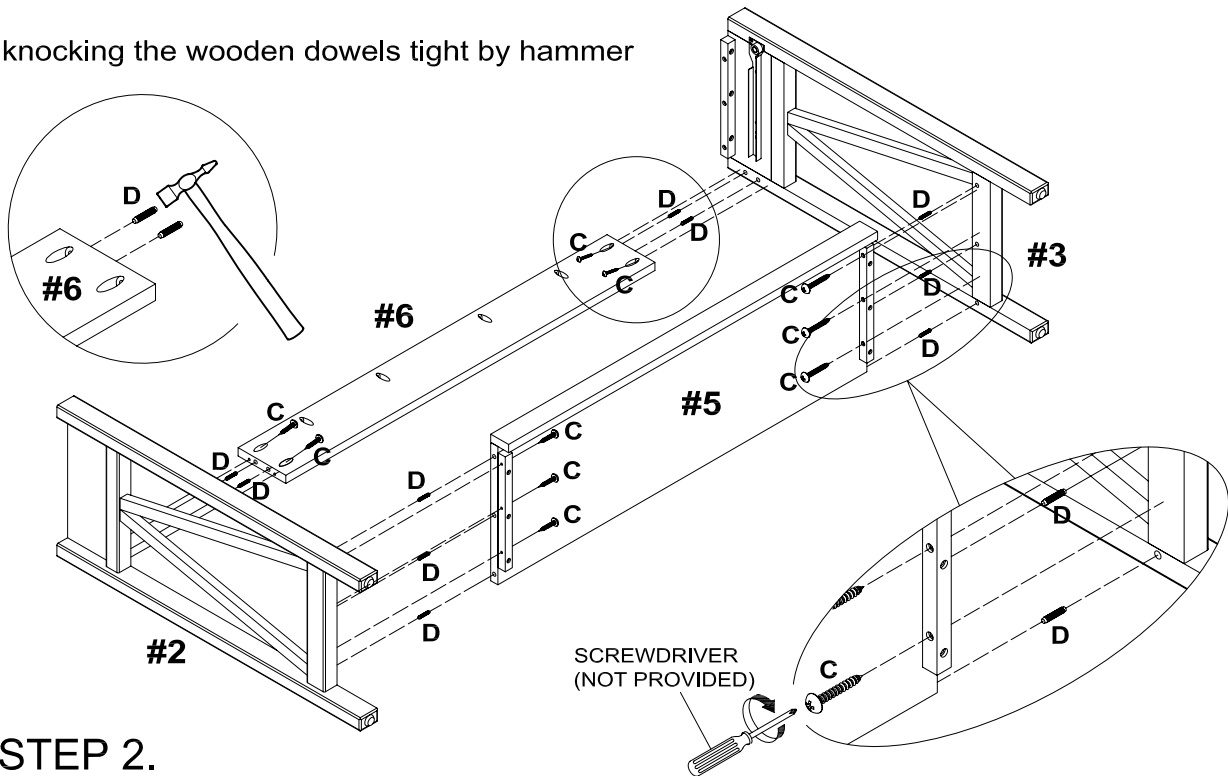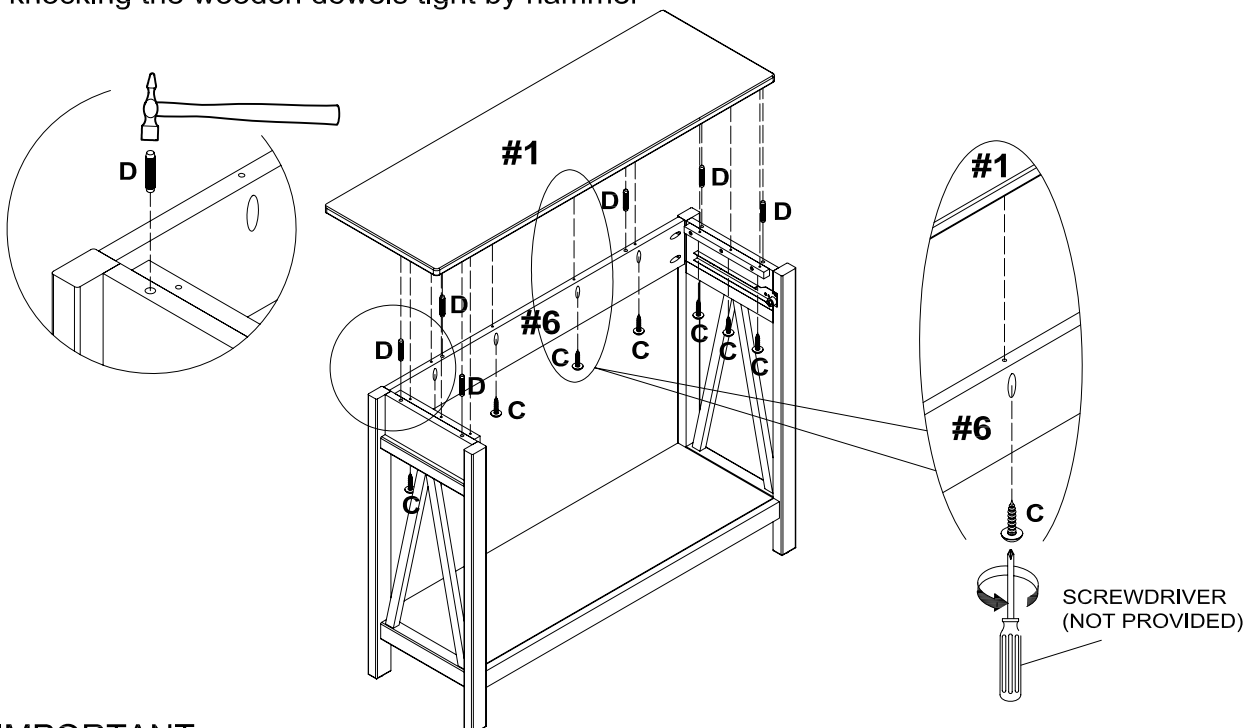
IMPORTANT:
1. DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ALL BOLTS ARE COMPLETELY
   LINED UP AND INSERTED INTO HOLES / NUTS.
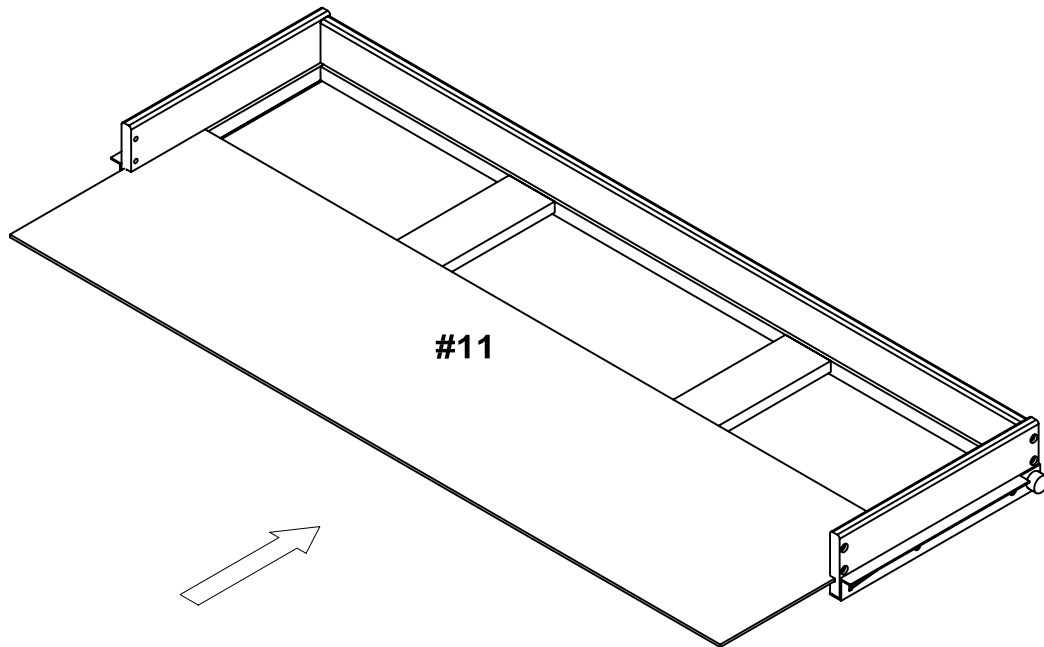2. DO NOT OVER TIGHTEN SCREWS AND BOLTS TO AVOID STRIPPING.
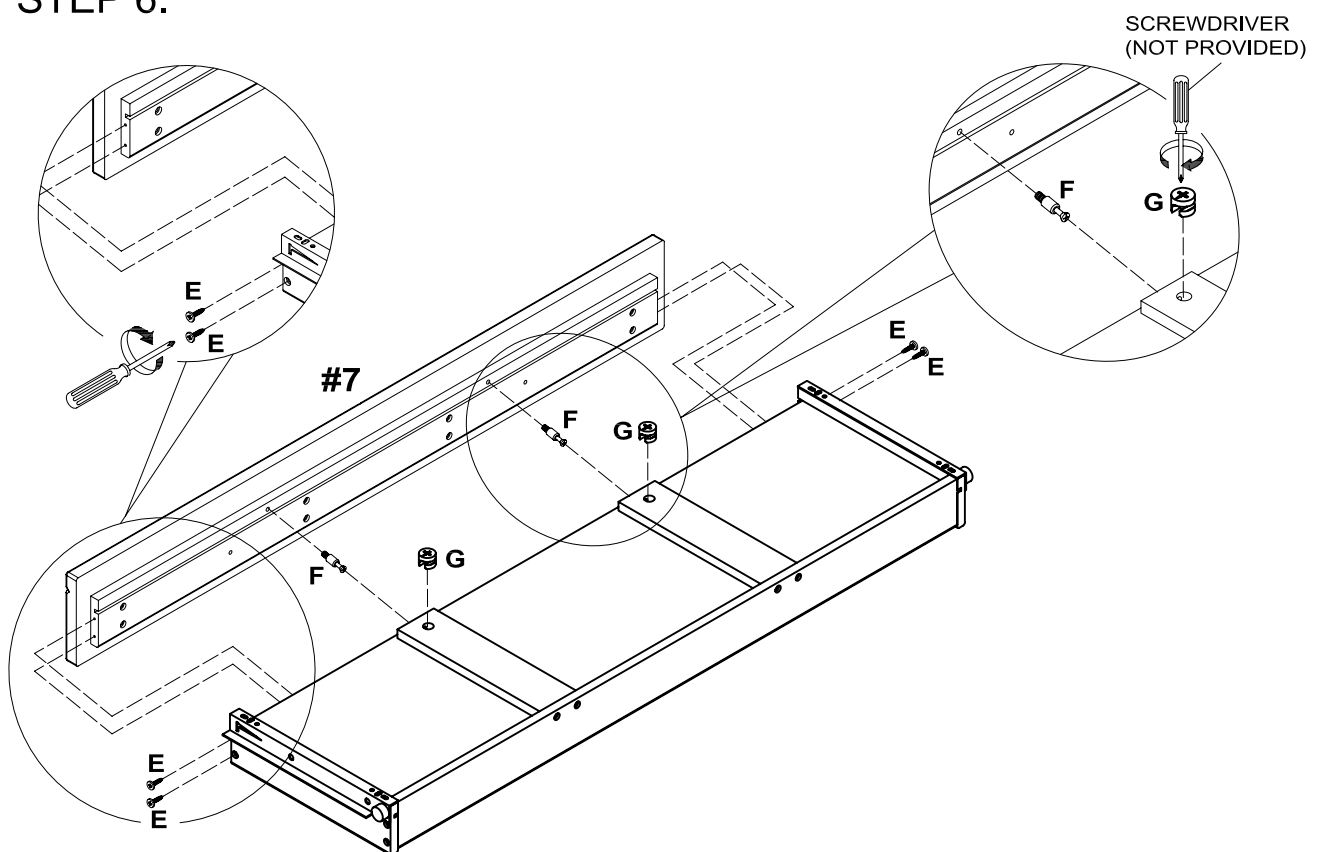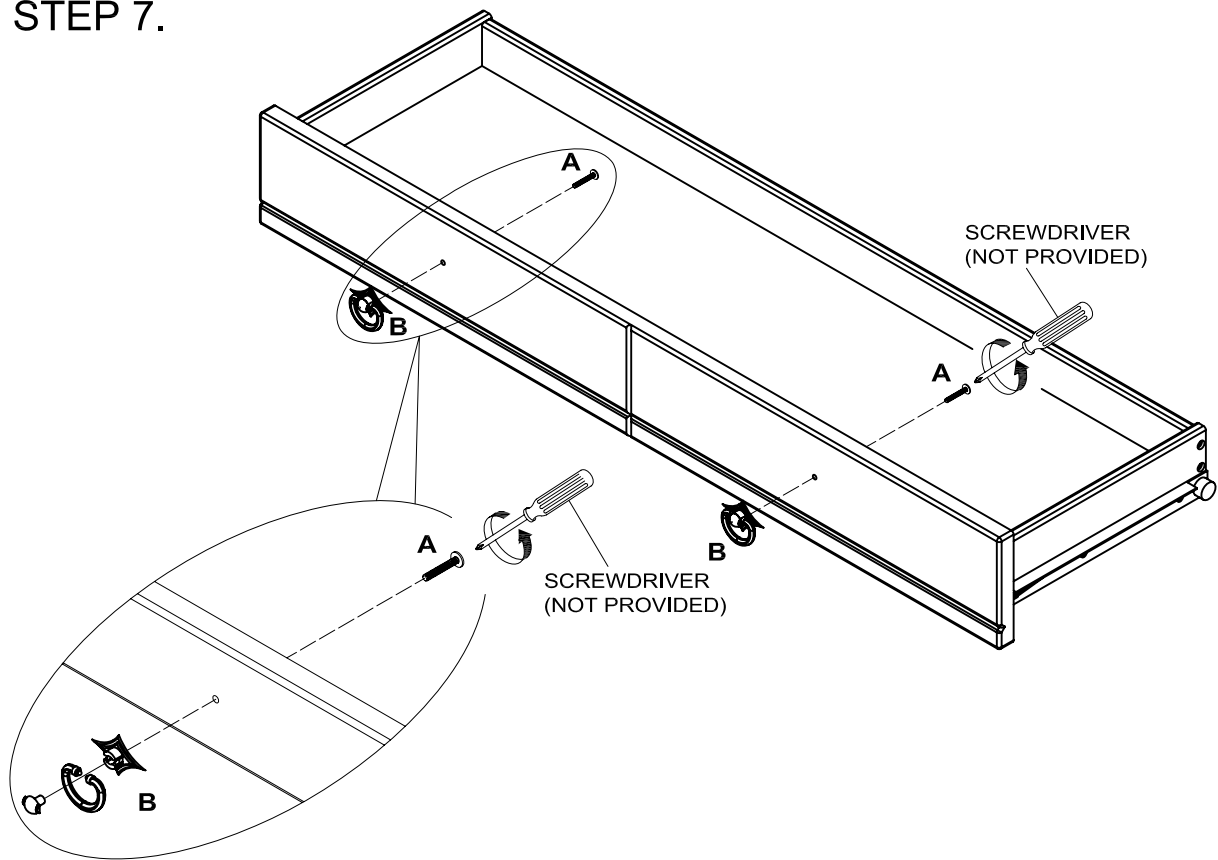
## STEP 3.

#4

C
C
C
C

SCREWDRIVER
(NOT PROVIDED)

## STEP 4.

#8
E
E

#12

#10

#12

E
E

#9
E
E

E

E

SCREWDRIVER
(NOT PROVIDED)

STEP 5.

#11

STEP 6.

SCREWDRIVER
(NOT PROVIDED)

E

E

E

E

F

G

#7

F

F

G

G

E

E

STEP 7.

A

B

SCREWDRIVER
(NOT PROVIDED)

A

A

SCREWDRIVER
(NOT PROVIDED)

B

B

STEP 8.