
ASSEMBLY INSTRUCTION

ITEM NAME : HANDMADE WOODEN BENCH

ITEM CODE : UPT-351986




TOP x 1 PIECE

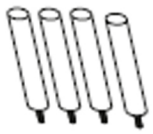


LEGS x 4 PIECE

STEP -1 ALIGN LEGS WITH THE HOLE IN THE BENCH.

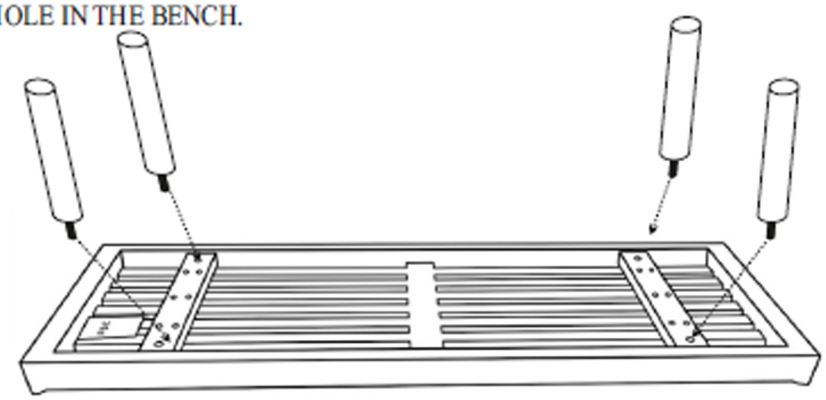

STEP 2: ROTATE THE LEGS TO TIGHTEN THEM FULLY, AND CHECK TO ENSURE THEY ARE SECURELY TIGHTENED.

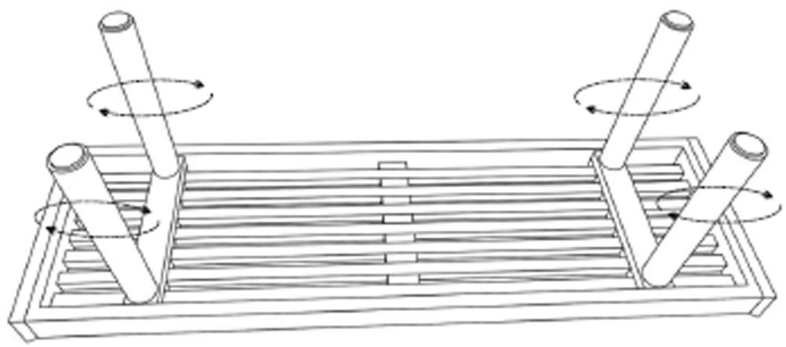

STEP 3: STRAIGHTEN THE BENCH, AND IT IS READY FOR USE.

