Gardening Made Easier. Anytime, Anywhere.

vego garden®


Mounted Wall Trellis User Manual

Models: VPSSAWTDG, VPSSAWTDG-2

Gardening Made Easier. Anytime, Anywhere.

Copyright @ 2026 Vego

vegogarden.com

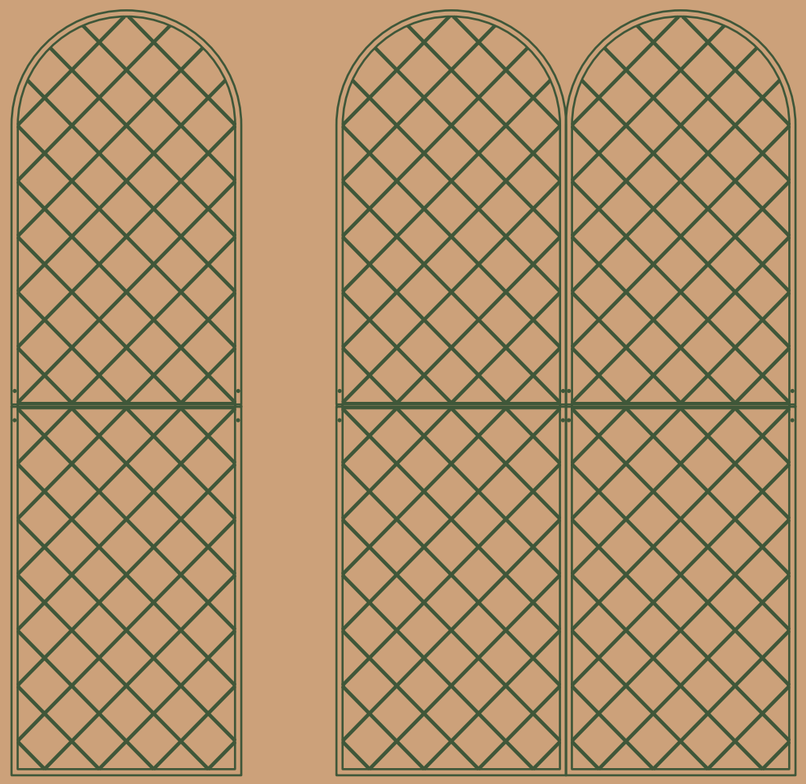

Contact Us

+1 (866) 597-1888

Vego Garden Academy

hello@vegogarden.com

vegogarden.com

vego_garden

Houston, TX

Parts List

Part Name \ Models	VPSSAWTDG	VPSSAWTDG-2
 P1	1	2
 P2	1	2
 F1	4	8
 F2	4	8

Note: Wall mounting screws and anchors are NOT included. Please select appropriate hardware based on your wall type.

Safety Precautions

- This trellis is designed for wall-mounted decorative and plant support use only. Do not use as a ladder, railing, or load-bearing structure.
- Maximum load capacity: 20 kg (44 lbs). Do not exceed this weight limit, including plants, soil, and any accessories.
- Wall mounting hardware is not included. Always select screws and anchors appropriate for your wall type (wood, brick, concrete, or stucco).
- Ensure the trellis is mounted to a solid, structurally sound surface. Do not install on damaged, unstable, or uneven walls.
- Periodically check all mounting hardware and retighten fasteners as needed, especially after strong winds or heavy plant growth.
- Keep children from climbing or pulling on the trellis.
- Wear appropriate protective equipment (such as gloves and eye protection) during installation.

Installation Preparation

Suitable for mounting on wood siding, concrete, brick, or stucco.


Choose screws and wall anchors appropriate for your wall material.

Use a level to ensure proper alignment.


Installation Instructions

1 Assemble the Trellis Panel (Z1)

Insert P1 into P2 while pressing the button. Continue pushing until the button pops out of the hole to lock the connection as shown in the diagram. This connected assembly is Component Z1.

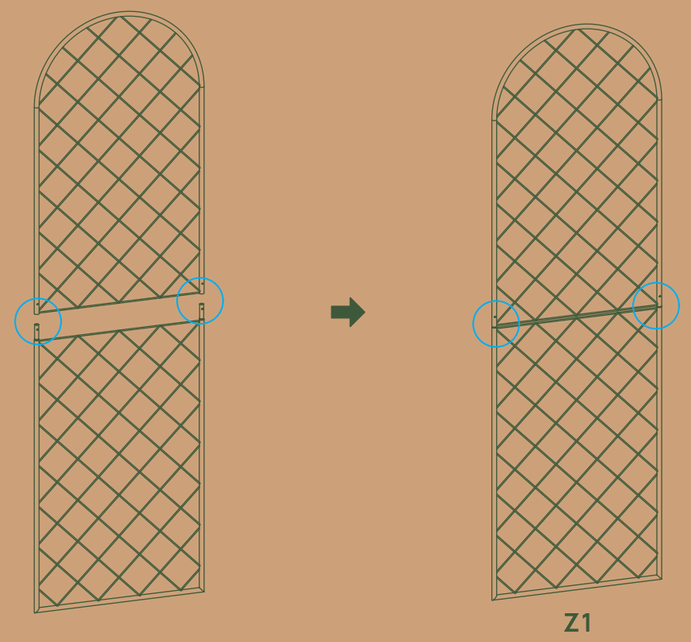


Z1

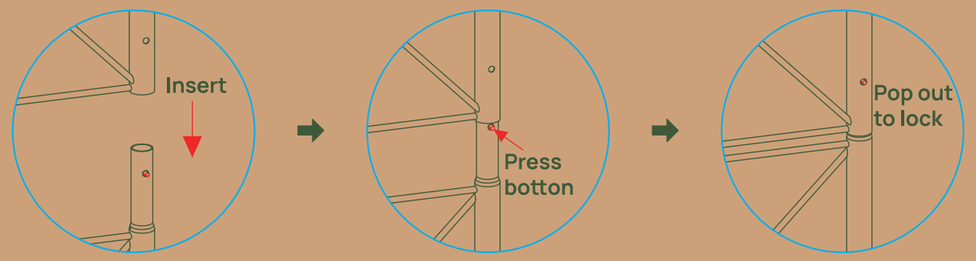


2 Assemble and Install the Top Brackets (Z2)

First, assemble the brackets by connecting F1 and F2 as shown to form Z2.
Determine the desired installation height of the trellis.
Mark the top bracket mounting hole locations on the wall according to the dimensions shown, then drill holes and install Z2.

Note: Wall mounting screws must be purchased separately and selected based on your wall material.

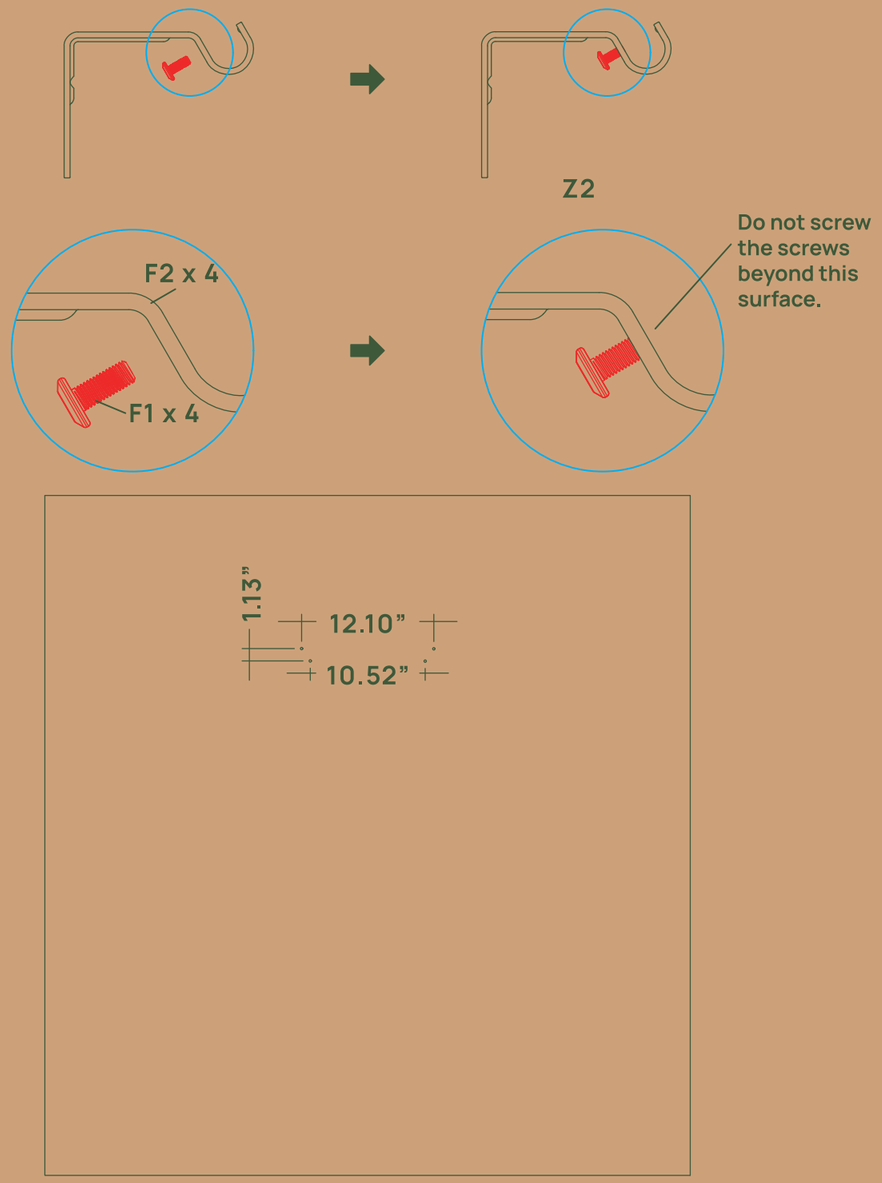


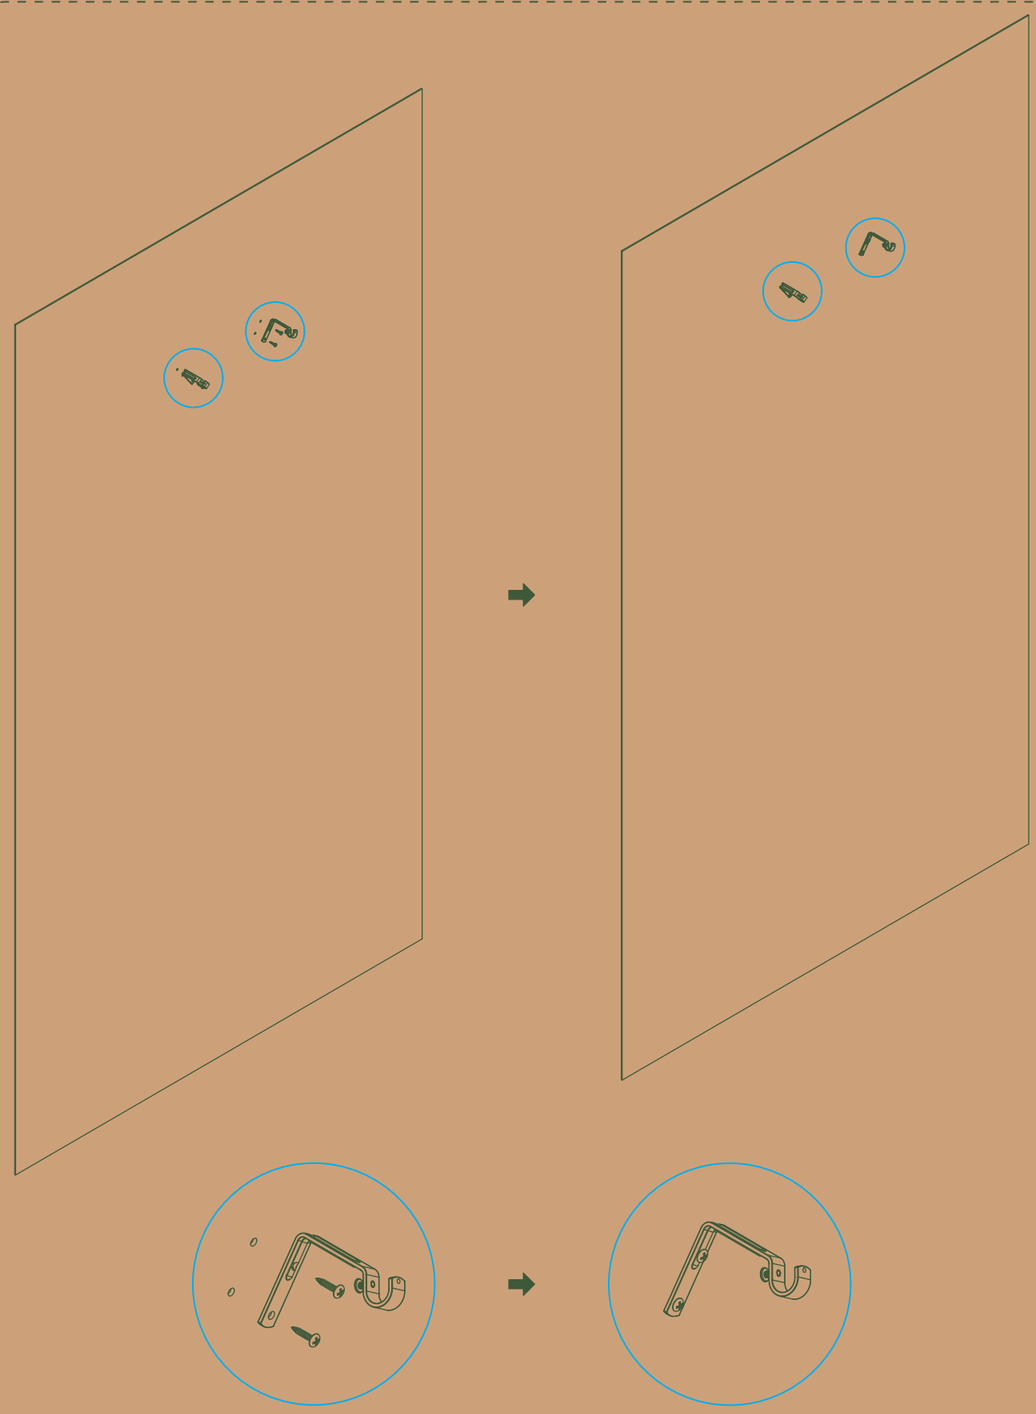

Install the top brackets (Z2).


3 Install the Bottom Brackets

Hang the trellis panel Z1 temporarily on the installed top hooks. Based on the actual position, confirm the location of the bottom brackets and mark the mounting holes (recommended spacing: approx. 12–14 inches). Remove the trellis, drill the holes, and install the bottom brackets.

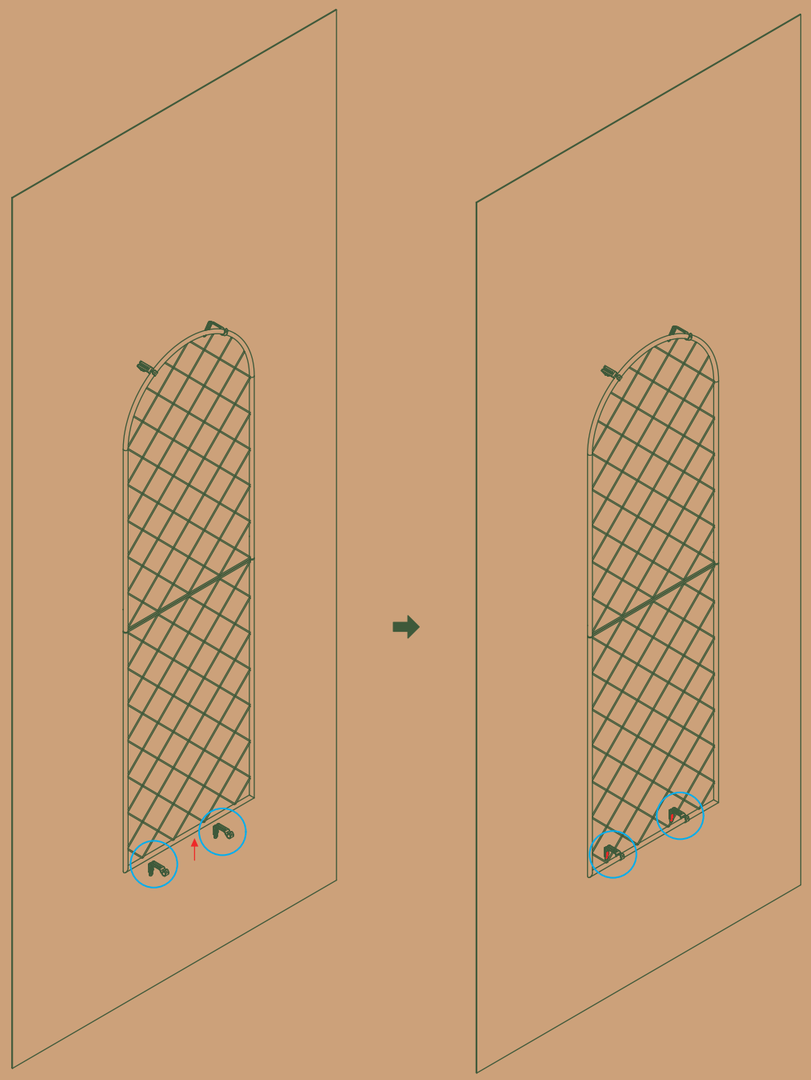


Hang up Z1 and take out Z2 for pre-placement.

Mark the Z2 mounting hole positions.

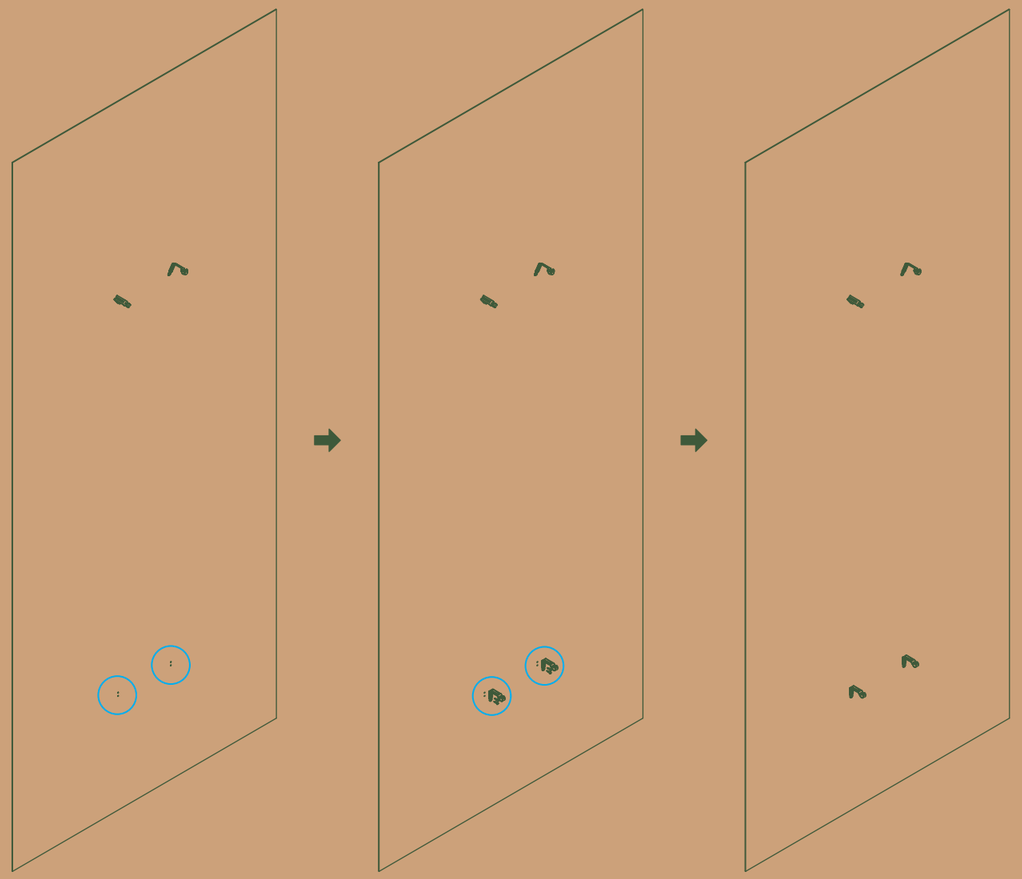


Remove Z1/Z2 and drill holes at the marked locations.

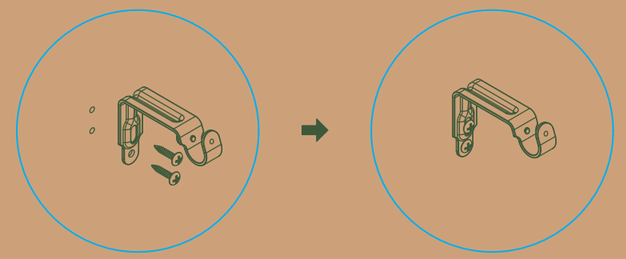


Install the bottom brackets (Z2).

4 Secure the Trellis

Hang Z1 onto the installed Z2 brackets. Tighten the F1 screws on Z2 until the round tube is firmly secured and the trellis is locked in place to prevent falling.

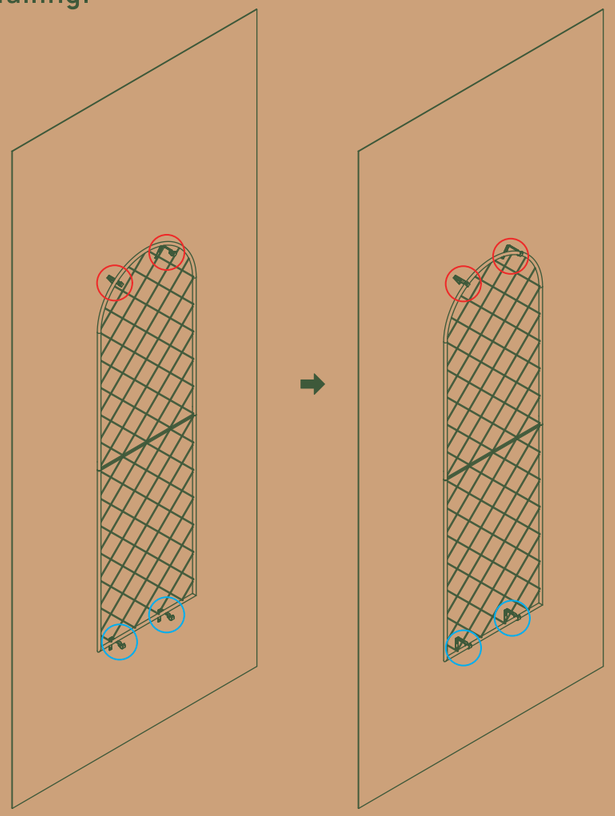

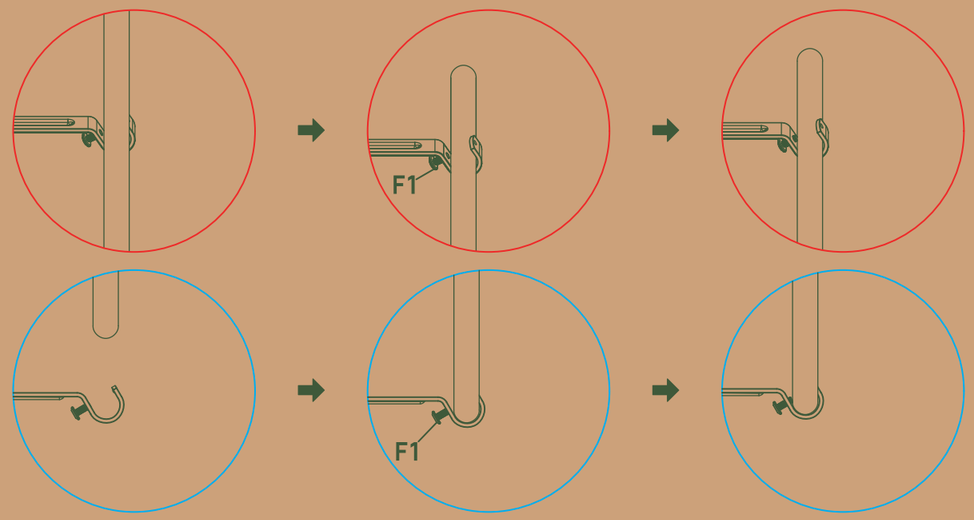

Maintenance and Care

- Clean with a soft cloth, Use mild soap and water if needed.
- Do not use abrasive cleaners or harsh chemicals.
- Avoid prolonged contact with standing water or constantly wet soil.
- If the surface coating is scratched, touch up promptly with rust-resistant outdoor metal paint.

Warranty and Support

Warranty: 3 Years Structural Guarantee

Exclusions: Damage caused by misuse, improper installation, or modifications is not covered.

Customer Support

For any issues, please contact our customer support team via:

Email: hello@vegogarden.com

Website: www.vegogarden.com