
Assembly Instruction

(The instruction is only for installation schematic, subject to the actual products)

Available with 26"x62"H,26"x64"H,26"x68"H…
Hinge Single Shower Door

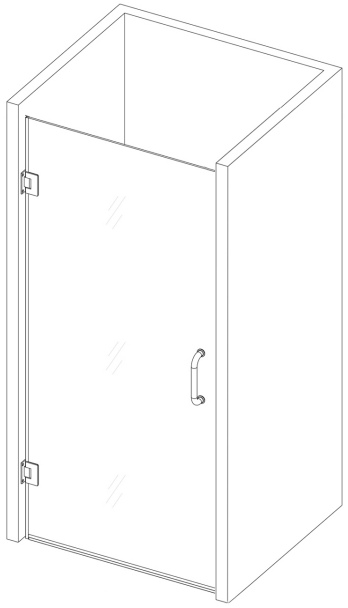

Youtube scan to get Video Assembly Instruction support

SAFETY INFORMATION CAUTION:

Please carefully read the following important safety information before handling or installing this shower door. There are risks of serious injury while handling this product. To minimize these risks. Please note:

* Always wear safety glasses and gloves while handling.

* Always follow the installation instructions.

* Do NOT cut or modify the tempered glass as it will shatter if cut.

* Inspect glass for damage before installation.

* Make sure to have a gaskets(we offered) in either side of the glass door, to make sure the metal is not touching the tempered glass.

* Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.

* Carefully remove product from packaging and keep packaging until installations complete.


* Inspect all parts for damage or missing; if there is any damage or part missing to the unit prior to installation, please contact customer service.

* Cover the drain with tape to prevent the loss of small parts. The shower base and finished walls should be installed before beginning the shower door installation.


* During the installation, protect the shower floor with a drop cloth to avoid damage.

* This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended.


NOTE: Two professional people should perform this installation.

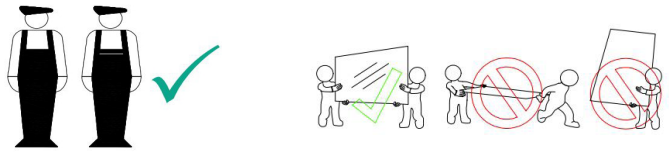

Suggest to keep this installation for future reference.

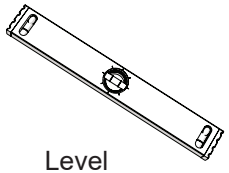


Level



Tape Measure



Pencil




Phillips Screwdriver



Screw Gun or Impact Driver




Extended #2 Driver Bit

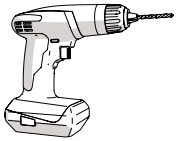


Drill



Safety Glasses




Caulk gun with clear, mold-resistant Silicone




Needle Nose Pliers



Drill Bit (6mm)




Drill Bit (8mm)

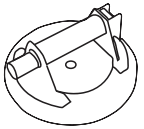

Professional-grade Glass suction cup




Crescent Wrench



Rubber Mallet



Metal File

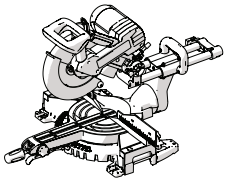

Compound Miter Saw with Blade for Cutting Metal




Razor Knife



Work Gloves

Tools

Parts breakdown

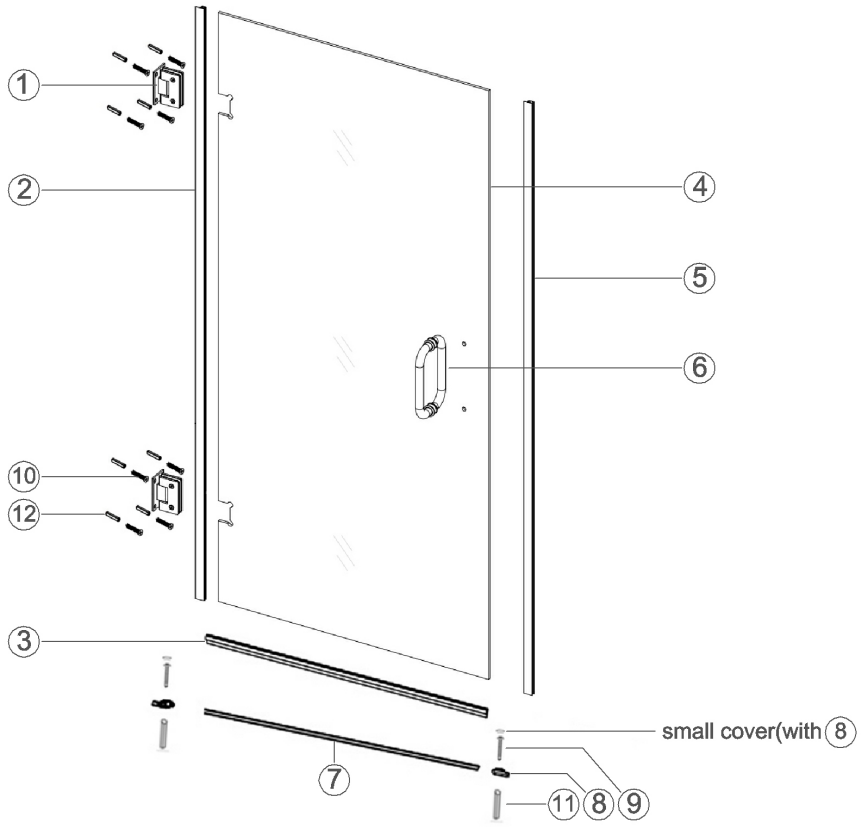

NO.	Name	Picture	Qty	NO.	Name	Picture	Qty	NO.	Name	Picture	Qty
1.	Hinge		2	5.	h Water Vinyl		1	9.	ST4x20		2
2.	Water Block Vinyl		3	6.	Handle		1	10.	ST5x35		8
3.	Low Water Vinyl		1	7.	Lower Profile		1	11.	Φ6 Wall Anchor		2
4.	Glass Door		1	8.	Lower Profile Cover		2	12.	Φ8 Wall Anchor		8

Attention Please:
This product has relatively high requirements for the width of the installation position and can only be installed within an error range of ± 5mm (25.8"-26.2")
Before installation, please be sure to check whether the installation width of your bathroom meets the requirements above.

Installation Procedure A:


1. Find out the height of the product vertically upwards "H" at the installation position of this product.
"H"=64"(1626mm)
(it is recommended that the outer edge be 25mm inward)

2. Place the **Hinge** at the position shown in the diagram 155mm down from "H". Make 4 marks with a pencil.


3. Place the **Hinge** at the position shown in the diagram 180mm upwards from the installation bottom. Make 4 marks with a pencil.

4. Dril 8mm hole and inject **8mm Wall anchor**.


Setp 1:

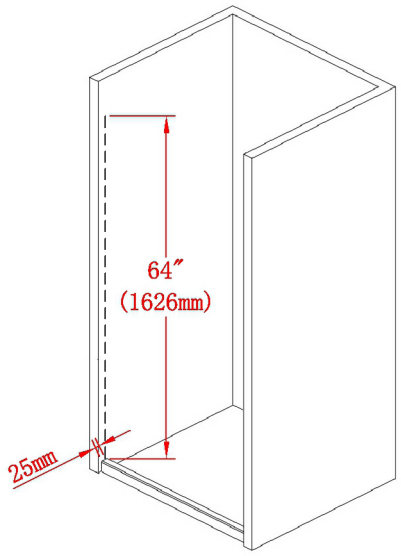


Setp 2:

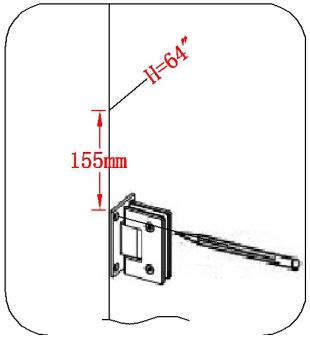


Setp 3:

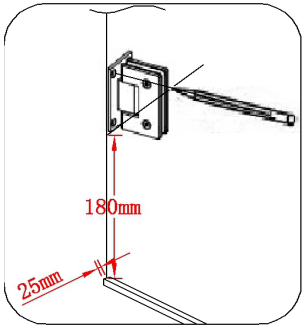

Setp 4:

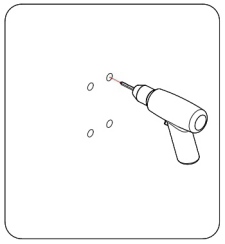

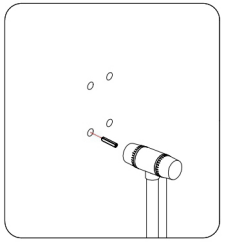


Installation Procedure B:


1. Place the **Glass Door** flat on a clean table, Assemble the 2 **Hanges** in following order at the positions of the notches.

2. Align with the **8mm Wall anchor** on the wall and install the **Glass Door** with **ST5*50 X 8** screws.

Setp 1:

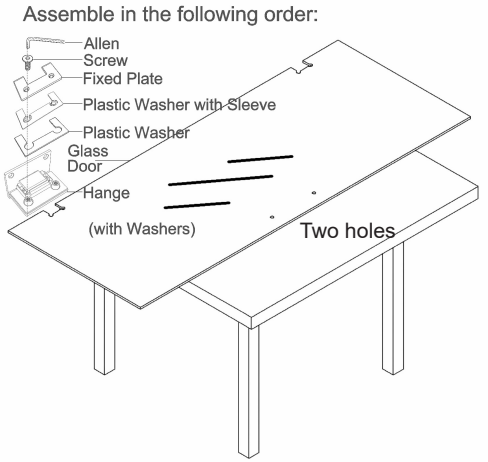

Setp 2:

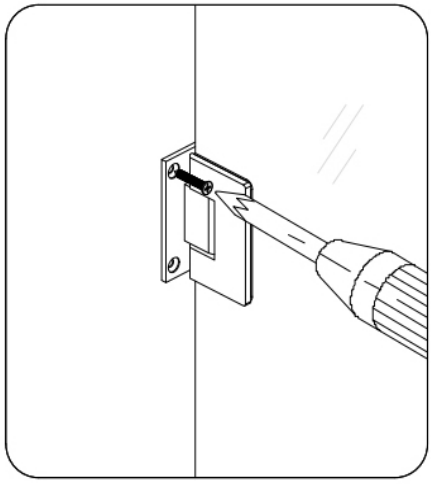

Installation Procedure C:


1. Install the **Handle** properly.

2. Place the **Lower Profile** on the ground at the middle of position. Cover the **Lower Profile Cover** and mark with a pencil.


3. Drill 6mm x 2 holes on the ground with a drill bit, install **Φ6 Wall Anchor x 2**, and secure the **Lower Profile Cover** with **ST4*20mm x 2** screws. Then cover the lid.

4. Install 3 different types of Vinyls according to the following instructions:
   A. **Low Water Vinyl** is installed at the bottom.
   B. **h Water Vinyl** is installed on one side of the door handle.
   C. **Water Block Vinyls** are installed on one side of the hinge.

Setp 1:

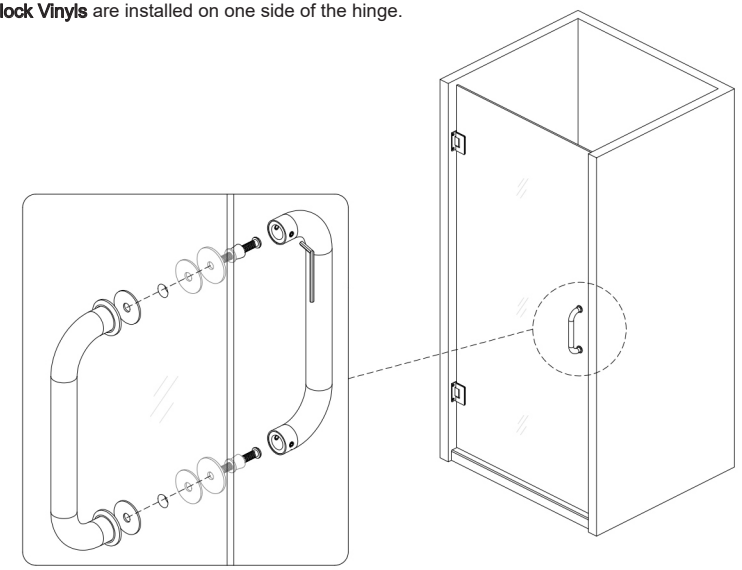



Setp 2:

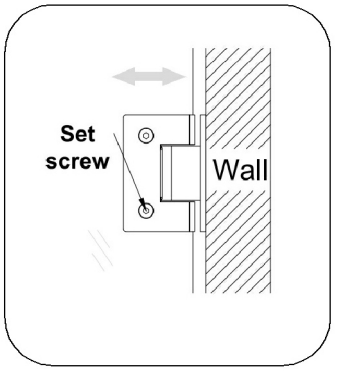

The width and height of the door
can be fine-tuned through this screw

Setp 3:

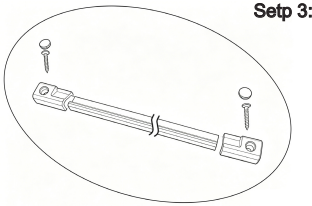

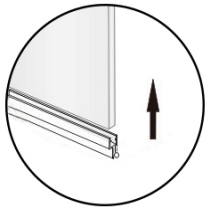


Setp 4:

Installation Procedure D:

1.1.Check the whole product, adjust it to the best condition, and make the **Glass door** smooth, in good seal, covered with the **Decorative cover**.

2.Clean in good health, as shown by the dotted line gelatinize the neuter glass glue. After 24 hours, You shower will be ready.



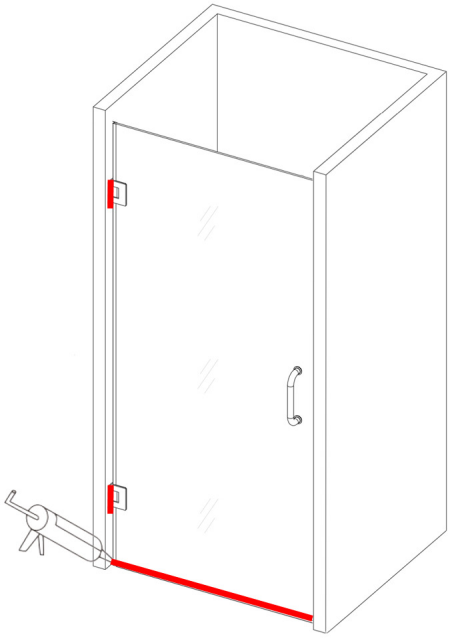

Please allow 24 hours for the silicone to fully cure before using the shower.

Usage and Maintenance

I. How to use and maintain the pulley of shower room

1.Avoid colliding the shower room active door energetically, to avoid activity door falling off; When the pulley does not turn or activity door does not move, the pulley needs replacing, it can't be energetically pushed or pulled, so as not to crush the glass loss.

2.Regularly clean slippery course, pulley of the shower room, fill lubricant (lubricating oil and lubricating wax);

3.When active door of the shower room is closed, there is seam above or below:

4.Check whether verticality deviation occurs, if any, install and adjustment.

II. The maintenance of toughened glass of shower room

1.Don't use sharp blow or hit shower room glass surface, so as to avoid breakage;

2.Do not use corrosive liquid such as banana oil to wipe the glass shower room surface, so as not to damage the surface luster;

3.Don't use coarse material to wipe the glass surface of the shower room to avoid scratch.

4.The glass is cleaned with cotton cloth or soft cloth after being wetted.

III. The maintenance of the aluminum alloy frame of the shower room

Oxidation coloring products, (silver, silver, brushed silver surface coloring class): This kind of products is not easy to fade compared to electrostatic coating products, but the surface can neither be wiped with coarse material, the surface can't be depicted with sharp object. If the shower room aluminum surface besmirch, please use neutral detergent dissolved in water before cleaning.

IV. The maintenance of the hardware fittings

1.The cleaning of furniture hardware fittings, wet cloth is used to wipe or the wet cloth is dipped into neutral detergent or cleaner processing, finally water stains are dried.

2.When the surface has serious besmirch or scratches, fireworks burn, a sandpaper (2000) can be used to grind the surface, with a microfiber cloth to wipe.

3.Don't use sharp and hard goods to scrape the surface of metal accessories, to avoid contacting with the materials such as hydrochloric acid, salt, bittern.

4.Keep clean, there are water stains on the surface during use, wipe dry after use, keep the surface dry and cleaning regularly.

We sincerely wish you a wonderful experience !

Youtube scan to get Video Assembly Instruction support

Thanks !