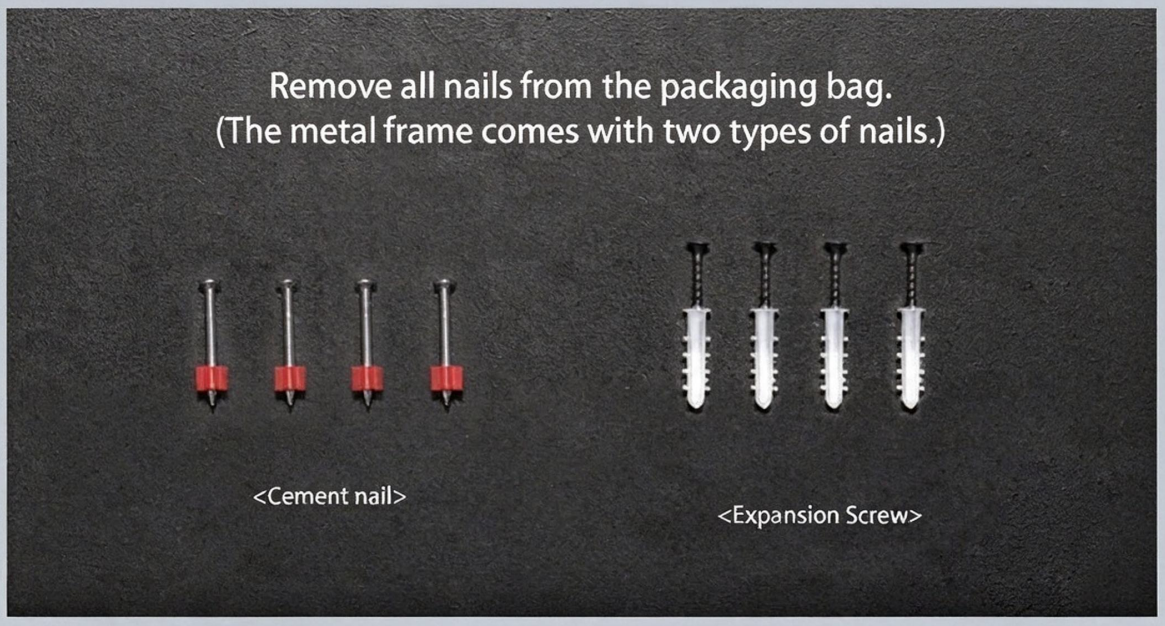

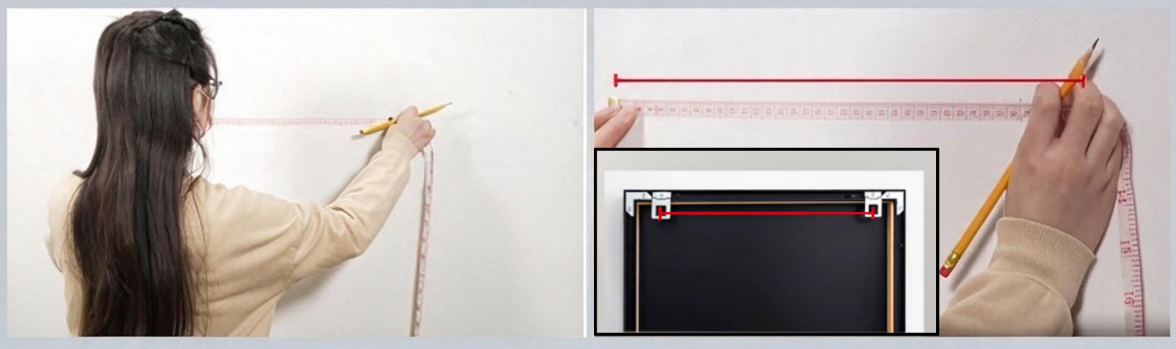

Step 2: First, take out the measuring tape from the installation package and mark the installation position on the wall with a pencil. The distance between the marked positions the distance between the hooks on the back of the decorative painting.

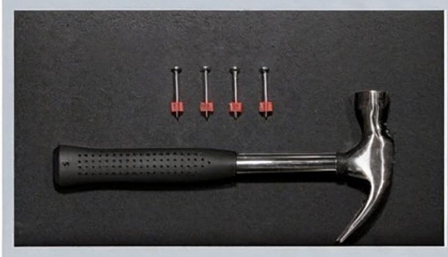

Installation method of cement nails
☆ Applicable to non-load-bearing walls and partition walls
☆ Please prepare a hammer

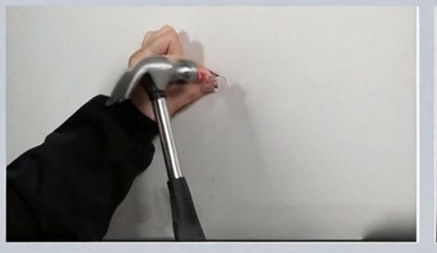

Align the cement nails with the marked positions and gently tap them into the wall.

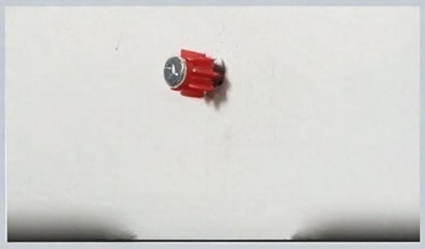

Leave the nails at the distances shown on the drawing for hanging pictures.

1

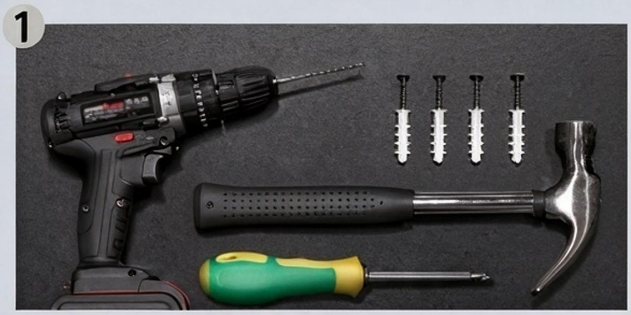

①

Install the wall panels. Follow the instructions on the wall panels.
Please prepare a hammer, a Phillips screwdriver, and an electric drill.

②

Select the No.6 drill bit for the electric
drill and make a hole at the marked position.

③

Align the plastic part with the marked
position and gently tap it into the hole.

2



3

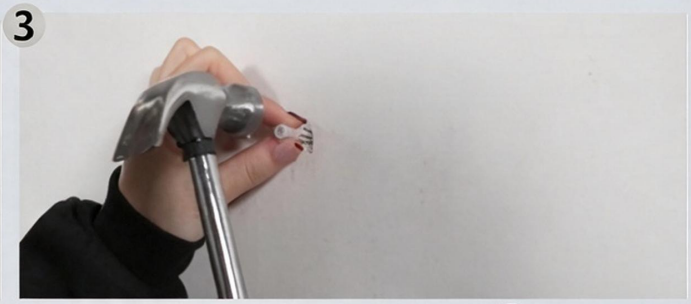

4

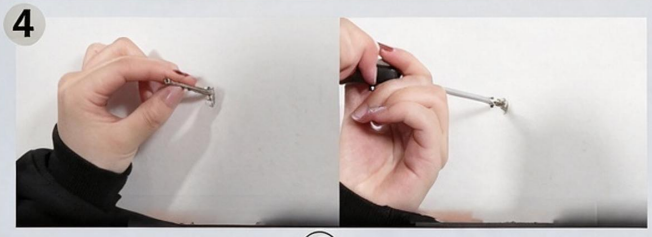

5



⑤

Just tum it to this position.

④

**Align the screw with the plastic
part and then screw it into the wall.**

Installation method of expansion screws

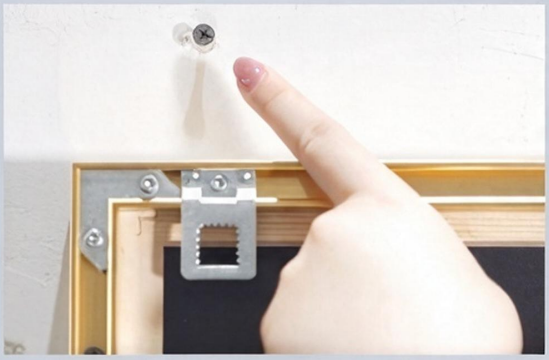



Align the back plate of the painting with the position of the nail hook.



Just hang the decorative paintings from top to bottom.