Hudson Floor Lamp
Assembly Instructions

1. To Assemble the Shade please check Page 2, (Shade instructions).

2. Screw pole (B) into the base (A) clockwise until it is tight, Screw poles (C), (D) and movable head (E) together. Screw pole (F), (G) and (H) to the appropriate location (See Diagram). Please gently pull any excess power cords through the poles so that the cord is tucked inside.

3. Put the Shade (I) onto the Socket (J) and tighten the Shade with the socket Ring (K).

4. GENERAL PRODUCT INFORMATION:
   THIS PRODUCT IS SUITABLE FOR DRY LOCATION ONLY.

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG
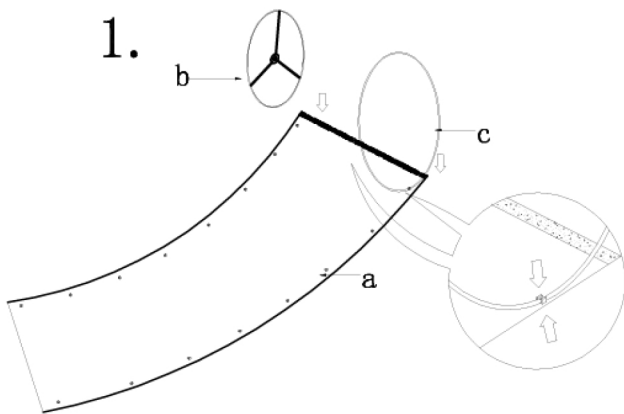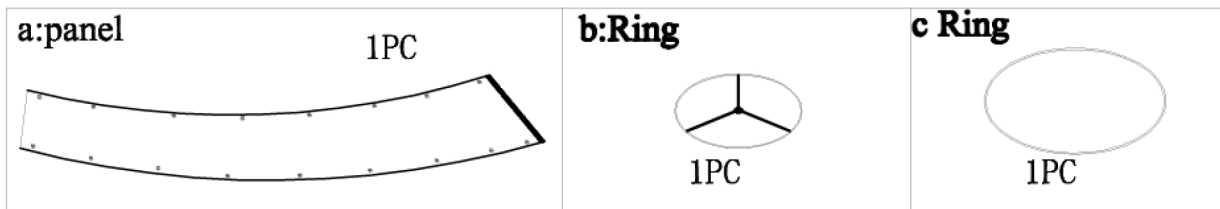
Bulb Type: Max 150W incandescent bulbs

Please contact us via our website or email if you may need any help with your new lamp.
www.brightechshop.com
wecare@brightcshop.com

brightech®
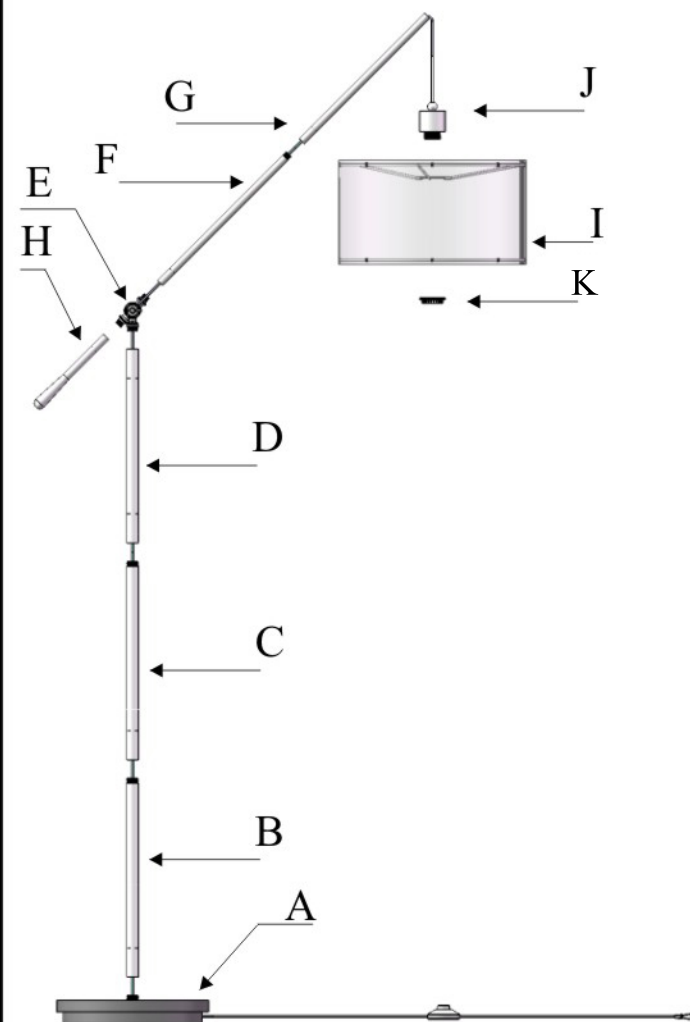
Hudson Shade Assembly Instructions

a:panel 1PC	b:Ring	c Ring
	1PC	1PC

1.
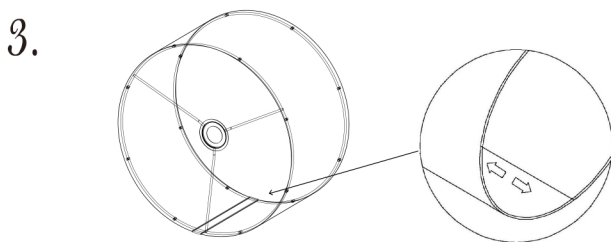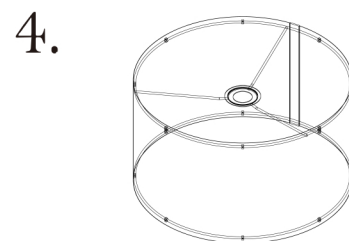
1. Please note that the bottom of the shade is longer than the top. Align the shade's longer side with Ring C and the shorter side with Ring B. Clip the pieces on the bottom and top of the shade to both Rings.

2.
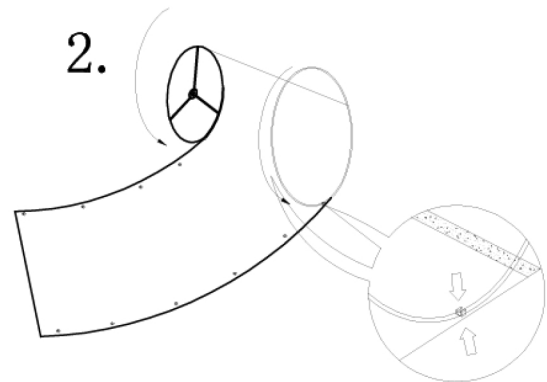
2.Roll both rings all the way around and make sure all the clips on the shade are secure onto both Rings.

3.

3. Secure the shade by pressing along the velcro.

4.

4. Finished as above picture.

Thank you for your purchase of the Brightech Hudson Floor Lamp. We hope that you are completely satisfied with your purchase. If you have any questions or comments please contact us.

brightech®

wecare@brightechshop.com
www.brightechshop.com