CABINET

ASSEMBLY INSTRUCTION

Assembly Instruction

ASSEMBLY TIPS:
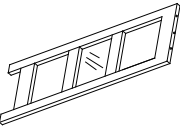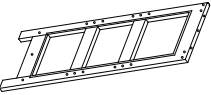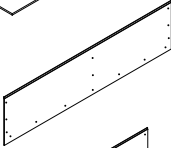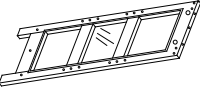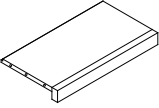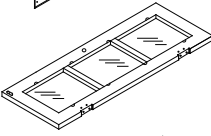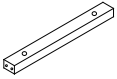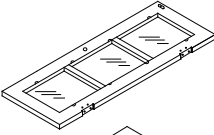
1.Remove hardware from box and sort by size.

2.Please check to see that all hardware and parts are present prior to start of assembly.

3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Warning !
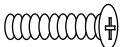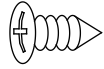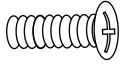
⚠ 1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

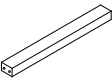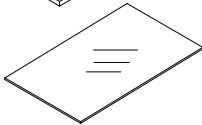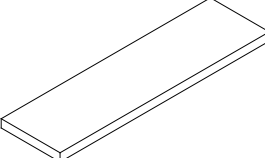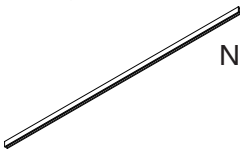A LEFT SIDE FRAME   1PC

B MIDDLE FRAME   1PC

C RIGHT SIDE FRAME 1PC

D BOTTOM PANEL   2PCS

E FRONT RAIL   2PCS

F BACK RAIL   2PCS

G TOP PANEL   1PC

H MIRROR PANEL   4PCS

I UPPER & LOWER   2PCS
   BACK PANEL

J MIDDLE BACK PANEL 1PC

K RIGHT DOOR   2PCS

L LEFT DOOR   2PCS

M SHELF   4PCS

N GLASS CLAMP   2PCS

NO:	DESCRIPTION	FIGURE	Q'TY
	HARDWARE PACKAGE		
1	WOOD DOWEL		15 PCS
2	CAM BOLT		22 PCS
3	CAM LOCK		22 PCS
4	LONG BOLT		4 PCS
5	ROUND HEAD SHORT SCREW		38 PCS
6	SHORT BOLT		4 PCS
7	KNOB		4 PCS
8	HINGE		8 PCS
9	FLAT HEAD SCREW		56 PCS
10	SHELF HOLDER		16 PCS
11	MAGNET		4 PCS
12	ROUND HEAD LONG SCREW		8 PCS

It need two persons and takes about thirty minutes to assembly the item.

STEP 1:

Use Cam Bolt(2) & Wood Dowel(1) to Side Panel(A&C) & Middle Panel(B),insert Cam lock(3) into holes of Bottom(D) & Rail(E&F), attach Side Panel(A&C) & Middle Panel(B) to Bottom Panel(D) & Front Rail(E) & Back Rail(F) with screwdriver,rotate Cam Lock(3) clockwise to secure Cam Bolt(2).
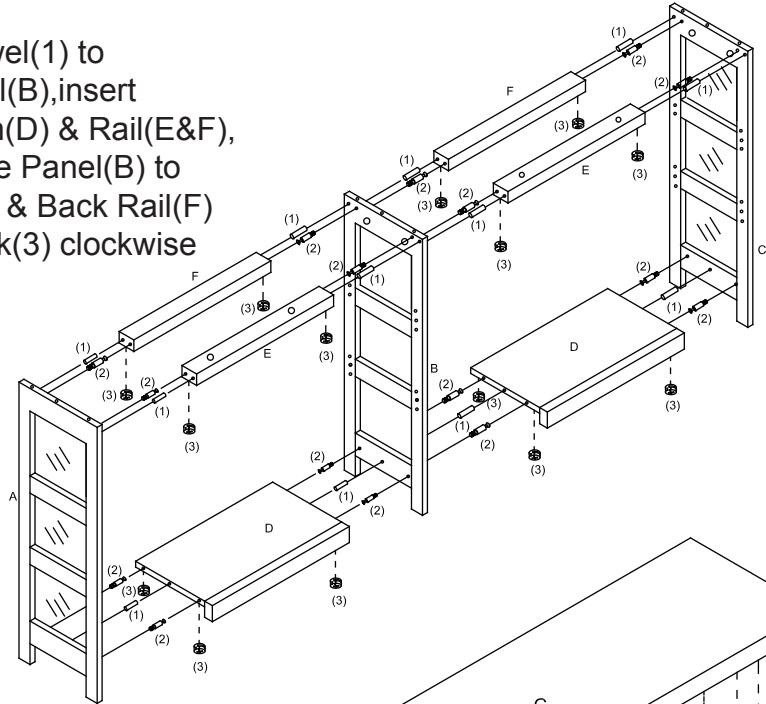
STEP 2:

Use Cam Bolt(2) & Wood Dowel(1) to Top Panel(G) ,insert Cam lock(3) into holes of Side Panel(A&C) & Middle Panel(B),attach Top Panel(G) to Side Panel(A&C) & Middle Panel(B) with screwdriver,rotate Cam Lock(3) clockwise to secure Cam Bolt(2).

Use Long Bolt(4) through Front Rail(E) to Top Panel(G) with screwdriver,then tighten.
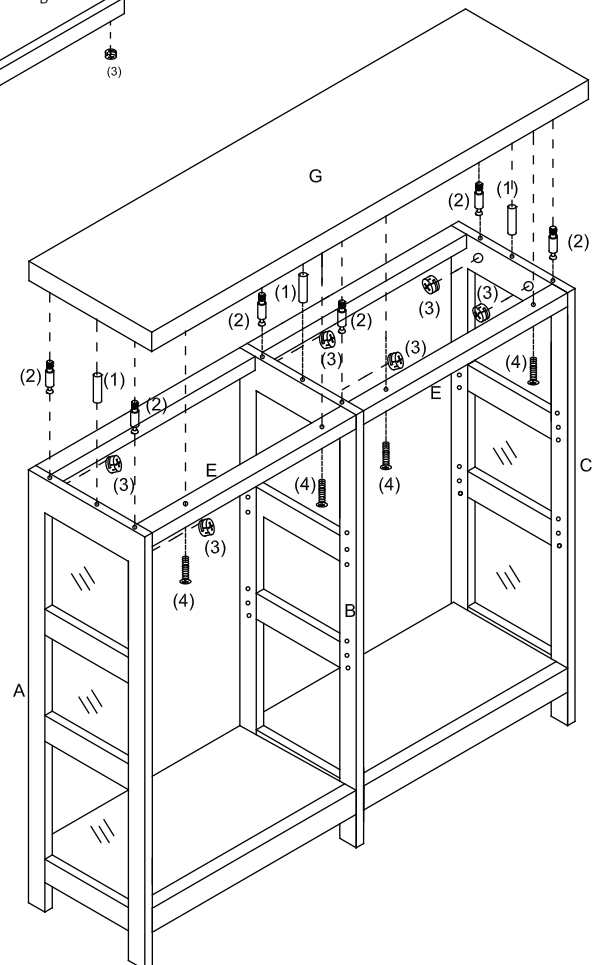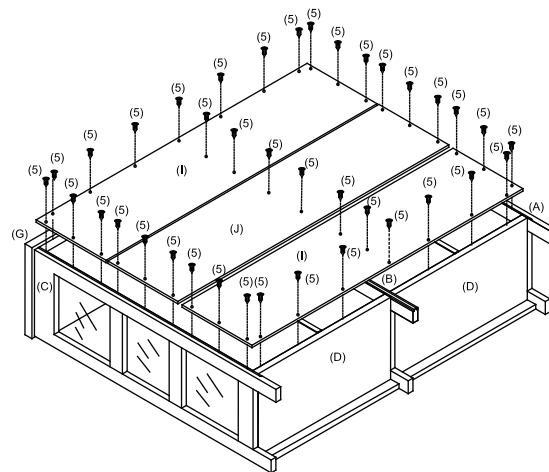
STEP 3:

Insert Mirror Panel to Glass Clamp,then into grooves of preassembled unit from Step 2 back.
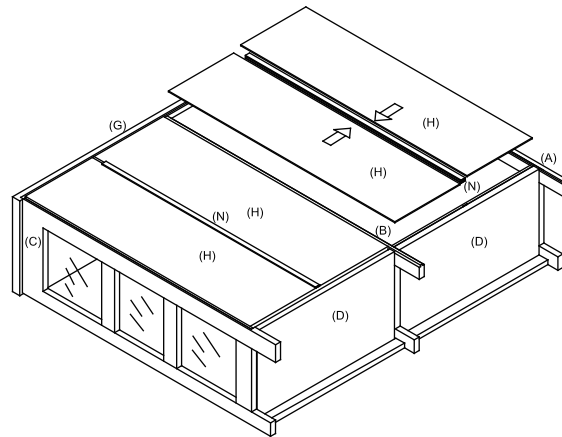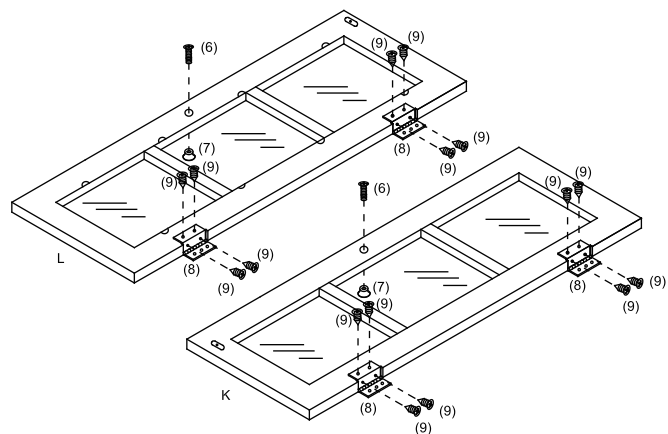
STEP 4:

Insert Back Panel(I&J) into grooves of preassembled unit from Step 3, tighten Round Head Short Screw(5) with Phillips screwdriver.

STEP 5:

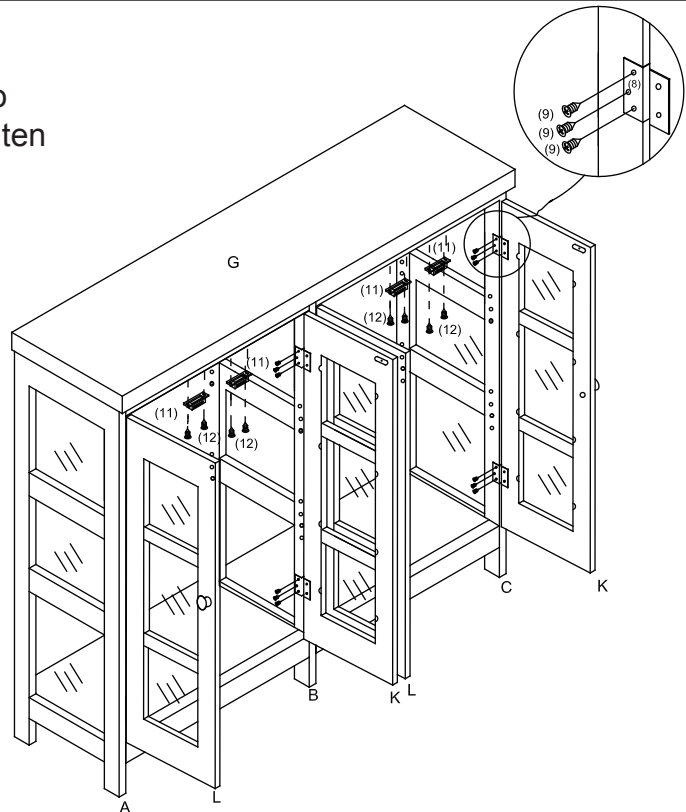Use Flat Head Screw(9) through Hinge(8) to Door(K&L) with screwdriver, then tighter.

Attach Short Bolt(6) through Door (K&L) to Knob(7) with screwdriver, then tighter.
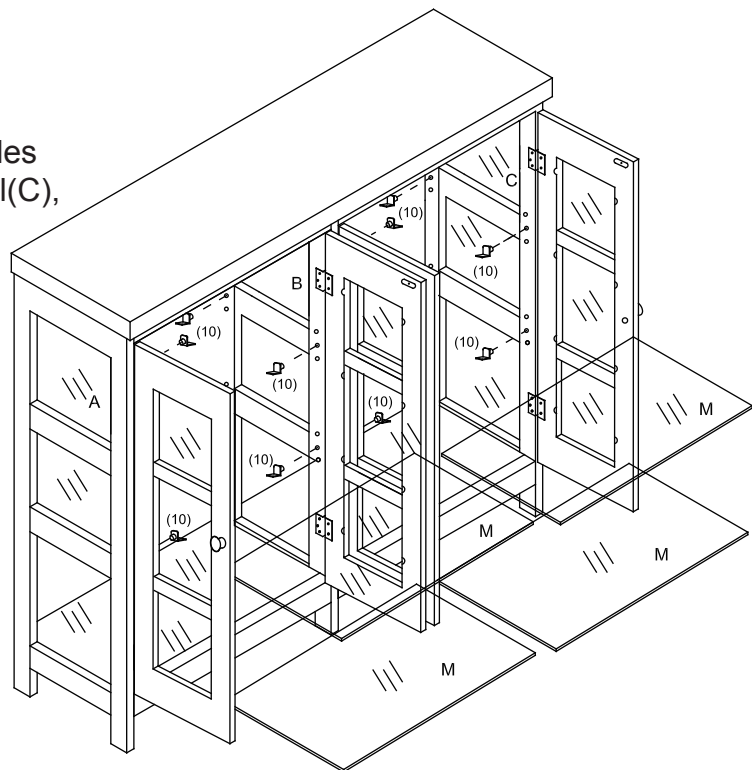
STEP 6:

Use Flat Head Screw (9) to hinge (8) to
Side Panel (A&C) & Middle Panel(B), tighten
Flat Head Screw (9) with screwdriver.

Use Round Head Long Screw(12) to
Magnet(11) & Top Panel(G) together.

STEP 7:

Insert Shelf Holder(10) to the holes
of Side Panel(A&C) & Middle Panel(C),
then put Shelf Panel(M) on the
Shelf Holder(10).

STEP 8:

Now your new cabinet to use.