

BED FRAME

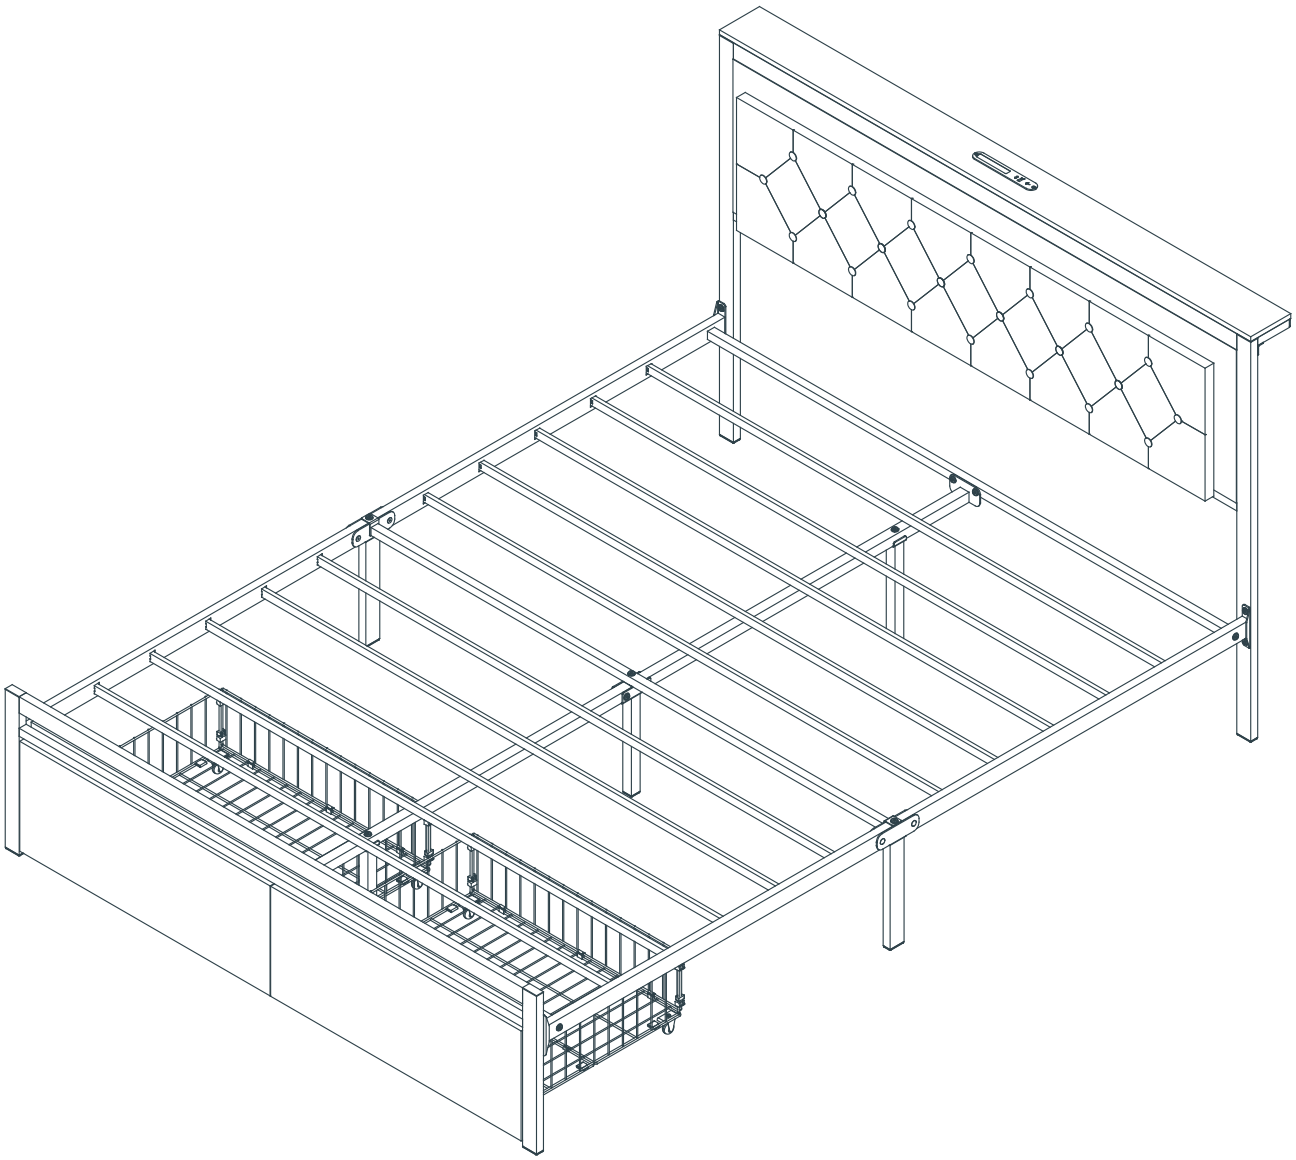

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

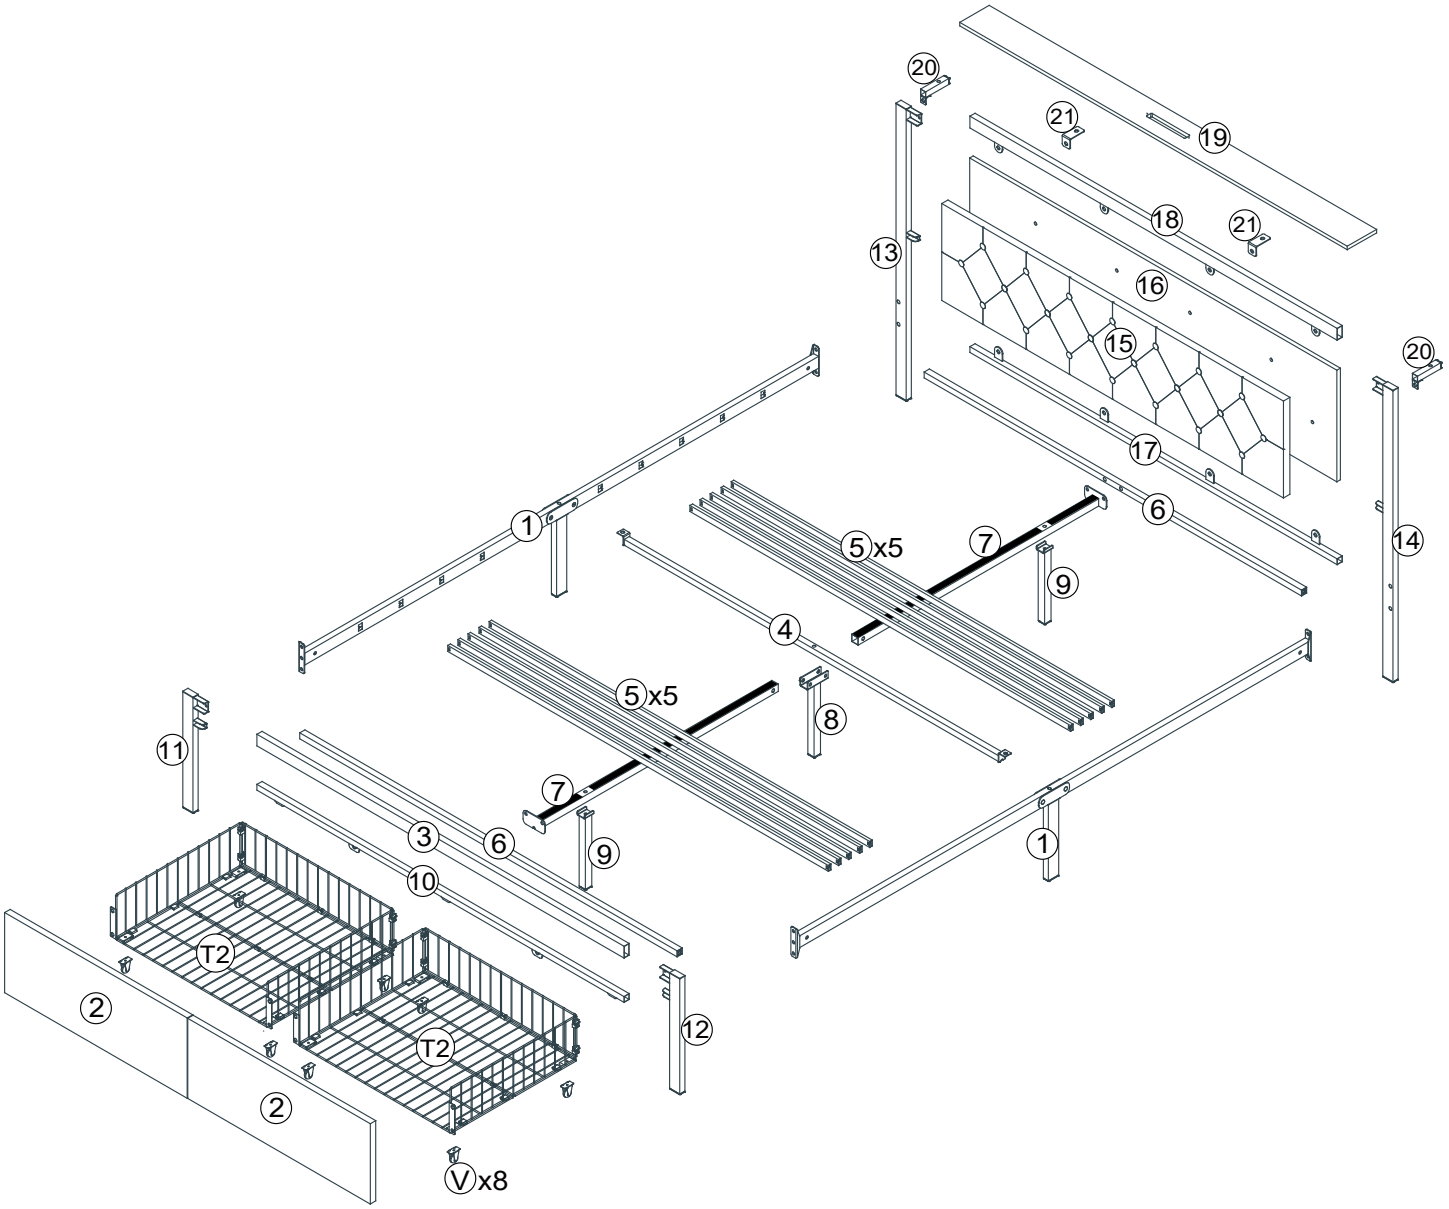

B683-Q


Important Note

HARDWARE NOTE :

1.Two or more people are required for assembly

2.Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

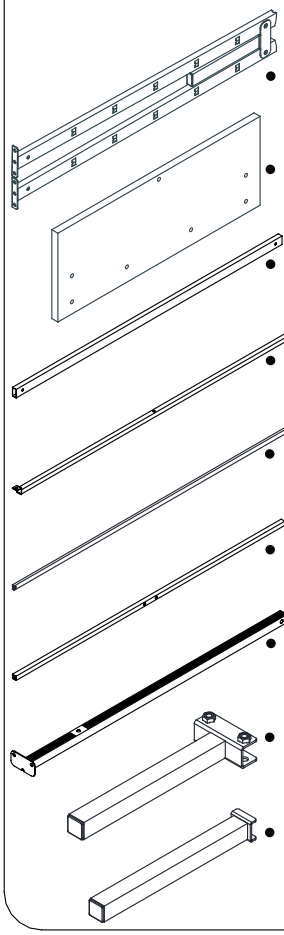

1 x2pcs

2 x2pcs

3 x1pc

4 x1pc


5 x10pcs

6 x2pcs

7 x2pcs

8 x1pc

9 x2pcs

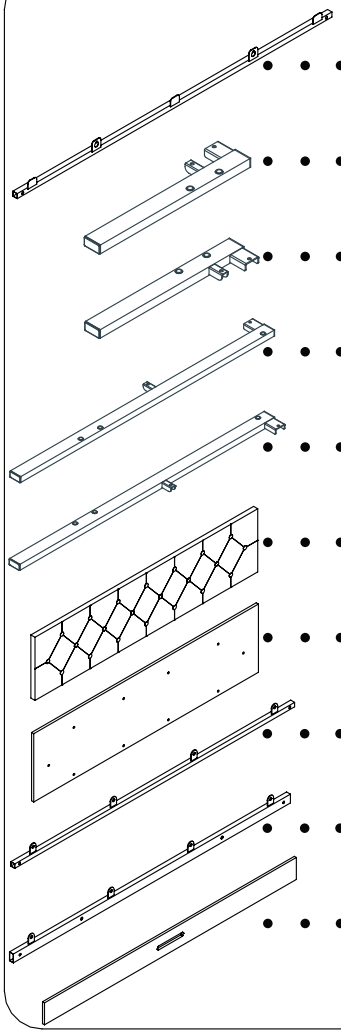

10 x1pc

11 x1pc

12 x1pc

13 x1pc

14 x1pc


15 x1pc

16 x1pc

17 x1pc

18 x1pc

19 x1pc

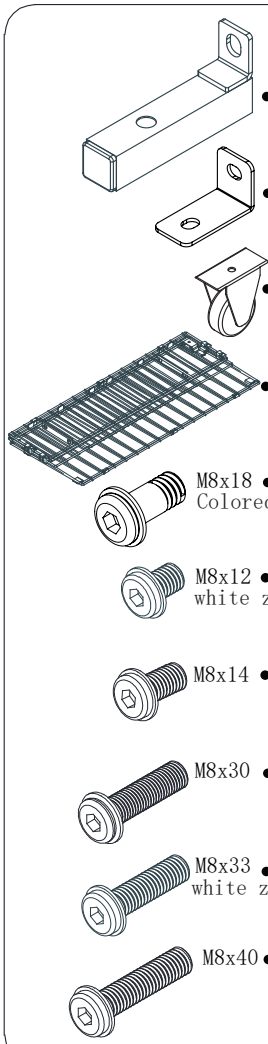

20 x2pcs

21 x2pcs

V x8pcs

T2 x2pcs

M8x18
Colored zinc
A x2pcs


M8x12
white zinc
B x2pcs

M8x14
C x40pcs

M8x30
D x6pcs

M8x33
white zinc
E x10pcs

M8x40
F x8pcs

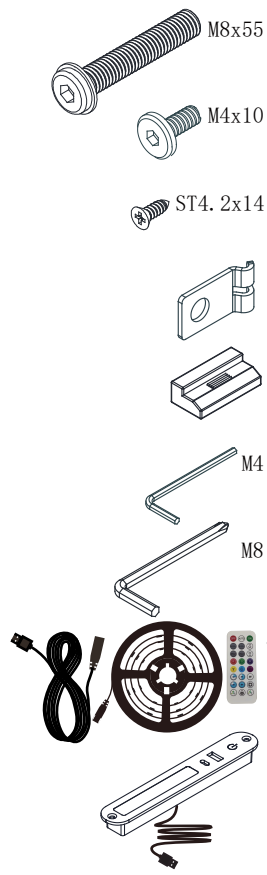

M8x55
G x3pcs

M4x10
H x8pcs

ST4.2x14
I x2pcs

J x4pcs

L x20pcs


M4
M x1pc

M8
N x1pc

K x1pc


U x1pc

1

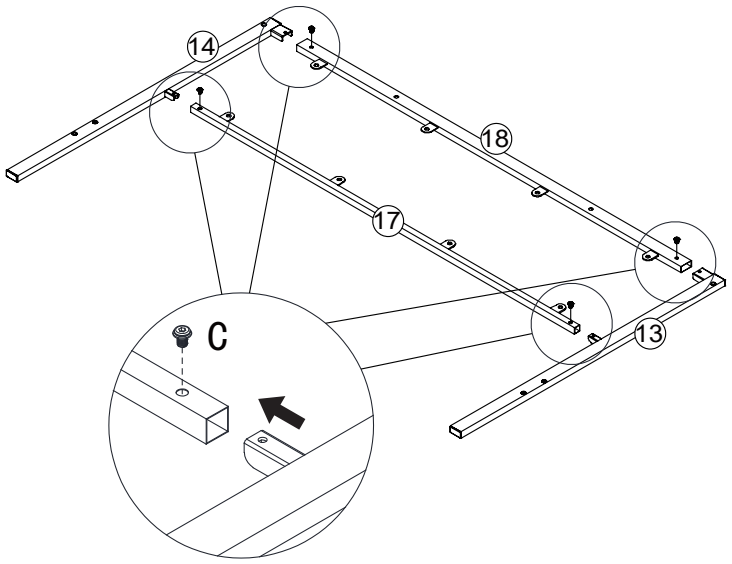


C	M8x14	4pcs

2

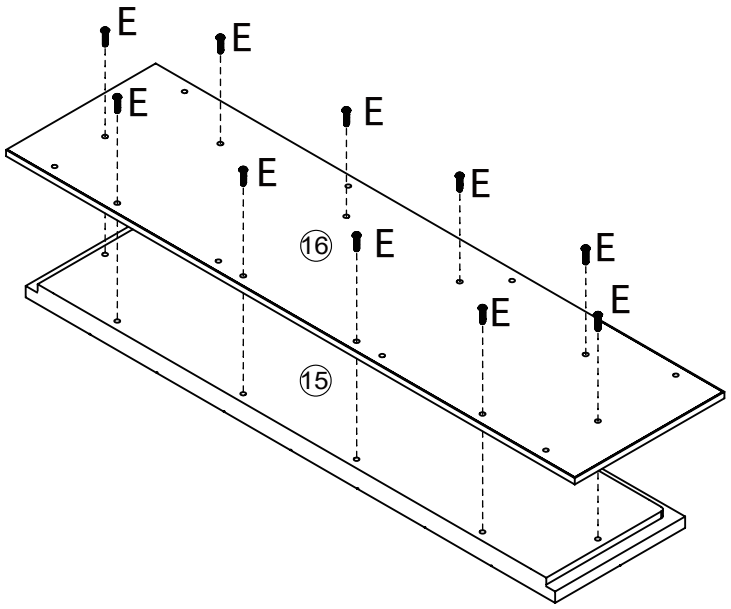


E	M8x33	10pcs	white zinc

3

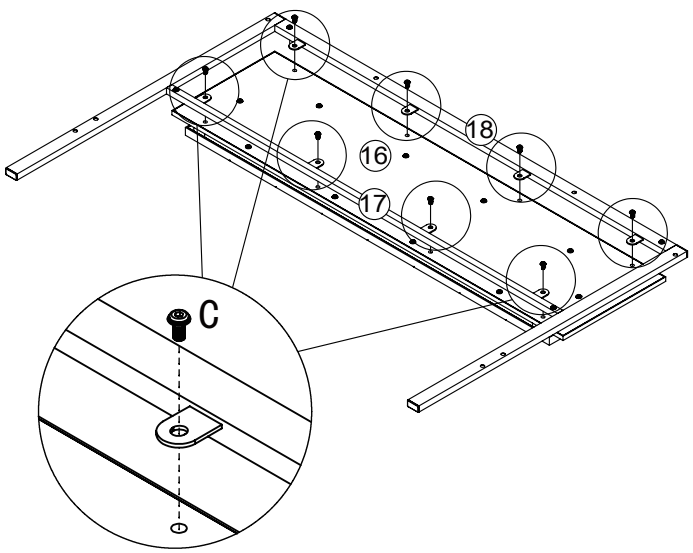

C	M8x14	8pcs

4

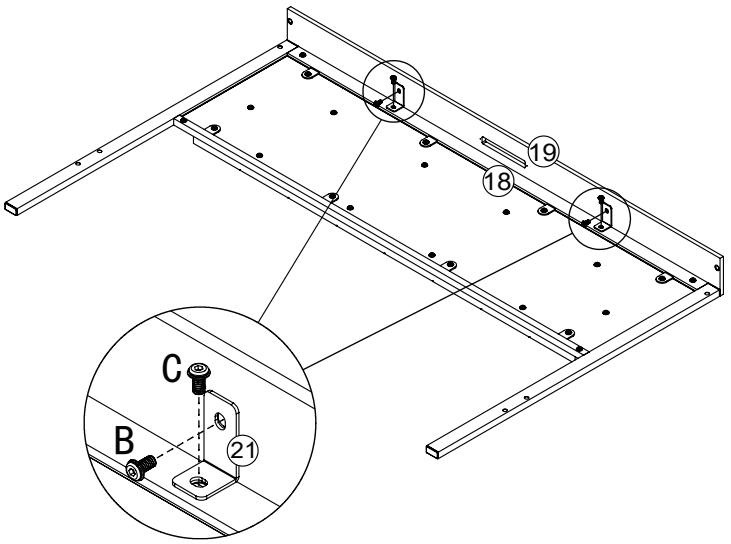


⚠ Do not fully tighten the screws yet.

B	M8x12	2pcs	white zinc
C	M8x14	2pcs	


5

Fully tighten all the screws.

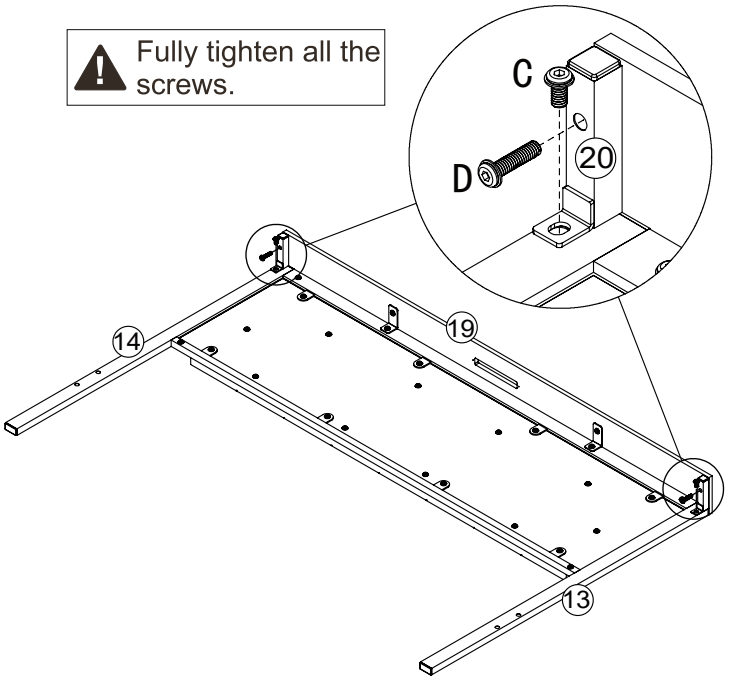

C	M8x14	2pcs
D	M8x30	2pcs

6

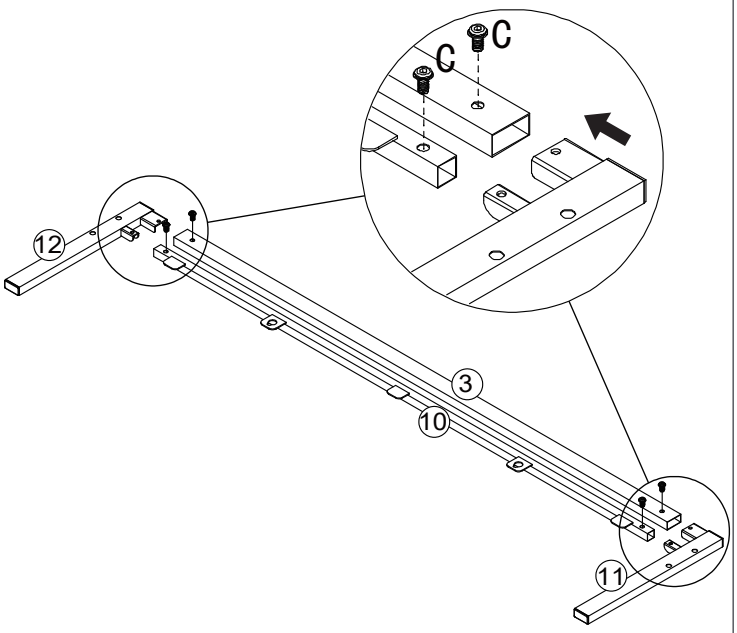


C	M8x14	4pcs

7

CAUTION


PINCH POINT
RISQUE DE PINCEMENT
PUNTO DE PELLIZCO

Be careful not to pinch yourself when opening the brackets.

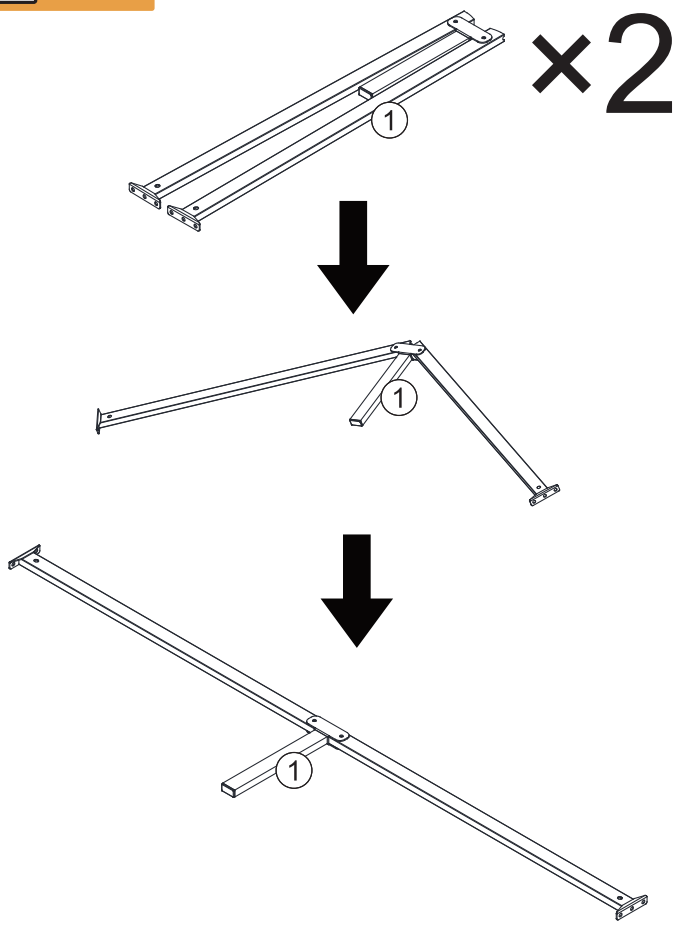


8

2 PERSON ASSEMBLE

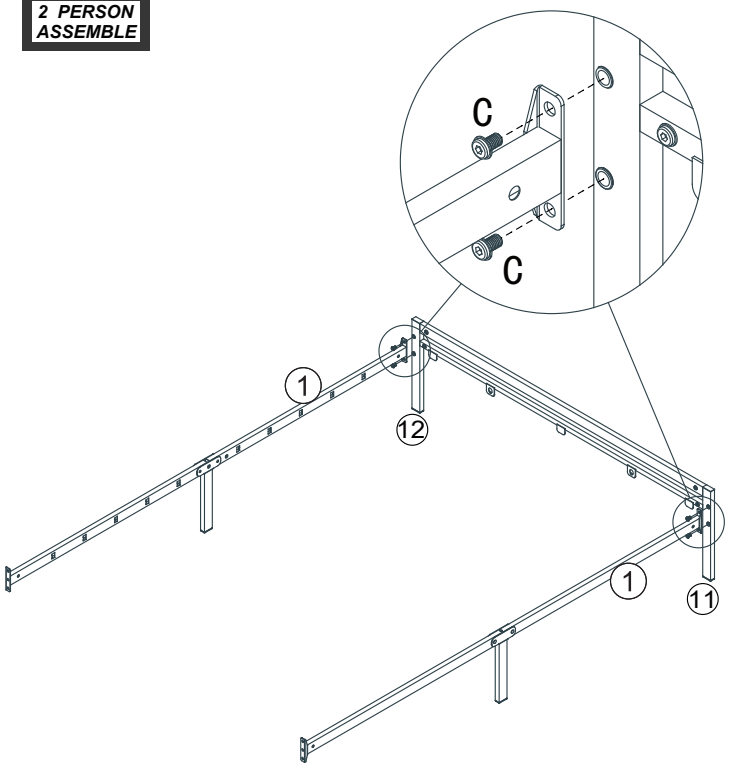


C	M8x14	4pcs

9

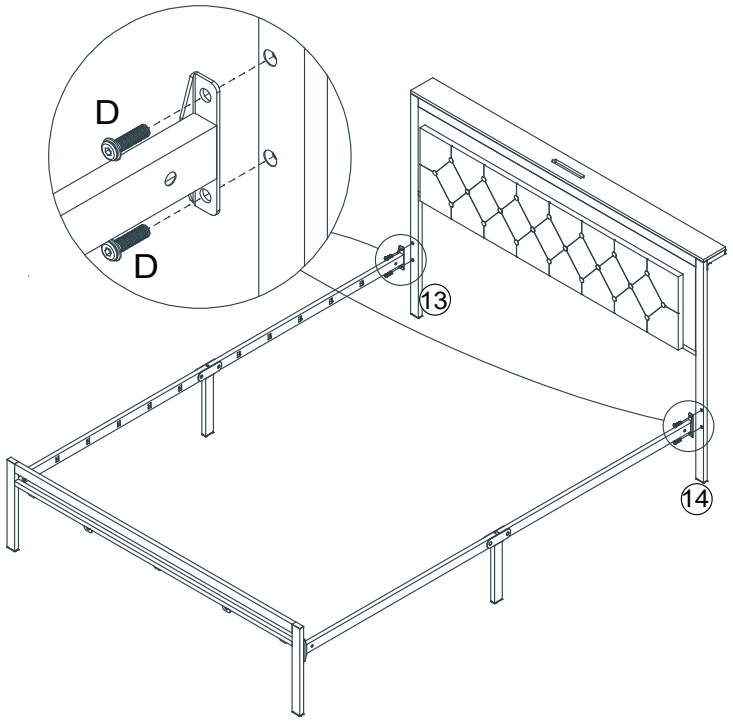


D	M8x30	4pcs

10

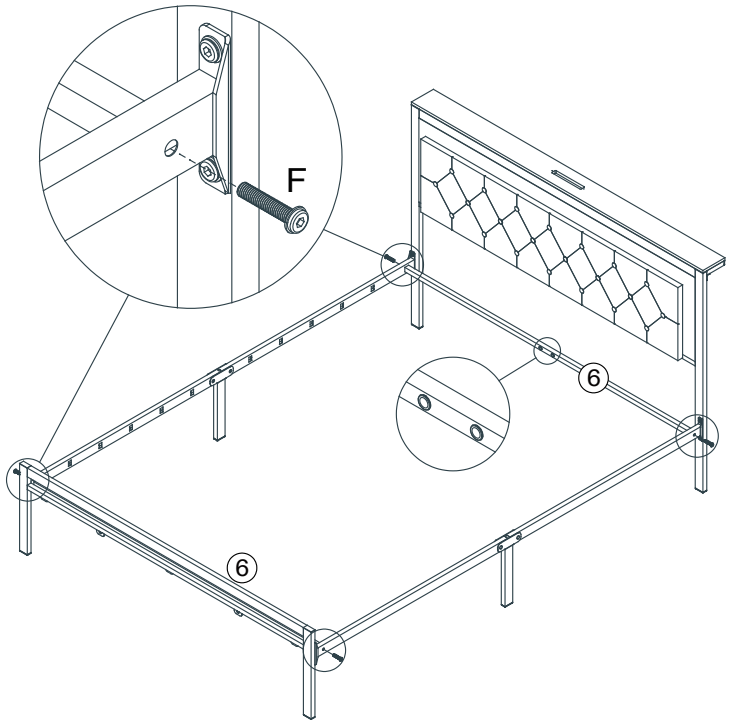


F	M8x40	4pcs

11

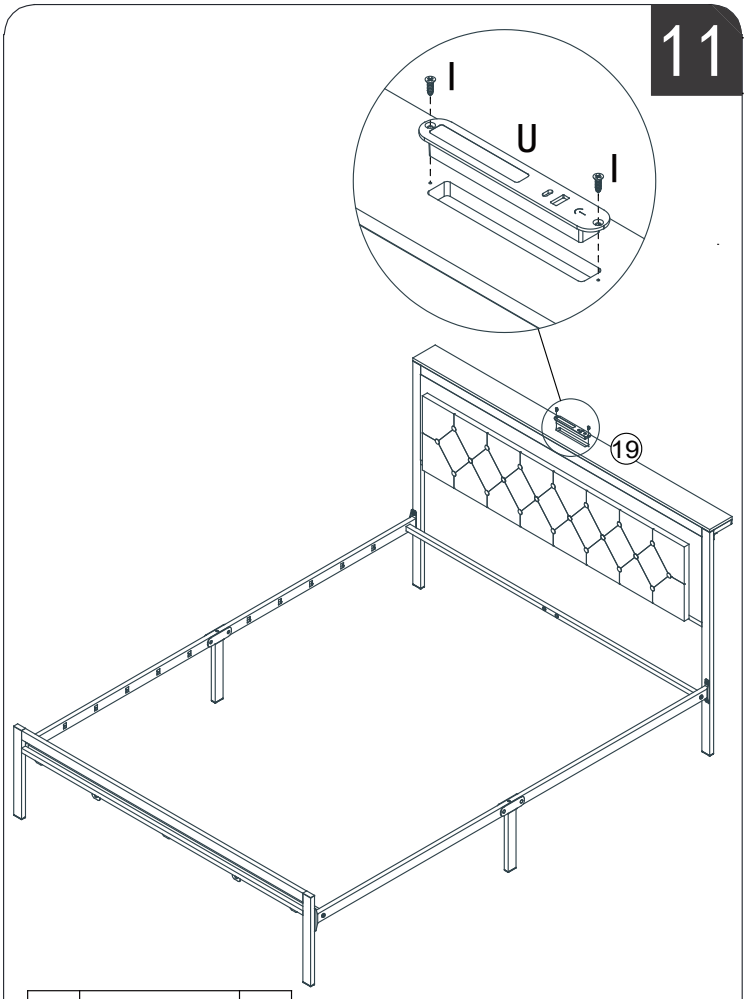


I	ST4. 2x14	2pcs

12

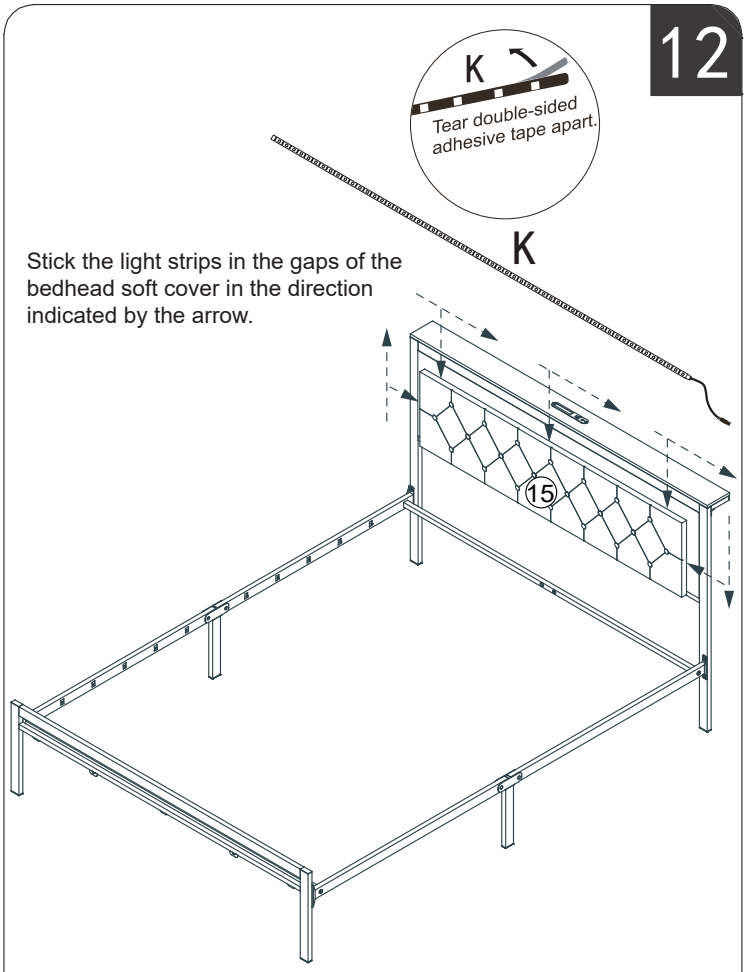


Stick the light strips in the gaps of the bedhead soft cover in the direction indicated by the arrow.

13

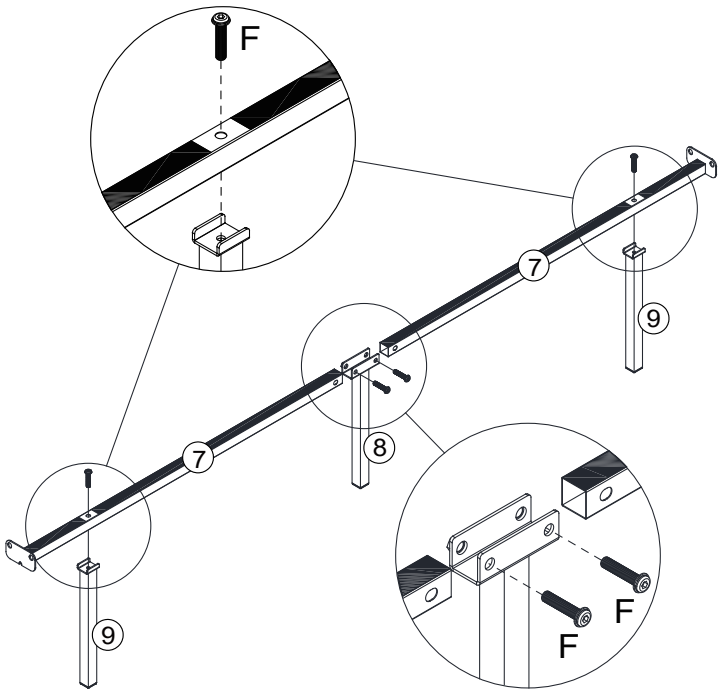


F	M8x40	4pcs

14

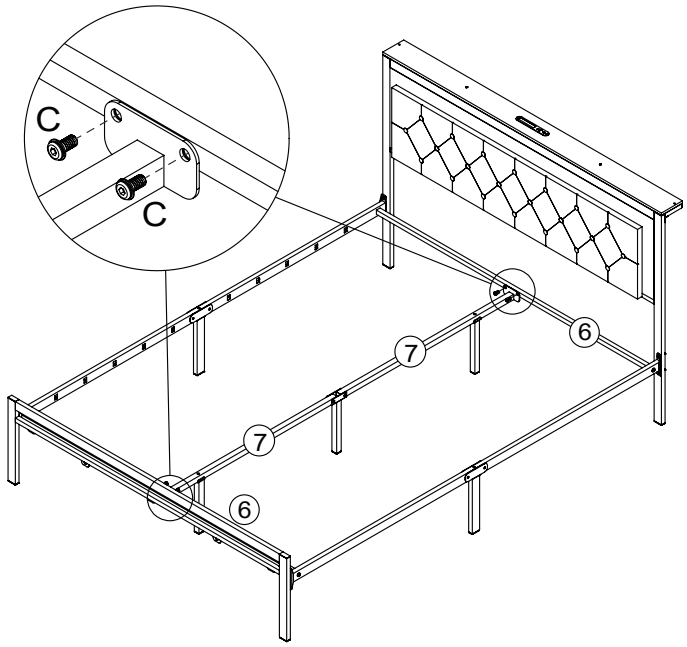


C	M8x14	4pcs

15

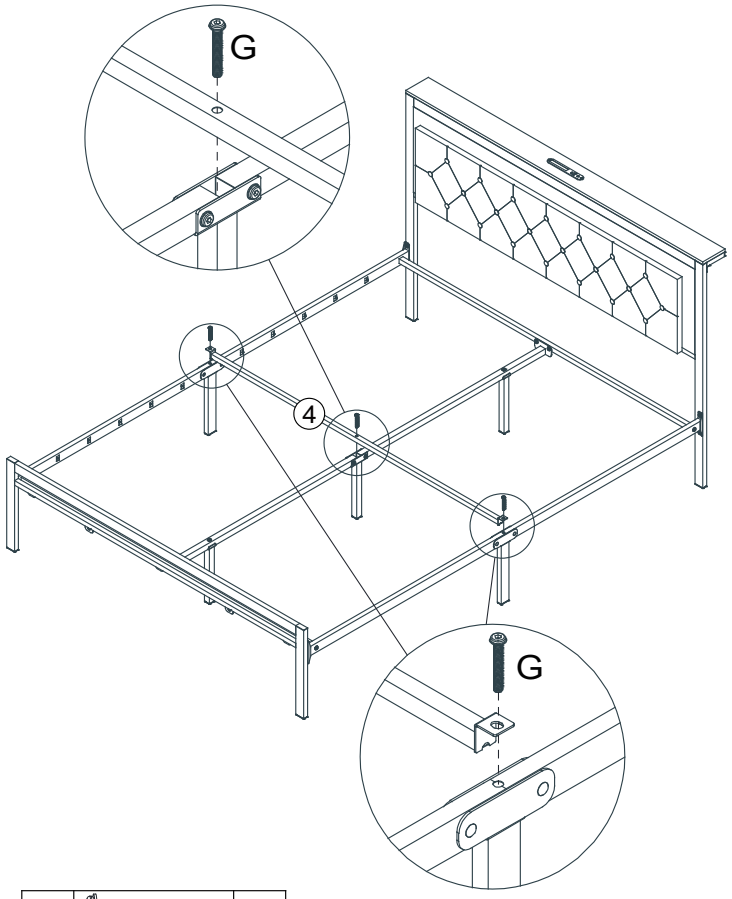


G	M8x55	3pcs

16

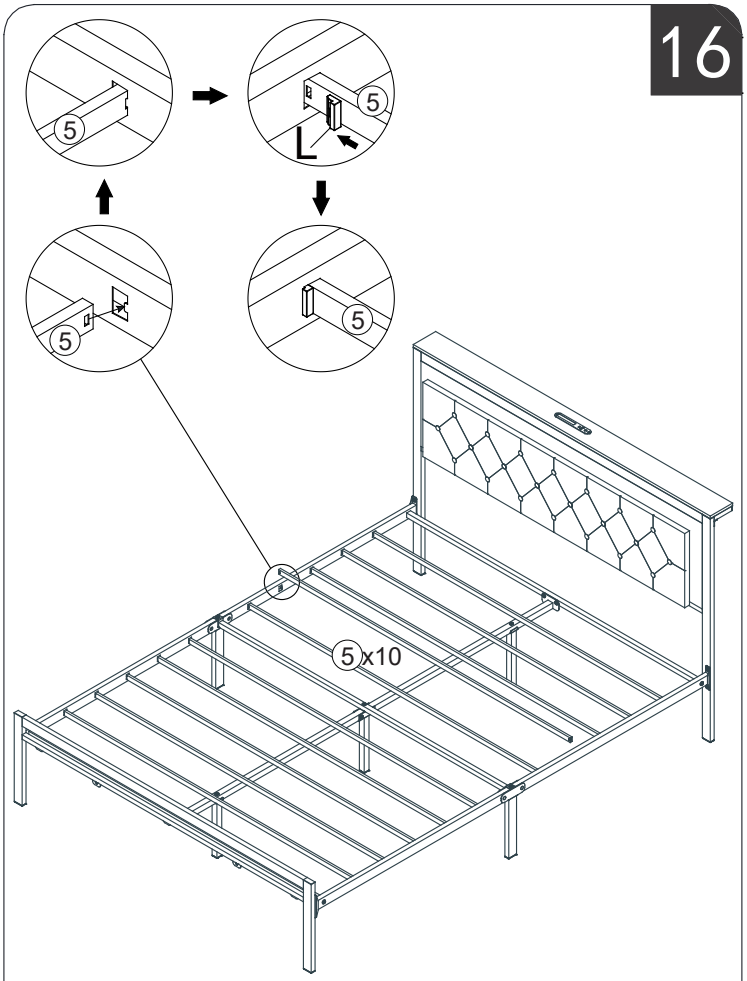


L		20pcs

17
x2

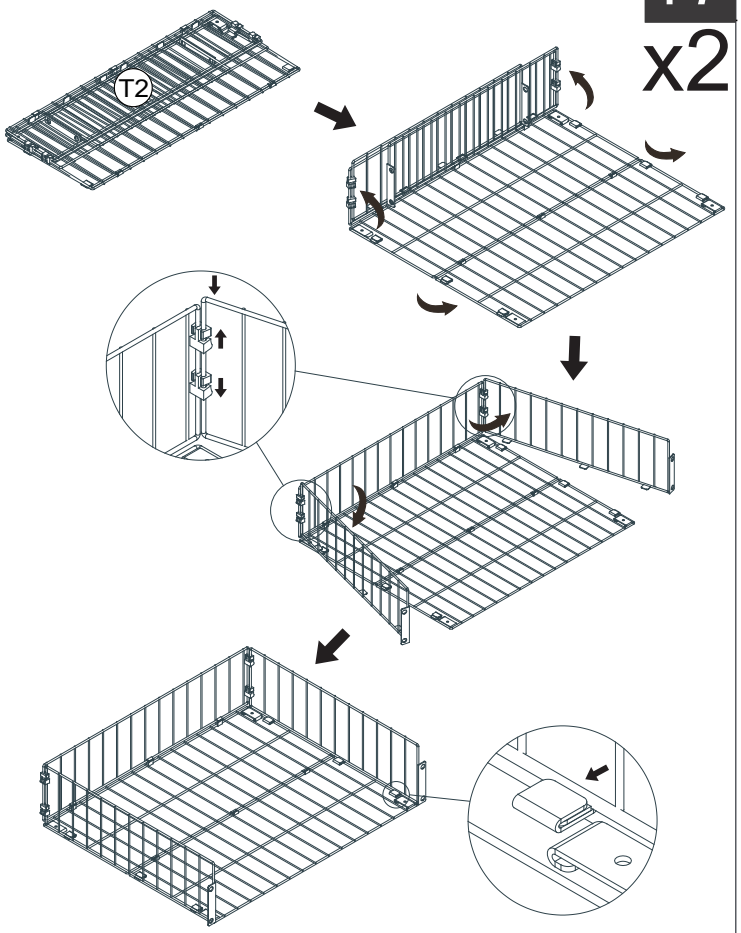


18
x2

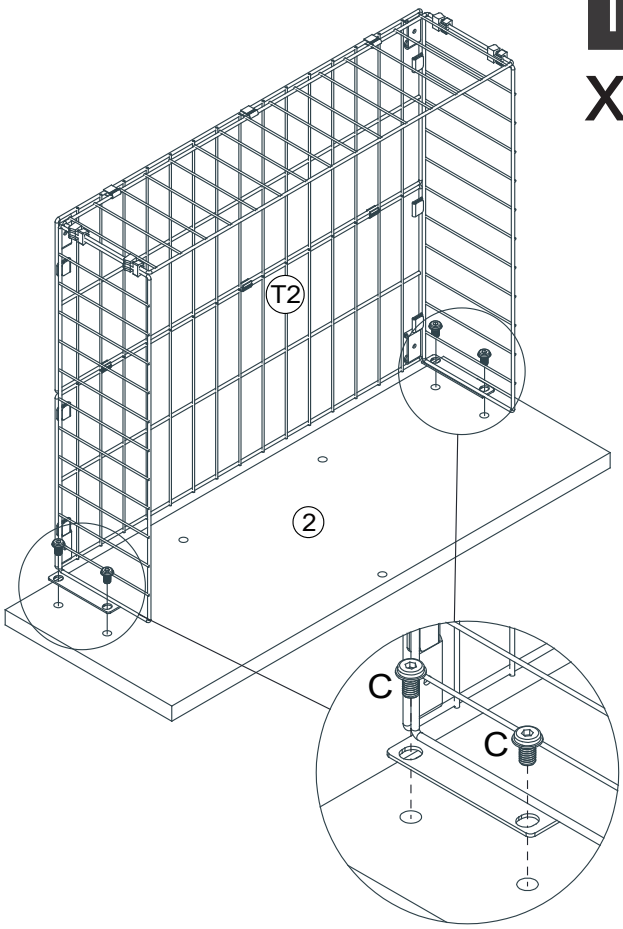

C	M8x14	8pcs


19
x2

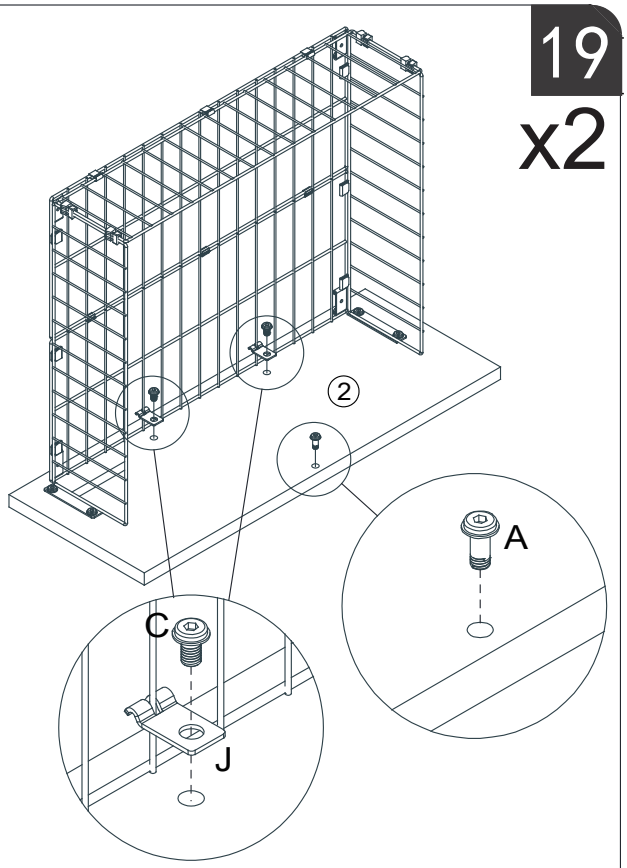

A	M8x18	2pcs
C	M8x14	4pcs
J		4pcs

Colored zinc

20
x2

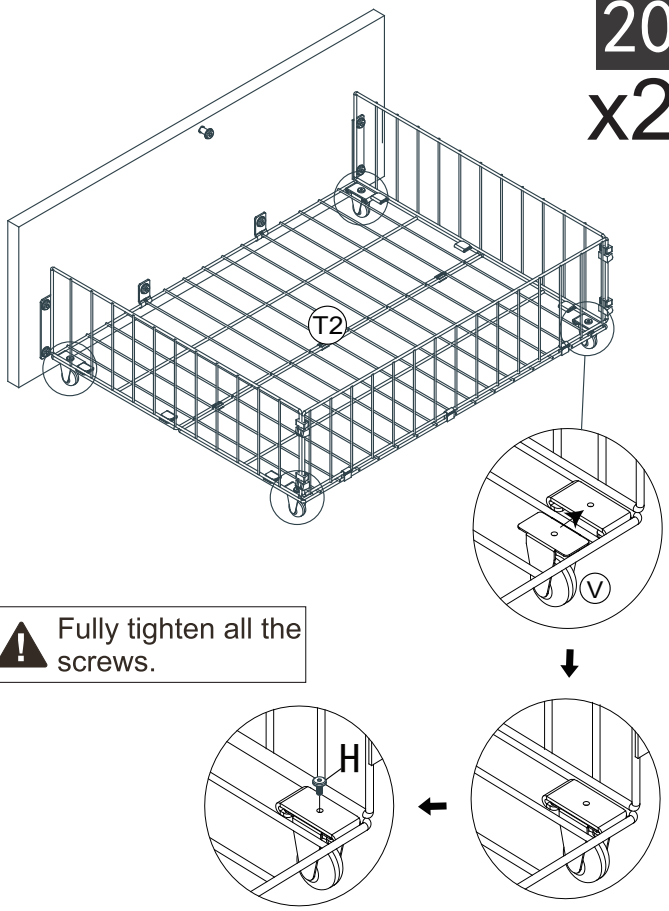


Fully tighten all the screws.

H	M4x10	8pcs

21

Put the screws into the whole and
press it into the bottom of the “ ” whole.

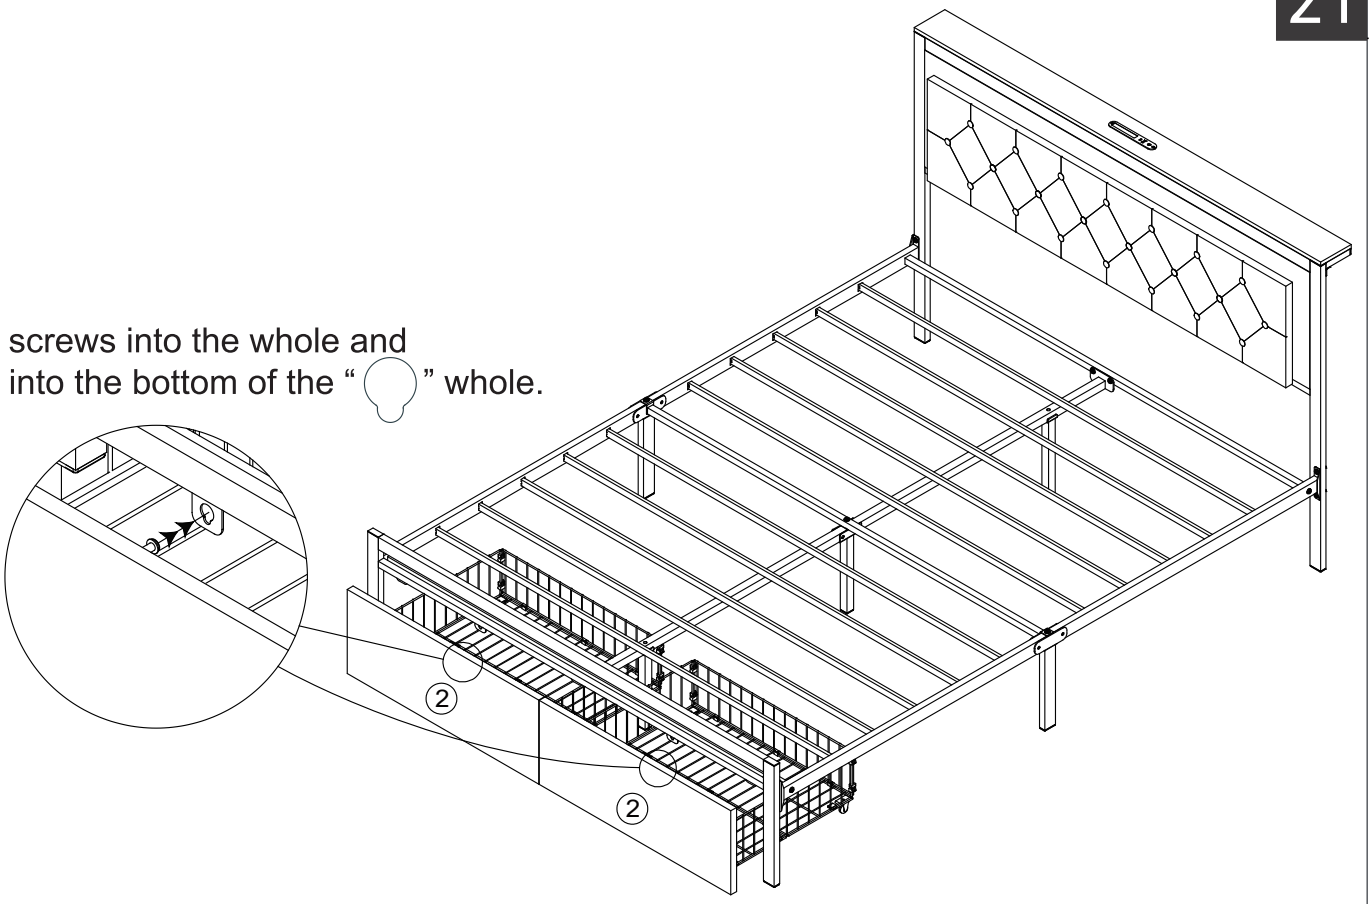

22



Finish