
domi
outdoor living

13'×13' Metal Patio Gazebo

ASSEMBLY MANUAL

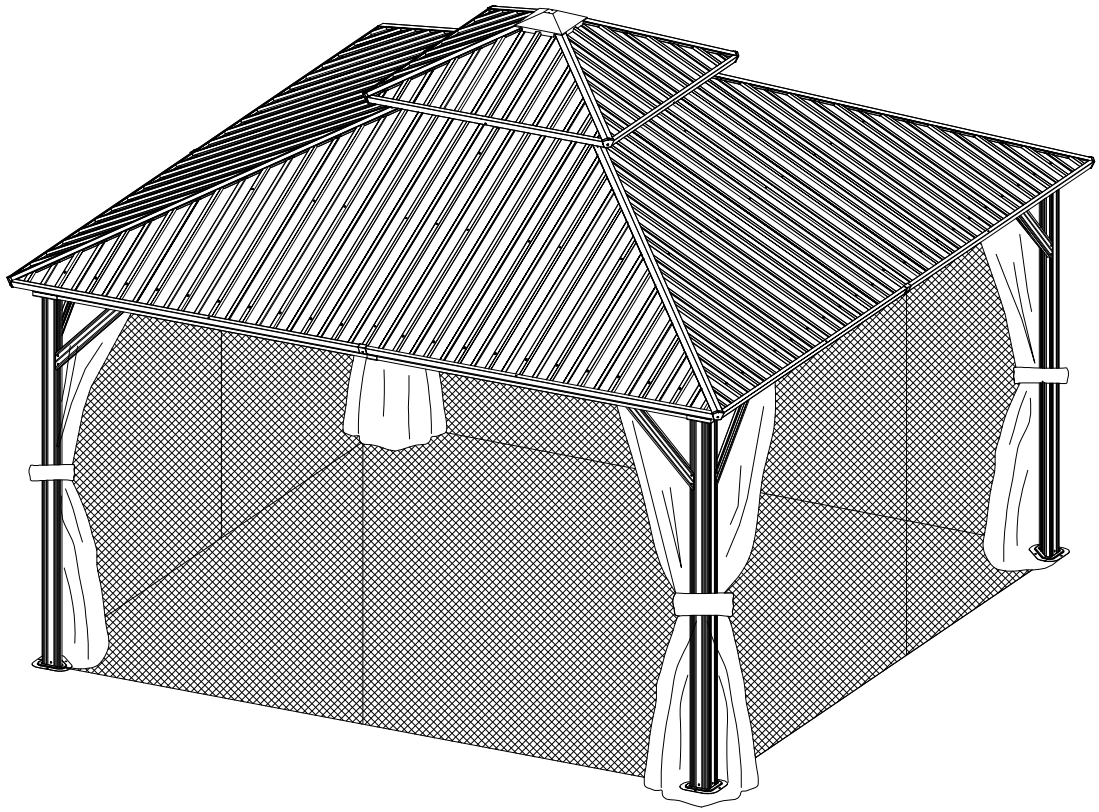

MODEL# : LGMF1807

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2024–2026 domi outdoor living LLC. All Rights Reserved.

Pre-assembly



1.Two or more people are required for assembly.



2.You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4.You may need a safety hat.



5.Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7.You may need a safety goggle.



8.Do not fully tighten screws prior to complete assembly.

Warning & Attention

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;


-It would be much easier to assemble the product with three or more people;


-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

⚠Use bolts to secure the frame to the ground to against the strong wind.

IMPORTANT: A gaze may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.


1

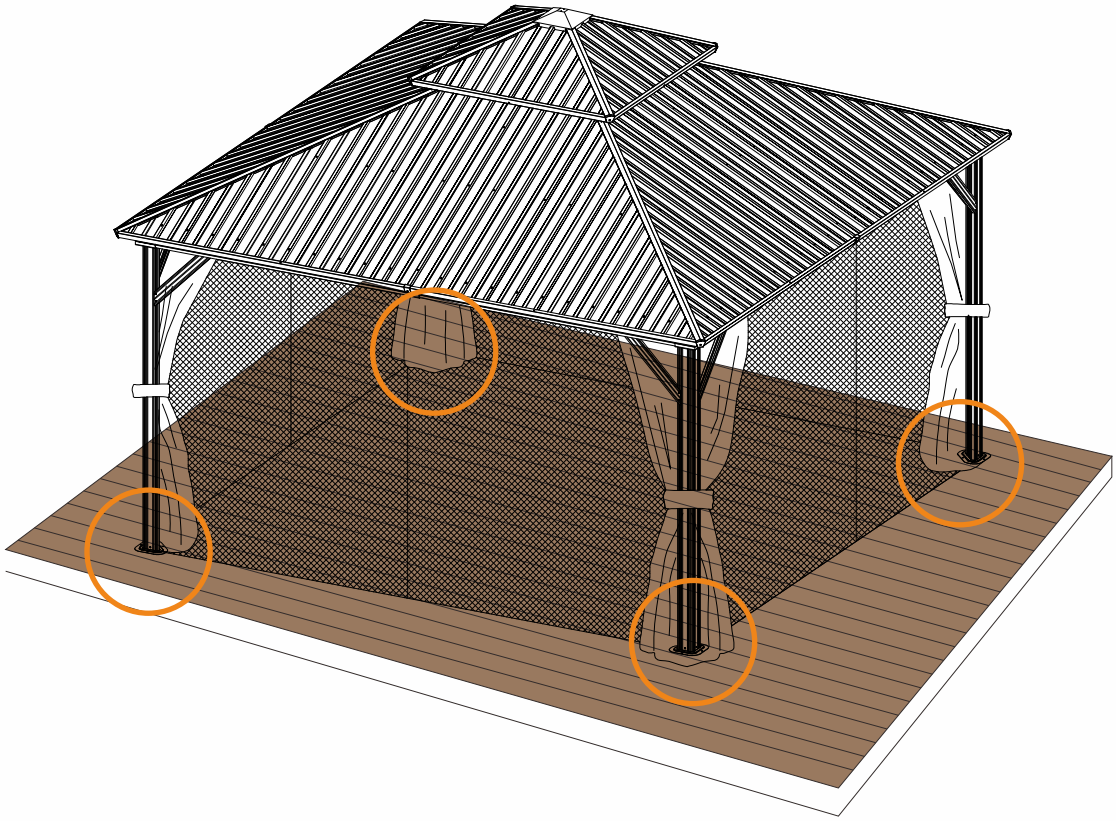





×12


If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the gazebo.

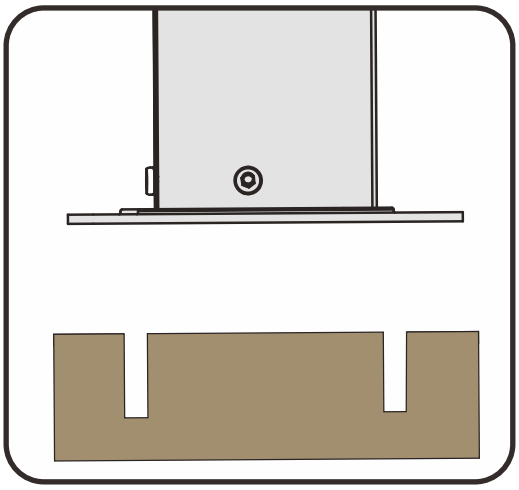

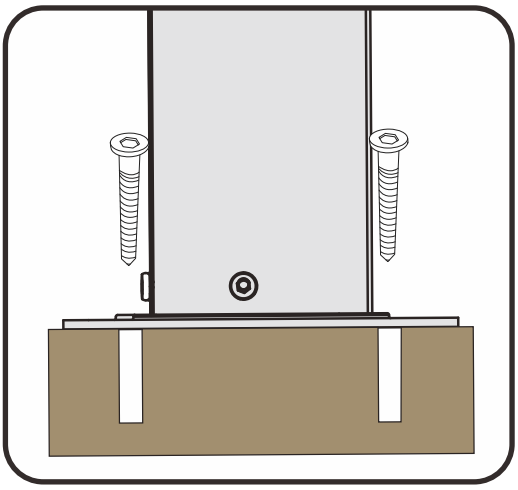

2

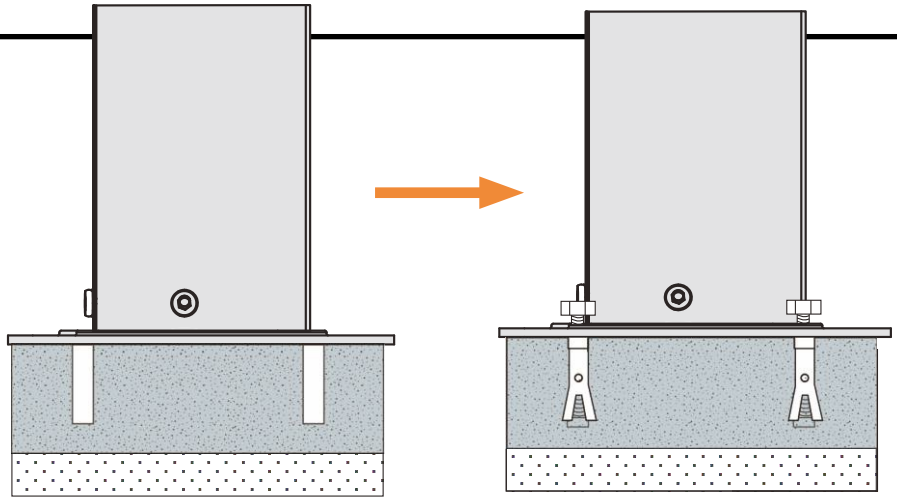


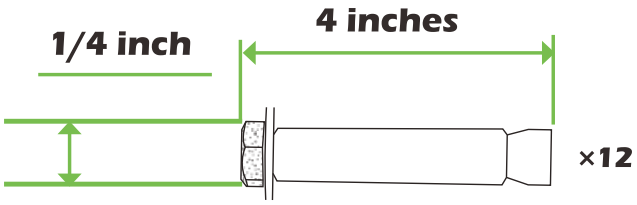


If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo

3



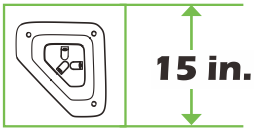


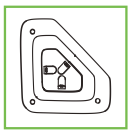





Or you can make a concrete footing for gazebo, **15×15×15 inches** is recommended.use expansion bolts to mount the pergola like (2) shows.

IMPORTANT:
Anchor is not recommended

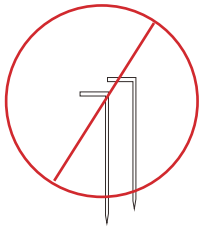

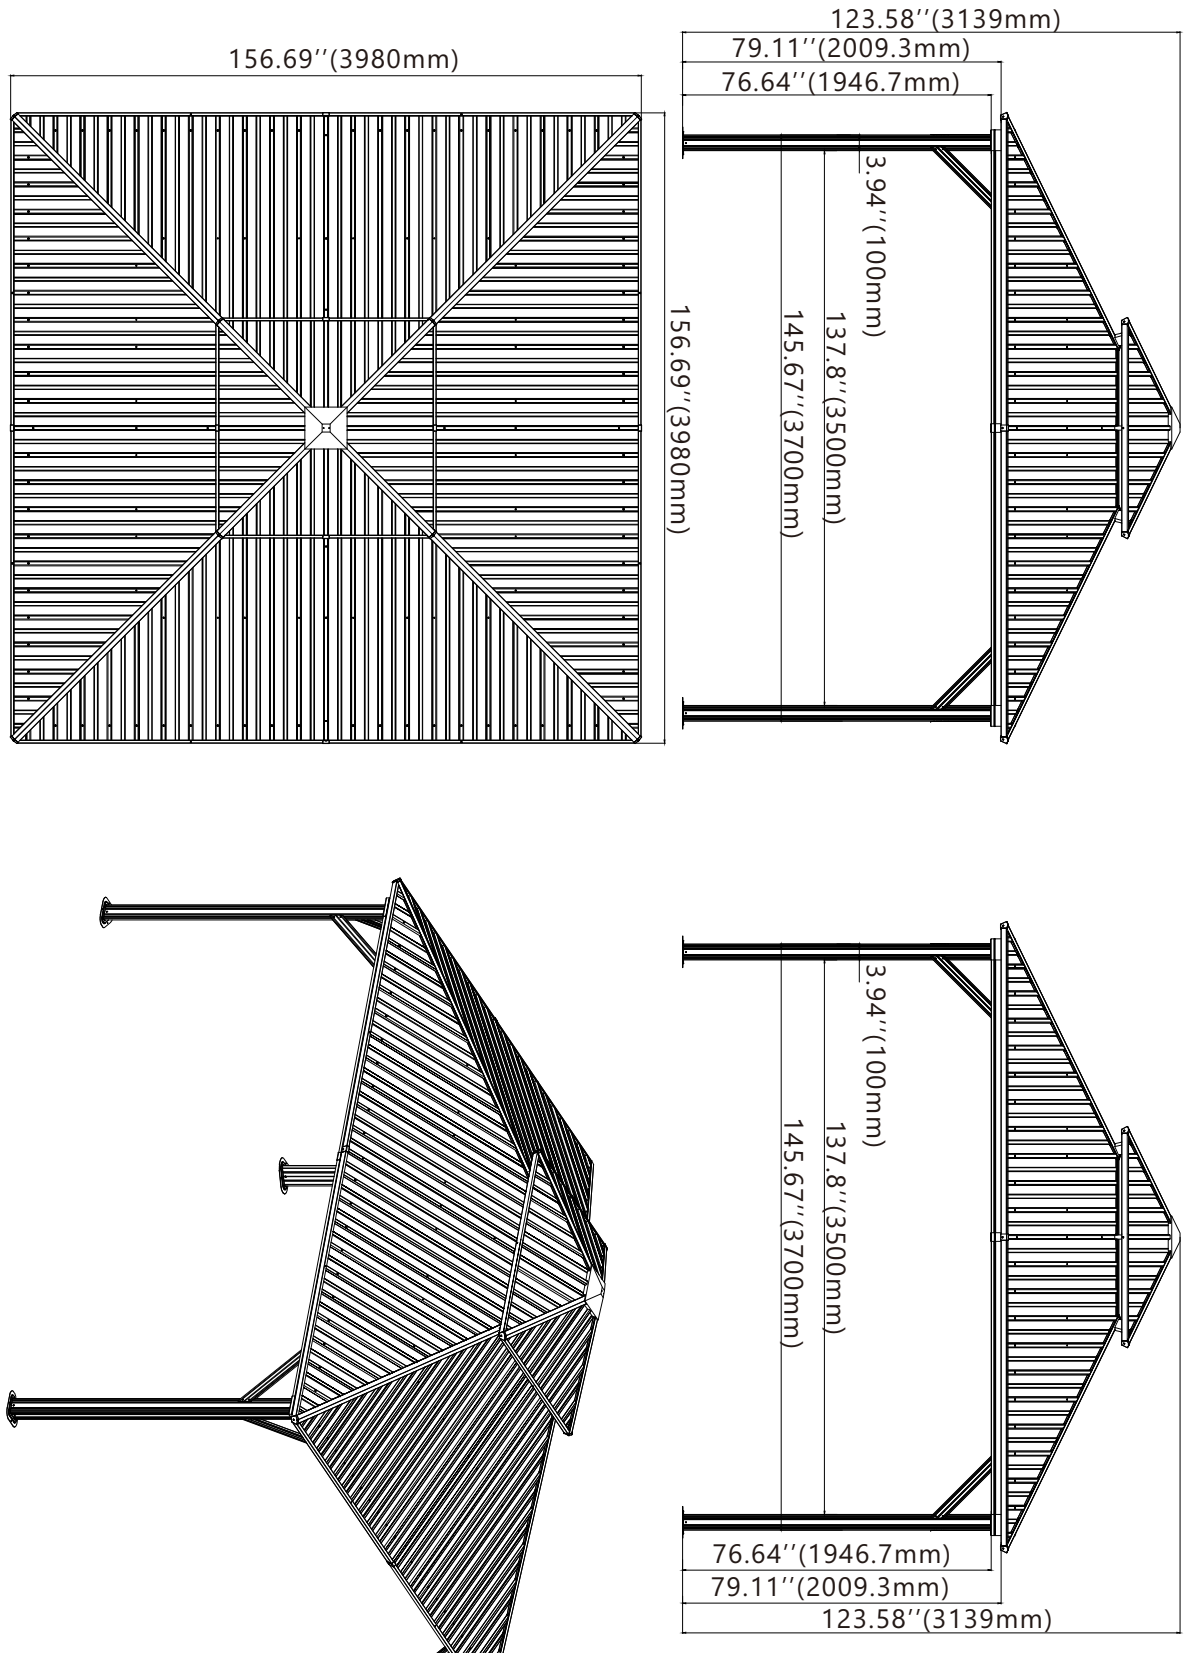
156.69''(3980mm)
156.69''(3980mm)
123.58''(3139mm)
79.11''(2009.3mm)
76.64''(1946.7mm)
3.94''(100mm)
137.8''(3500mm)
145.67''(3700mm)
3.94''(100mm)
137.8''(3500mm)
145.67''(3700mm)
76.64''(1946.7mm)
79.11''(2009.3mm)
123.58''(3139mm)

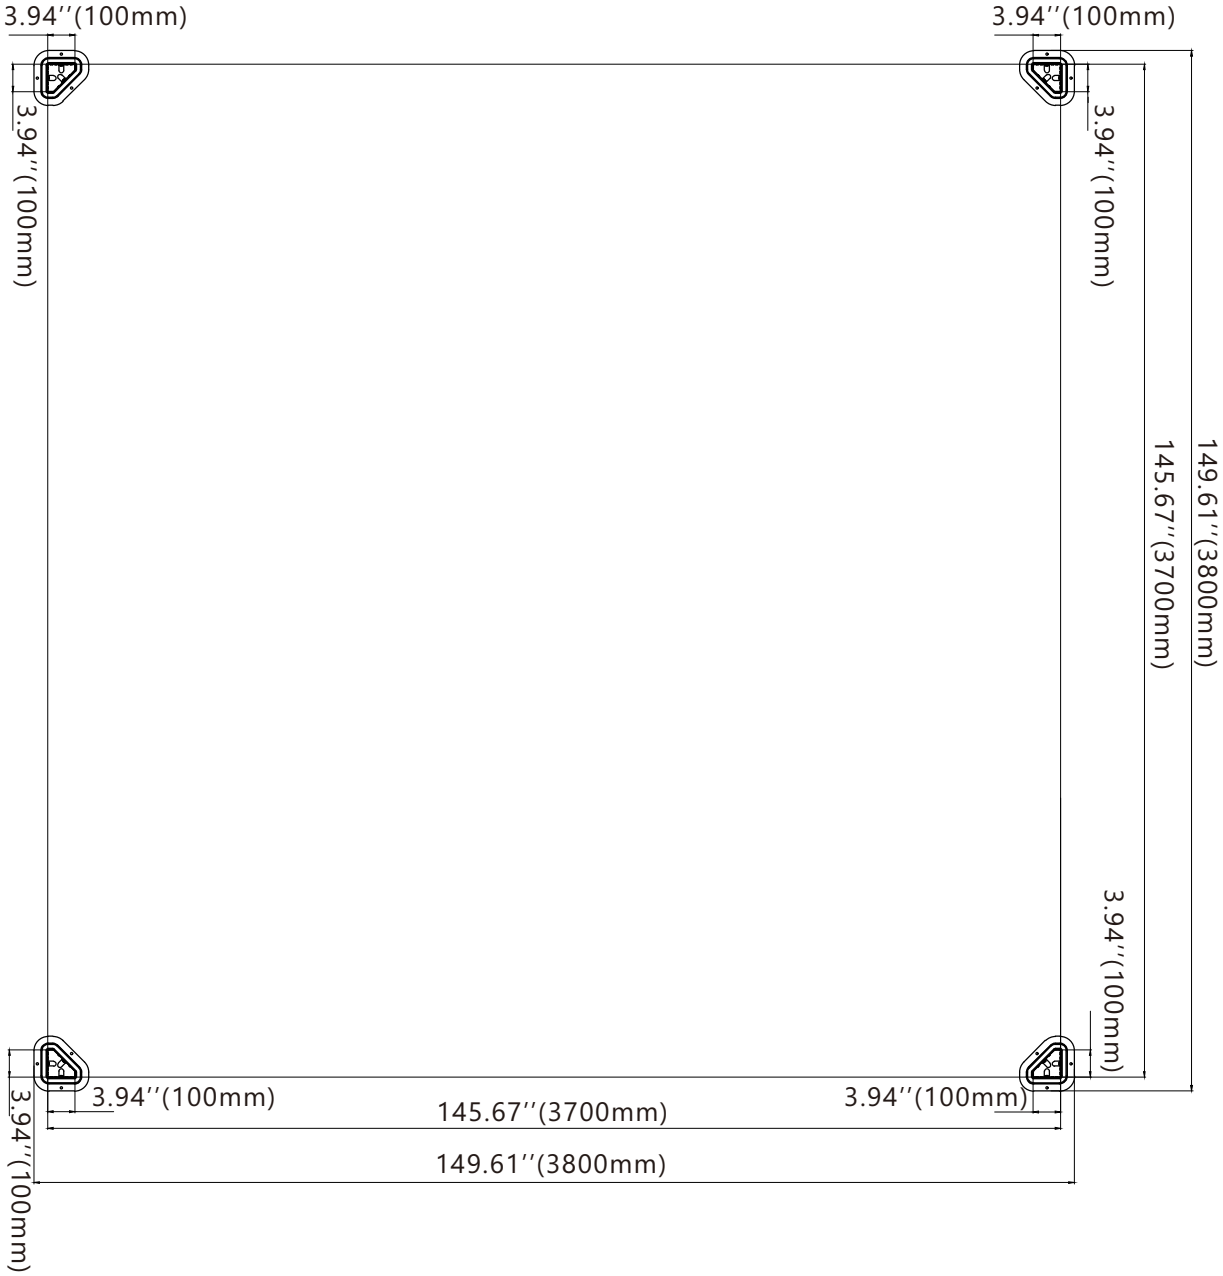
3.94''(100mm)
3.94''(100mm)
3.94''(100mm)
3.94''(100mm)
149.61''(3800mm)
145.67''(3700mm)
3.94''(100mm)
3.94''(100mm)
3.94''(100mm)
145.67''(3700mm)
3.94''(100mm)
149.61''(3800mm)



A 4x Post



C 4x Beam



C1 4x Beam



E 4x Corner Roof Tube




E1 4x Finishing Bar




E2 4x Middle Roof Tube



F 8x Solidifying Bar



H 4x Finishing Bar




J 4x Finishing Bar

K 4x Finishing Bar


K1 4x Finishing Bar



L1 4x Roof Panel

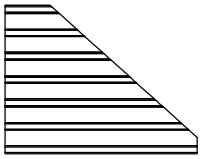


L2 4x Roof Panel

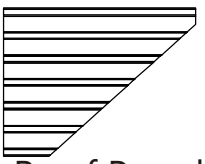


L3 4x Roof Panel



L4 4x Roof Panel

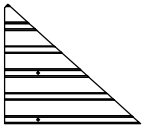


M1 4x Roof Panel

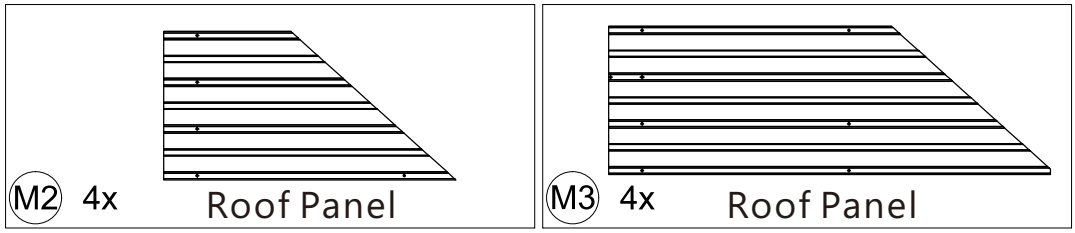


M2 4x Roof Panel


M3 4x Roof Panel

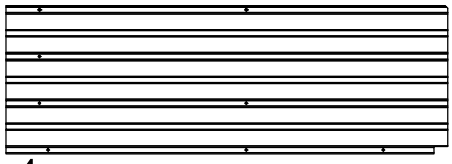


M4 4x Roof Panel

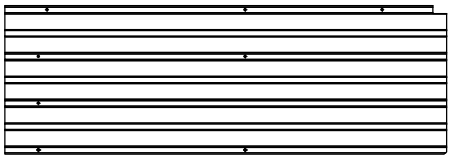


M5 4x Roof Panel

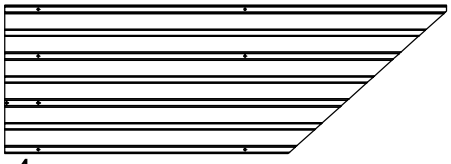


M6 4x Roof Panel

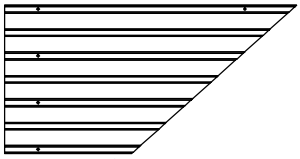

M7 4x Roof Panel

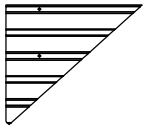

M8 4x Roof Panel



Q 4x Plastic Bar



T 4x Track




T1 4x Track



B 4x Base



B1 8x Bracket




C2 4x Union Bar




Corner Solidifying Bar R 4x




Corner Solidifying Bar R1 4x




Inside Roof Connector S 1x



Outside Roof Connector S1 1x



S2 1x Hook




U 4x Bracket




U1 4x Bracket




U2 4x Bracket



U3 4x Bracket

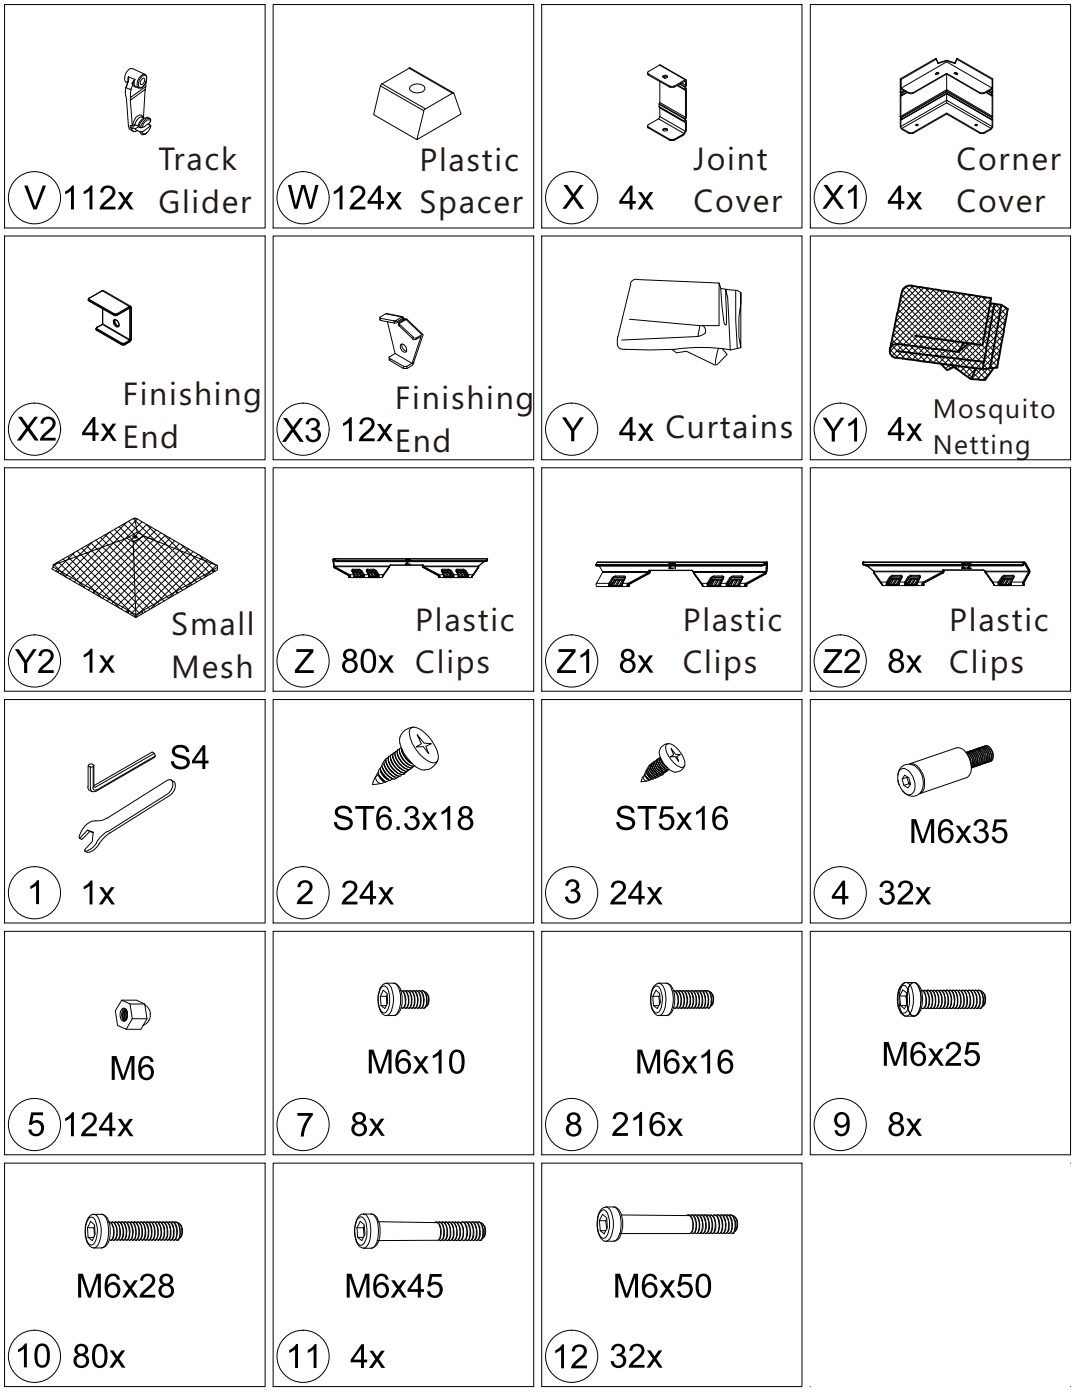
V 112x Track Glider
W 124x Plastic Spacer
X 4x Joint Cover
X1 4x Corner Cover
X2 4x Finishing End
X3 12x Finishing End
Y 4x Curtains
Y1 4x Mosquito Netting
Y2 1x Small Mesh
Z 80x Plastic Clips
Z1 8x Plastic Clips
Z2 8x Plastic Clips
S4
1 1x
ST6.3x18
2 24x
ST5x16
3 24x
M6x35
4 32x
M6
5 124x
M6x10
7 8x
M6x16
8 216x
M6x25
9 8x
M6x28
10 80x
M6x45
11 4x
M6x50
12 32x

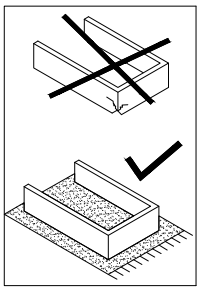



A 4x



B 4x



B1 8x



S4

1 1x




M6x16

8 28x

1

POST ASSEMBLY:

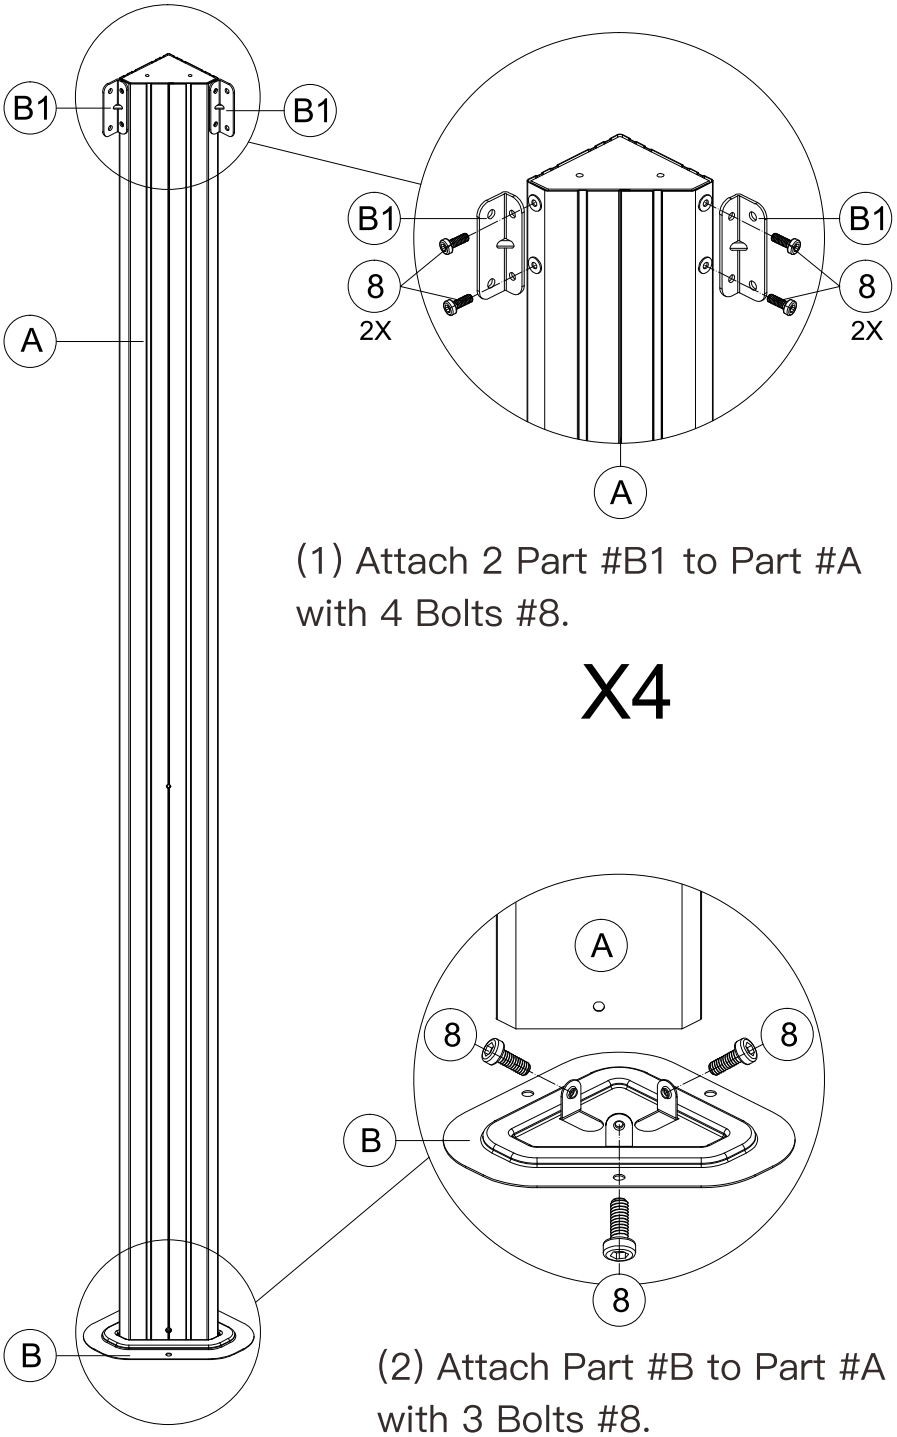


(1) Attach 2 Part #B1 to Part #A with 4 Bolts #8.

X4

(2) Attach Part #B to Part #A with 3 Bolts #8.


(3) Repeat the above procedures to assemble the other 3 Part #A.

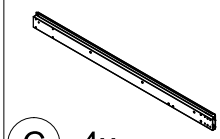

C 4x



C1 4x



C2 4x



X 4x




1 1x




M6x16

8 40x


2

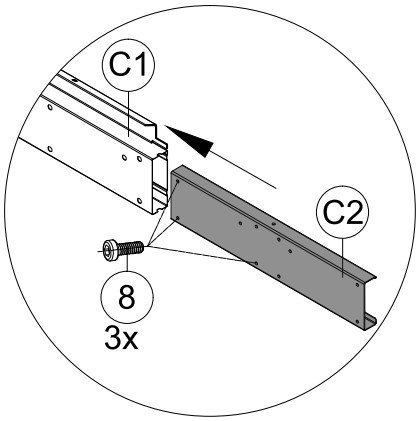


(1) Insert Part #C2 into Part #C1 and secure with 3 Bolts #8.

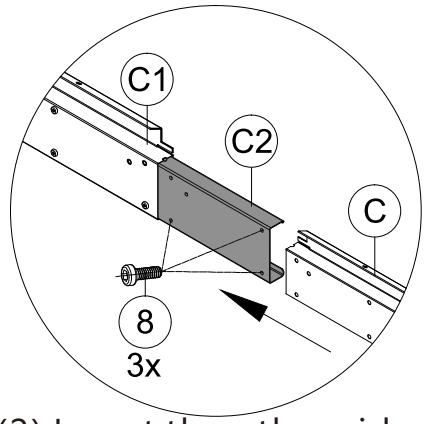


(2) Insert the other side of Part #C2 into Part #C and secure with 3 Bolts #8.

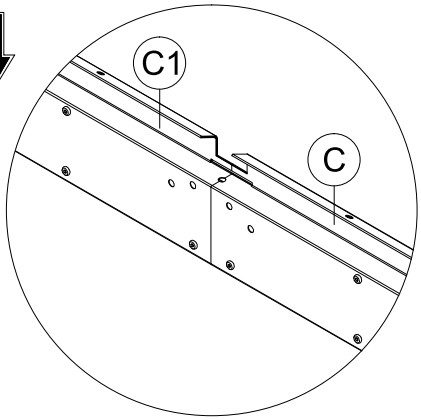

(3) Connect Part #C and Part #C1 through Part #C2.

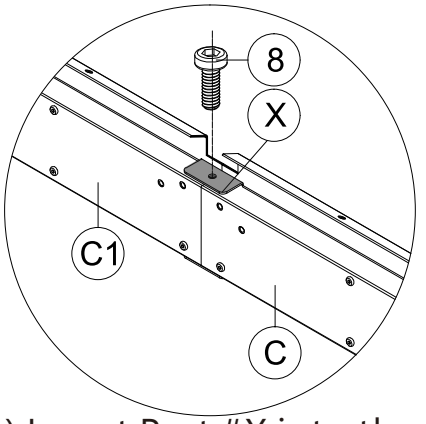


(4) Insert Part #X into the beam and secure with 1 Bolt #8.

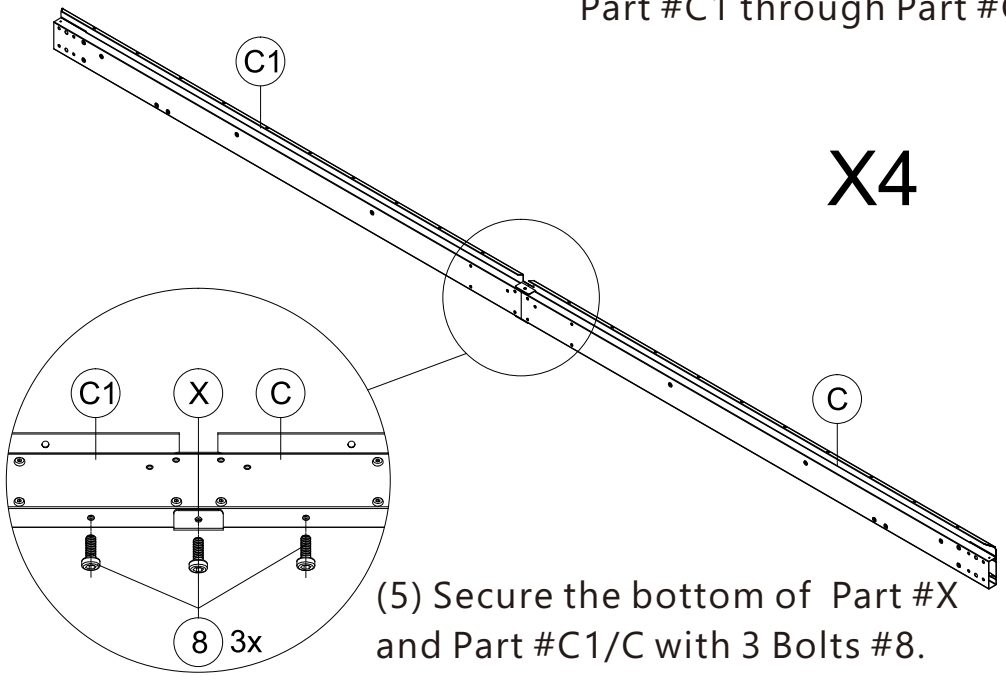


(5) Secure the bottom of Part #X and Part #C1/C with 3 Bolts #8.

(6) Repeat the above procedures to assemble the other beams.

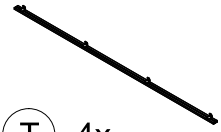

T 4x

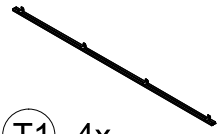


T1 4x





V 112x


TRACK ASSEMBLY:

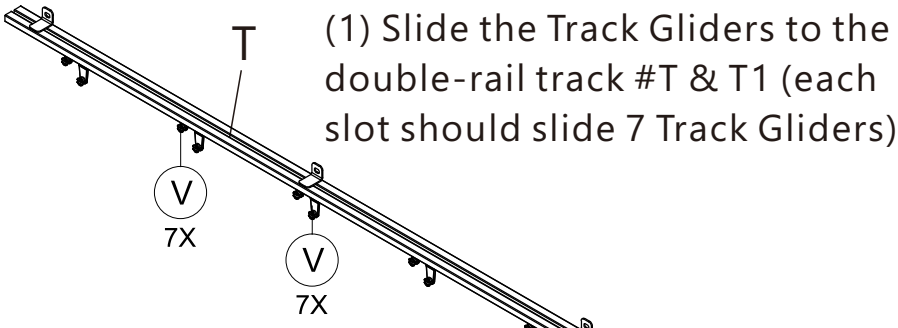


(1) Slide the Track Gliders to the double-rail track #T & T1 (each slot should slide 7 Track Gliders).

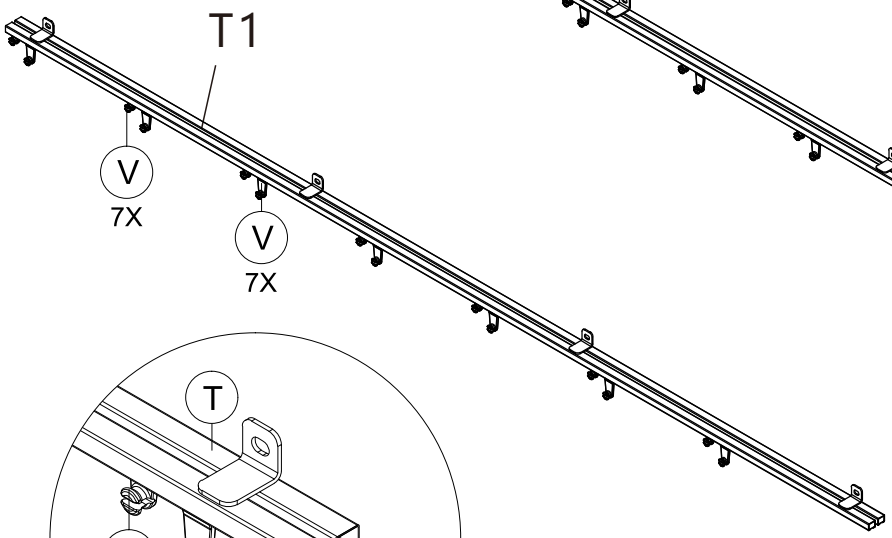

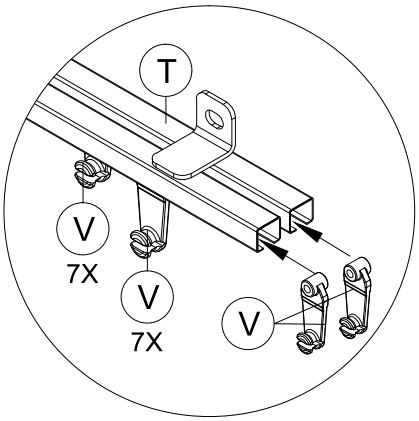

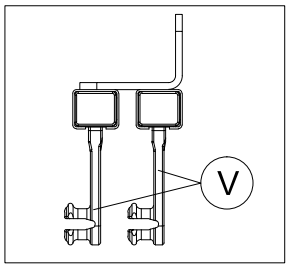

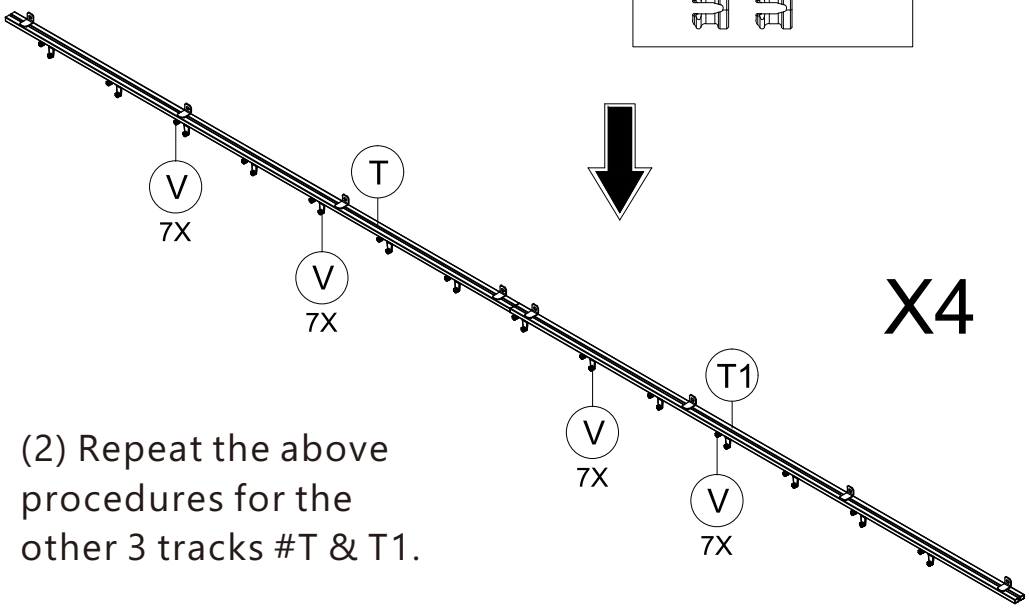

X4

(2) Repeat the above procedures for the other 3 tracks #T & T1.


S4

1 1x

M6x16

8 32x

(1) Use 8 Bolts #8 to fix the track #T & T1 to the beam #C1 & C.

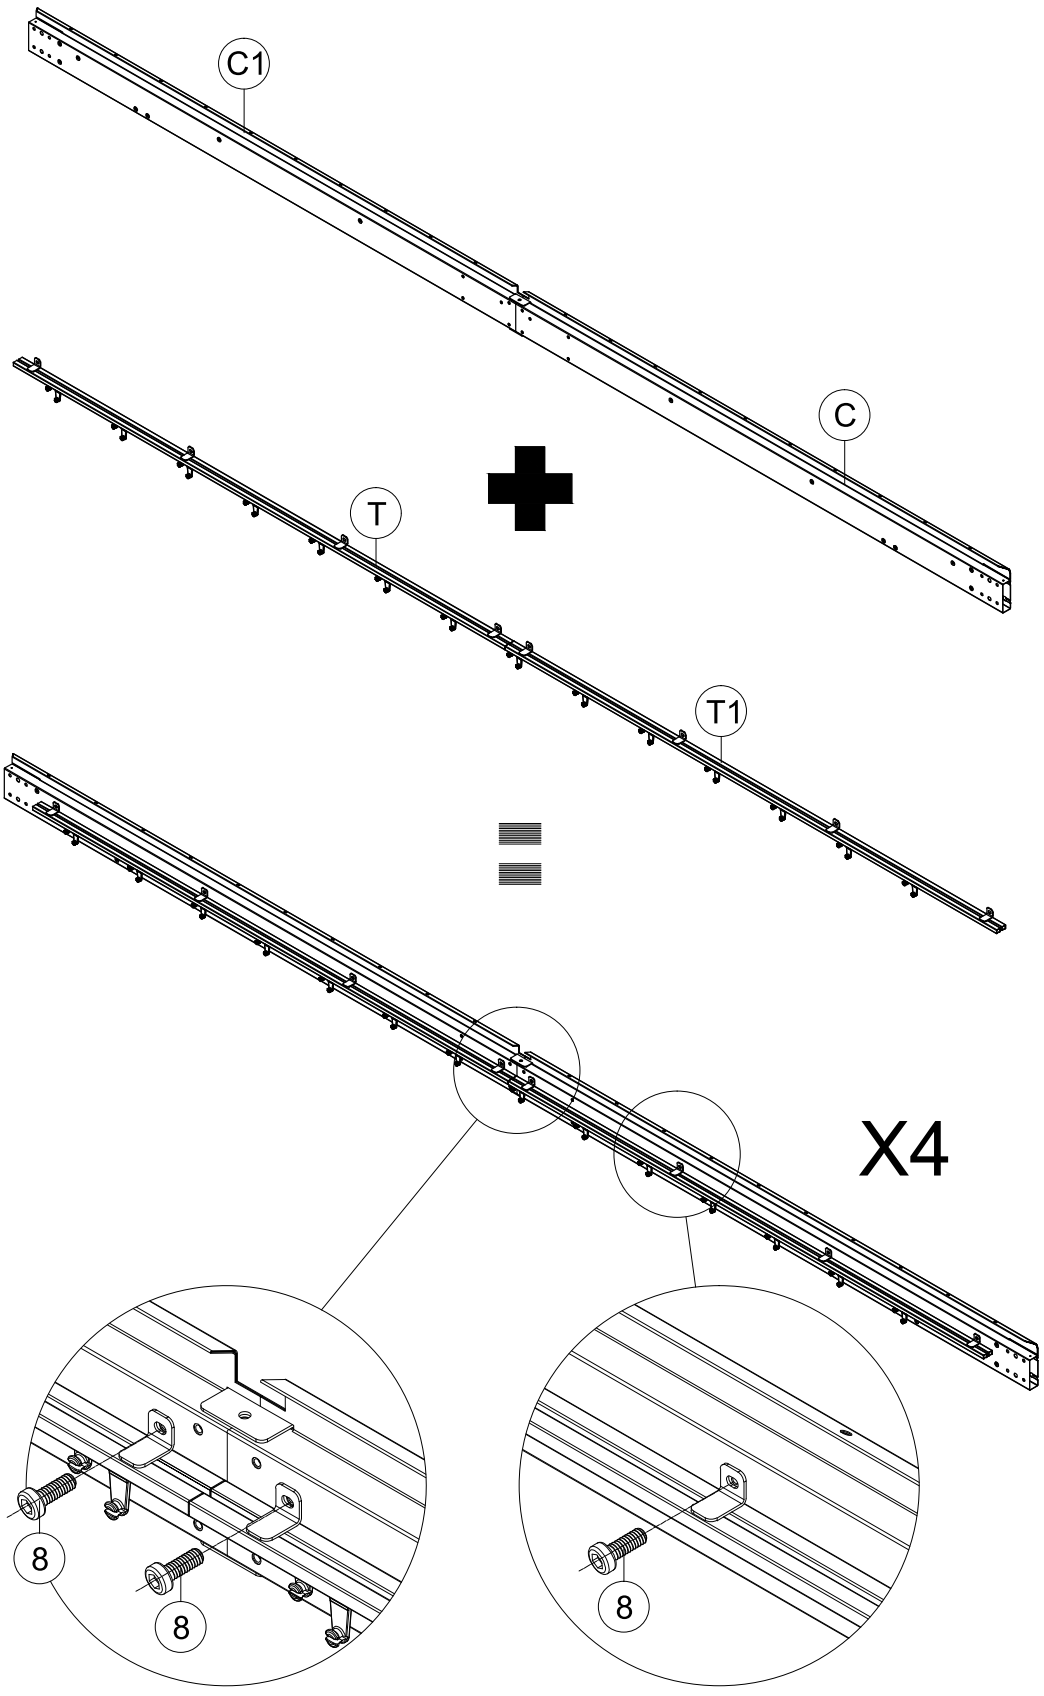

(2) Repeat the above procedures the other beams.


S4

1 1x

M6x35

4 32x

(1) Connect Beam #C and #C1 to Post #A with 8 Bolts #4. (From Outside).

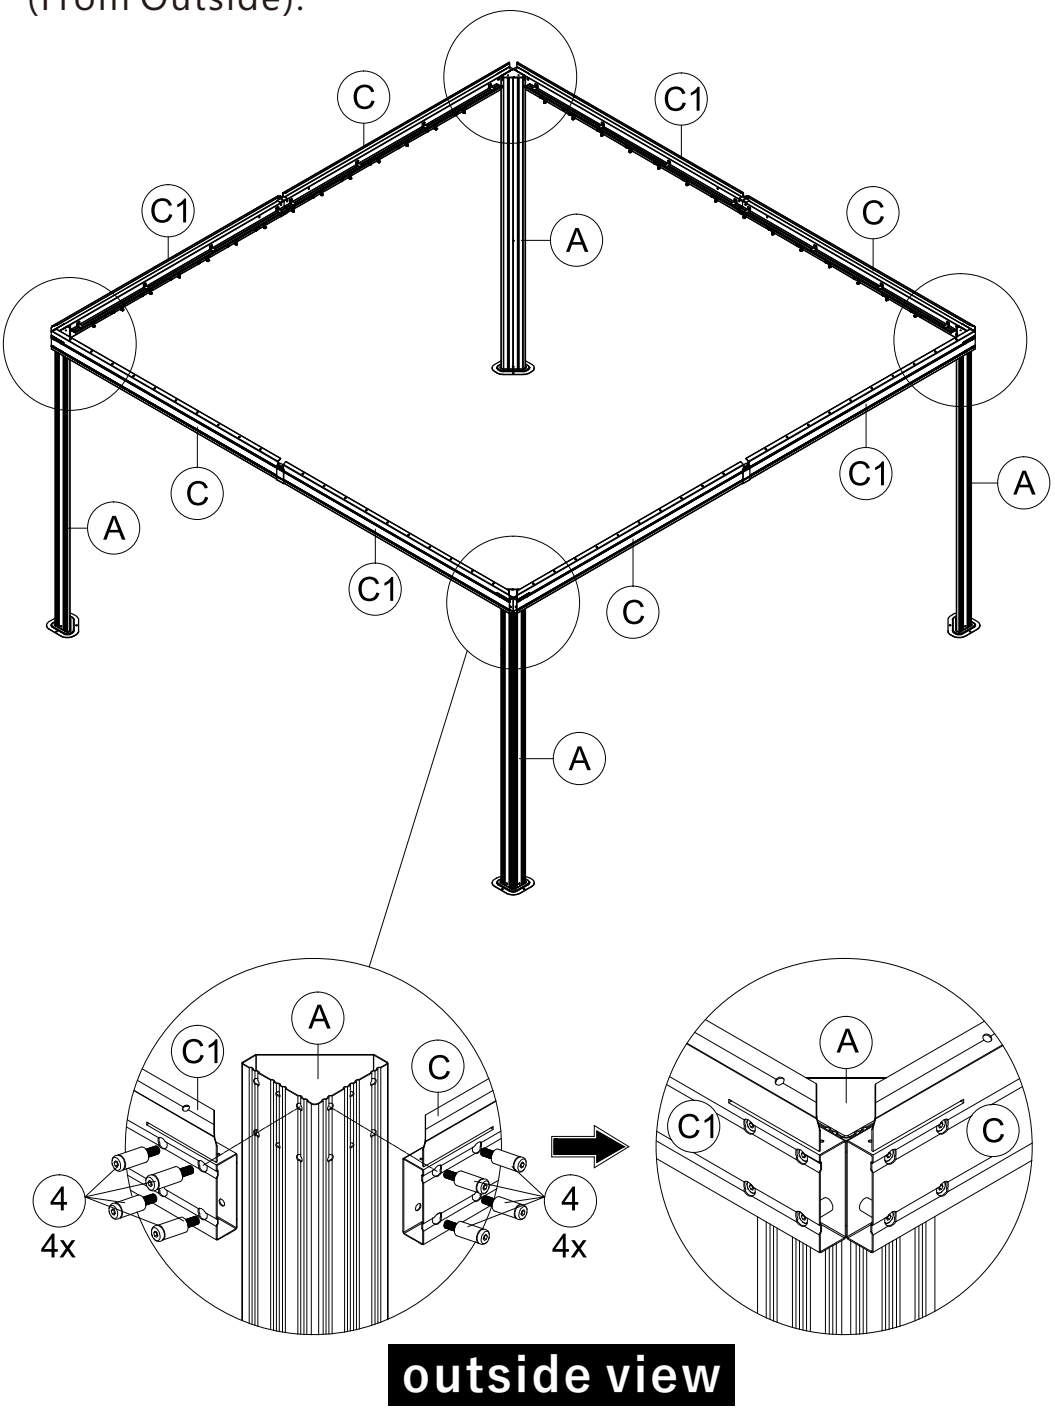

outside view

(2) Repeat the above procedures to assemble the other 3 corners.

Please don't tighten all bolts!


S4

1 1x


M6x16

8 16x

(1) Connect Beam #C and #C1 to Post #A with 4 Bolts #8 (From Inside).

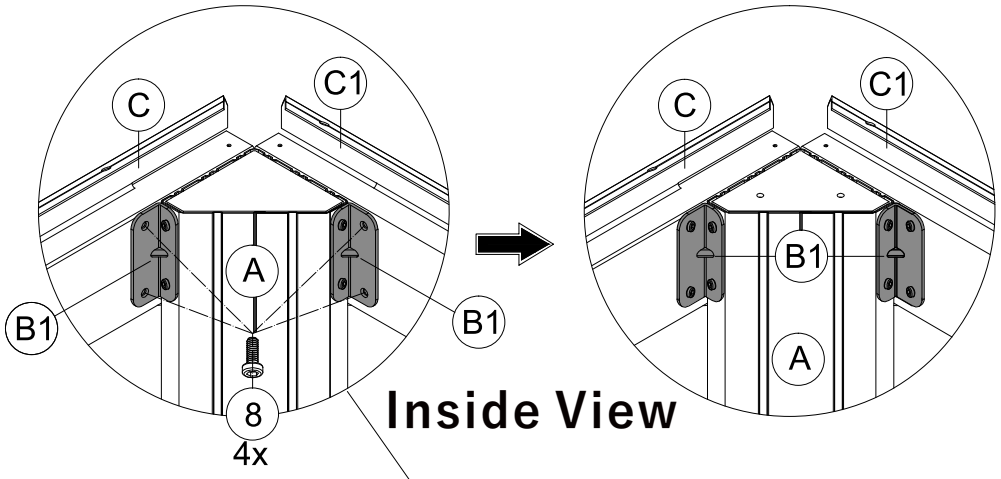


Inside View

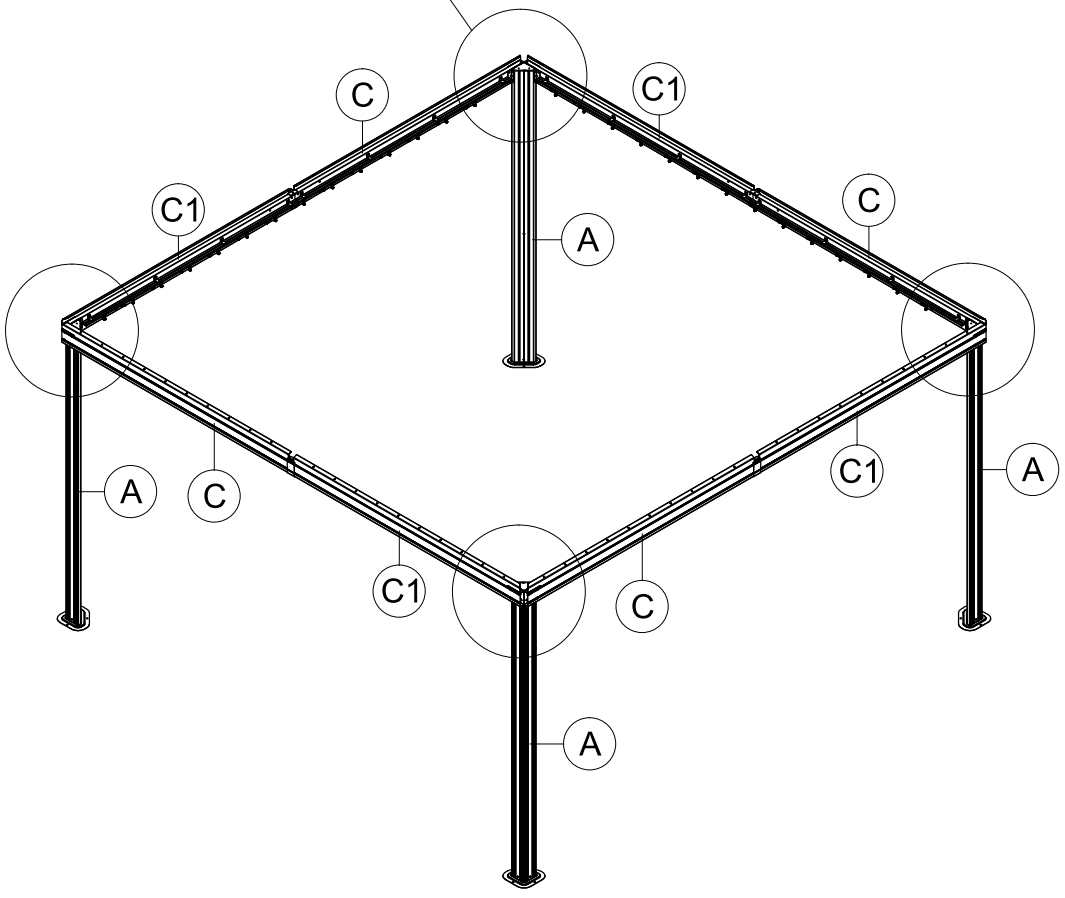


(2) Repeat the above procedures to assemble the other 3 corners.

Please don't tighten all bolts!

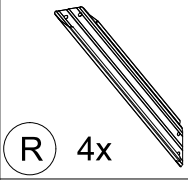

R 4x

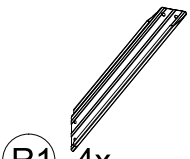

R1 4x



S4


1 1x




M6x16


8 32x

(1) Affix Part #R and Part #R1 to the frame with 8 Bolts #8.

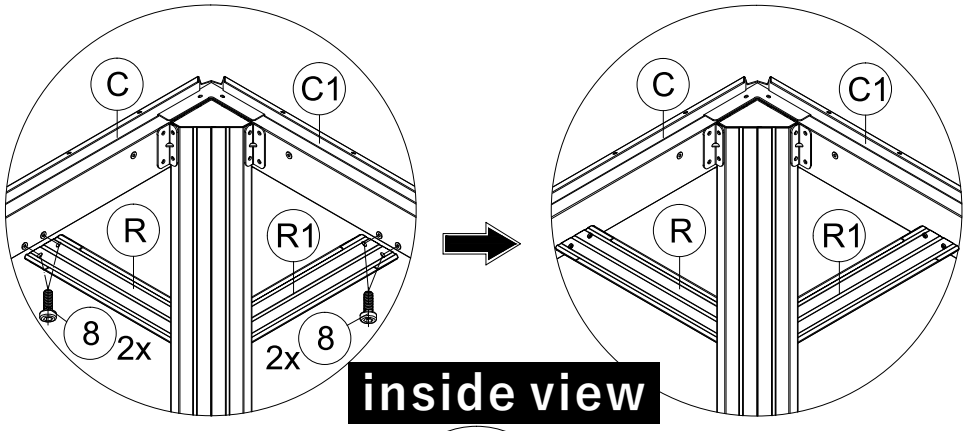

inside view

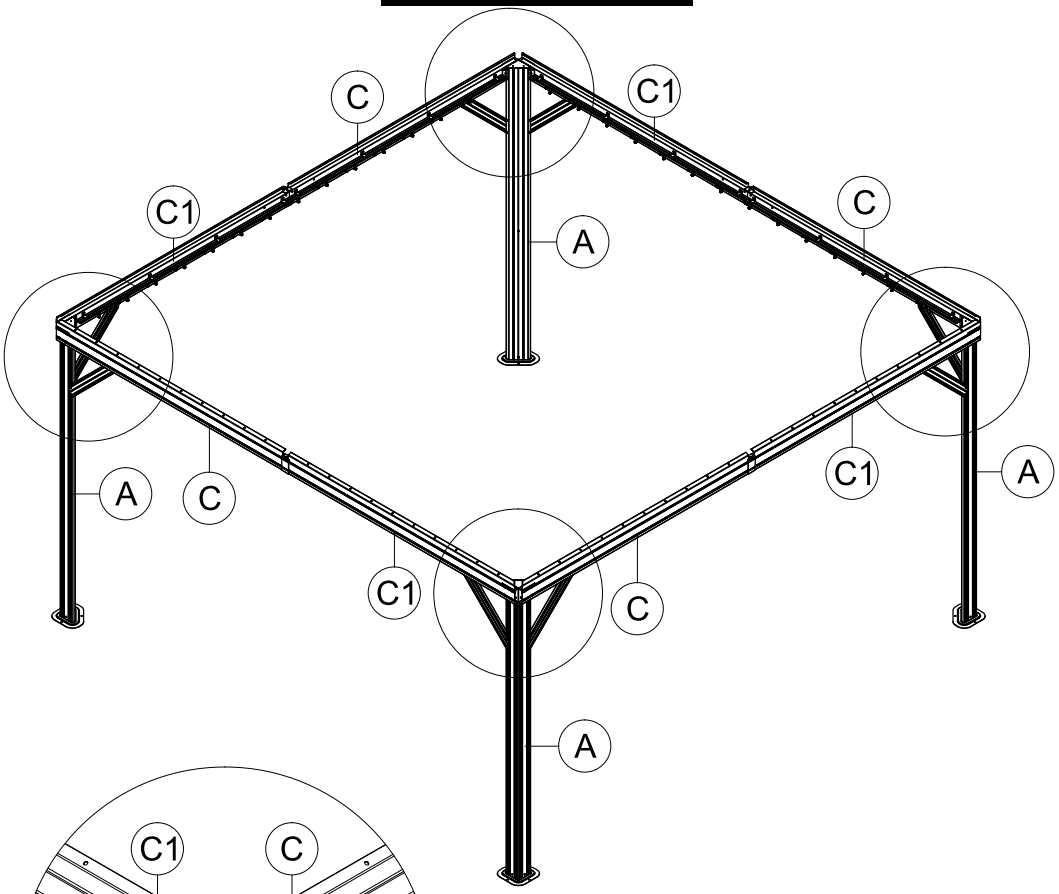

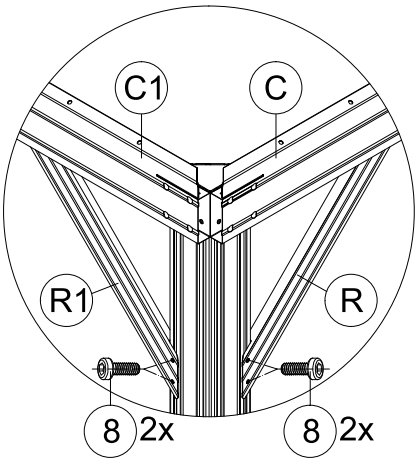


(2) Repeat the above procedures for the other 3 corners.

outside view

7

Tighten all the bolts!




X1 4x




ST5x16


3 16x

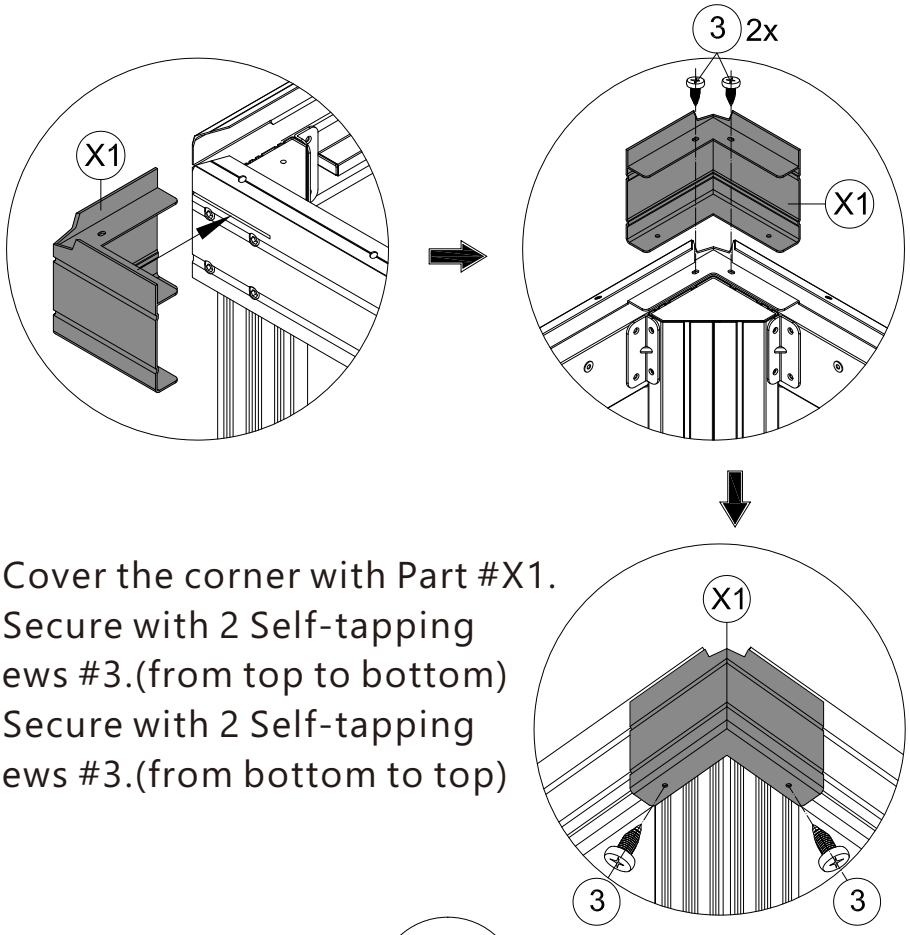

(1) Cover the corner with Part #X1.
(2) Secure with 2 Self-tapping Screws #3.(from top to bottom)
(3) Secure with 2 Self-tapping Screws #3.(from bottom to top)

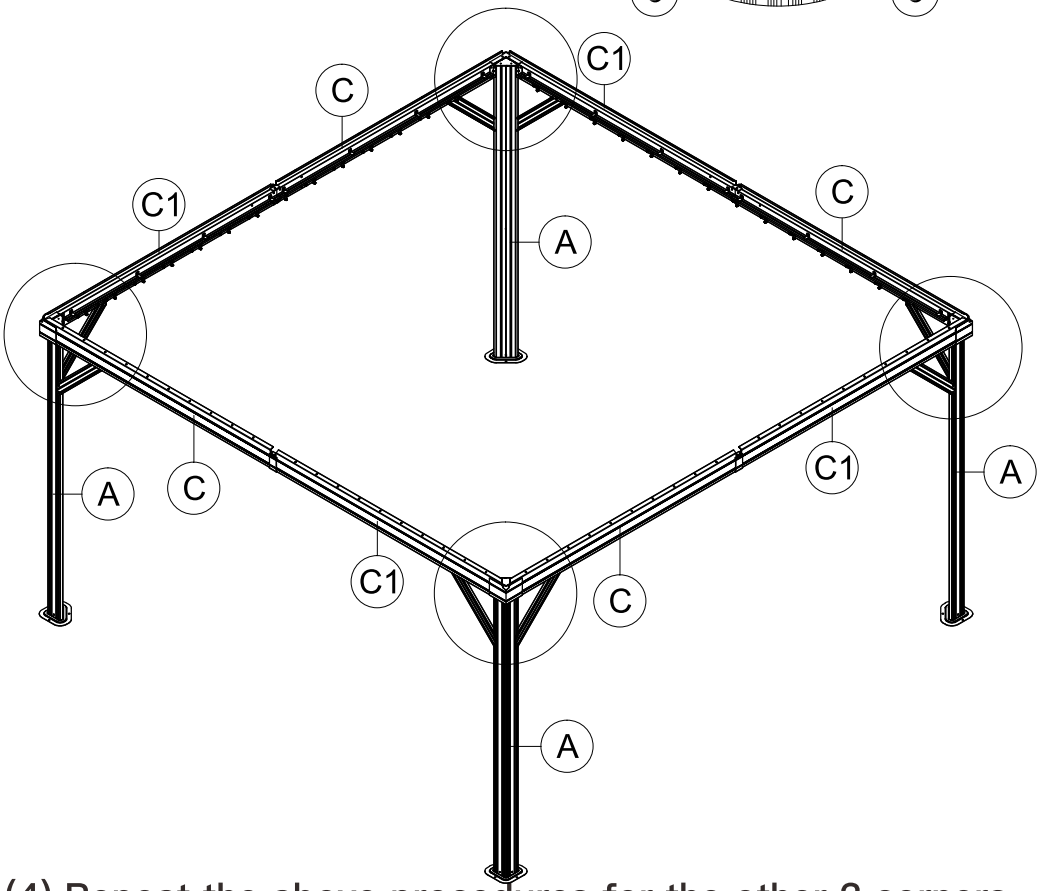


(4) Repeat the above procedures for the other 3 corners.

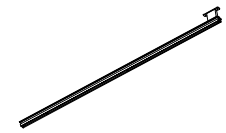

E 4x



E1 4x



U 4x



S4

1 1x




M6x16


8 12x

9

(1)Attach Part #E to Part #E1 with 2 Bolts #8.

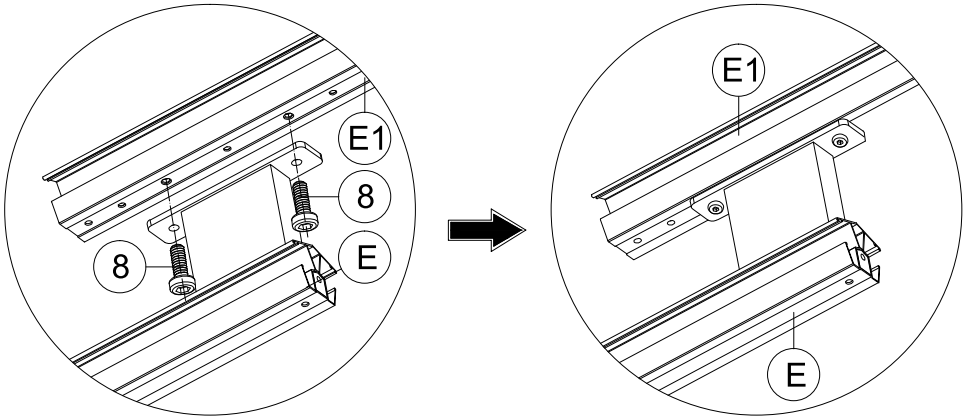



(2)Attach Part #U to Part #E with Bolt #8.

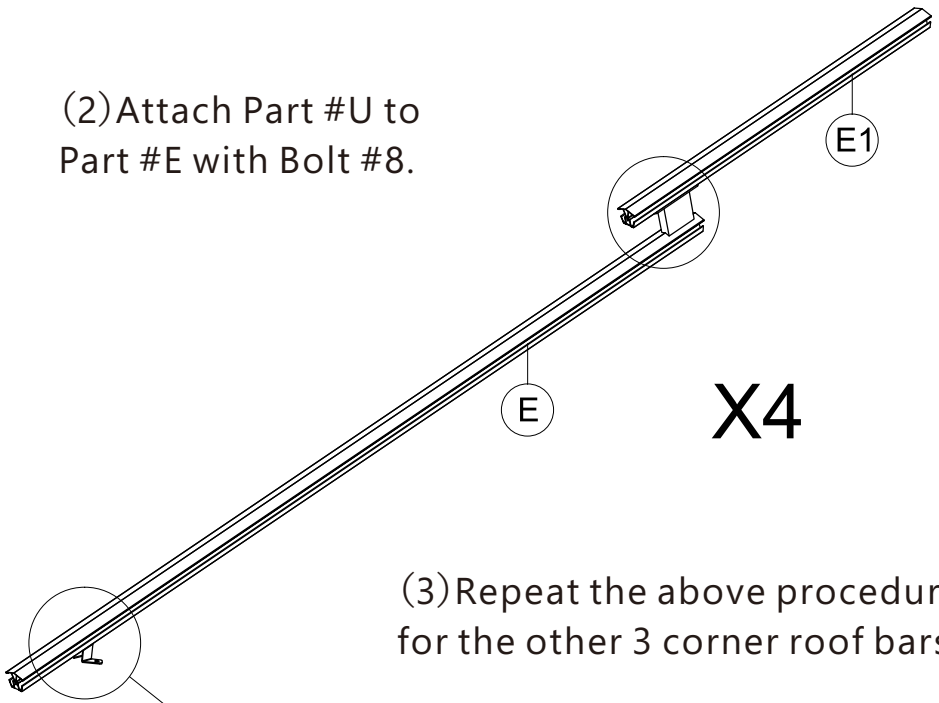

X4

(3)Repeat the above procedures for the other 3 corner roof bars.

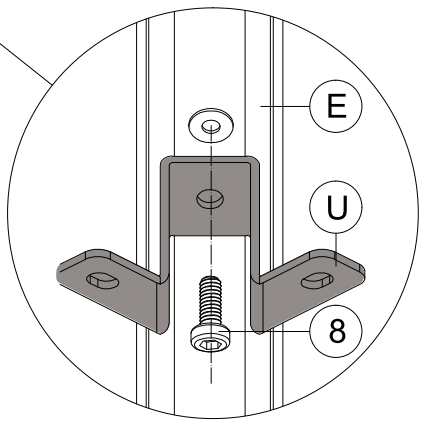



S 1x



S4

1 1x




M6x16

8 16x


Please have a freestanding ladder ready at the center of the gazebo.

(1) Place 4 Part #E1 on the 4 corners of Part #S. Secure with 8 Bolts #8 (from bottom to top).

ATTENTION: You can also finish this step on the ground and then lift 4 corner roof bars and inside roof connector to the top together. (Need 2 people and 2 ladders)

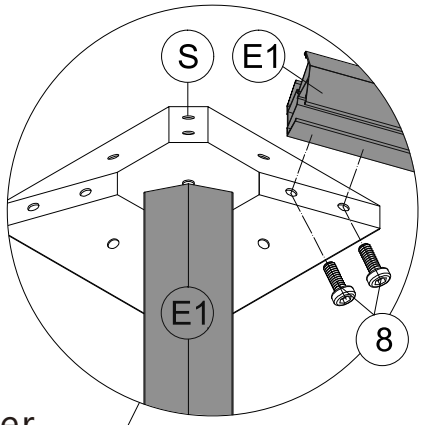


outside view

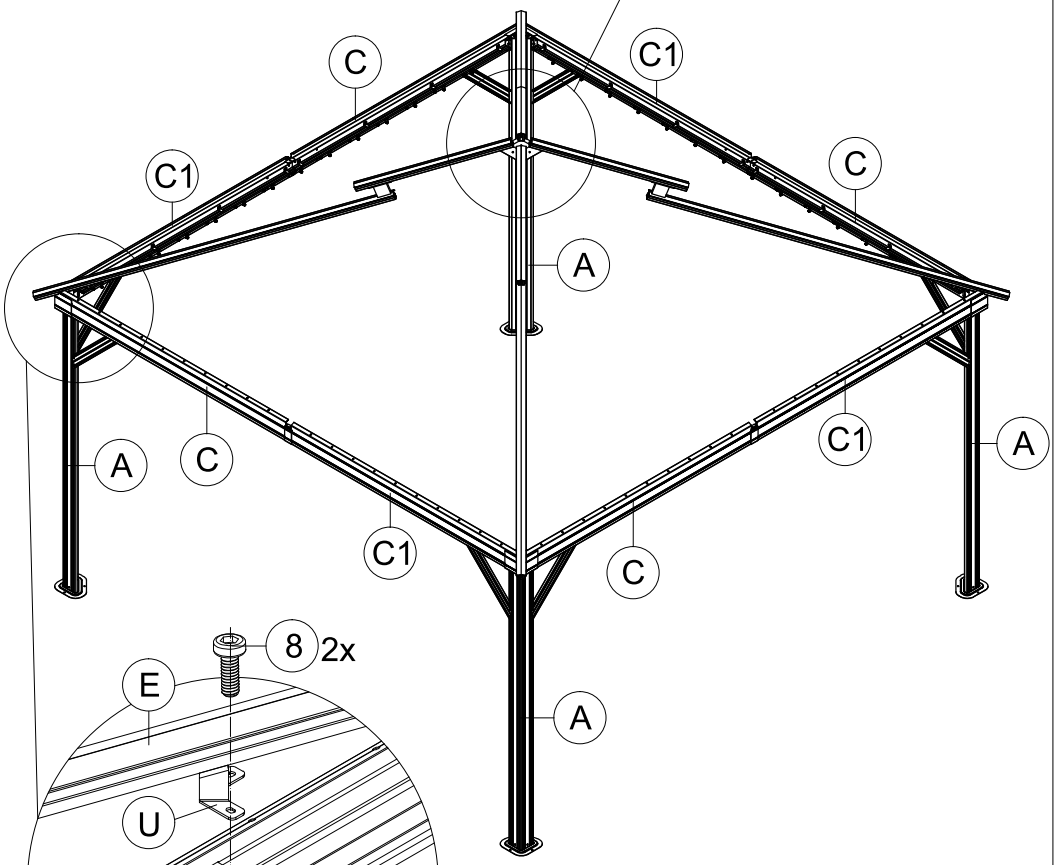

outside view

(2) Place 4 Part #E on 4 Part #A ; Secure with 8 Bolts #8.

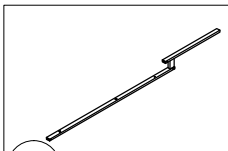

E2 4x



U1 4x




S4


1 1x




M6x10


7 4x

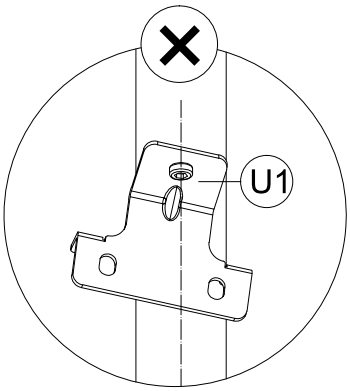

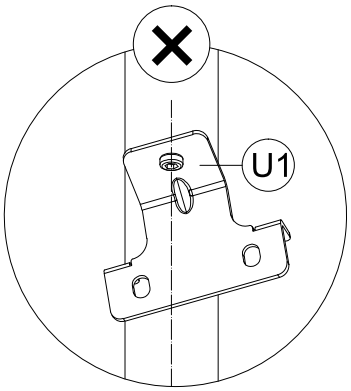

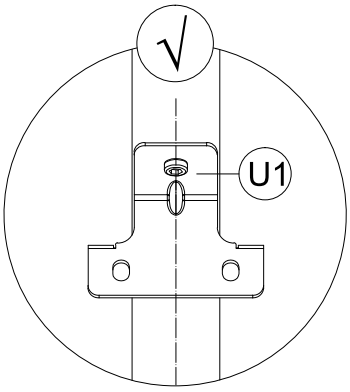

X4

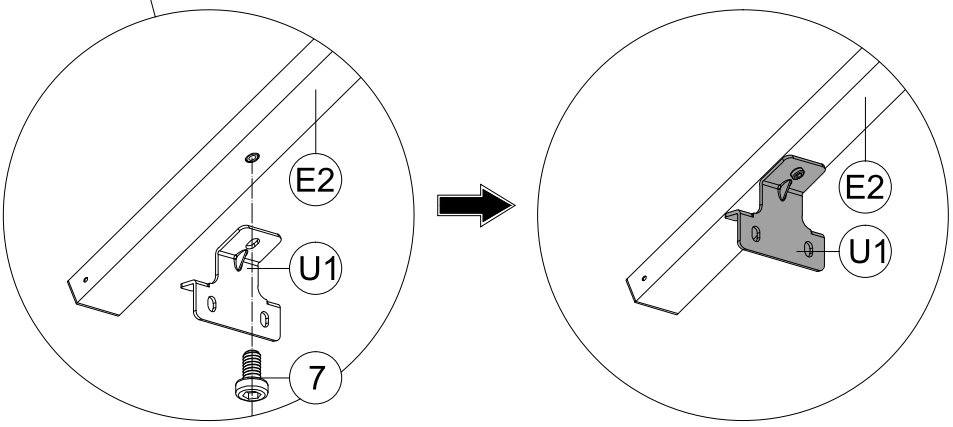

11

(1) Attach Part #U1 to Part #E2 with Bolt #7.

(2) Repeat the above procedures for the other 3 roof bars.


S4


1 1x

M6x16


8 12x

(1) Place Part #E2 on part #S.
Secure with Bolt #8
(from bottom to top)

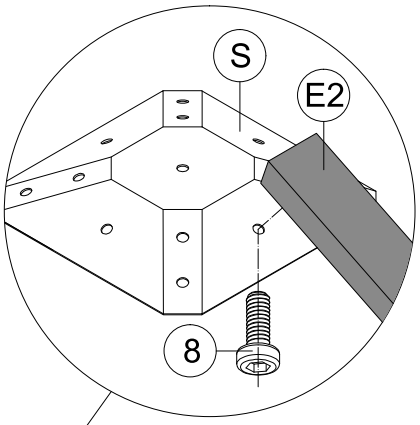

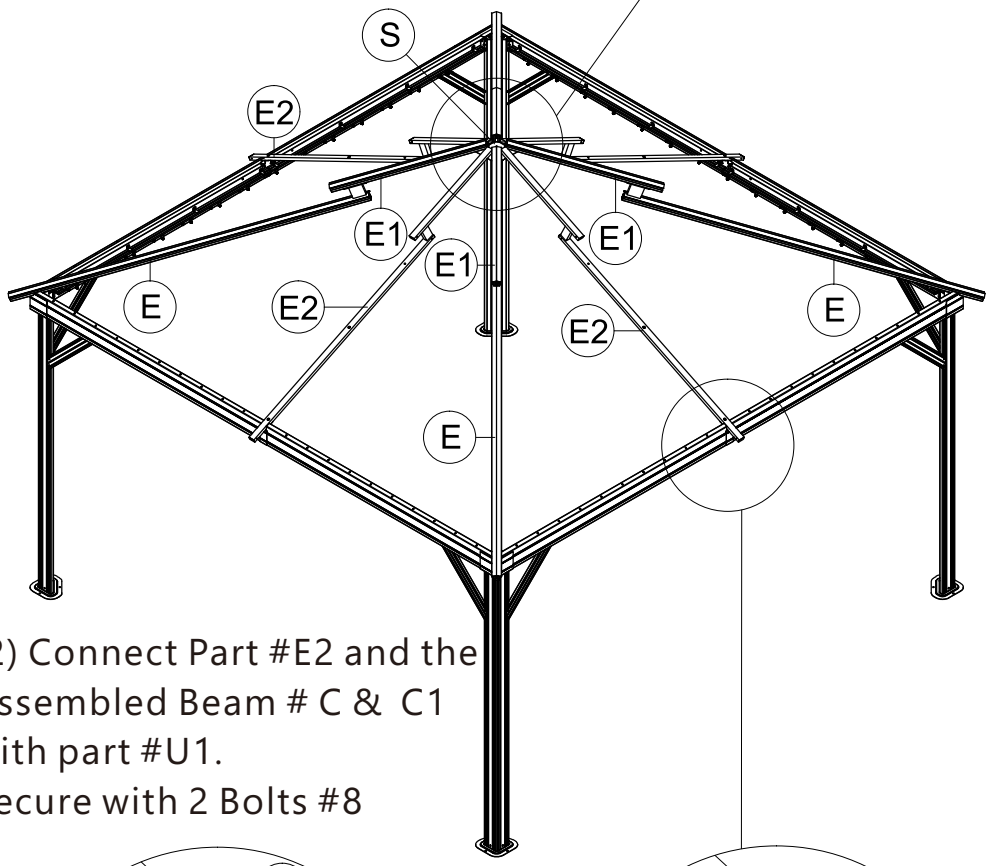


(2) Connect Part #E2 and the
Assembled Beam # C & C1
with part #U1.
Secure with 2 Bolts #8

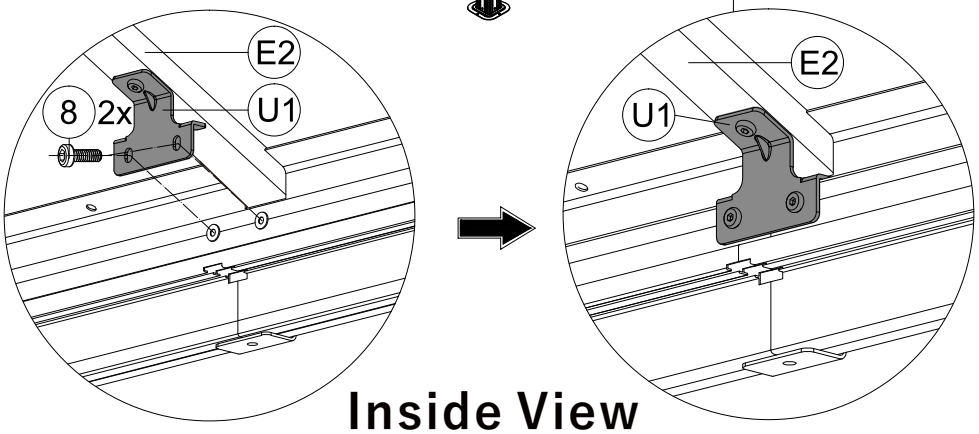


Inside View

(3) Repeat the above procedures to assemble other sides.

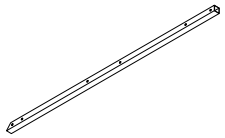

F 8x



U3 4x



S4

1 1x



M6x10

7 4x




M6x16


8 8x

(1) Insert Part #U3 into Part #F.


(2) Attach Part #F to the Part #E2 with 1 Bolt # 7 and 2 Blots #8.

(3) Repeat the above procedures to assemble other sides.

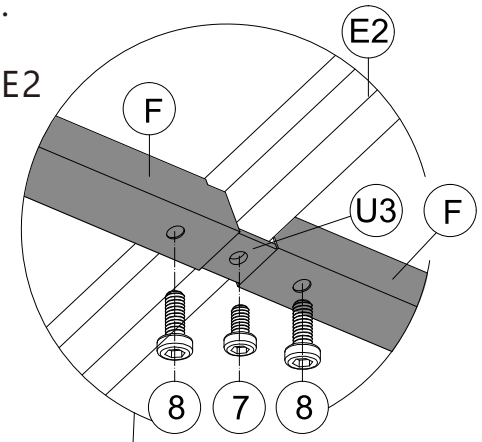

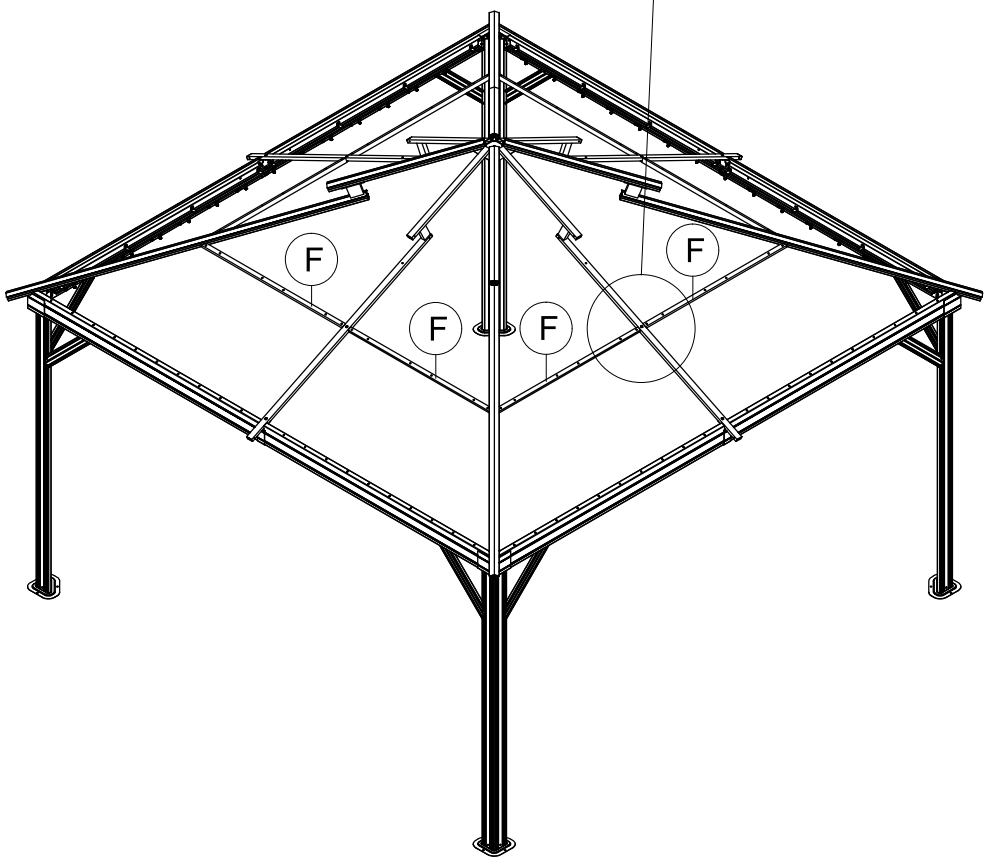

outside view

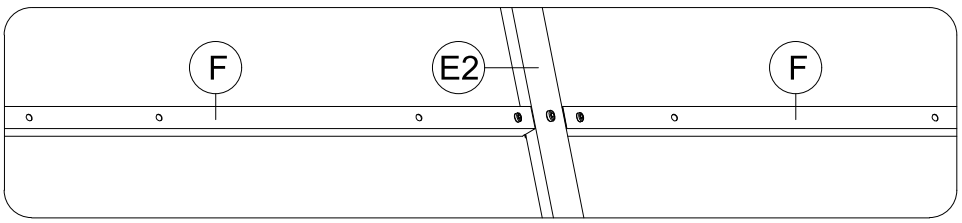



U2 4x




S4

1 1x





M6x16

8 12x

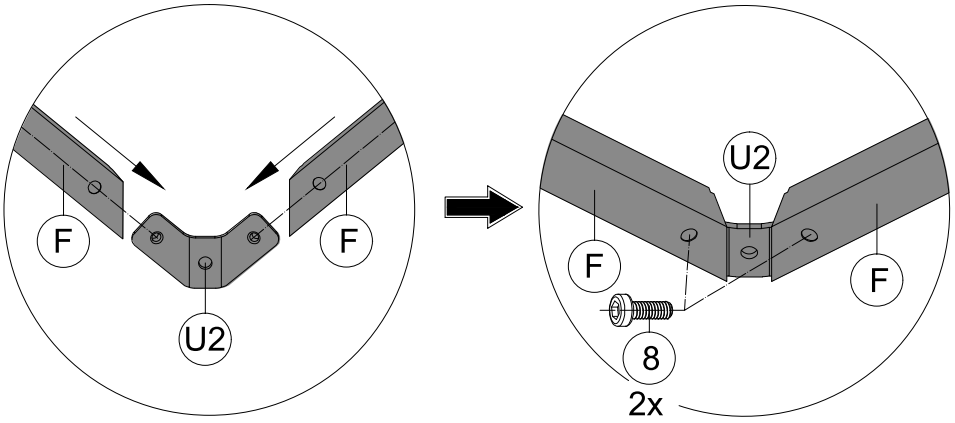


(1) Insert Part #U2 into Part #F.
(2) Secure with 2 Bolts #8.
(3) Secure them to Part #E
with 1 Bolt #8 .

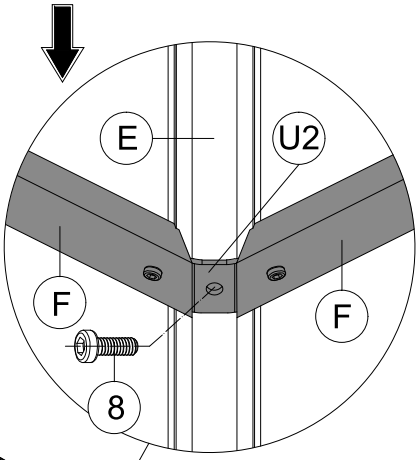

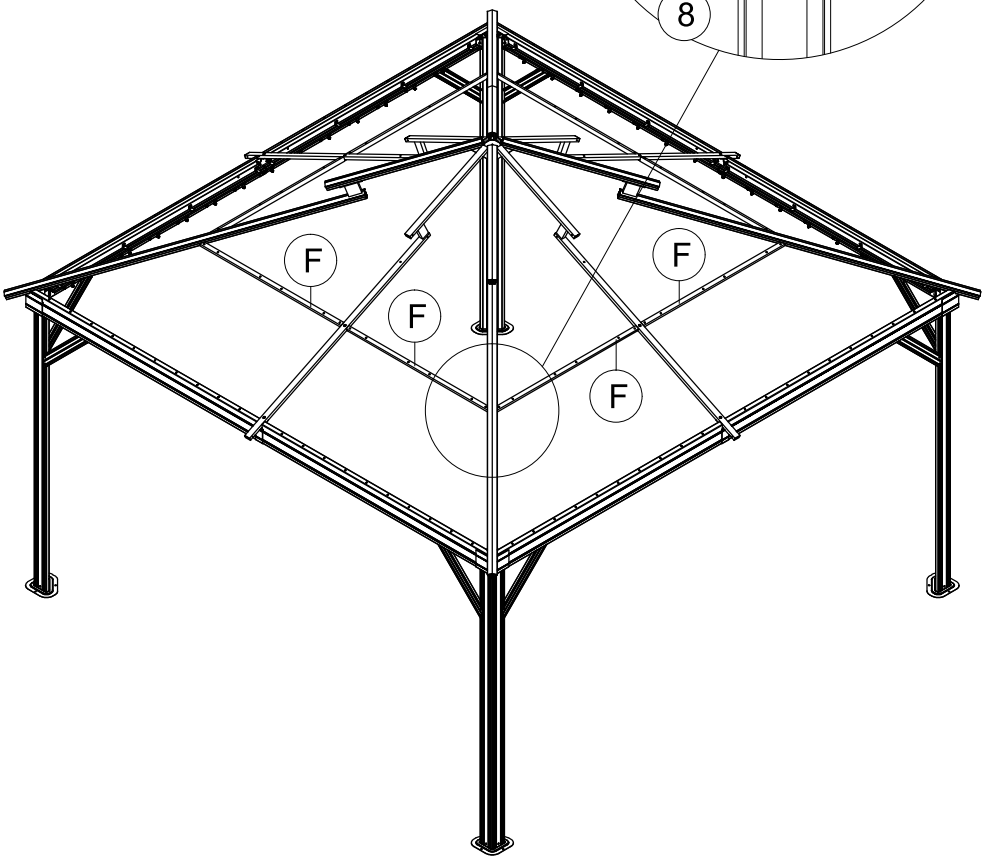


14

(4) Repeat the above procedures to assemble the other 3 sides.

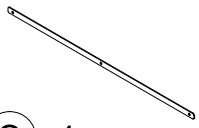



Q 4x




Y2 1x

Insert the Plastic Bar into the Small Mesh.

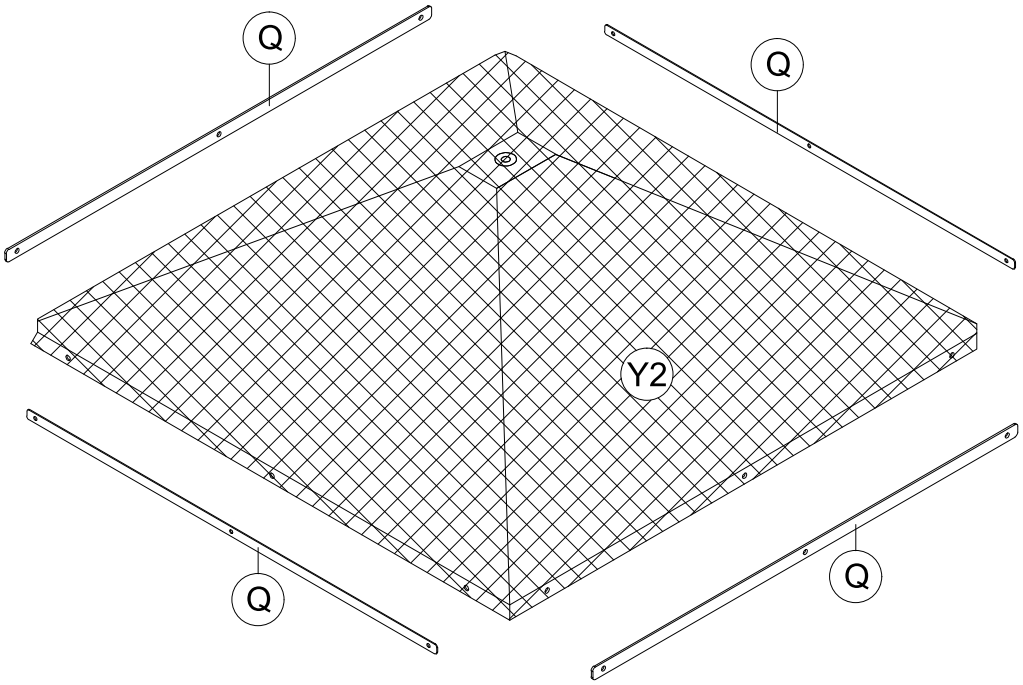

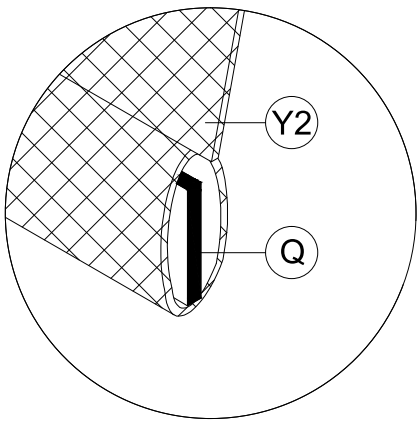


Insert

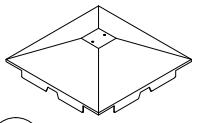


S1 1x




S2 1x

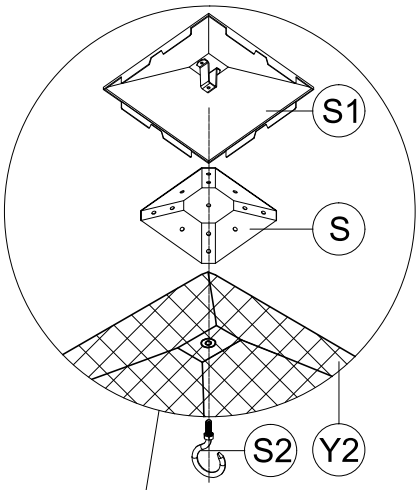

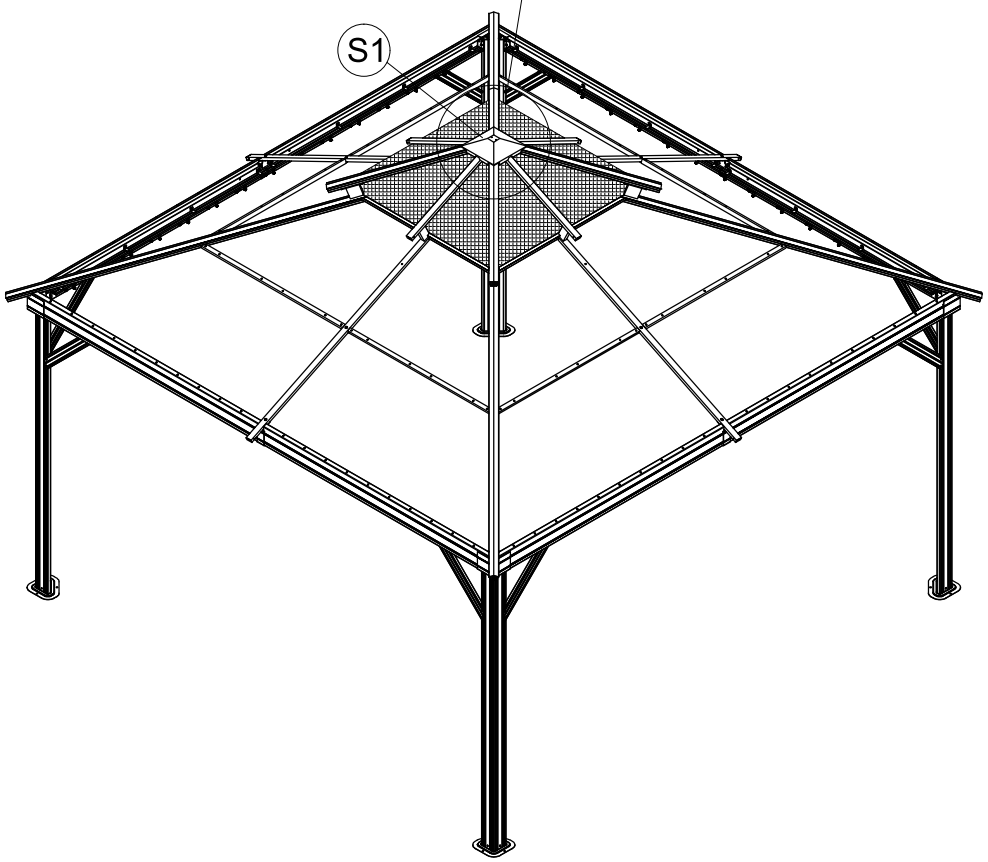

Place the Outside Roof Cover #S1 on the inside Roof Connector #S, align the holes and use 1 Hook #S2 to secure the Small Mesh #Y2 to the inside Roof Connector (From Bottom to Top).

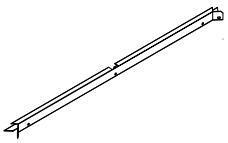

J 4x



S4

1 1x



ST6.3x18

2 4x



M6


5 8x



M6x16

8 8x

Use Screw #2 to assemble the plastic bar #Q (in the small mesh #Y2) and finishing bar #J to the middle roof tube #E2.

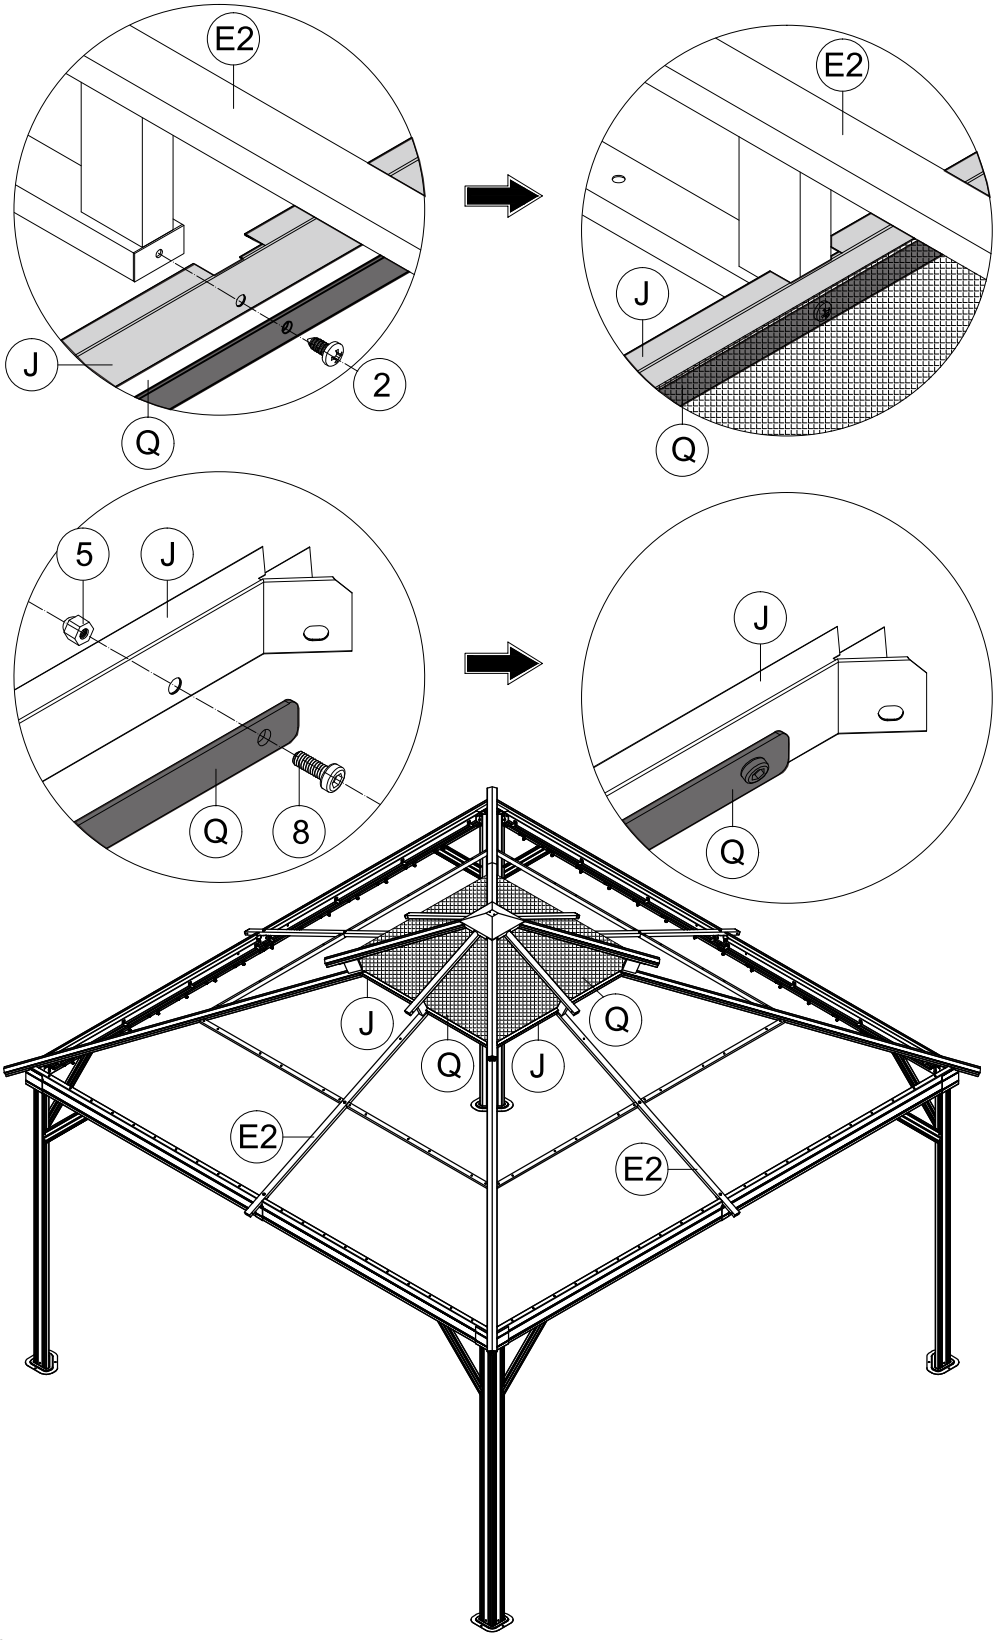

⚠ Please do not pull plastic bar out when installing it with finishing bar.




X3 4x



ST6.3x18

2 4x


Use 4 Screws #2 to secure the small mesh, finishing end #X3 and finishing bar to the corner roof tube #E.

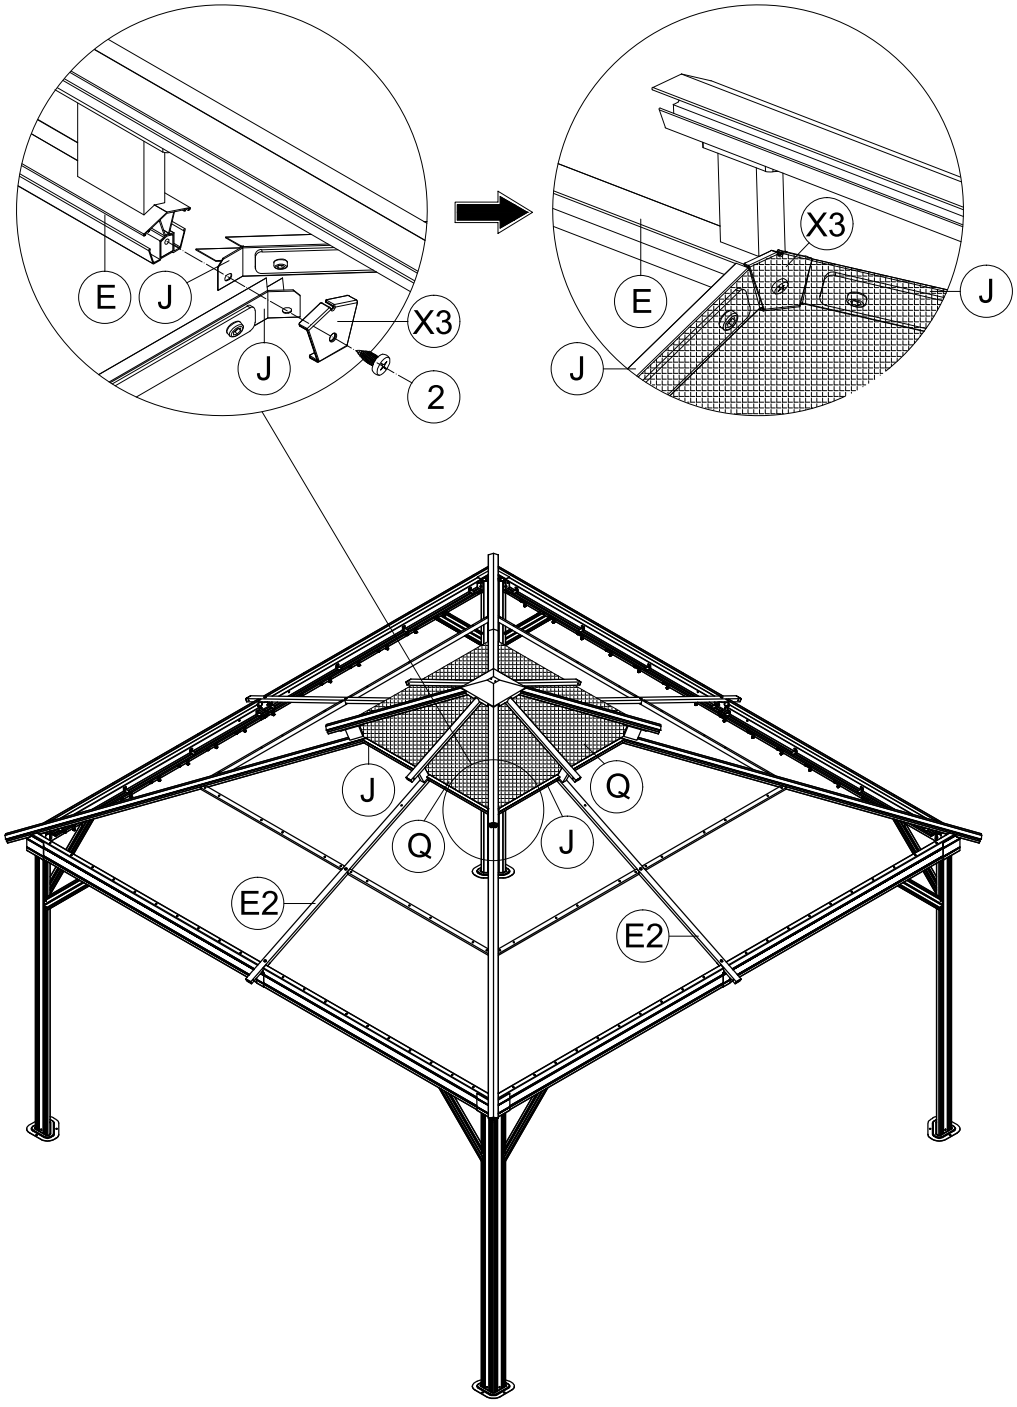


Repeat the above procedures to assemble the other 3 corners.



L1 4x

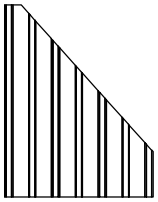

L2 4x

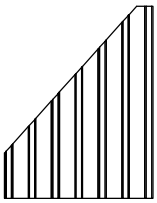

L3 4x



L4 4x



Z 16x





Z1 8x





Z2 8x


19

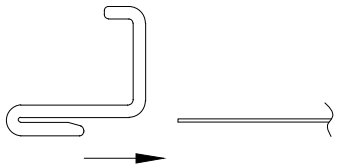


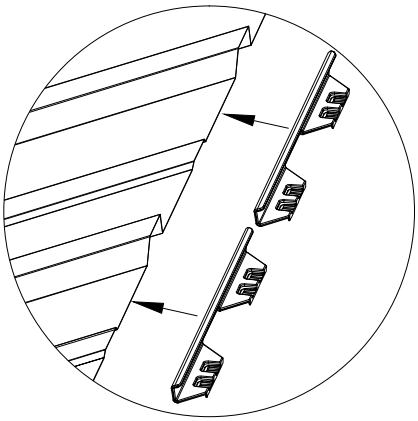

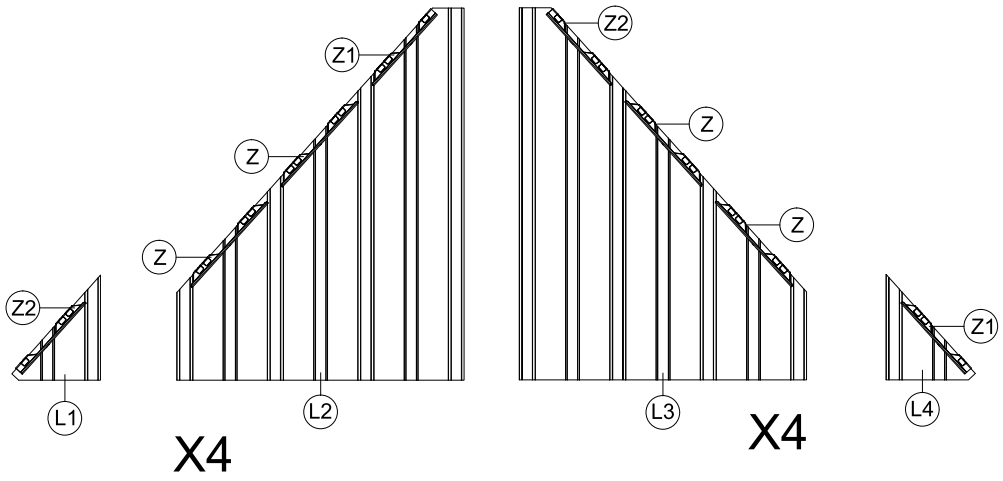

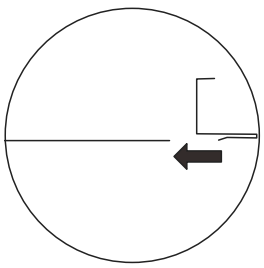


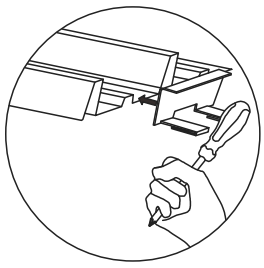

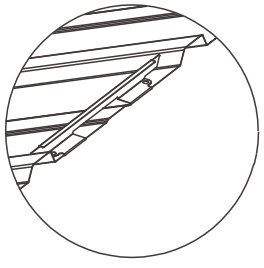

Attach plastic clips #Z #Z1 #Z2 by lightly tapping with a screwdriver.

⚠ Please install Plastic Clips in strict accordance with the instructions.

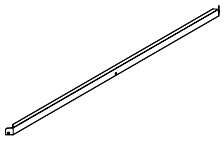


H 4x



ST6.3x18


2 4x

ATTENTION: The bigger roof panel need to cover the smaller one.

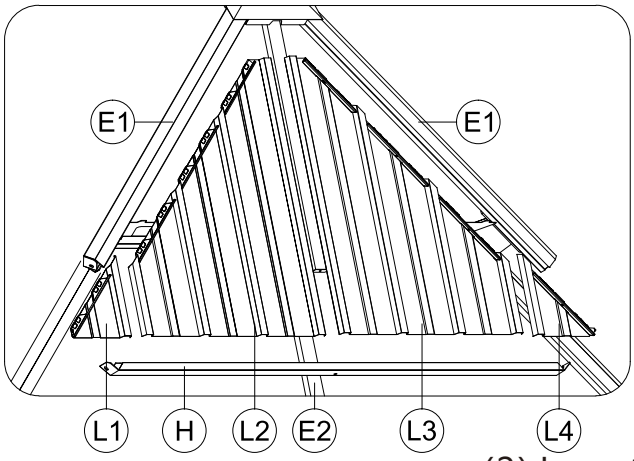

(1) Insert Part #L1 and Part #L4 into the frame.

(2) Insert Part L2 and Part #L3 into the frame.

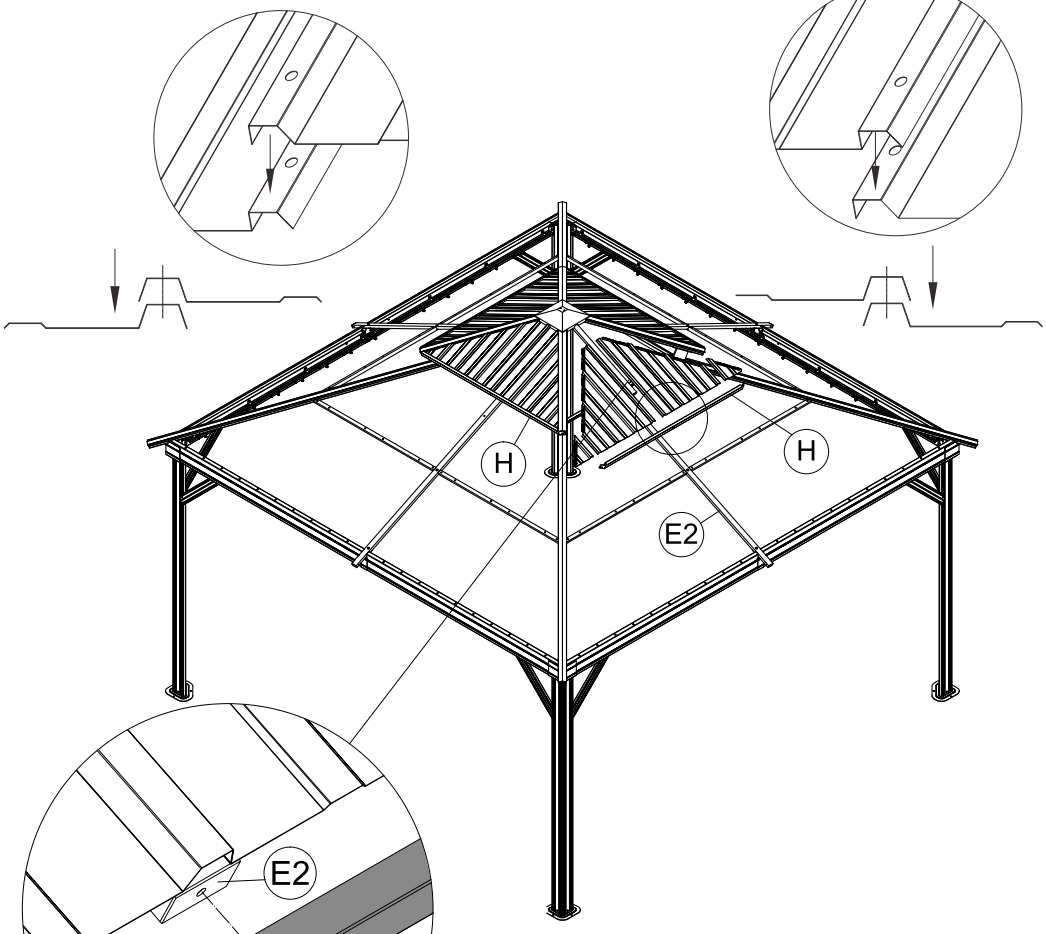

(3) Attach Part #H to Part #E2, securing with Screw #2.

Repeat the above procedures to assemble other sides.




X3 4x




ST6.3x18

2 4x

Place Part #H on Part #E1, put on Part #X3 and secure with bolt #2.

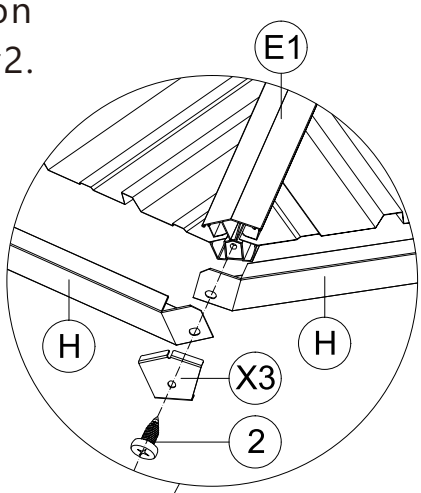

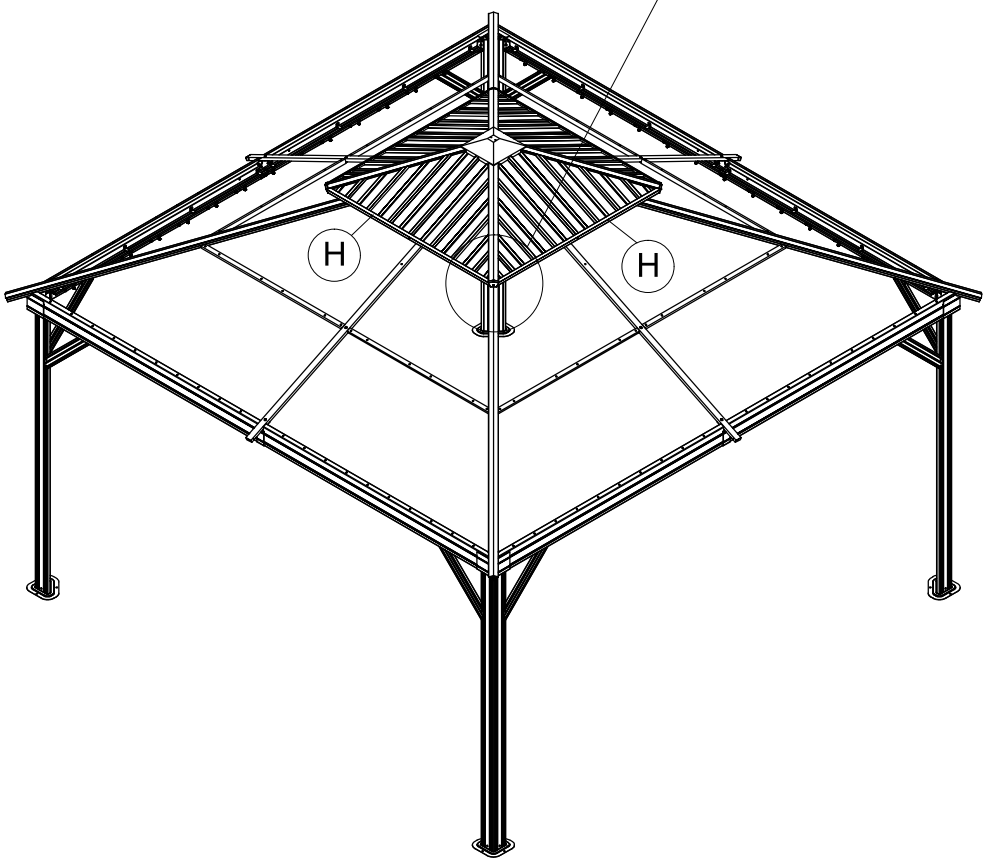

Repeat the above procedures to assemble the other 3 corners.

M1 4x

M2 4x

M3 4x

M4 4x

M5 4x

M6 4x


M7 4x

M8 4x


Z 64x

22

Install Part #Z to Roof Panels.

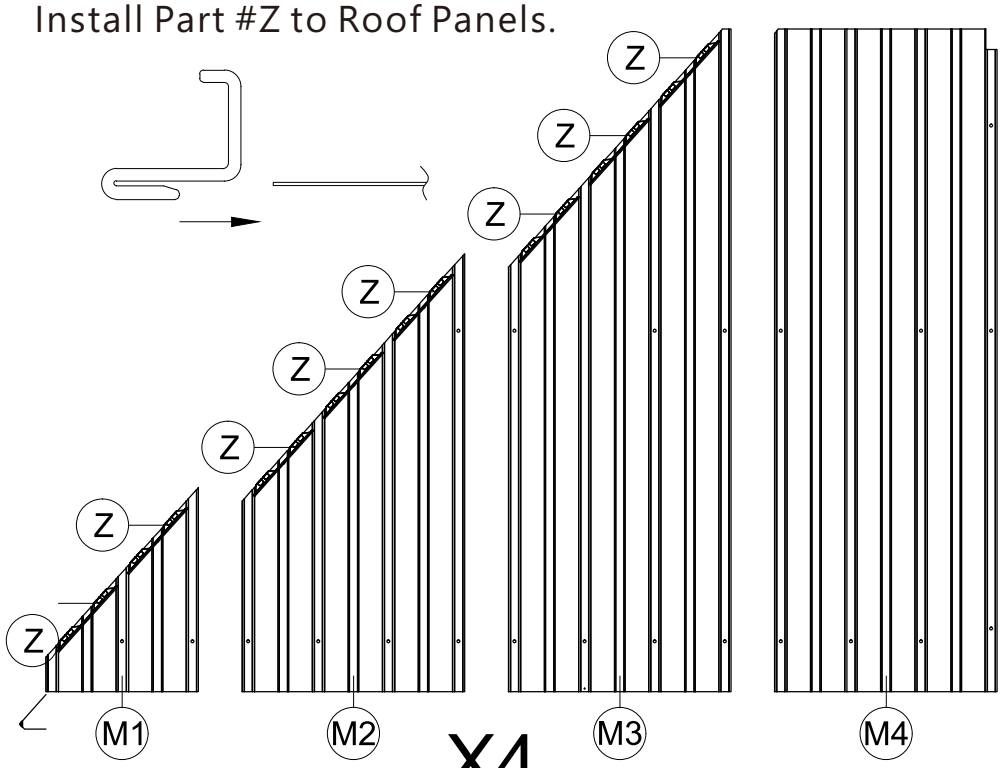


X4

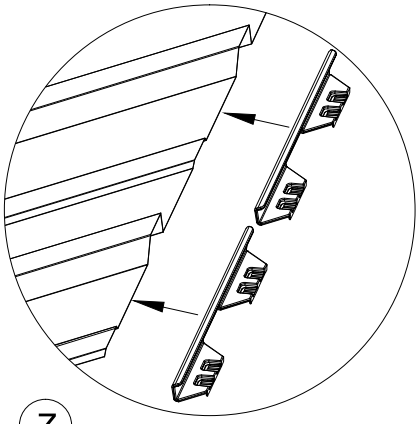



X4


Please install Plastic Clips in strict accordance with the instructions.

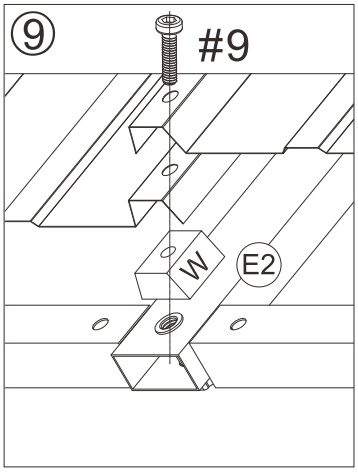

Part #W should be inserted between roof panels and solidifying bar or beams, then secure with bolts and nuts.

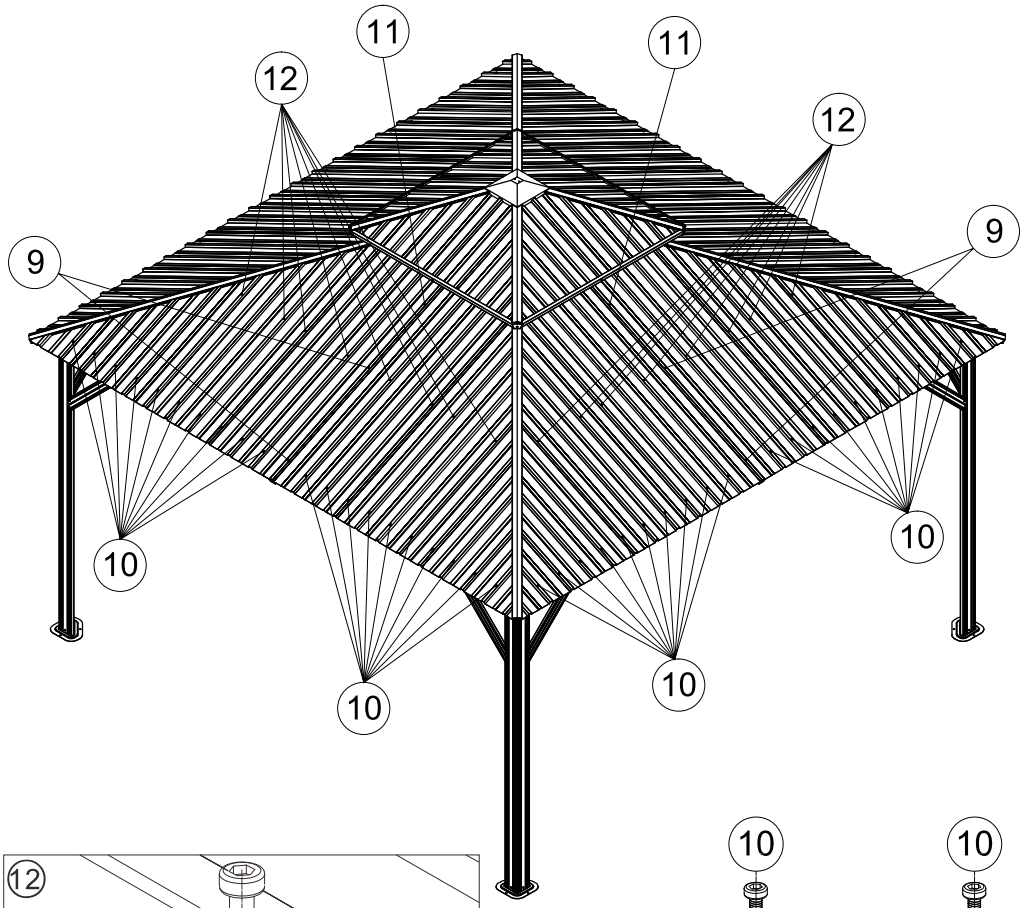

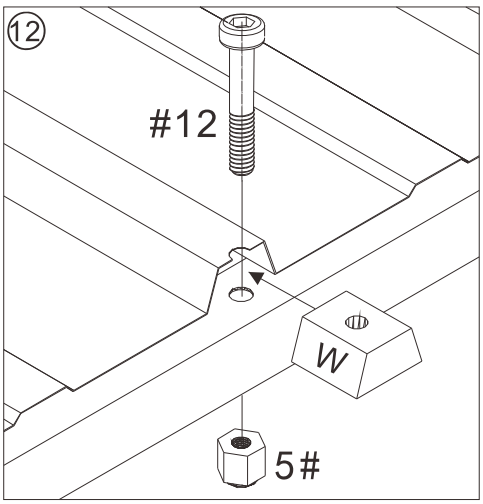

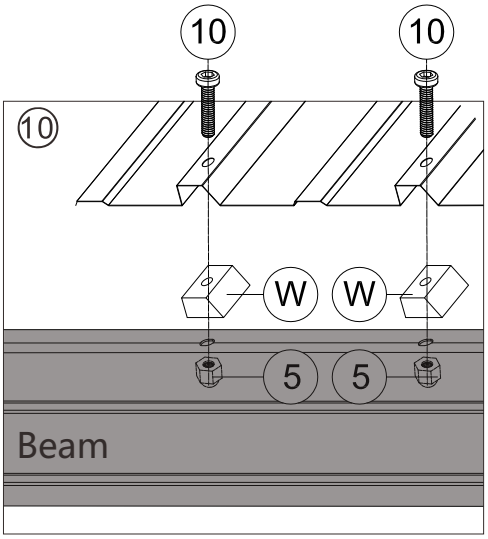



W 16x



1 1x



M6


5 16x




M6x28


10 16x

ATTENTION: The bigger roof panel need to cover the smaller one.

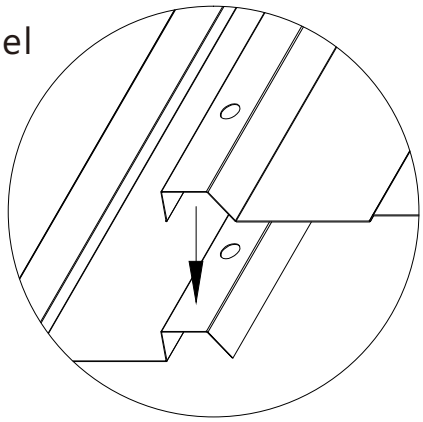




(1) Insert Part #M1 #M2 into the frame.

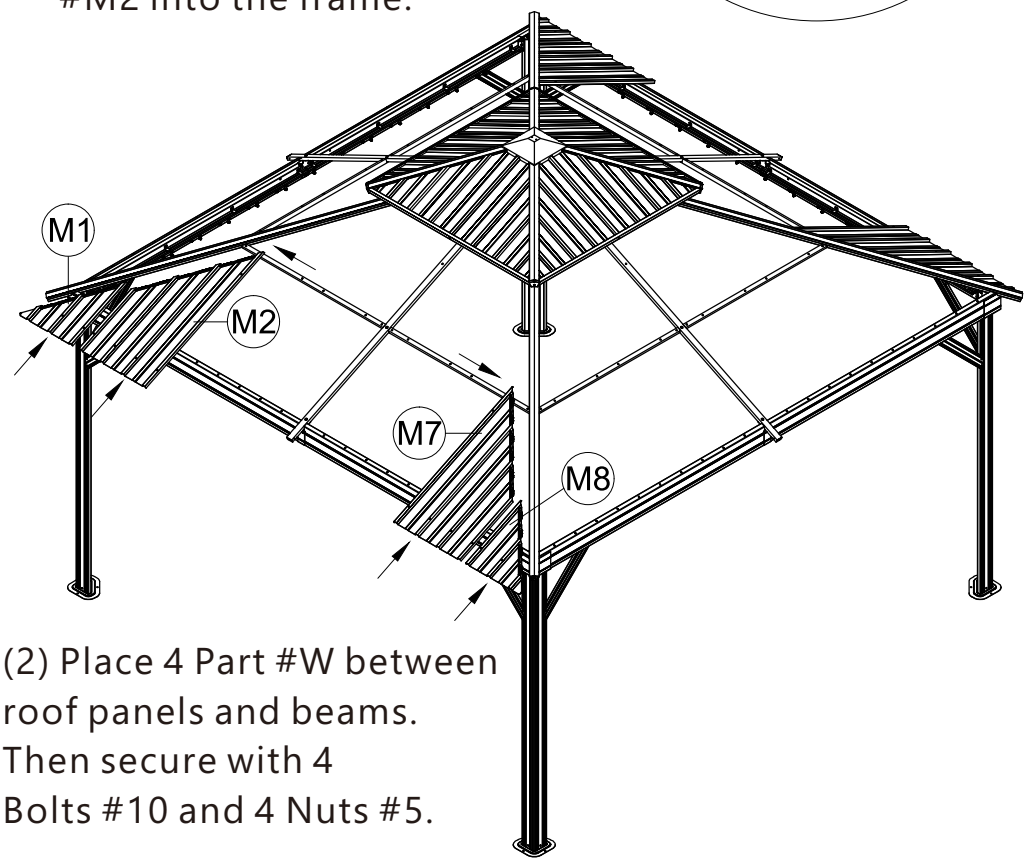

(2) Place 4 Part #W between roof panels and beams. Then secure with 4 Bolts #10 and 4 Nuts #5.

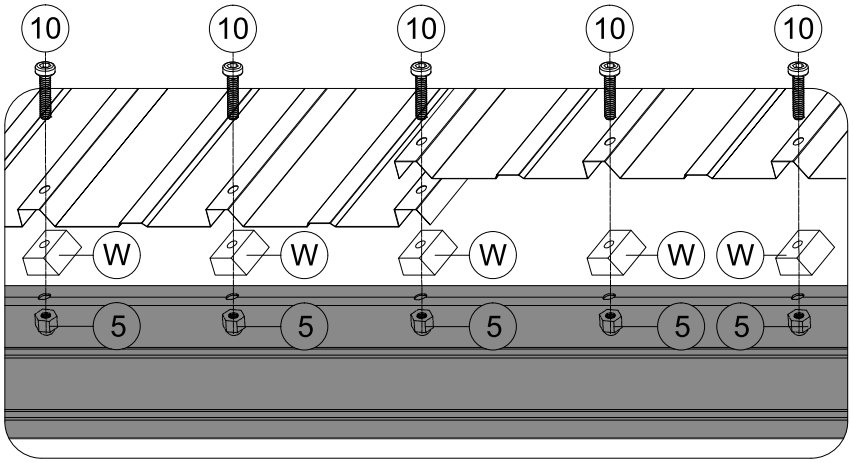

Beam

Repeat the above procedures to assemble #M7,#M8 and the opposite side.



W 20x



1 1x




M6

5 20x



M6x28

10 12x




M6x50

12 8x

25


ATTENTION: The bigger roof panel need to cover the smaller one.

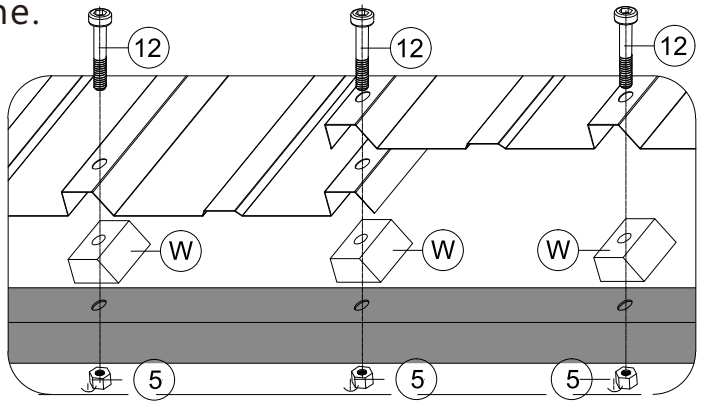


Solidifying Bar

(1) Insert Part #M3 into the frame.

(2)Place 2 Part #W between roof panels and solidifying bars. Then secure with 2 Bolts #12 and 2 Nuts #5.

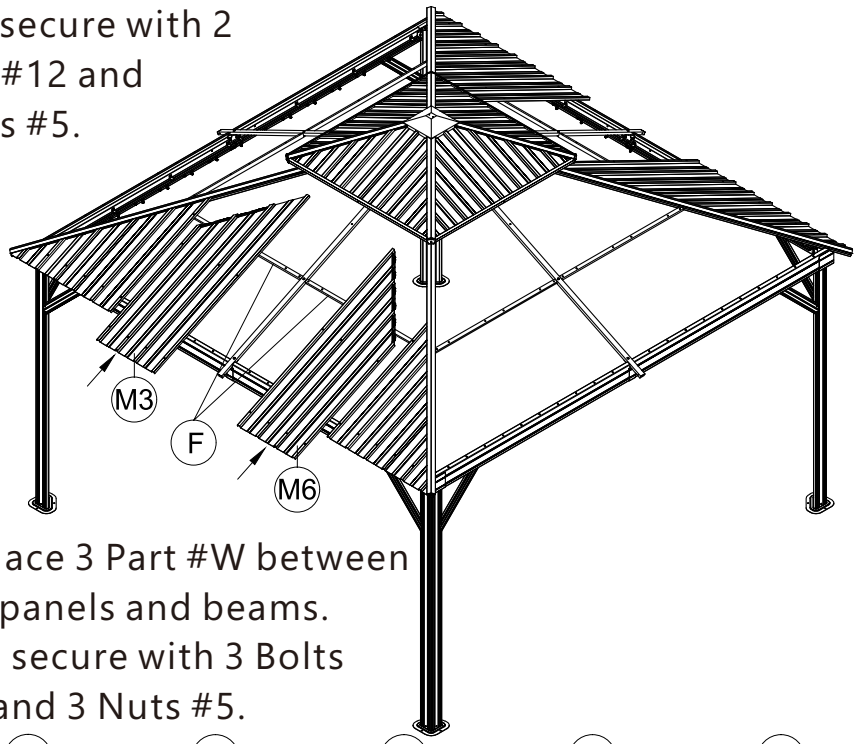

(3) Place 3 Part #W between roof panels and beams. Then secure with 3 Bolts #10 and 3 Nuts #5.

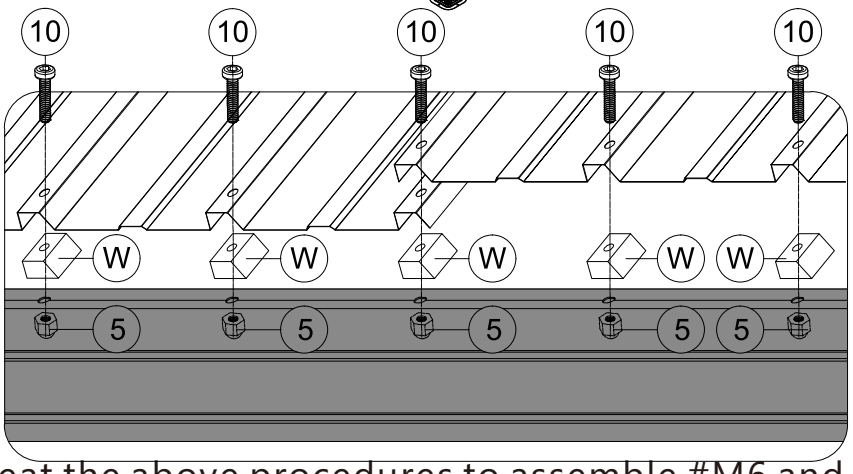

Beam

Repeat the above procedures to assemble #M6 and the opposite side.



W 24x



1 1x



M6

5 20x




M6x25

9 4x



M6x28


10 12x





M6x50

12 8x

26-1

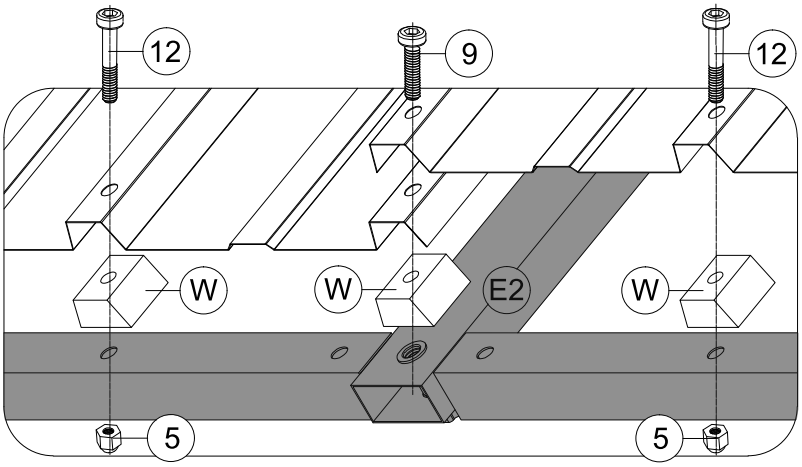

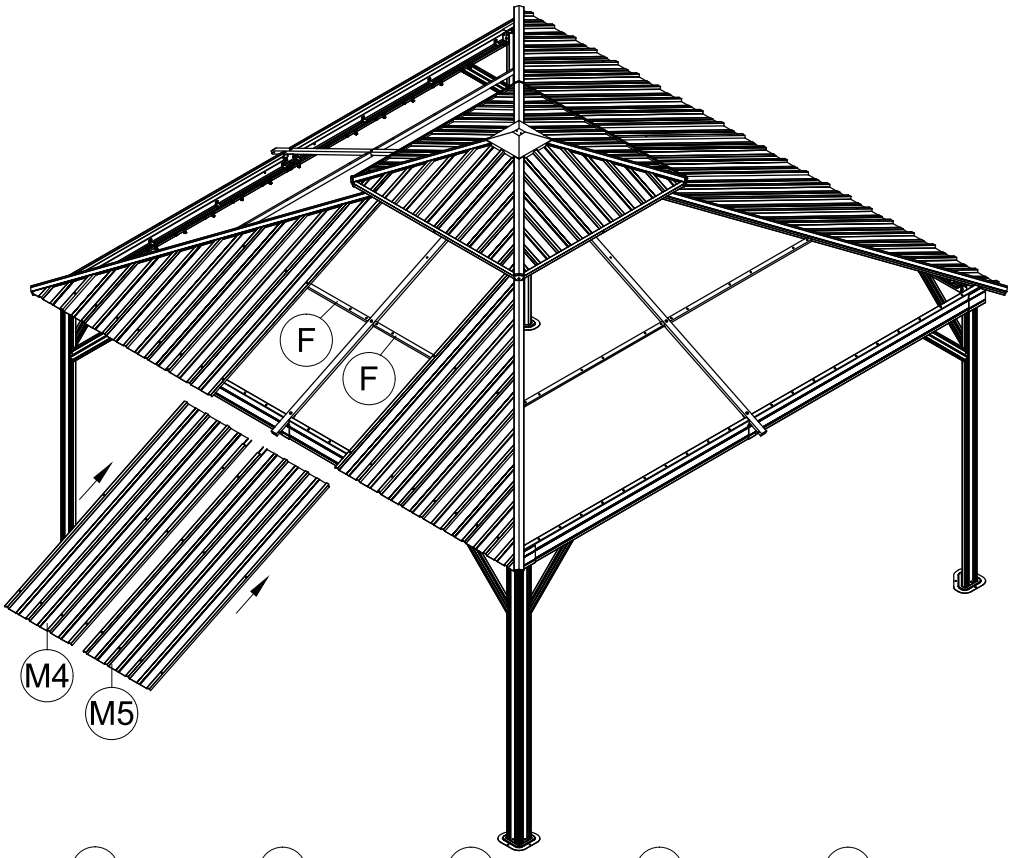

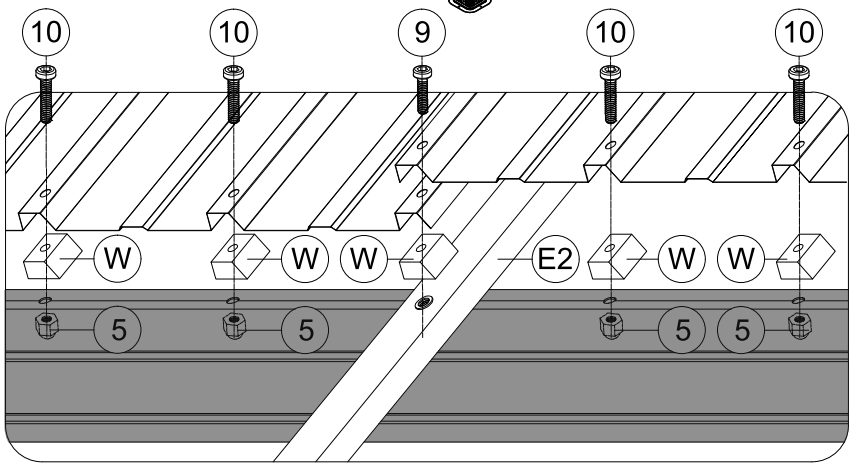

(1) Insert Part #M4 and #M5 into the frame.

(2) Place 4 Part #W between roof panels and solidifying bar.

Then secure with 4 Bolts #12 and 4 Nuts #5.

(3) Place 2 Part #W between roof panels and Roof Tube #E2. Then secure with 2 Bolts #9.

(4) Place 6 Part #W between roof panels and beams.

Then secure with 6 Bolts #10 and 6 Nuts #5.

Repeat the above procedures to assemble the opposite side.



W 16x



1 1x



M6


5 16x




M6x28


10 16x

ATTENTION: The bigger roof panel need to cover the smaller one.

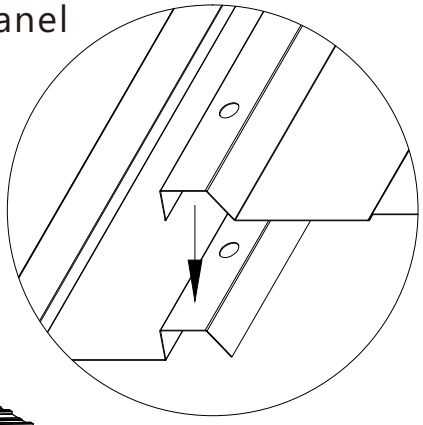




(1) Insert Part #M1 #M2 into the frame.

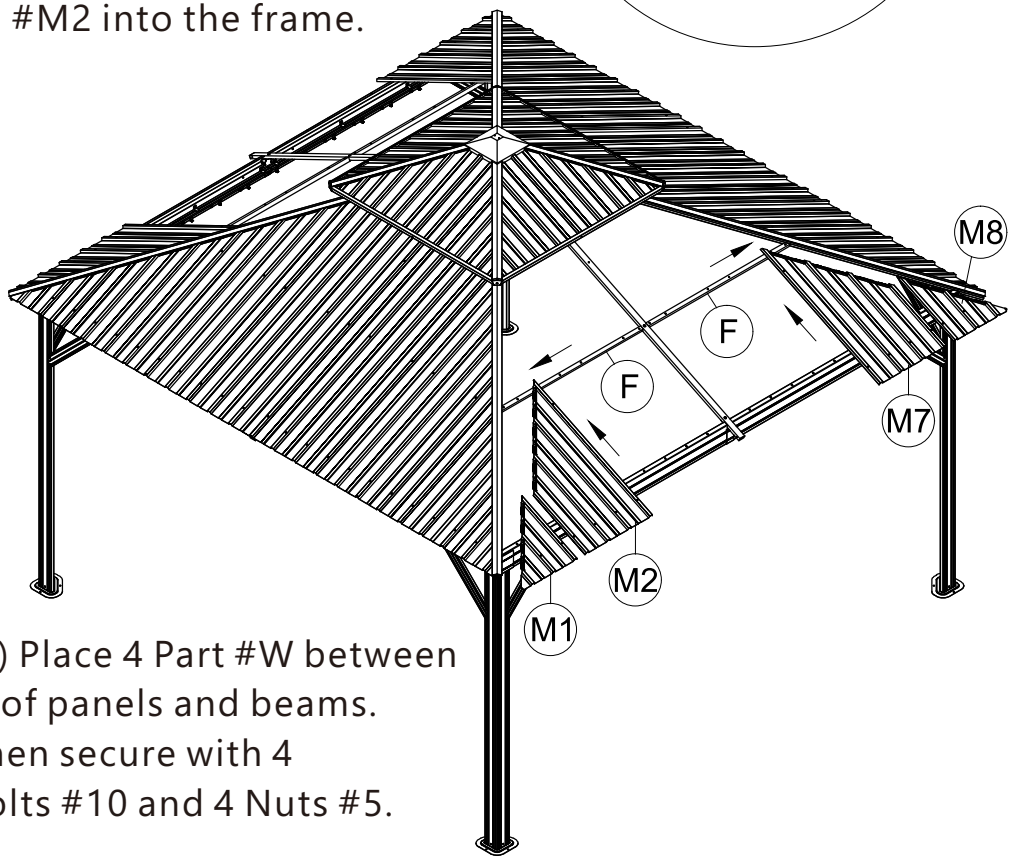

(2) Place 4 Part #W between roof panels and beams. Then secure with 4 Bolts #10 and 4 Nuts #5.

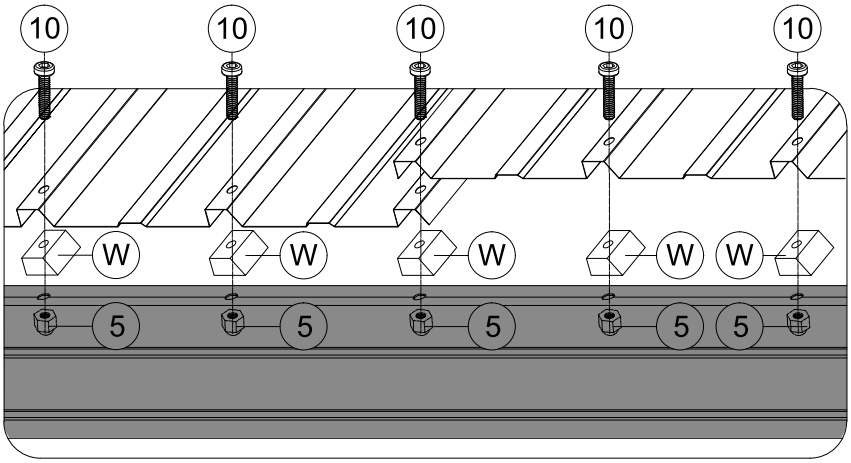

(3) Repeat the above procedures to assemble #M7, #M8 and the opposite side.



W 20x



1 1x




M6

5 20x



M6x28

10 12x




M6x50

12 8x


28

ATTENTION: The bigger roof panel need to cover the smaller one.

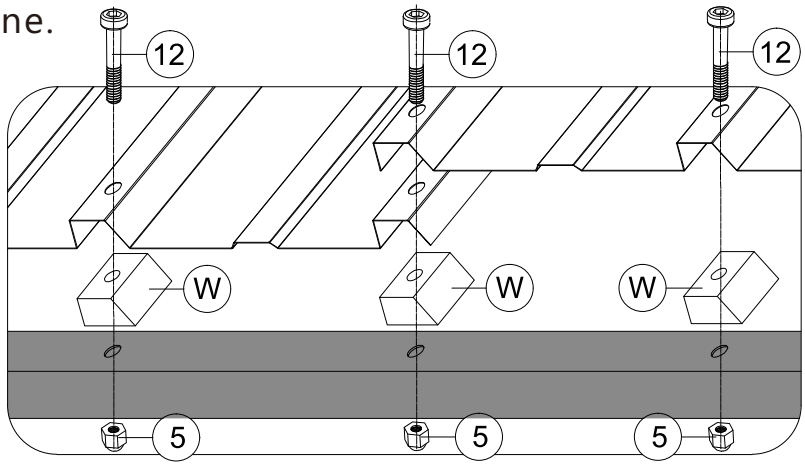


(1) Insert Part #M3 into the frame.

(2) Place 2 Part #W between roof panels and solidifying bars. Then secure with 2 Bolts #12 and 2 Nuts #5.

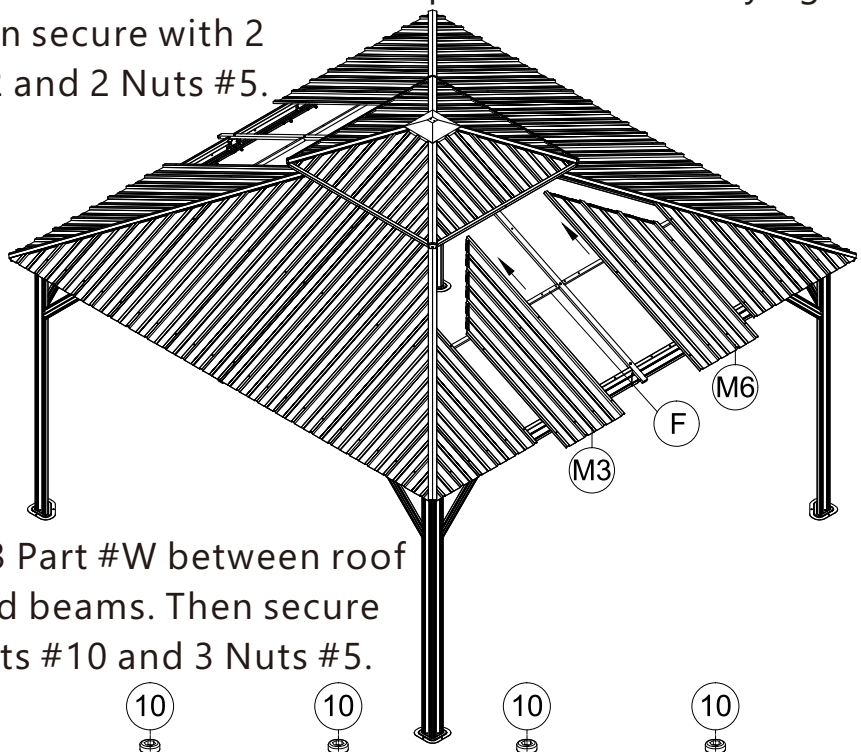

(3) Place 3 Part #W between roof panels and beams. Then secure with 3 Bolts #10 and 3 Nuts #5.

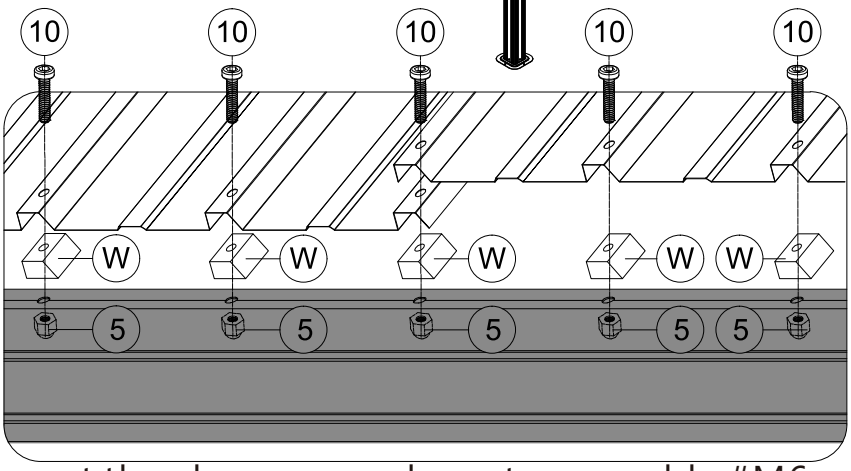

(4) Repeat the above procedures to assemble #M6 and the opposite side.



W 24x



1 1x



M6

5 20x




M6x25

9 4x



M6x28


10 12x





M6x50

12 8x

29-1

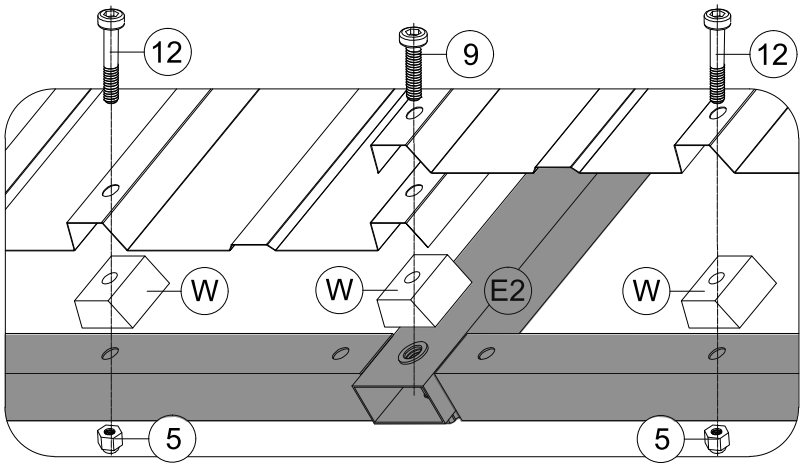

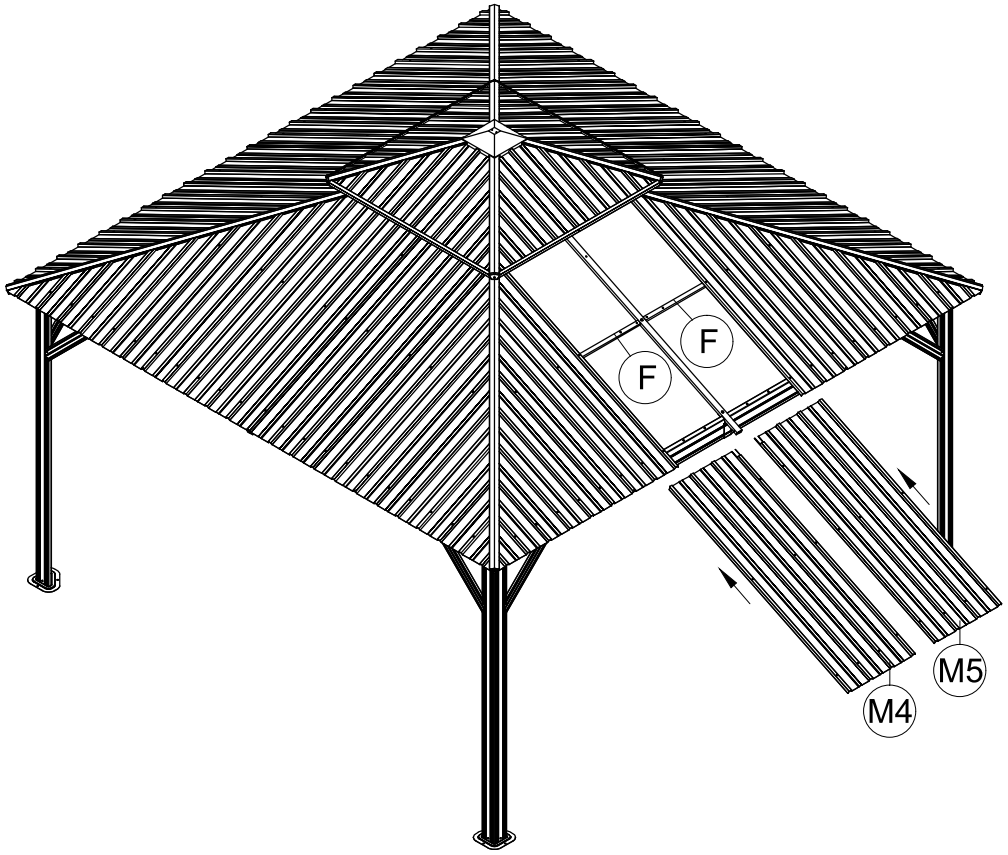

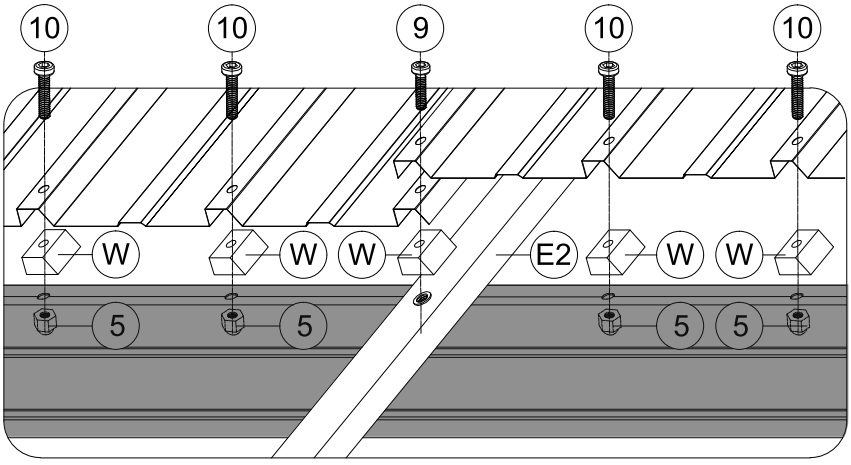

(1) Insert Part #M4 and #M5 into the frame.

(2) Place 4 Part #W between roof panels and solidifying bar.

Then secure with 4 Bolts #12 and 4 Nuts #5.

(3) Place 2 Part #W between roof panels and Roof Tube #E2.Then secure with 2 Bolts #9.

(4) Place 6 Part #W between roof panels and beams.

Then secure with 6 Bolts #10 and 6 Nuts #5.

Repeat the above procedures to assemble the opposite side.



W 4x




1 1x



M6


5 4x




M6x45


11 4x

Place 1 Part #W between roof panels and Roof Tube #E2. Then secure with Bolts #11.

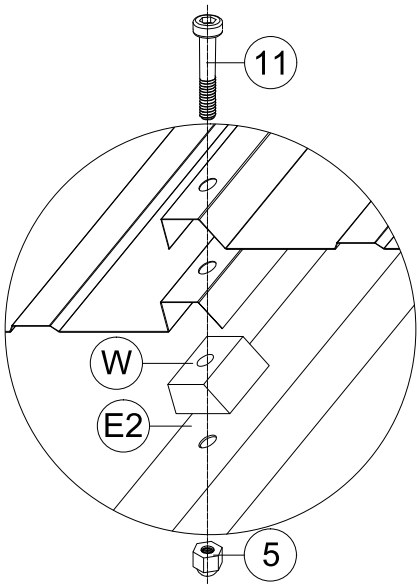


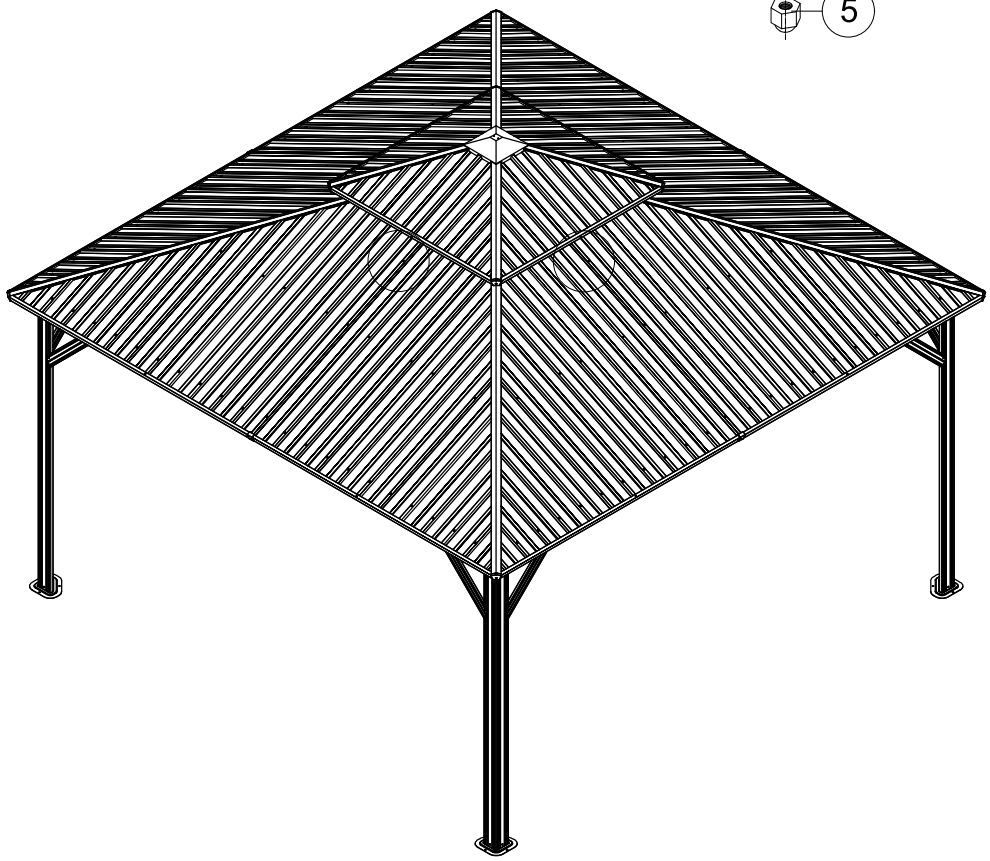

Repeat the above procedure to assemble other sides.

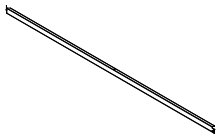

K 4x

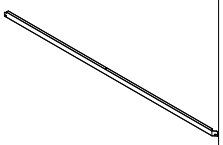

K1 4x




X2 4x




ST6.3x18

2 4x

Place Part #K and #K1 on Part #E2.
Put on Part #X2 and secure
with Screw #2.

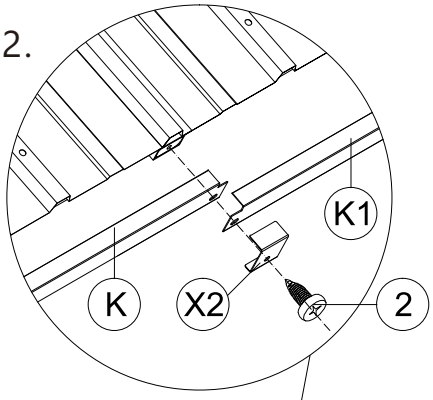

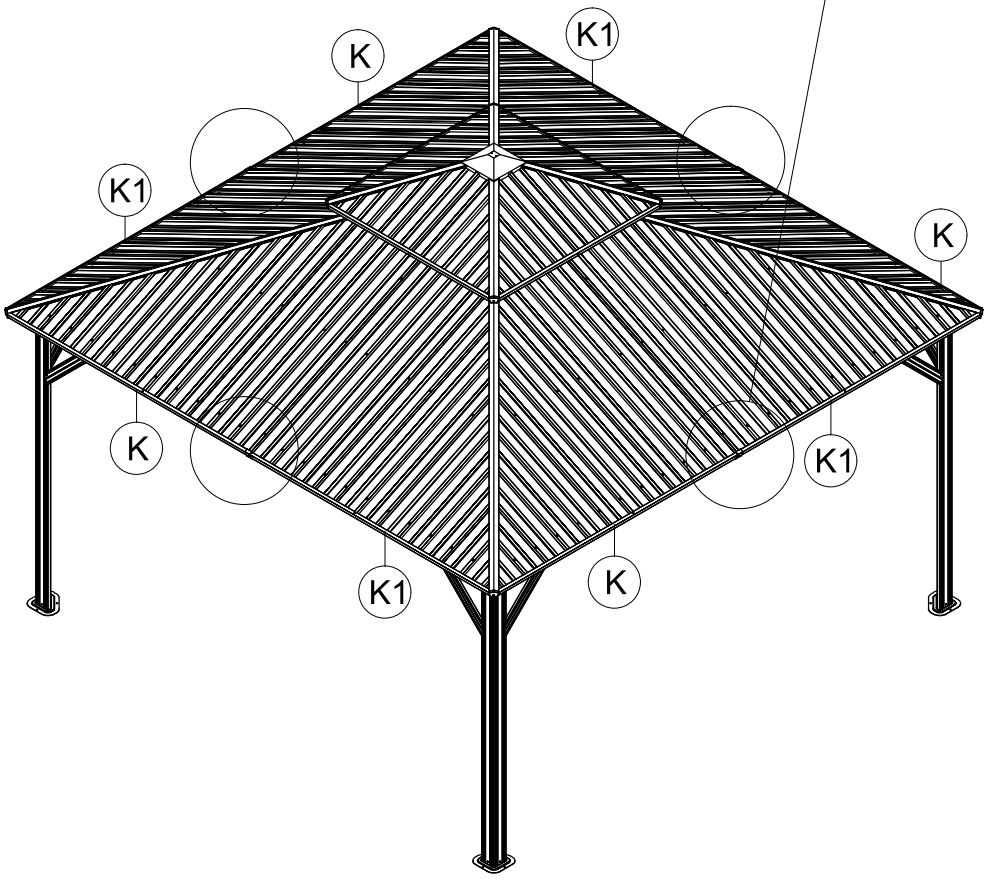

Repeat the above procedure to assemble other sides.




X3 4x



ST6.3x18

2 4x

Place Part #K and #K1 on Part #E1.Put on Part #X4 and secure with Screw #2.

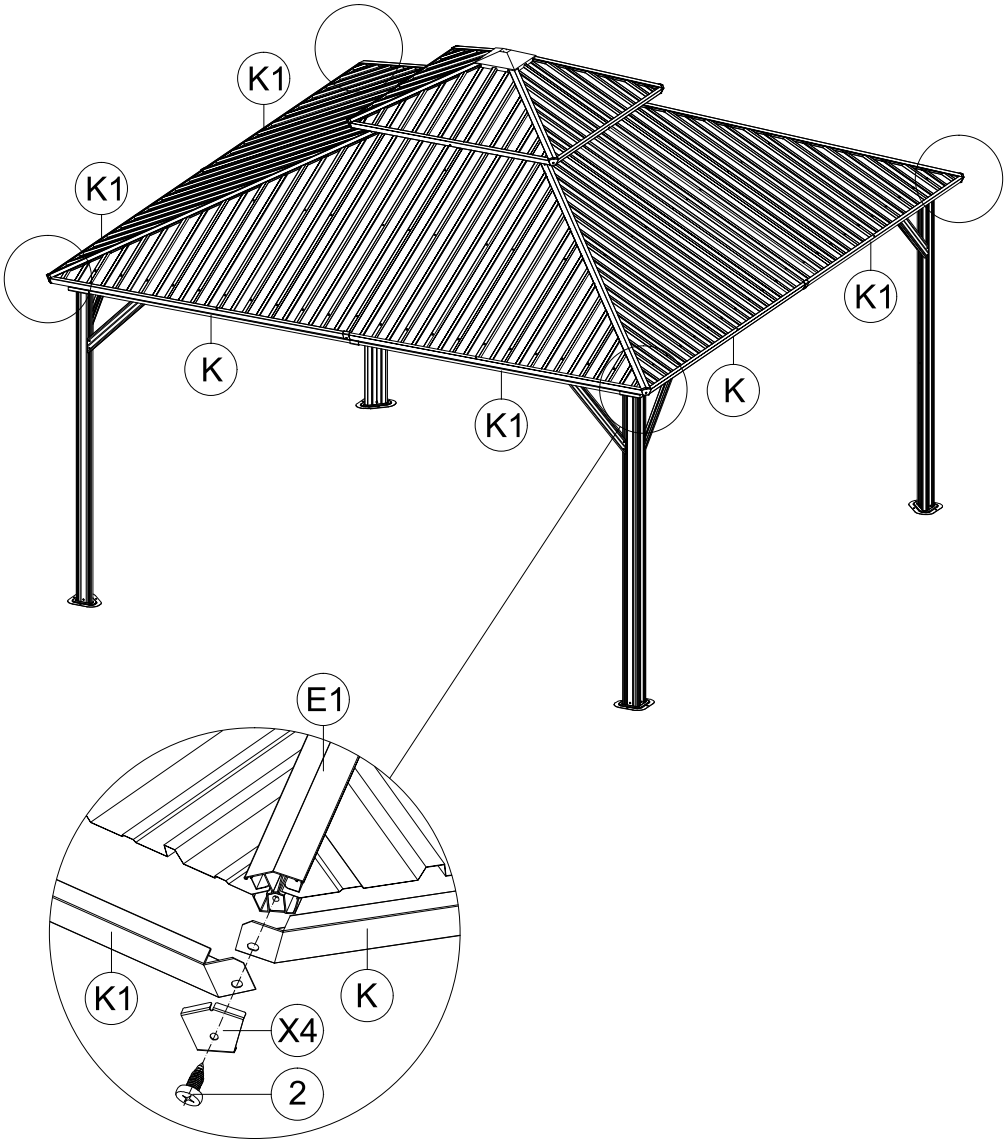


Repeat the above procedure to assemble other corners.




ST5x16

3 8x

Attach roof panels to finishing bars with 2 Screw #3.

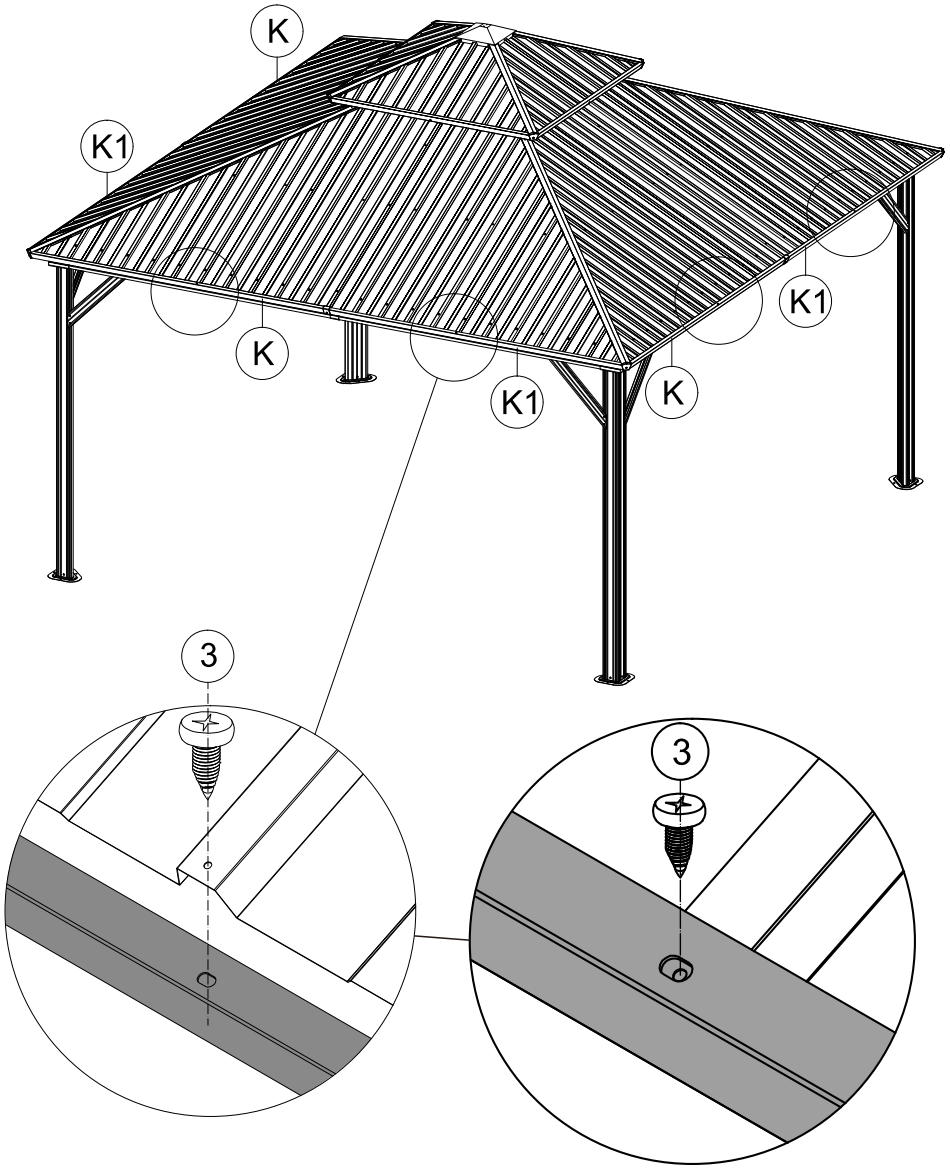



Repeat the above procedure to assemble other sides.




Y1 4x


Hang up Mosquito Netting to Inside Track.

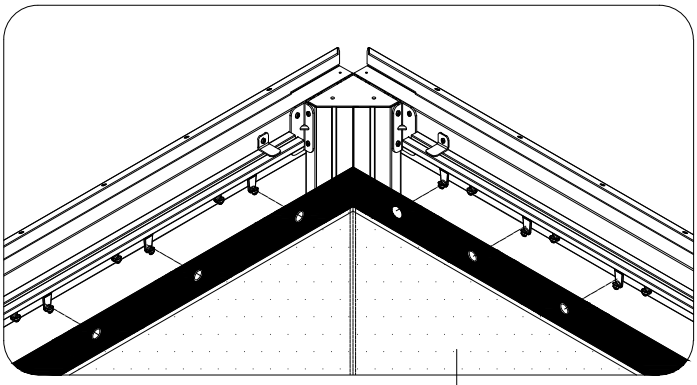


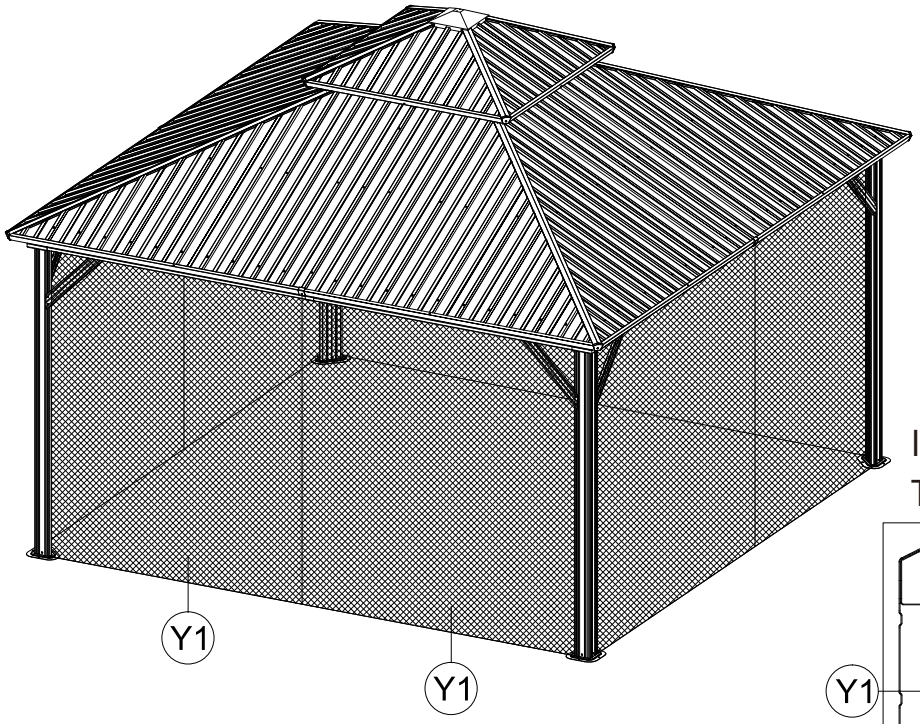


Inside Track

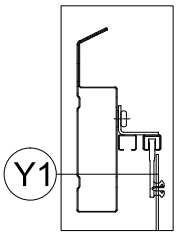

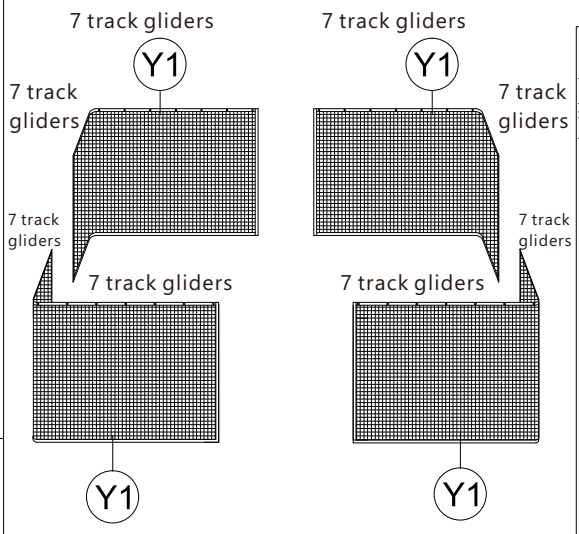


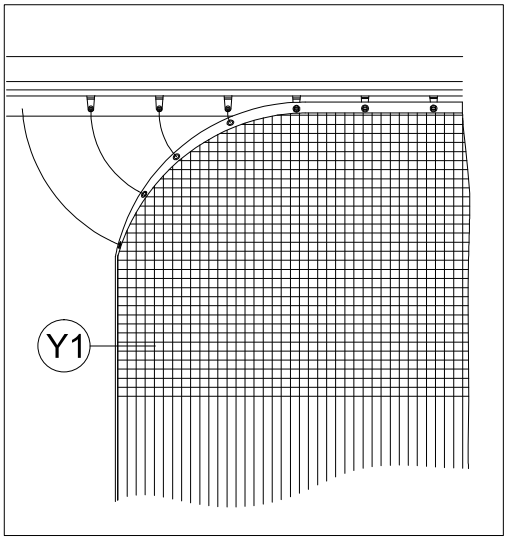




Y 4x


Hang up Curtains to Outside Track.

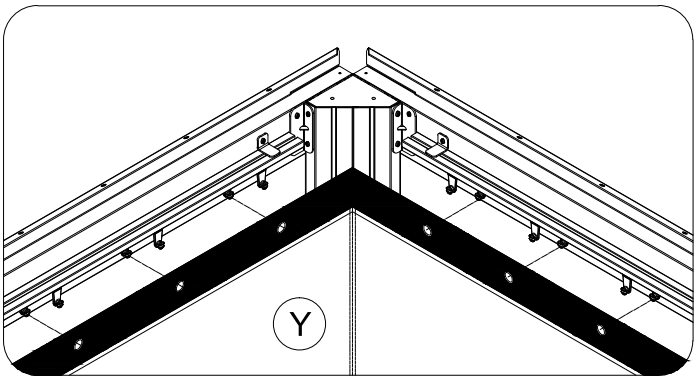



Please open and secure your gazebo curtains with straps when wind speeds exceed 30 mph.

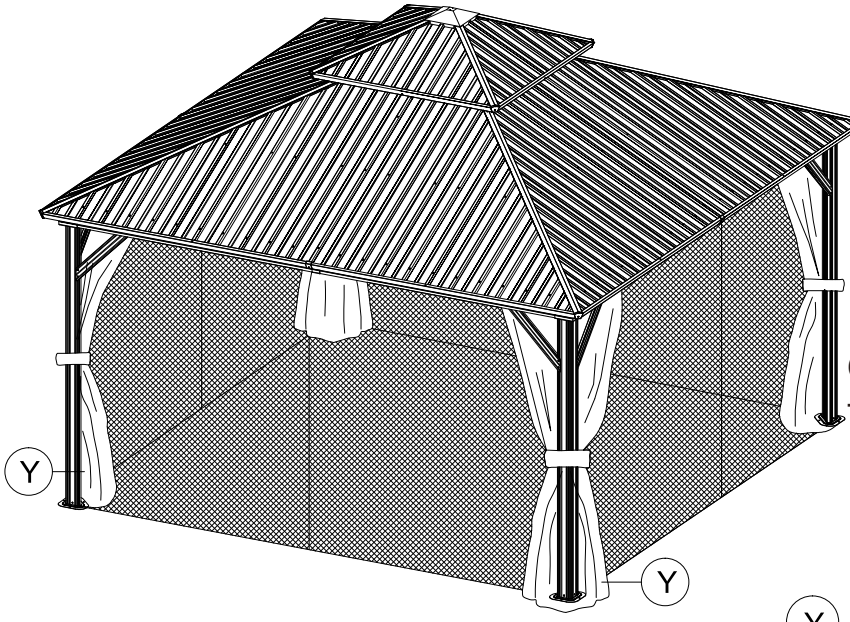

Outside Track

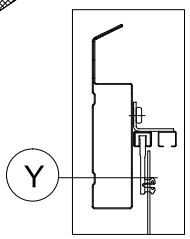

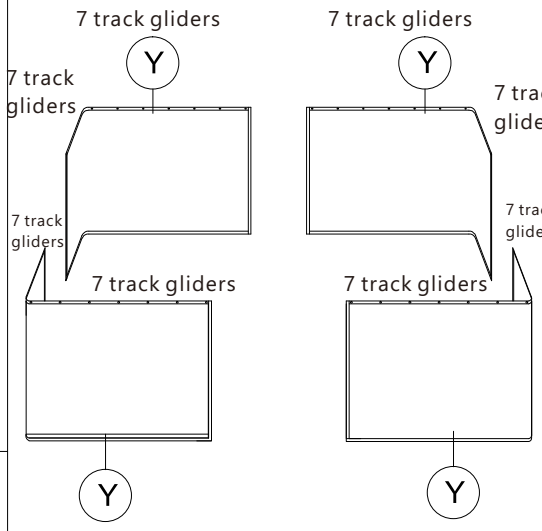

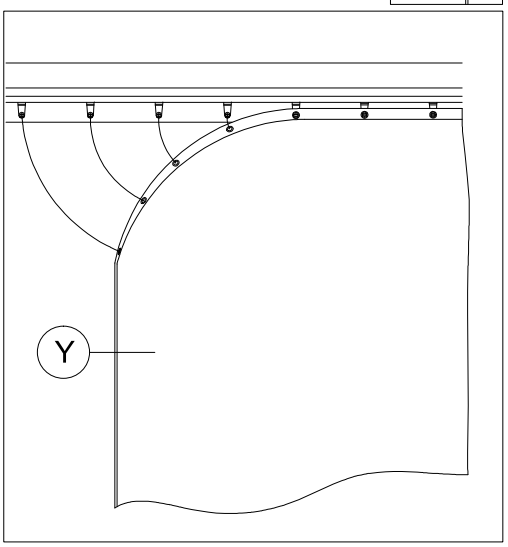



domi
outdoor living

Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So,if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:

After-sales contact email:
service@domioutdoorliving.com

Business cooperation contact email:
marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.

© Copyright 2024-2026 domi LLC. All Rights Reserved.