ASSEMBLY INSTRUCTIONS

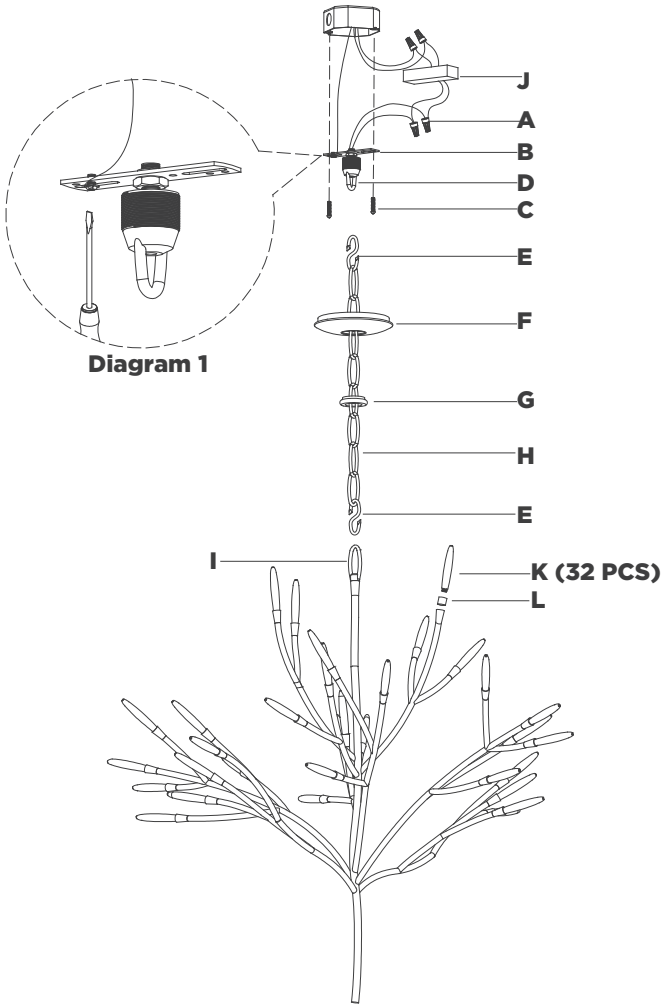

Diagram 1

Tirucalli 39″ Sculpted Chandelier

Item # TOB5360

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Wire Strippers
Slip Joint Pliers	Measuring Tape	Chain Pliers
Wire Cutters		

---

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate **(B)** from canopy **(F)** by removing collar ring **(G)**.
3. Connect driver **(J)** input neutral wire (white) to the supply neutral wire (usually white) using wire nut **(A)**.
4. Connect driver **(J)** input hot wire (black) to the supply hot wire (usually black) using wire nut **(A)**.
   CAUTION: Do not reverse the hot and neutral connection.
5. Insert driver **(J)** into junction box.
6. Install mounting plate **(B)** to junction box and secure with mounting screws **(C)**.
7. Wrap supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 1). Tighten.
   NOTE: It is imperative that the fixture is grounded.
8. Secure collar loop **(D)** to mounting plate **(B)** using pliers to tighten locknut.
9. Determine desired overall length, and amount of chain **(H)** needed. Shorten chain using chain pliers. (Keep extra chain)
10. Attach chain **(H)** to collar loop **(D)** and fixture loop **(I)** using “S” shape links **(E)**.

ASSEMBLY INSTRUCTIONS

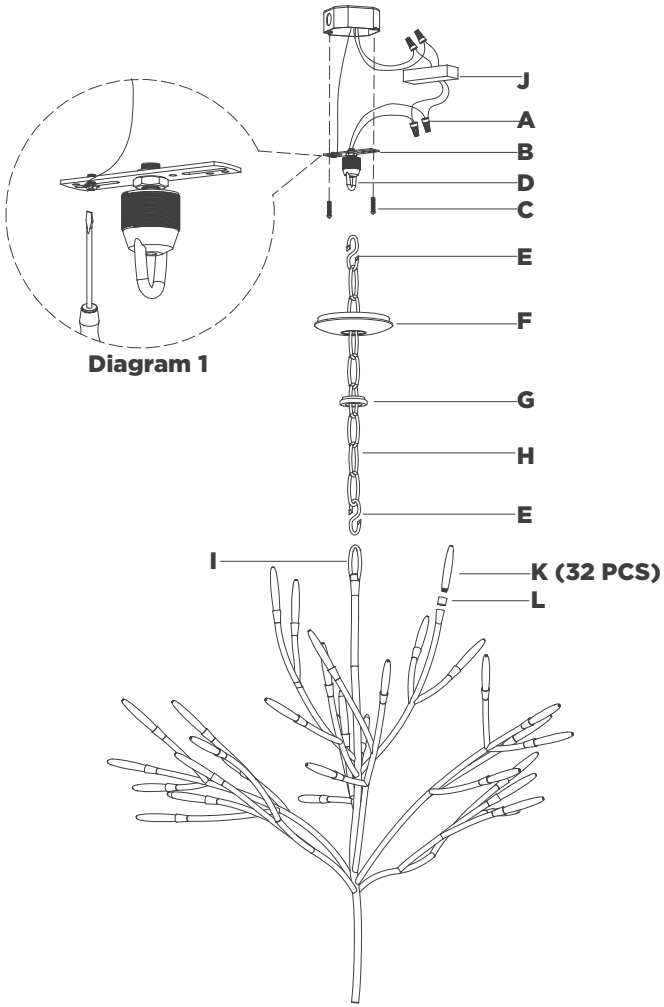

Diagram 1

Tirucalli 39" Sculpted Chandelier

Item # TOB5360

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

---

11. Thread fixture wires through chain **(H)**.
    NOTE: When you reach the collar loop **(D)**, ensure there is no tension on the wires. Cut excess wires, being sure to leave enough to reach the driver **(J)**.
12. Separate two sides of molded wire, and strip insulation on each 5/8".
13. Loosen collar ring **(G)** and let canopy **(F)** slip down chain **(H)** carefully.
14. Twist all fixture wires together, and slip through center hole of collar loop **(D)**.
    NOTE: Untwist wires and separate to prepare for connection.
15. Connect fixture neutral wire (marked "-") to driver **(J)** output wire (blue) using wire nut **(A)**.
16. Connect fixture hot wire (marked "+") to driver **(J)** output wire (red) using wire nut **(A)**.
    CAUTION: Do not reverse the hot and neutral connections.
17. Install canopy **(F)** to collar loop **(D)** and secure with collar ring **(G)**.
18. Remove protective caps **(L)** from fixture, then thread shades **(K)** to fixture.
    NOTE: Discard protective cap **(L)** after assembly.
    NOTE: Do not overtighten otherwise shade could be damaged.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

Intertek DAMP LED 4