
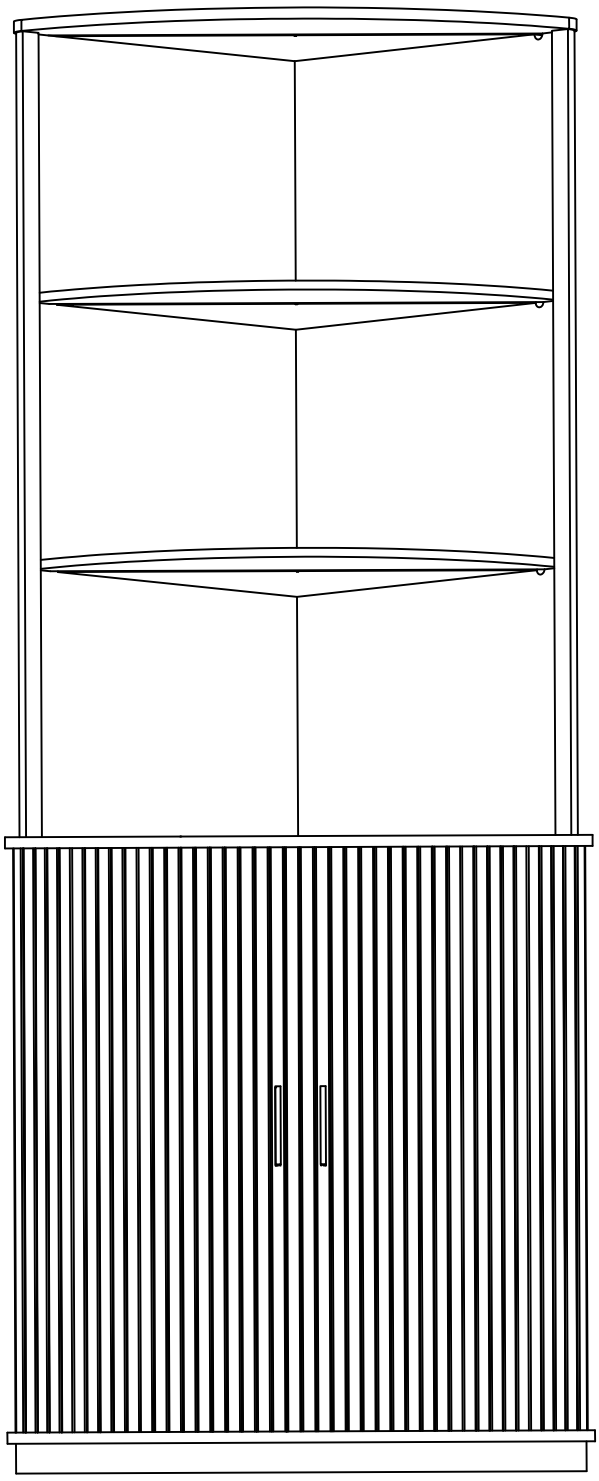


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.
Our professional after-sales team will serve you online all day.

Before You Start

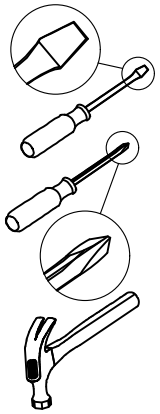

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screw driver）


Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: **1-2**

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.




- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.

- Slides are labeled with an **R** (right) and **L** (left) for proper placement.

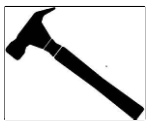

- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.



-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.


- Never push, pull, or drag your furniture.

Board Identification


Not actual size

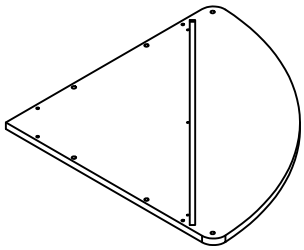


① TOP PLATE
Qty:1

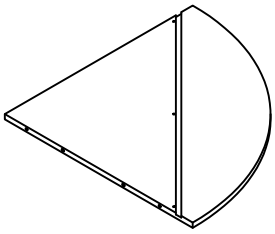


② UPPER BOARD
Qty:2

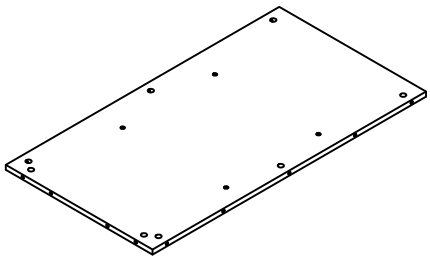


③ UPPER LEFT SIDE PANEL
Qty:1

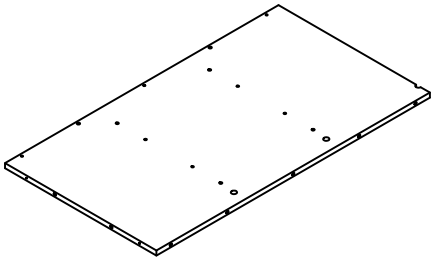


④ UPPER RIGHT SIDE PANEL
Qty:1

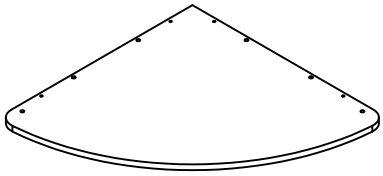


⑤ MIDDLE PANEL
Qty:1

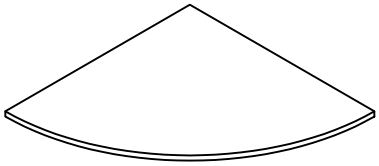


⑥ LOWER BOARD
Qty:1

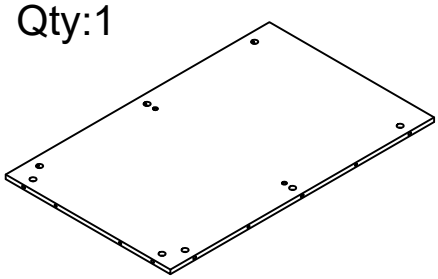


⑦ LOWER LEFT SIDE PANEL
Qty:1

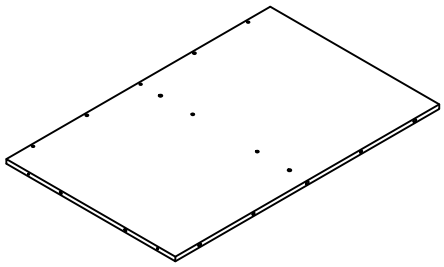


⑧ LOWER RIGHT SIDE PANEL
Qty:1

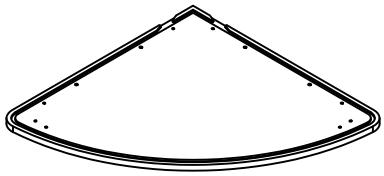


⑨ BASE PLATE
Qty:1

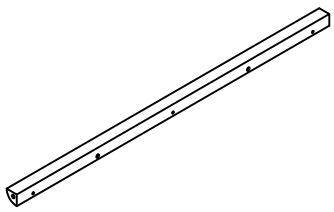

⑩ TOP ARC STRIP
Qty:2

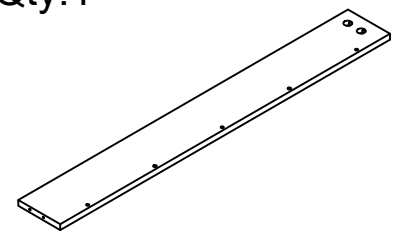


⑪ LOWER LEFT BAFFLE BAR
Qty:1

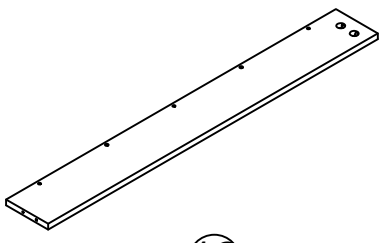

⑫ LOWER RIGHT BAFFLE BAR
Qty:1


Board Identification

Not actual size

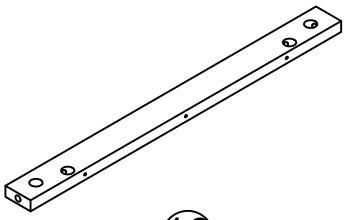


13

LEFT RISER PIPE
Qty:1

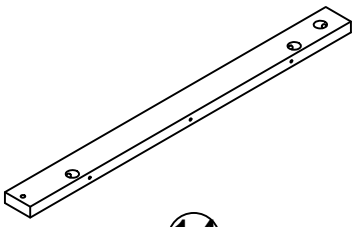


14

RIGHT RISER PIPE
Qty:1

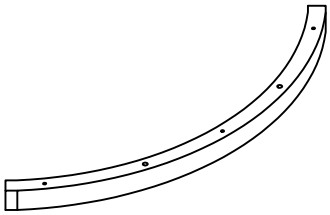


15

FRONT GUTTER
Qty:1

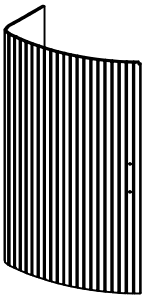

16

LEFT ROLLER SHUTTER
Qty:1



17

RIGHT ROLLER SHUTTER
Qty:1


Part List



Ø15X9.5mm

A	X37


CAM LOCK
spare:3



Ø6.5X35mm

B	X37


CAM BOLT
spare:3



Ø6X30mm

C	X26

WOOD DOWEL
spare:2



Ø8X30mm

D	X24


WOOD DOWEL
spare:2



Ø3X12mm

E	X9

SCREW
spare:1



Ø4X35mm

F	X12

SCREW
spare:1



Ø4X50mm

G	X3

SCREW
spare:1



Ø4X14mm

H	X6

SCREW
spare:1



Ø5X40mm

I	X12


SCREW
spare:1



M4X9mm

J	X4

SCREW
spare:1



105X15X7mm

K	X2


PULL HANDLES



20X10X6.7mm

L	X3


CRIMPING BUCKLE
spare:1



297X103X44mm


M	X2

IRON PARTS

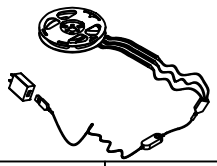

N	X1set

LIGHT STRIP

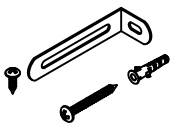

O	X2set

ANTI-TOPPLING



Ø21mm

P	X26

PERFECT STICKER
spare:2


Part List



70X30X5mm

Q	X1


TOOL



24X7X4.5mm

R	X6

CRIMPING BUCKLE
spare:1




15.5X14.5X9mm

S	X3

CABLE ORGANIZER
spare:1


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

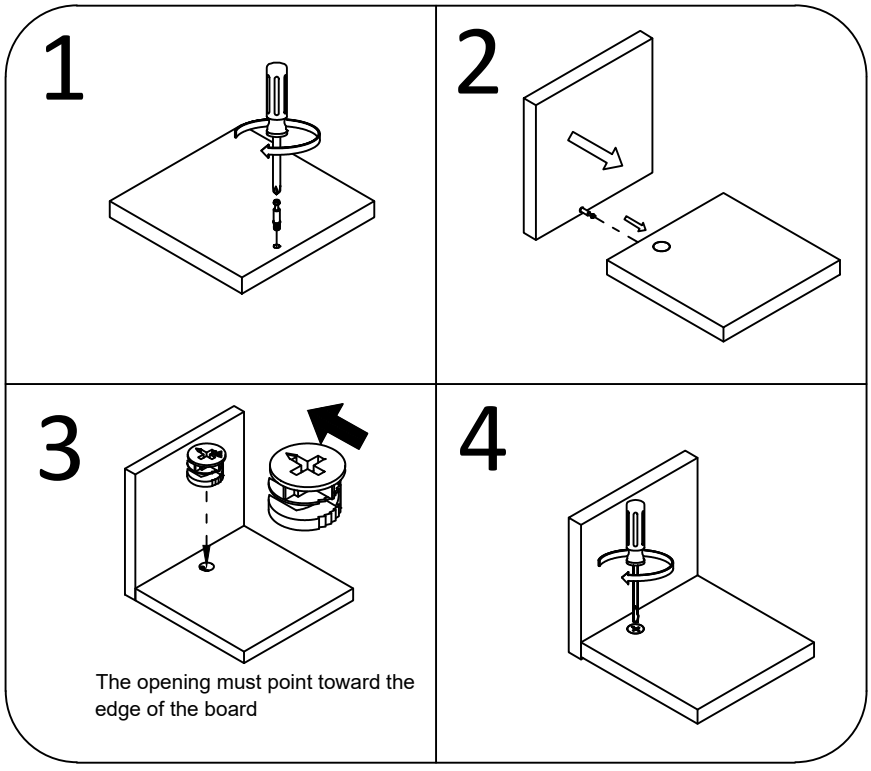



Board Identification


Not actual size

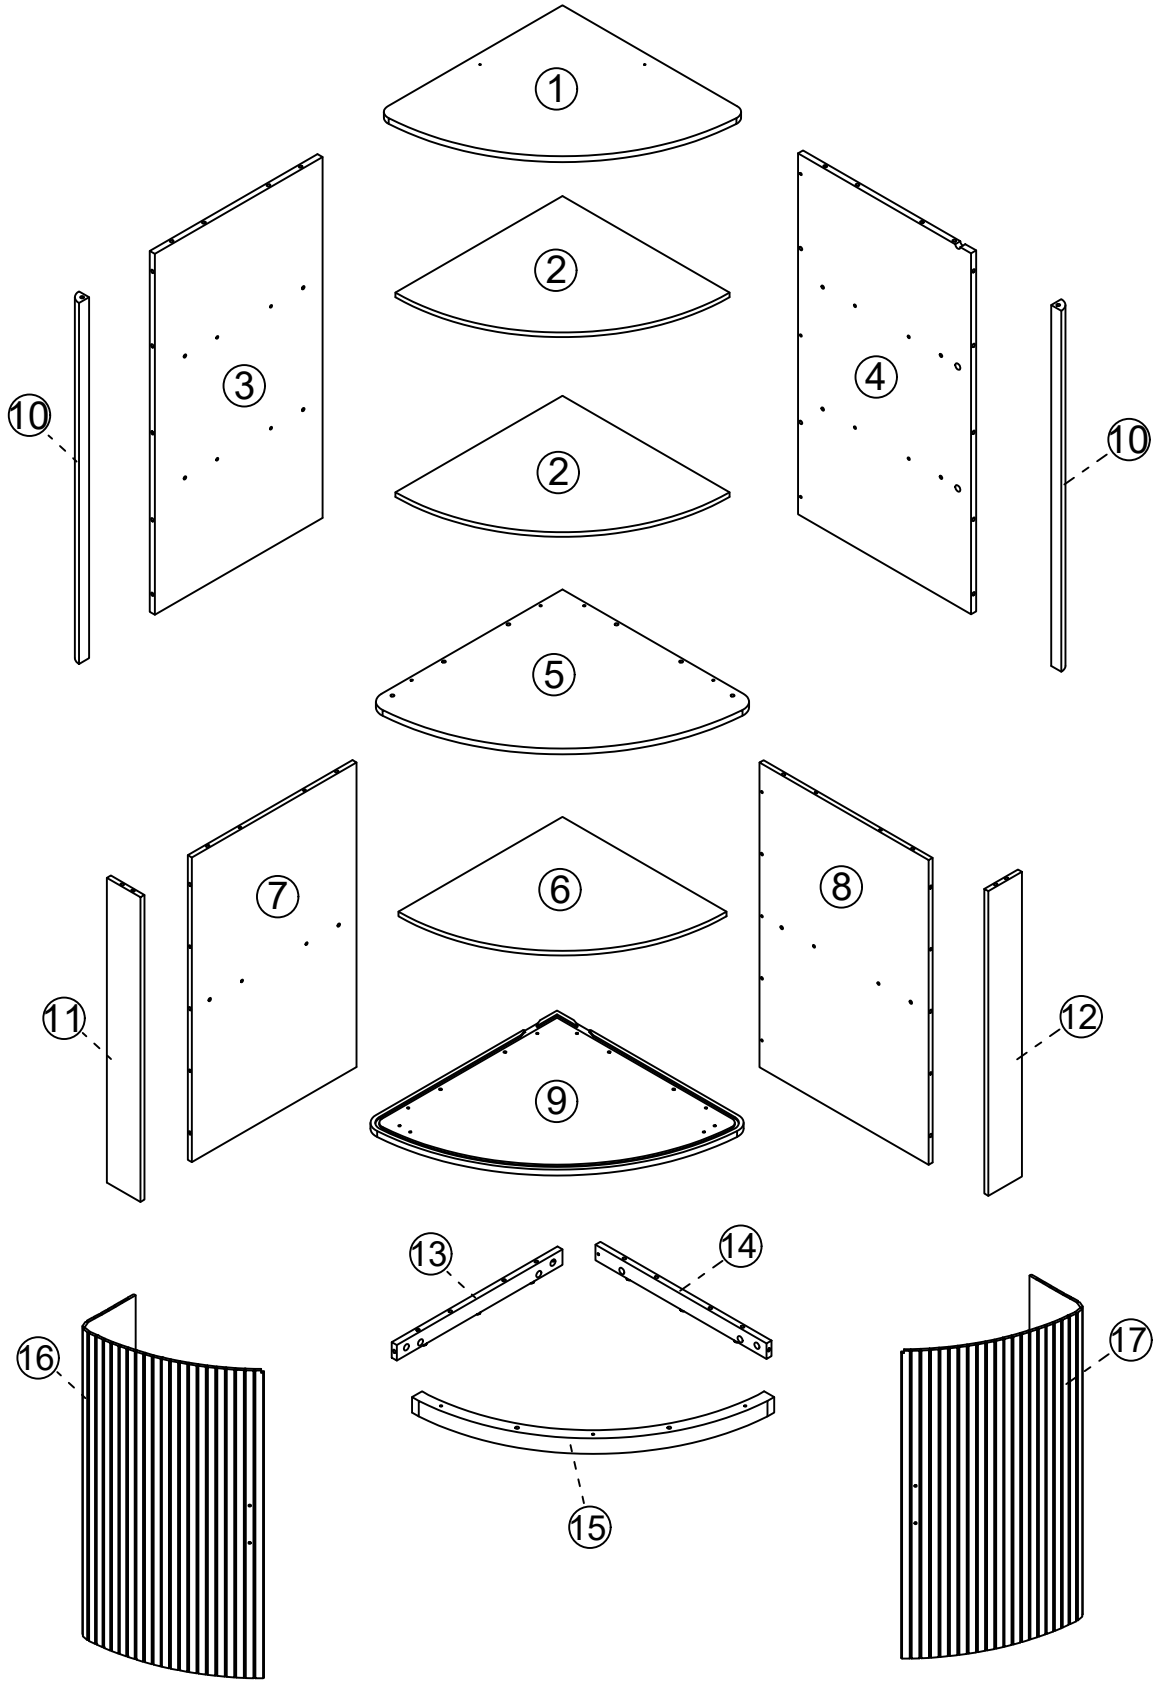


STEP1

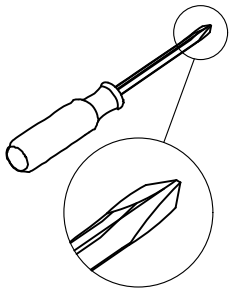

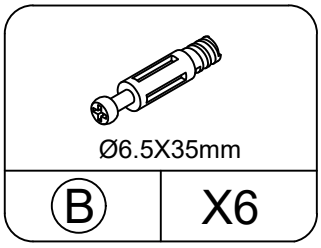


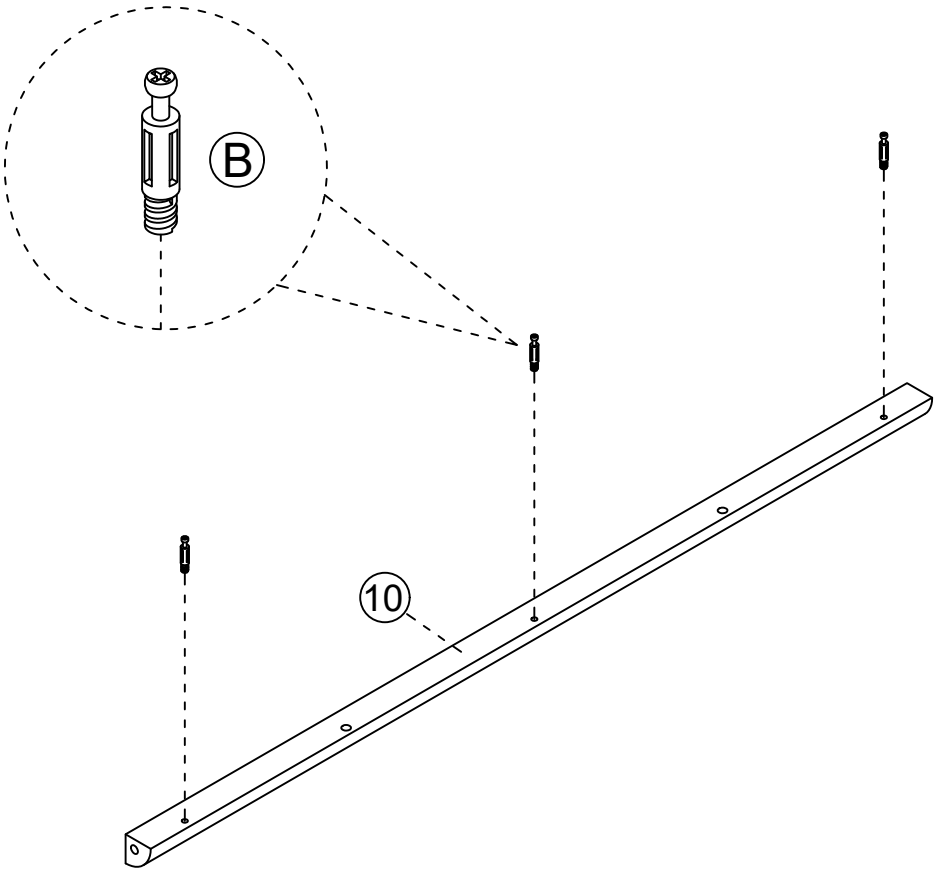



X2

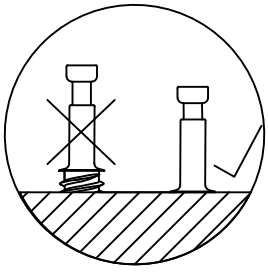


STEP2

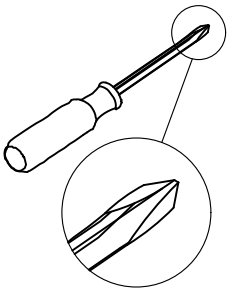


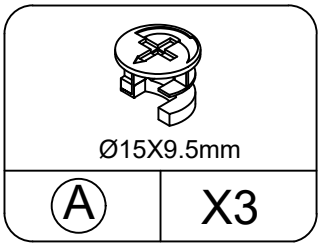

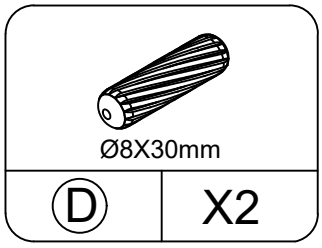

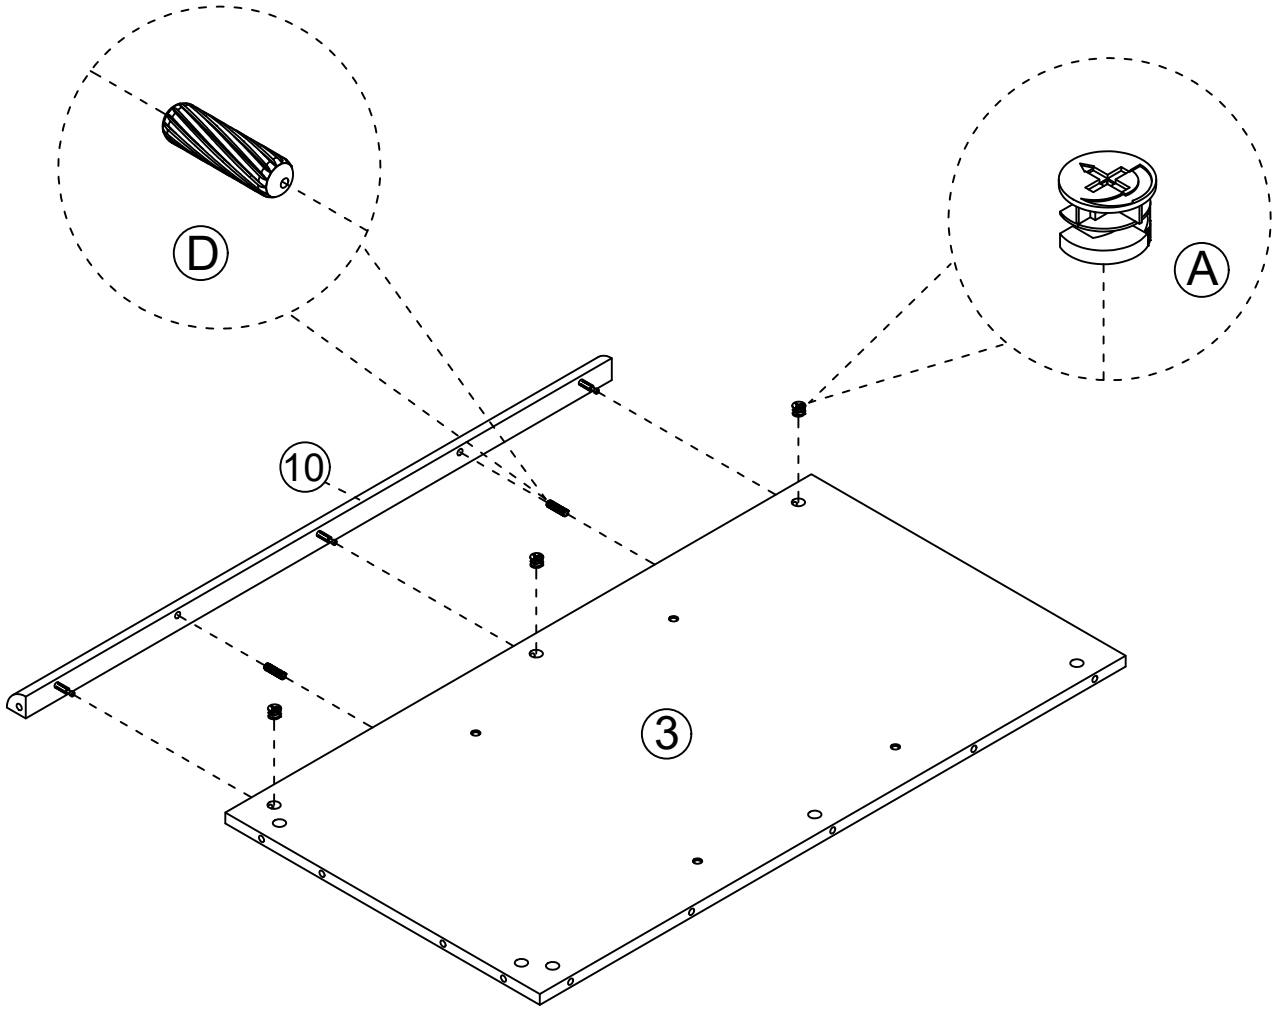


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

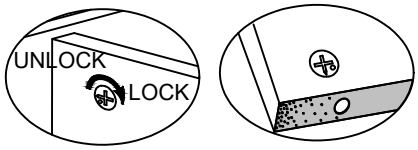

Proper orientation of CAM LOCK


STEP3

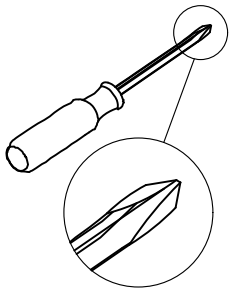


Ø15X9.5mm	
A	X3


Ø6.5X35mm	
B	X3

Ø8X30mm	
D	X4

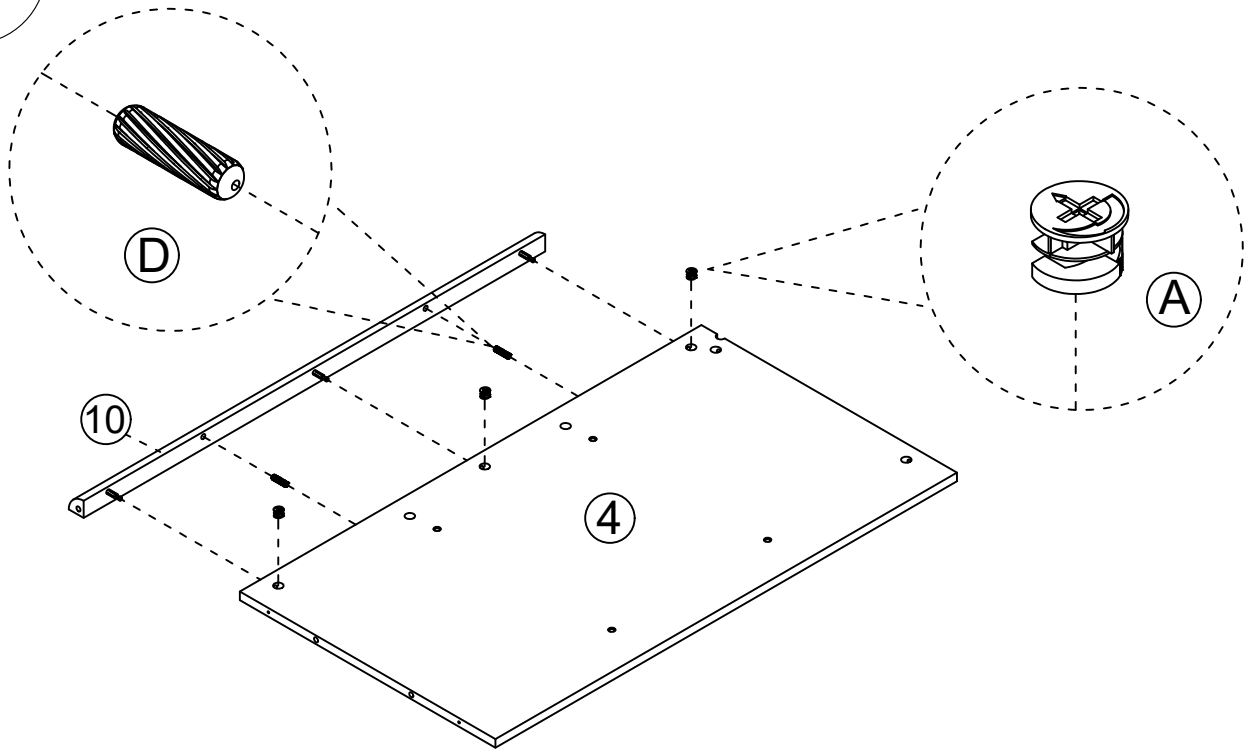


FLIP OVER

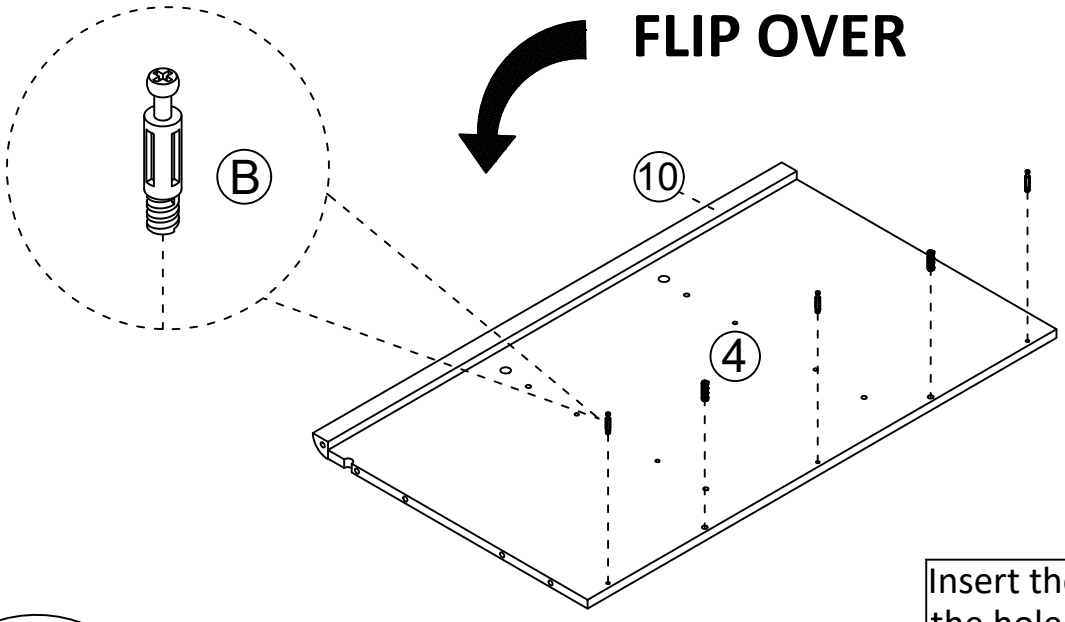

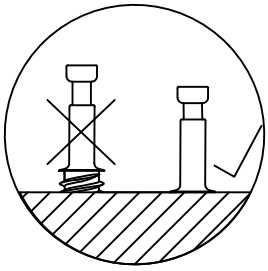



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

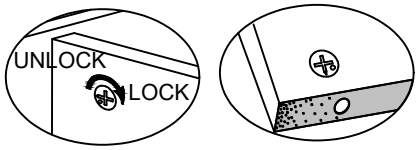



Proper orientation of CAM LOCK

STEP4

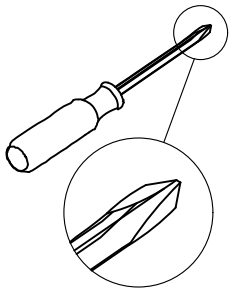


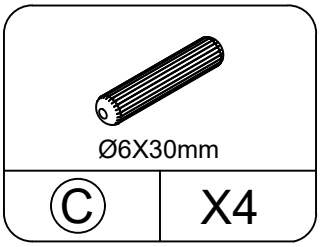


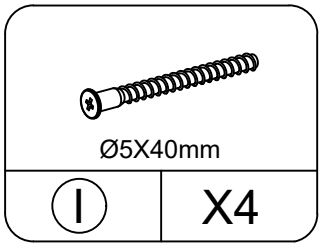


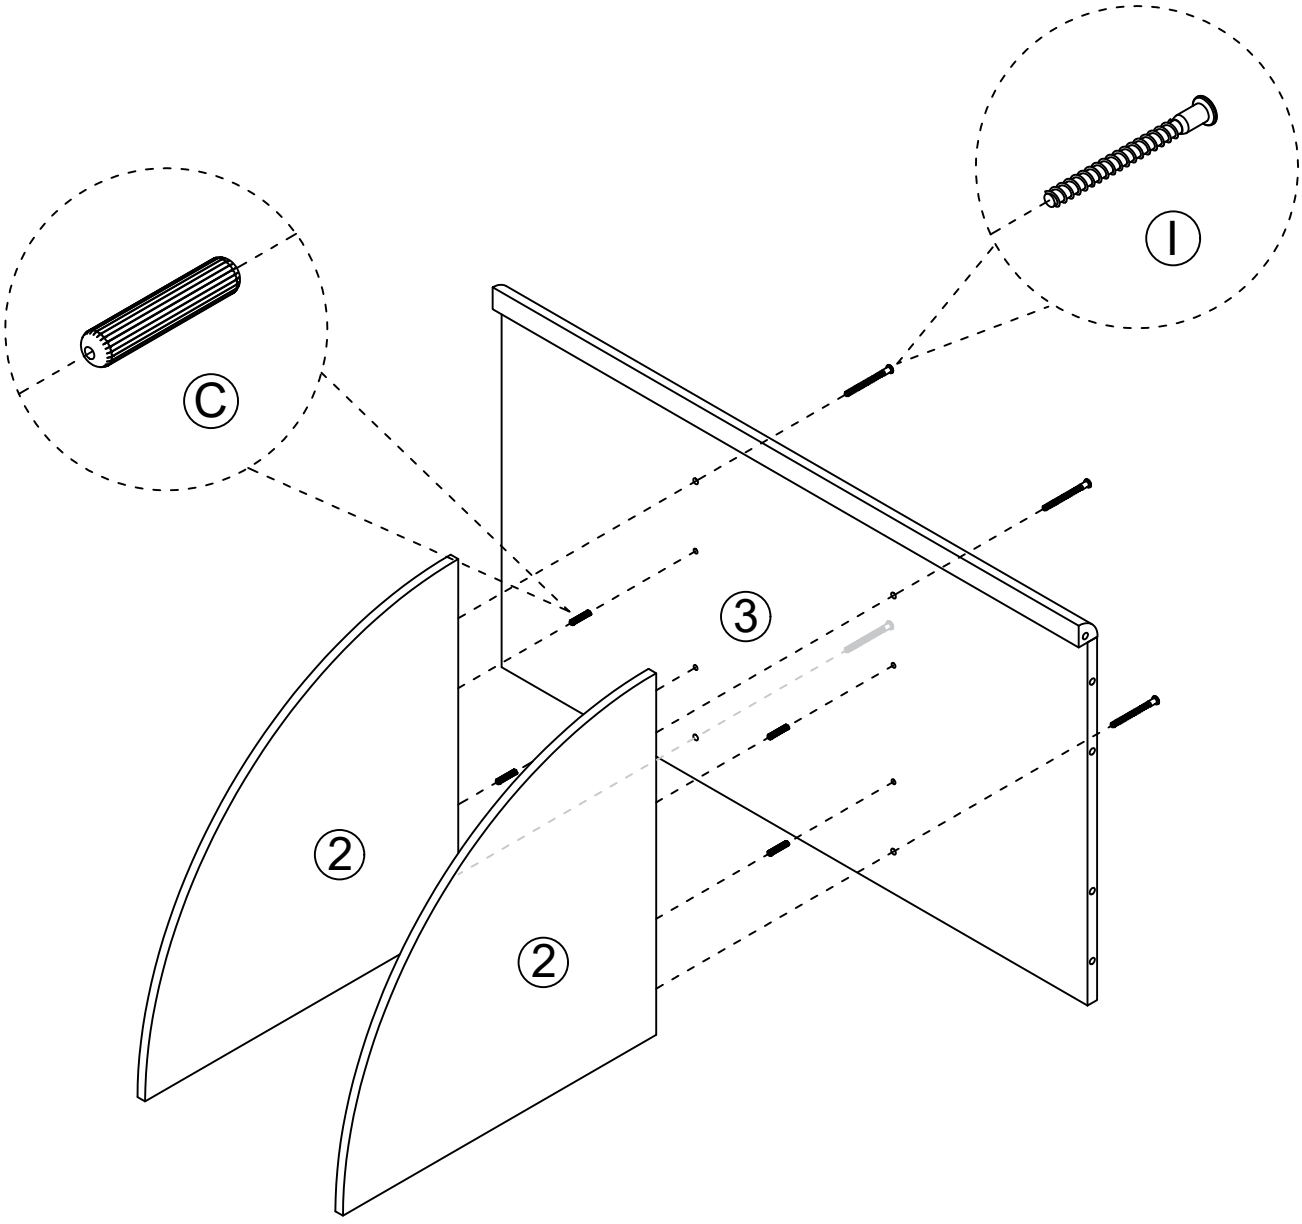


STEP5

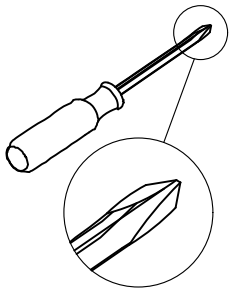


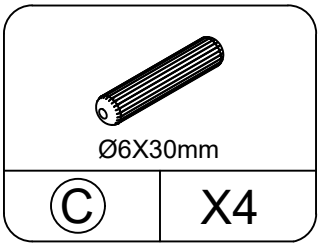


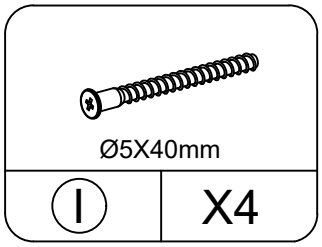


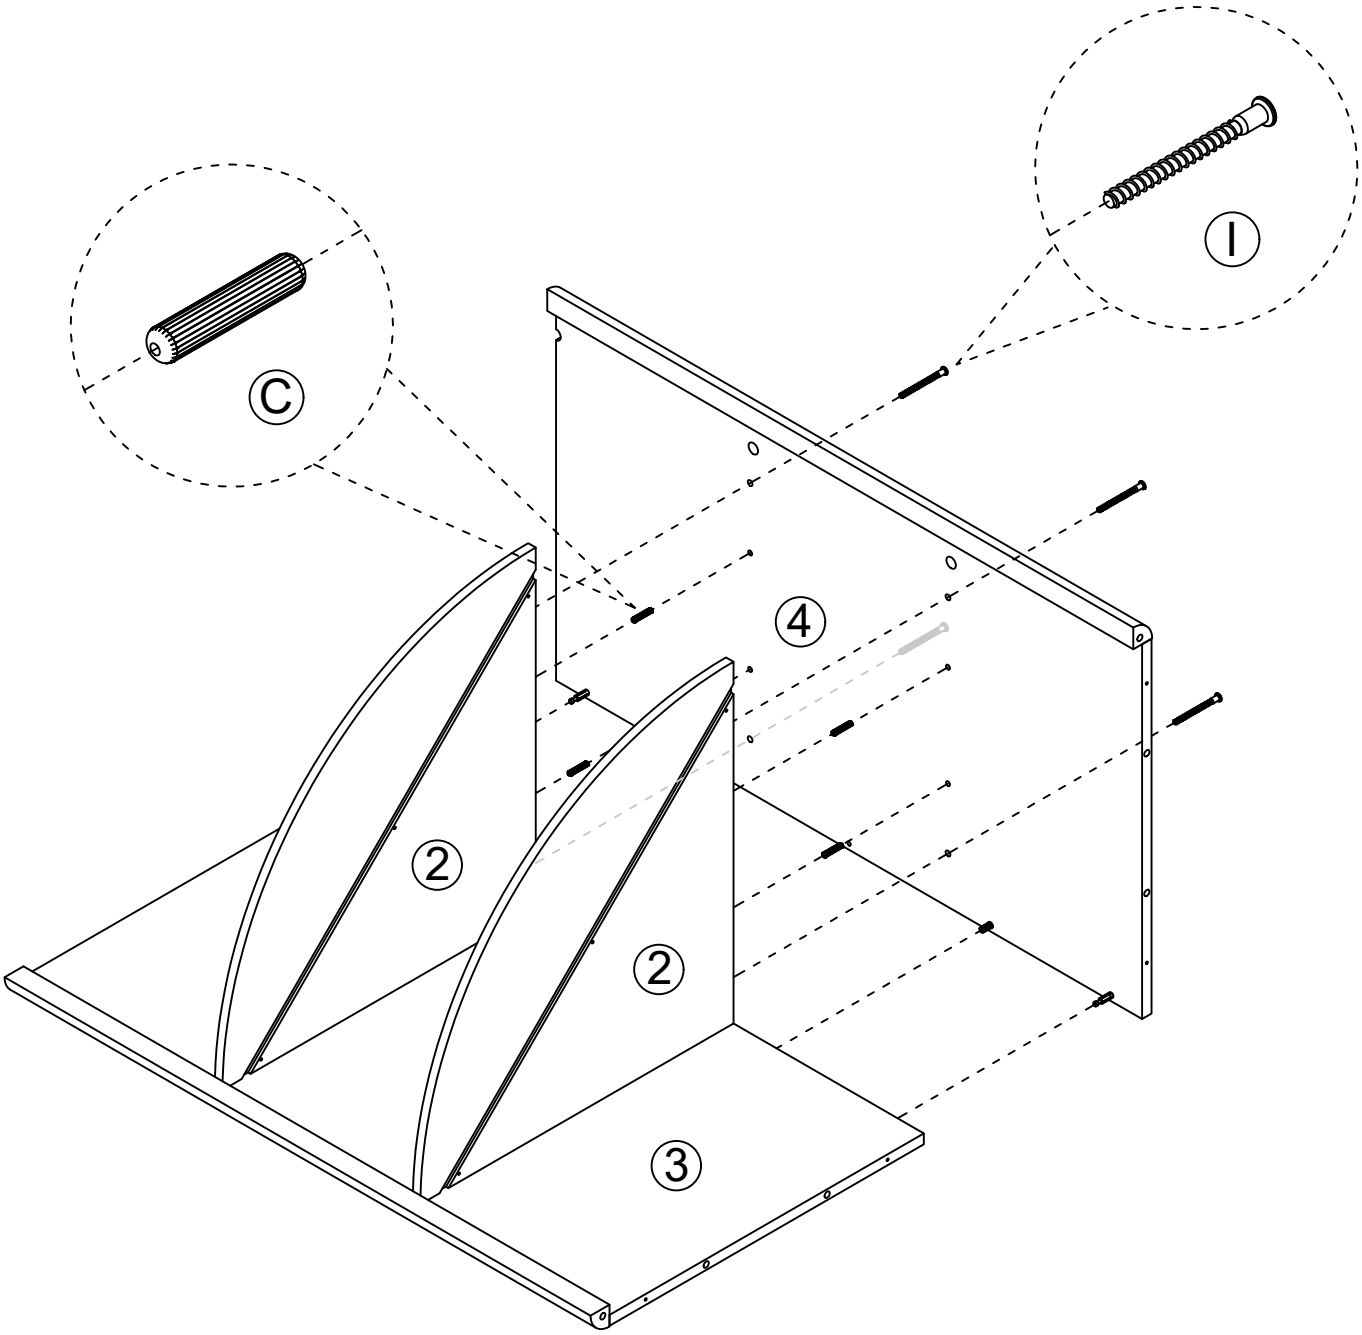


STEP6

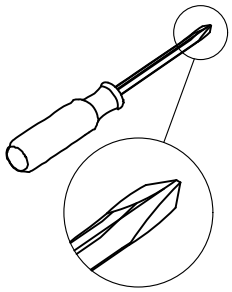


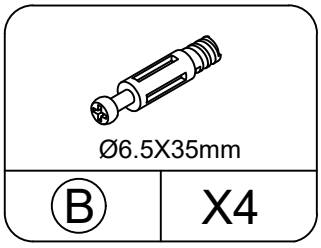


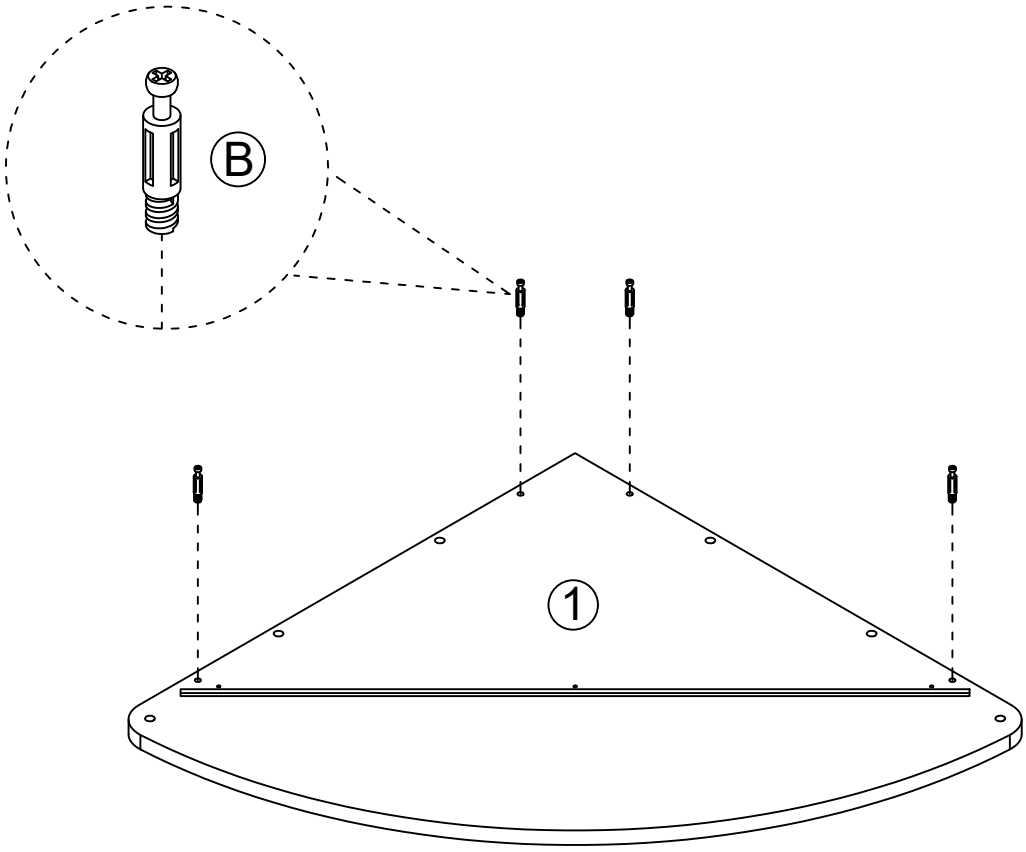


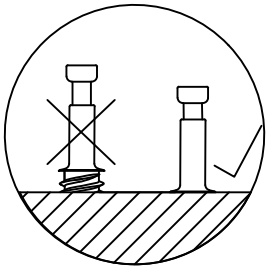


STEP7

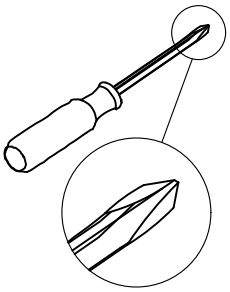


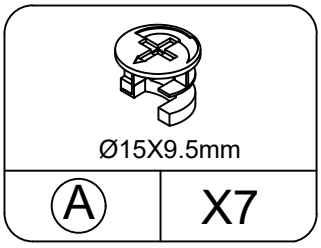

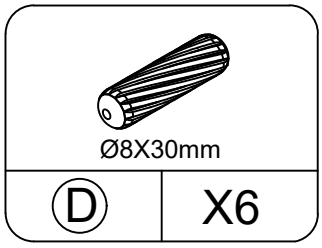

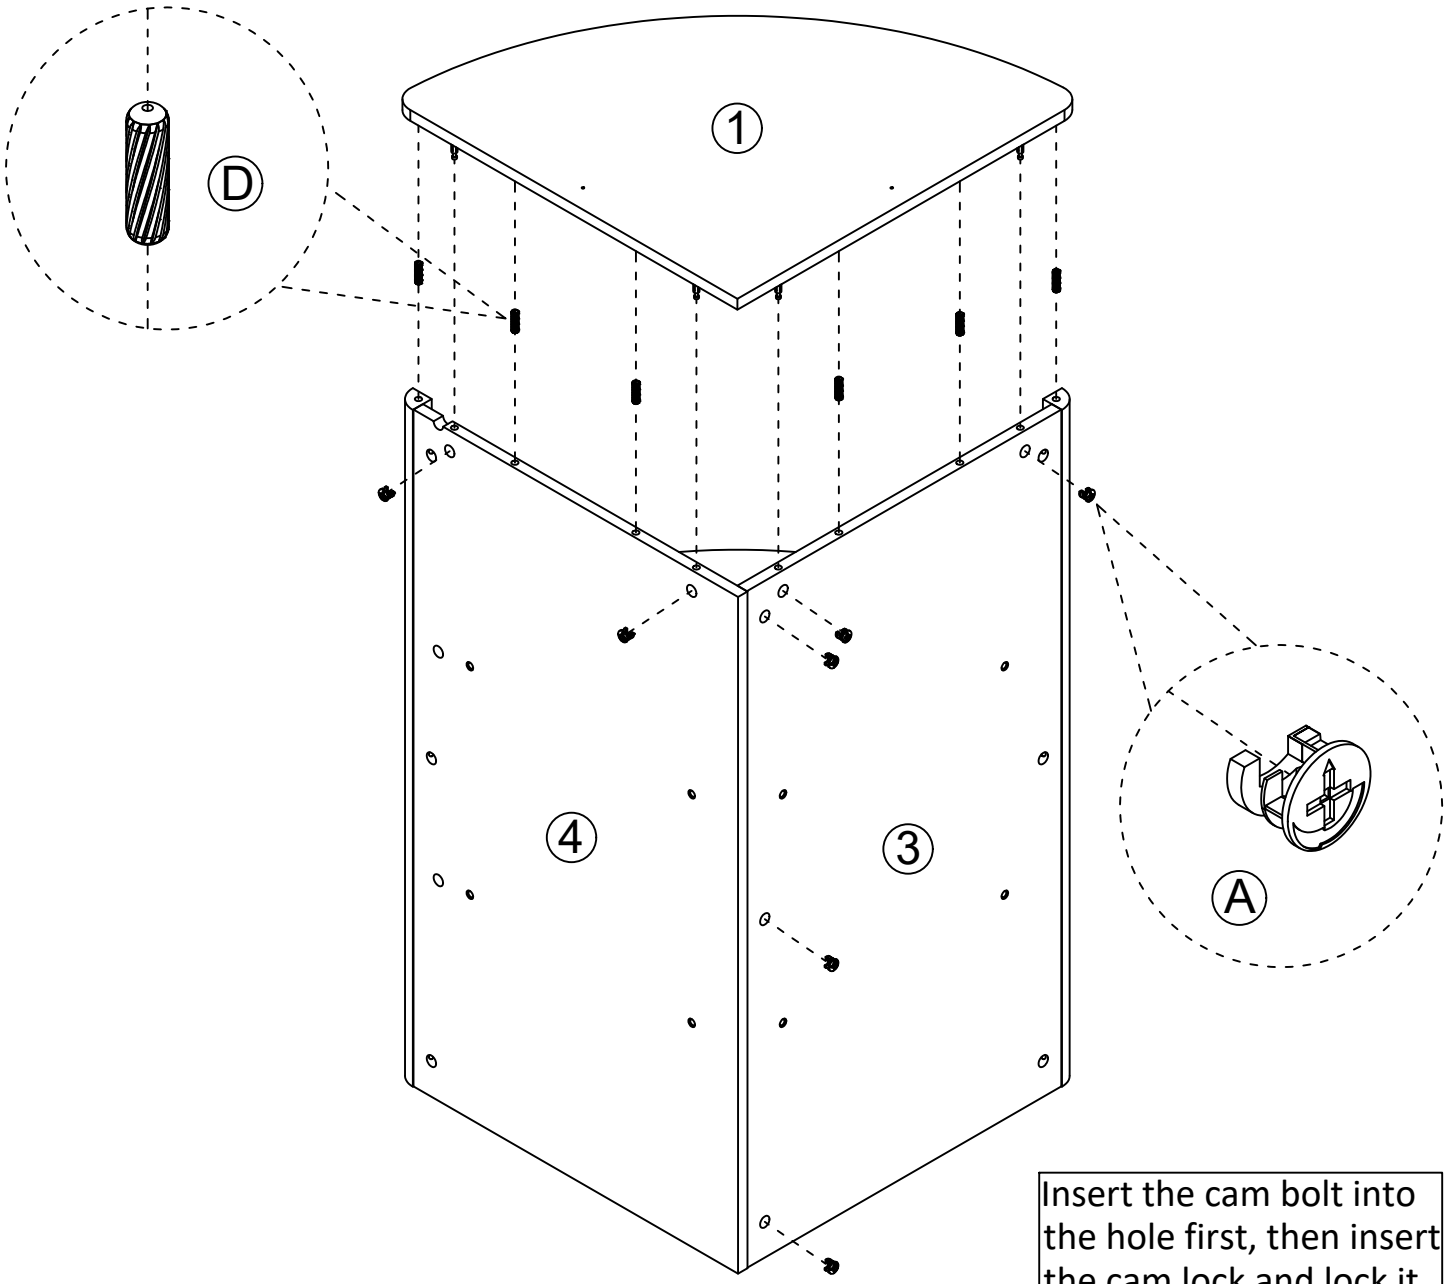


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

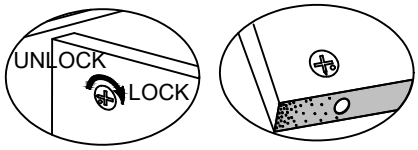



Proper orientation of CAM LOCK

STEP8

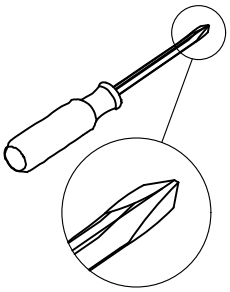


Ø3X12mm	20X10X6.7mm		24X7X4.5mm
E X9	L X3	N X1set	R X6

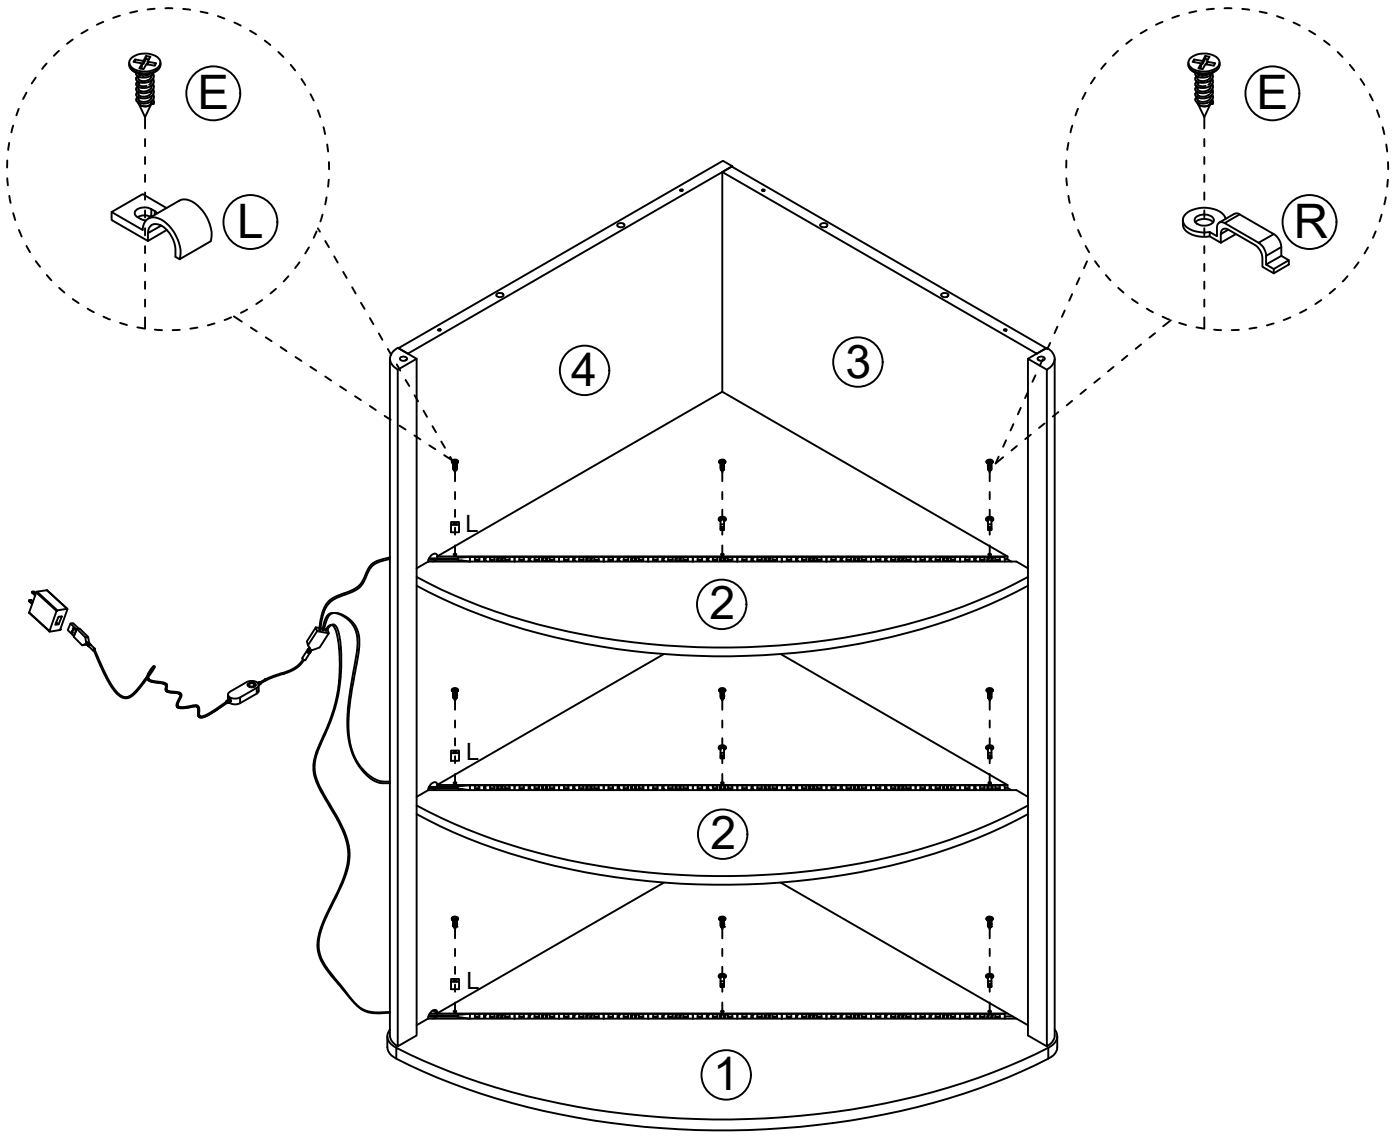


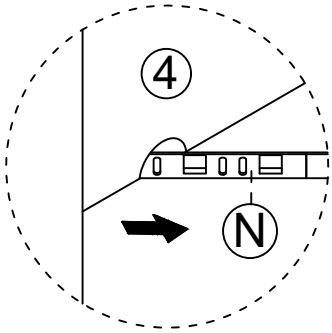



The light strip N here needs to pass through the through-hole of panel 4, and the light strip at the bottom end is the longest.

STEP9

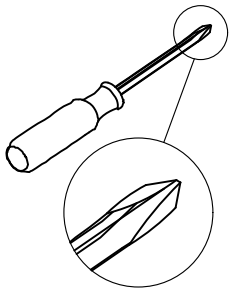


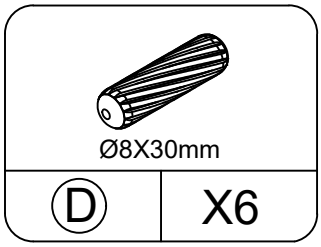


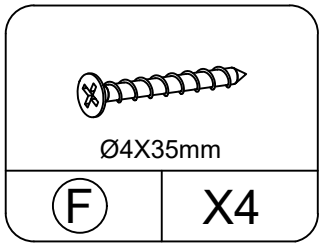


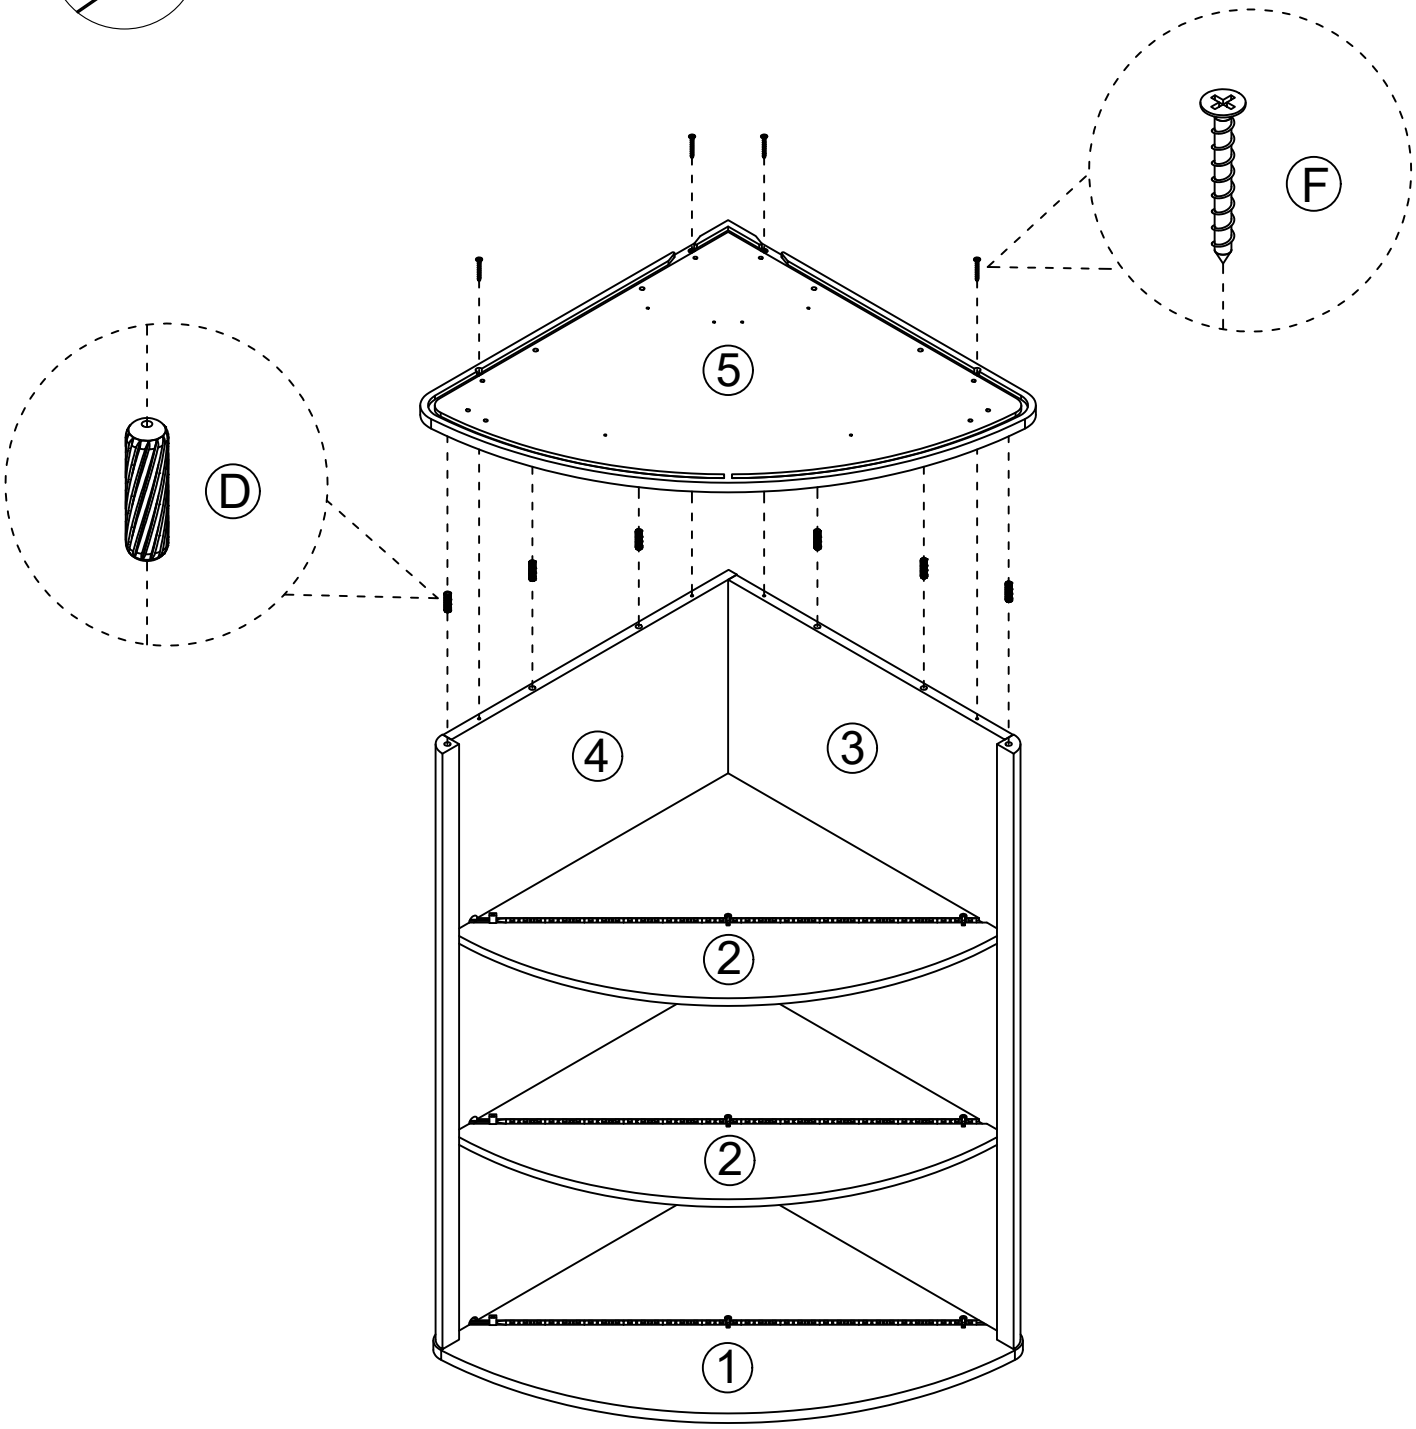



STEP10

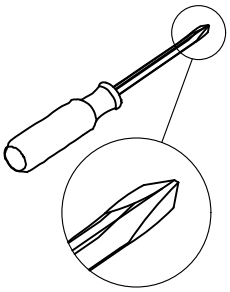


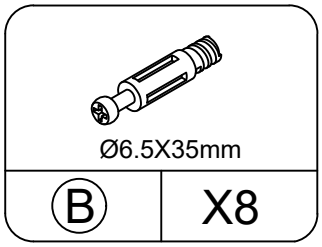

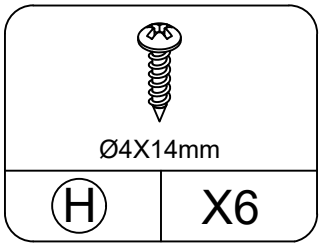


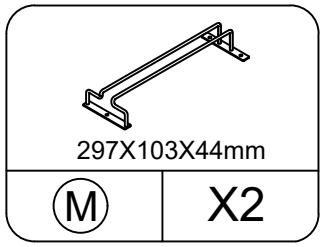


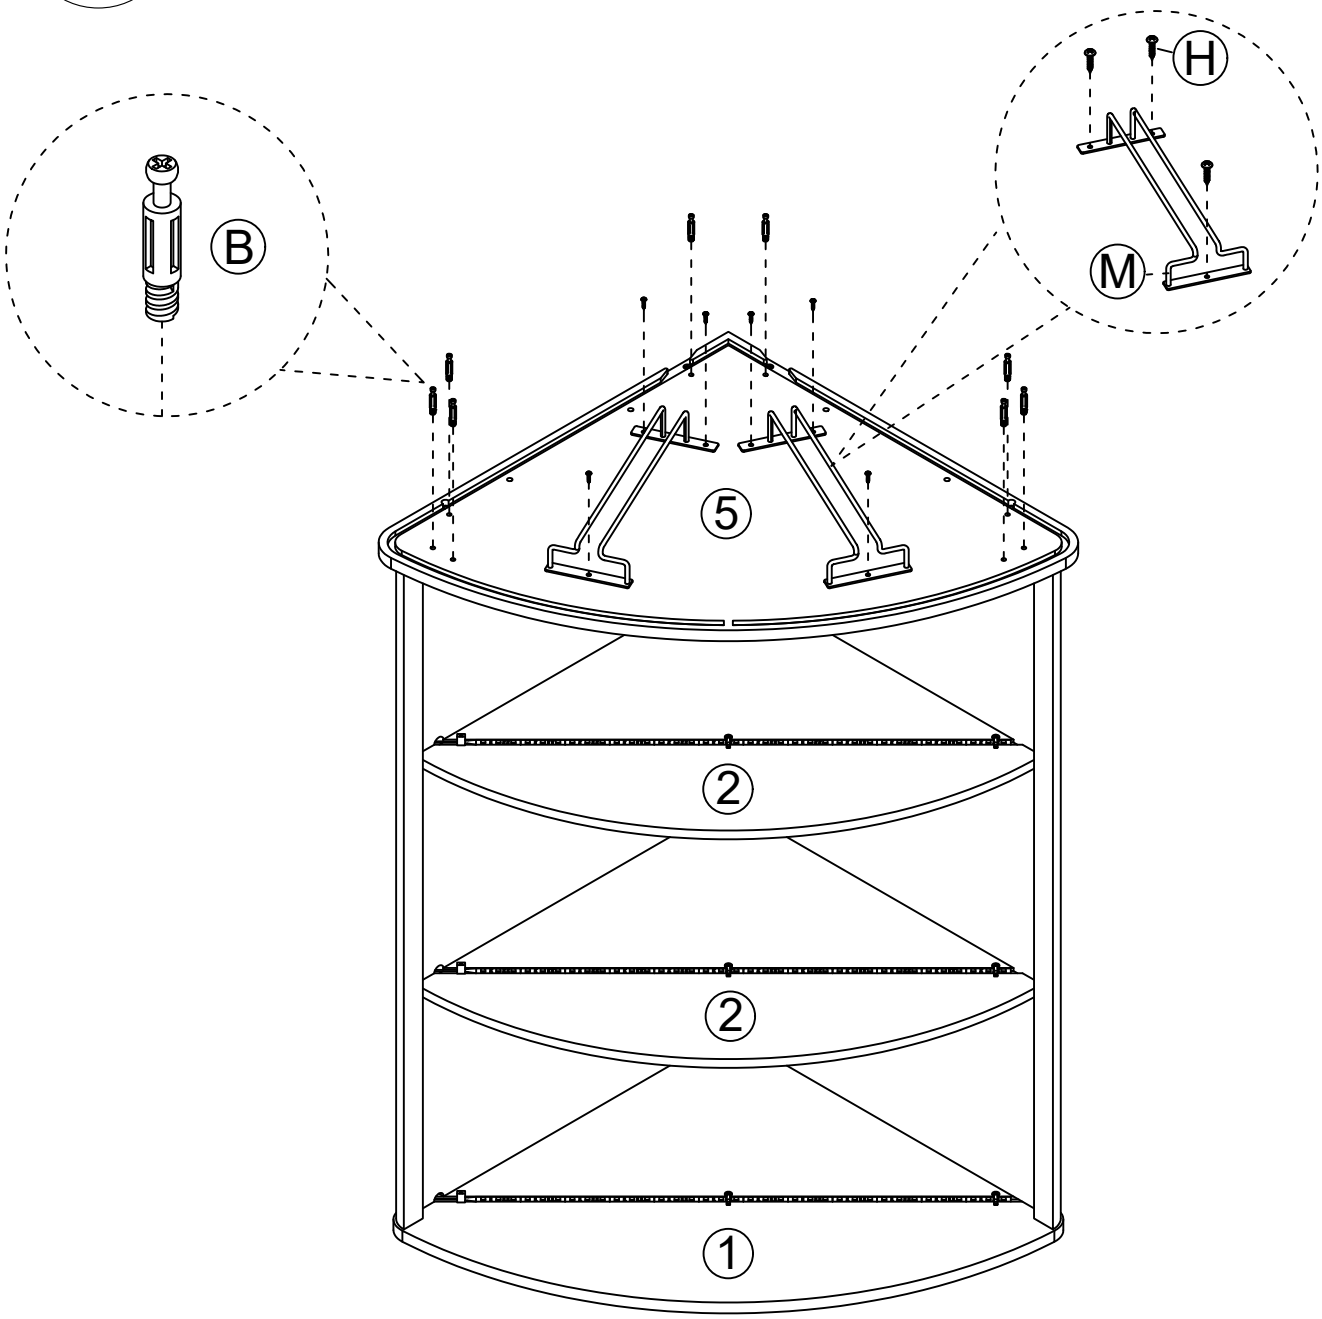


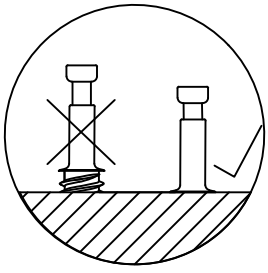



STEP11

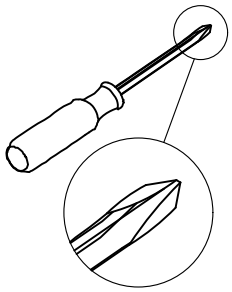


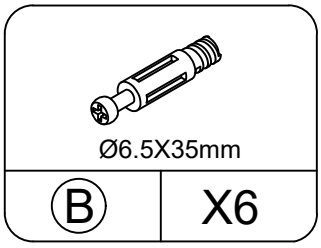

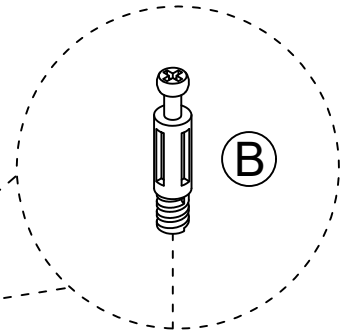


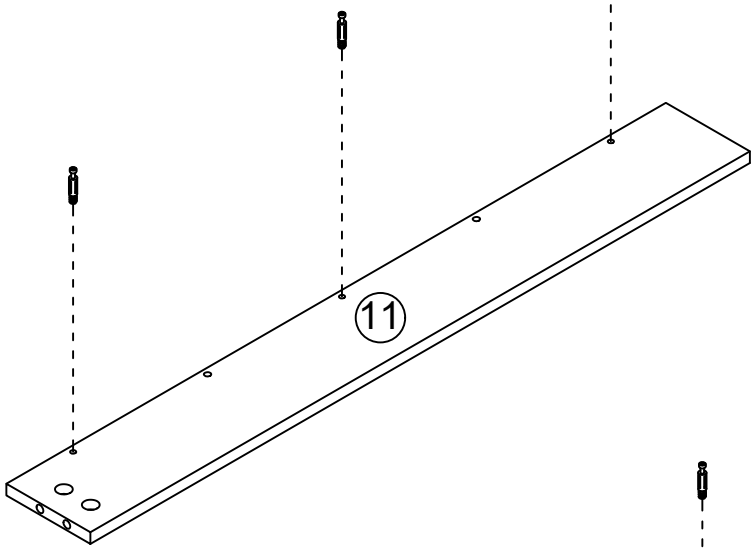


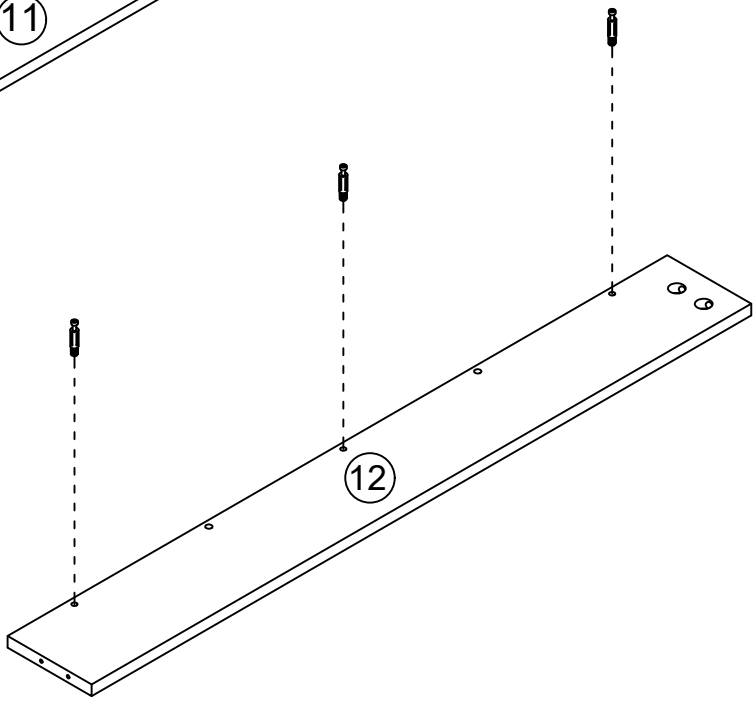


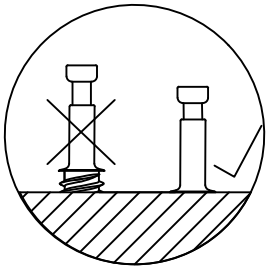


STEP12

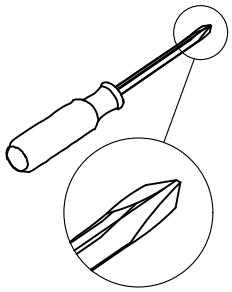


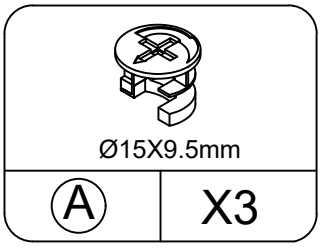

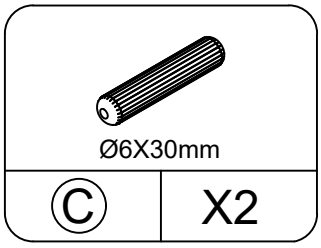

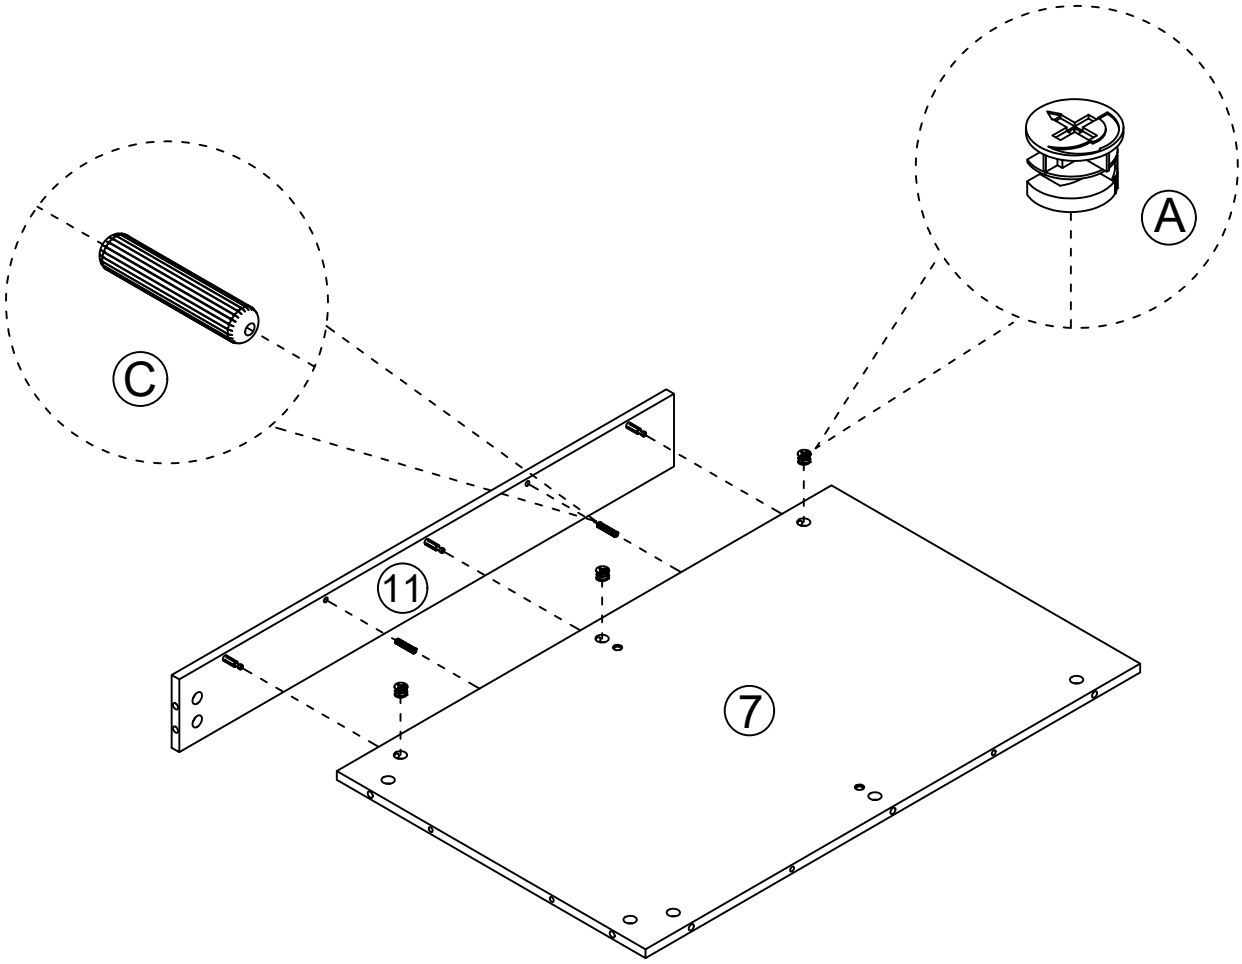



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

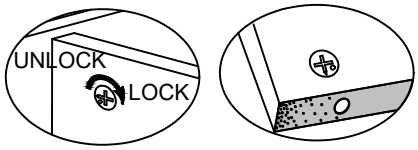



Proper orientation of CAM LOCK


STEP13

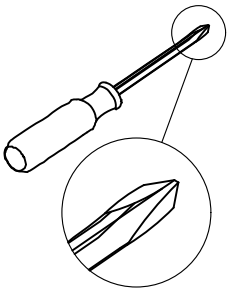


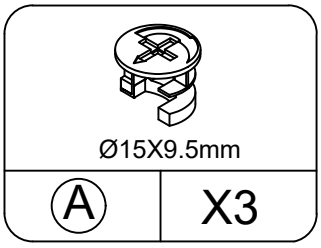


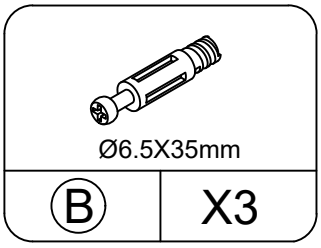

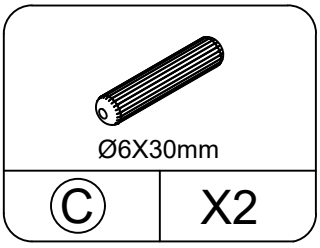


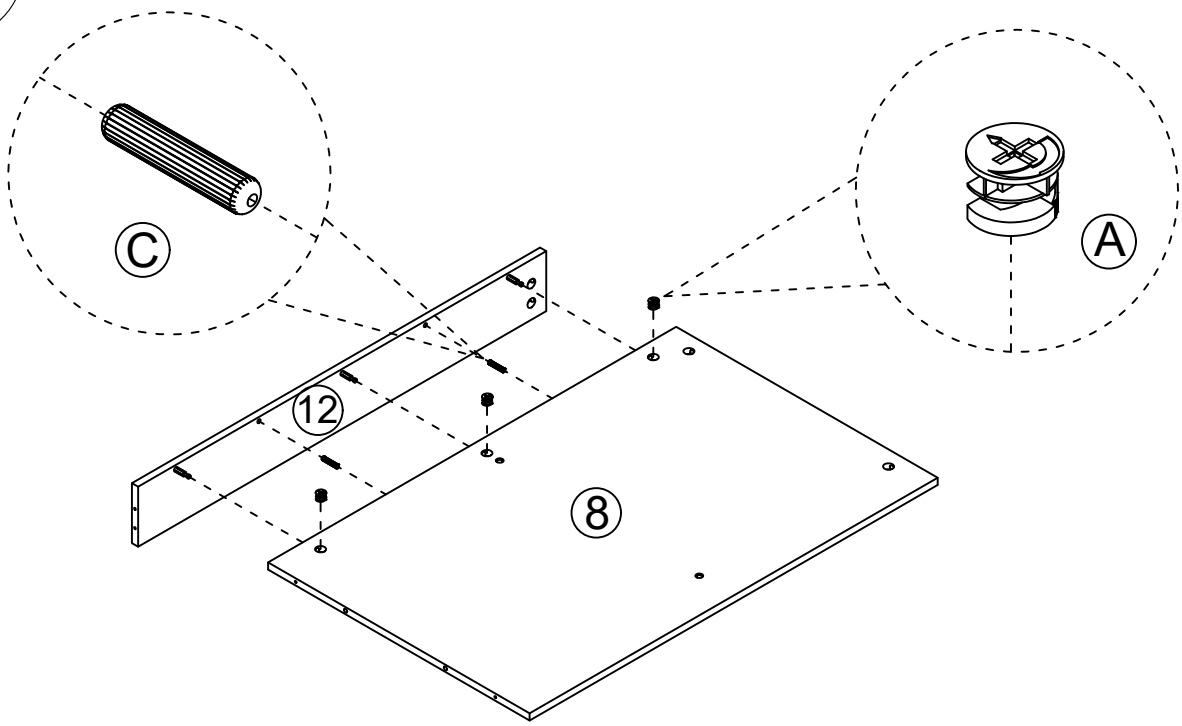

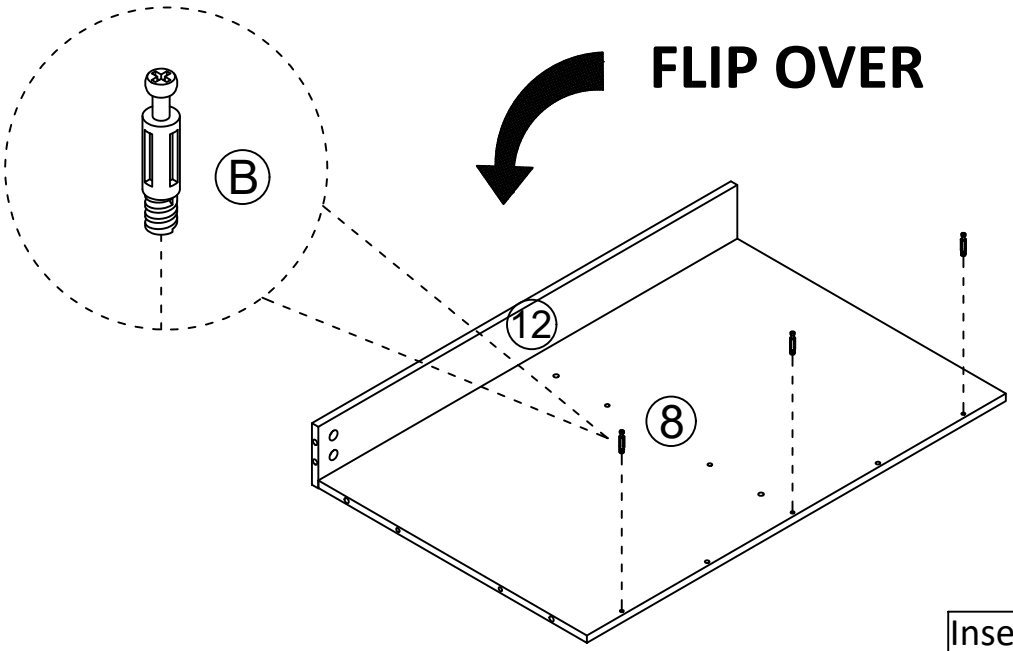

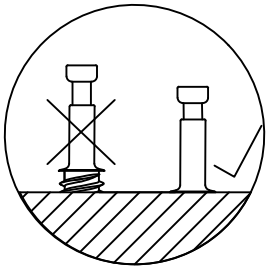



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

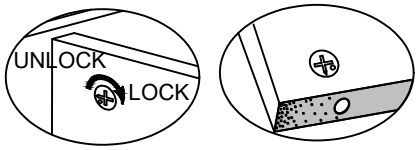



Proper orientation of CAM LOCK

STEP14

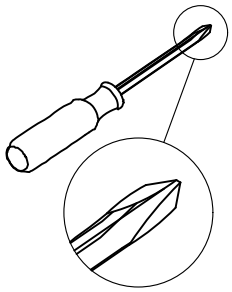


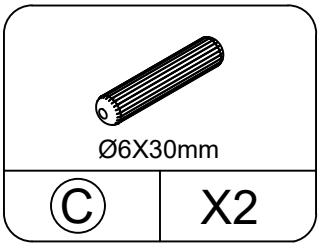


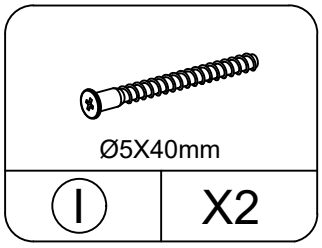


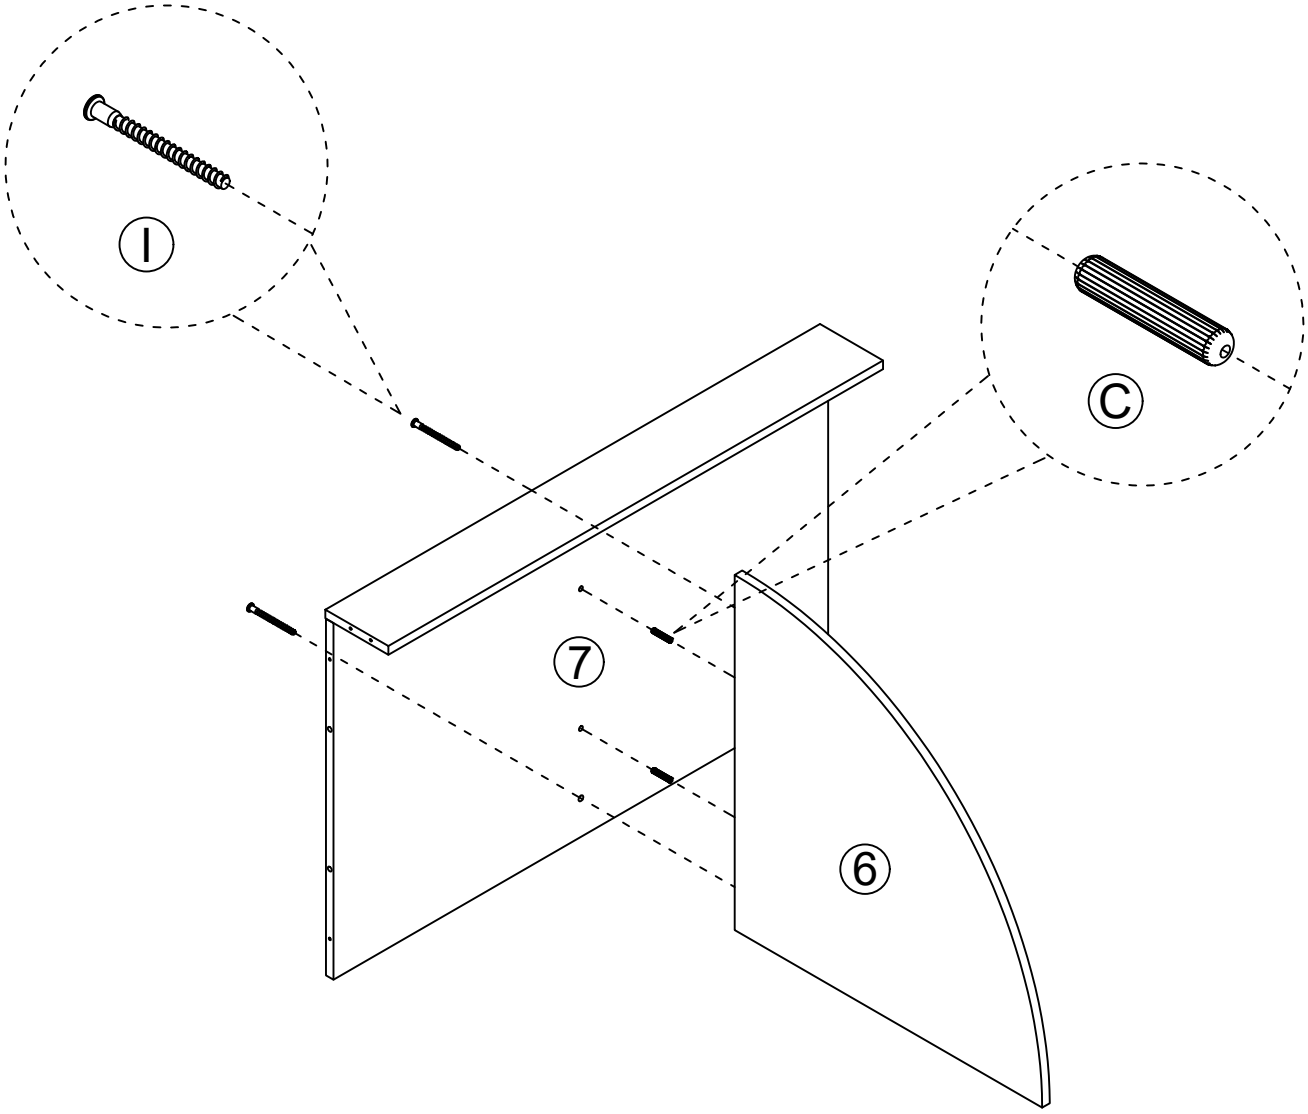


STEP15

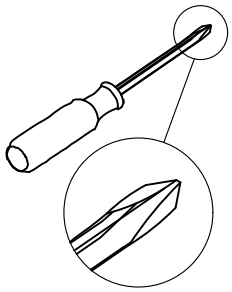


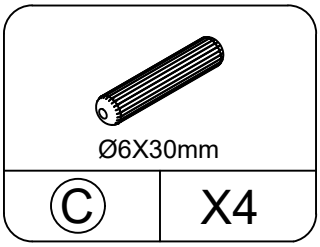


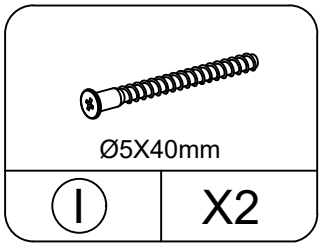


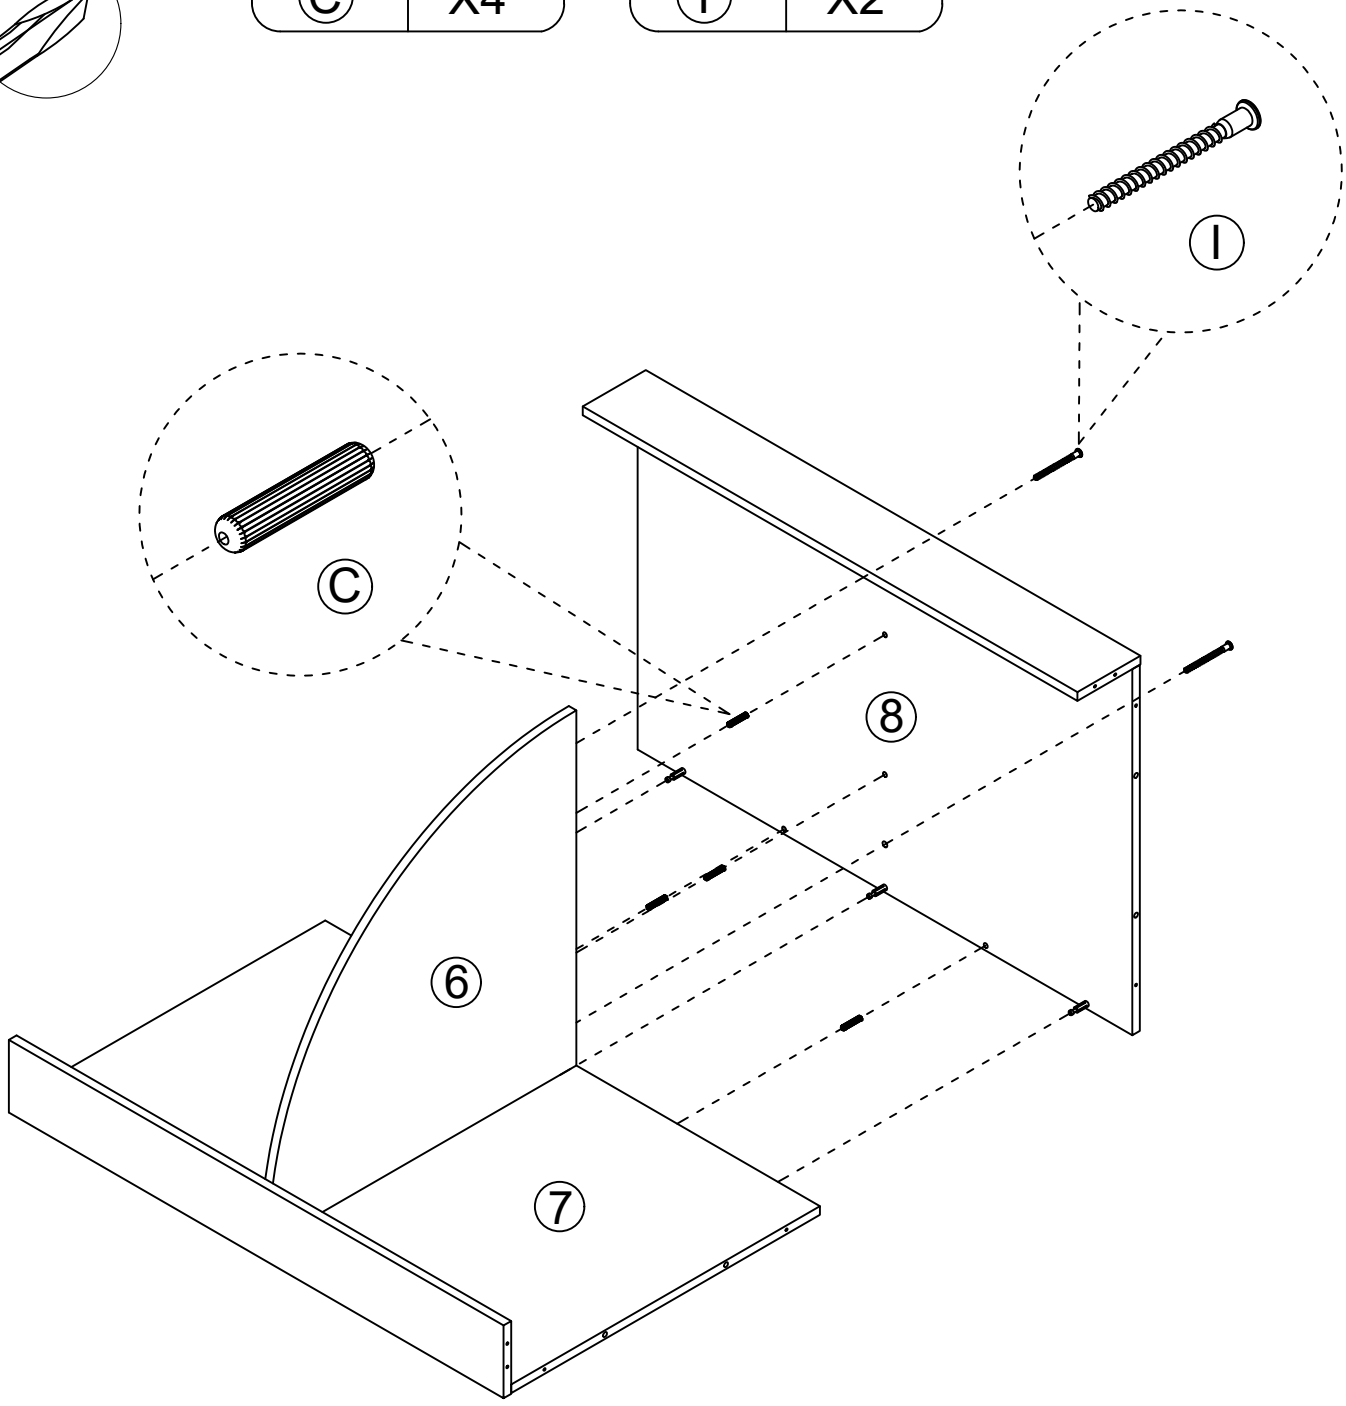



STEP16

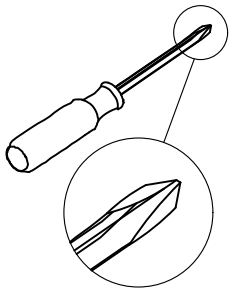

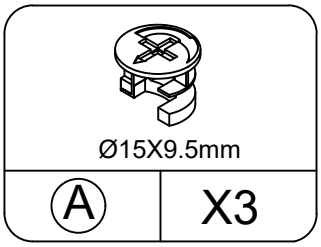

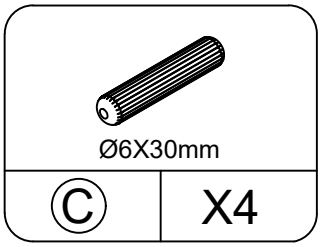

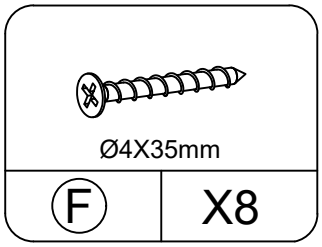


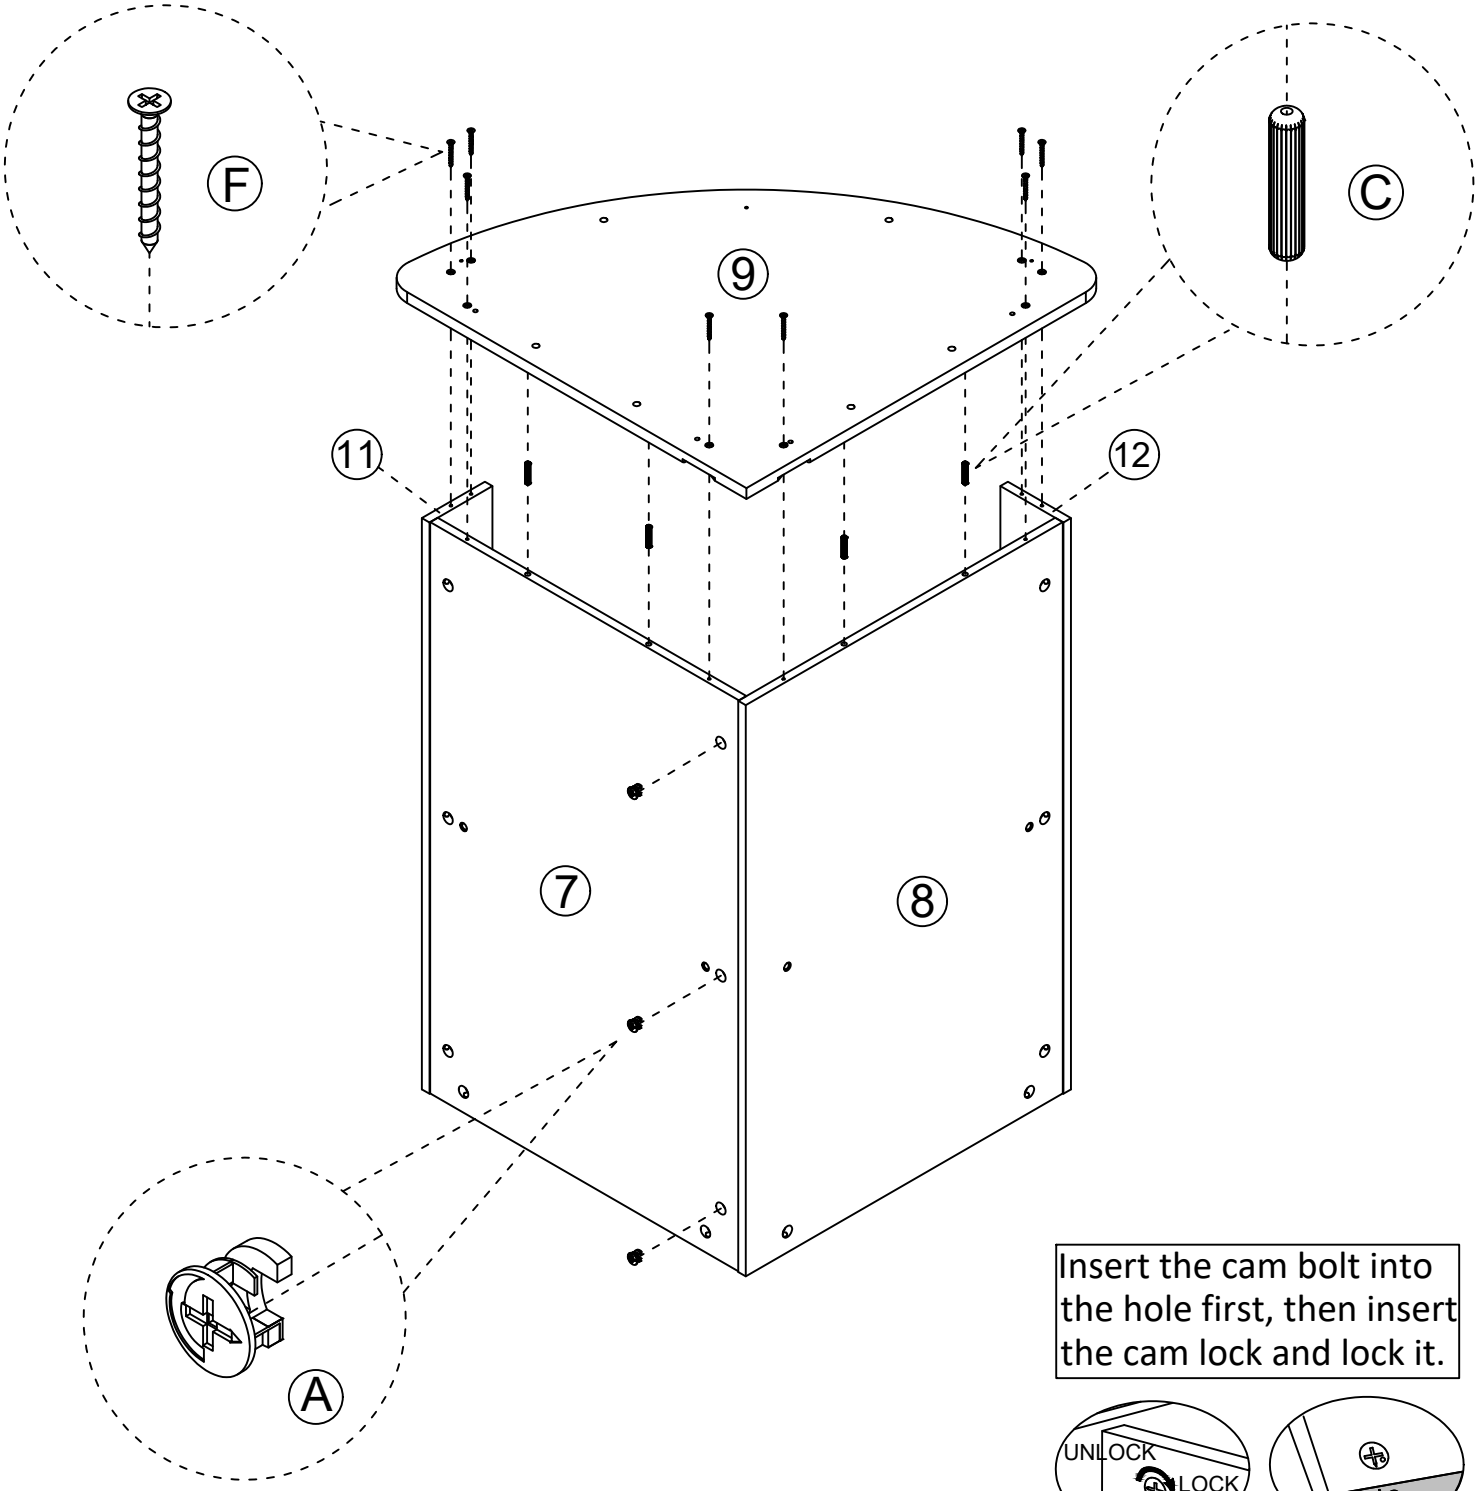



Insert the cam bolt into the hole first, then insert the cam lock and lock it.


Proper orientation of CAM LOCK

STEP17

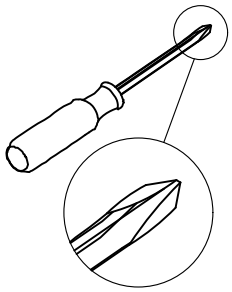


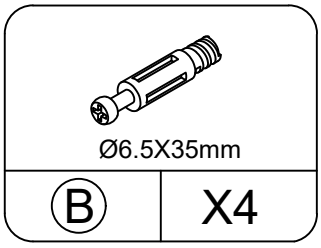


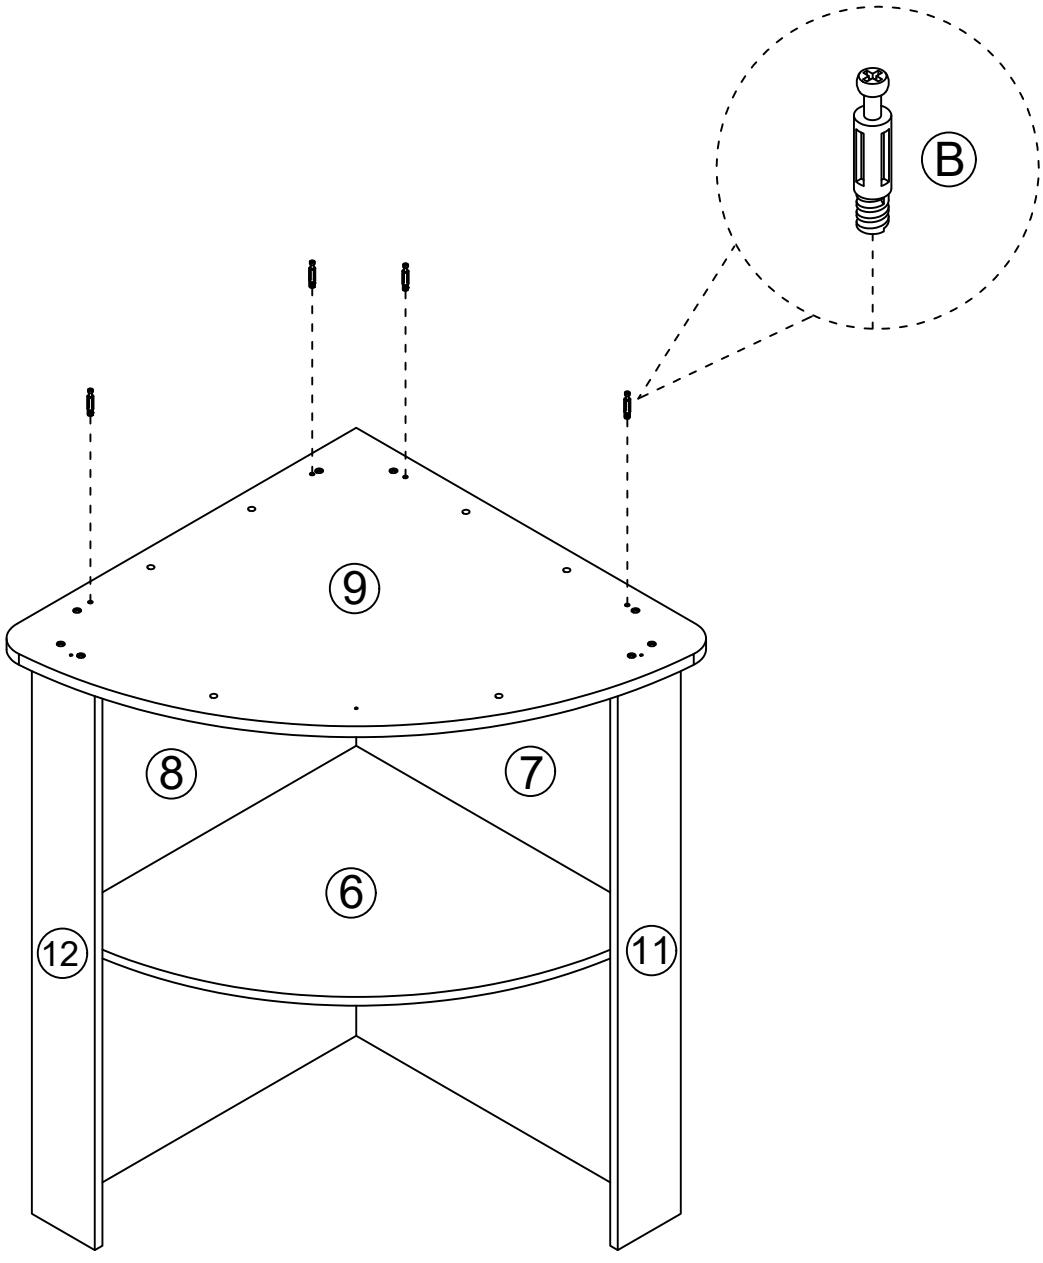


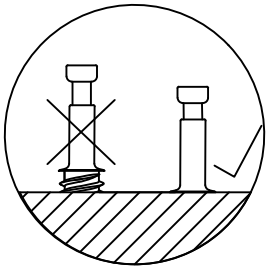



STEP18

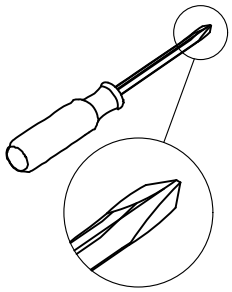

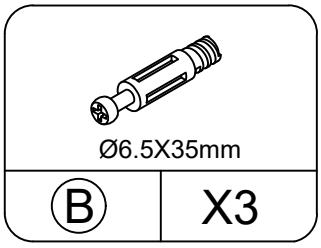


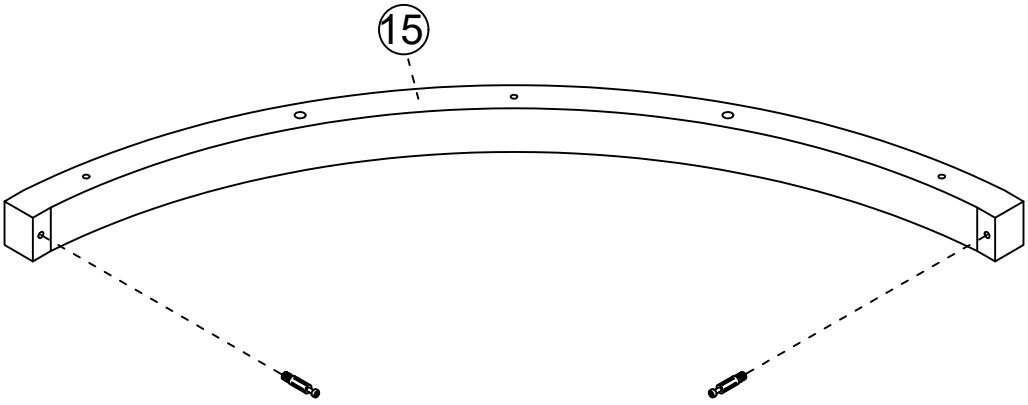


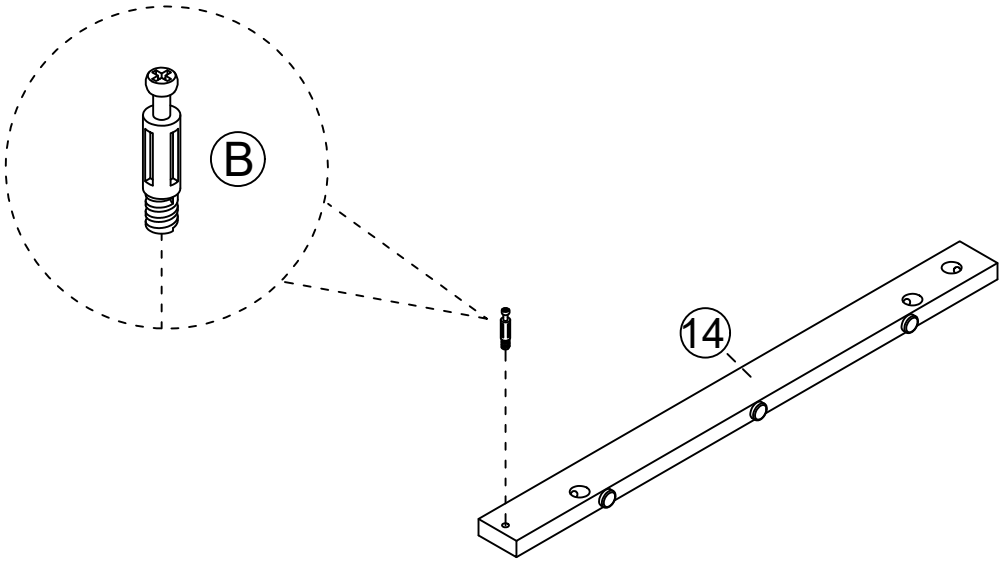


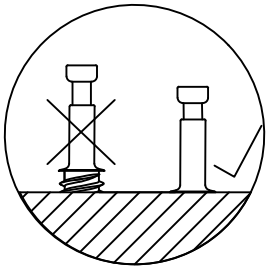


STEP19

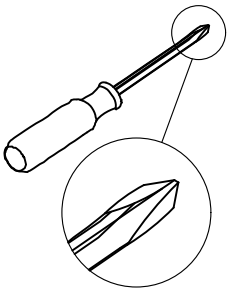

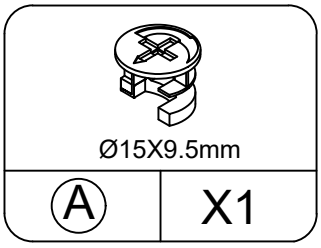

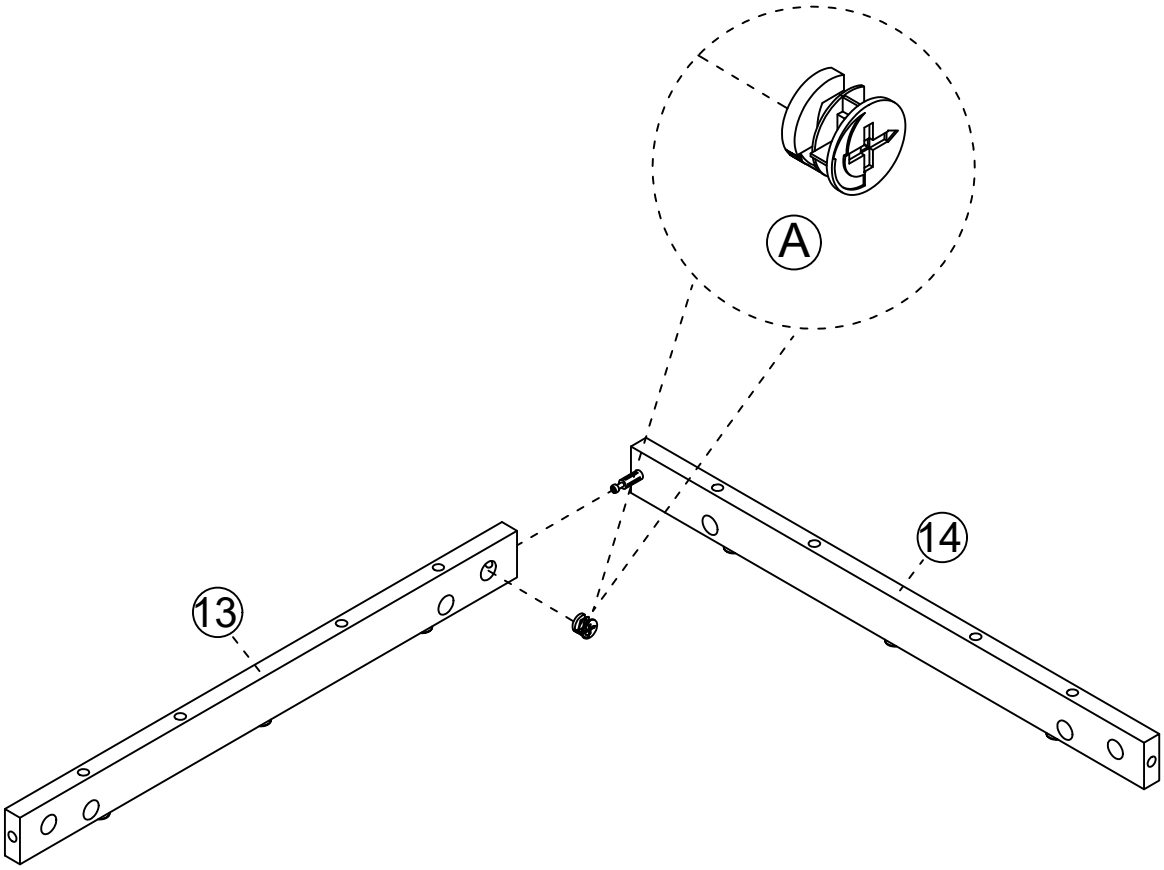



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

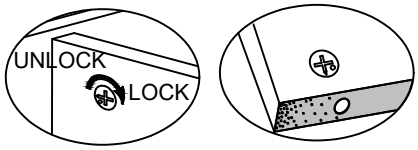


Proper orientation of CAM LOCK


STEP20

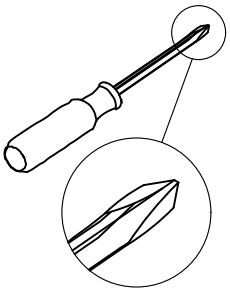

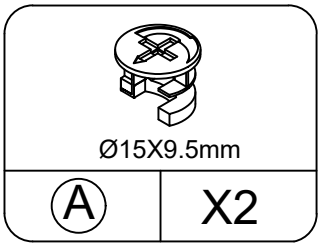

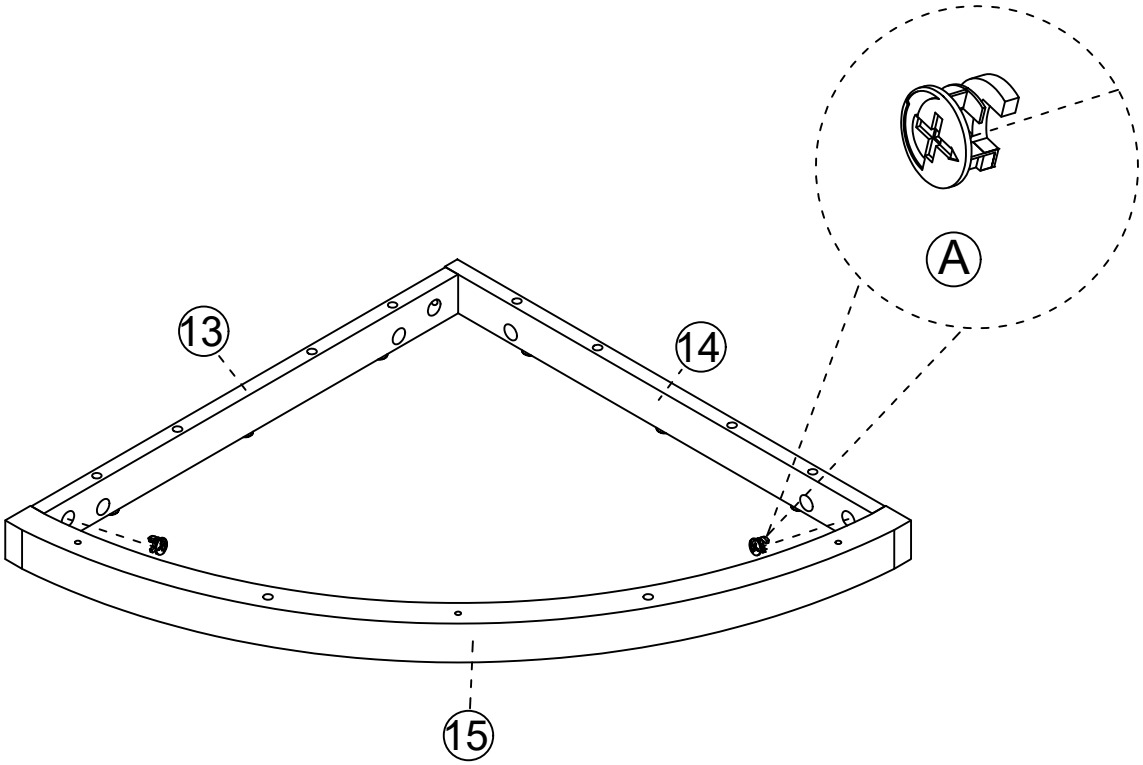


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

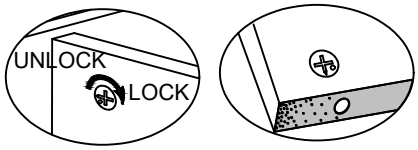

Proper orientation of CAM LOCK


STEP21

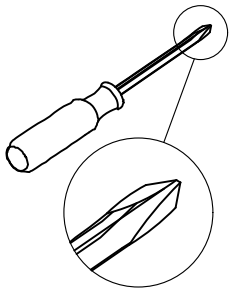


Ø15X9.5mm	
A	X4

Ø8X30mm	
D	X6

Ø4X50mm	
G	X3

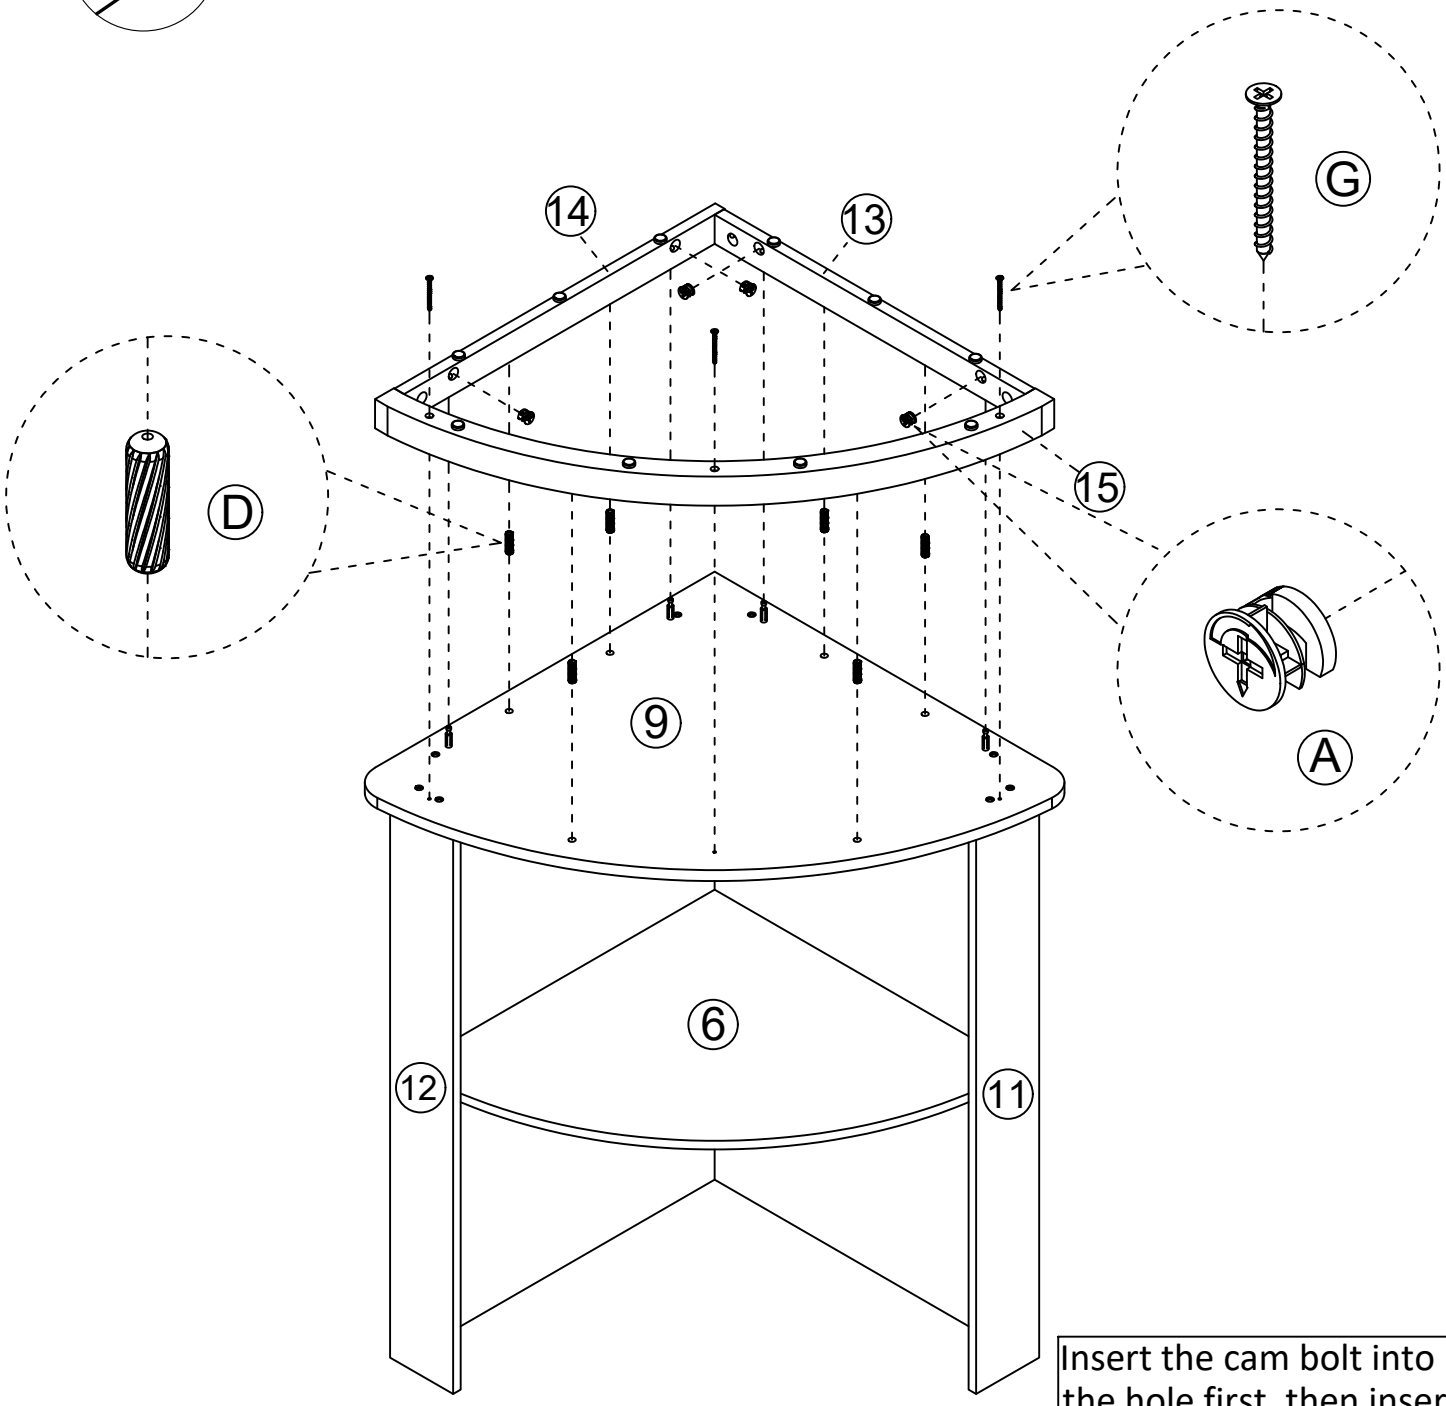



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

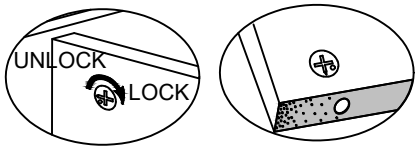



Proper orientation of CAM LOCK

STEP22

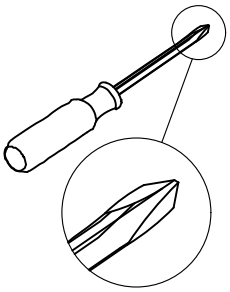


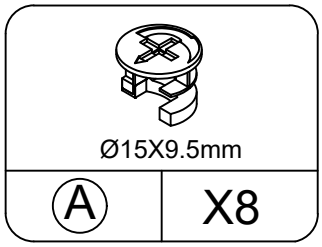

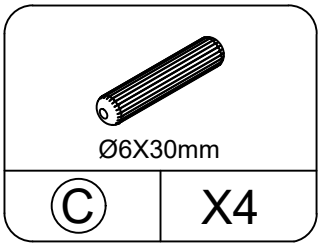


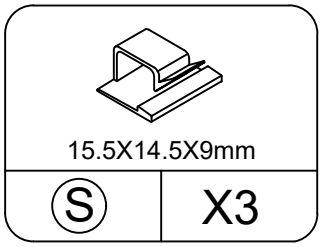



You'll need a helper when installing this step.

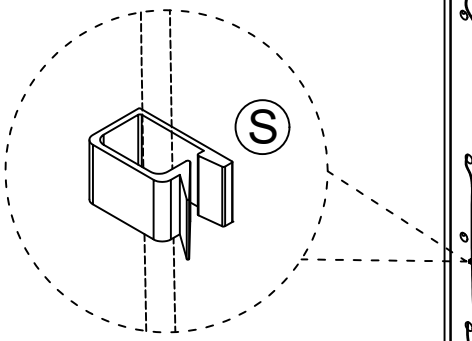


Press one on each wire.

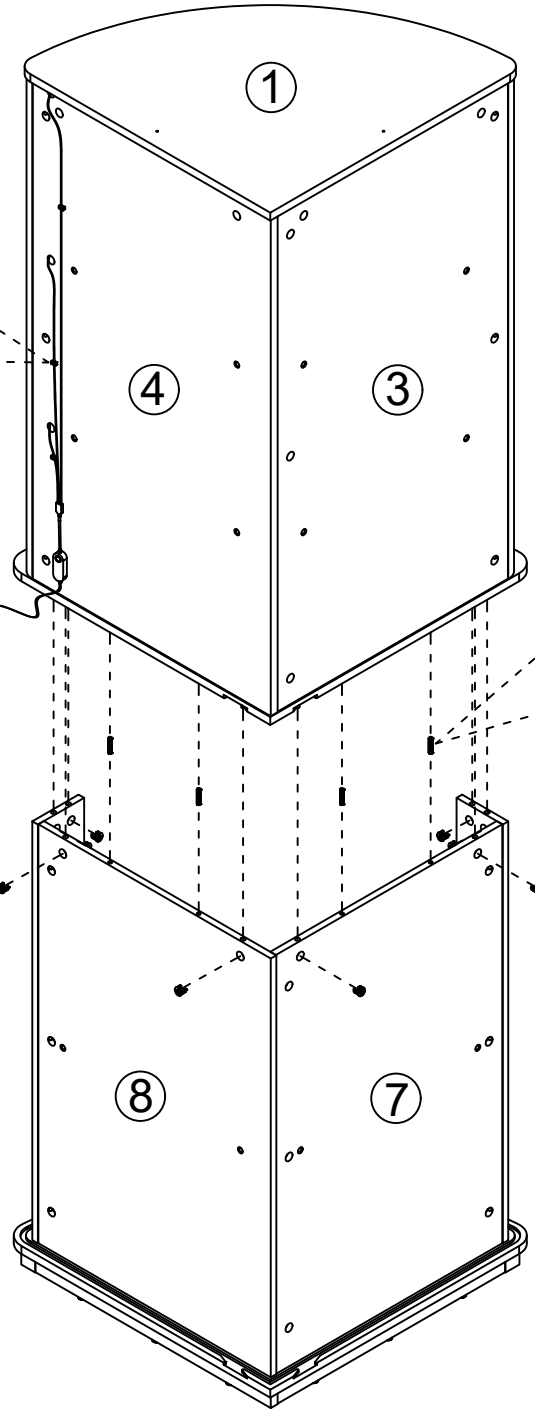

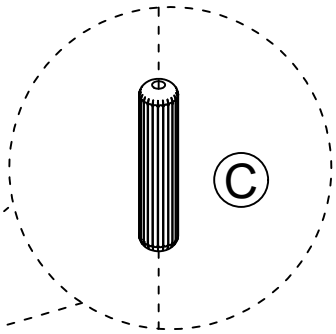

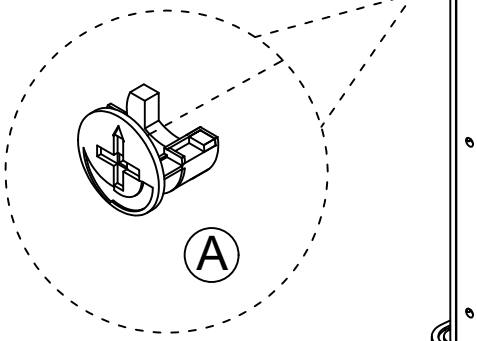



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

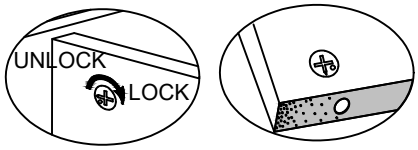



Proper orientation of CAM LOCK

STEP23

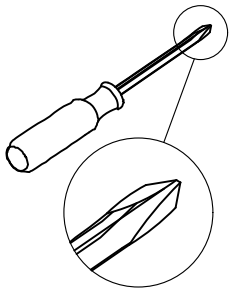

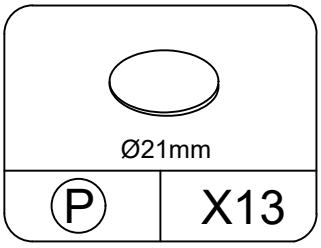


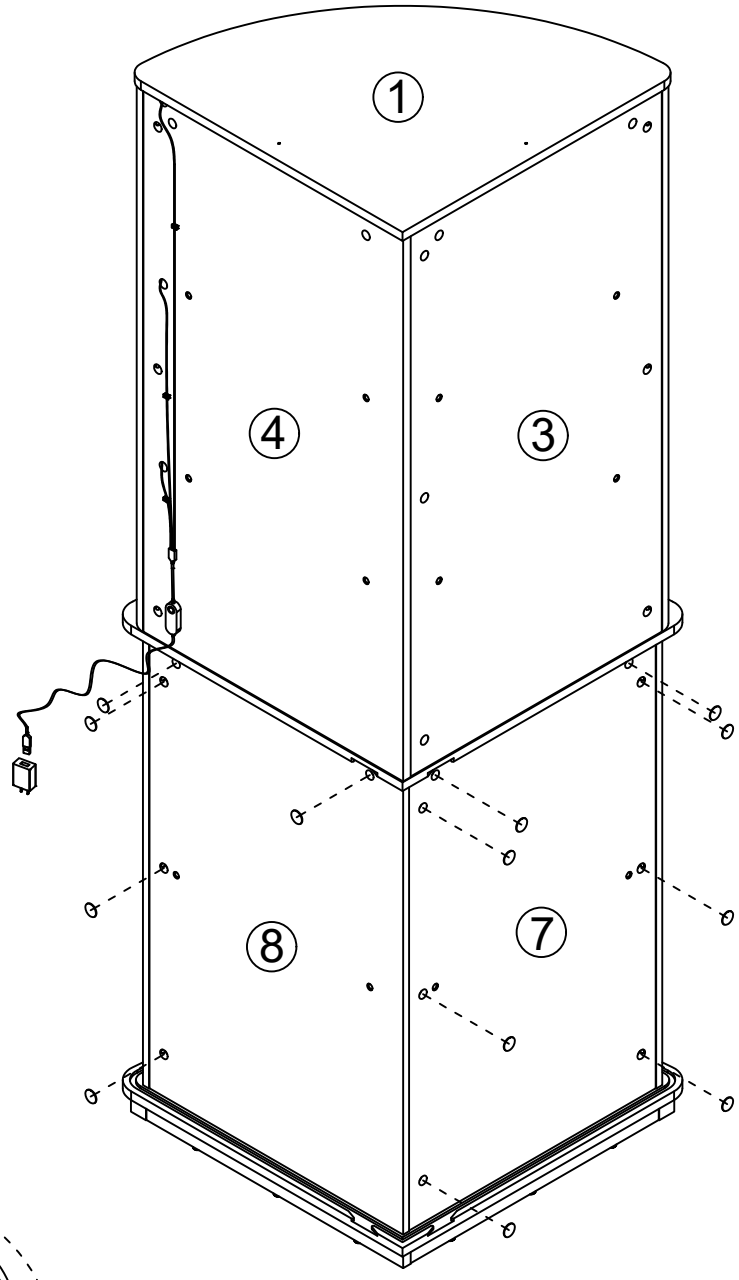


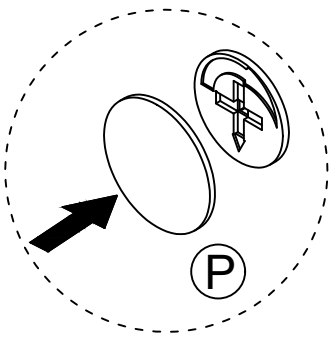



In order to make the product more beautiful, please paste hardware P on the exposed holes.

STEP24

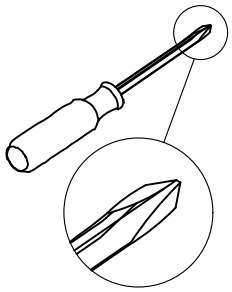


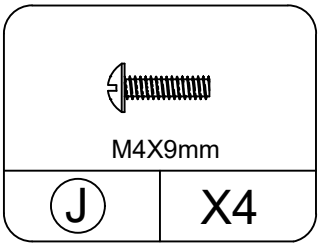


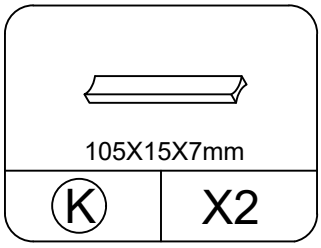

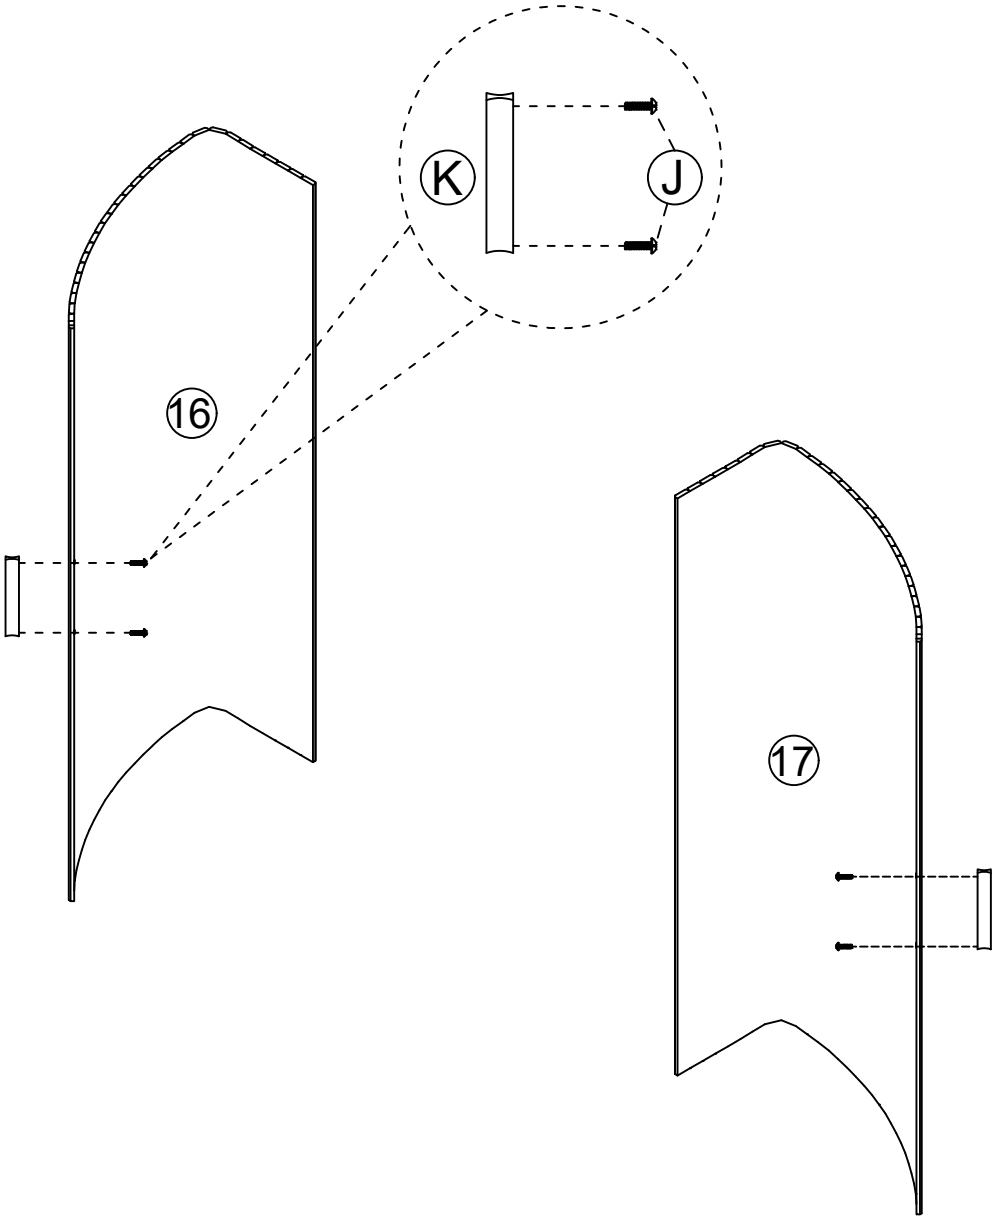



STEP25

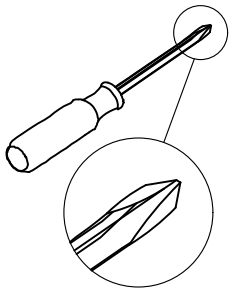


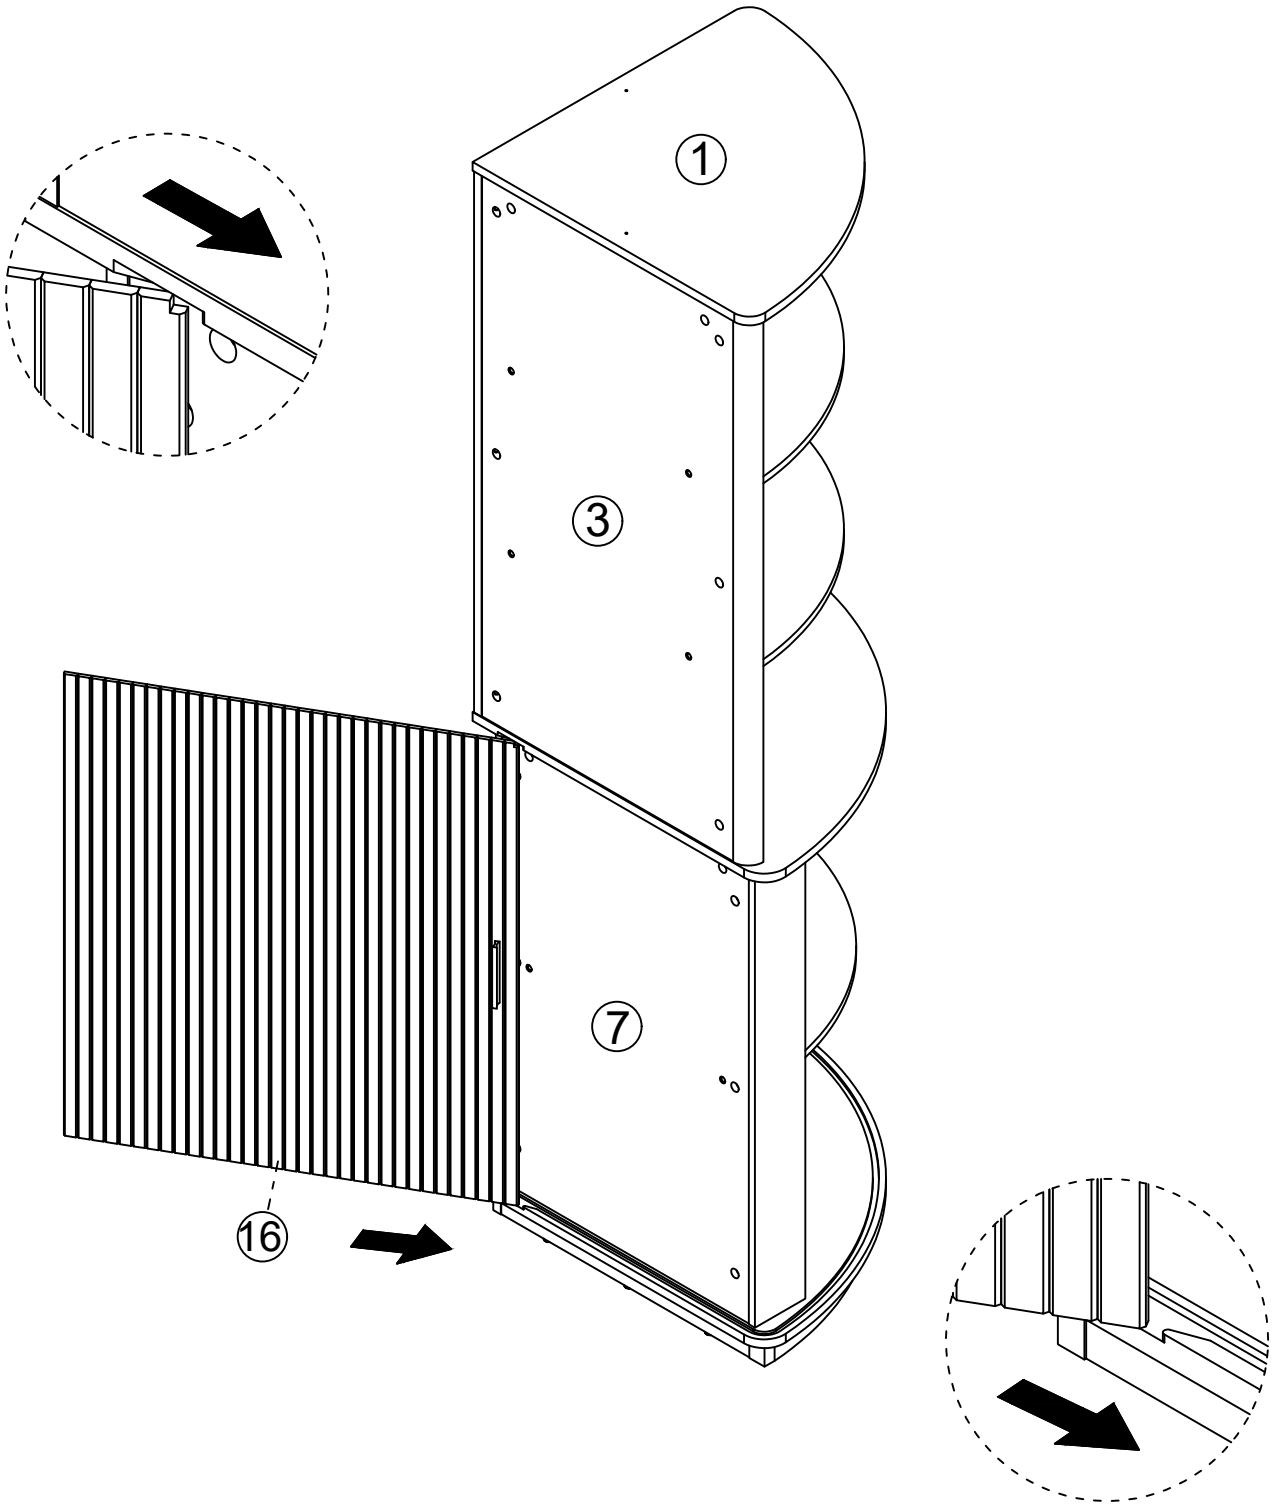


STEP26

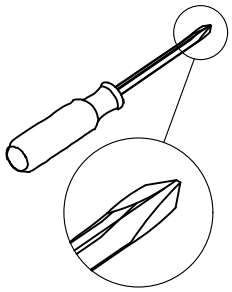


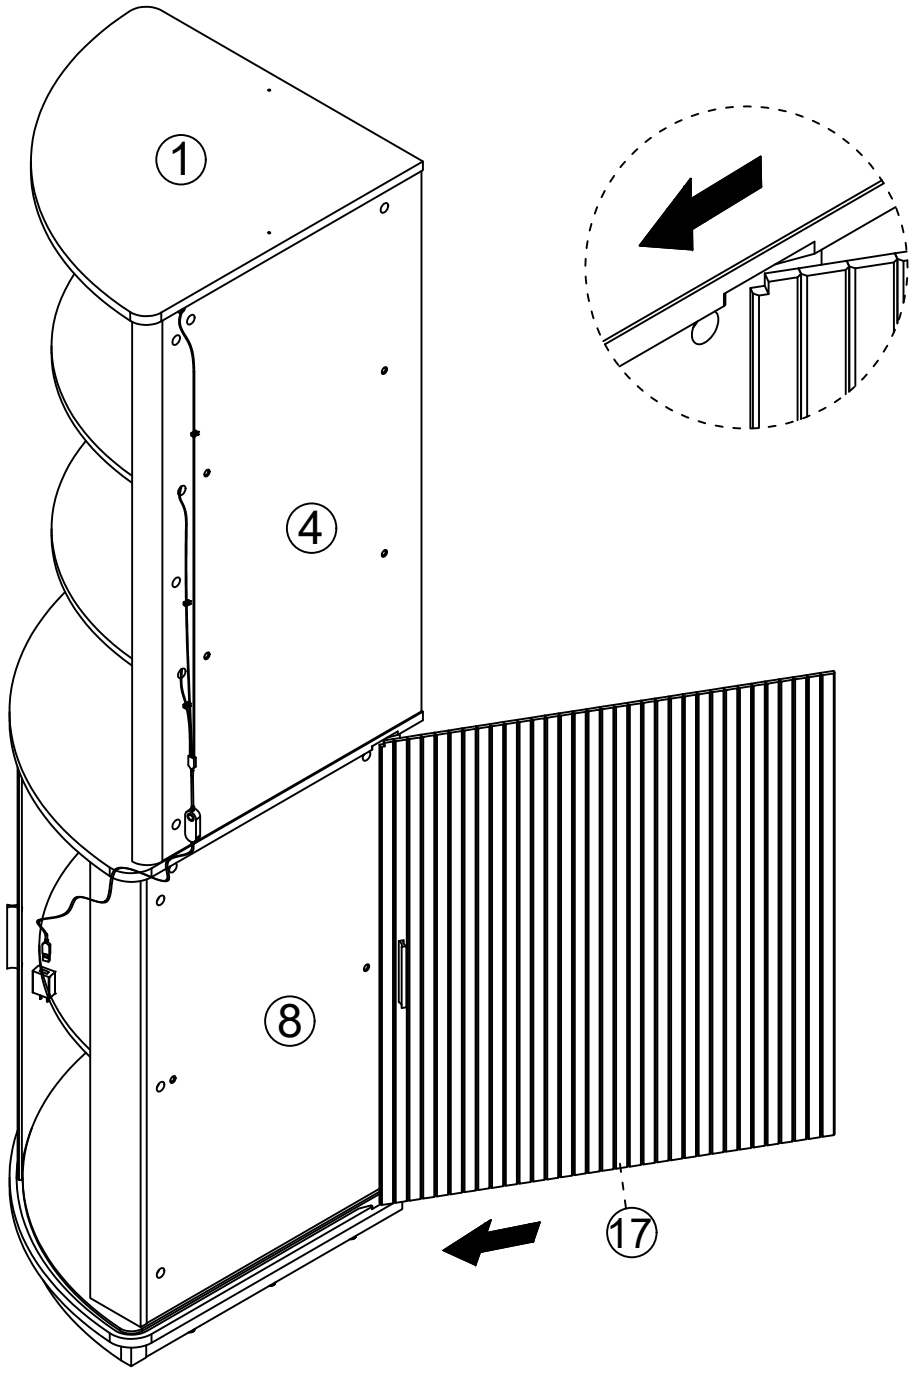


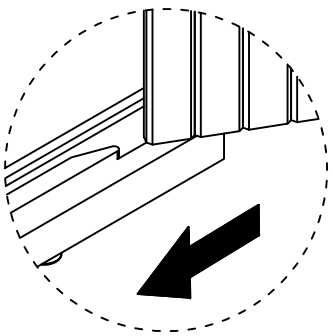


STEP27

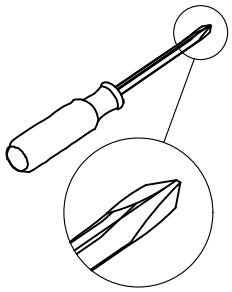

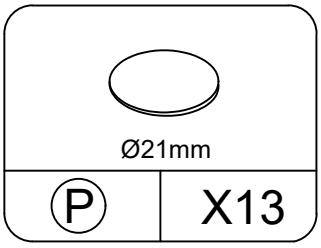


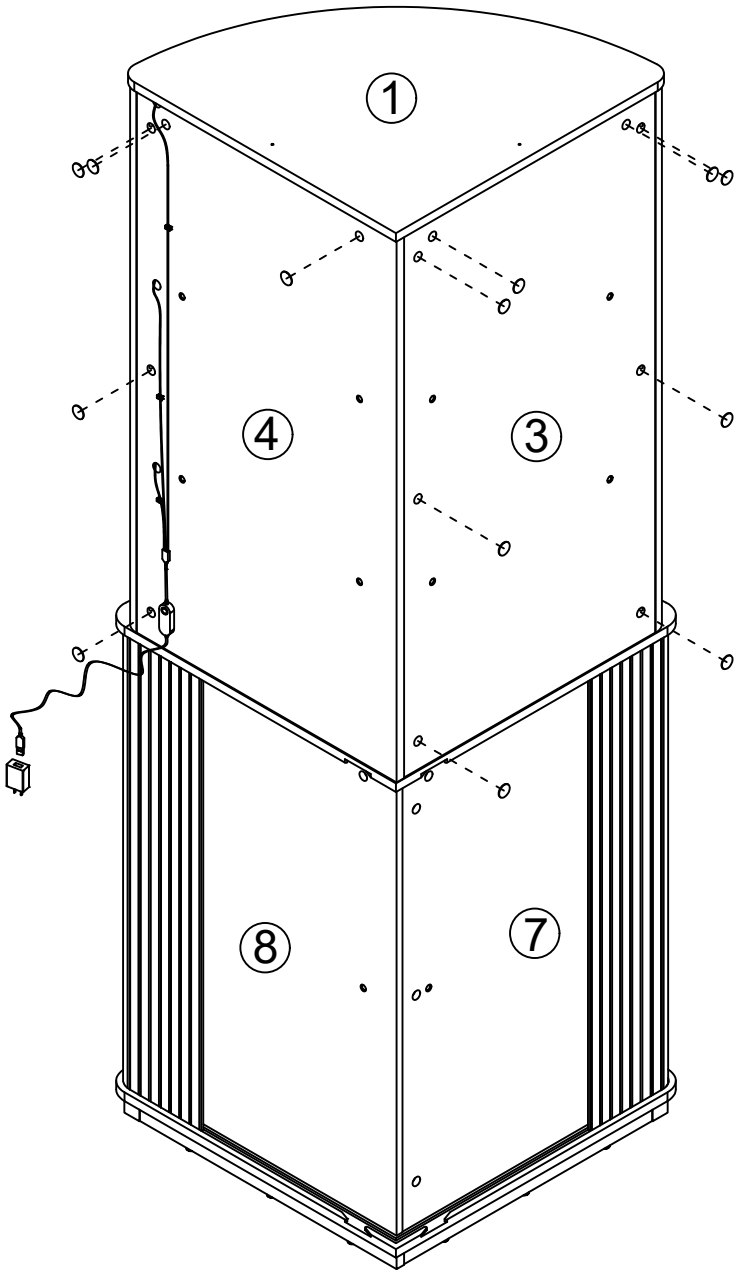


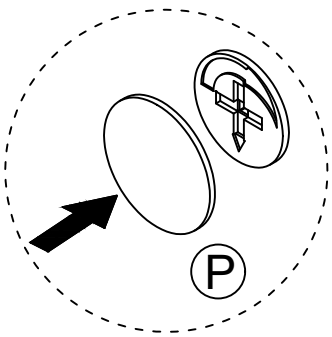


In order to make the product more beautiful, please paste hardware P on the exposed holes.

STEP28

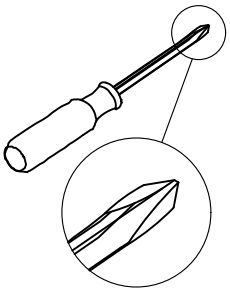


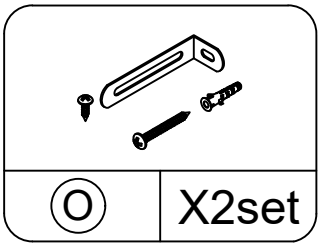


Install the tipping restraint hardware

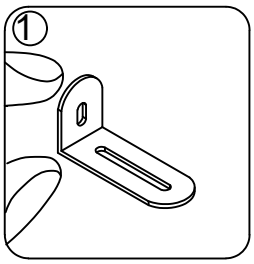


1.make mark on the wall

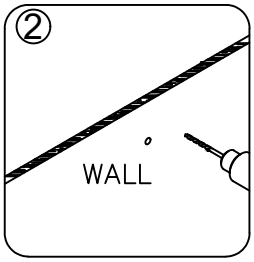

2.drill two Ø6 holes on the wall

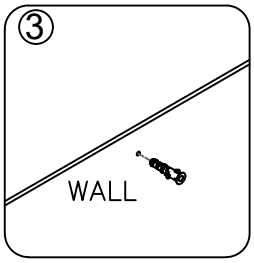

3.put two anchors in the holes

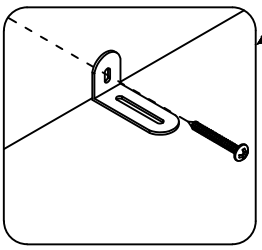

4.fix the device on the wall by the long screws

