
ASSEMBLY INSTRUCTIONS

MODEL : BD908-FS

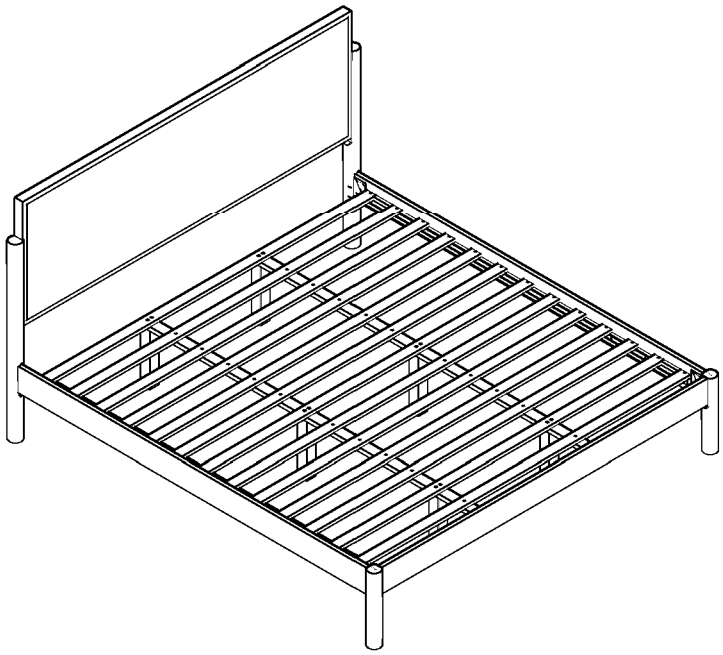

COMPONENT


Headboard - 1 pc. (1)	Headboard Leg (Left) - 1 pc. (2L)	Headboard Leg (Right) - 1 pc. (2R)	Footboard - 1 pc. (3)	Footboard Leg (Left) - 1 pc. (4L)	Footboard Leg (Right) - 1 pc. (4R)	Side Rail - 2 pcs. (5)
Center Rail - 2 pcs. (6)	Center Leg - 6 pcs. (7)	Slats - 13 pcs.(1set) (8)				

HARDWARE


Allen Key M4 (Long Ball Head) - 1 pc. (A)	Allen Key M5 - 1 pc. (B)	JCBB Bolt M8 x 40mm - 4 pcs. (C)	JCBC Bolt M6 x 50mm - 12 pcs. (D)	JCBC Bolt M6 x 40mm - 4 pcs. (E)	Wood Screw M3.5 x 16mm - 2 pcs. (F)	Wood Screw M4 x 25mm - 46 pcs. (G)
Wood Dowel M8 x 30mm - 4 pcs. (H)	M6 Spring Washer - 4 pcs. (I)					

ASSEMBLY INSTRUCTIONS

STEP 1 :

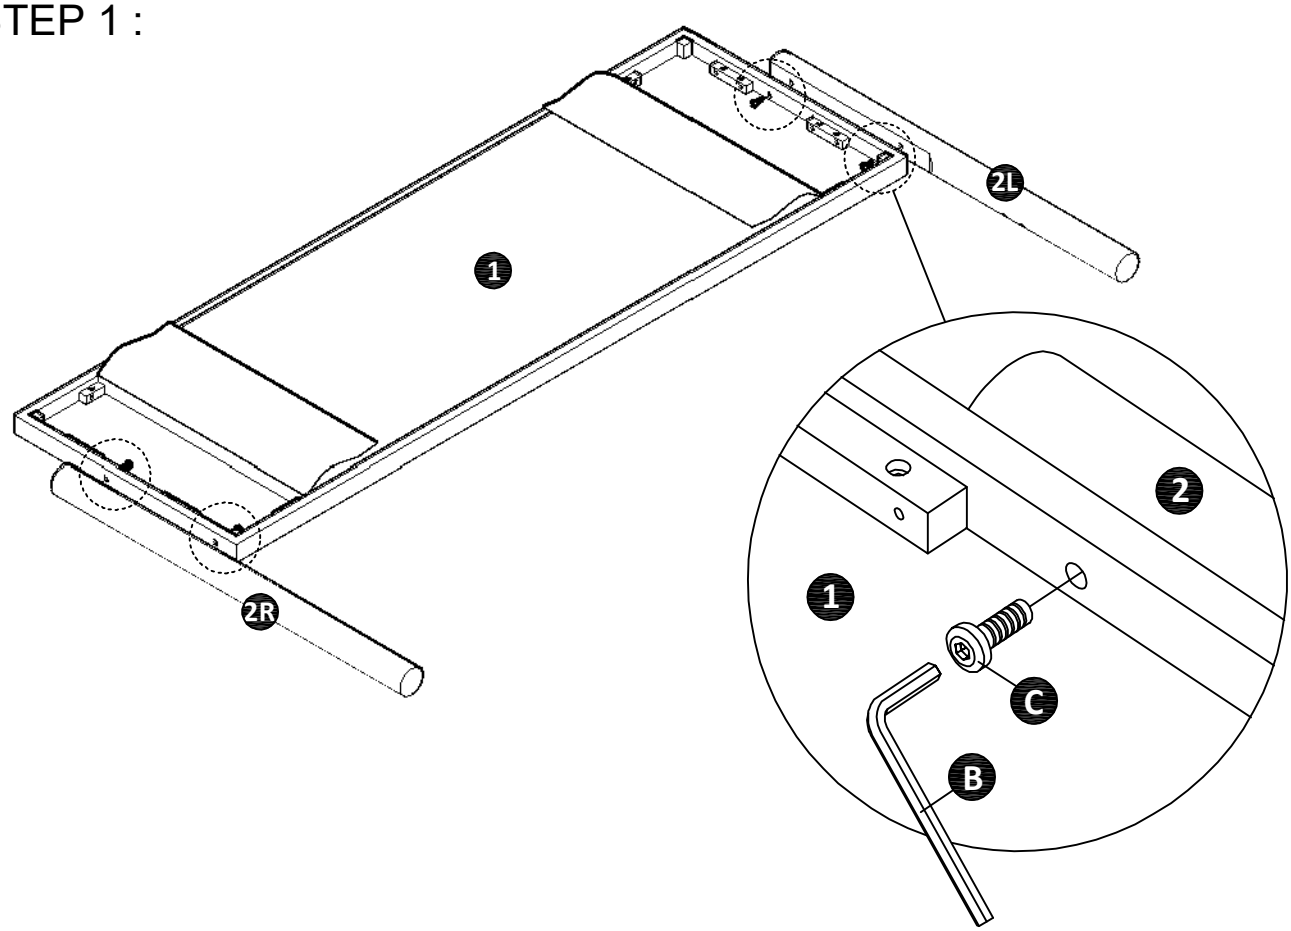


STEP 2 :

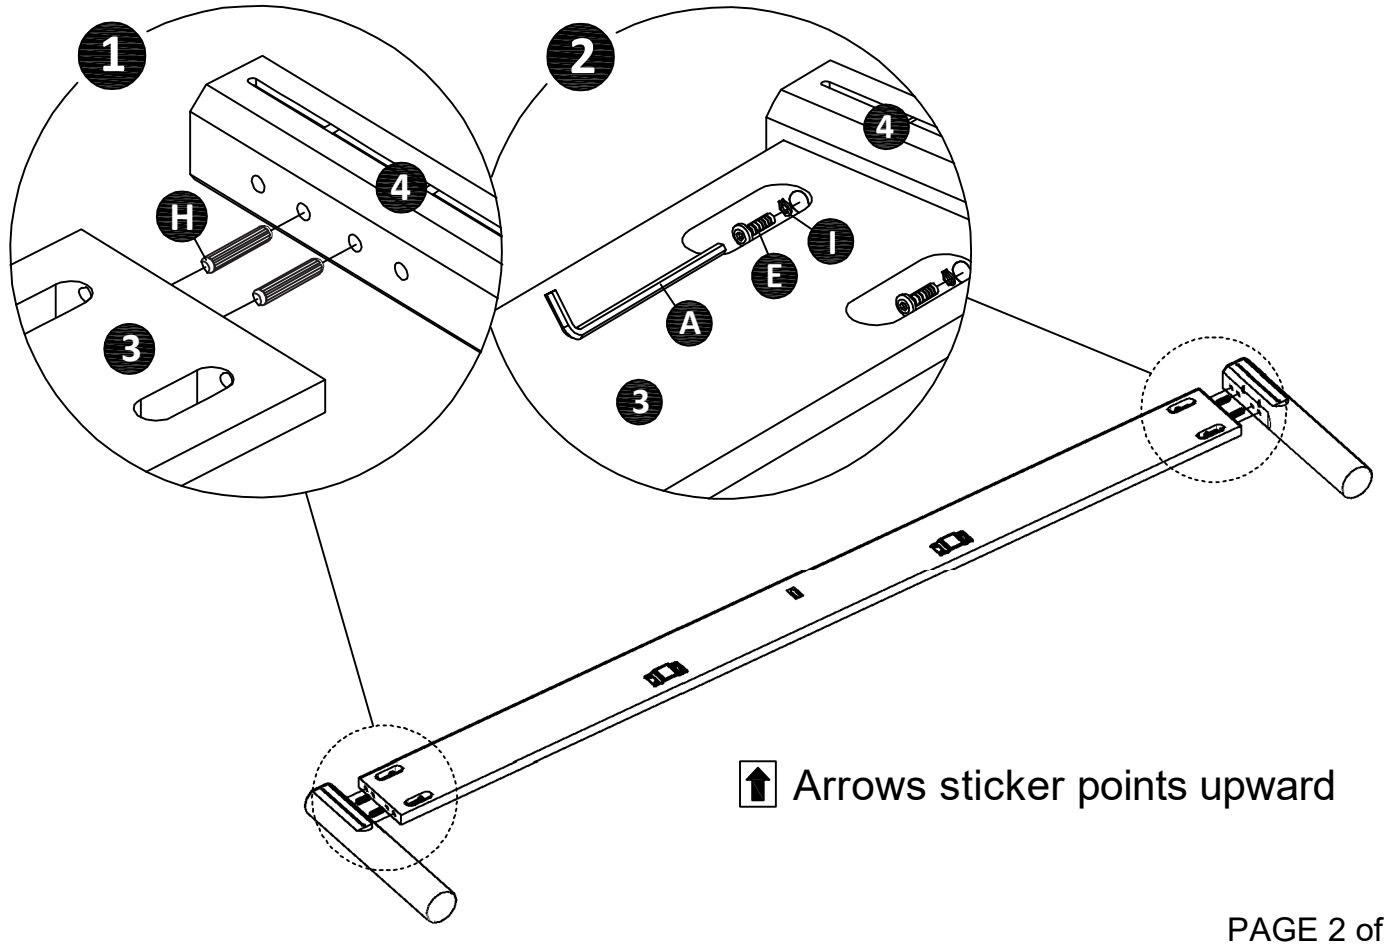


ASSEMBLY INSTRUCTIONS

STEP 3 :

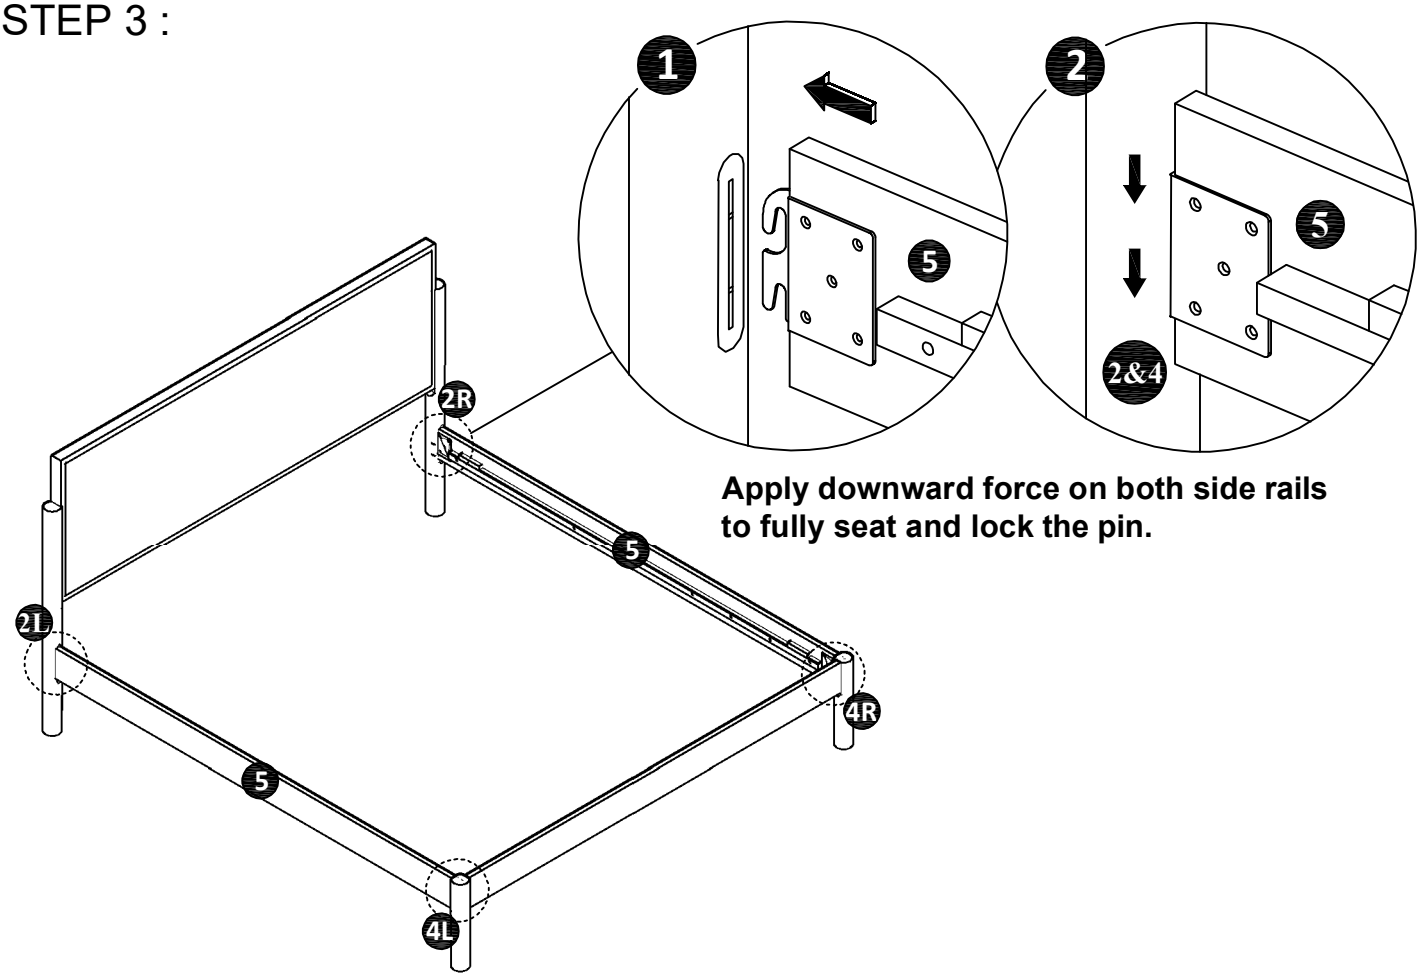


Apply downward force on both side rails to fully seat and lock the pin.

STEP 4 :

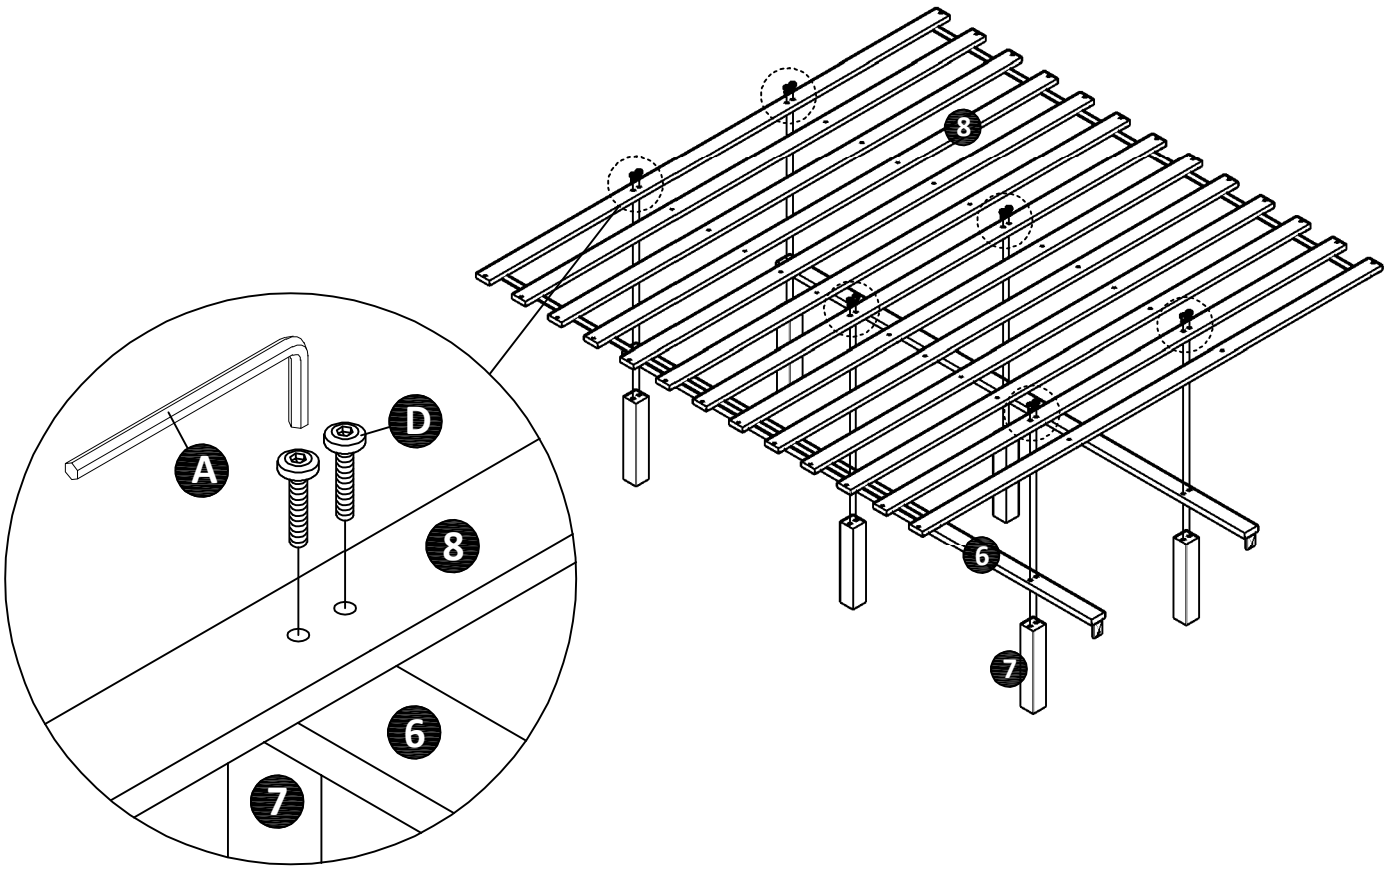


ASSEMBLY INSTRUCTIONS

STEP 5 :

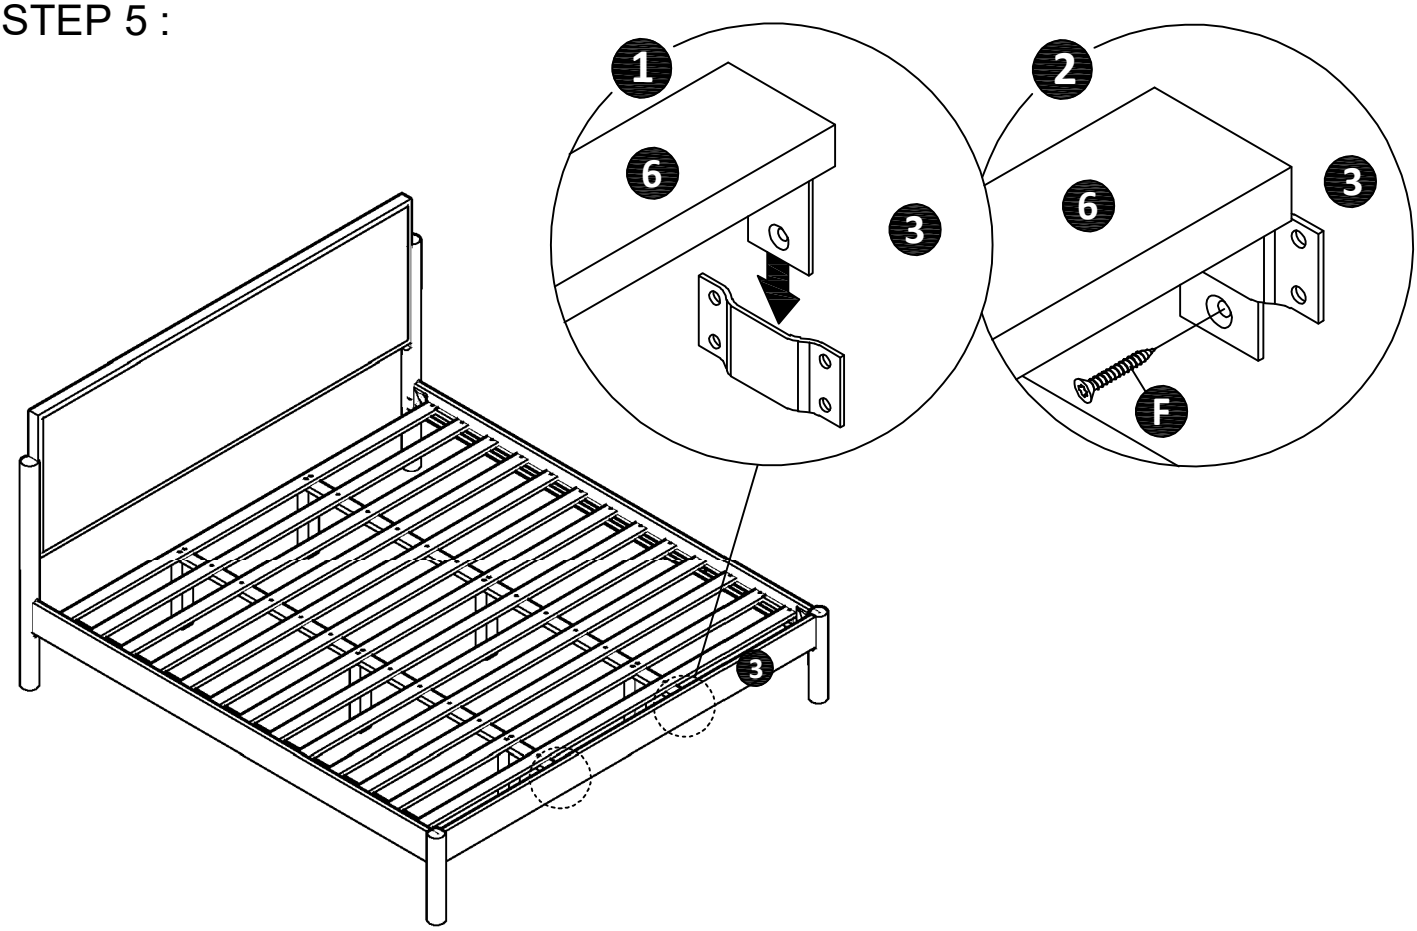

STEP 6 :

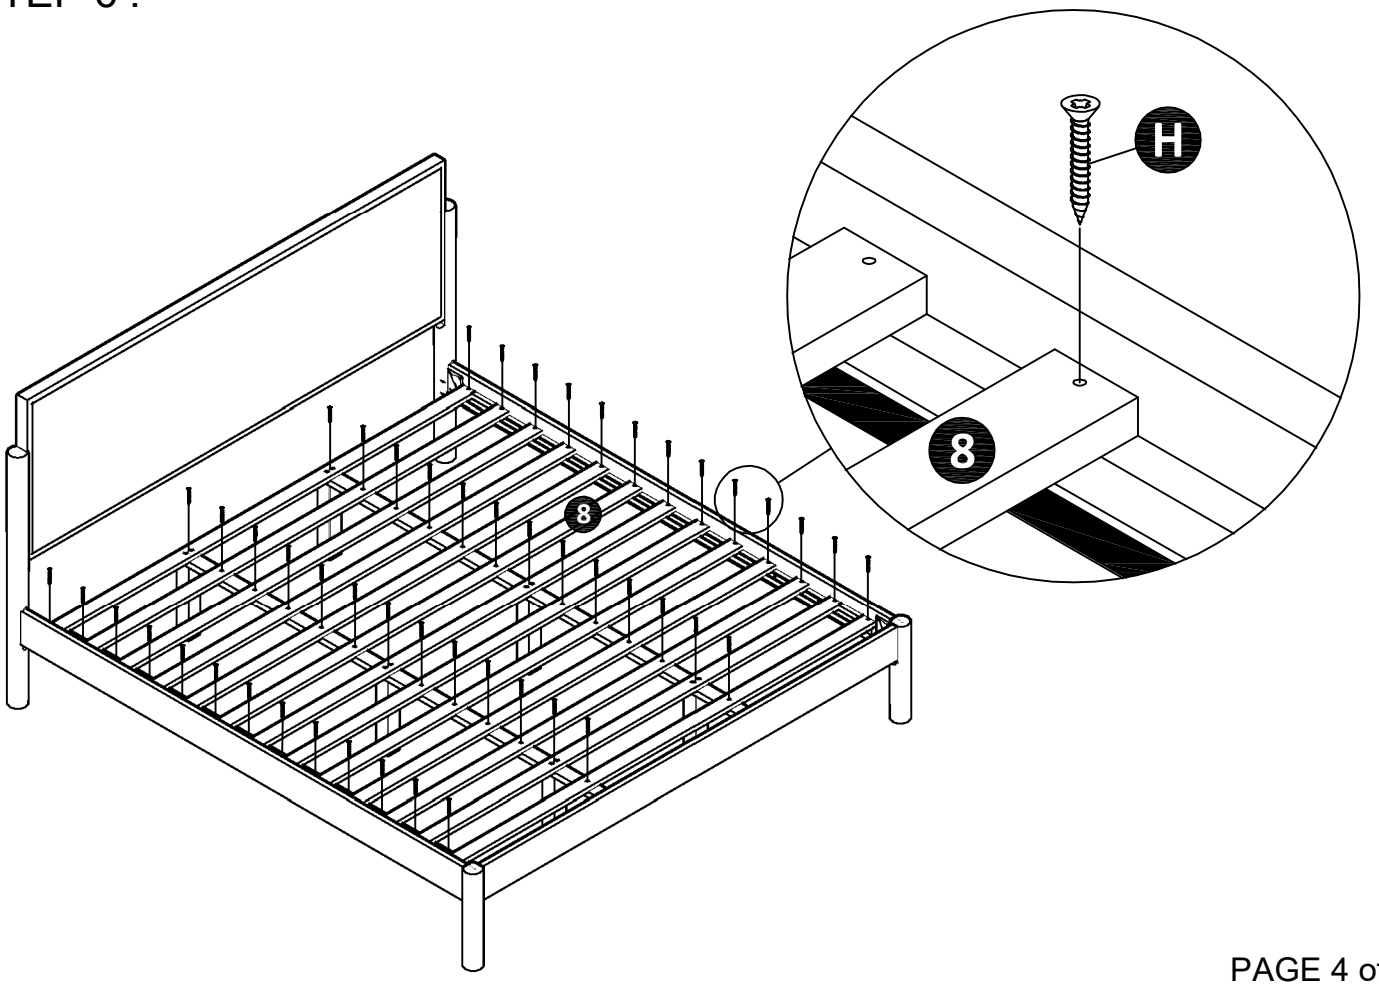

COMPLETE VIEW

IMPORTANT
Please lift up the bed to move with 2 or more people.
DO NOT DRAG THE BED!

