
ASSEMBLY INSTRUCTION

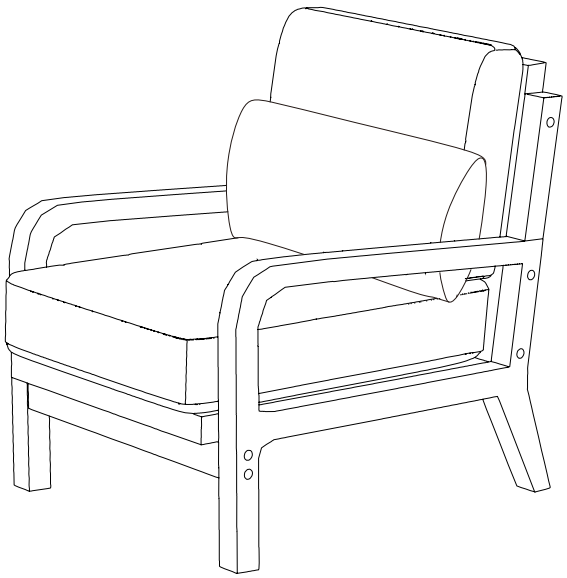

PARTS LIST

A x1	B x1	C x1	D x2
E x1	F x1	G x1	

HARDWARE LIST

1 1/4*4cm x10	2 5/16*8cm x2	3 x12	4 40mm*100mm x1
5 x2	6 x10		


BEFORE ASSEMBLY


Open up Velcro of Non-Woven Fabric cover
on the bottom to revove hardware legs and parts.


1、Please open the black woven fabric with Velcro closure on the bottom of the frame then cut off the black straps before removing the parts for assembly.

2、After removing the cushion from the compress bag, please allow air to flow through the cushion for few days. You can try to fluff cushion by push in and push out on all four sides of the cushion. Hitting the top/front of the cushion
with your hand to fluff them after installation.

3、Please allow at least 72 hours for the cushions to recover to its natural state after removing from the package.

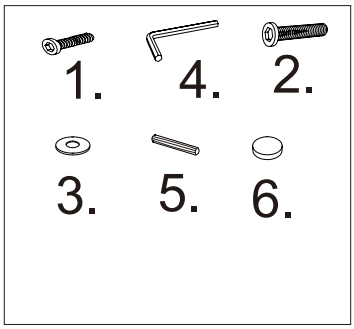


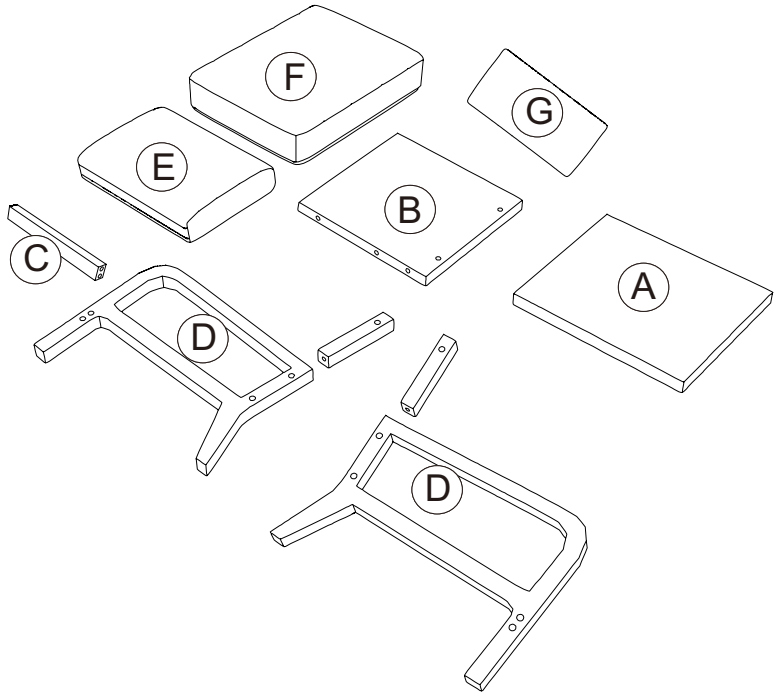

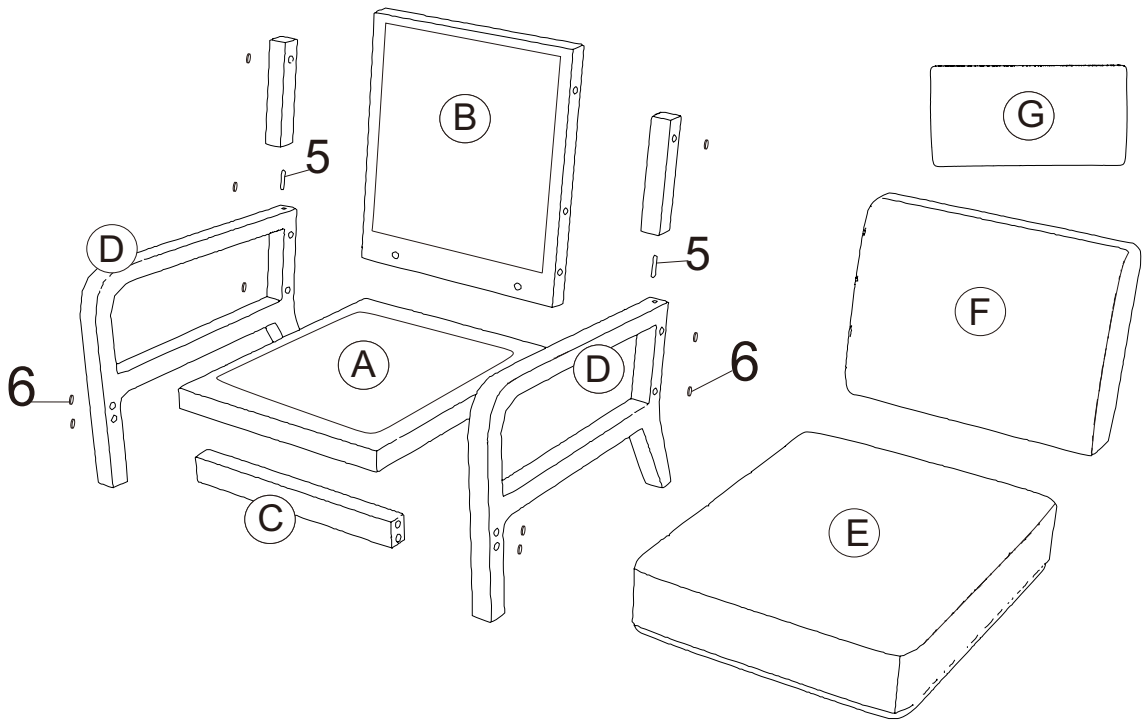


SOFA ASSEMBLY INSTRUCTION


Step1

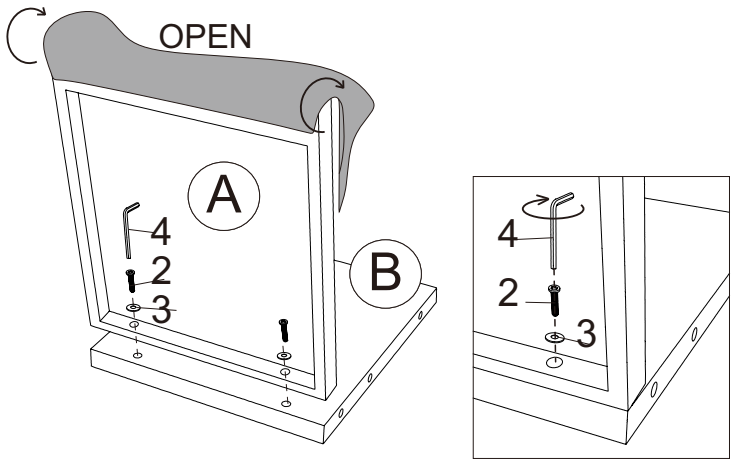


Step2

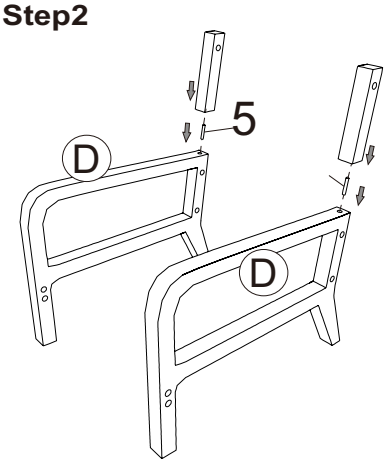


Insert the wood dowel.

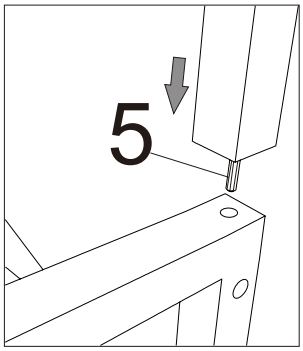


Step3

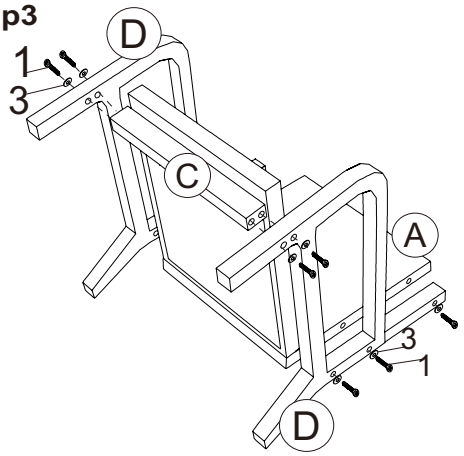

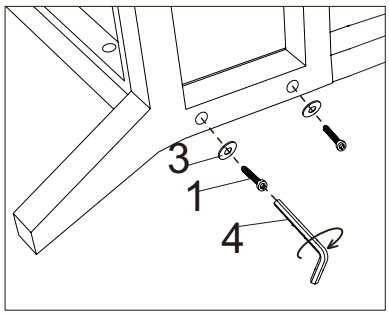


At this step, assemble the bolts without tightening them too much for now. Keep the bolts loose.

Step4

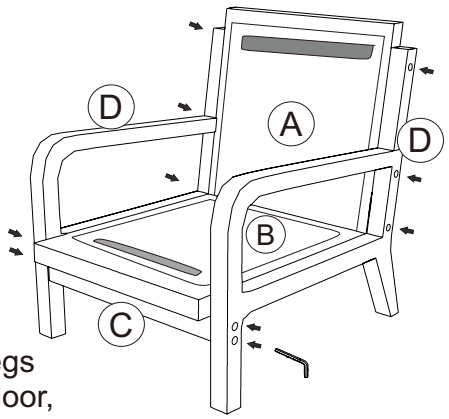


Level the chair, ensure the chair legs are stable on the floor, then tighten the bolts.

Step5

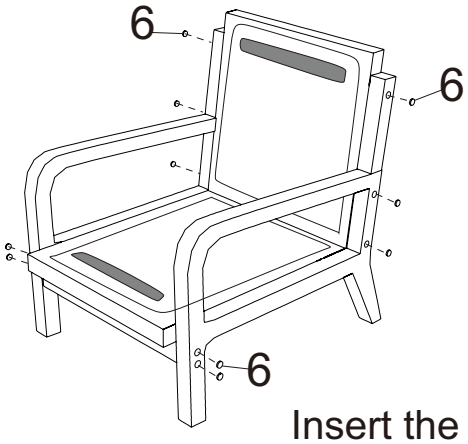


Insert the wood plugs.

Step6

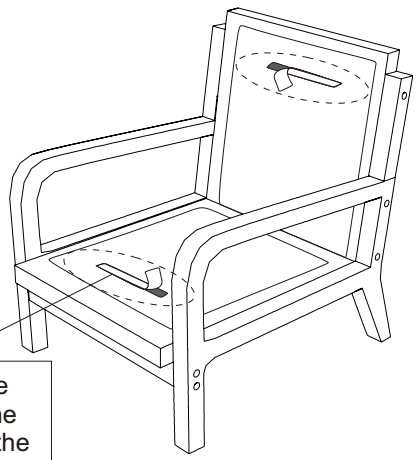

Please kindly remove the black cover tape from the velcro before you place the cushion on top.

Step7

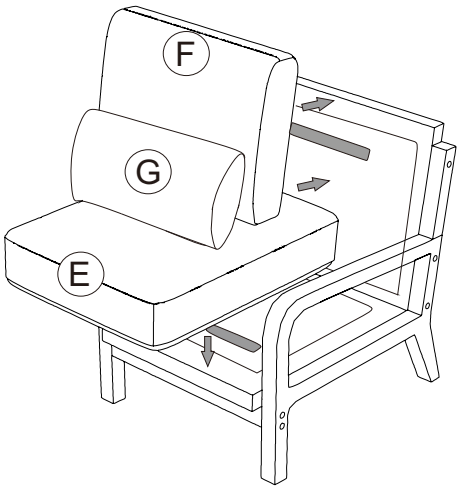

Step8

