INSTRUCTIONS

Included for you

Shelf*1



Wooden bracket*1



plastic anchors*4



screws*4



plastic anchors for gypsum walls*4

1 for spare parts

STEP1:Tools Needed for Installation

Power Drills

Screwdriver

Spirit level

Hammer

Pencil

STEP2:Locate Install Space

Place bracket against the wall in the desired position and mark holes where the holes in the bracket meet the wall.Level should be used to insure bracket is horizontal.

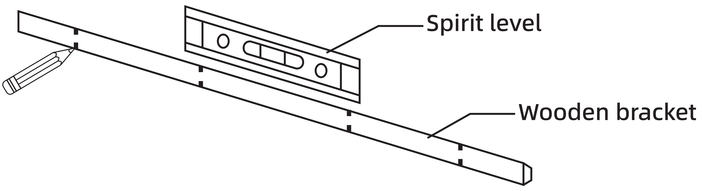

STEP3:Install Wooden Bracket to Wall

Using a power drill and 13/64" drill bit,drill a hole on the wall at the pencil mark insert the anchor into the hole tap the anchor flush with the wall. After all the anchors are secured in place positlon bracket to be mounted to the wall. Using a power drill with Phillips tip or Philips screw-driver, place screws provided in-toeach anchor and tighten until they are firm to the face of the bracket.

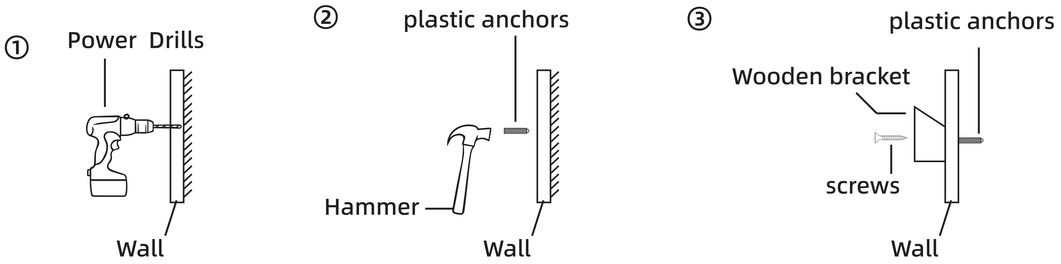

NOTE: To ensure solidity and safe use in different wall type, we give 2 more spare screws, you can in the reinforcement at the right distance.

STEP4:

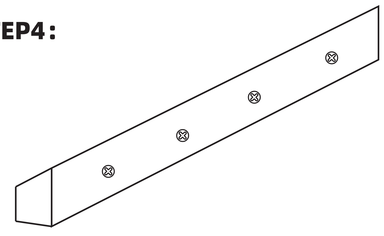

Make sure the mounted bracket is secure and in an exact level line. Otherwise the mantel will not hang properly.

STEP5: Hang the mantel on the bracket.

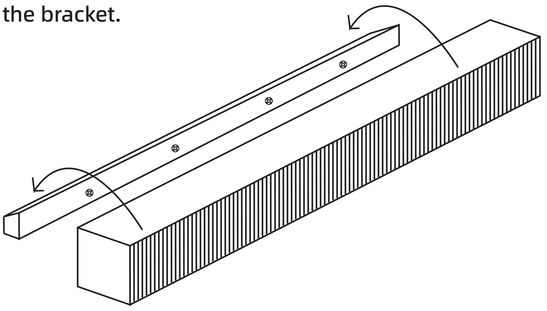

NOTE: To ensure solidity and safe use in different wall type, we give 2 more spare screws, you can in the reinforcement at the right distance.