
RPC70MT42

Assembly Instructions

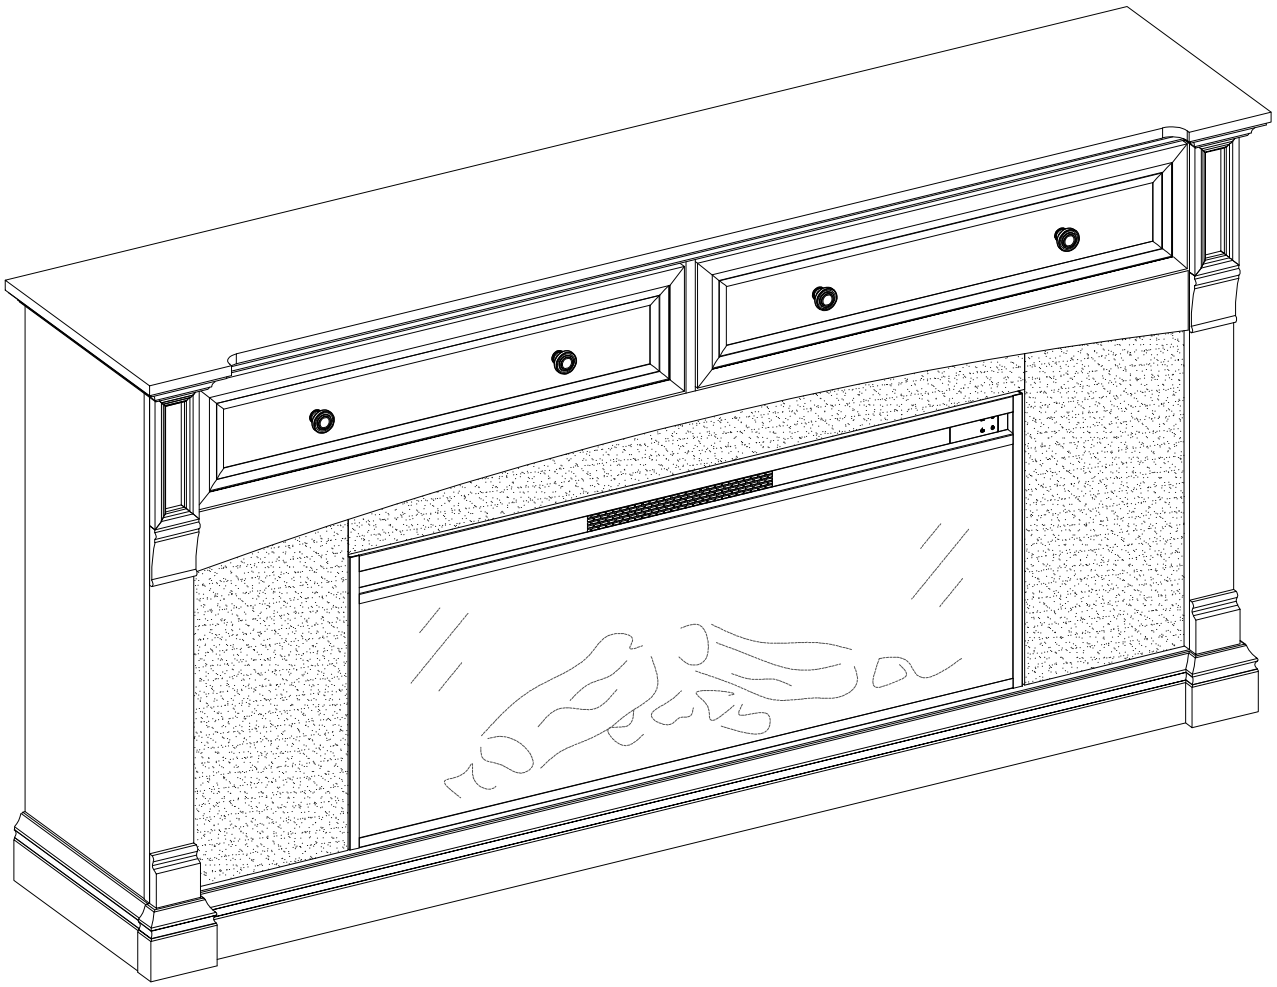

Date 2026-7-22 Rev.01-A


General Assembly Guidelines

I. Ensure that all parts and hardware are available before beginning assembly.


II. Follow each step carefully to ensure the proper assembly of this product.

III. Two people are recommended for ease in the assembly of this product.


IV. A Phillips head screwdriver is required for the assembly of this product .

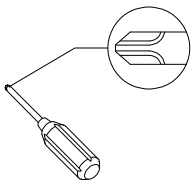

V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

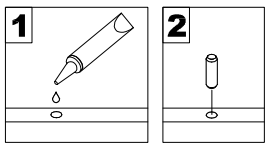

In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

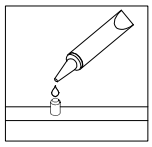


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.


2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.

3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.


4.Use the sticker to conceal the Cam.

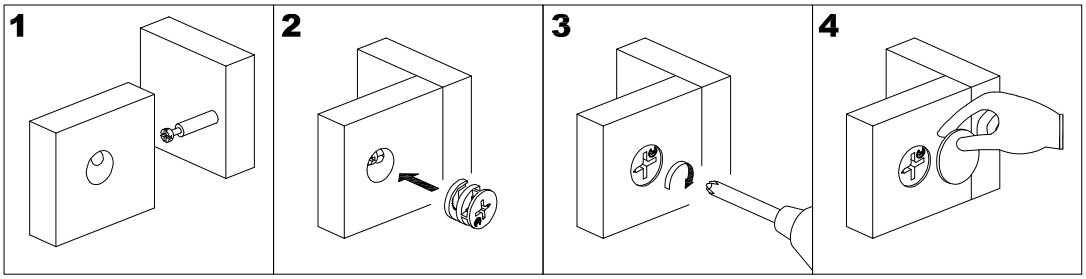






VII. Power tools should not be used to assemble this product .

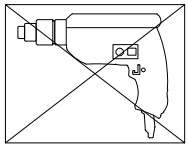




Parts List

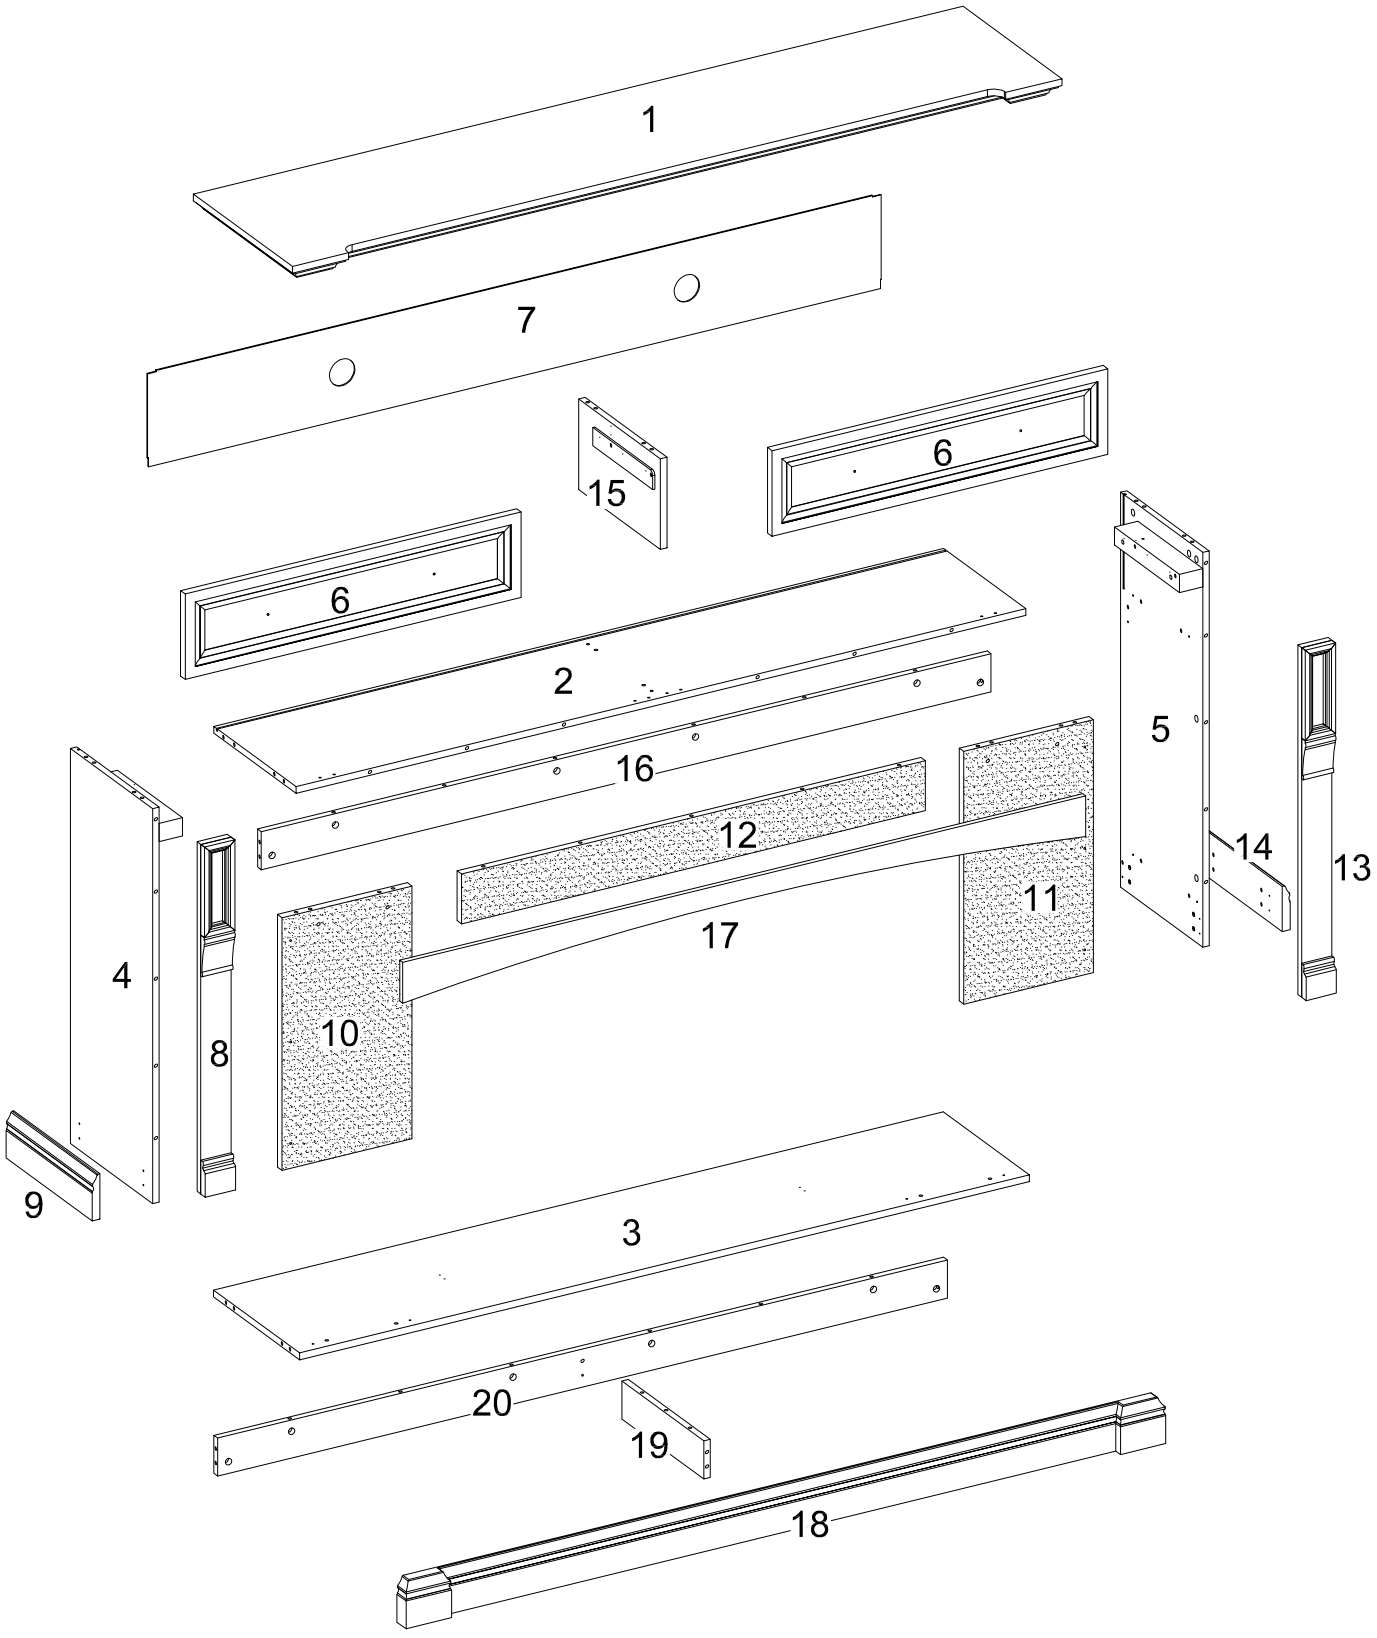


Hardware List

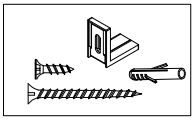A		Ø8x30mm	Wood dowel	44	pcs
B		Ø6x32mm	Cam bolt	46	pcs
C		Ø15x11mm	Cam lock	46	pcs
D		Ø30mm	Sticker	46	pcs
E		Ø4x25mm	Screw	14	pcs
F		Ø8x20mm	Wood dowel	8	pcs
G		Ø3.5x14mm	Screw	28	pcs
H			Glue	1	pc
I		1/4"x13mm	Bolt	8	pcs
J			Plastic wedge	10	pcs
K		Ø3x17mm	Flat-head screw	10	pcs
L		M 4	Hex key	1	pc
M		250mm	Plastic tracking	4	pcs
N			Hanger	4	pcs
O			Door stopper	6	pcs
P		Ø3.5x20mm	Screw	14	pcs
Q		Ø6x50mm	Screw	6	pcs
R			Knob	4	pcs
S		Ø4x16mm	Handle bolt	4	pcs
T		90x50mm	L shape bracket	2	pcs
U		Ø4x12mm	Screw	4	pcs
V		35x35mm	L shape bracket	4	pcs
W		Tipping Restraint Hardware		2	sets


Hardware List

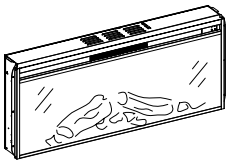X		RV42V80L-MT2	Fireplace Insert	1 pc
Y			Connector	4 pcs
Z			Plate	4 pcs
AA		30x15x10mm	L shape bracket	2 pcs
BB		1/4"x28mm	Bolt	4 pcs

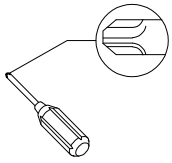


Philips head screwdriver required for assembly
(not included)


Step 1

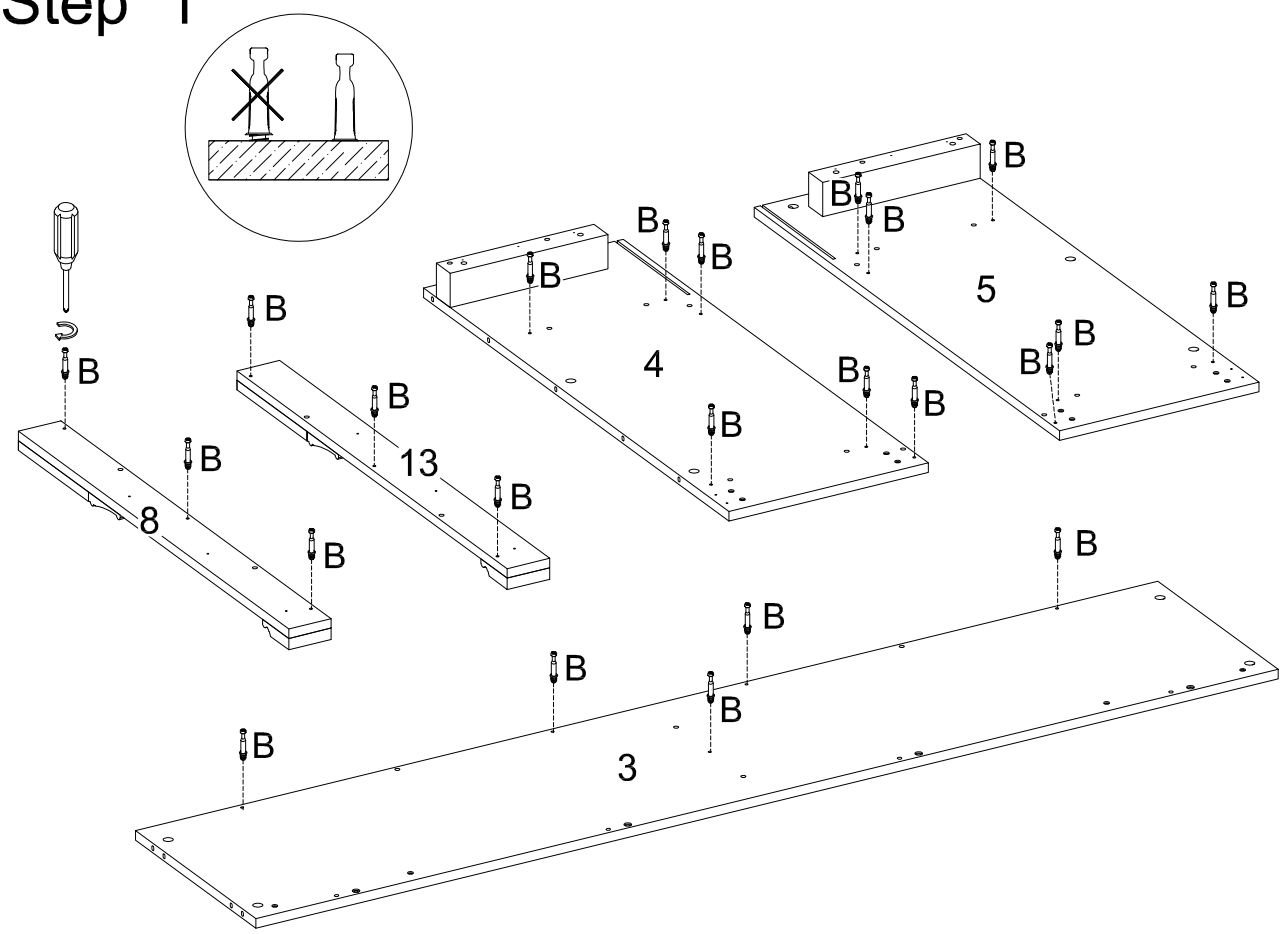


Step 2

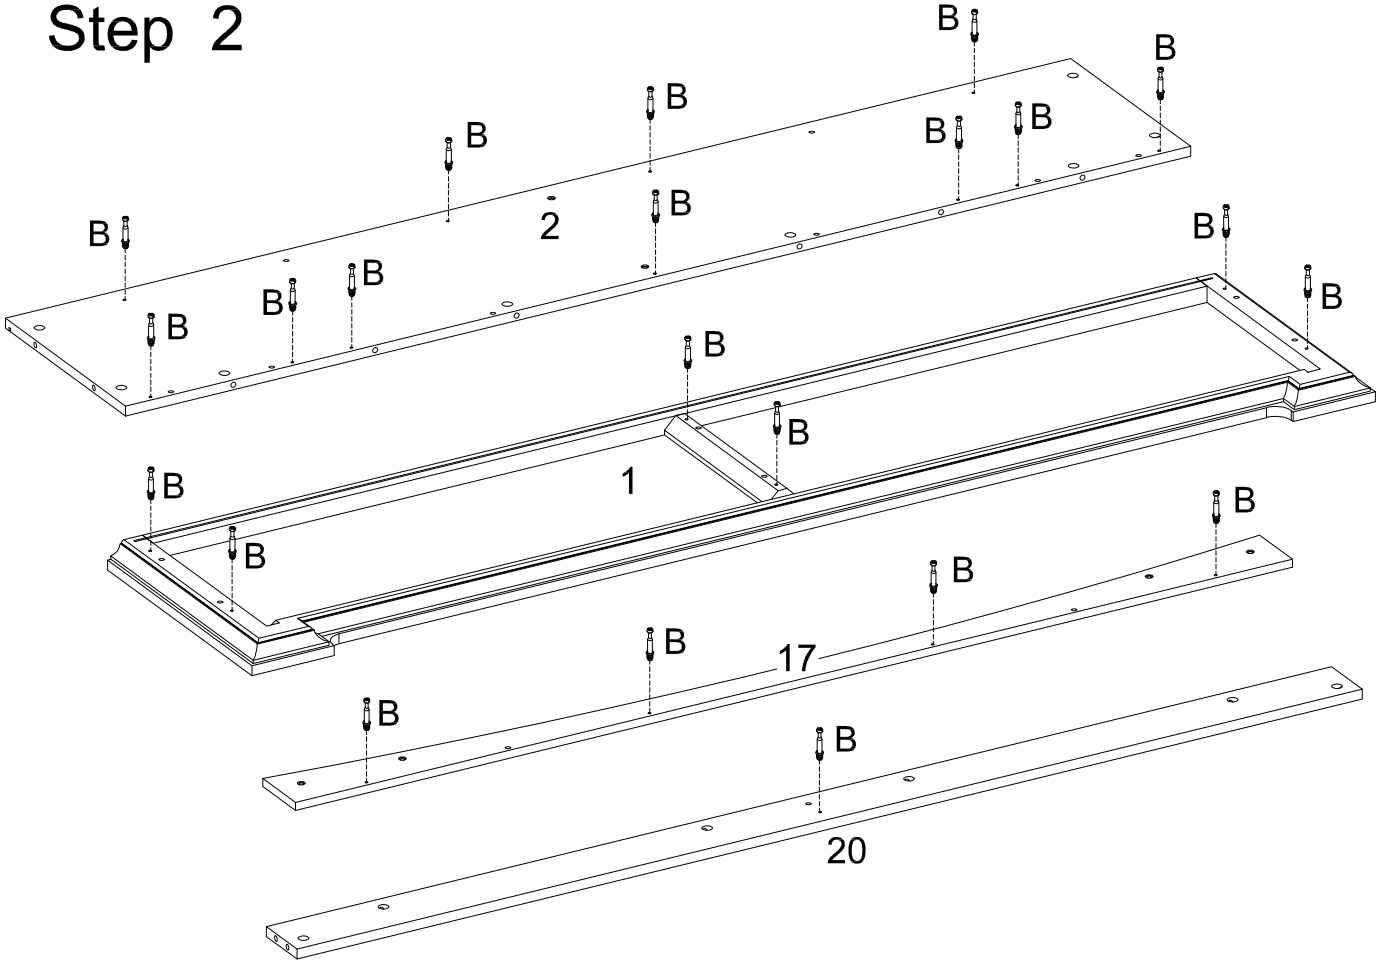



Step 3

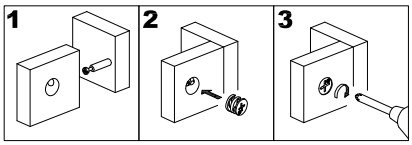

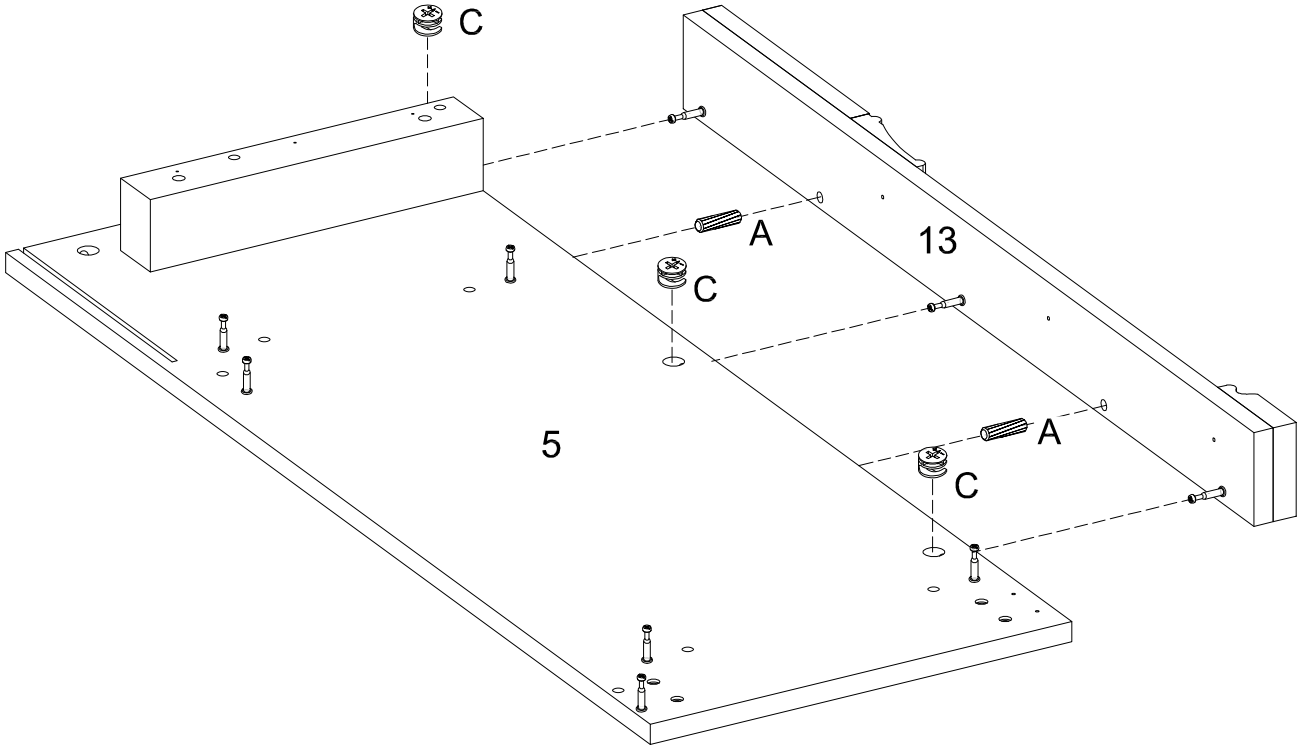


Step 4

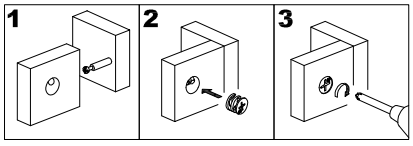


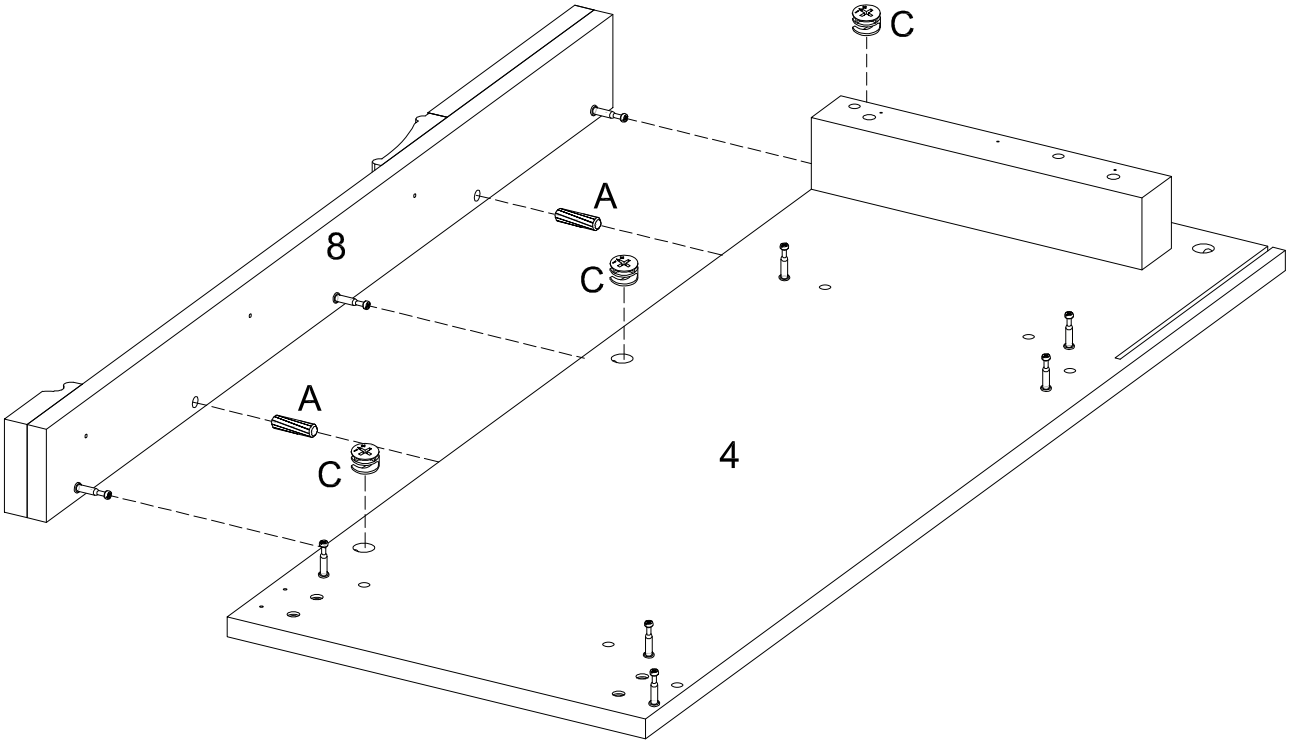


Step 5

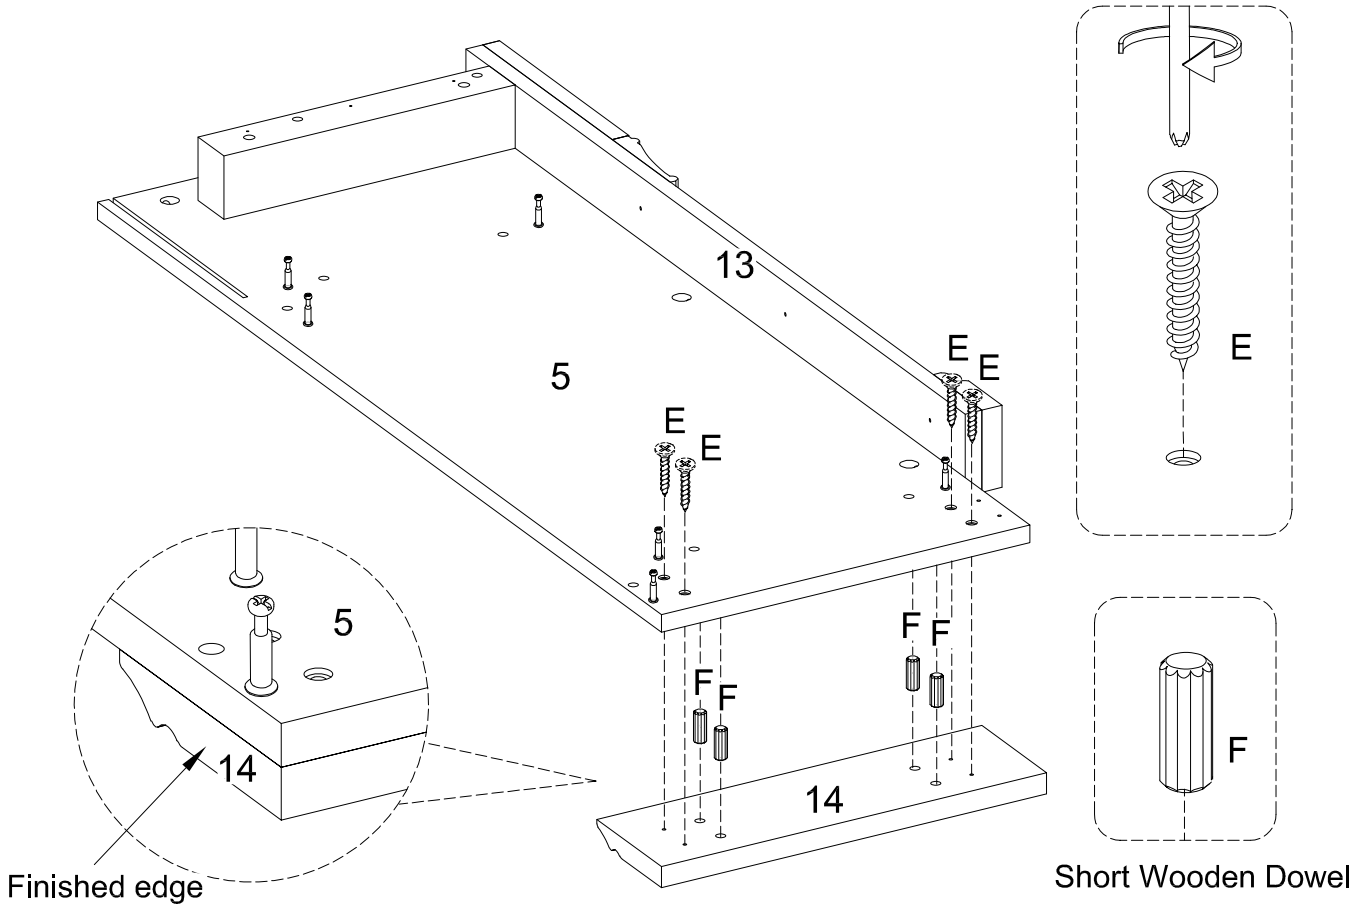
13
5
E
E
E
E
E
5
F
F
F
F
14
14
Finished edge
E
F
Short Wooden Dowel


Step 6

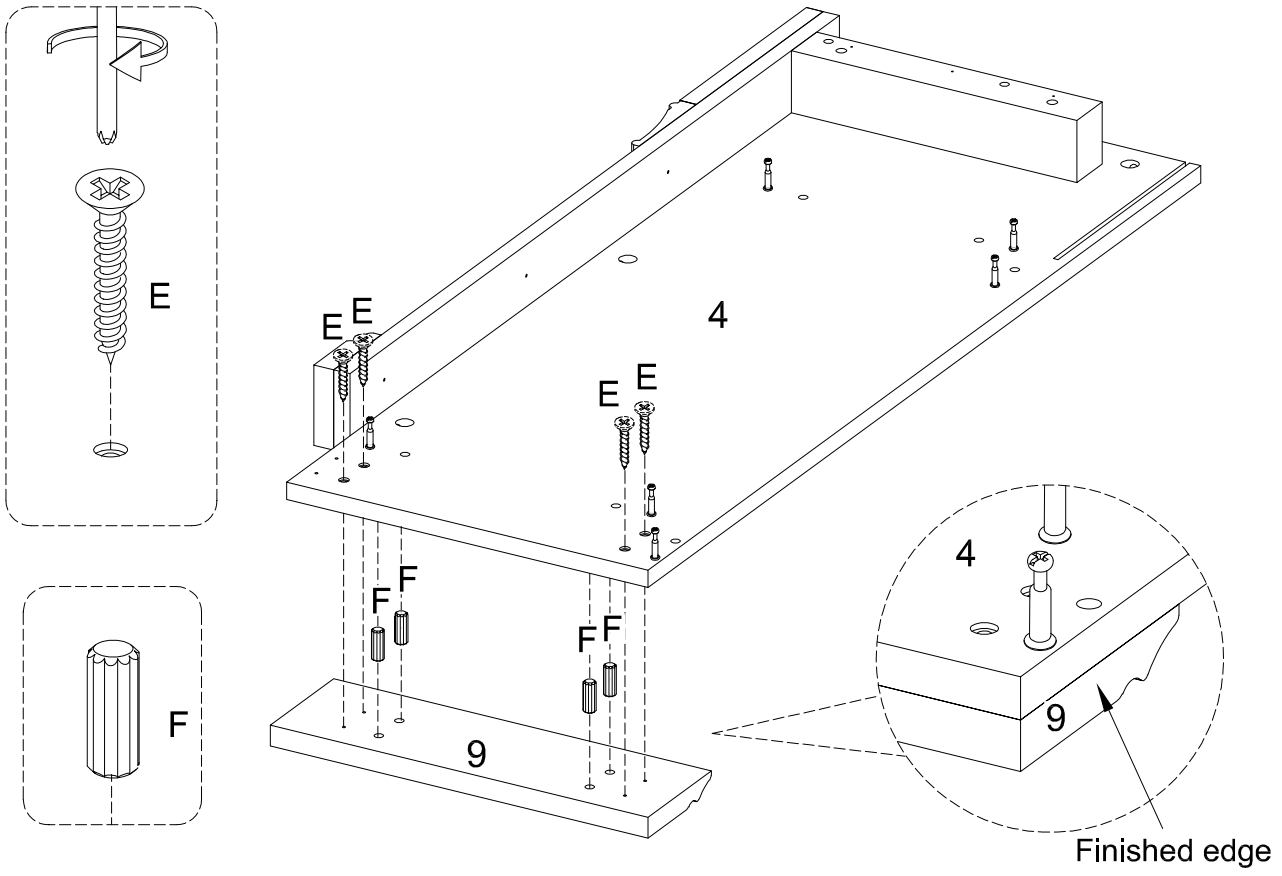
E
E
E
4
E
E
F
F
F
F
9
4
9
Finished edge
E
F


Step 7

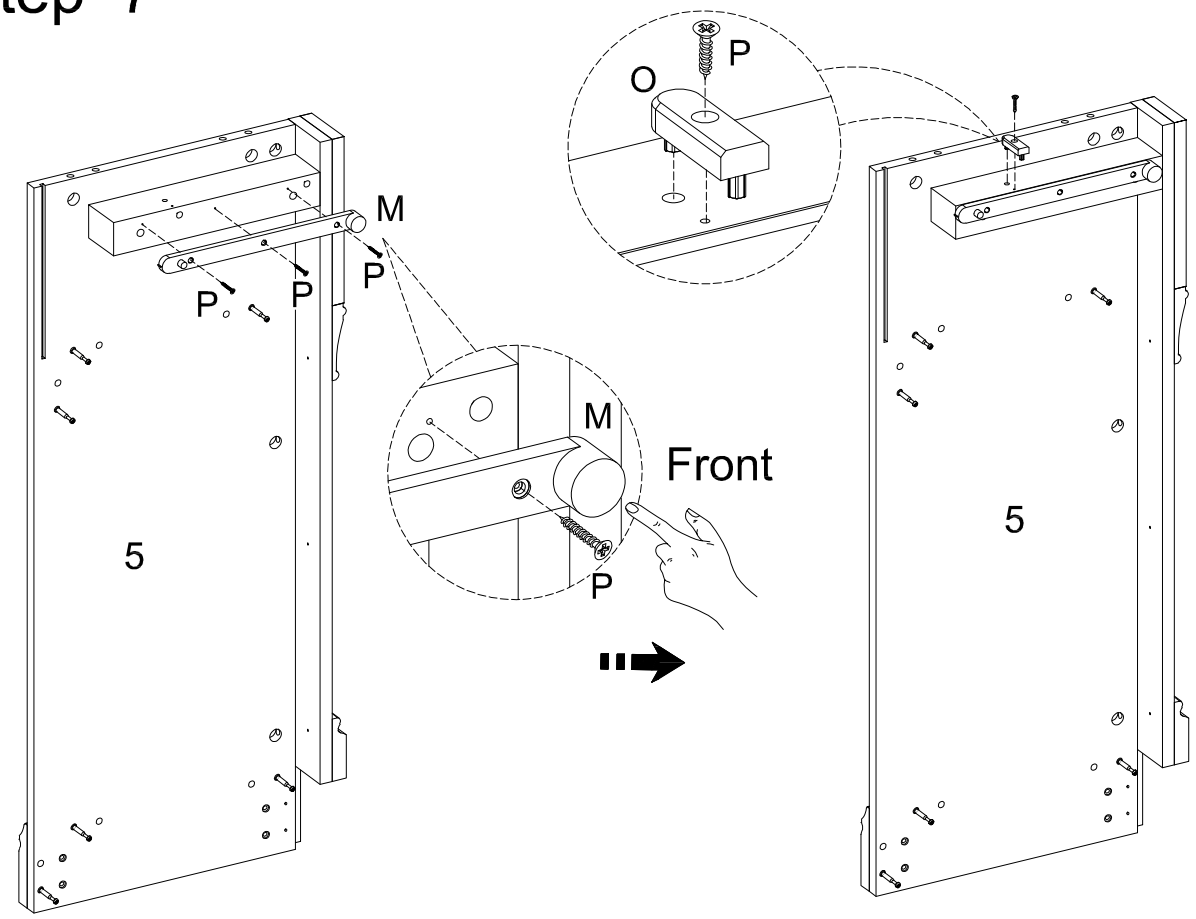


Step 8

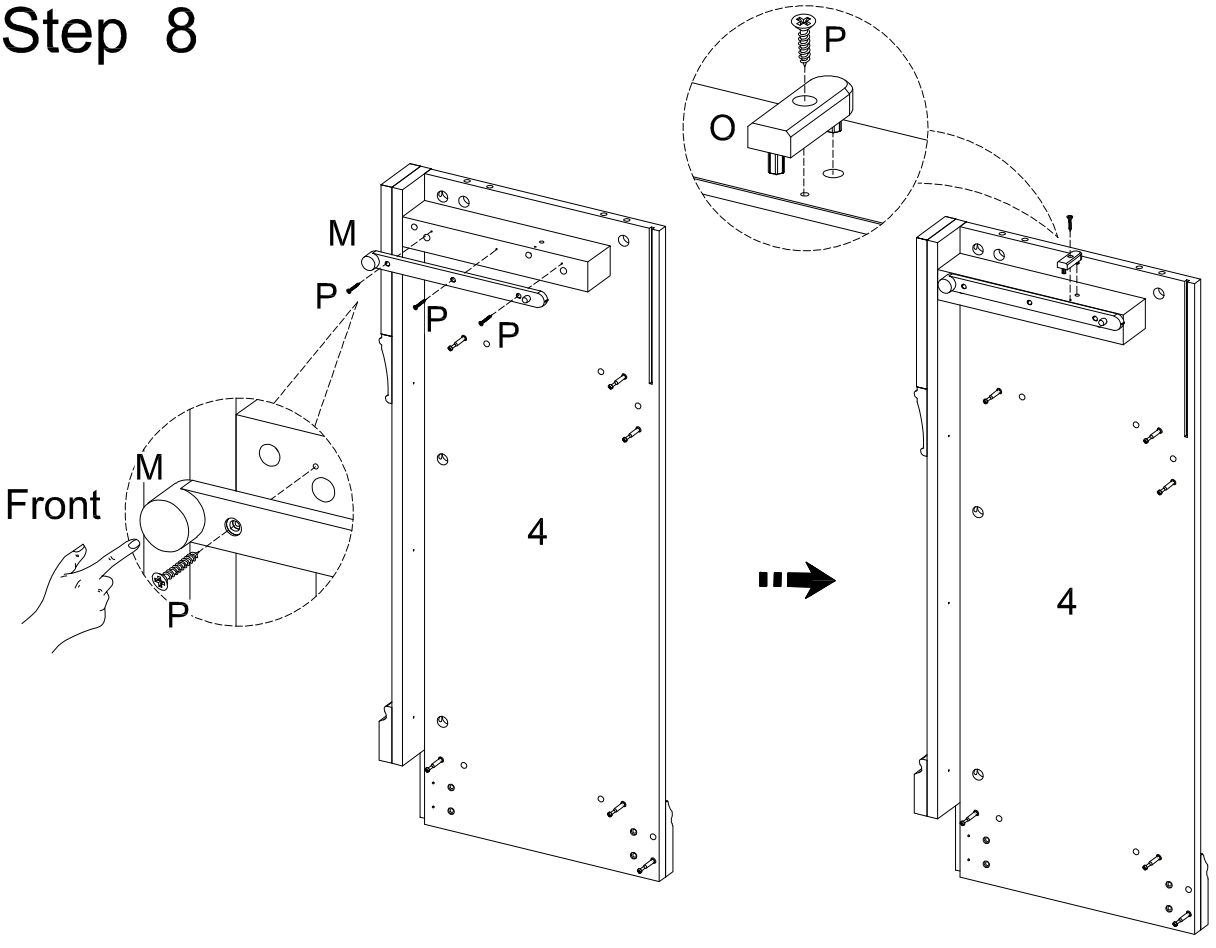


Step 9

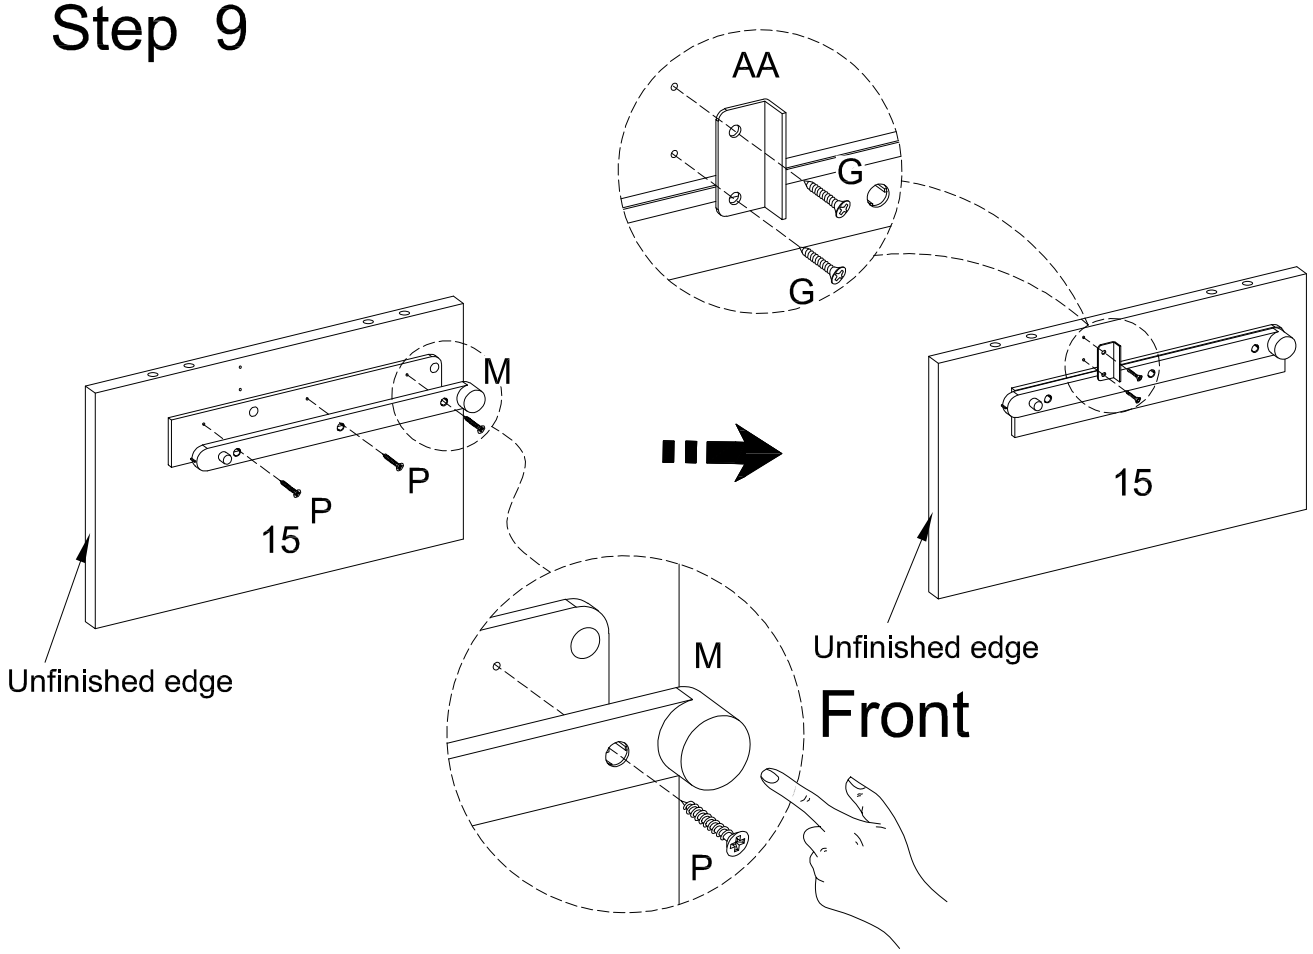


Step 10

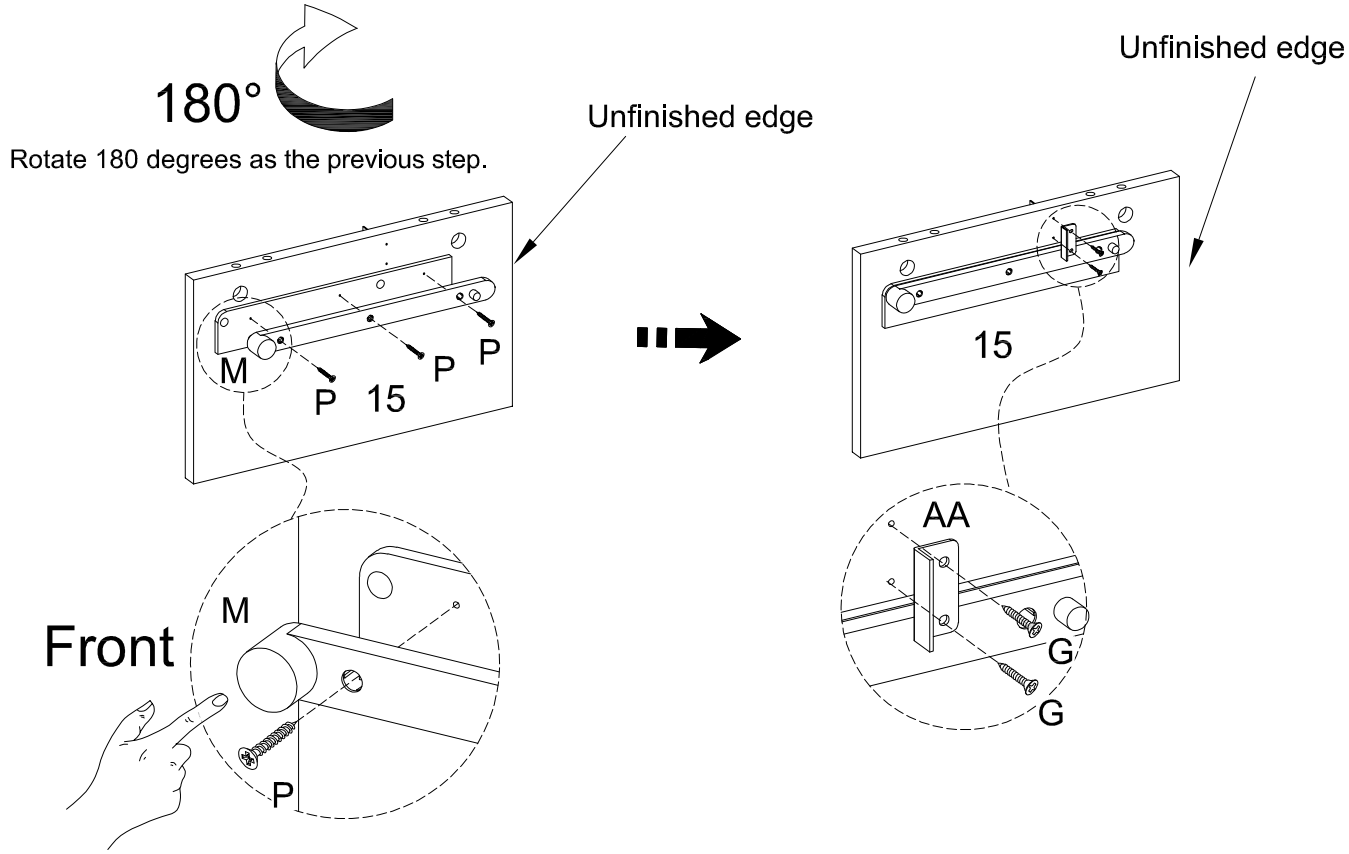


Step 11

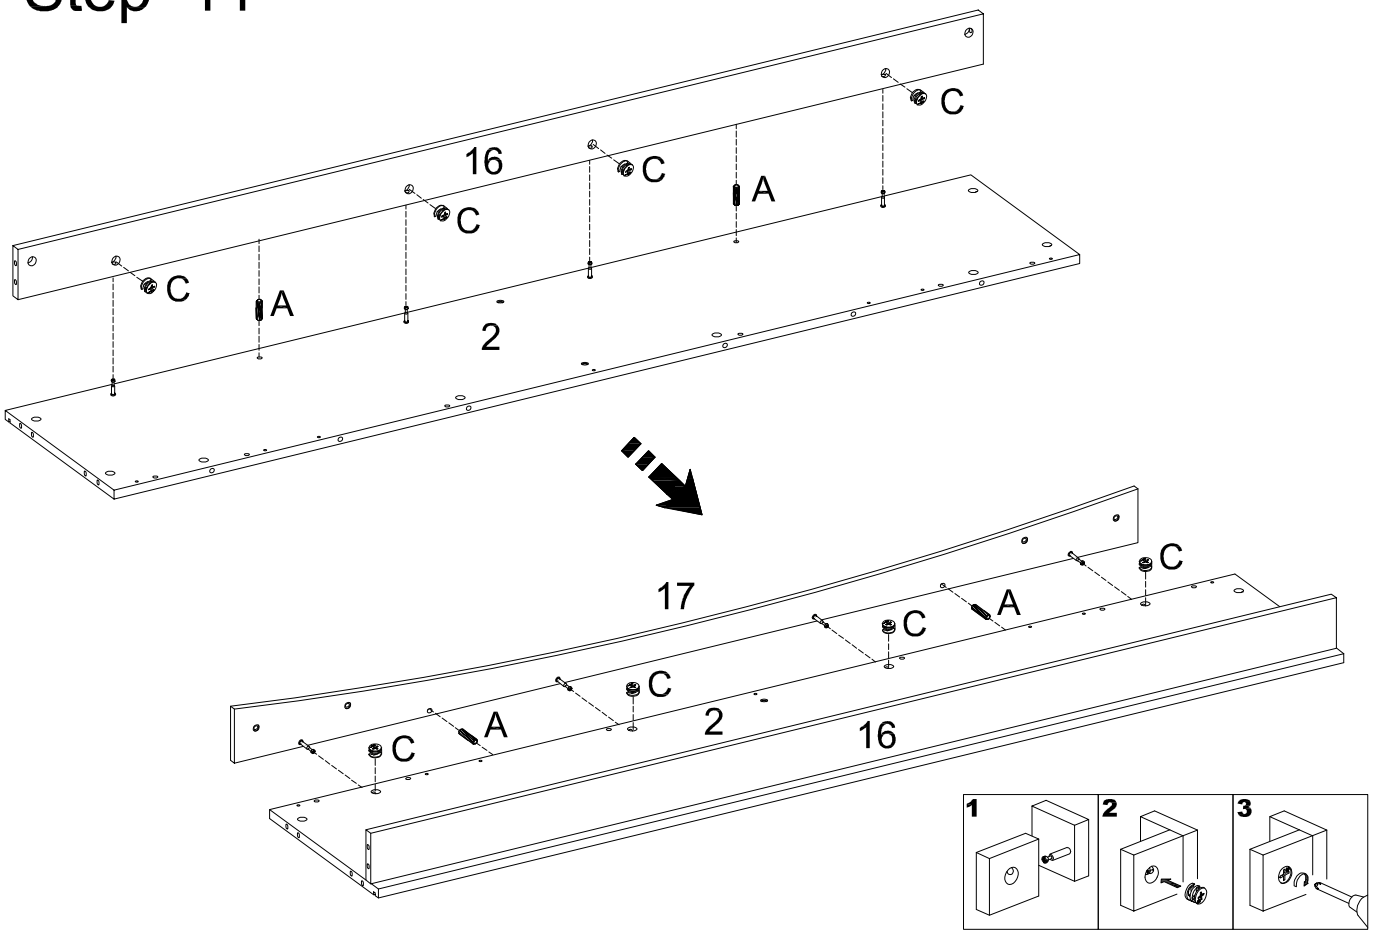

Step 12

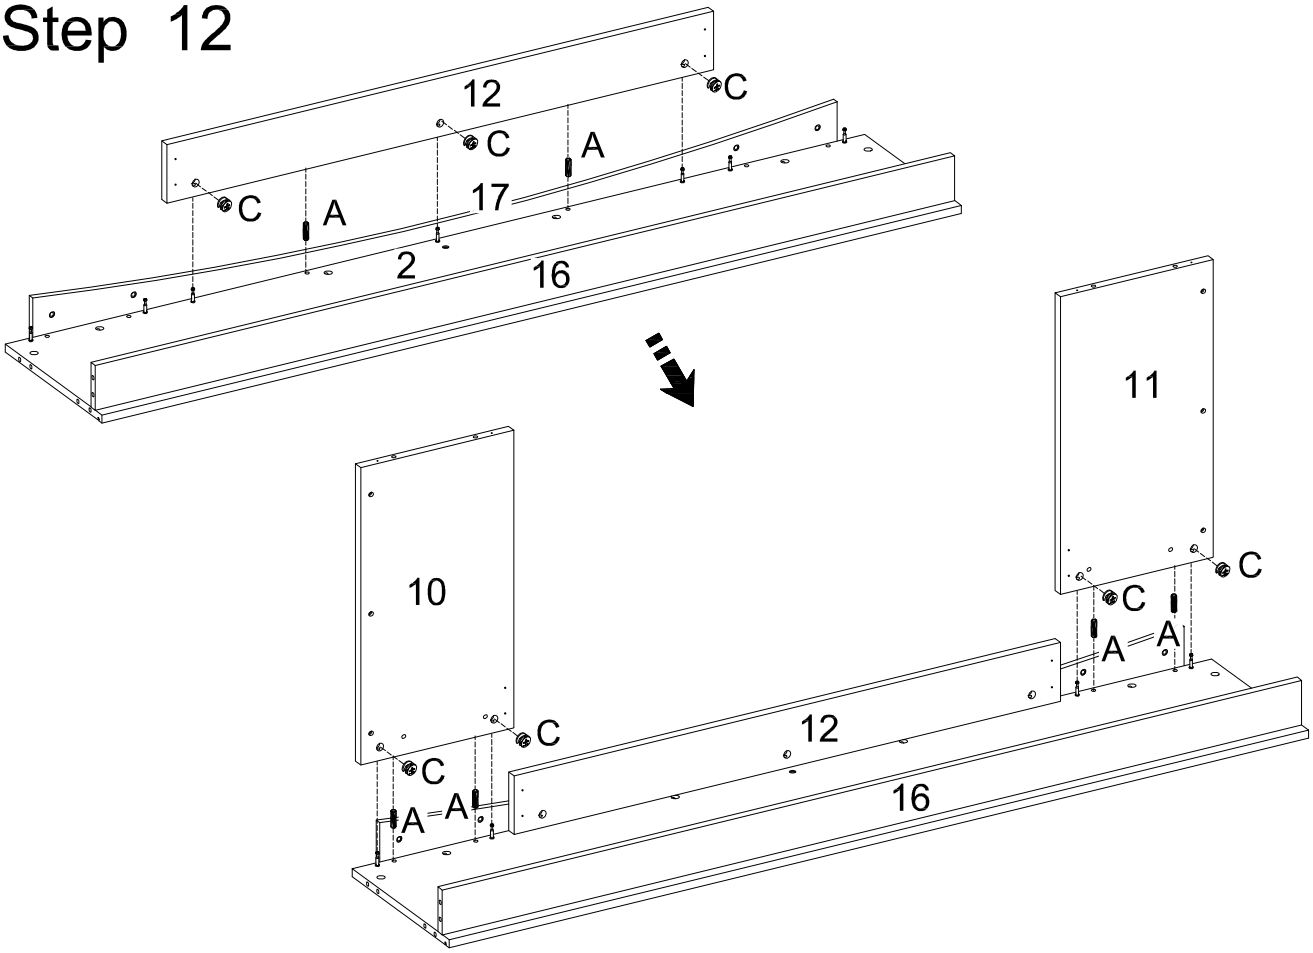


Step 13

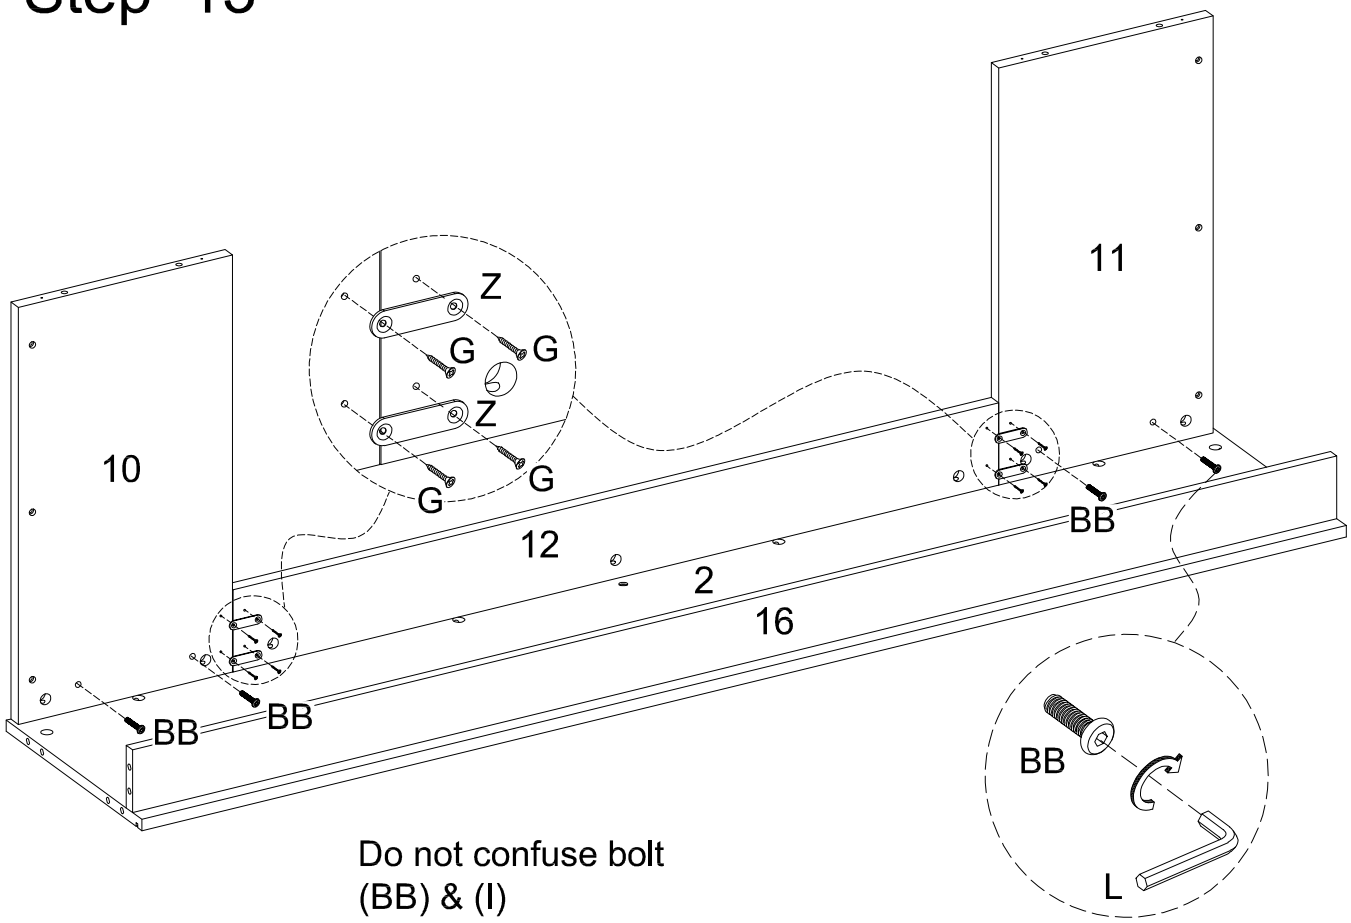


Do not confuse bolt
(BB) & (I)


Step 14

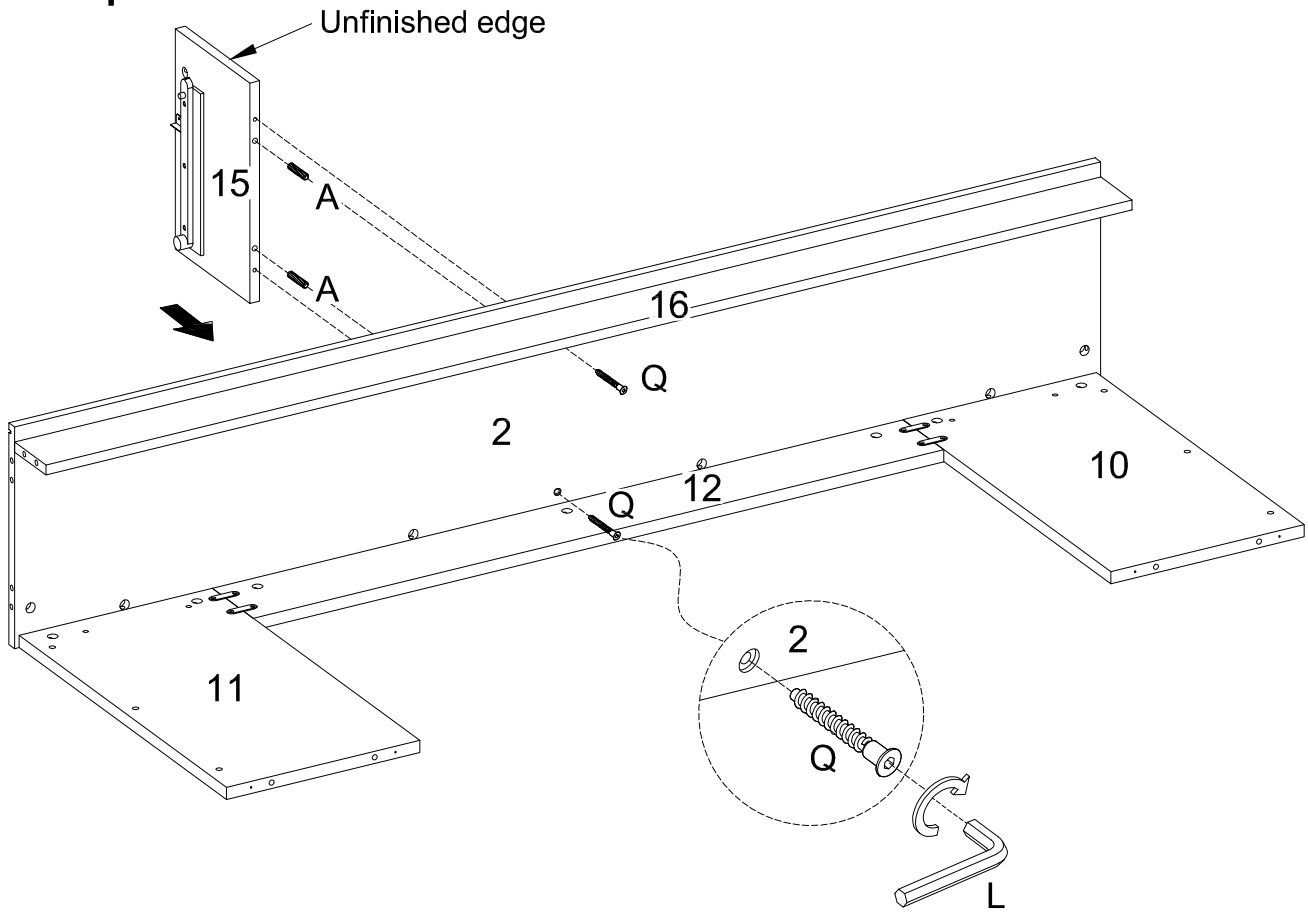


Step 15

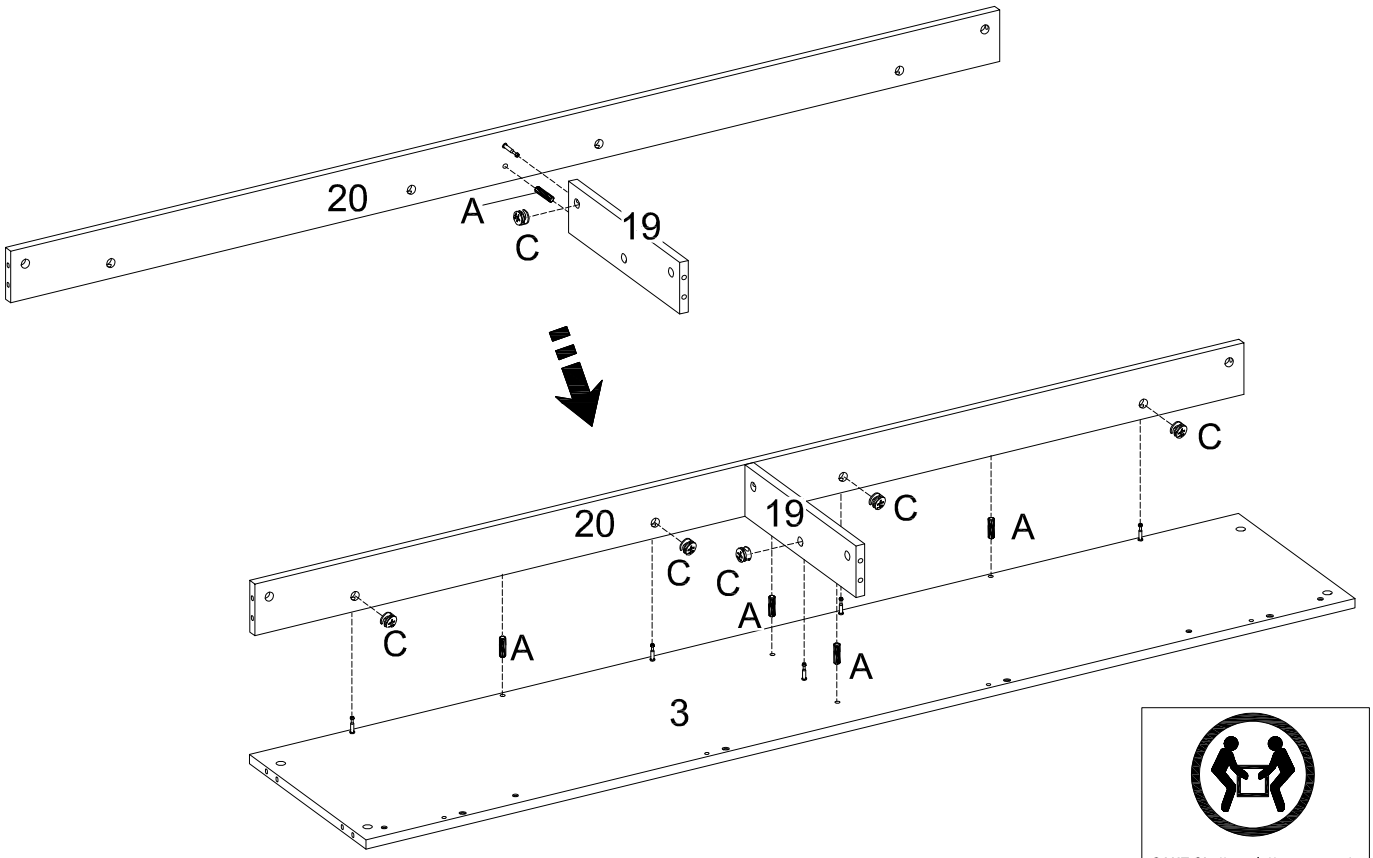


Step 16

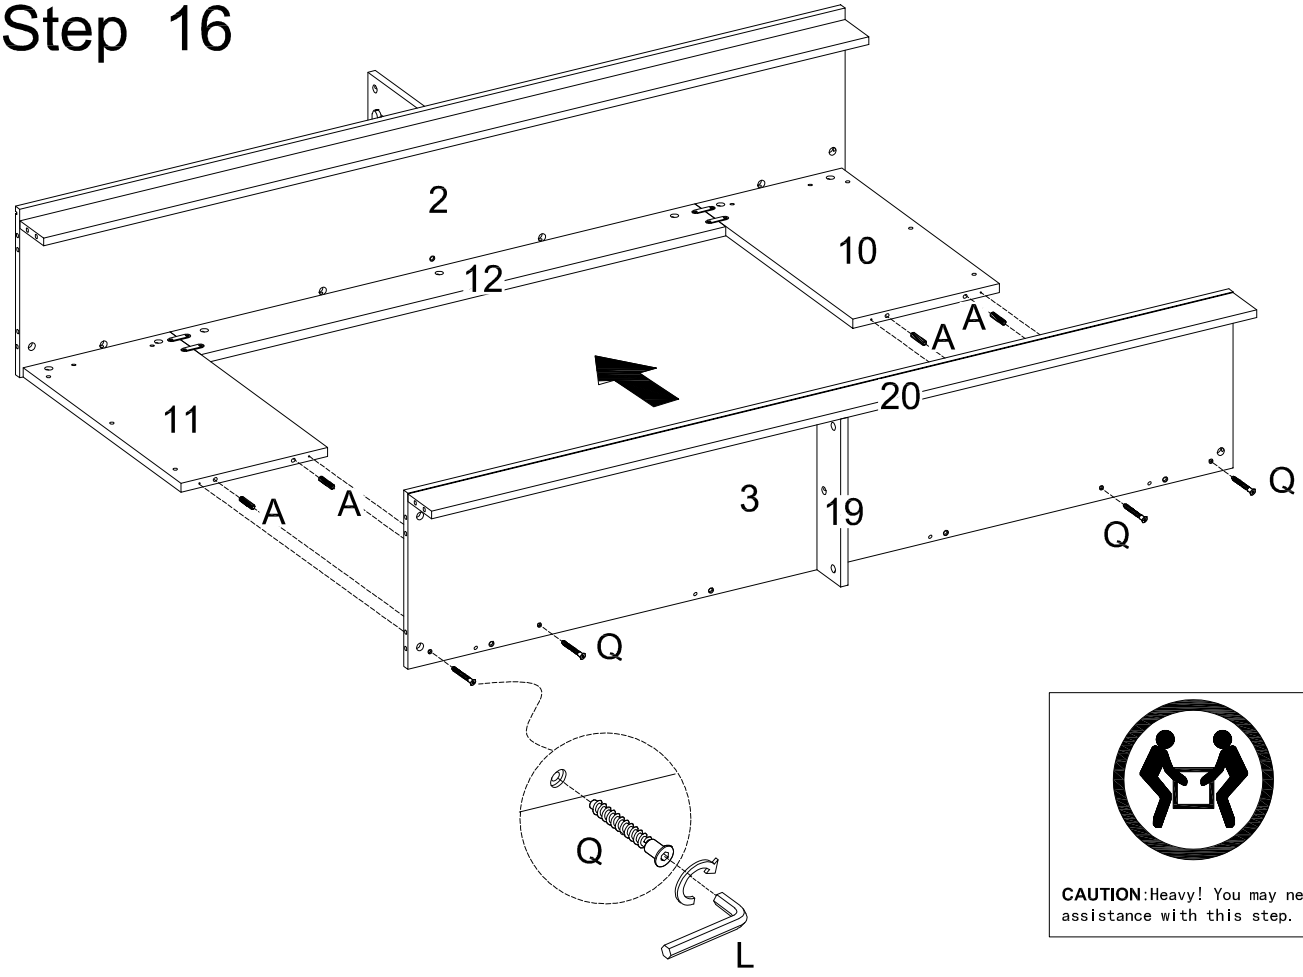


Step 17

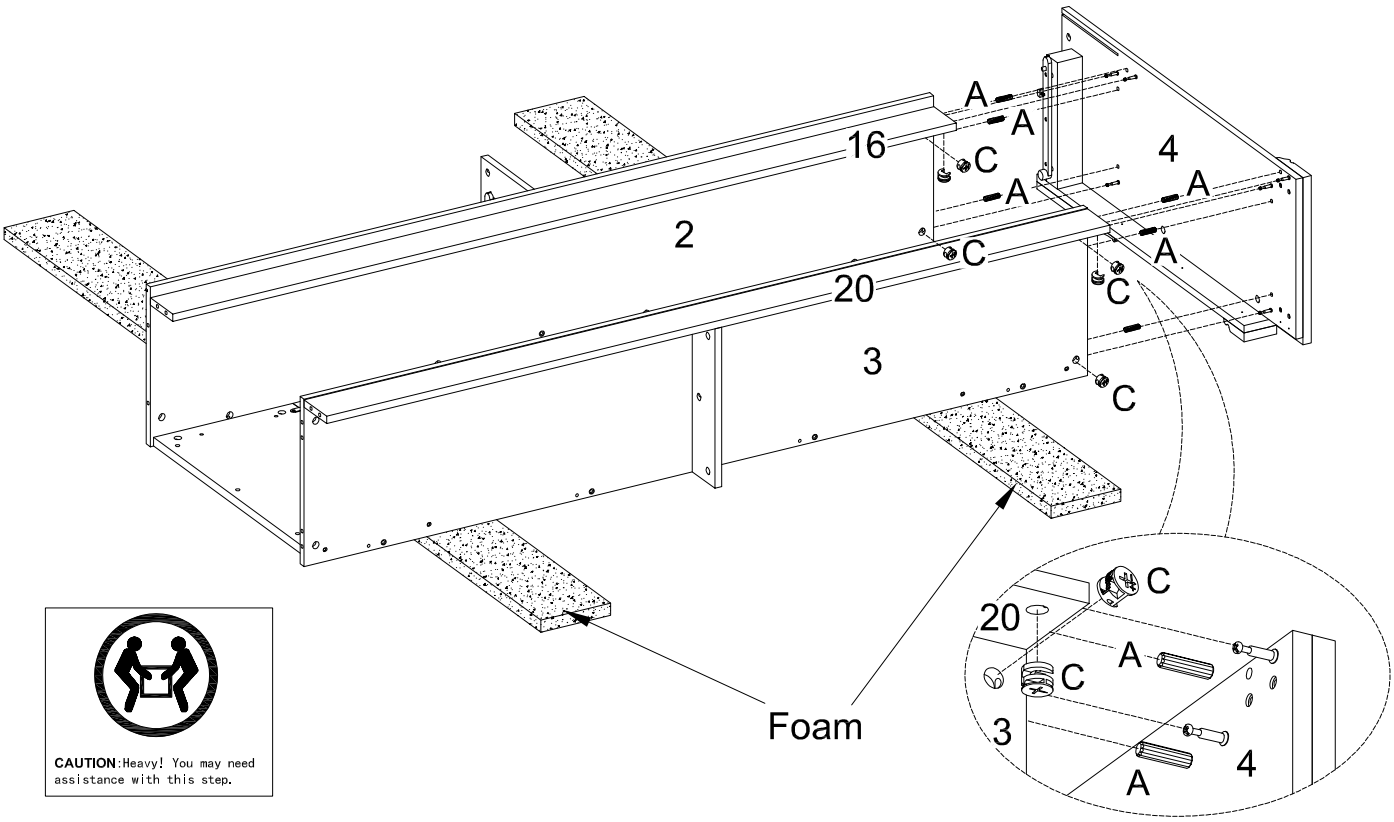


Step 18

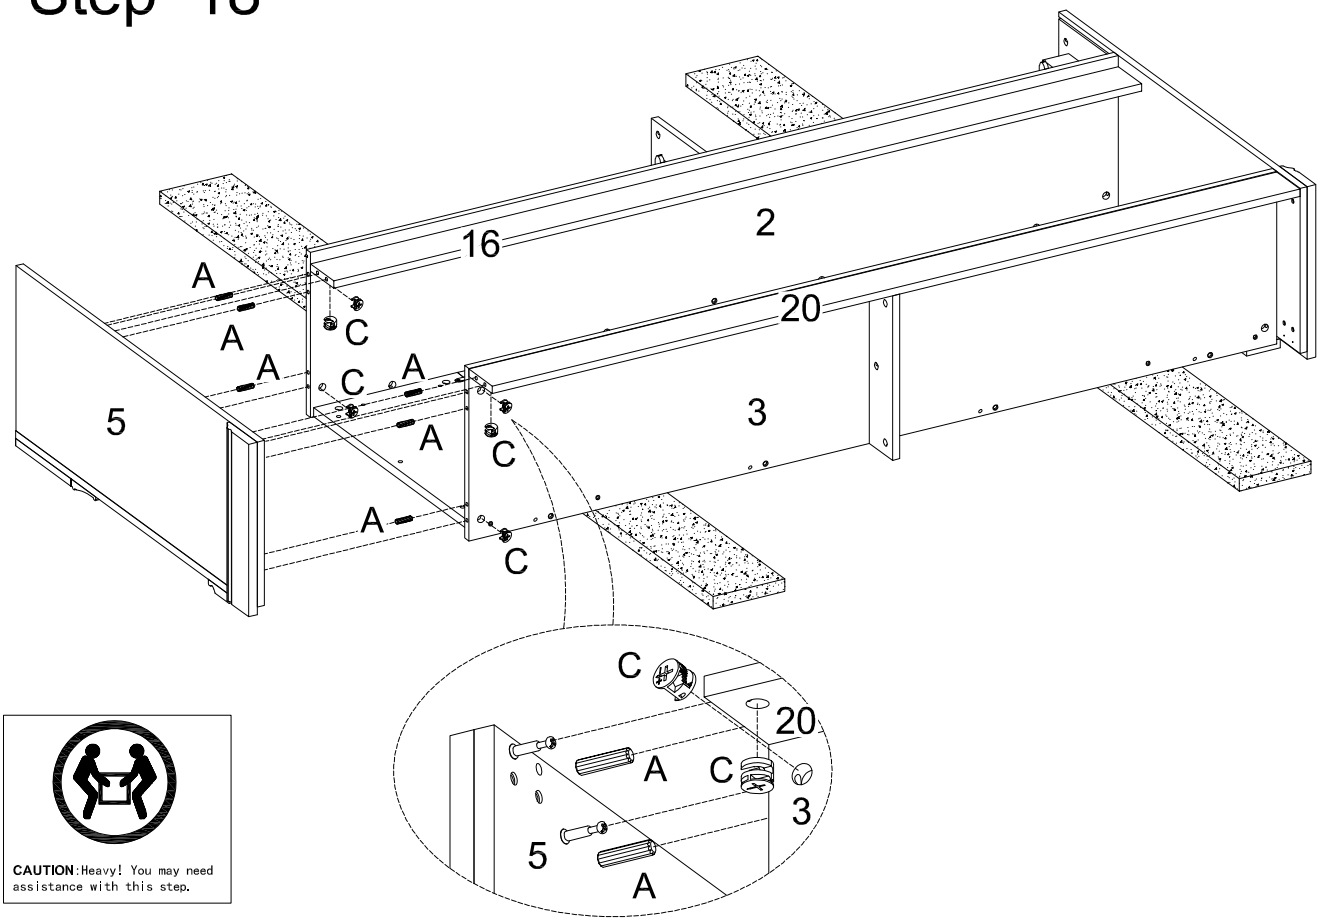


Step 19

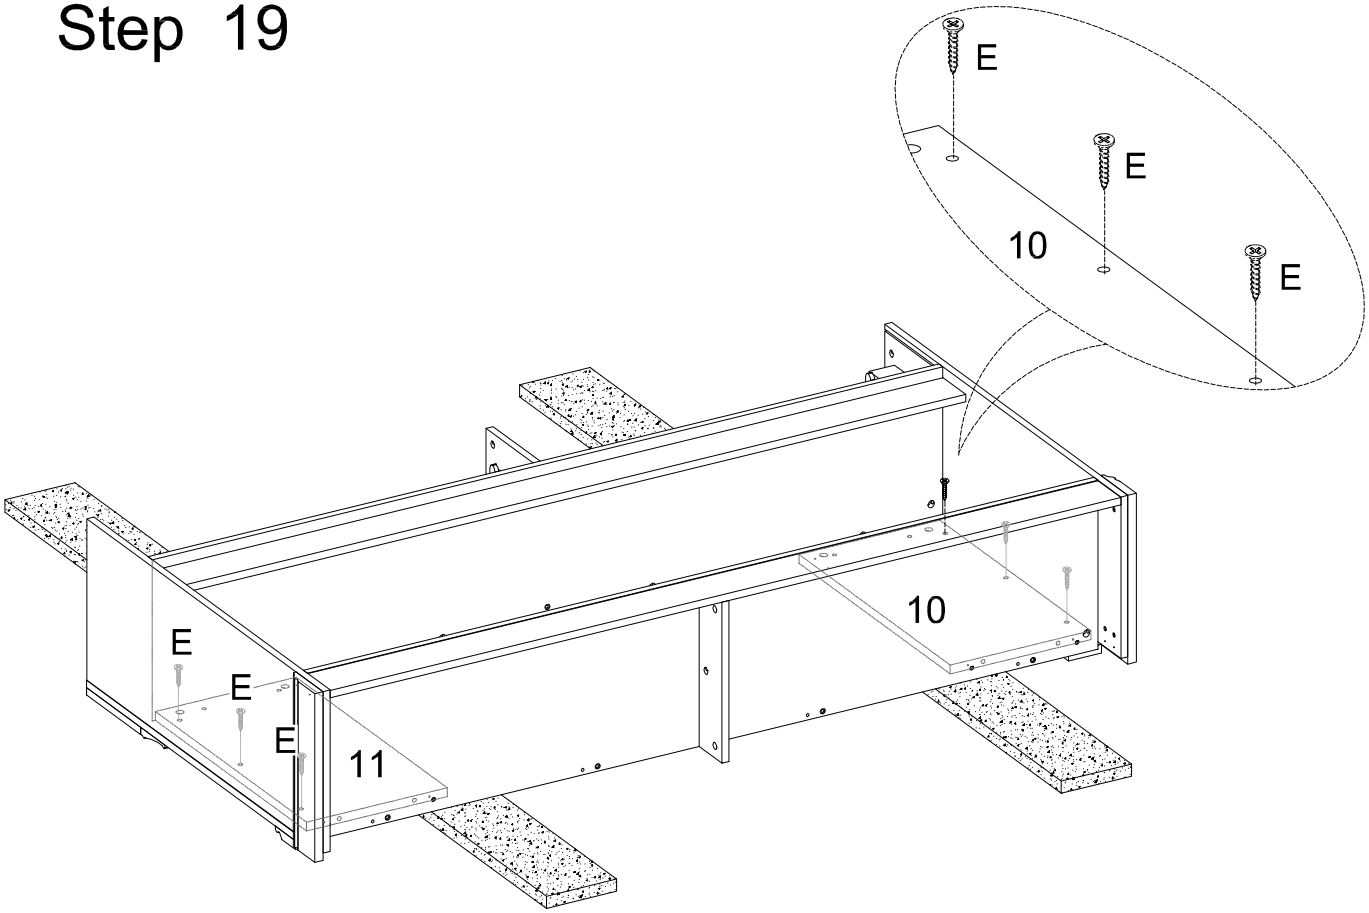


Step 20

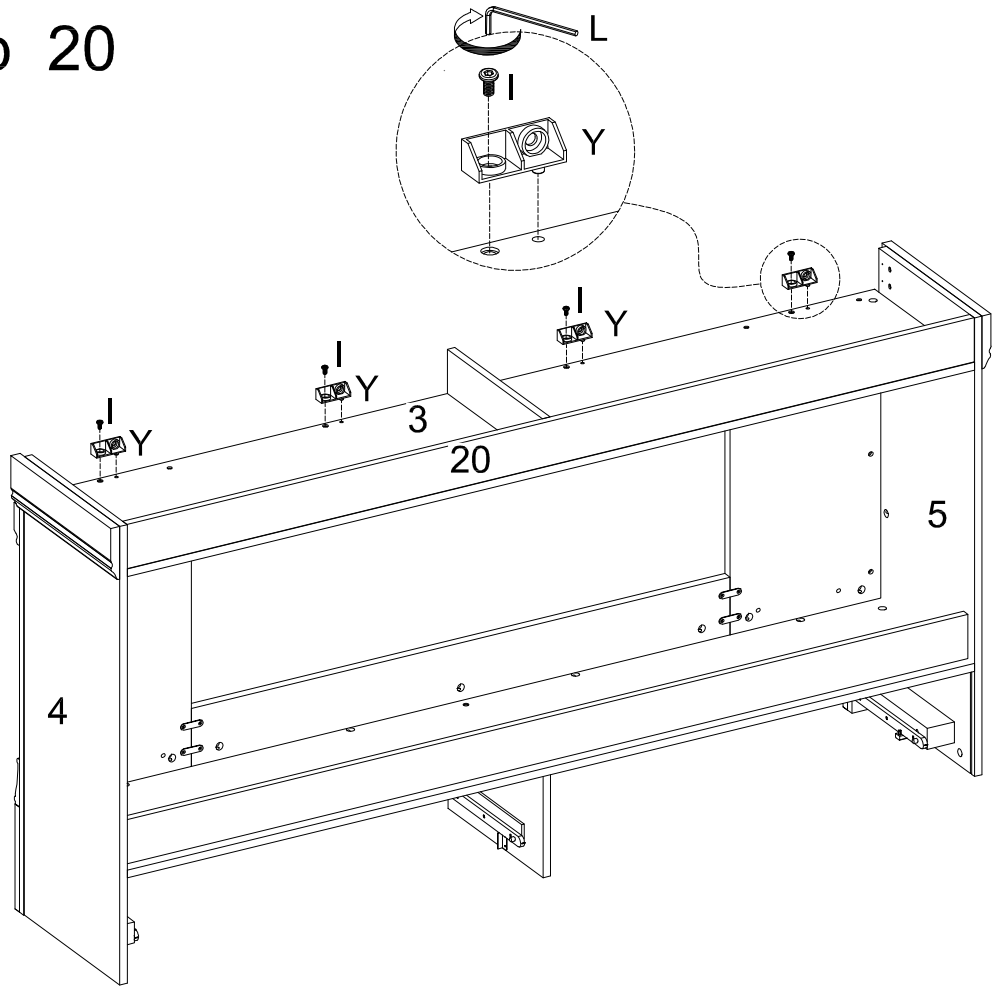


Step 21

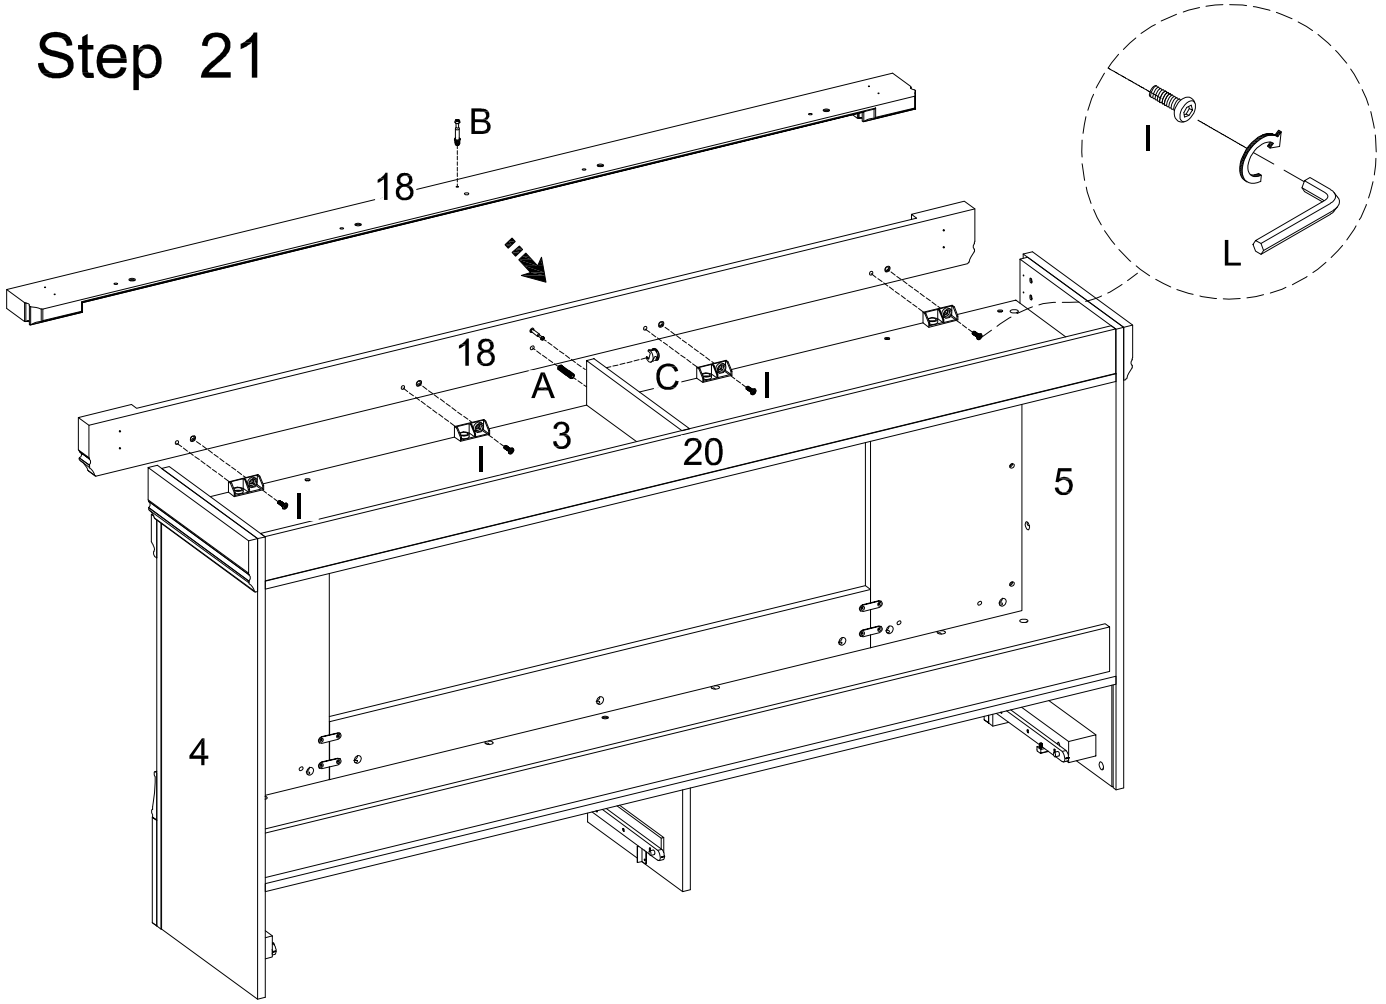


Step 22

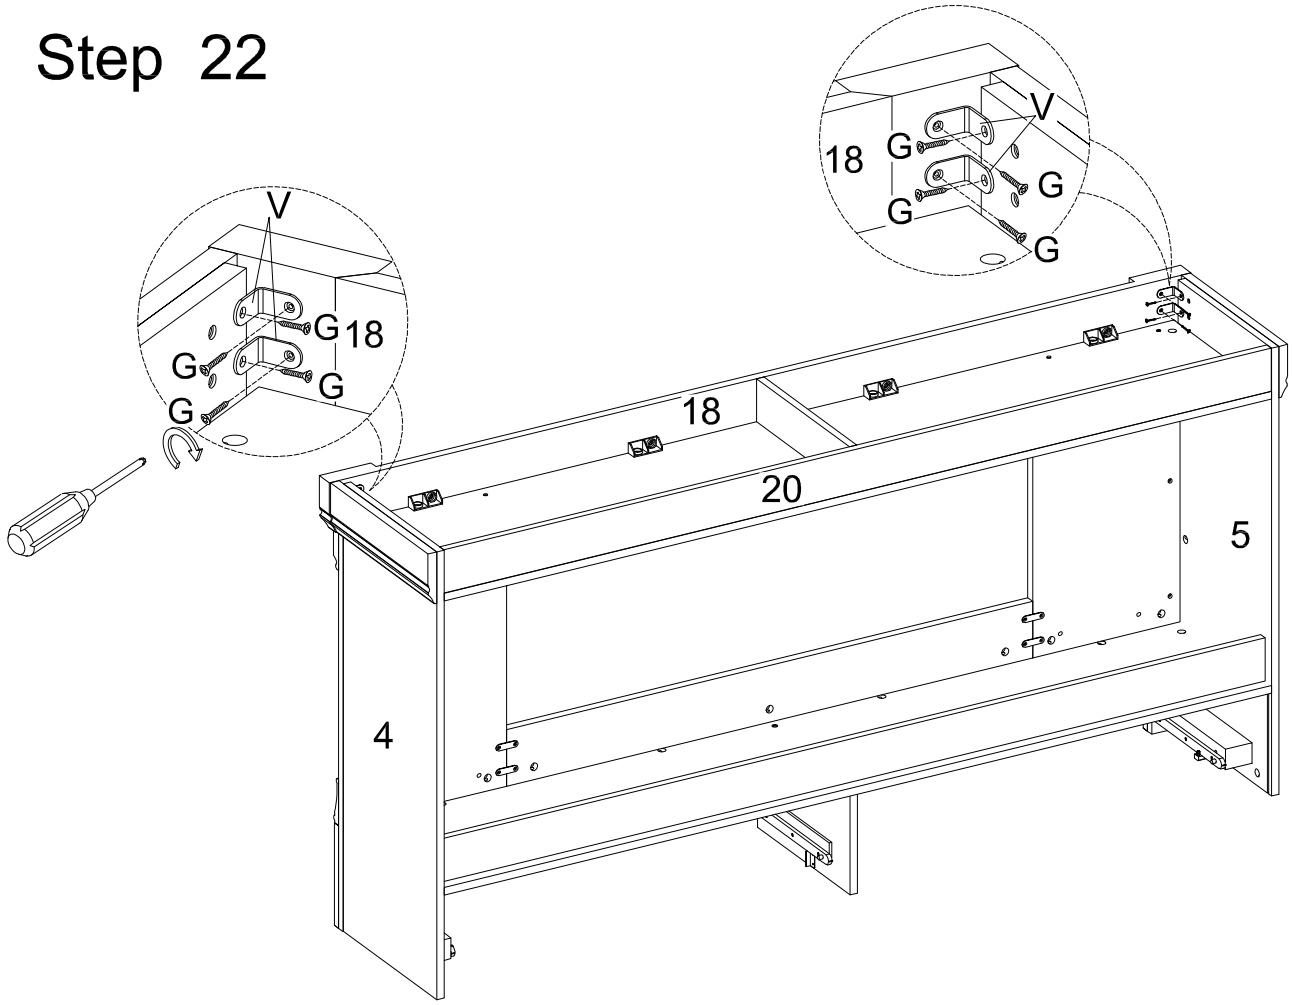

Step 23

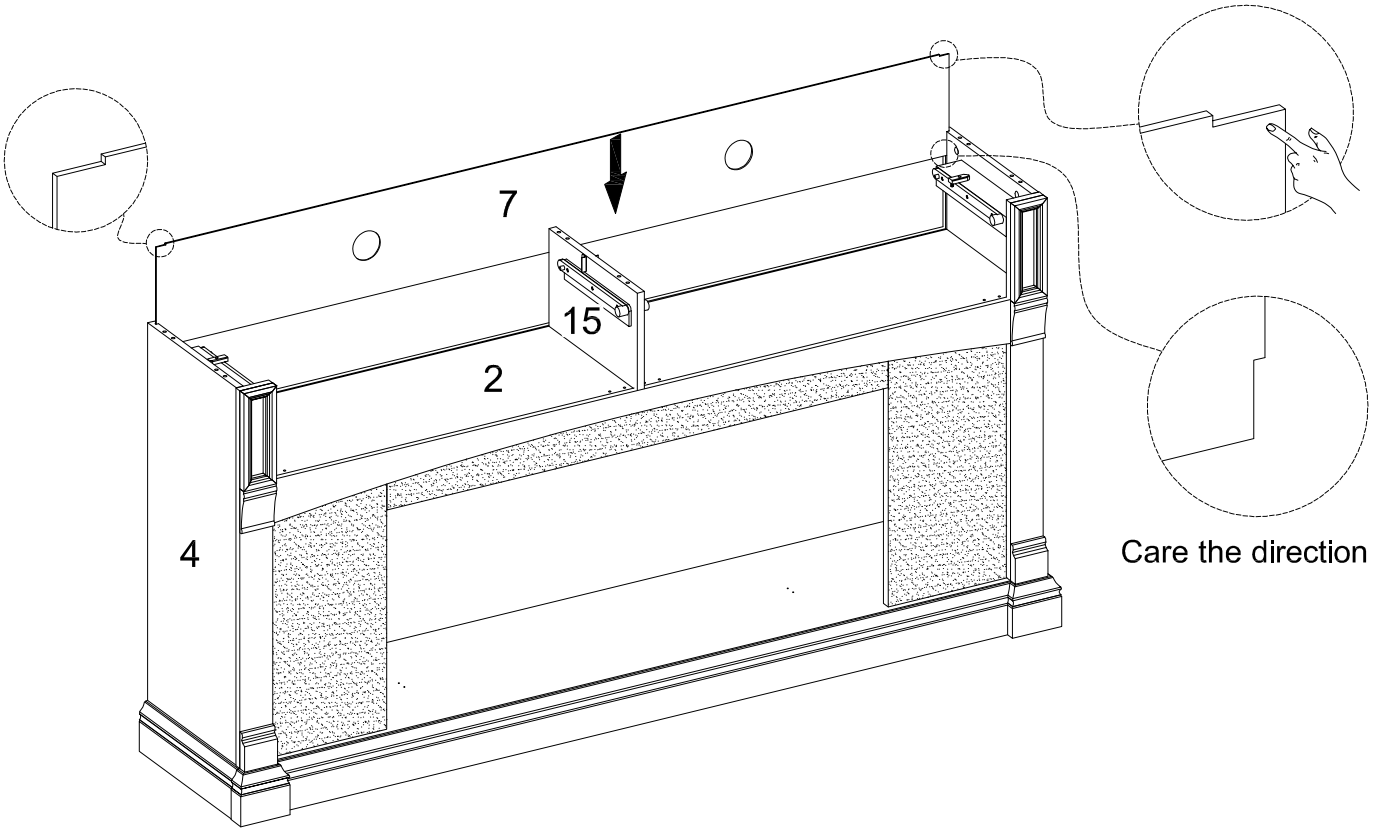


Step 24

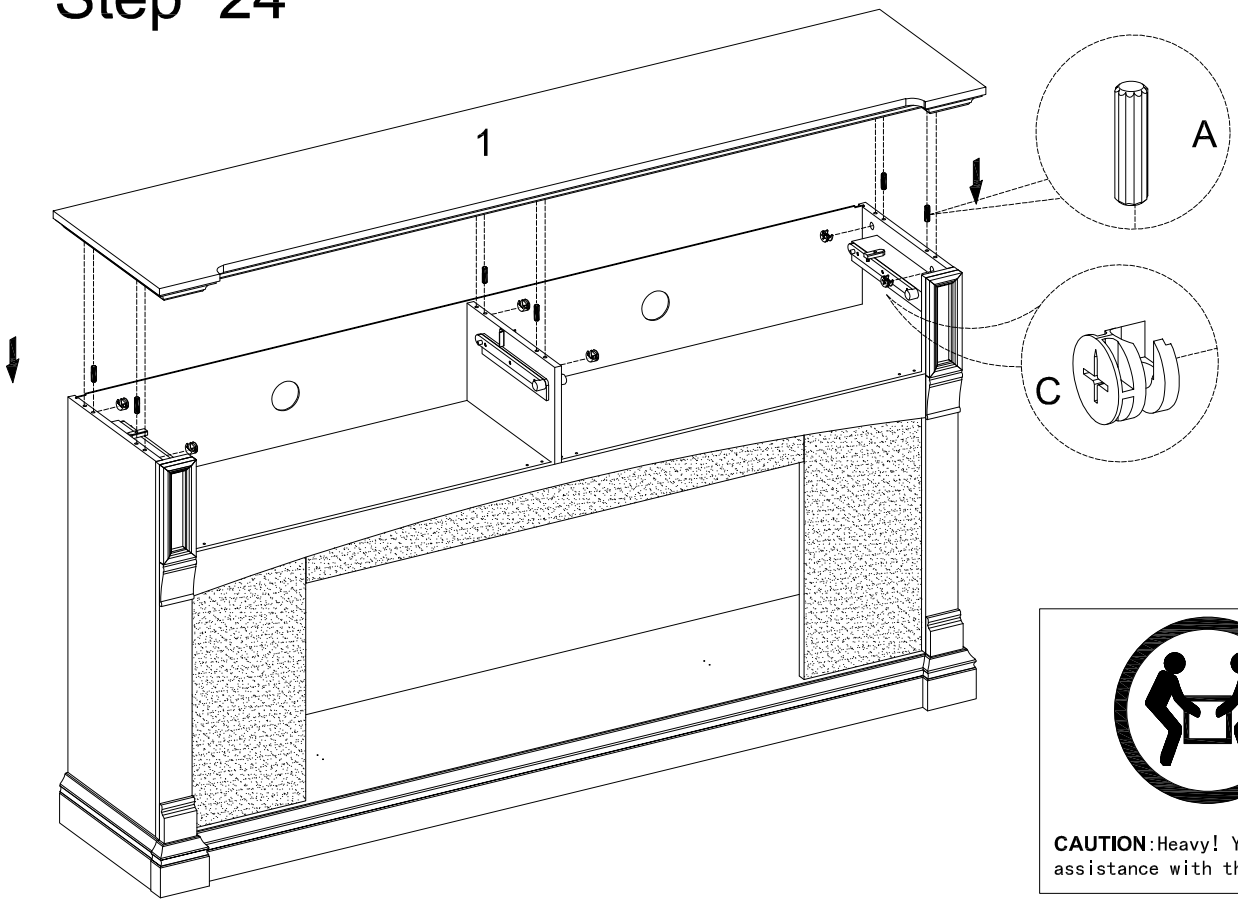


CAUTION:Heavy! You may need assistance with this step.

Step 25

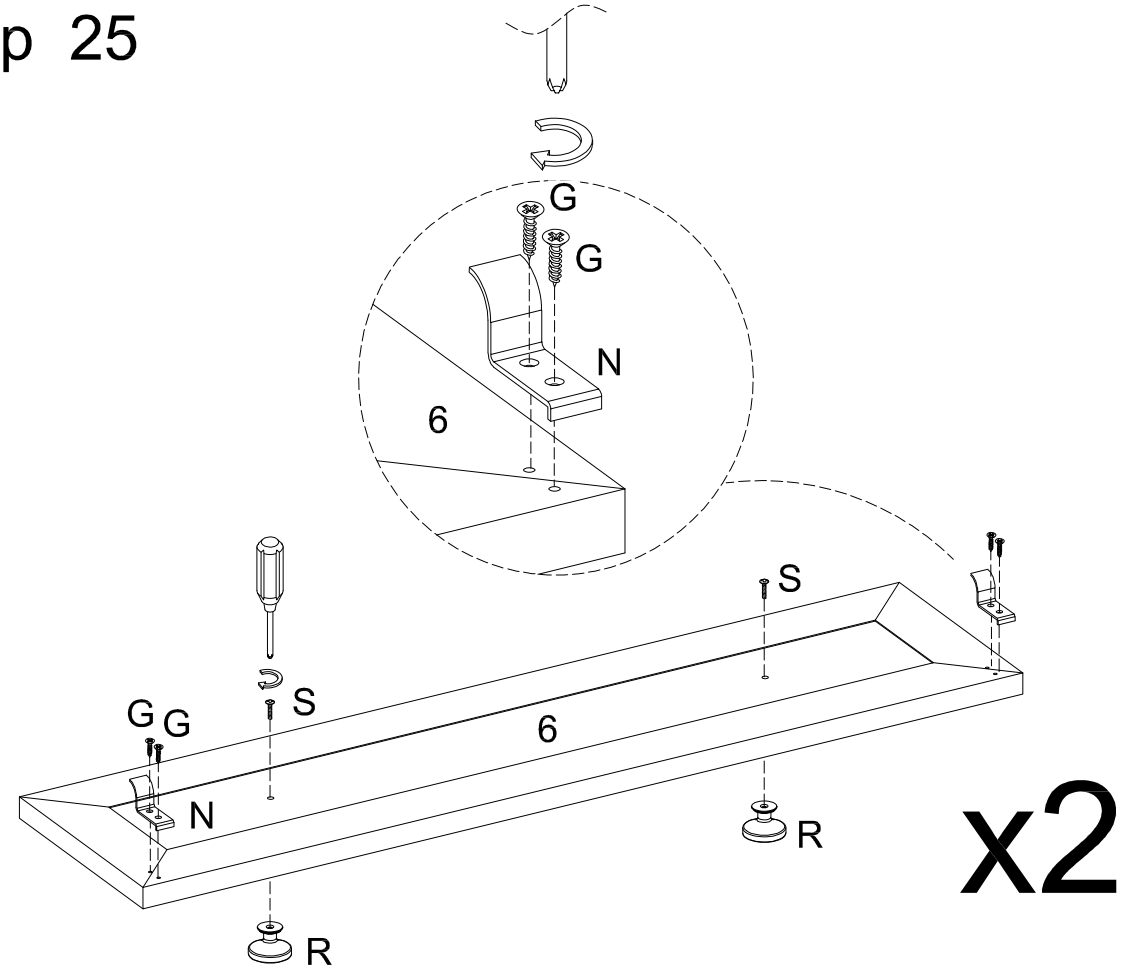


Step 26

Tilt the door to let the hanger (N) catch the front end of plastic tracking (M) as shown.

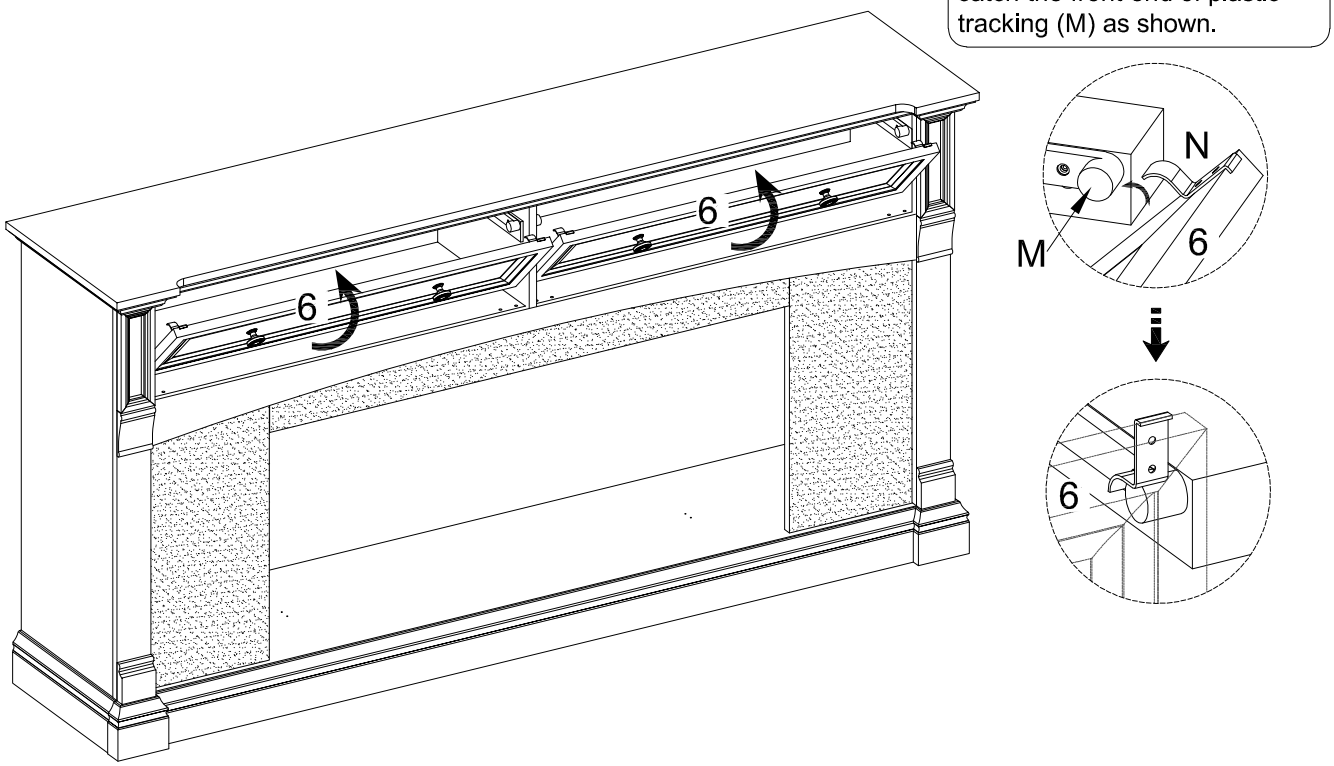


Step 27


Push doors inside,
then insert door stopper

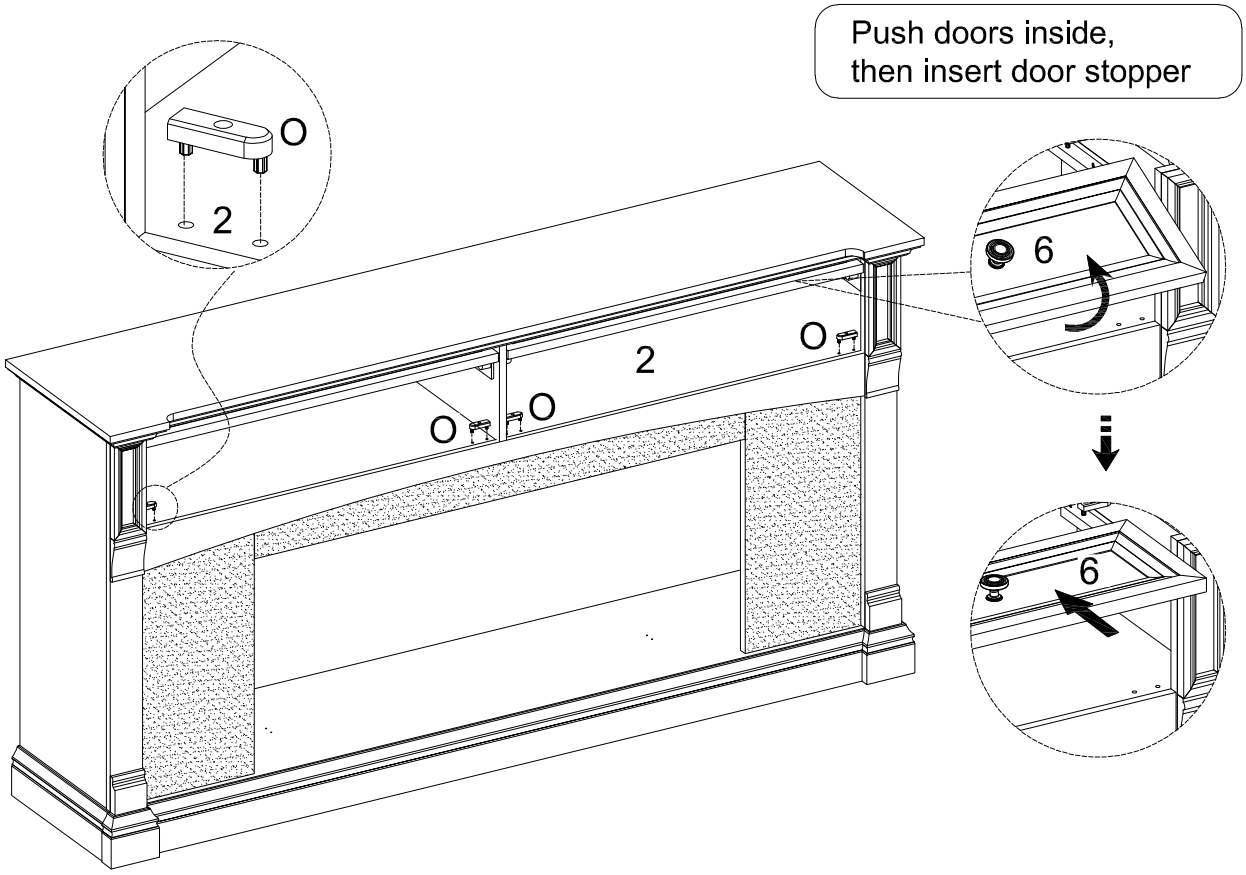


Step 28

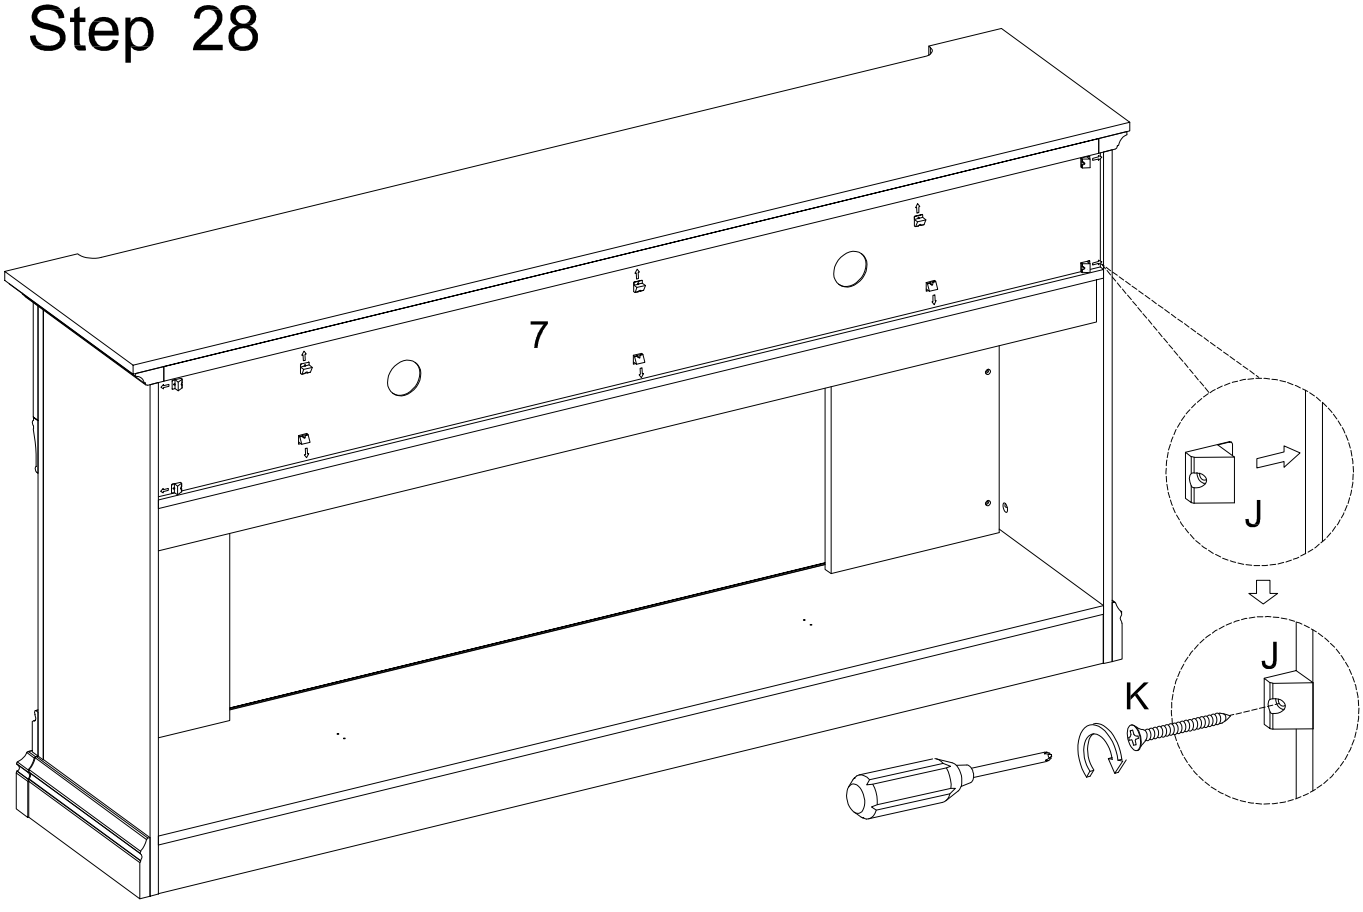

Step 29

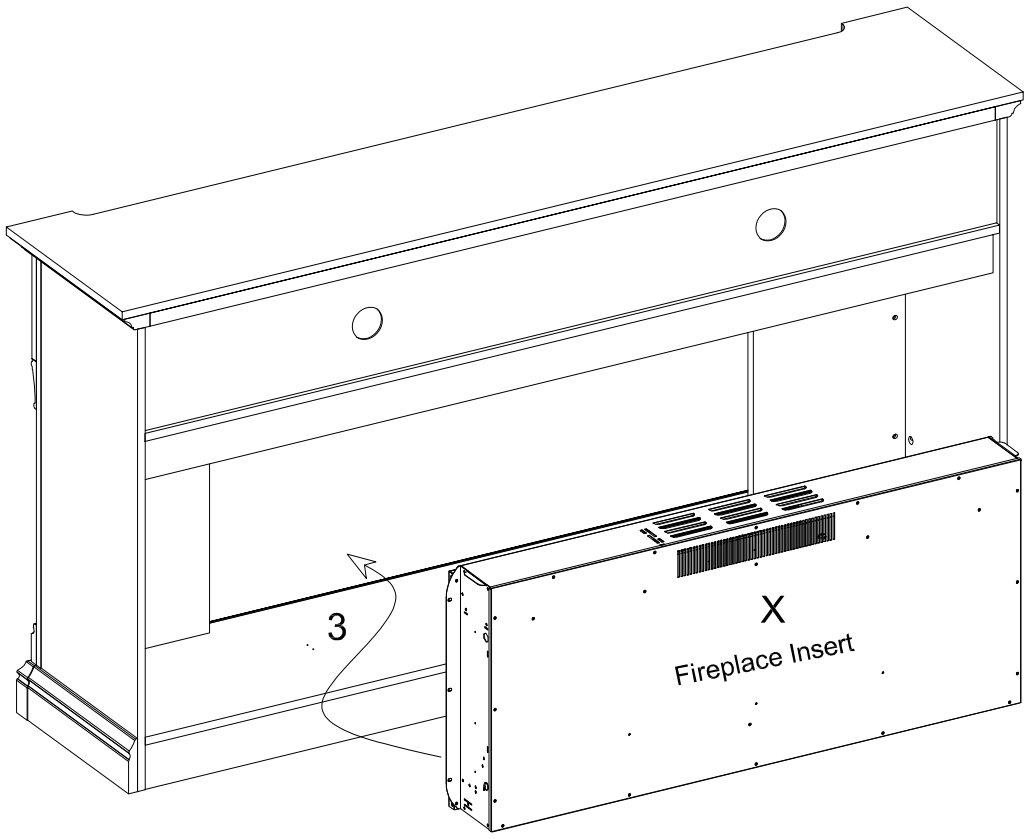

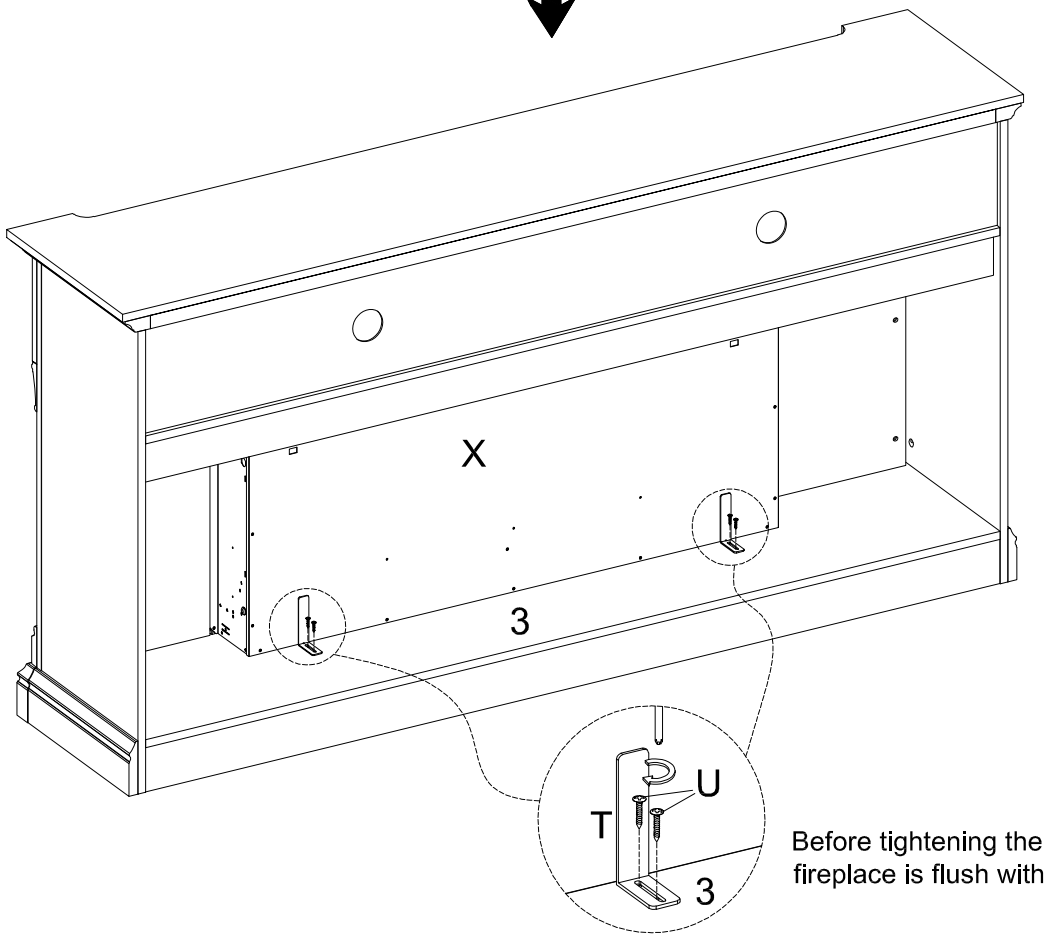


Before tightening the screws,make sure the fireplace is flush with the front frame

Step 30

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

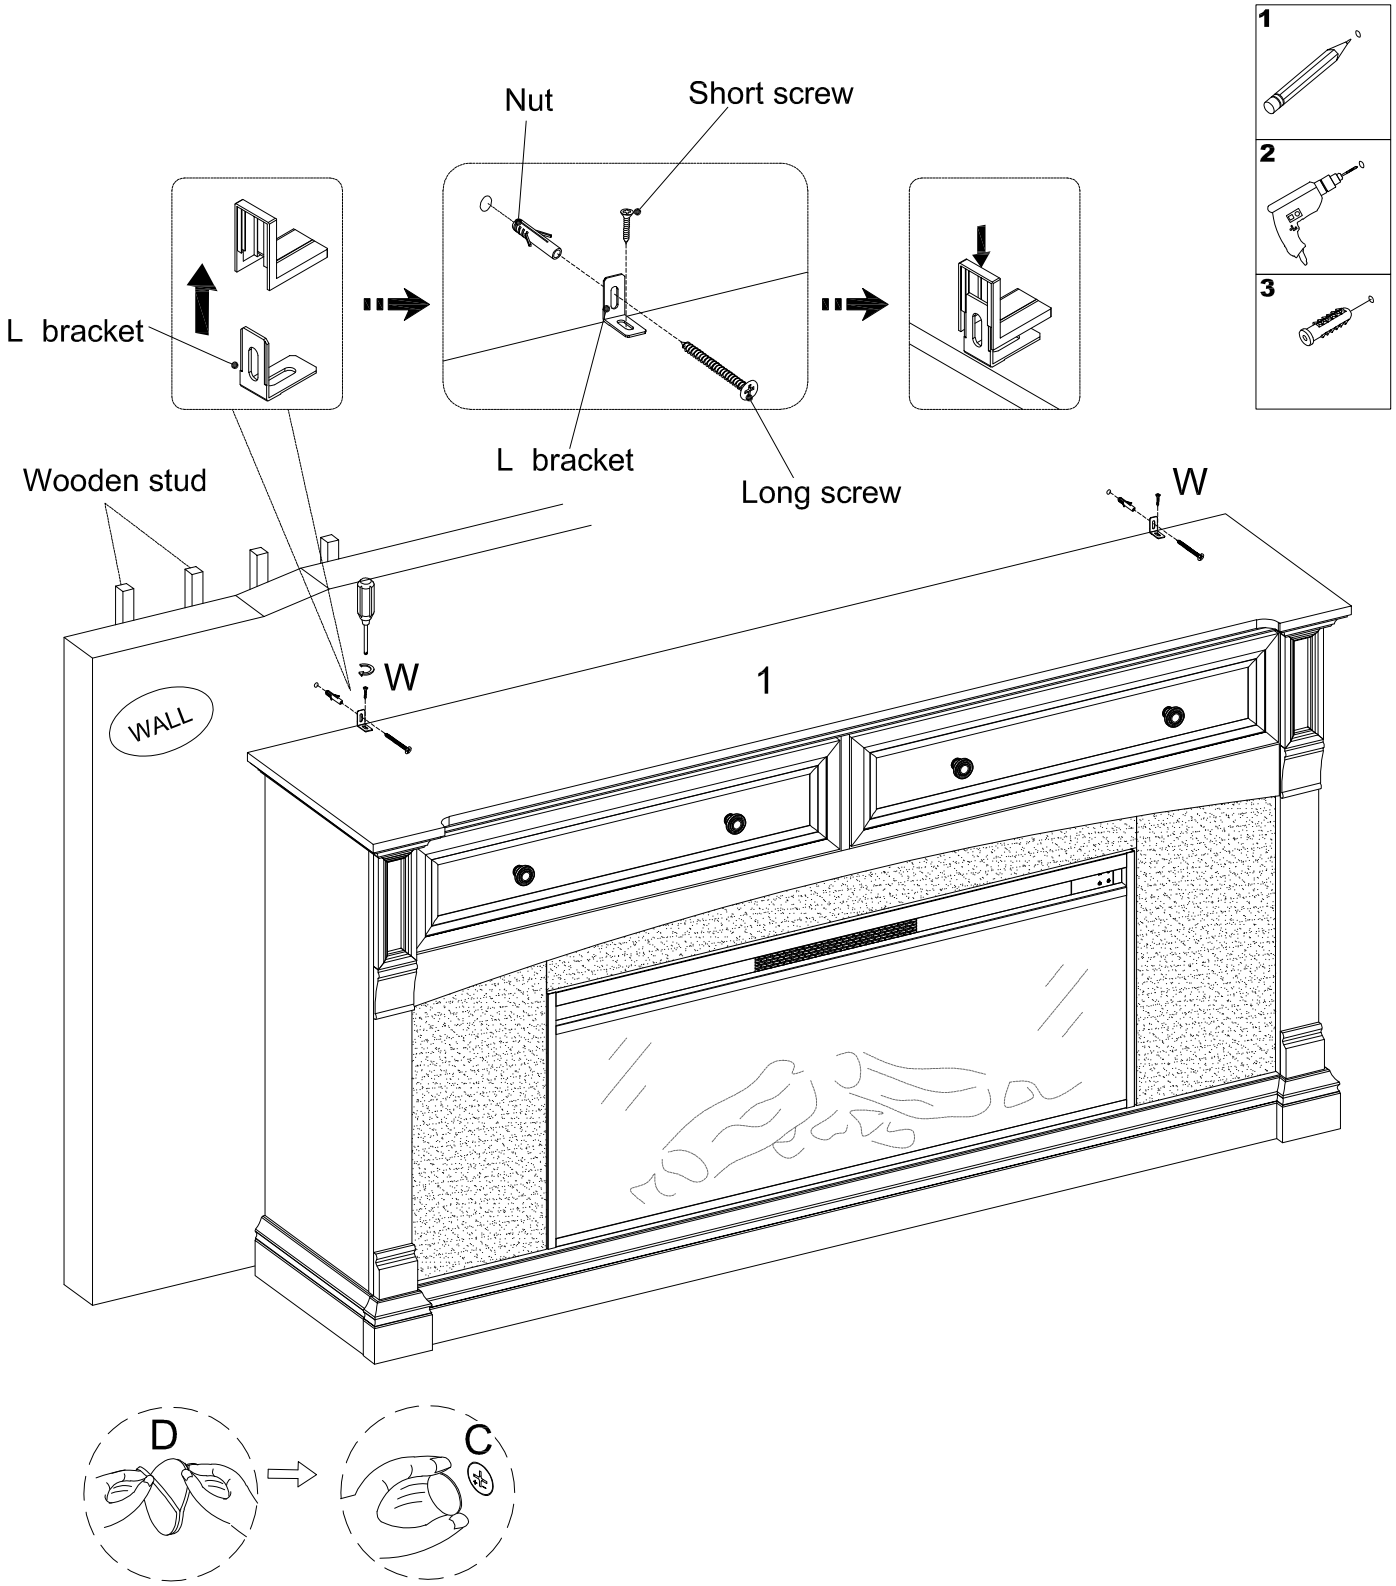

Use stickers(D) to conceal cam locks(C)

Final Assembly