CONDRIS

SHOWER DOOR COLLECTION

PRIME



For bulk purchase or check out other models please contact:
Info@condrisbath.com

CONDRIS

SHOWER DOOR COLLECTION

PRIME



For bulk purchase or check out other models please contact:
Info@condrisbath.com


Dear sir and madam,

Thank you for using our relaxed sanitary products. Please read this instruction completely before you install the product to ensure you can install our products faster and safer.

Preparations for installation:


Please read this manual carefully after unpacking, verify whether the steam shower room is damaged by transportation, check the accessory according to the packing list. Please inform the local agency if you have any problem or enquiry, you will get a satisfied reply.

Tools for installation:



Rotary hammer drill with 6mm bit


Cross-point screw driver


Tape


Sealant gun


Pencil



Sealant


Square


Gradienter


Plastic hammer

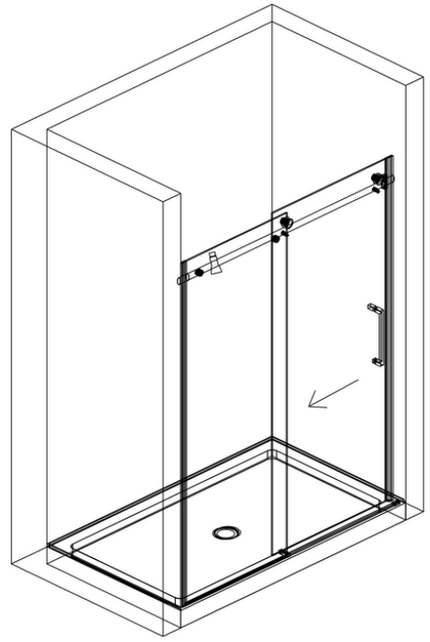

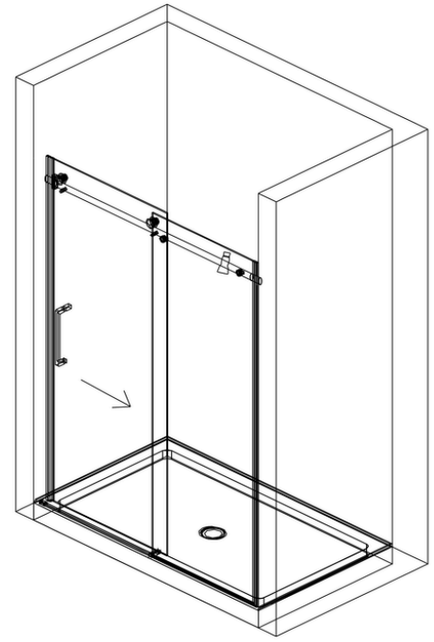

Open from left to right

Open from right to left




Left and right doors reversible


Please contact the seller if any problems with the product.

Preparation for the installation


Requirement

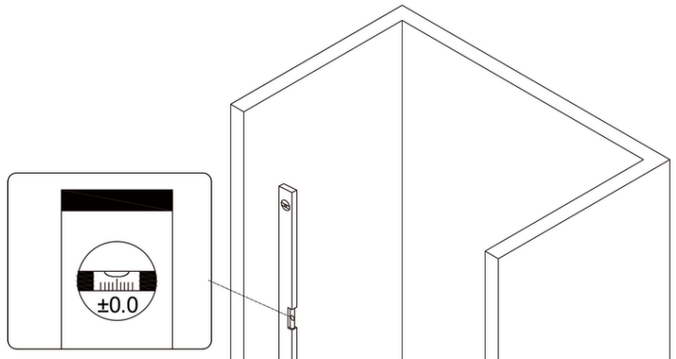


3/8” (10mm)
Adjust the non-verticality of the installation wall frame; Measure the threshold and wall with a spirit ruler.

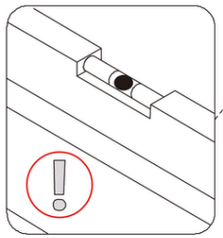

The threshold must be level.

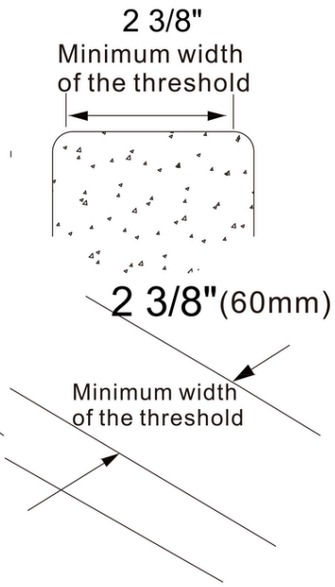

PACKAGE CONTENT

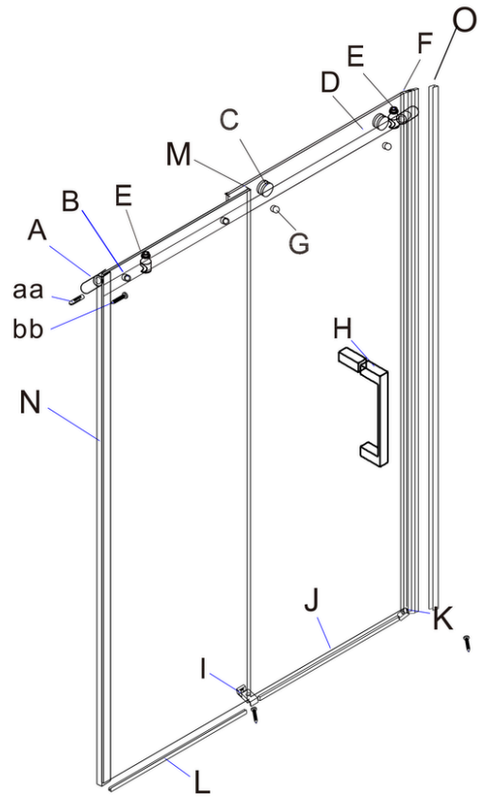

PACKAGE CONTENT

PART#	Name	QTY
A	Wall profle	2
B	Pipe clamp	2
C	Roller	2
D	Rail	1
E	Spring door release	2


PART#	Name	QTY
F	Seal with magnet	2
G	Anti jump nail	2
H	Handle	1
I	Lower slider	1
J	S.S. waterproof strip	1

PART#	Name	QTY
K	Fixings	1
L	Lower rail	1
M	Waterproof strip	2
N	S. S. U channel	2
O	U channel with magnetic stripe	1


NOTE

Check all parts before installation!
Contact the seller for any part omissions.

ASSEMBLY KIT

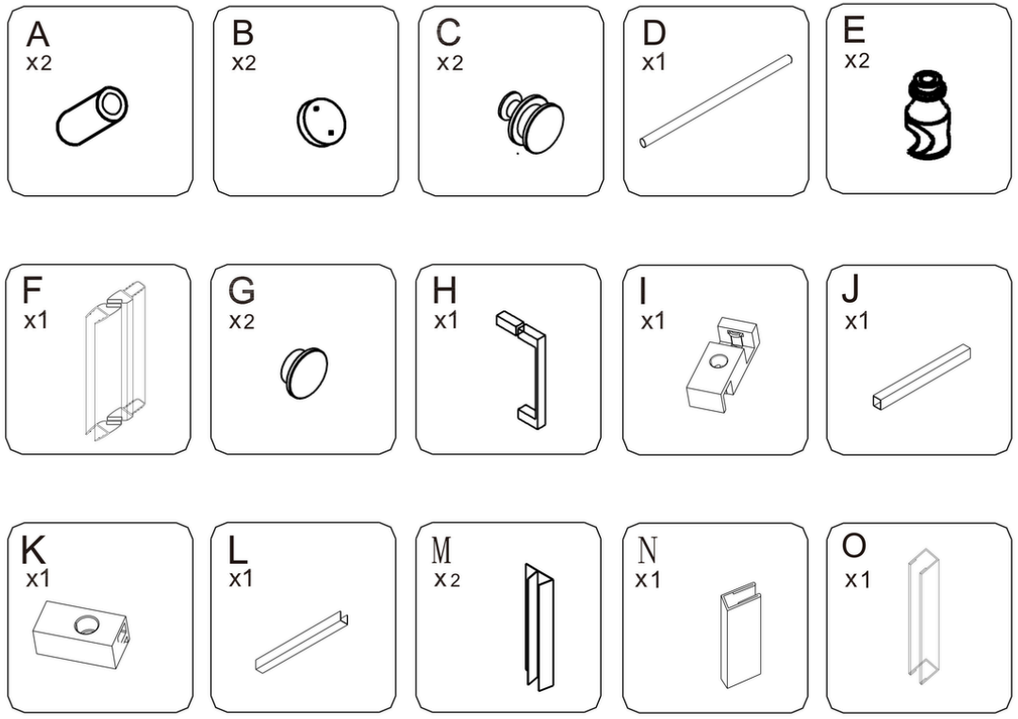


HARDWARE ACCESSORIES

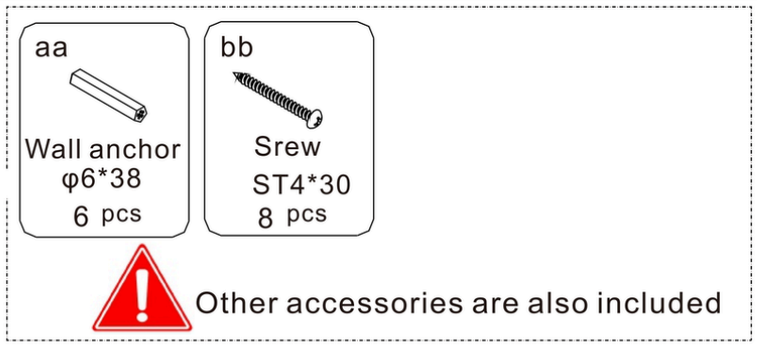

NOTE

Check all parts before installation!
Contact the seller for any part omissions.

TOOLS REQUIRED

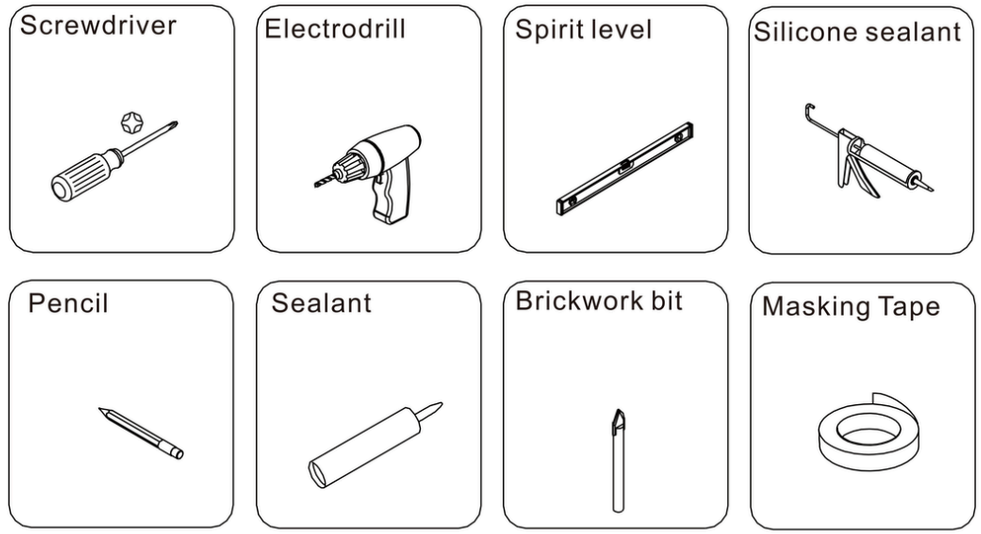

SAFETY CAUTION

Before handling or installing this shower, please carefully read the following important safety information. Please note:

1.During the installation process, special care should be taken when handling glass, as tempered glass may shatter when colliding with a hard surface.

2.Do not cut or modify tempered glass as it will break after cutting.

3.Remove the product from the packaging carefully and keep the packaging until installation is complete.

4.Check all components for damage or loss; If there is any damage or component loss before installation, please contact the customer service.

5.Cover the drainage pipe with tape to prevent damage to small components.


6.Before installing the shower door, the shower base should be installed first.


7.During the installation process, protect the shower floor with a cloth to avoid damage.


This product should be installed by two persons familiar with the construction requirements. It is recommended the professional installation personnel.

NOTE: Need two persons to complete the installation.




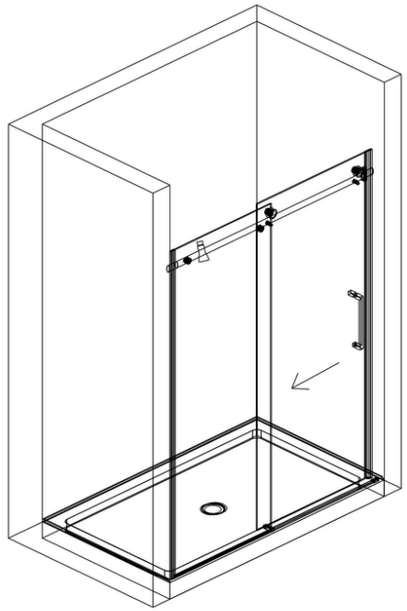

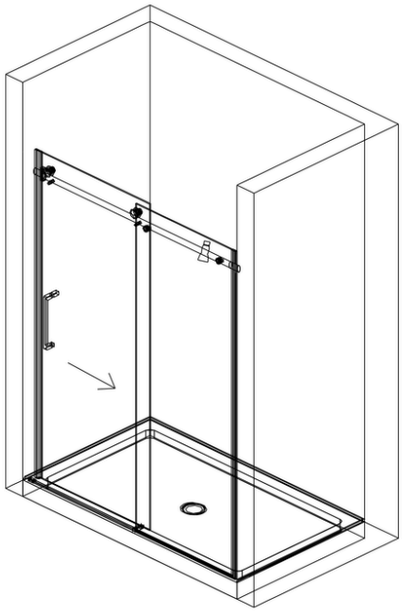

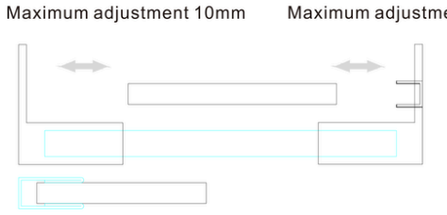

Open from left to right

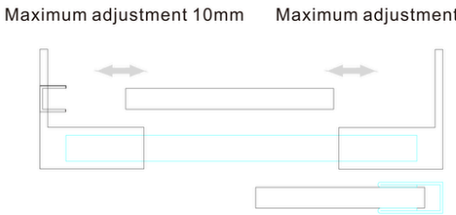


Open from right to left

NOTE

The installation of right or left door of this model is interchangeable. The installation diagram of the left swing door is shown in this manual. For the installation of the right door, start from the opposite wall and reverse the direction of the installation steps.


1-1 Installation of the U channel for the fixed glass

NOTE Before positioning and drilling the installation hole, use a spirit ruler to measure and ensure that the wall is vertical.

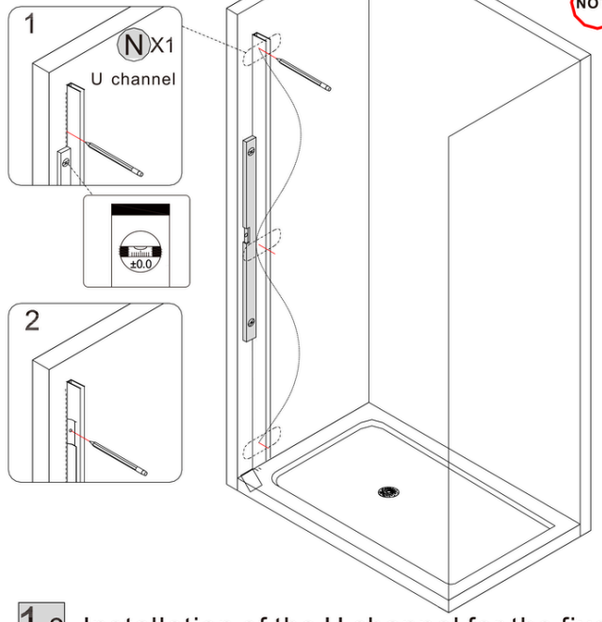


NOTE Place the wall U channel in the middle of the threshold, 10mm away from the edge of the shower base.

1-2 Installation of the U channel for the fixed glass

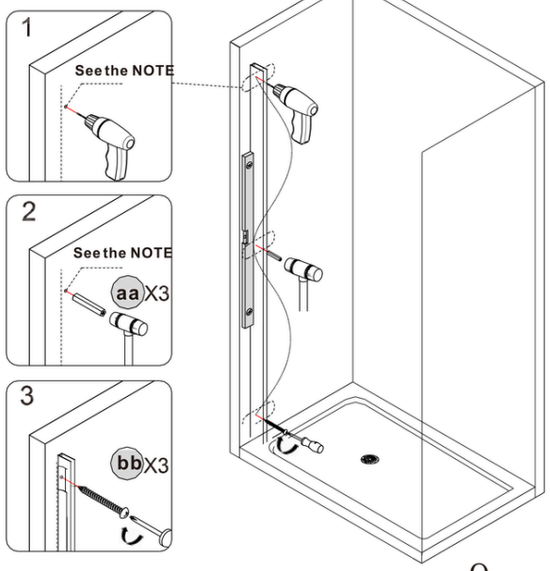


NOTE Drill holes according to the positioning position, inject expansion rubber particles into the wall, and lock the U channels with self tapping screws.

2 Installation of the fixed glass doors

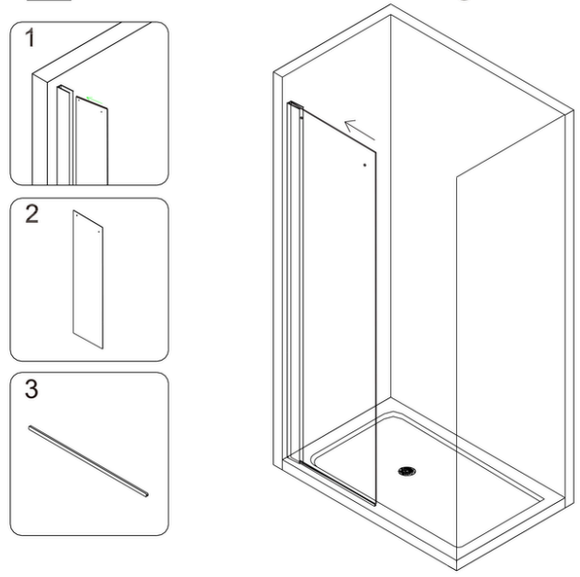

NOTE Insert the fixed glass into the fixed glass U channel. Fixed glass is outside.

3 Installation of the rail

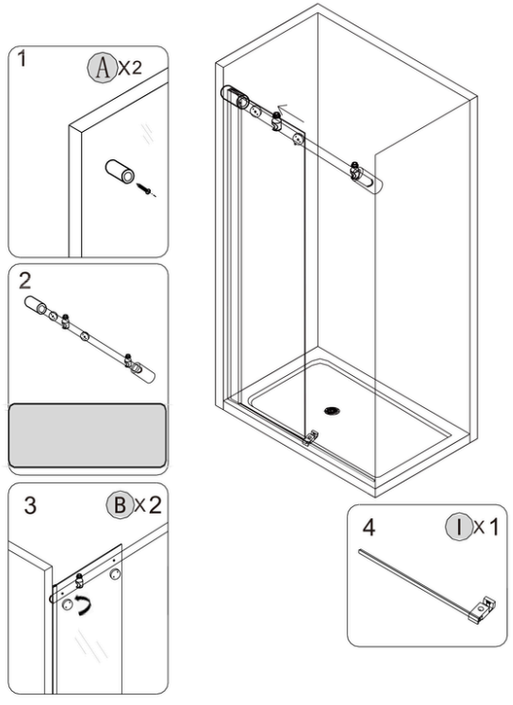


NOTE Place the guide block A (I) into the bottom rail.


Insert locator E into guide rail D, and fix both ends of the guide rail on the wall with wall seat A. Lock the fixed glass and track tightly with a pipe clamp.

4-1 Installation of the glass doors

NOTE Lift sliding door to the frame.

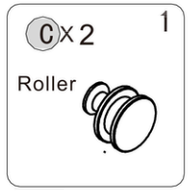




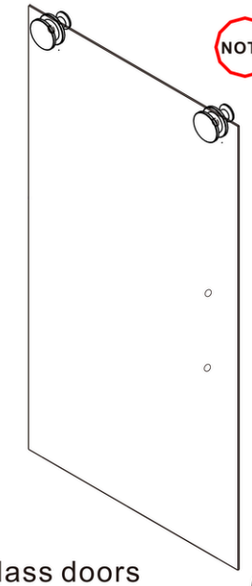


NOTE Install the roller E on the sliding glass from top to bottom first.

4-2 Installation of the glass doors


NOTE Install the roller E on the sliding glass from top to bottom first.

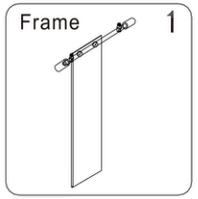



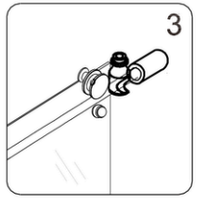



NOTE Lift the sliding glass to the shower room frame and hang the pulley above the track. The glass holes below the track are locked with anti-jump nails. put the sliding glass in it.

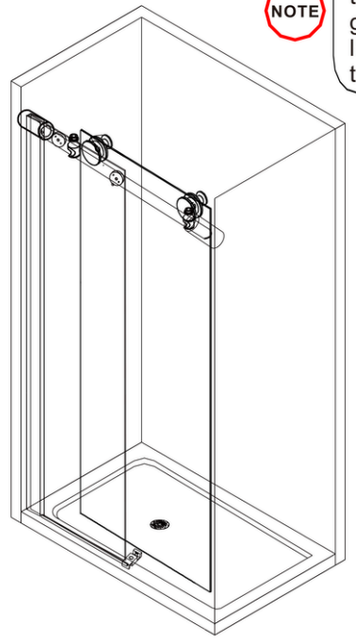


5 Installation of the seal strips

NOTE Install the magnetic strips

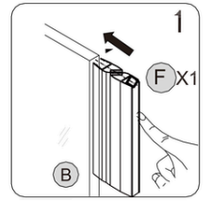

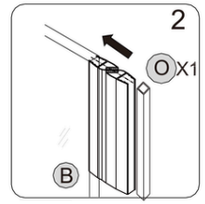


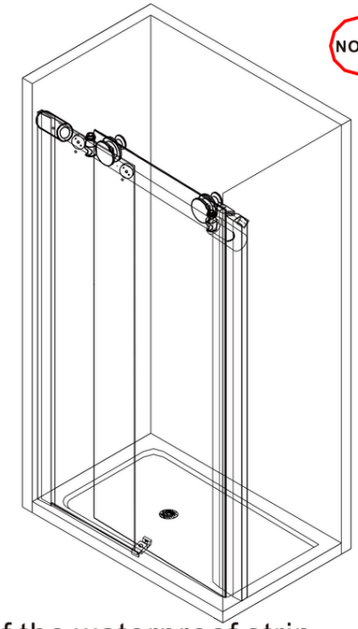



NOTE Paste the magnetic stripe column to the side glass. Then card the magnetic tape to the magnetic strip U channel.

6 Installation of the waterproof strip

NOTE Install waterproof strips.

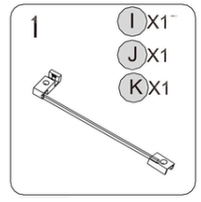

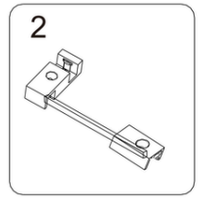

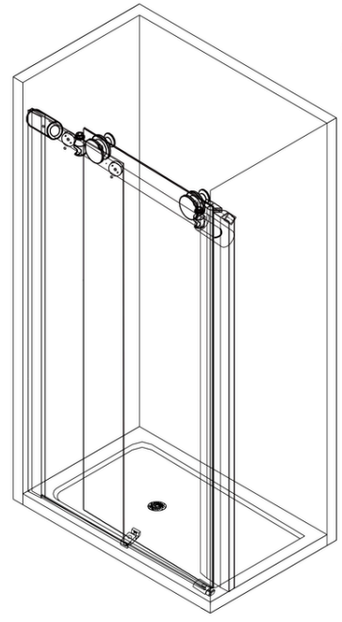


NOTE Insert one end of the strip J into slide I. Insert the other end into fixed glass K.


7 Installation of the handles


NOTE Remove the gasket and open the door.

1 (H)X1

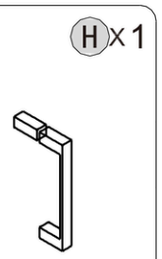

2 (H)X1

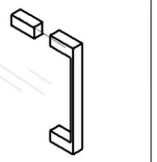

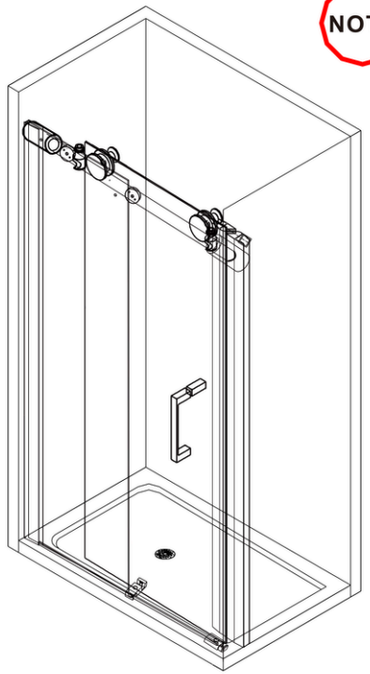

8 Sealing

NOTE When using the silicon sealant, make sure that the surface is clean and smooth.

NOTE Ensure that the shower door is tightly closed and opens smoothly. Apply high-quality silicon sealant to seal along the wall pillars (C)&(H) and the bottom stainless steel water retaining strip (I).

Wait 24 to 48 hours until the silicon sealant is curing before taking shower, depending on the environment and temperature.



PLEASE SEAL WITH THE SILICON SEALANT

