
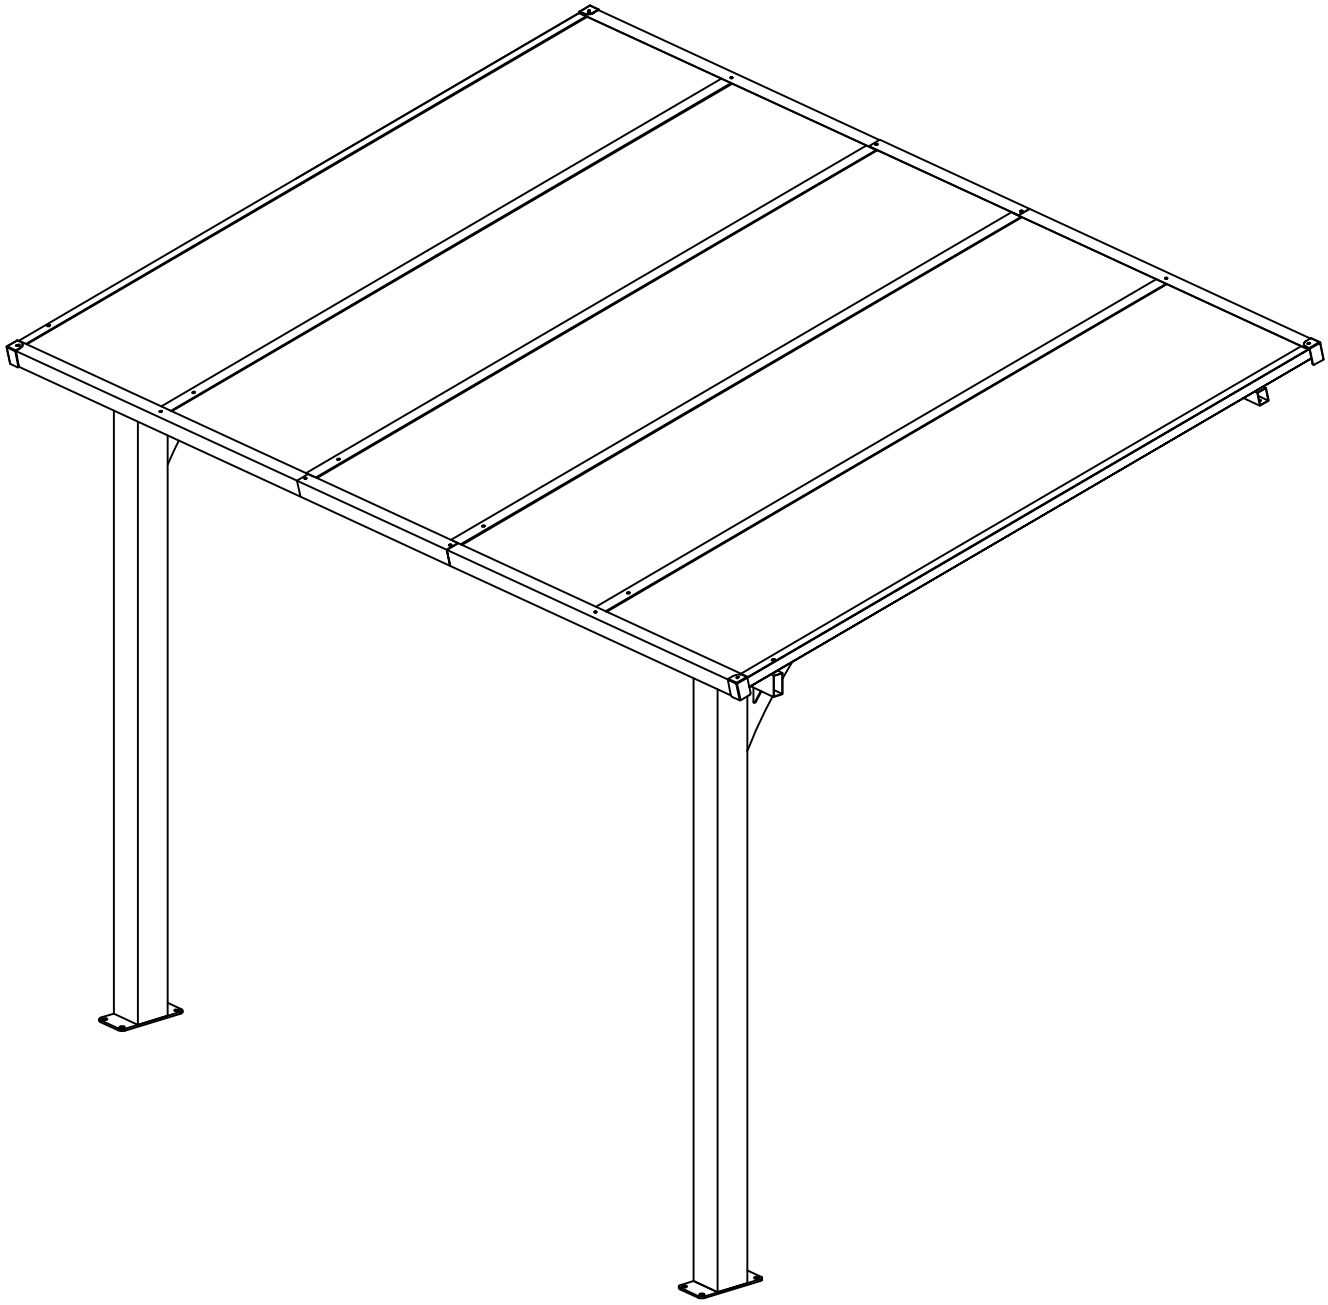
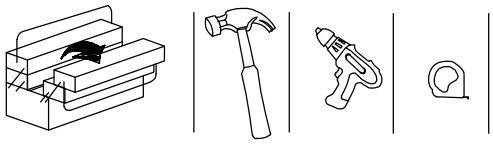
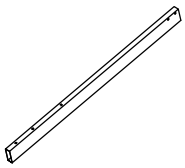


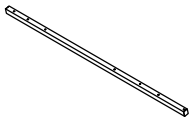
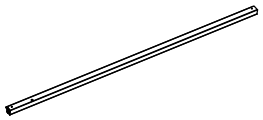
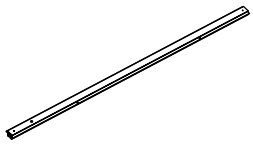
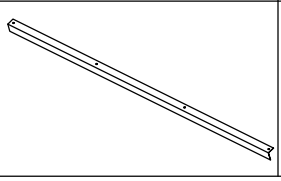
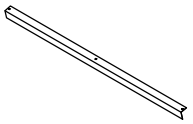

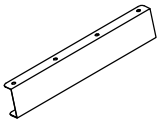
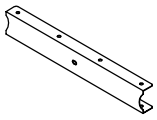


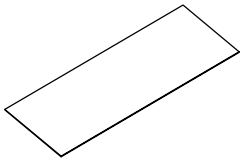












ERX-XB0508







No	Picture	Qty
A		x2
B		x2
C		x1
C1		x1
D		x2
E		x2
F		x1
F0		x1
G		x4
J		x2

No	Picture	Qty
J1		x2
MT		x1
M1		x2
M2		x2
M3		x2
M4		x1
M5		x1
M6		x2
M7		x10
P		x5


No	Picture	Qty
R		x4
T1	 ¢ 12×30	x8
T2	 M6*12	x34
T3	 M6*30	x4
T4	 M6*45	x10
T5	 M6*55	x10
T6	 M6	x8
T7	 M4*12	x12
T8	 M4*6	x20
T9		x8
		x1


No	Picture	Qty
		x1
	 M8	x1
	 M6	x1
	 M6	x1
		x2

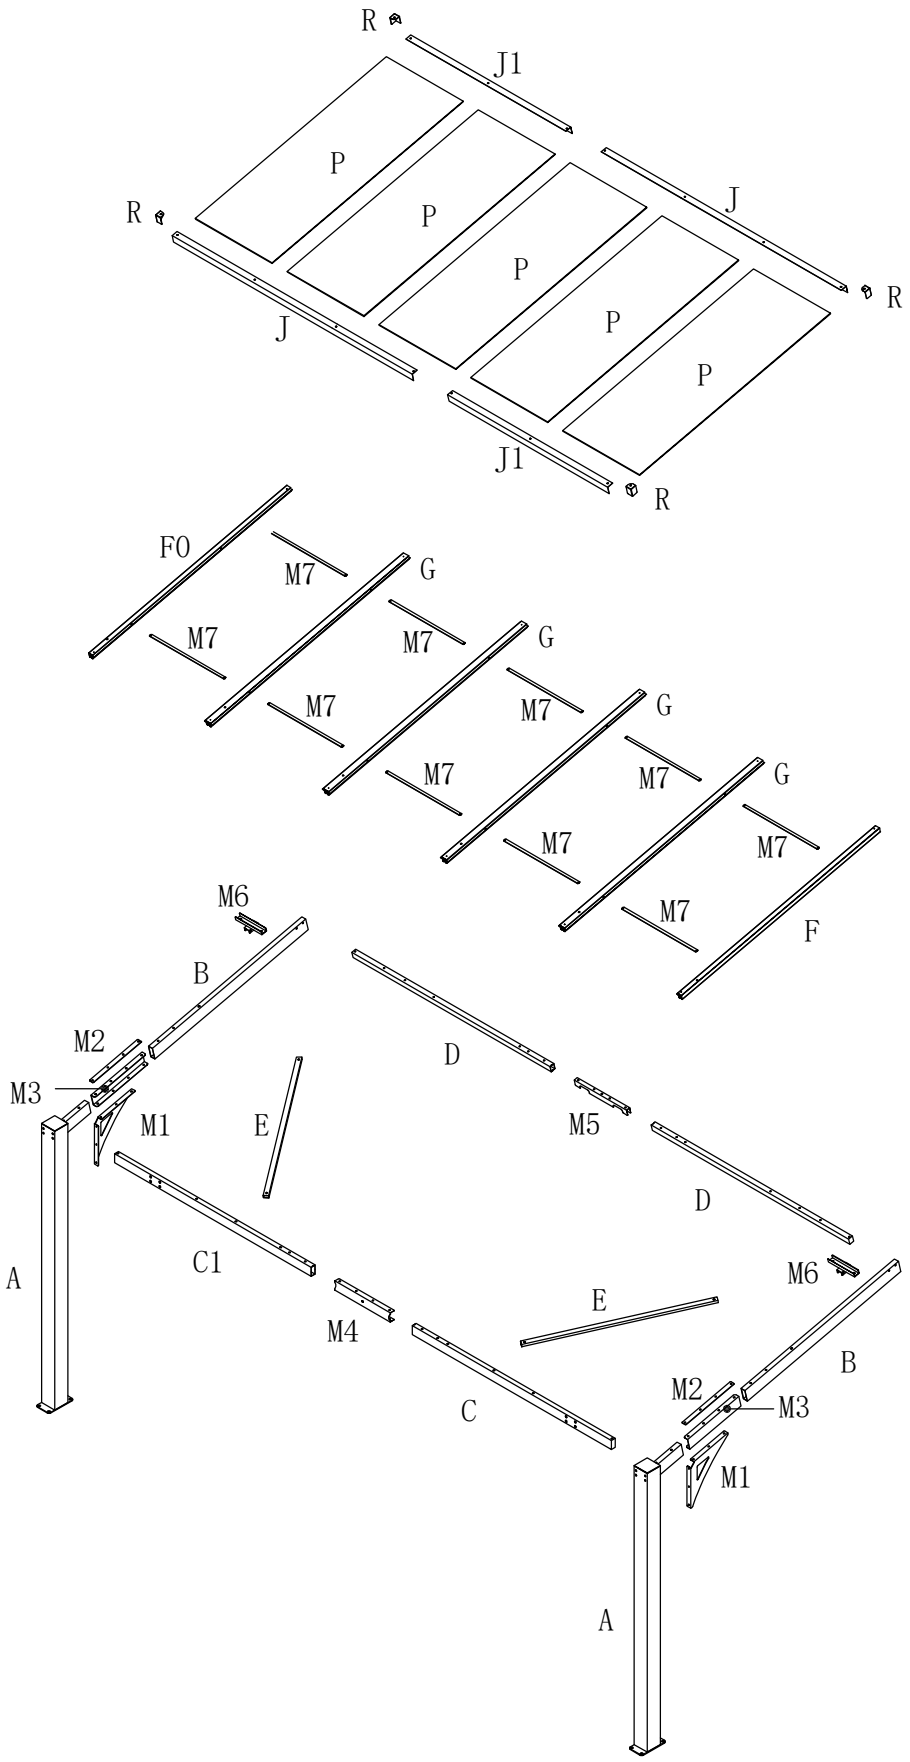
R
J1
P
P
P
P
P
R
J
R
J
J1
R
F0
M7
G
M7
M7
G
M7
M7
G
M7
M7
G
M7
M7
F
M6
B
M2
M3
M1
E
D
M5
D
C1
A
M6
E
M4
B
M2
M3
C
M1
A


C		x1
C1		x1
M4		x1
T2	 M6*12	x8


STEP 1

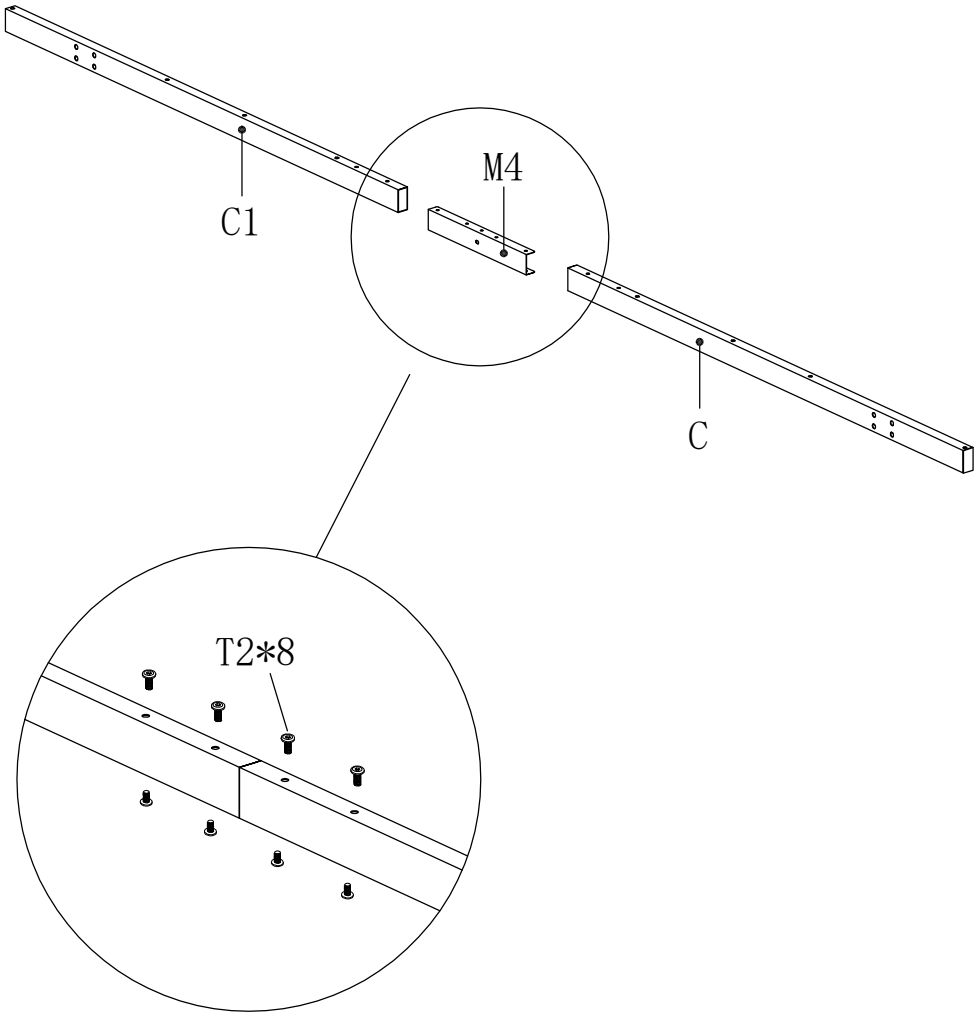


A		x2
T1	 ¢ 12×30	x8

STEP 2

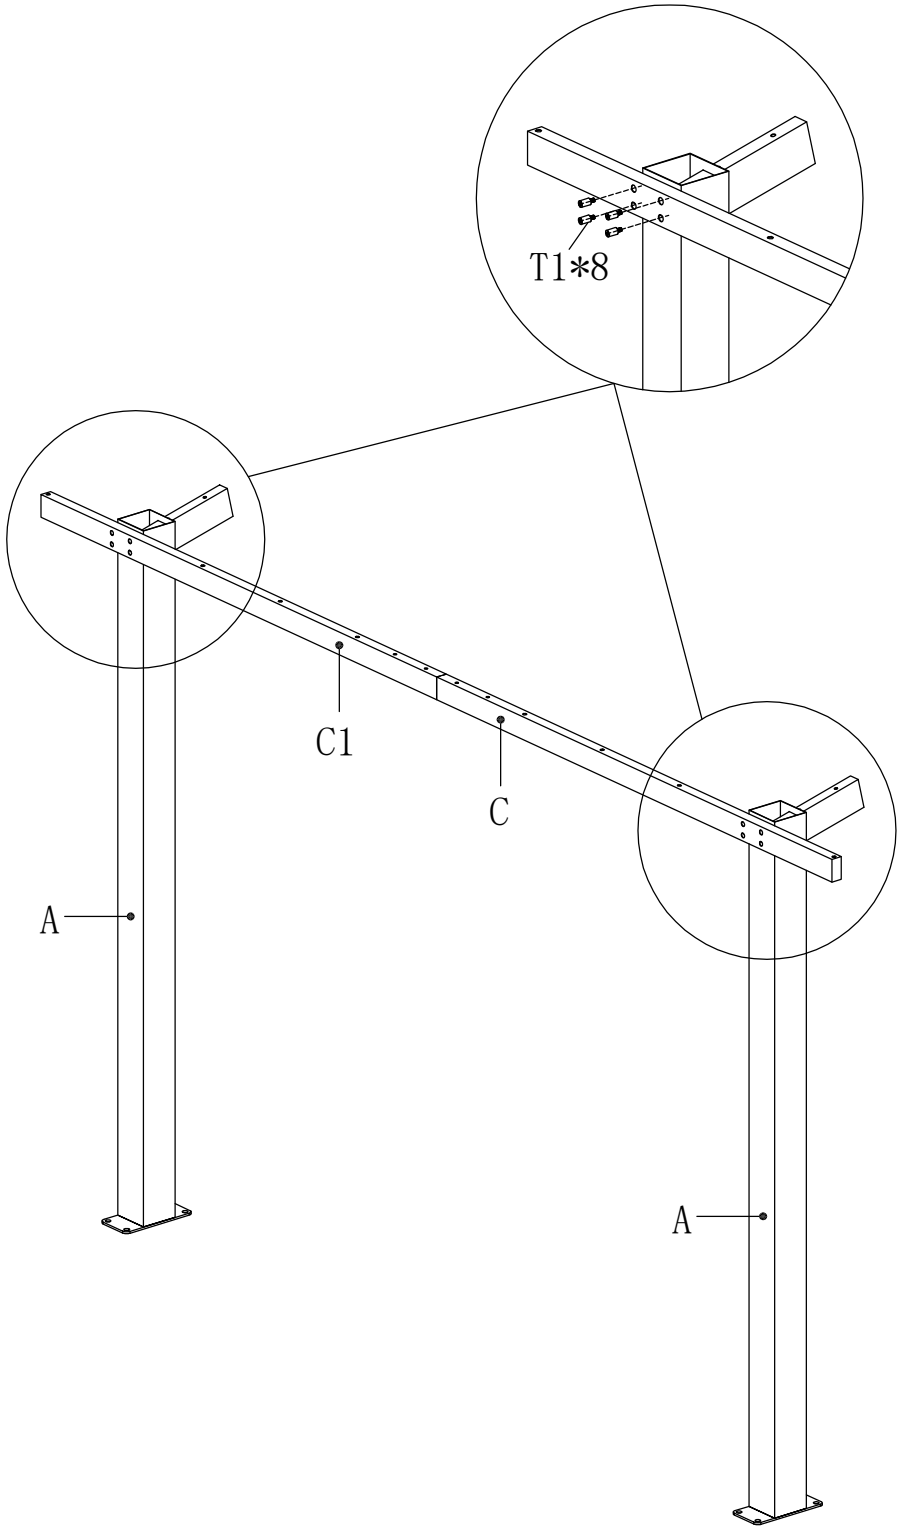



T9		x8

STEP 3

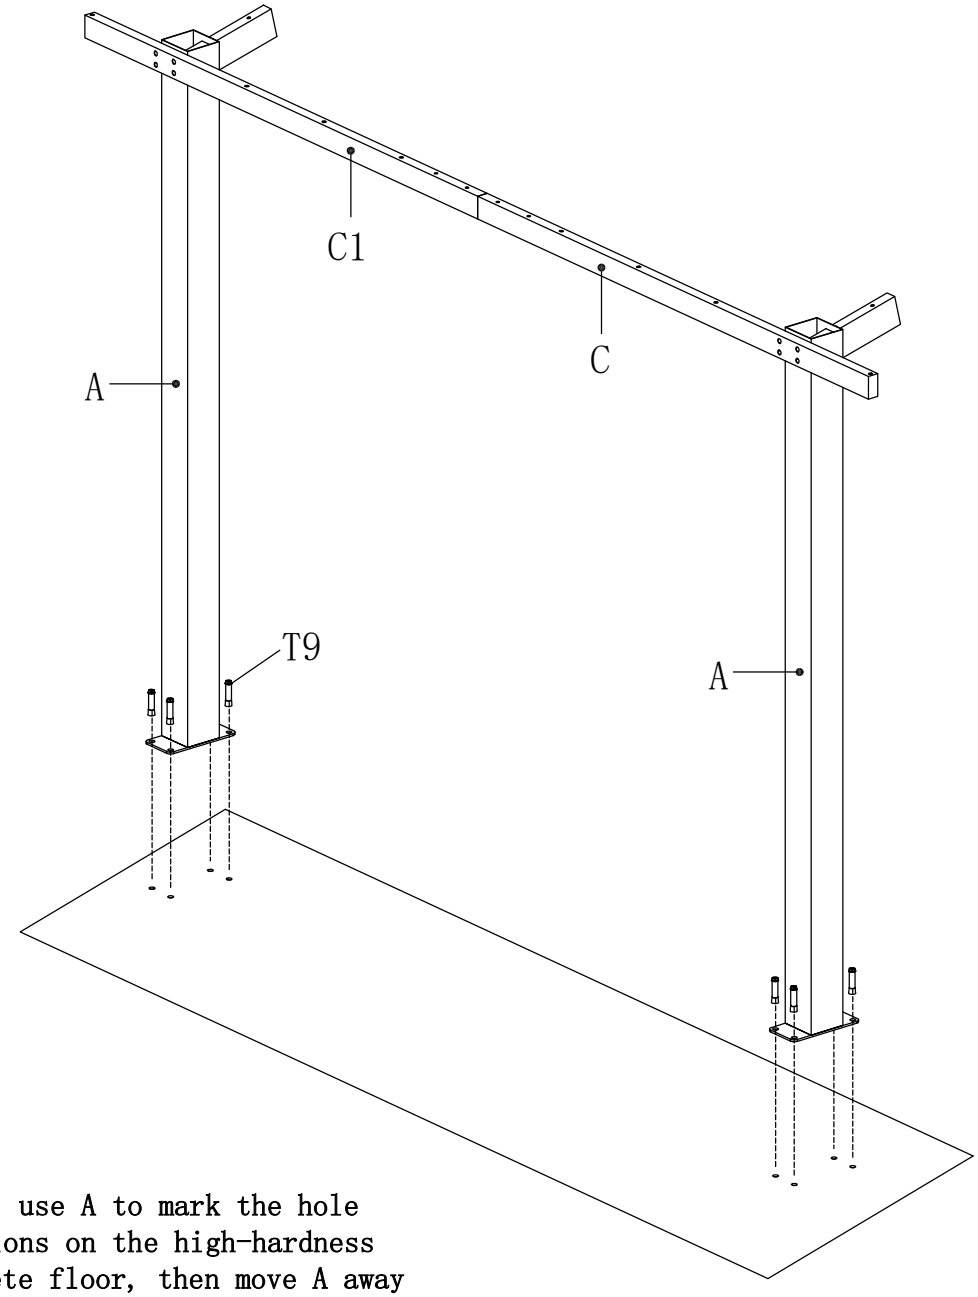


First, use A to mark the hole positions on the high-hardness concrete floor, then move A away to drill; otherwise, there will be interference duri.


まず、Aを使って高硬度のコンクリート床に穴の位置をマークし、その後A をどかして穴あけを行ってください。そうしないと、作業中に干渉が生じます。

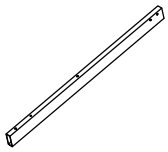B		x2
M2		x2
M3		x2
T2	 M6*12	x8

STEP 4


M1		x2
T2	 M6*12	x14



STEP 5

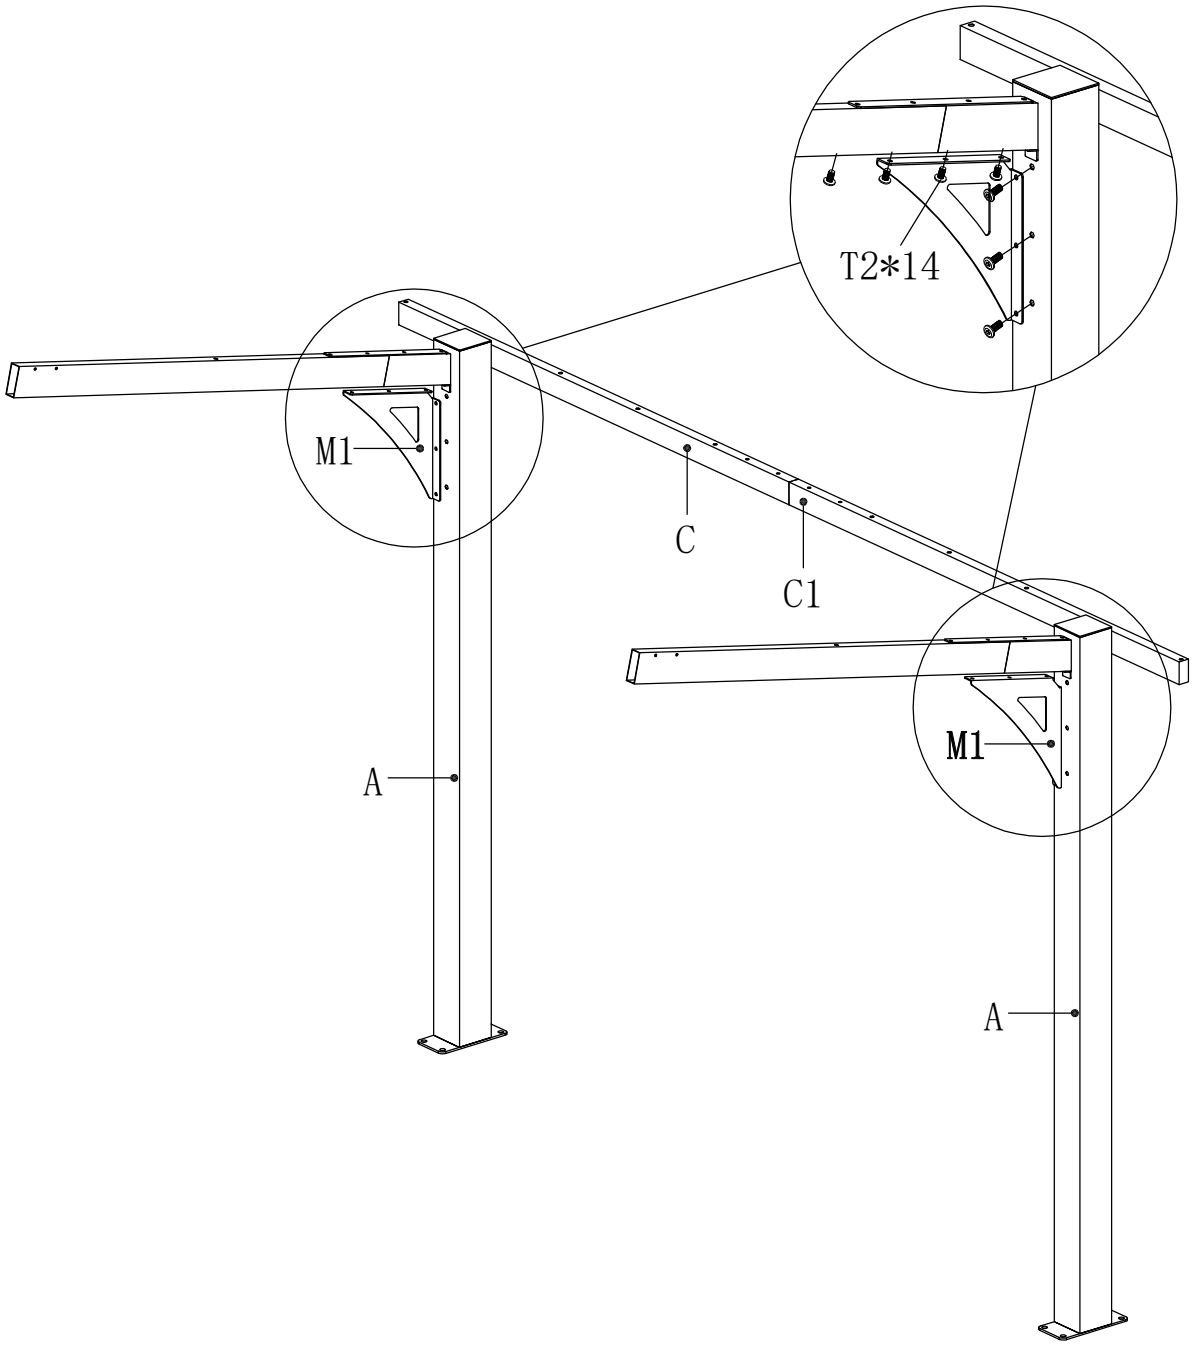


E		x2
T3	 M6*30	x4



STEP 6

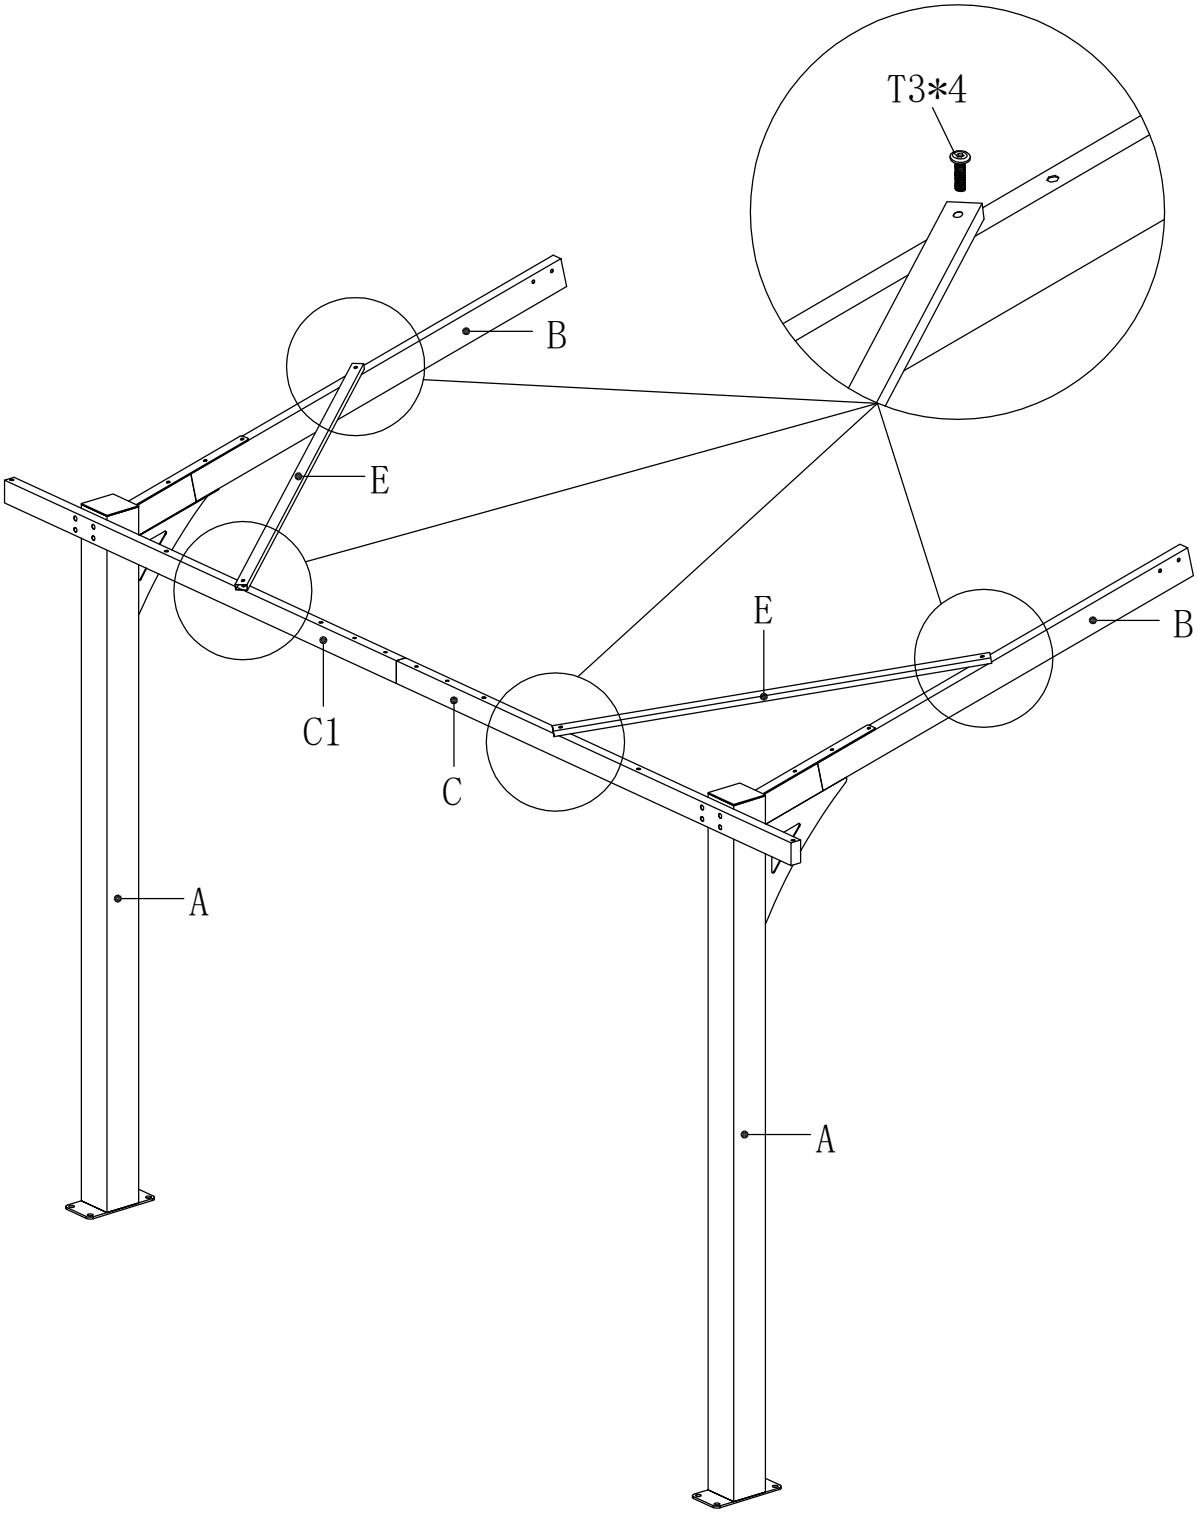


M6		x2
T4	 M6*45	x4
T6	 M6	x4


STEP 7

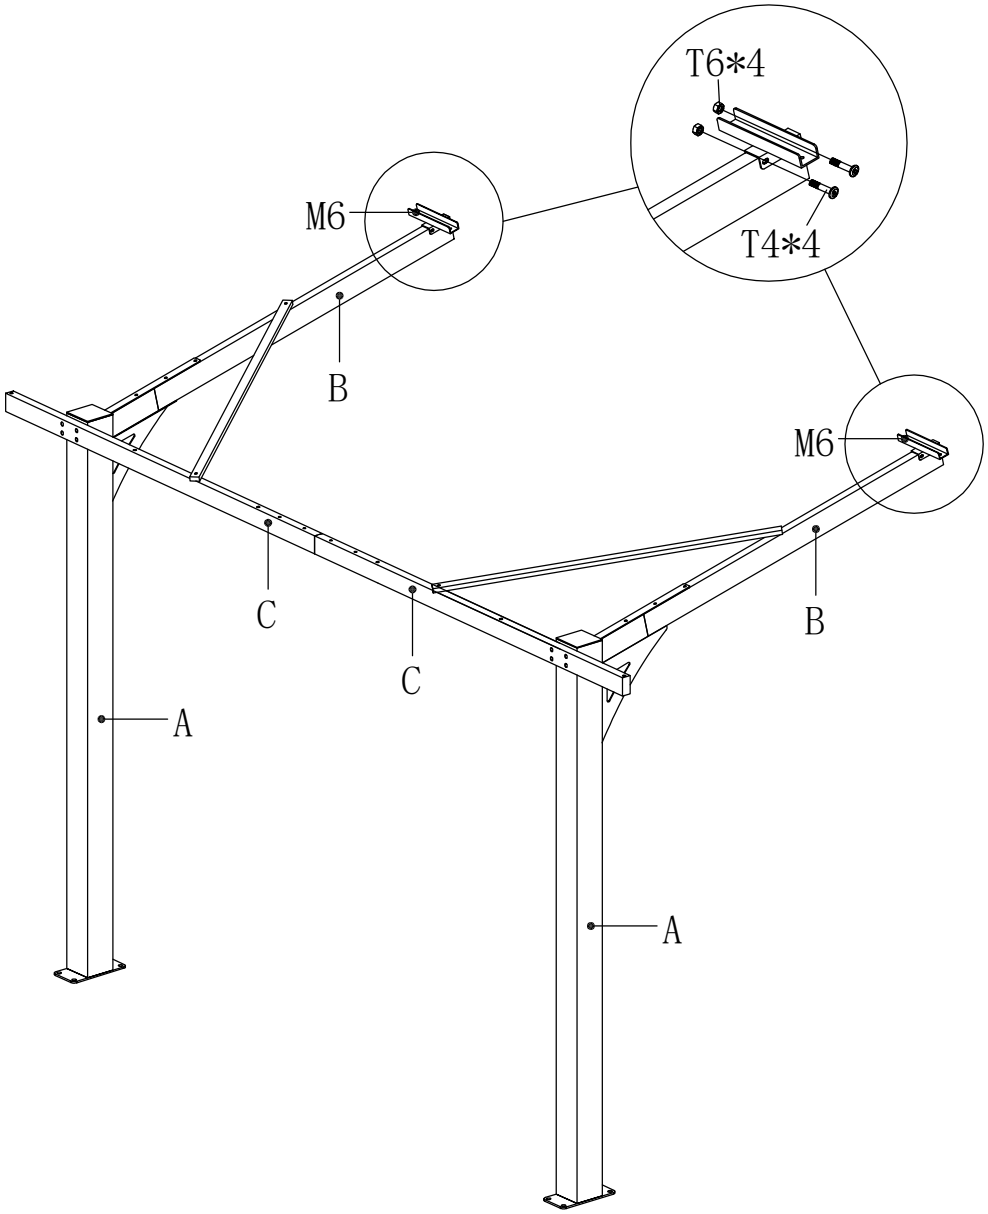


D		x2
M5		x1
T2	 M6*12	x4

STEP 8

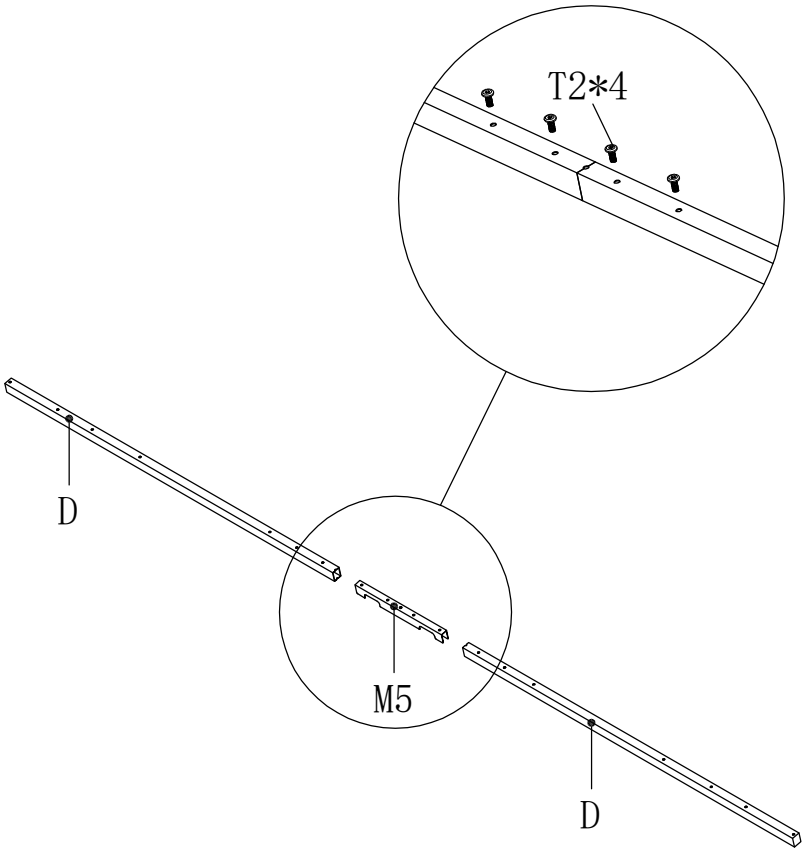


T5	 M6*55	x4
T6	 M6	x4

STEP 9

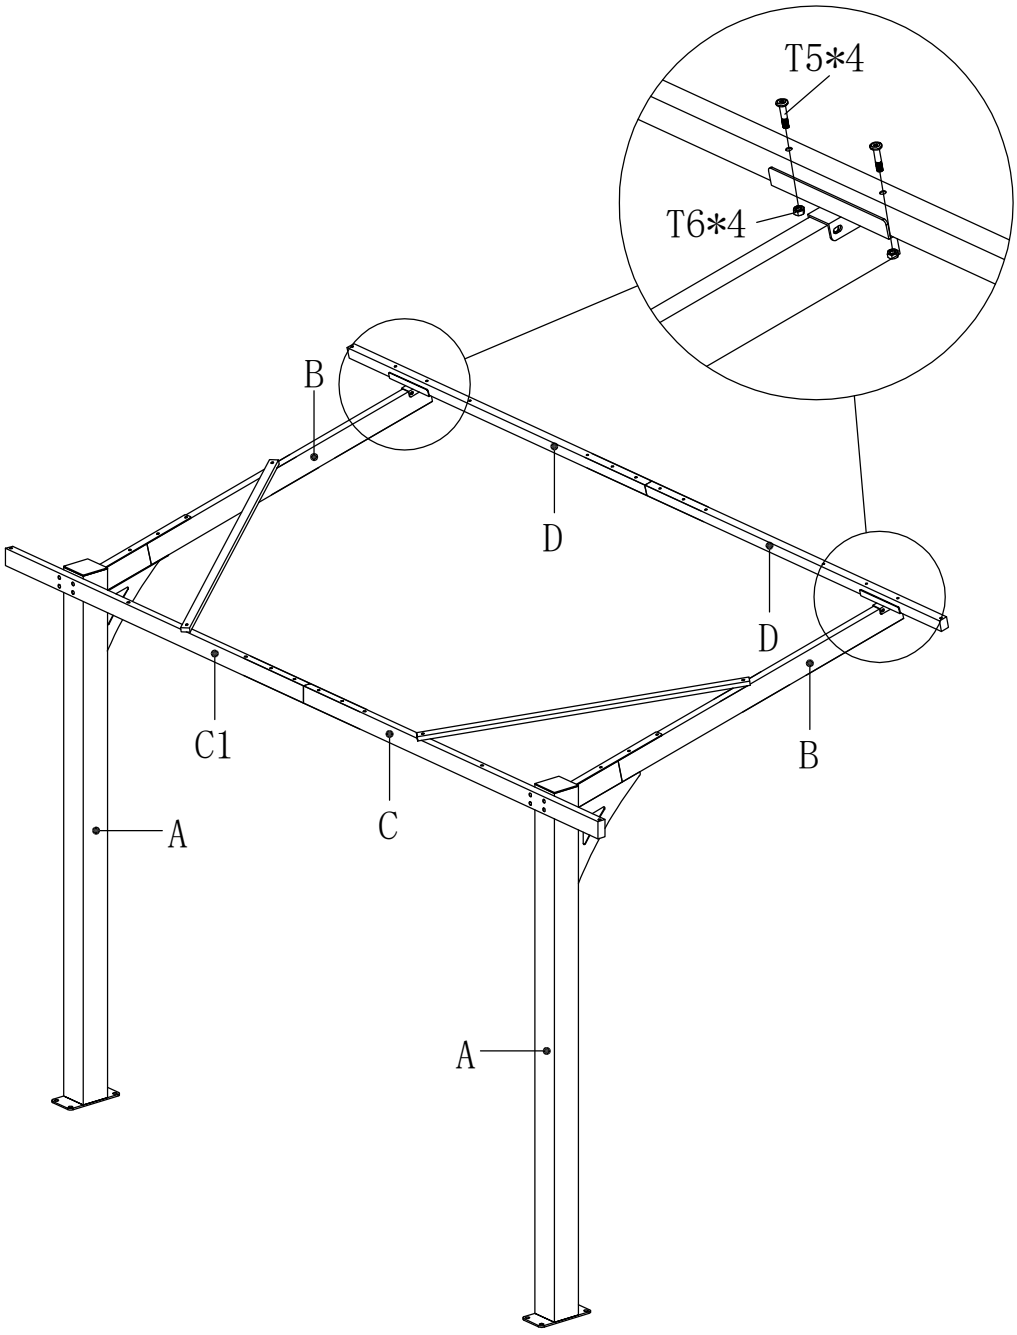


F		x1
F0		x1
MT		x1

STEP 10

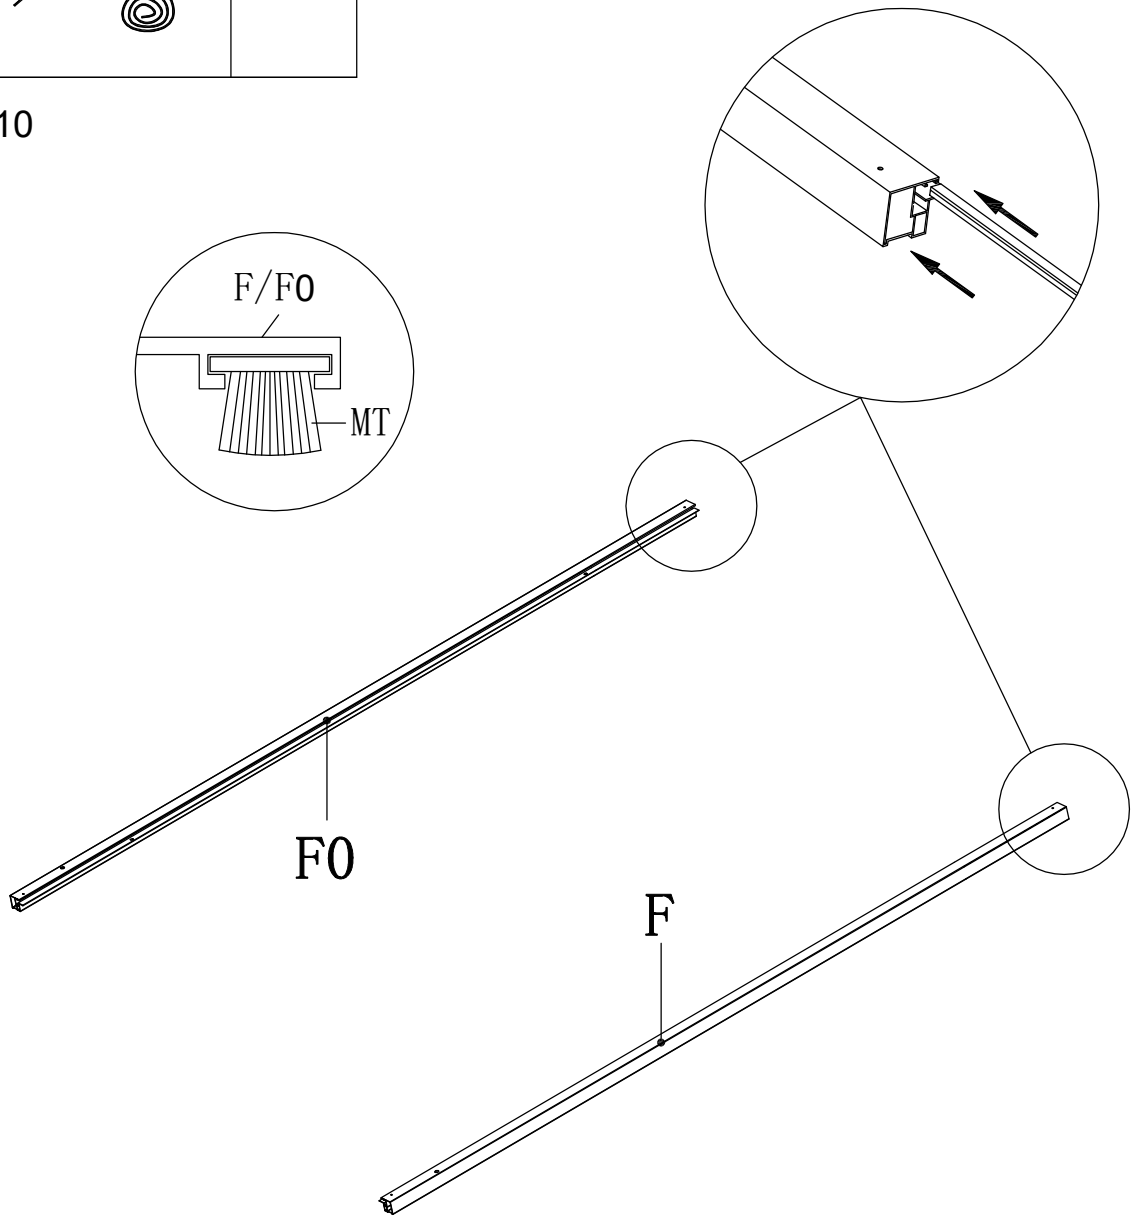


MT is used for waterproofing, in order to make P more compact, the part with fluff is placed downwards, inserted into the groove, and the length is the same as the assembly length of F and F0, and trimmed after positioning.

MTは防水処理に使用されます。P をよりコンパクトにするため、起毛部分を下向きにして溝に挿入し、その長さはFおよびF0の組み立て長さと一致させる必要があります。位置決め後、切り揃えてください。

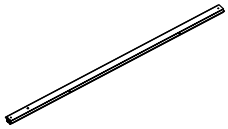
G		x4
MT		x1

STEP 11


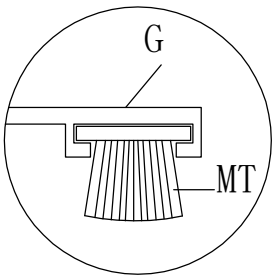


MT is used for waterproofing, in order to make P more compact, the part with fluff is placed downwards, inserted into the groove, and the length is the same as the assembly length of G, and trimmed after positioning.


MTは防水用として使用されます。Pをよりコンパクトにするため、綿毛のある部分を下向きにして溝に挿入します。その長さはGの組み立て長さと同じであり、位置合わせ後に切り揃えます。

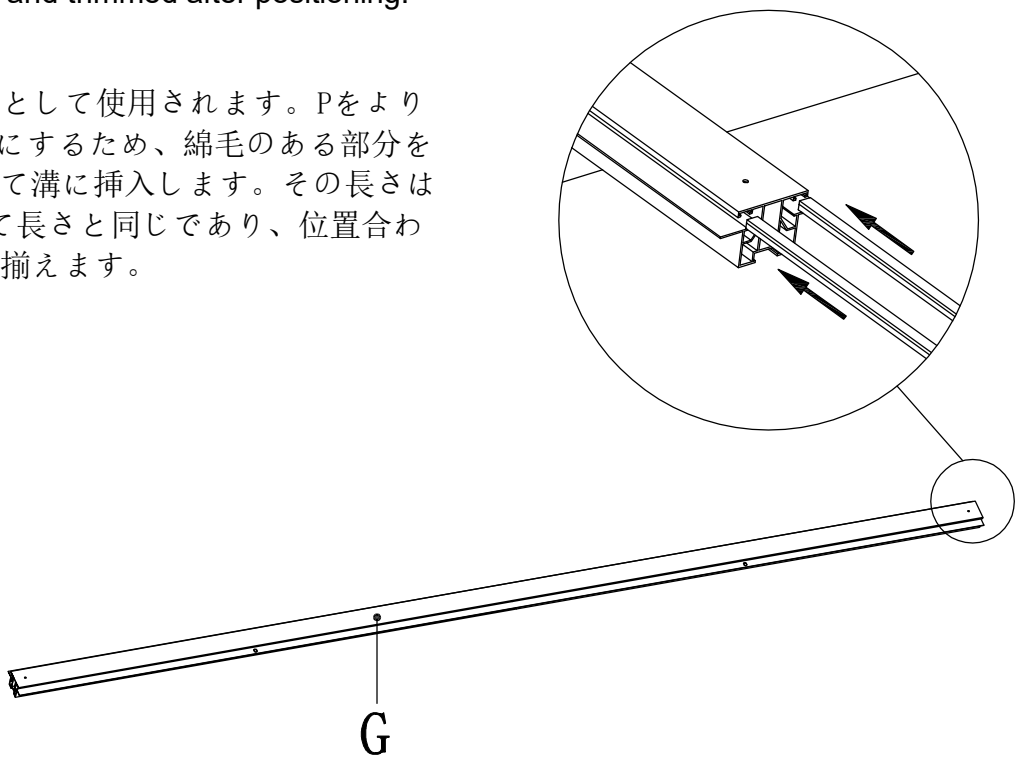


X4


T4	 M6*45	x6
T5	 M6*55	x6




STEP 12

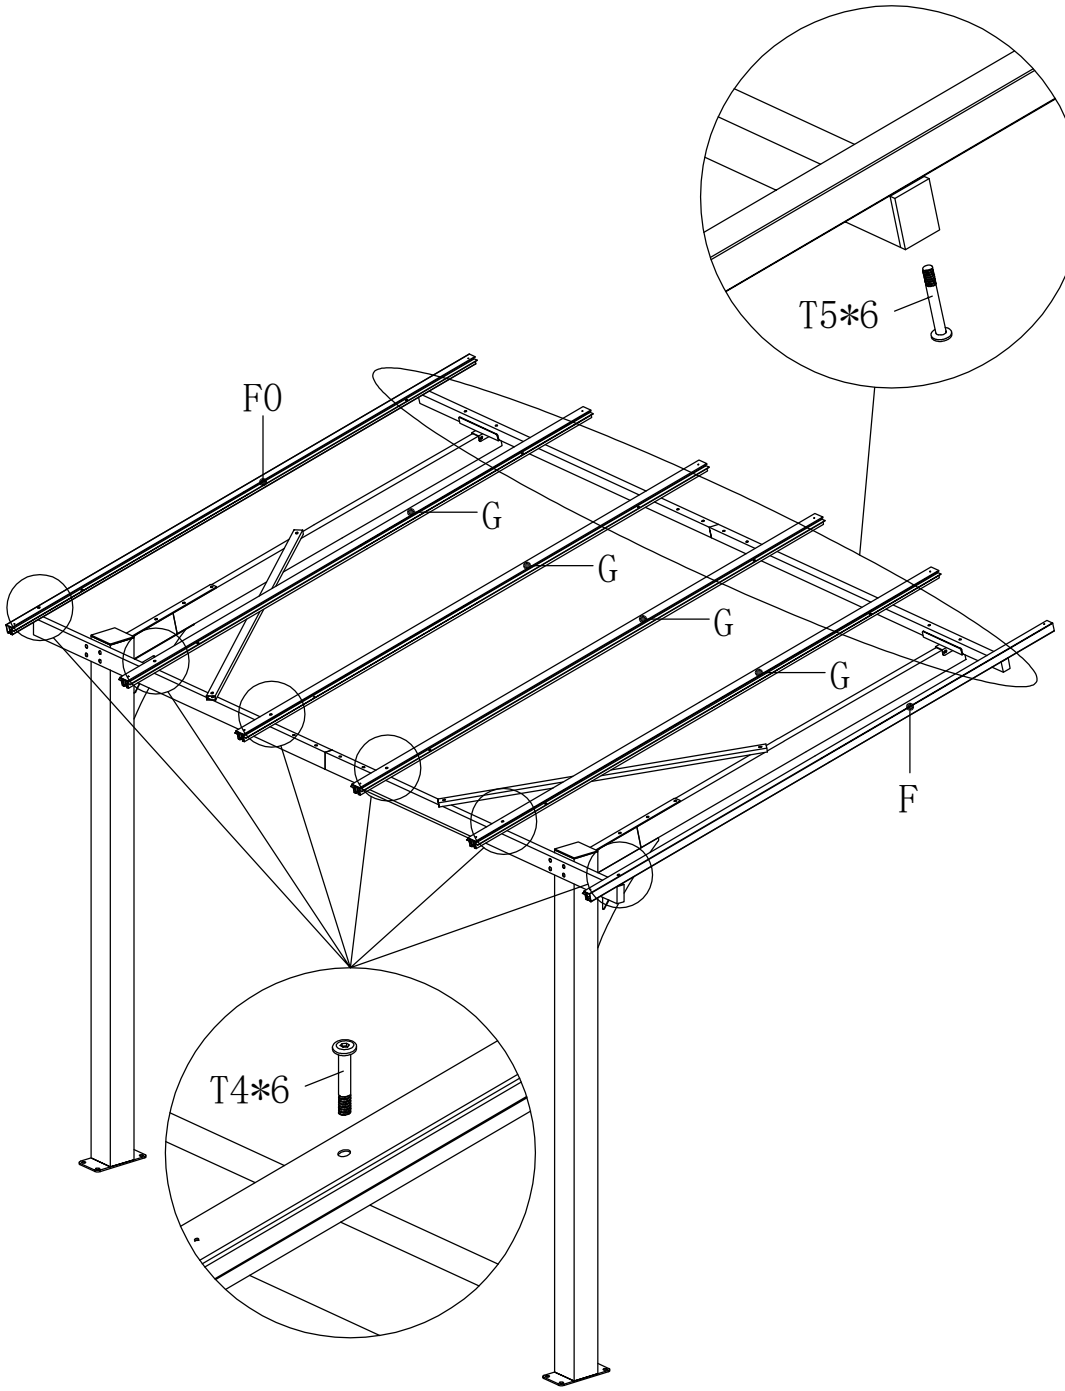

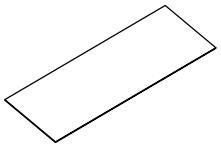
P		x5


STEP 13

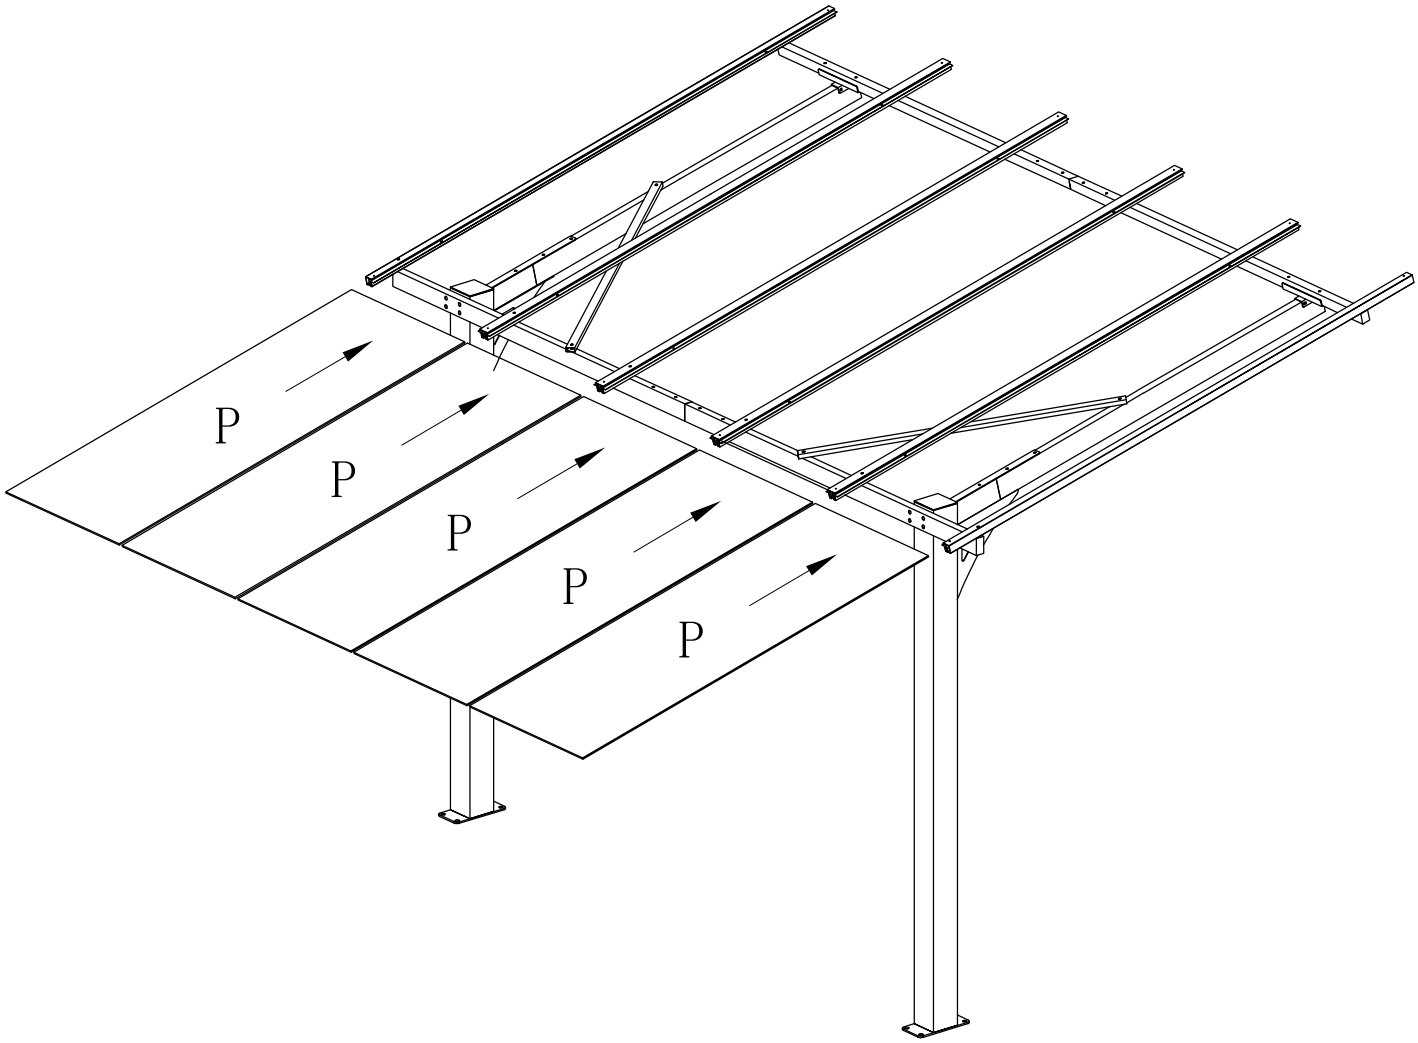


J		x2
J1		x2
R		x4
T7	 M4 x 12	x12

STEP 14

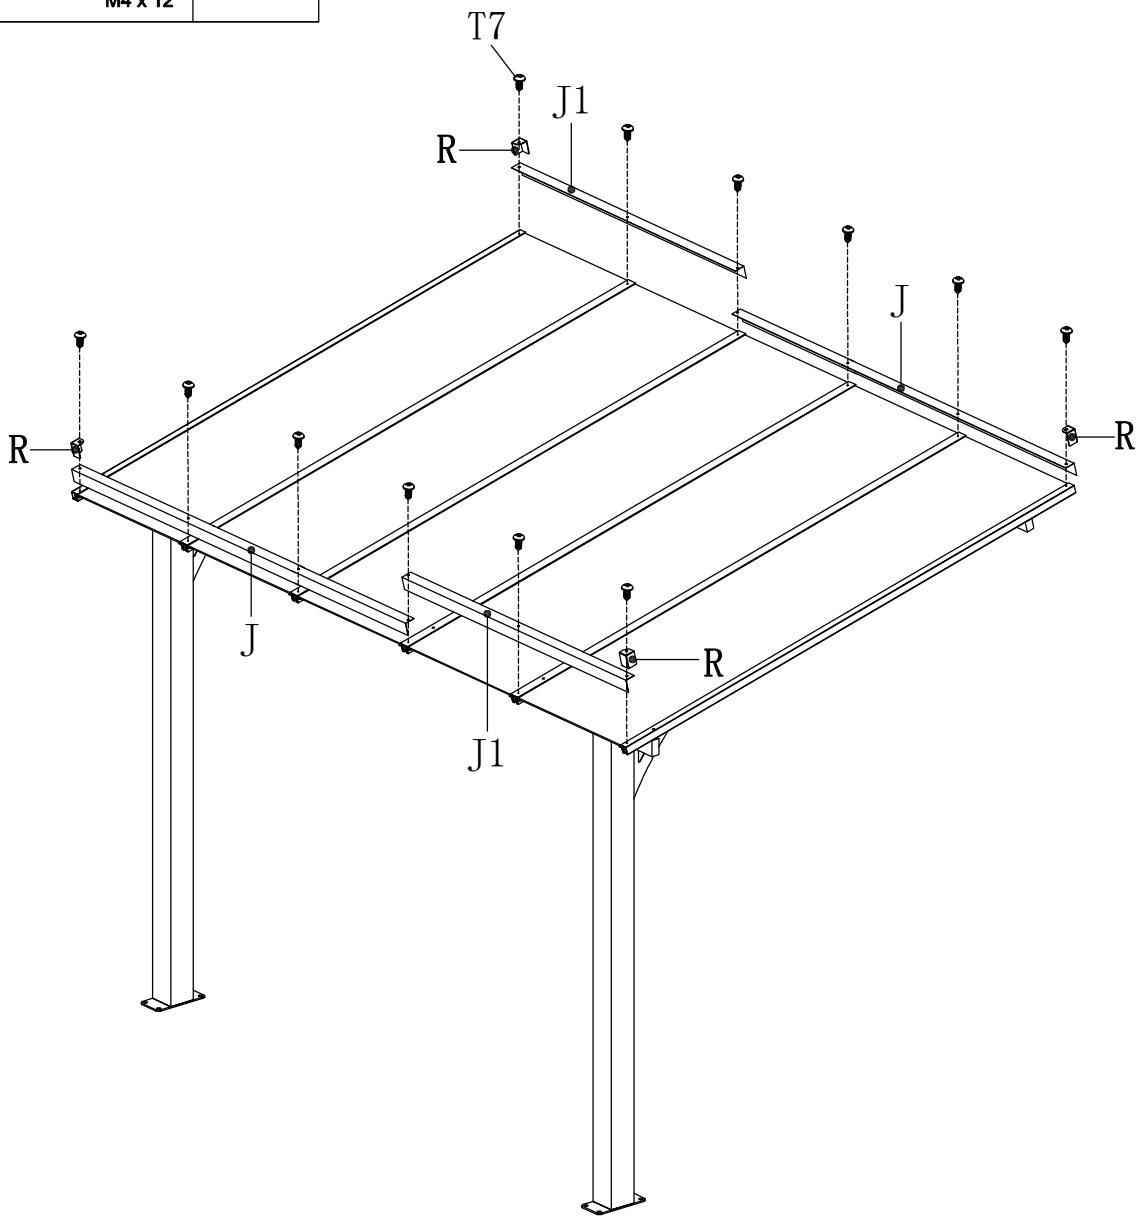

M7		x10
T8	 M4 * 6	x20

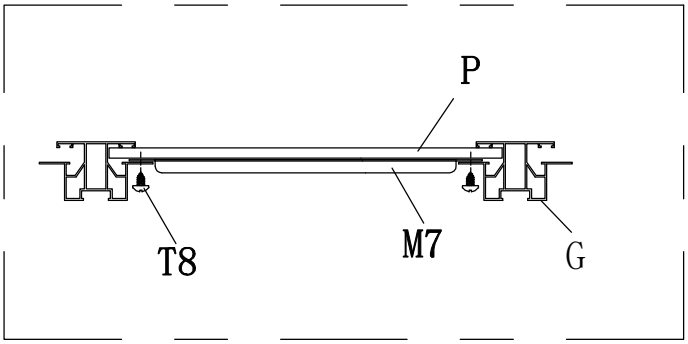

STEP 15

