
ASSEMBLY INSTRUCTIONS
CONSOLE











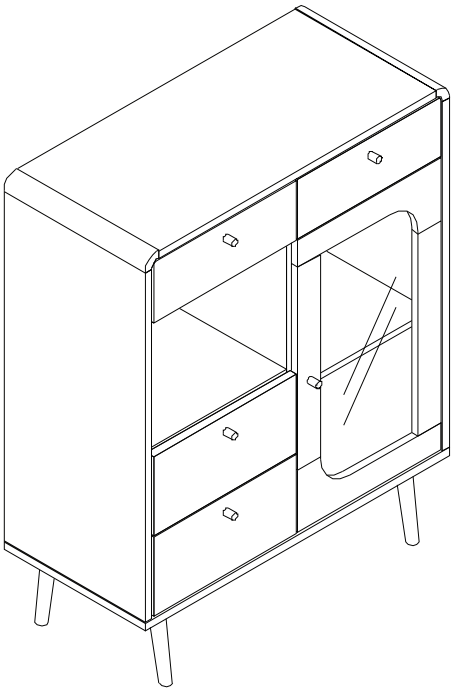


NOTE TO CUSTOMERS:









- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on a dry, soft, smooth and clean surfaces during assembly to prevent any damage. Avoid damp and direct sunlight.
- During assembly do not over tighten the screws or bolts, as this may damage the product.
- Please ensure you retain all the product packaging until the item is completely assembled.
- Periodically check all fitting and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

ASSEMBLY INSTRUCTIONS

PARTS IDENTIFICATION

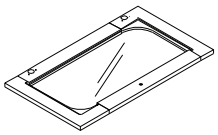P1 Quantity: 1  Side Panel-Left	**P2** Quantity: 1  Side Panel- Right	**P3** Quantity: 1  Center Panel	**P4** Quantity: 1  Stretcher Panel- Left	**P5** Quantity: 1  Stretcher Panel- Right
P6 Quantity: 2  Nailer(Upper Back) Panel	**P7** Quantity: 1  Leg Support	**P8** Quantity: 1  Fixed Shelf	**P9** Quantity: 1  Base Panel	**P10** Quantity: 2  Back Panel
P11 Quantity: 1  Adjustable Shelf	**P12** Quantity: 2  Corner Connector	**P13** Quantity: 1  Top Panel	**P14** Quantity: 1  Upper Drawer Front-Left	**P15** Quantity: 1  Upper Drawer Front-Right
P16 Quantity: 2  Lower Drawer Front	**P17** Quantity: 2  Upper Drawer Side-Left	**P18** Quantity: 2  Upper Drawer Side-Right	**P19** Quantity: 2  Upper Drawer -Back	**P20** Quantity: 4  Drawer Support Panel
P21 Quantity: 4  Drawer Base Panel	**P22** Quantity: 2  Lower Drawer Side-Left	**P23** Quantity: 2  Lower Drawer Side-Right	**P24** Quantity: 2  Lower Drawer -Back	**P25** Quantity: 1  Door with Glass

HARDWARE LIST

H1 Wooden Dowel M8 x 25  Ø 5/16″ 1″ Quantity: 16 pcs	**H2** Wooden Dowel M6 x 25  Ø 15/64″ 1″ Quantity: 30 pcs	**H3** Connecting Bolts  Quantity: 27 pcs	**H4** Cam Lock 15 x 12.5mm  Quantity: 12 pcs	**H5** Drawer Slide  Quantity: 4 sets
H6 Screw m4 x 12 for Slides  Ø 5/32″ 15/32″ Quantity: 48 pcs	**H7** Screw m5.1 x 38 for leg support  Ø 13/64″ 1 31/64″ Quantity: 2 pcs	**H8** Screw #9 X 1 1/2″  Ø 11/64″ 1 1/2″ Quantity: 28 pcs	**H9** Screw #9 X 2″  Ø 11/64″ 2″ Quantity: 6 pcs	**H10** Plastic Leg  Quantity: 4 pcs
H11 Screw for Legs M3.5 x 16 pan head  Ø 9/64″ 5/8″ Quantity: 17 pcs	**H12** Plastic Nail Leg Stud  Quantity: 1 pc	**H13** Cam Lock 12 x 9.5mm  Quantity: 15 pcs	**H14** Door/Drawer Pull  Quantity: 5 pcs	**H15** Screw m4 x 22 for door pull  Ø 5/32″ 55/64″ Quantity: 5 pcs
H16 Hinges Quantity: 2 pcs	**H17** Screw for hinges M3.5 x 14 Ø 9/64″ 35/64″ Quantity: 8 pcs	**H18** Wedge for Back Quantity: 8 pcs	**H19** Screw for wedges M3 x 20 Ø 1/8″ 25/32″ Quantity: 8 pcs	**H20** Shelf support pin Quantity: 4 pcs
H21 Colored Sticker Quantity: 2 pcs	**H22** Anti-tip web strip Quantity: 1 pc	**H23** Wall plug for Screw Quantity: 1 pc	**H24** Screw for mount to wall #6 x 1 1/4″ Ø 9/64″ 1 1/4″ Quantity: 1 pc	


Tools required:

MALLET


HOUSEHOLD SCREWDRIVER

ASSEMBLY INSTRUCTIONS


STEP 1 *Insert wooden dowels (H1) into the following parts,*

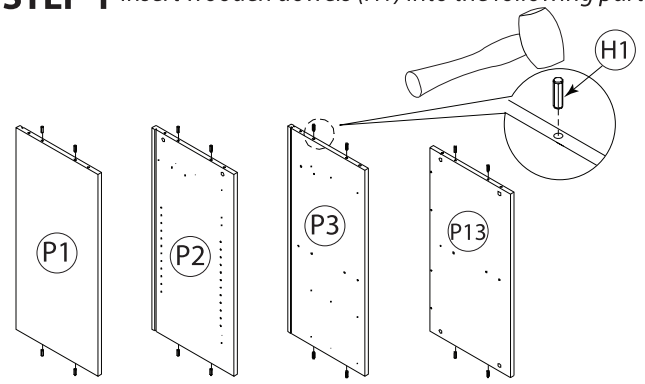


STEP 2 *Insert wooden dowels (H2) into the following parts,*

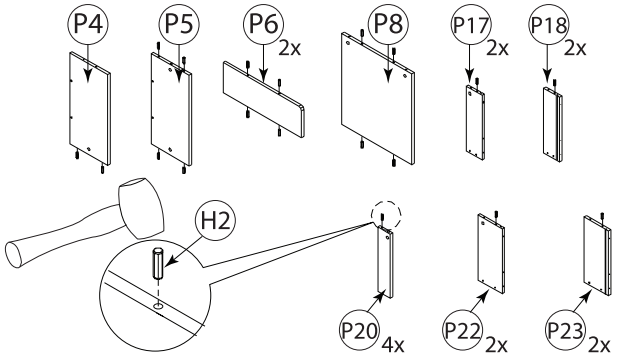


STEP 3 *Align the Connecting Bolt (H3), use a household Philip Screwdriver to drive the bolt until it is snug.*

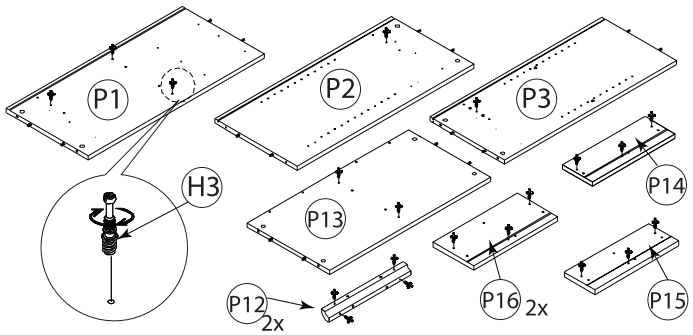


STEP 4 *Install drawer slides.*

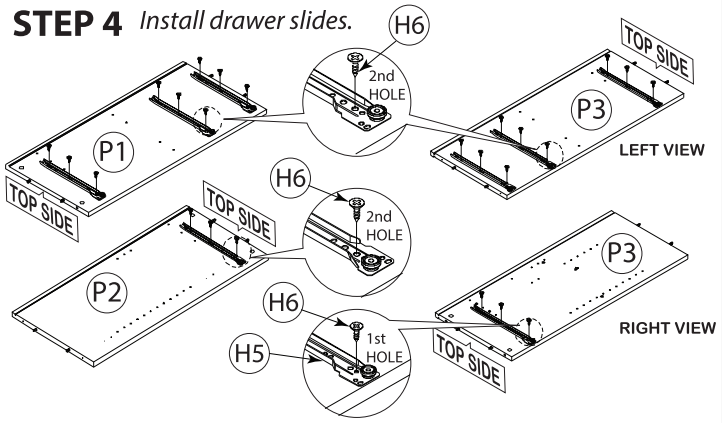

STEP 5 *Install Leg Support (P7) to Base panel (P9).*

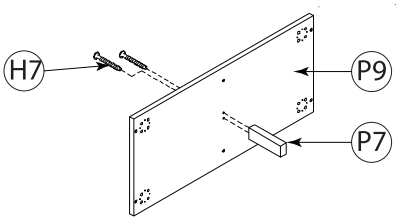


STEP 6

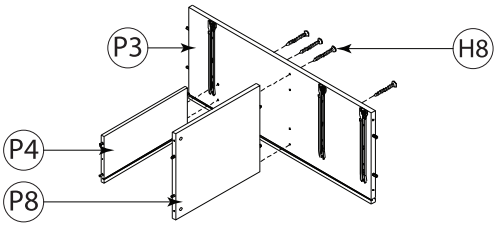


STEP 7

Align the Camlock (H13) & use a screwdriver to turn it to locked position when it is connected to the bolt.

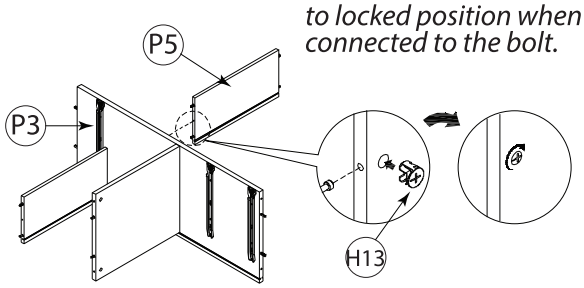


STEP 8

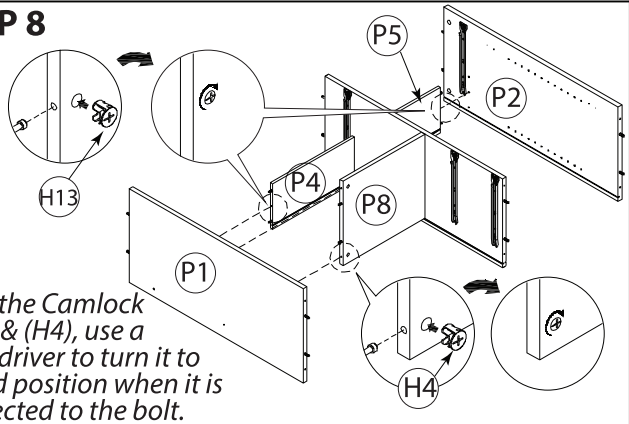


Align the Camlock (H13) & (H4), use a screwdriver to turn it to locked position when it is connected to the bolt.

STEP 9

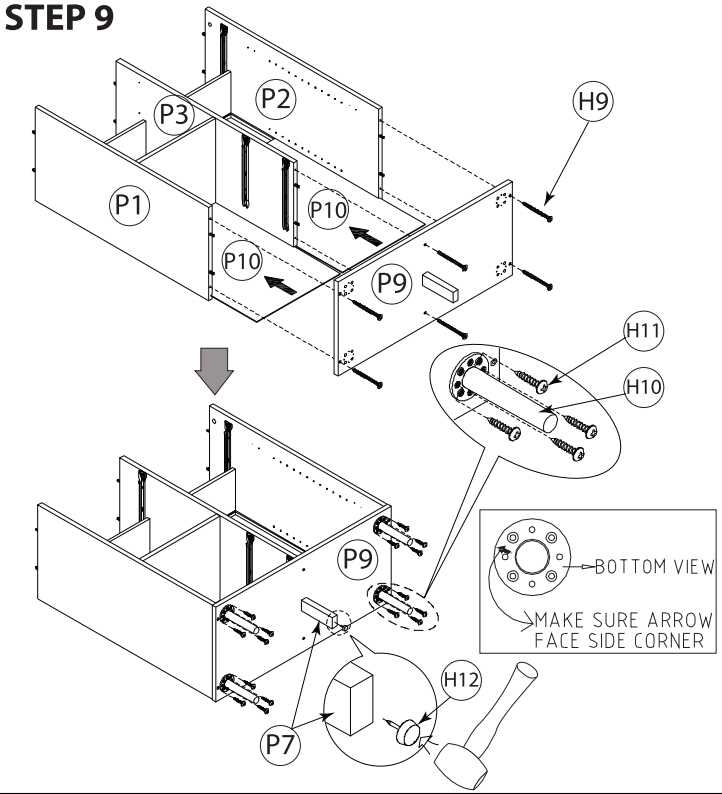


ASSEMBLY INSTRUCTIONS

STEP 10

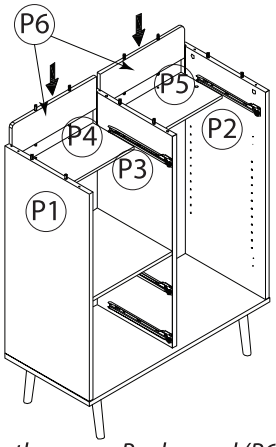


Slide in the upper Back panel (P6)

STEP 11

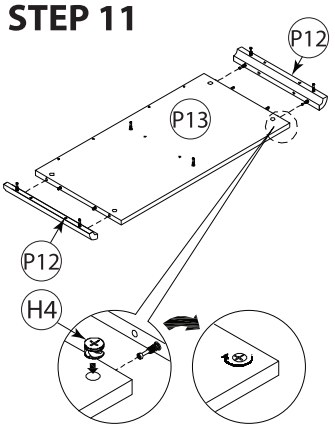

Align the Camlock (H4) & use a screwdriver to turn it to locked position when it is connected to the bolt.


STEP 12

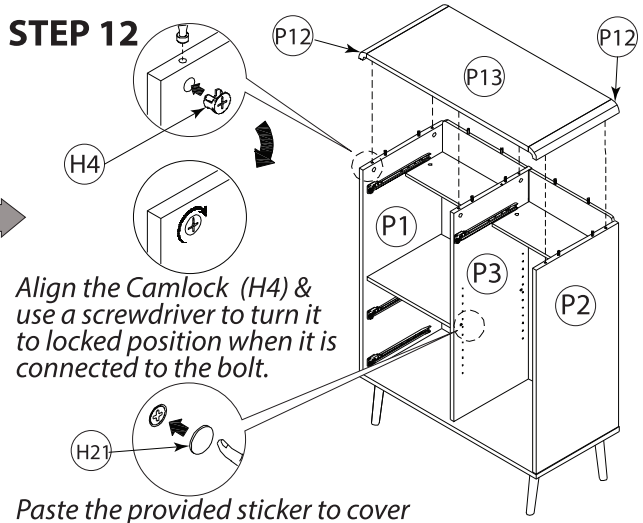


Align the Camlock (H4) & use a screwdriver to turn it to locked position when it is connected to the bolt.

Paste the provided sticker to cover the screw hole.

STEP 13

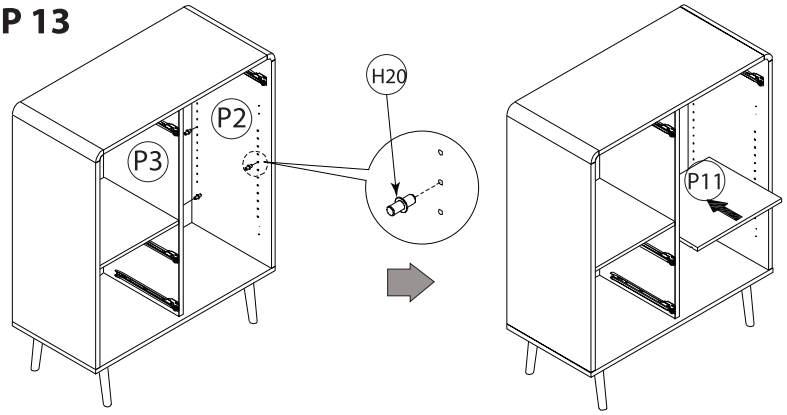


STEP 14

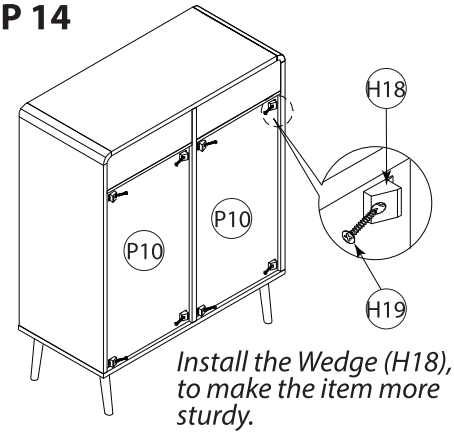

Install the Wedge (H18), to make the item more sturdy.


STEP 15 UPPER DRAWERS (1 LEFT & 1 RIGHT)

Align the Camlock (H13) & use a screwdriver to turn it to locked position when it is connected to the bolt.

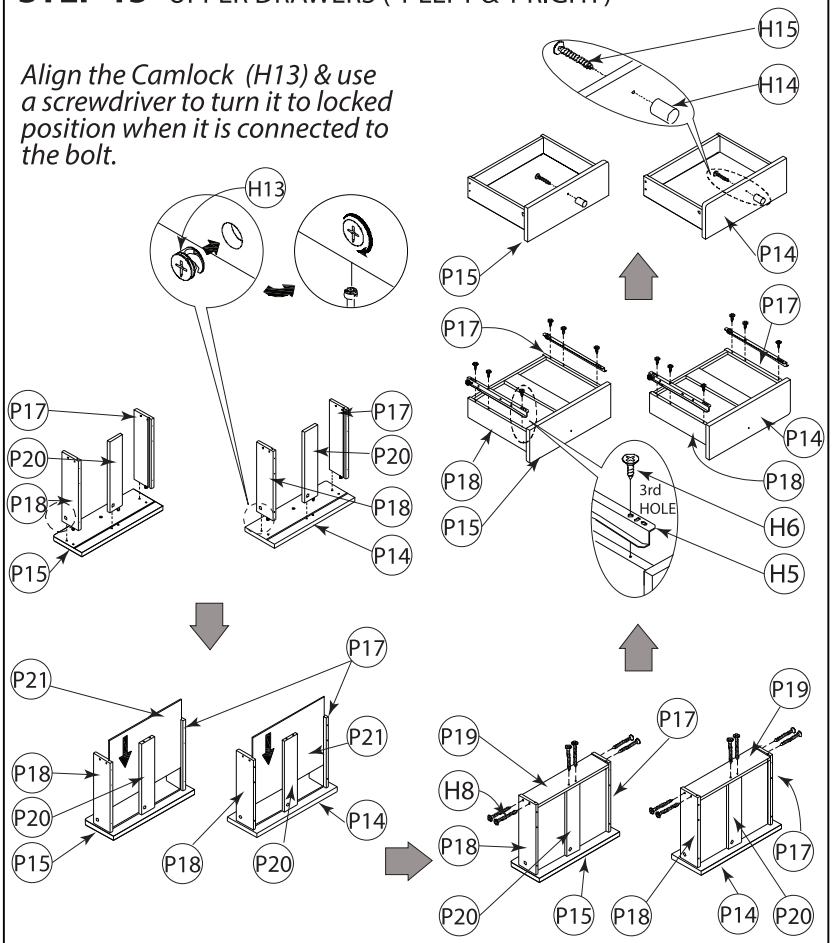


STEP 16 LOWER DRAWERS - 2 PIECES

Align the Camlock (H13) & use a screwdriver to turn it to locked position when it is connected to the bolt.

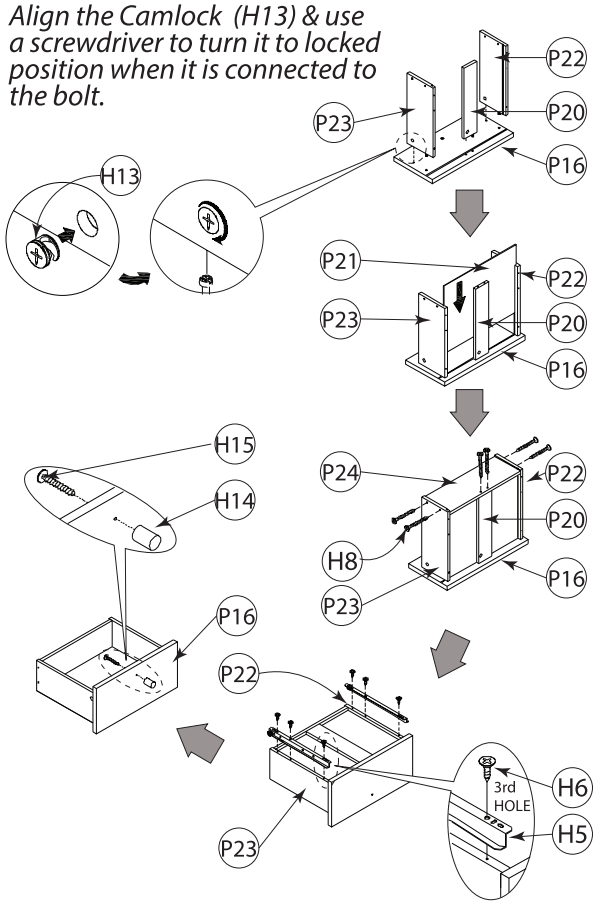


ASSEMBLY INSTRUCTIONS


STEP 17 *Put each drawer in its place.*

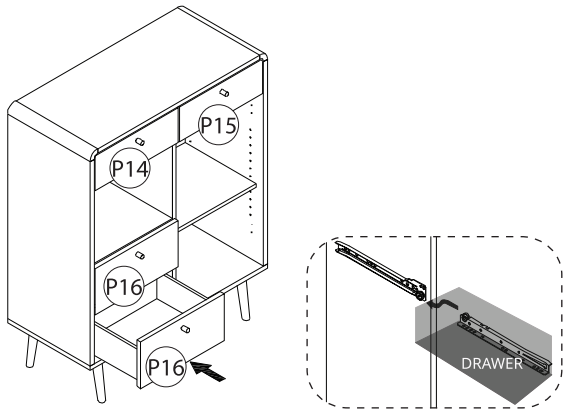


STEP 18 *Install the fittings to the door.*

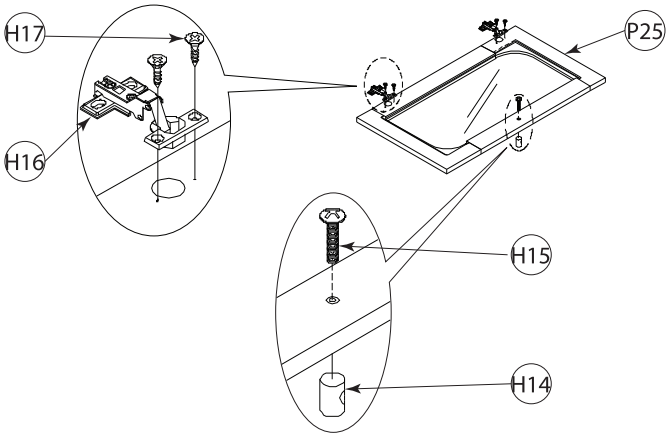


STEP 19 *Install the door.*

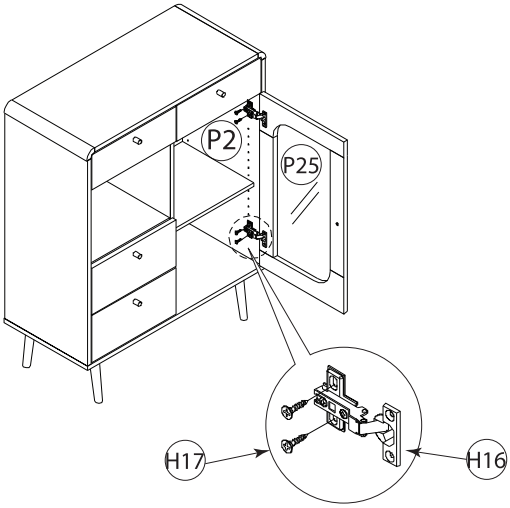


GUIDES TO PROPERLY INSTALL THE DOOR
BY ADJUSTING THE HINGES

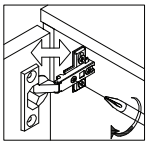

A-Lateral adjustment by adjusting the screws in hinges arm.

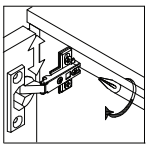


B-Vertical adjustment by adjusting the screws in hinges arm.

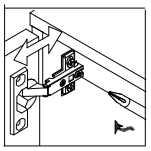

C-Front to back by by adjusting the sliding hinges andtighten it.

STEP 20 Install the fittings to secure the unit from tipping over.

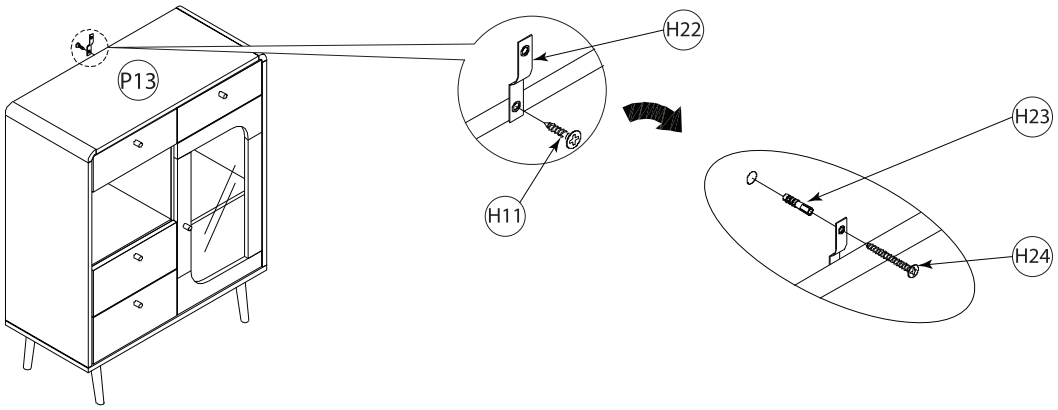

IMPORTANT!

ANCHOR THE UNIT TO THE WALL TO AVOID TIPPING.
PLACE THE HEAVIEST ITEMS IN THE LOWEST SHELVES.
NEVER ALLOW CHILDREN TO STAND OR CLIMB ON THE UNIT.
THE USE OF TIP-OVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE THE RISK OF TIP-OVER.