
EN

ASSEMBLY INSTRUCTIONS
OUTDOOR BENCH

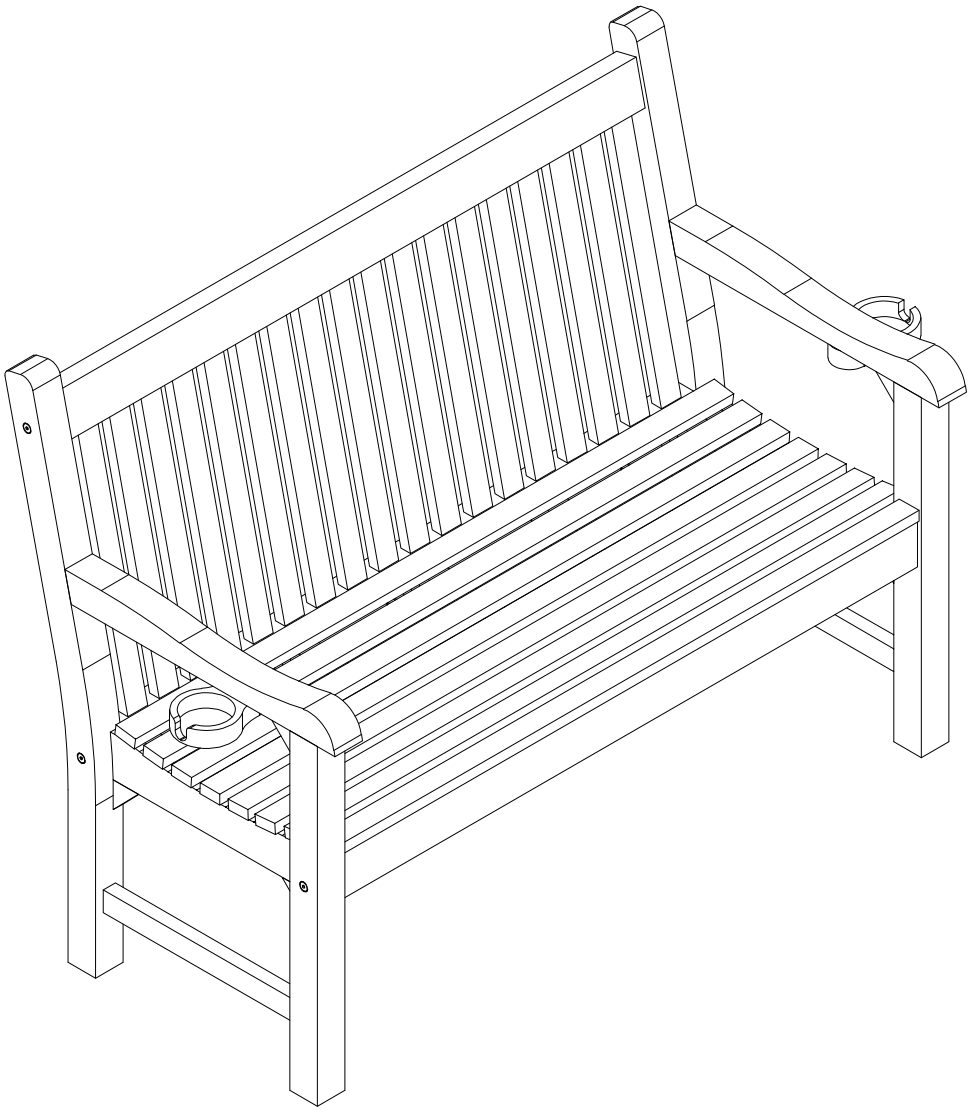

MTOB88

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Important Safety Information

- Please read all instructions carefully before assembling this OUTDOOR BENCH.
- For your safety, assembly by two or more adults is strongly recommended.
- Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.
- Hardware may loosen overtime. Periodically check that all connections are tight.


Before Assembly

- Power tools are highly recommended for assembly.
- Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.
- The shipping box provides an ideal work surface.
- To avoid accidentally discarding small parts or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.
- Use the parts and hardware lists below to identify and separate each of the pieces included.


  Note: Do not fully tighten all bolts until all parts are in place.
- *Failure to follow these instructions may cause the bolts to misalign during assembly.*


Care and Cleaning


- Routine cleaning of the OUTDOOR BENCH can be completed with only warm water and soap.
- You can use the sanding sponge for cleaning.

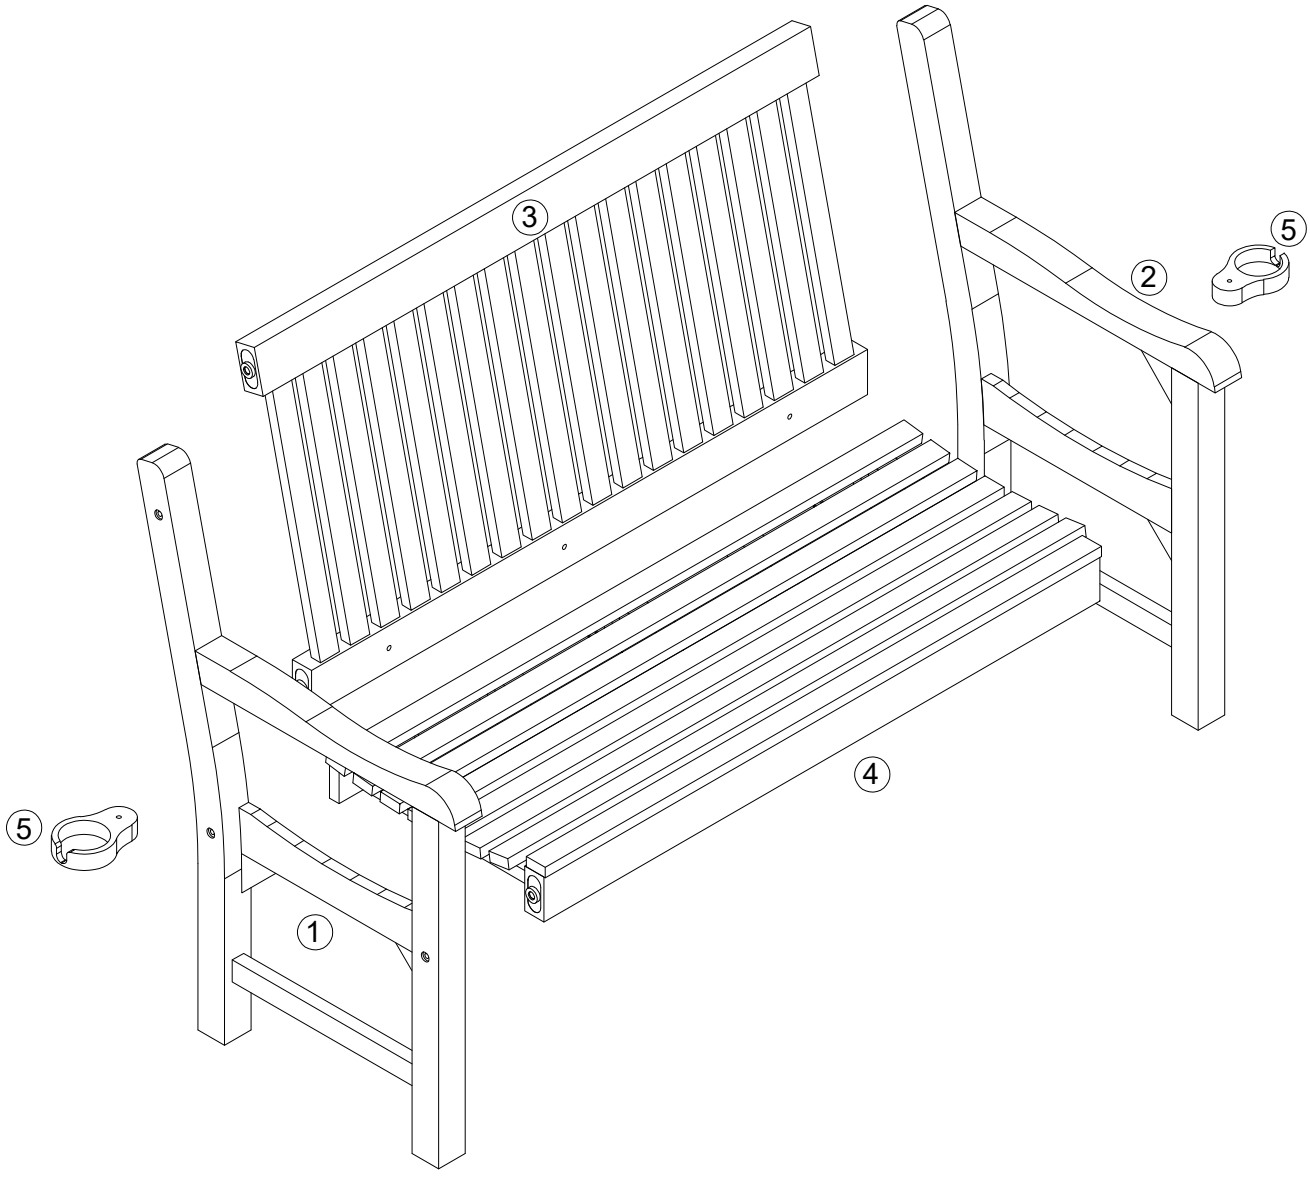

3
5
2
5
4
1

Part List

① x1 

② x1 

③ x1 

④ x1 

⑤ x2 

Hardware List

Ⓐ
M8*70mm Bolt
Qty: 9 

Ⓑ
Washer
Qty: 3 

Ⓒ
M6 Nut
Qty: 3 

Ⓓ
M6*45mm step screw
Qty: 2 

Tools Needed for Assembly



Allen key
4*4mm


Allen key
5*5mm



Wrench


Sanding
Sponge for
Cleaning

Step 1

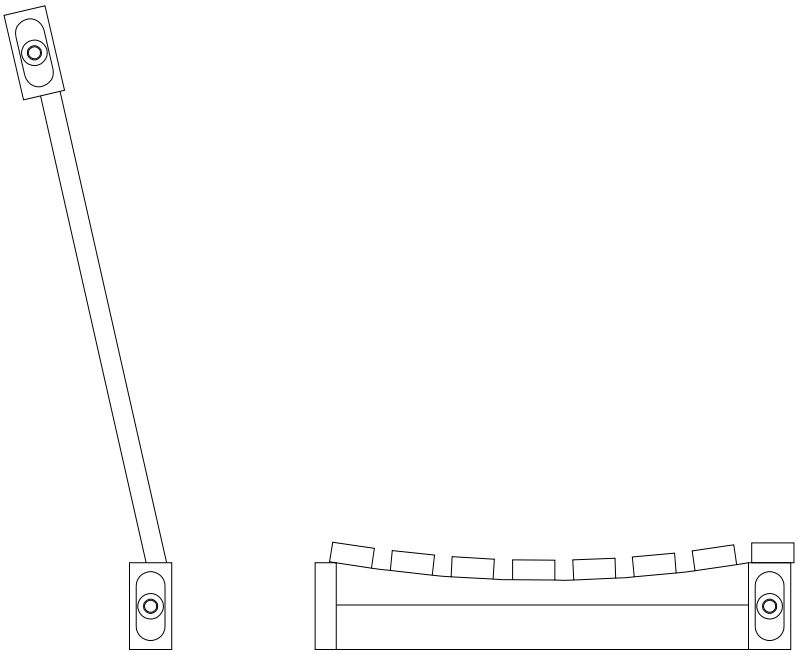


Step 2

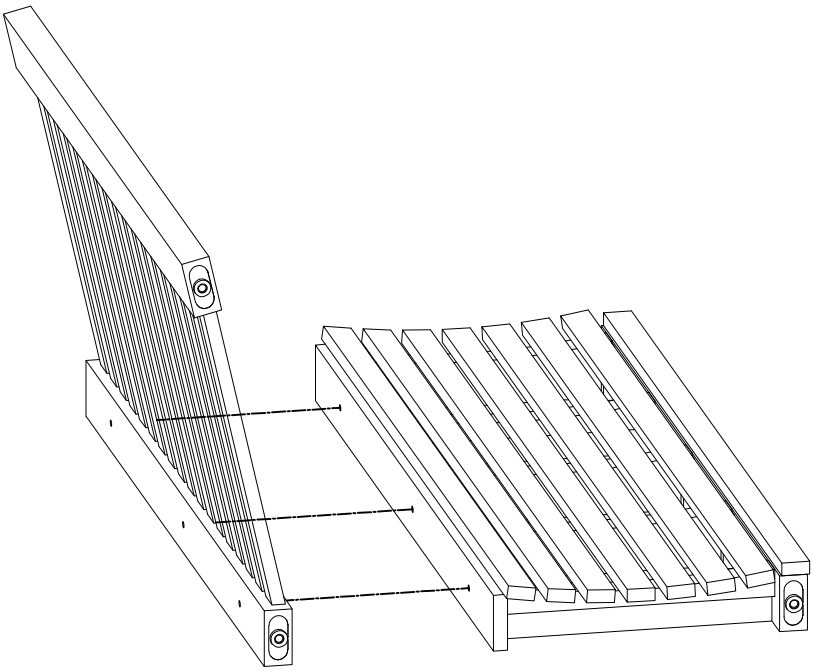

Installation Note: The backrest is designed with dual-side screw hole patterns. If the holes on the backrest do not align with those on the seat, please rotate it 180 degrees. Please refer to the direction of the backrest as shown in the above pictures.


Step 3

3	x1
4	x1
A	x3
B	x3
C	x3
5*5mm	

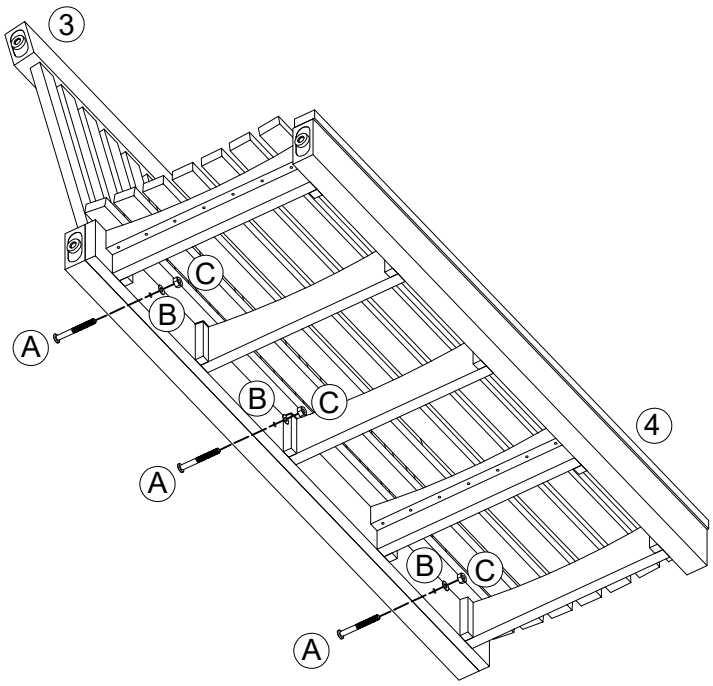


Step 4

1	x1
A	x3
5*5mm	

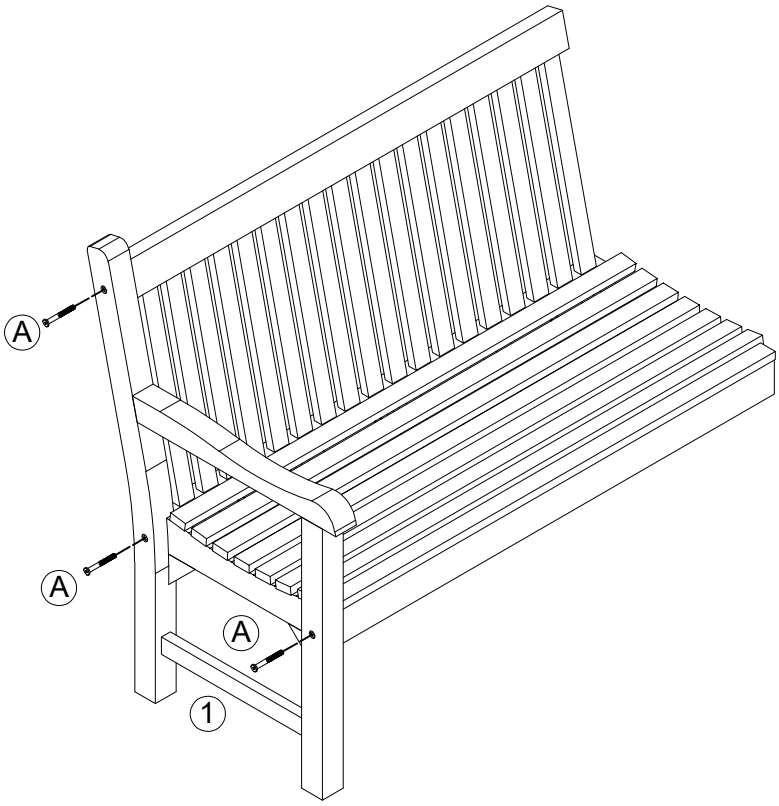


Step 5

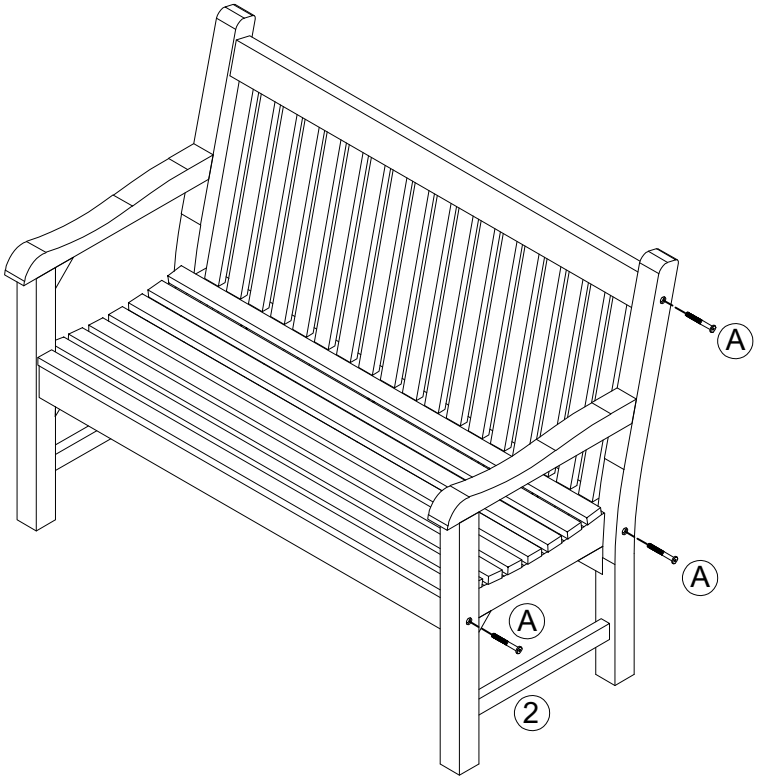

2	x1
A	x3
5*5mm	

Step 6

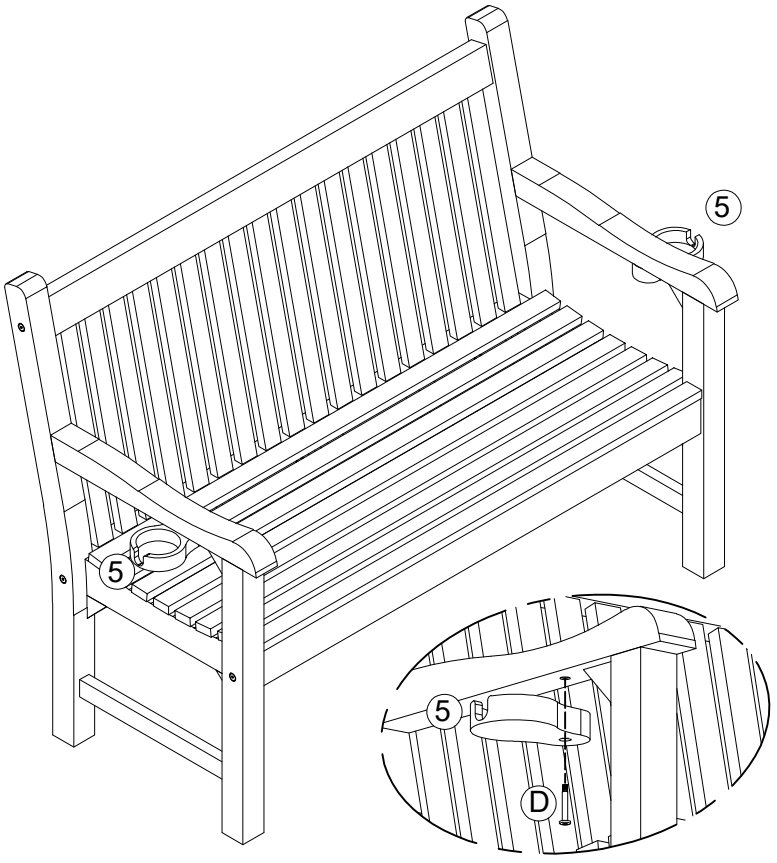

5	x2
D	x2
4*4mm	

Step 7

