
INSTALLATION MANUAL

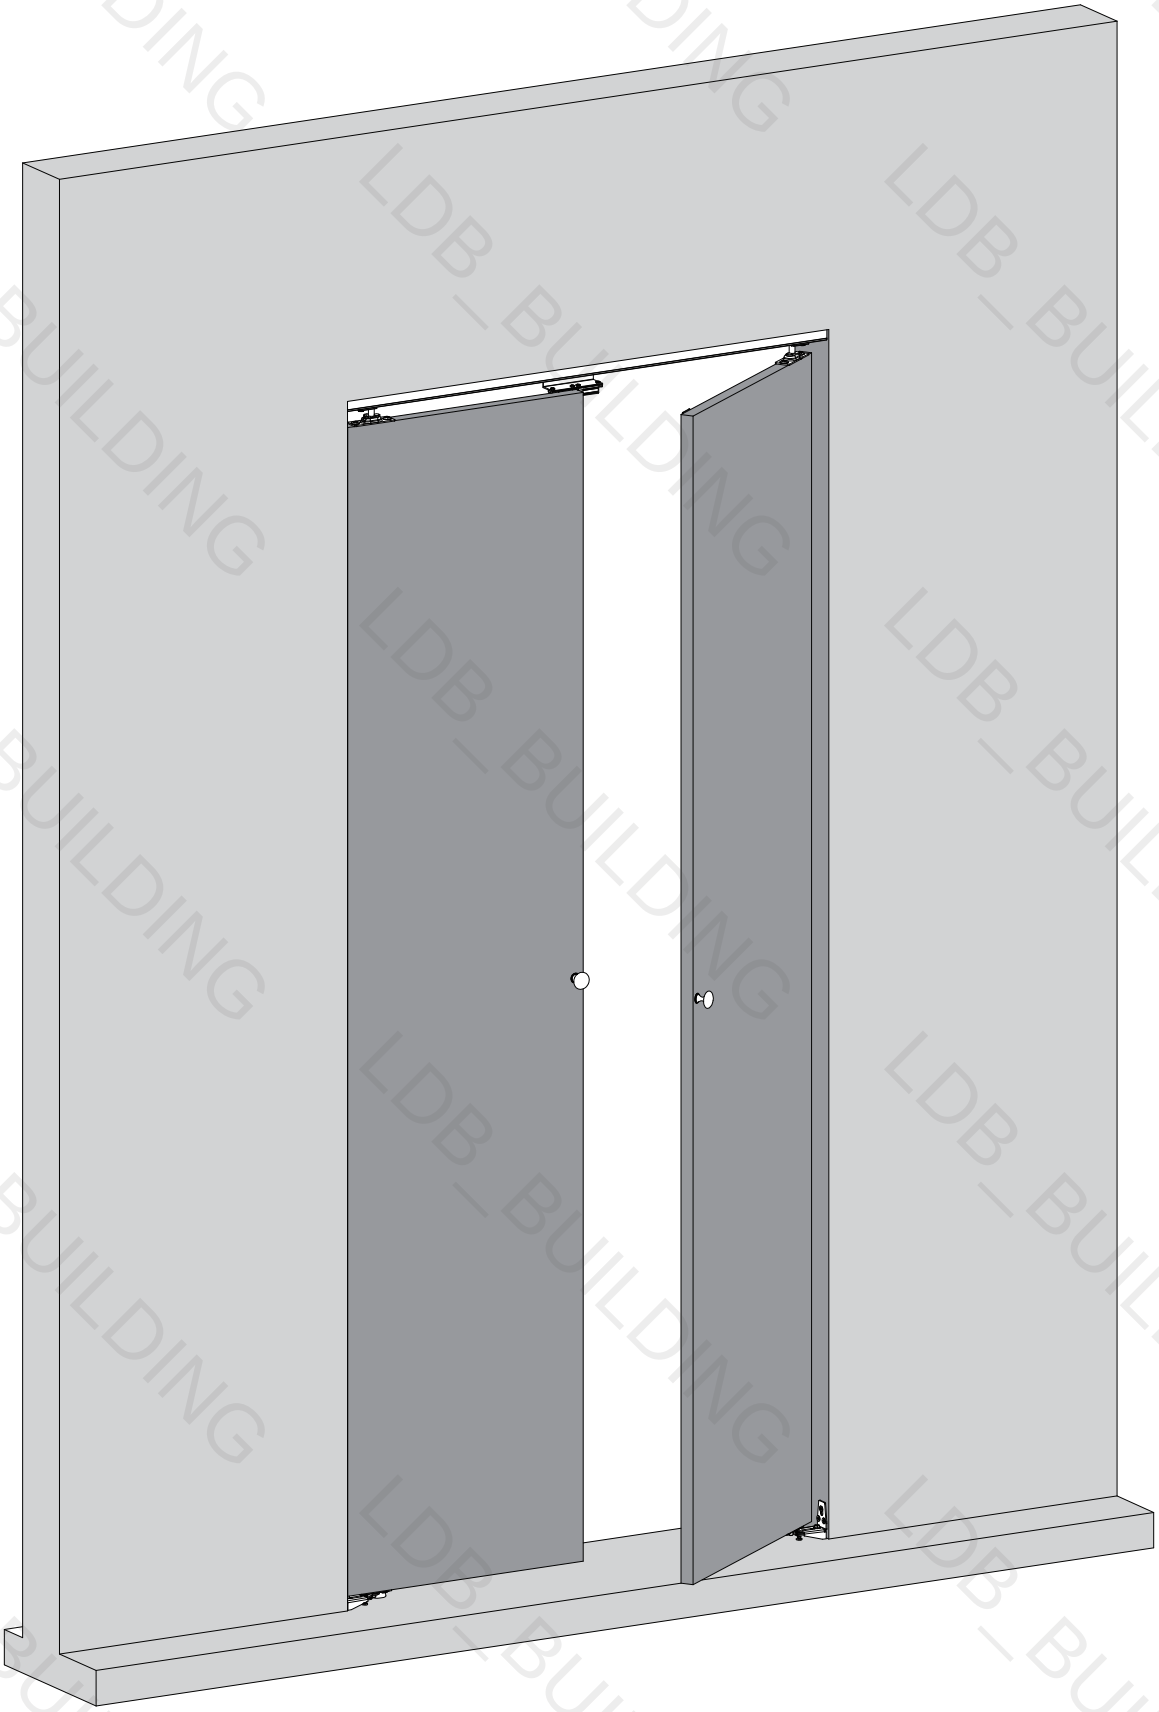


OPERATION CAUTIONS:
Please read this installation guide carefully before installation.
Please refer to the relevant content of this store for more product use.


LDB_BUILDING

Hardware

A Top Track x 1




M4 x 31.75mm

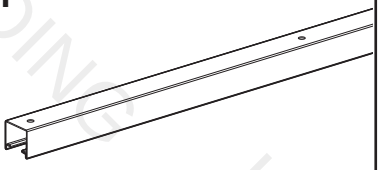


Track Length	Screw Quantity
$23^{13}/_{16}''$	(x4)
$29^{27}/_{32}''$	(x4)
$35^{13}/_{16}''$	(x5)
$41^{13}/_{16}''$	(x6)
$47^{27}/_{32}''$	(x6)

B Top Pivot x 2

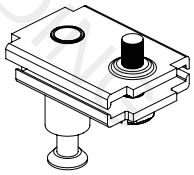



C Mount Plate x 2

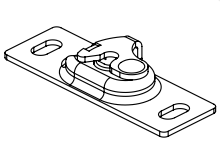

M4 x 31.75mm
(x4)


D Bottom Pivot x 2






M4 x 31.75mm
(x4)


E Jamb Pivot Bracket x 2

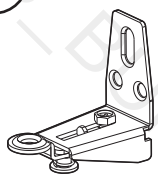



M4 x 31.75mm
(x6)


F Magnet Bracket x 1

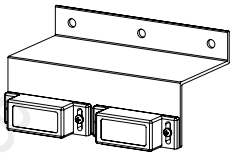



M4 x 15.748mm
(x3)

G Magnet Plate x 2

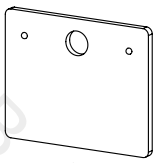



M4 x 15mm
(x2)

H Pull x 2





M4 x 35mm
(x2)


I Bumper x 2






M4 x 50.8mm
(x2)

J Fascia x 1

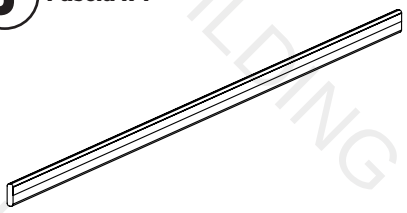


K Wrench x 1





Have any questions or issues? Reach out to us with **PO#**


Email: help@bestbarndoor.com

Tools required

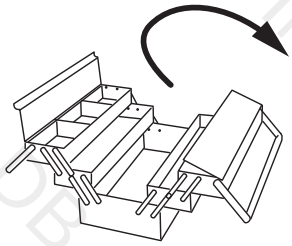




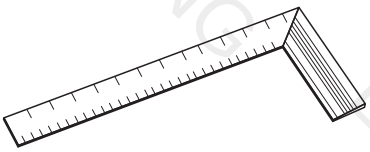

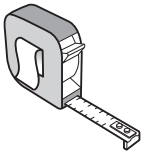








LDB_BUILDING

Product Installation

Step 1

Insert each top pivot to both sides of the track.
Measure and line up the center of the pivot to 2-1/4" at both ends of the track and tighten both securing screws using a Phillips Screwdriver.

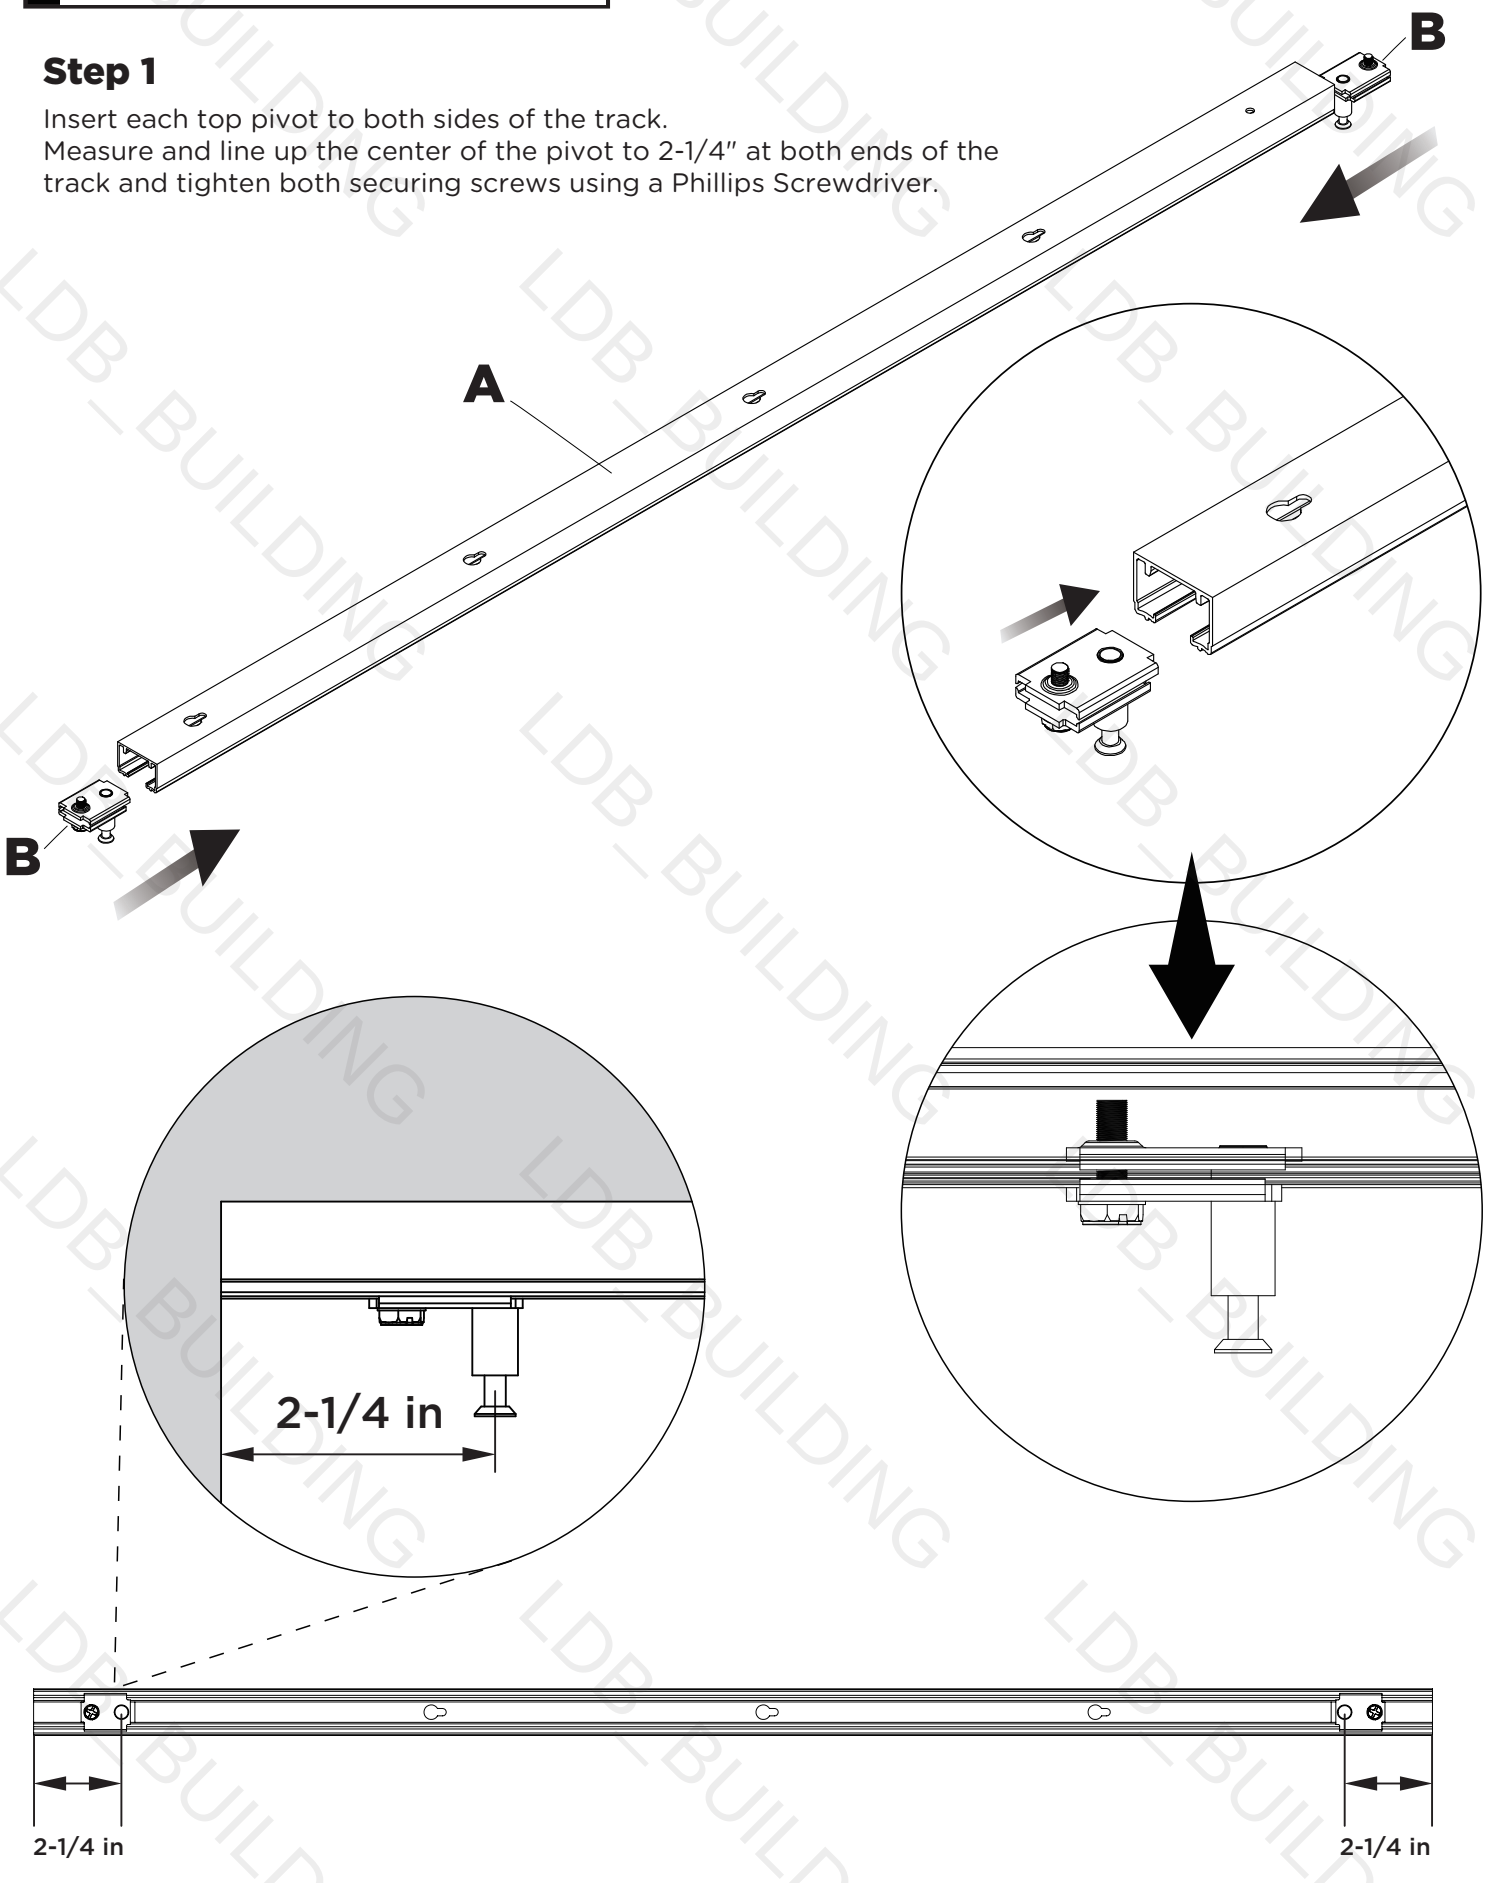



LDB_BUILDING


Product Installation

Step 2

Measure 1/4" from the front of the opening to correctly position the track and secure in place.

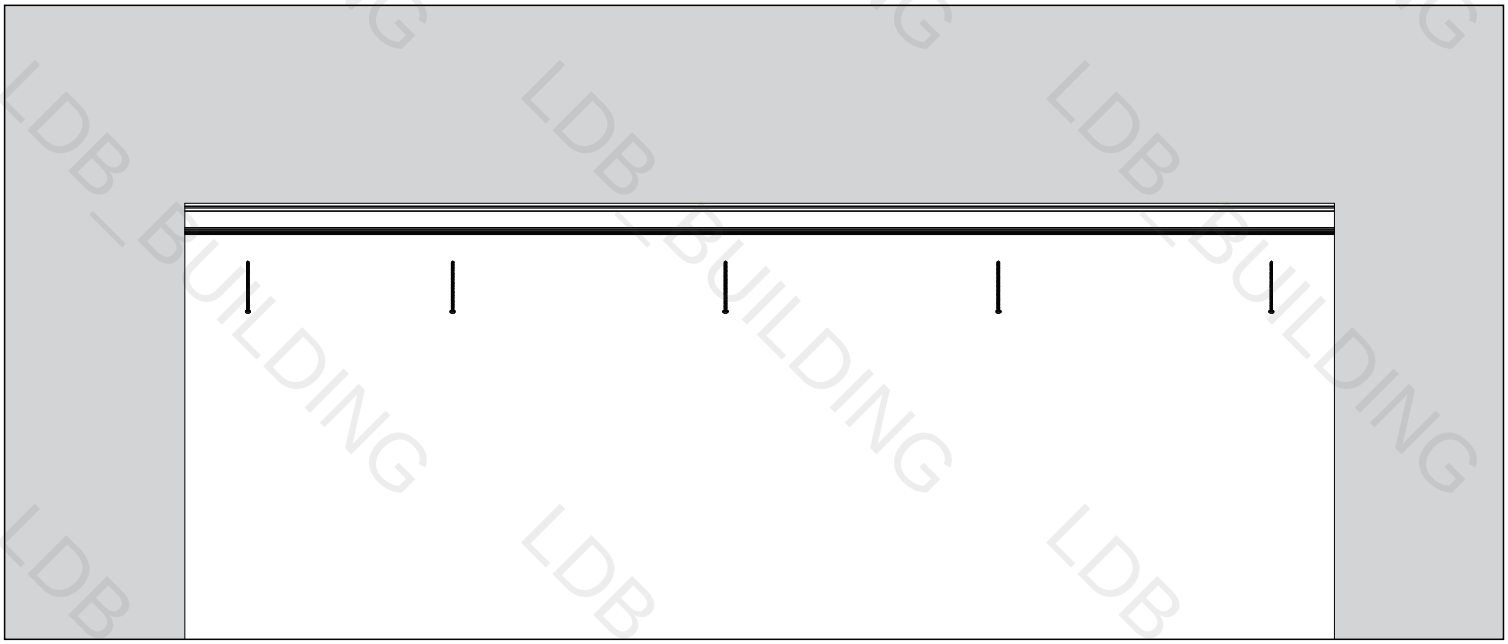

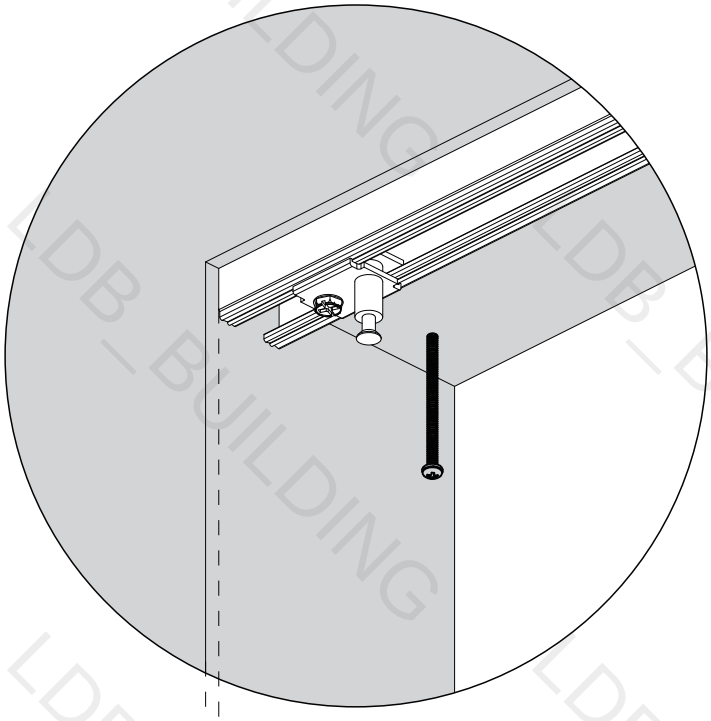

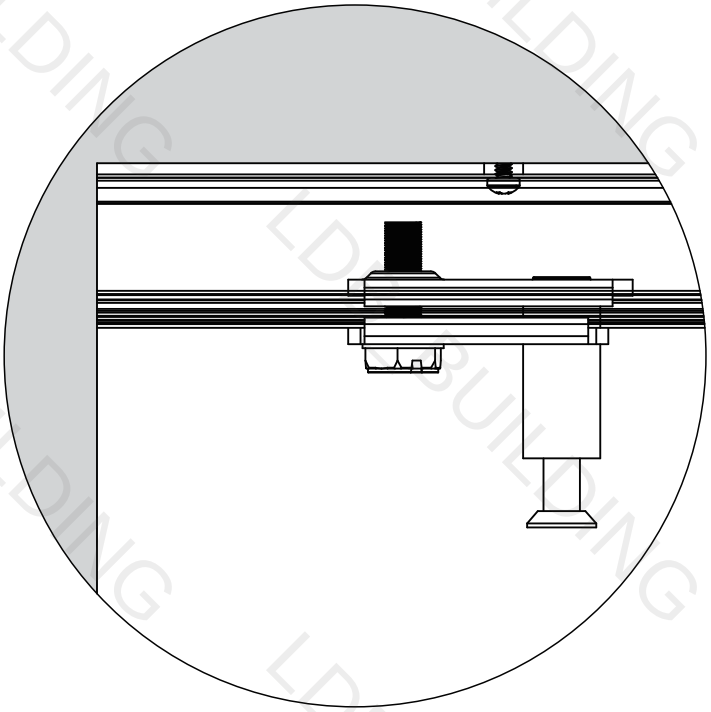




1/4 in

LDB_BUILDING

Product Installation

Step 3

Secure the mounting plate with the locking latch at the back of the door panel.

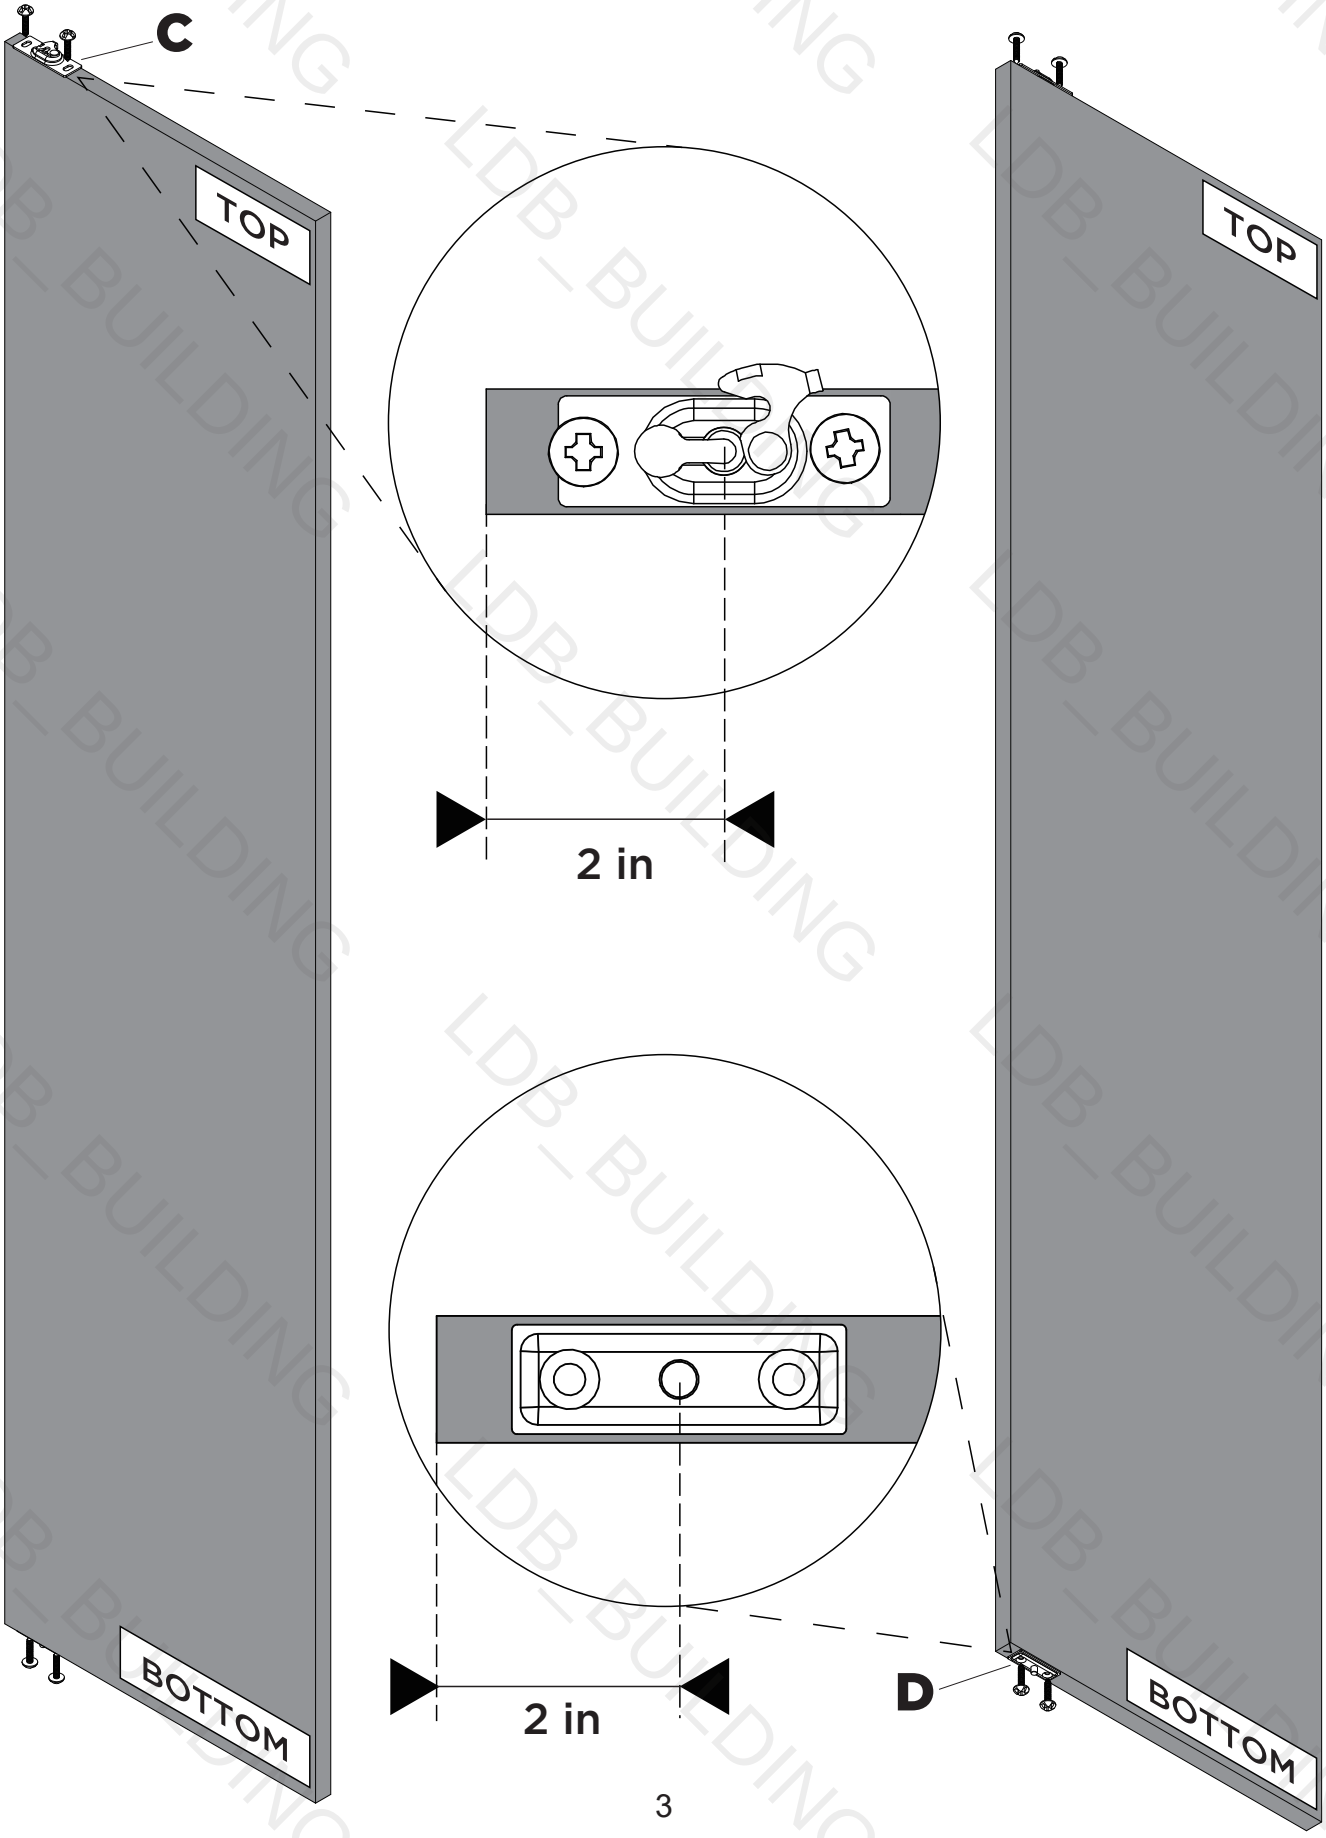



LDB_BUILDING

Product Installation

Step 4


Install Jamb pivot bracket.

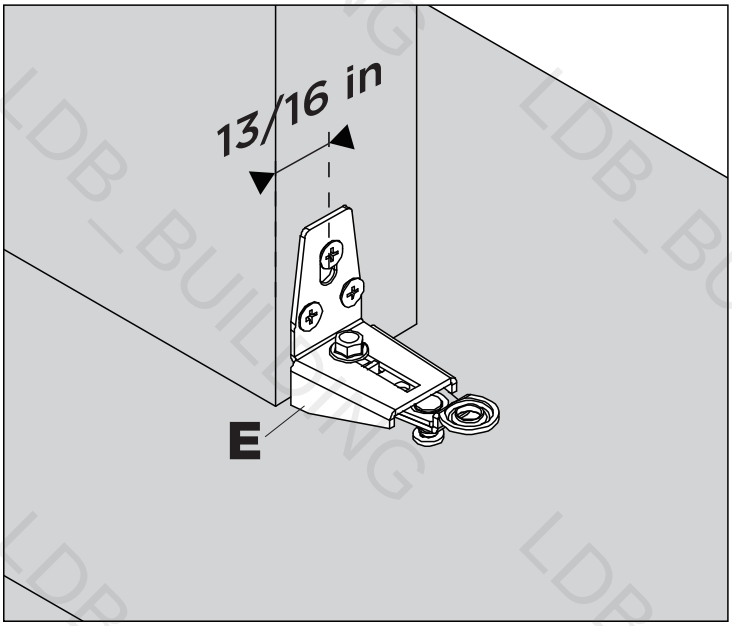


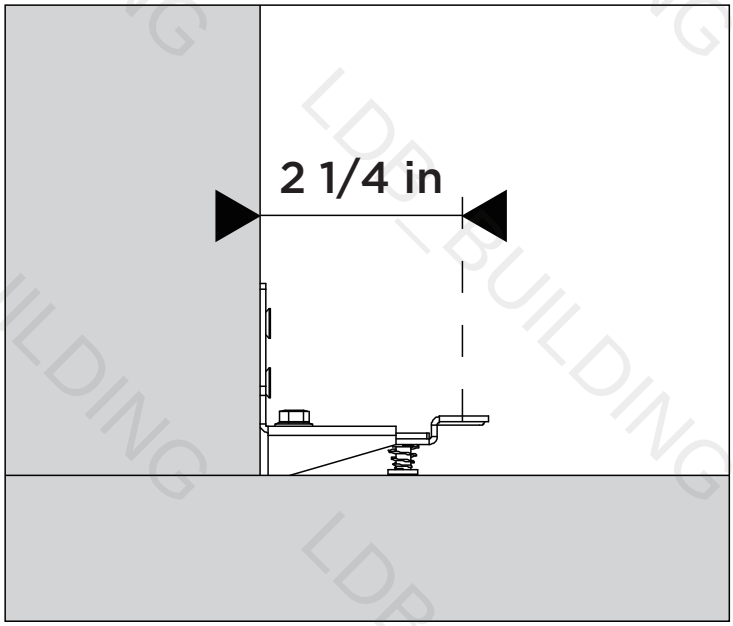

Step 5

Position the Floor Bumper 3-1/2" from the jamb opening and 1-1/2" from the pivot hole of the bottom pivot jamb bracket.

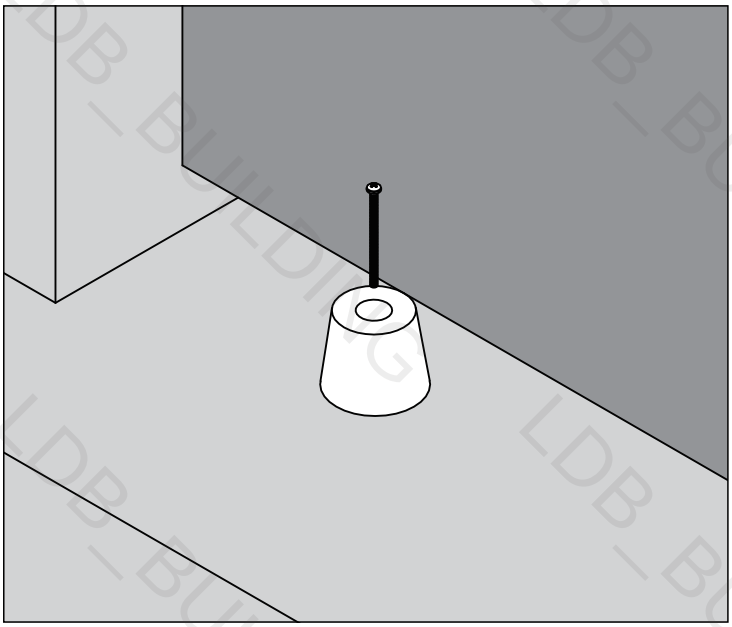


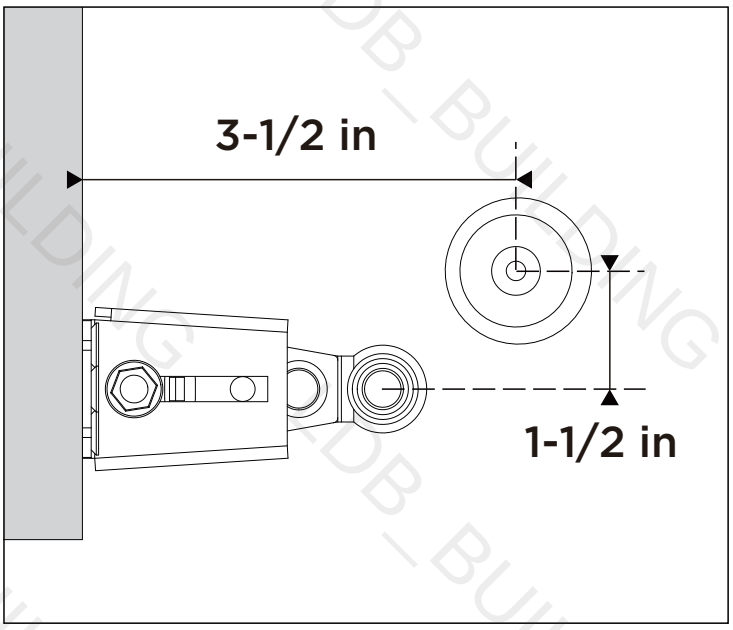

Product Installation


Step 6

Open the locking latch on the mounting plate and position the door panel so that the pivot bolt can be engaged inside the mounting plate. Then close the locking latch to secure the panel in place.

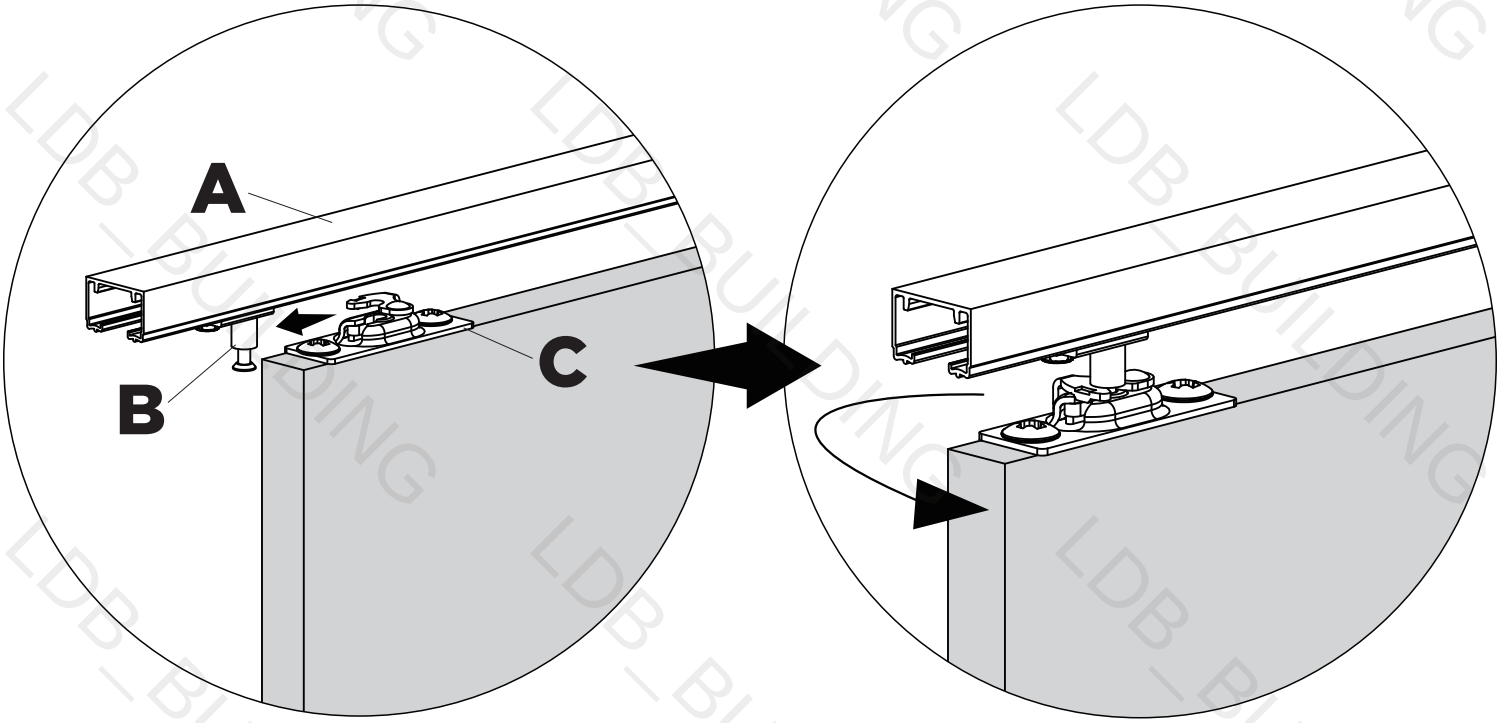

Step 7

Lower the door panel so that the bottom pivot engages the bottomjamb pivot bracket.
The spring action will suspend the door panel.
Ensure there is sufficient clearance so that no other parts touch for clear operation.

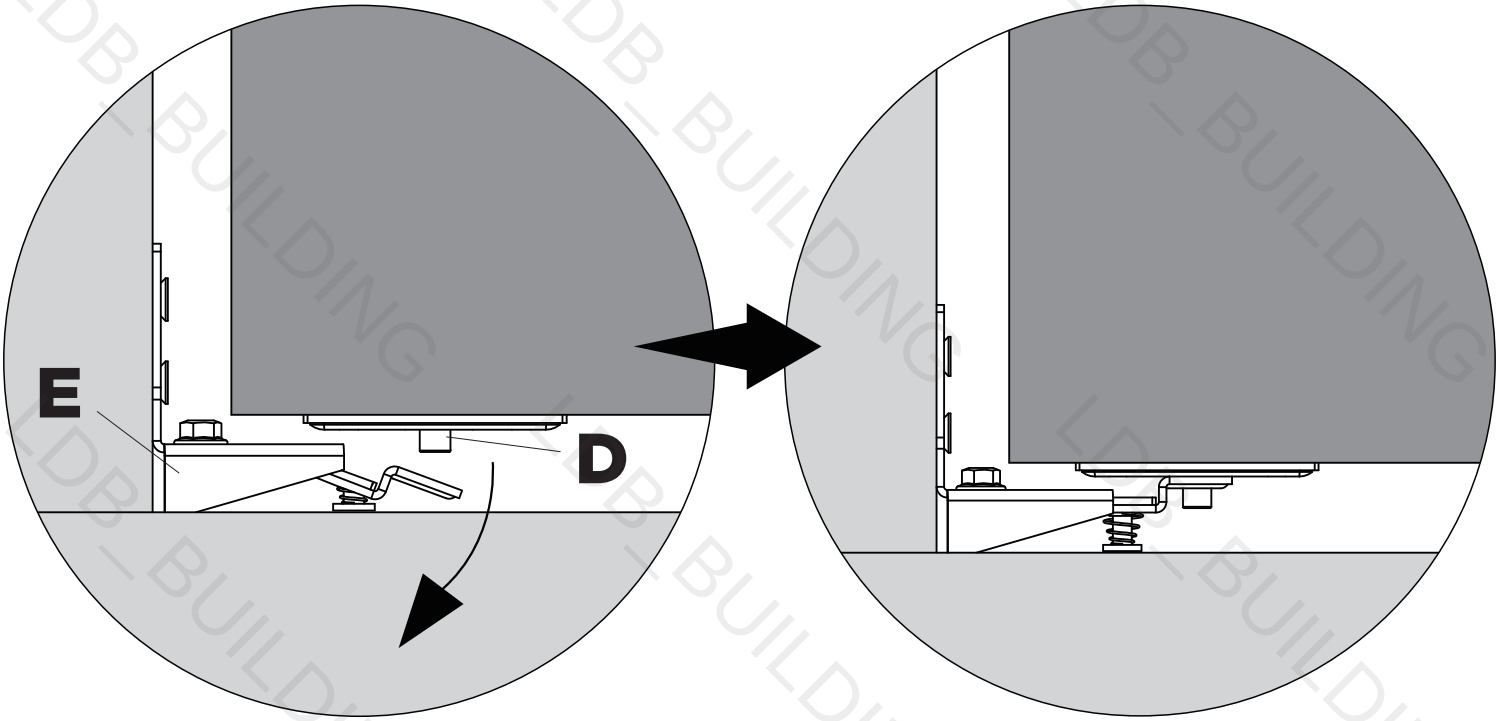


LDB_BUILDING

Product Installation

Step 8

With both door panels installed, secure each magnet plate holders to the back of the door panels, flush to the corners using the screws.

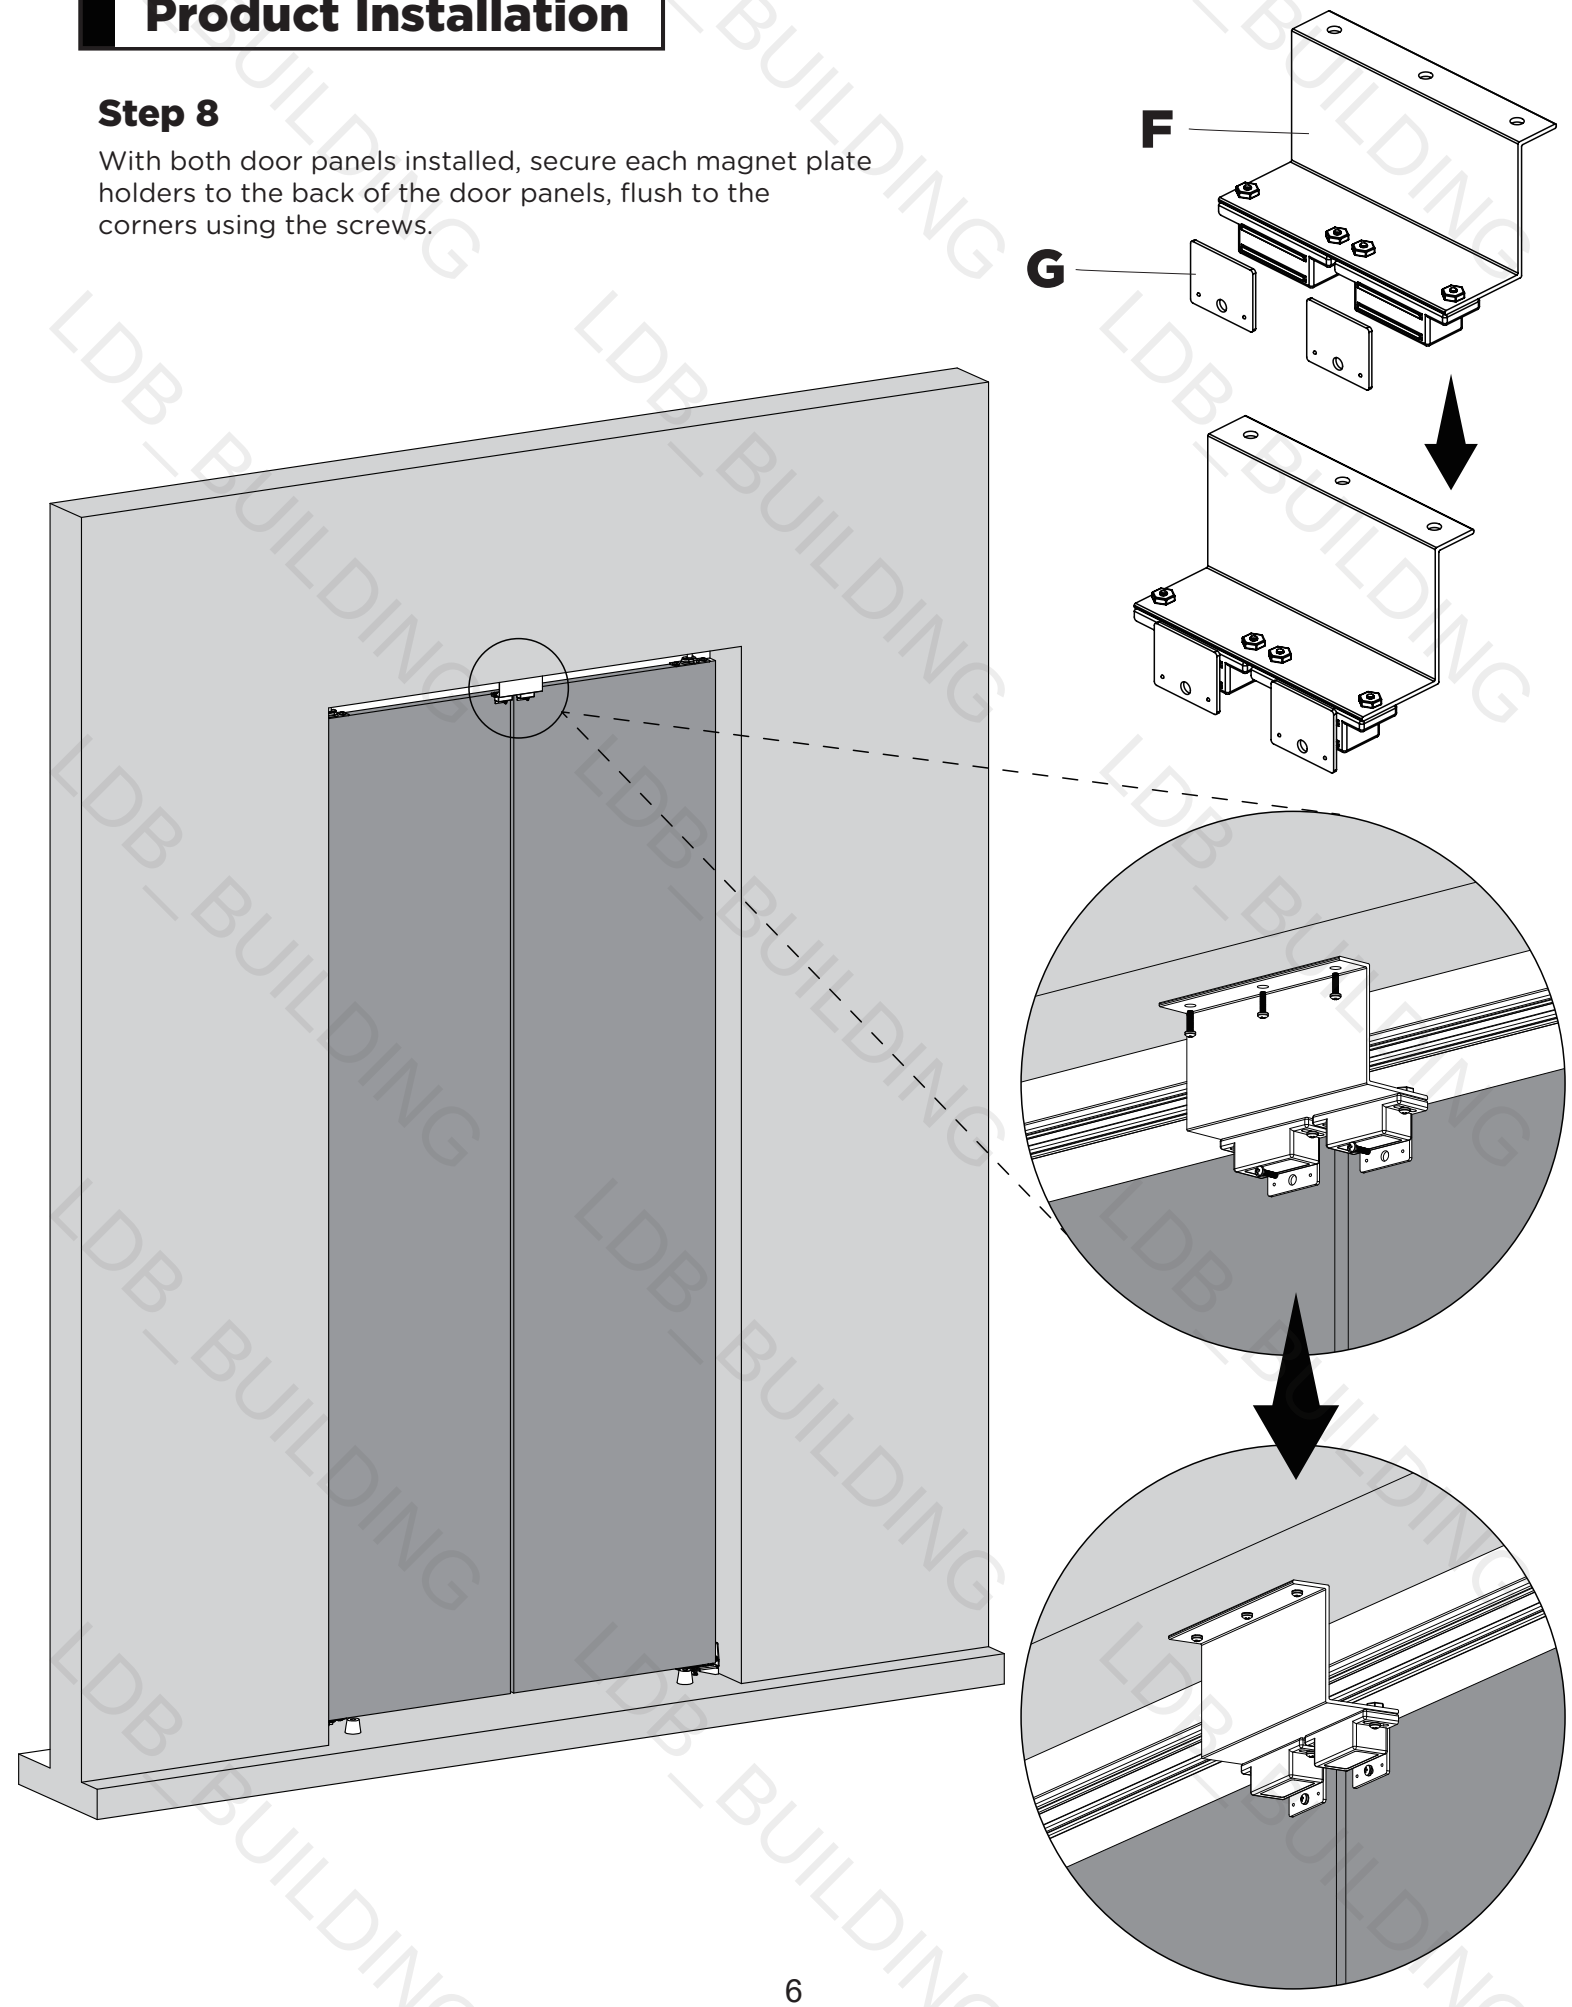



LDB_BUILDING

Product Installation

Step 9

Peel the double-sided tape offthe back of the fascia and apply directly onto the front surface of the track.

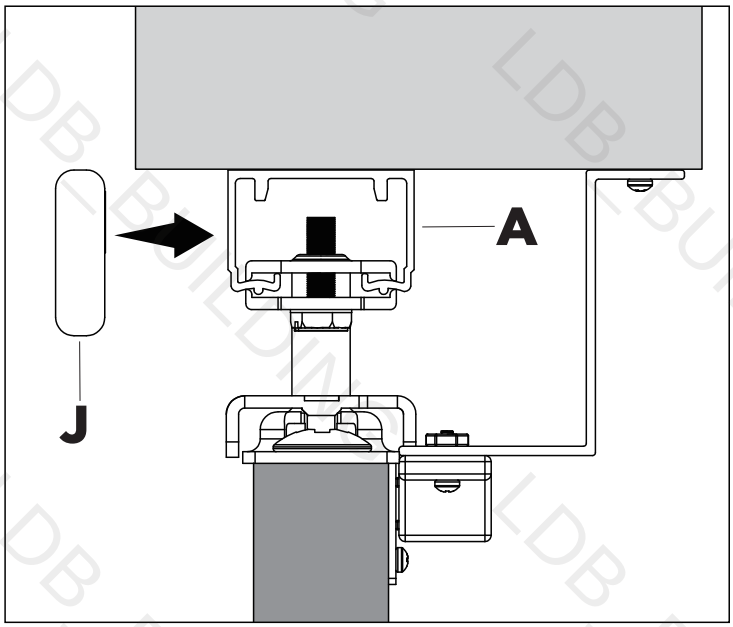

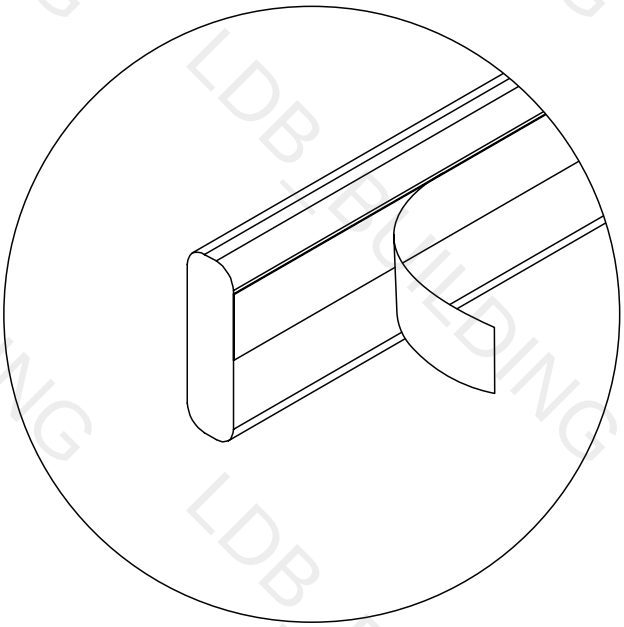

Step 10

Measure upward from the bottom of the door 36" and inward from the opening edge 1-1/2" to determine knob locations.
Pilot 1/2" deep hole from the front of the door panels and thread the screws in from the back.
Attach the pulls from the front tightening by hand to complete the installation.

