
Assembly Instruction

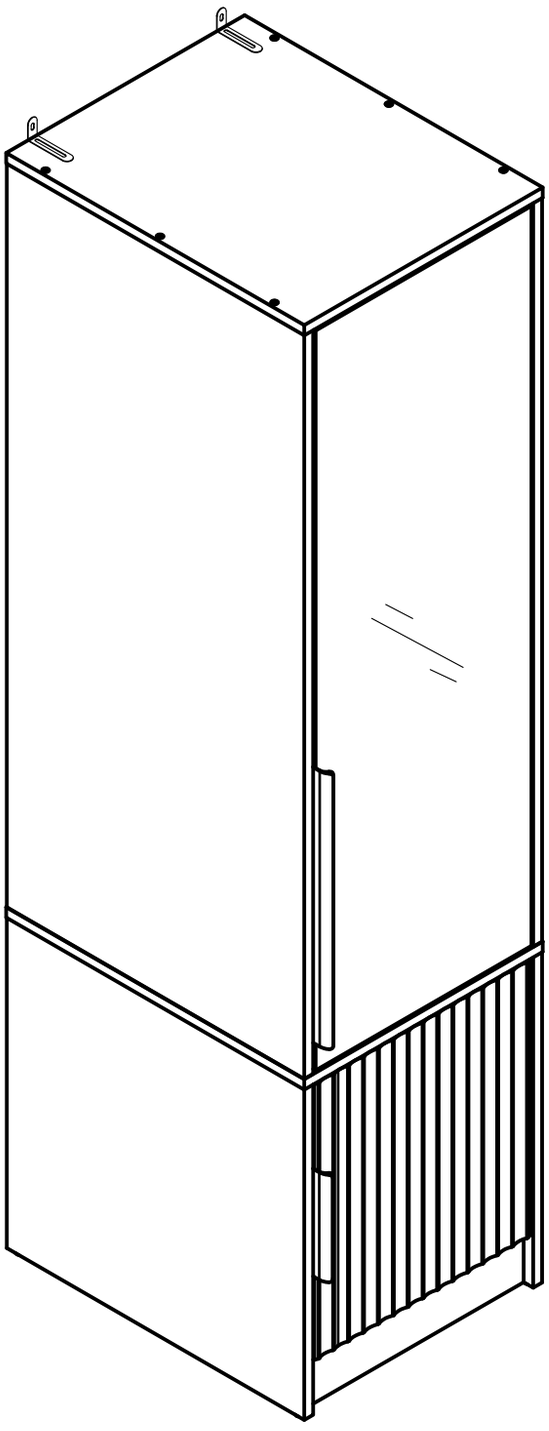

Scan QR Code for Assembly Video



Scan this QR code to watch the step-by-step assembly video.


Especially the different cases for **assembling the door with hinges**.

If you cannot scan the code, please copy and open the YouTube link below in your browser:


https://youtu.be/UPlh-7l2tPI

Keep small parts out of reach of children ！


HINGE INSTRUCTIONS

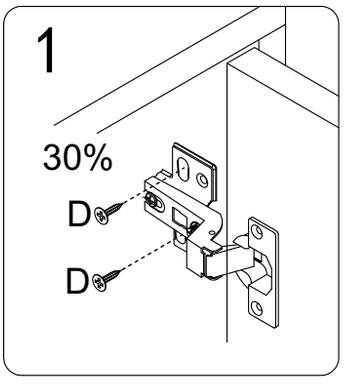


Tighten the screws only 30% as long as the door can be secured.

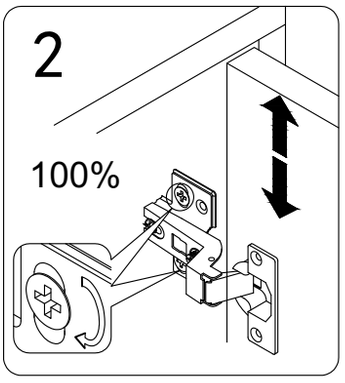


Move the door up and down until it is centred, then tighten the screw 100%.

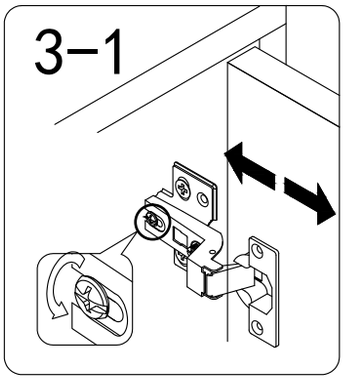


Loosen the screw **anti-clockwise**,and move the door **in or out** until it's aligned to side board.

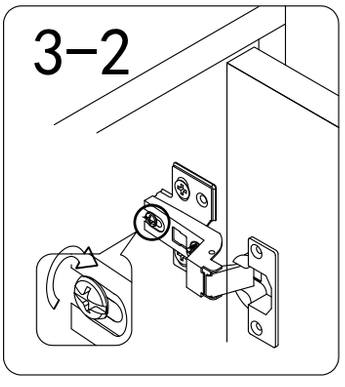


Tighten the screw **clockwise** once the door is **aligned**.

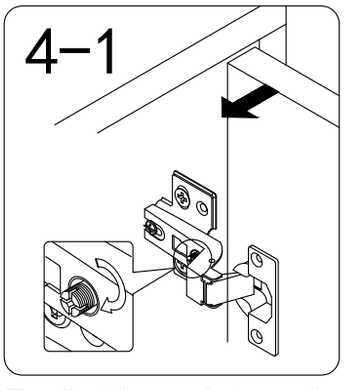

To adjust the gap between the door and the side board to be **larger**, turn the screw **clockwise.**

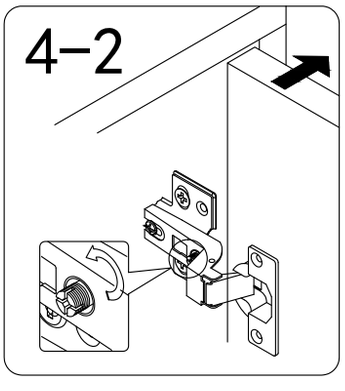

To adjust the gap between the door and the side board to be **smaller**, turn the screw **anti-clockwise.**

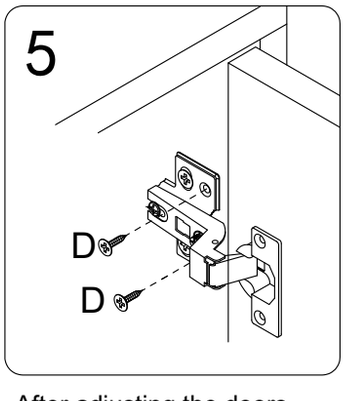

After adjusting the doors properly above, finally tighten these two screws and secured the door.


A	X19	B	X19	C	X2	D	X34	E	X1	F	X12	G	X14	H	X2
M6x35mm					M3.5x14mm		4mm		M5x40mm						


I	X1	J	X4	K	X2	M	X2	N	X2	O	X5	P	X2	Q	X2
				M4x35mm								M4x12mm			













S	X2	T	X16	U	X12	V	X4	W	X1	X	X4
M3x12mm		M3x16mm				M3.5x12mm					

Cam Lock Fastening System


Insert the cam bolt into the hole first,then insert the cam lock and lock it.

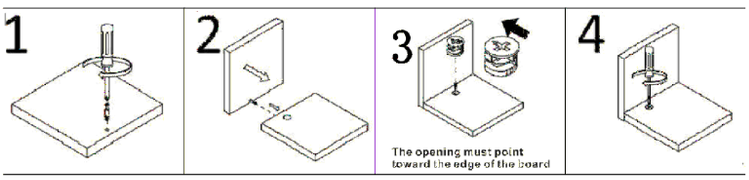

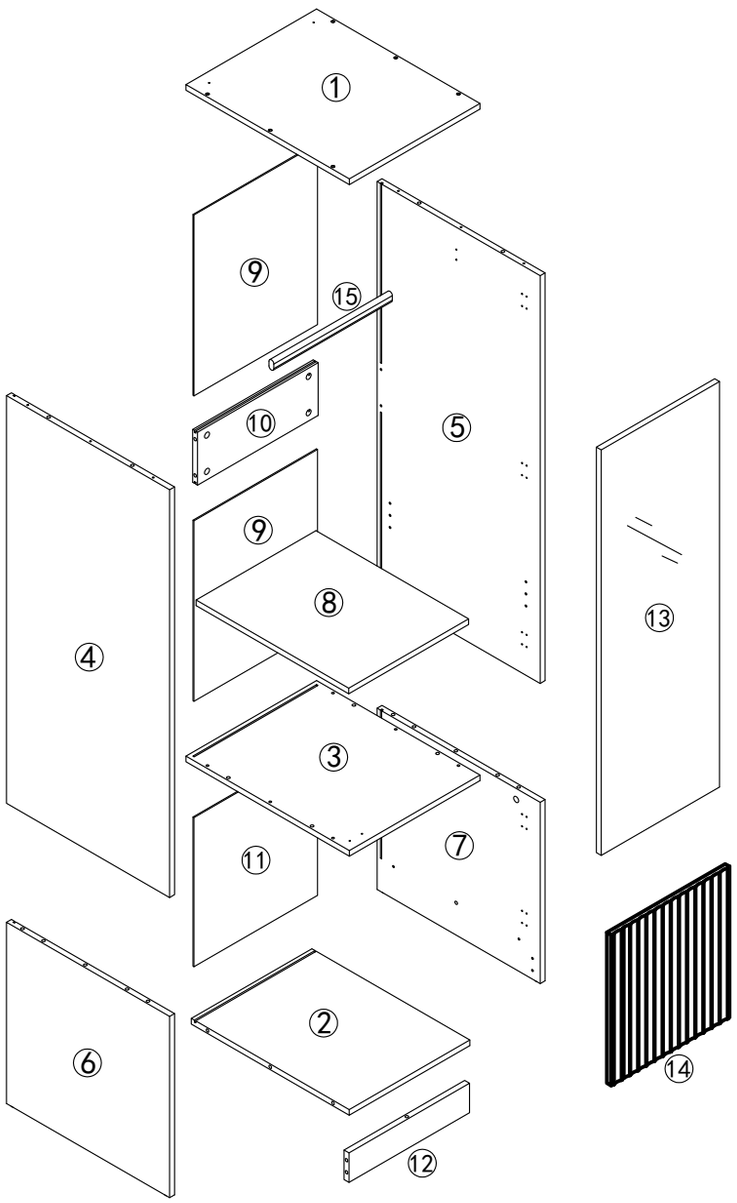

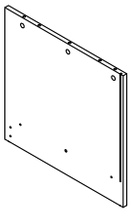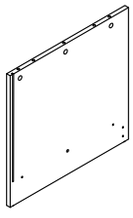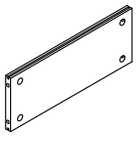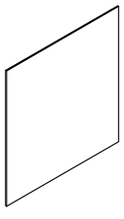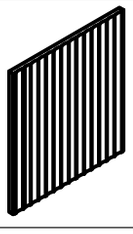① 	② 	③ 	④ 
1PC	1PC	1PC	1PC
⑤ 	⑥ 	⑦ 	⑧ 
1PC	1PC	1PC	1PC
⑨ 	⑩ 	⑪ 	⑫ 
2PCS	1PC	1PC	1PC
⑬ 	⑭ 		
1PC	1PC		

1

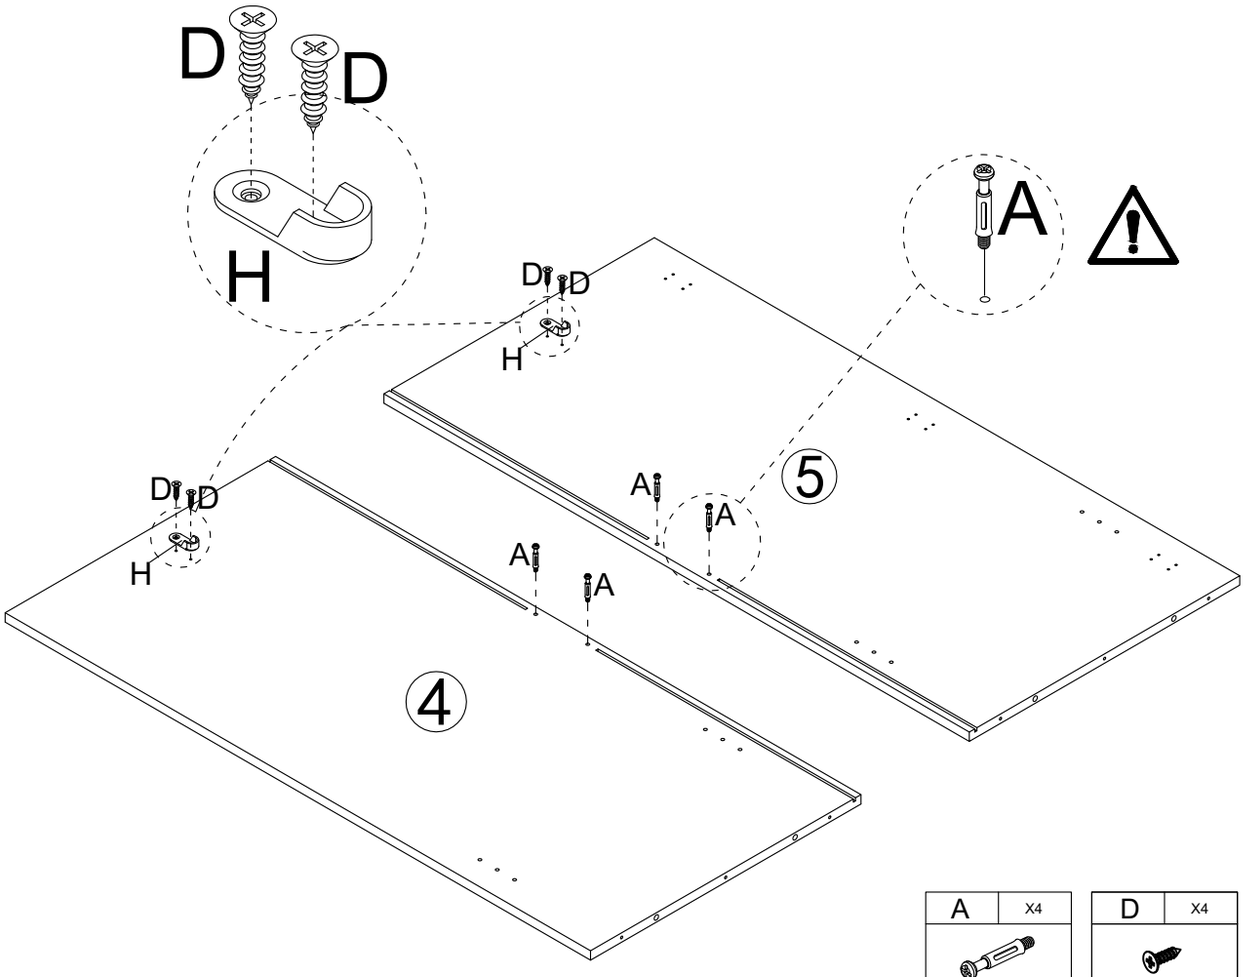


A	X4
M6x35mm	

D	X4
M3.5x14mm	


H	X2

2

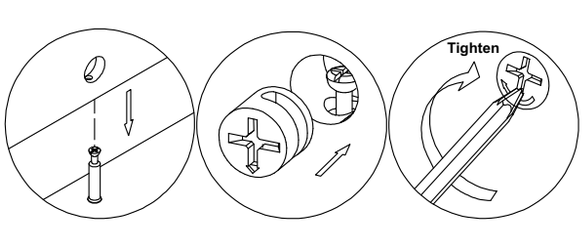


B	X4

3

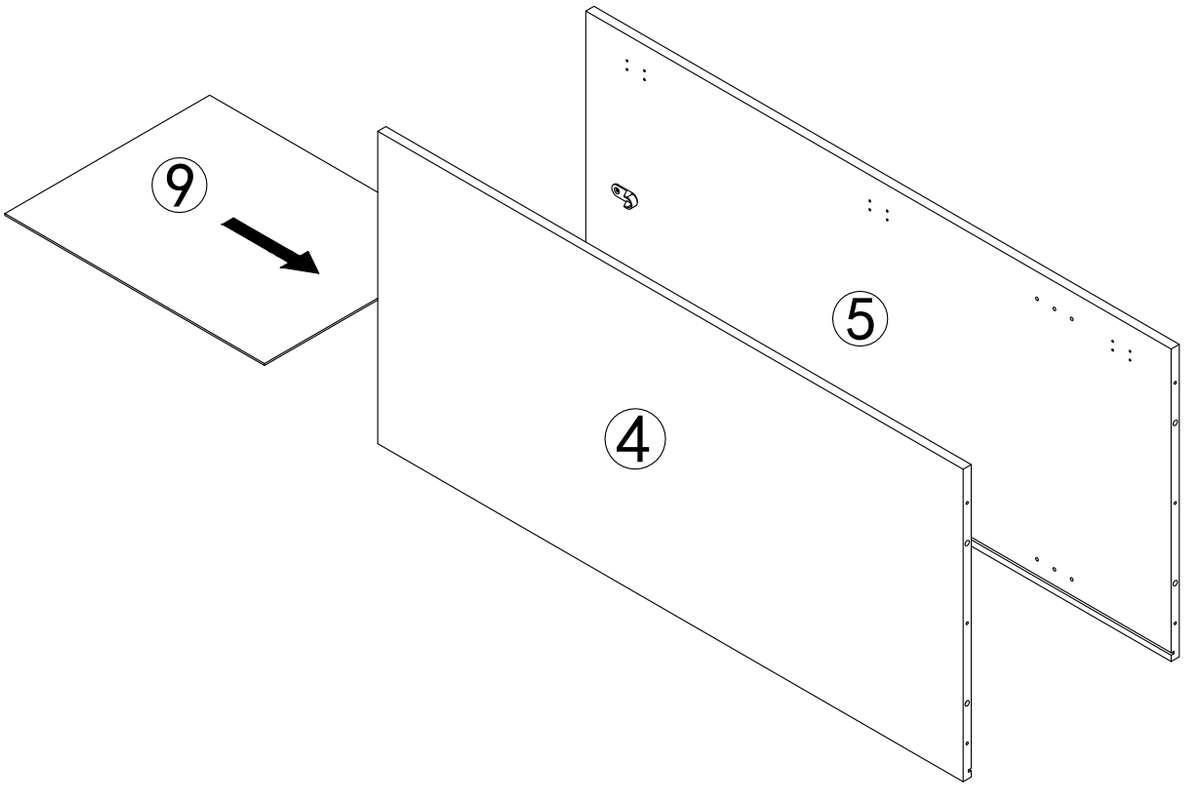

4

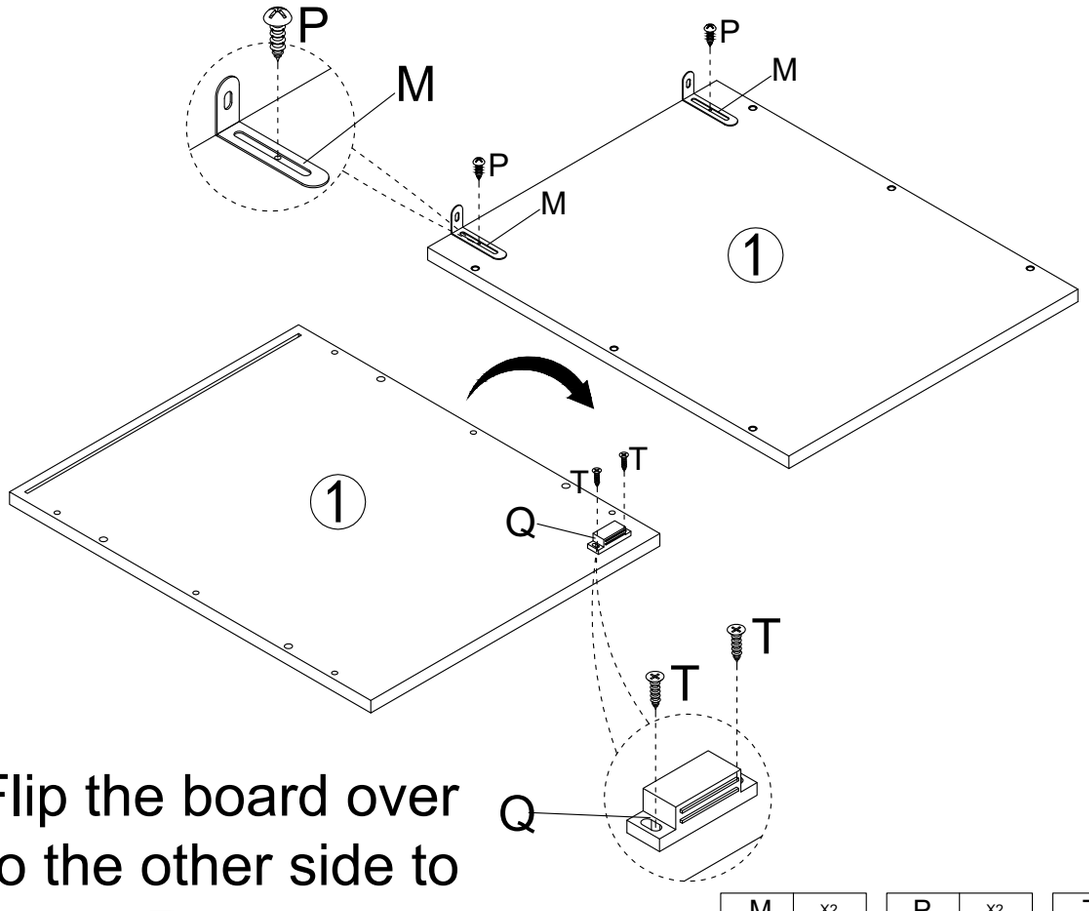

Flip the board over to the other side to screw P


M	X2

P	X2
M4x12mm	

T	X2
M3x16mm	

Q	X1


5

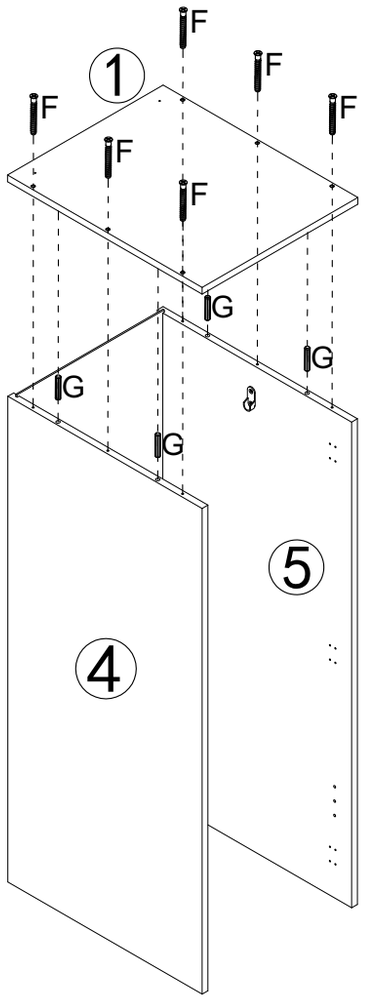


G	X4
	

F	X6
	
M5x40mm	

6

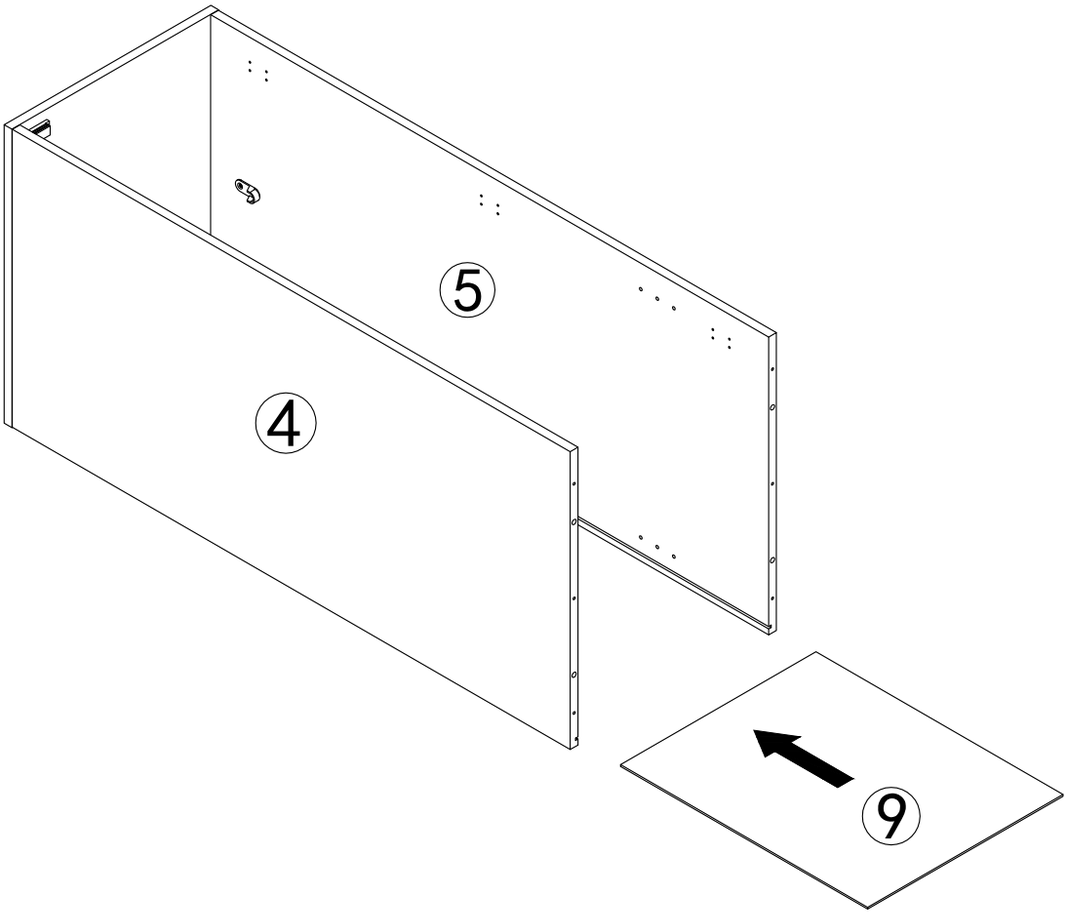

7

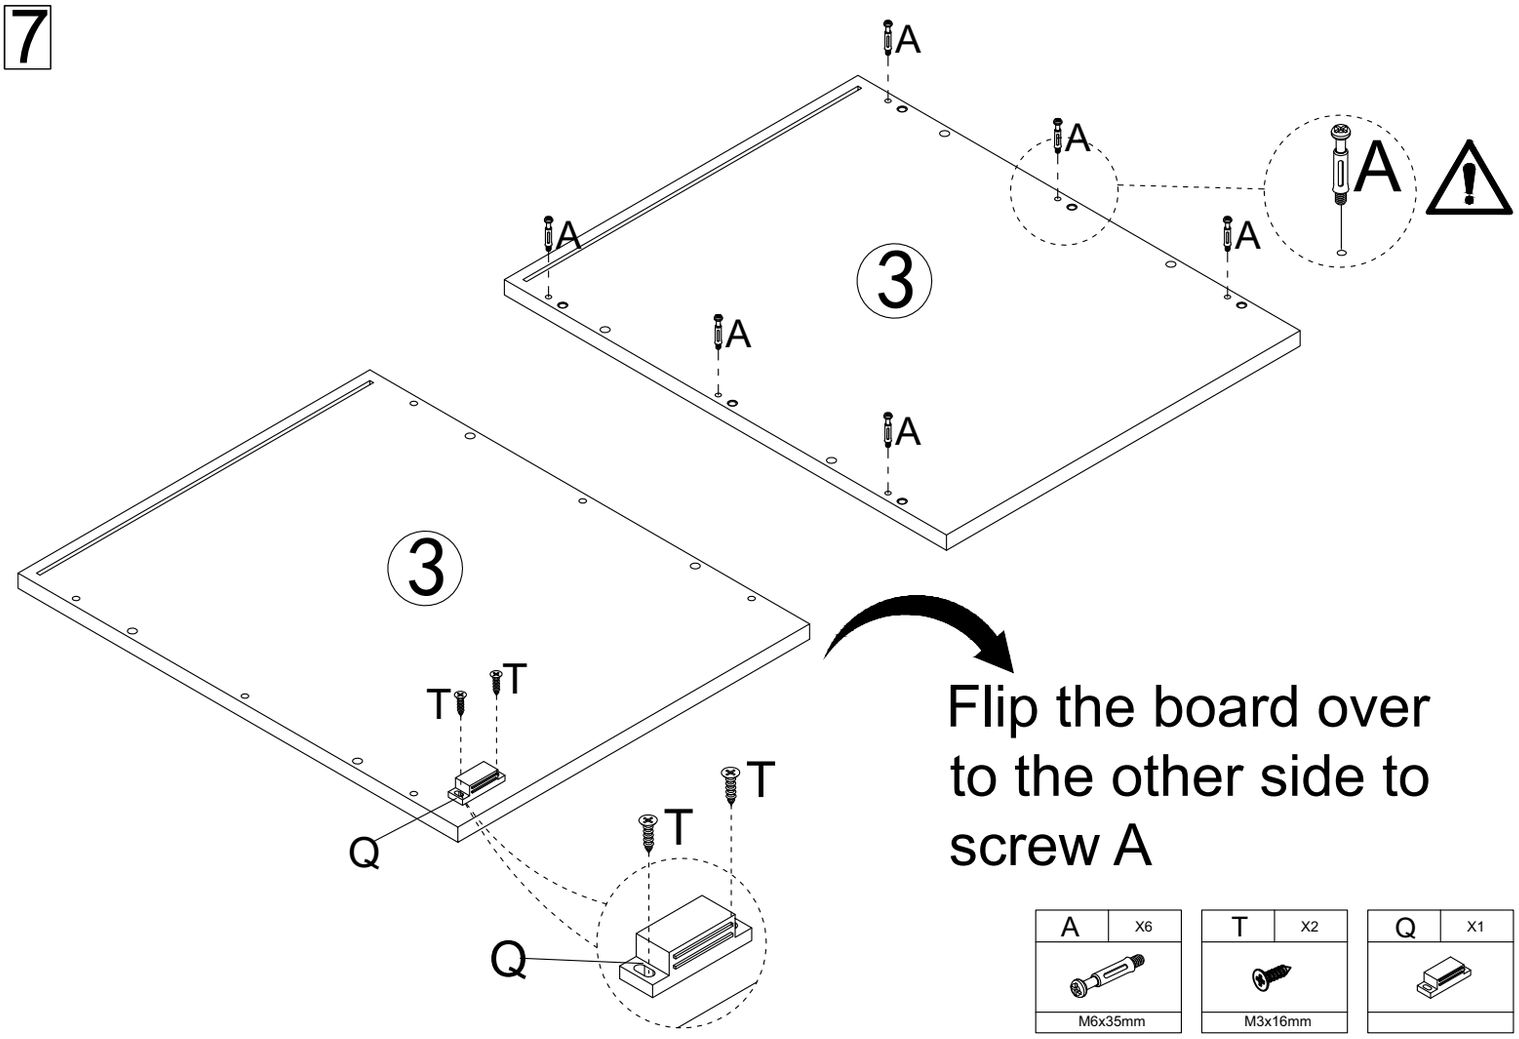


Flip the board over to the other side to screw A

A	X6
M6x35mm	

T	X2
M3x16mm	

Q	X1


8

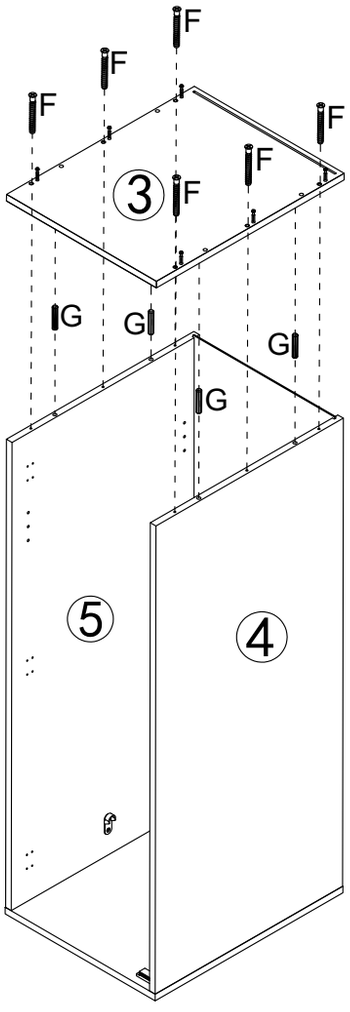

G	X4


F	X6
M5x40mm	

9

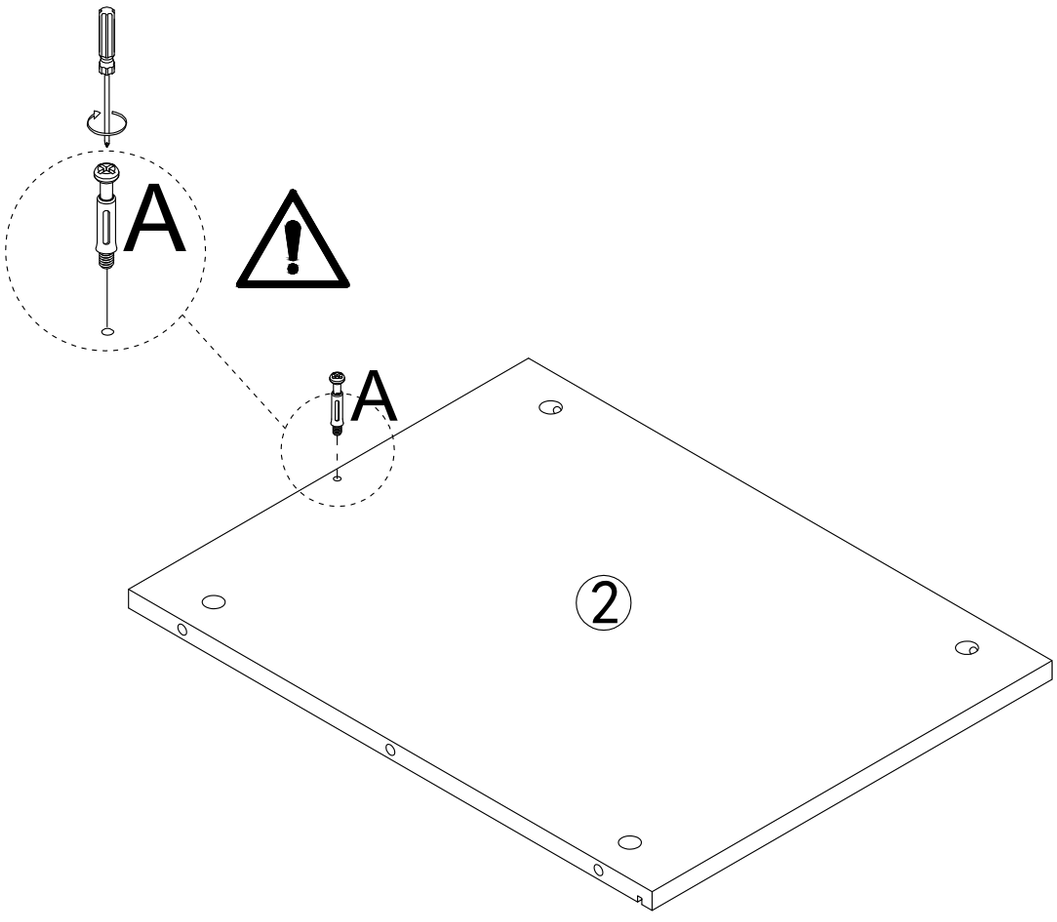


A	X1
	
M6x35mm	

10

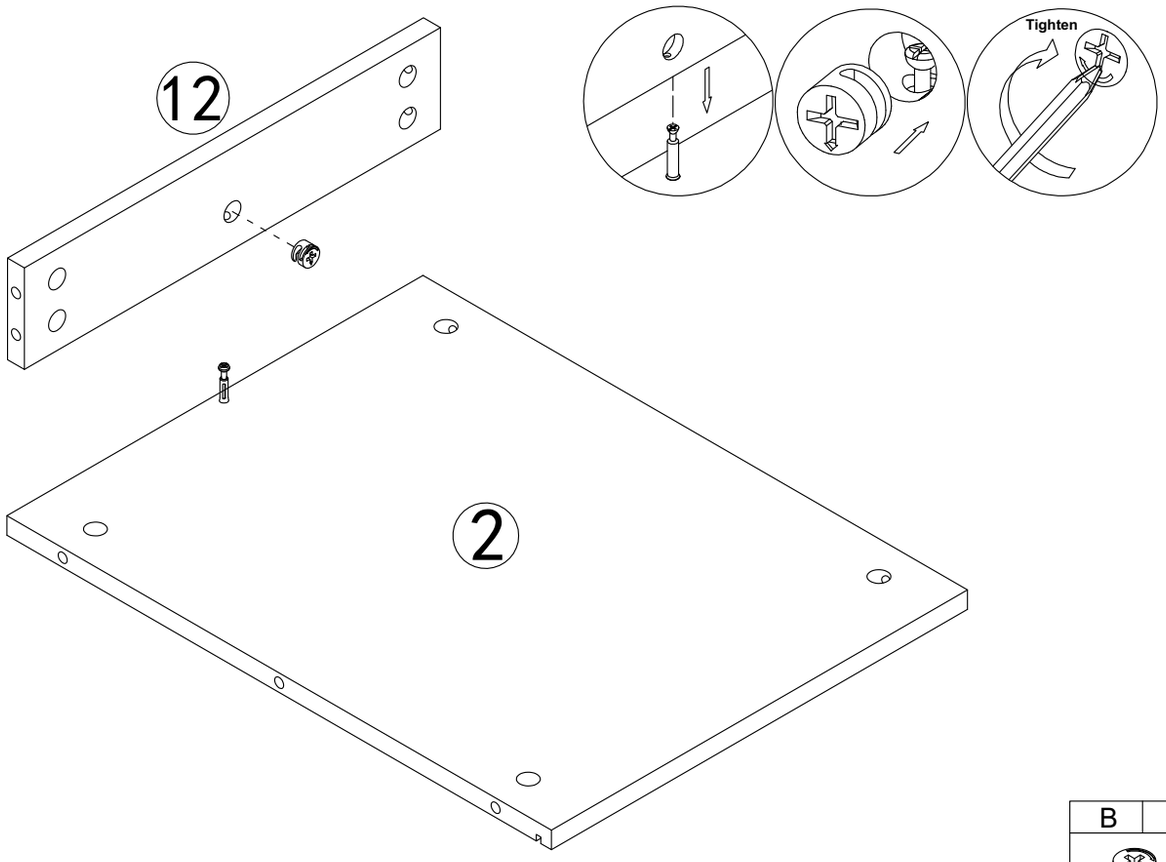


B	X1
	

11

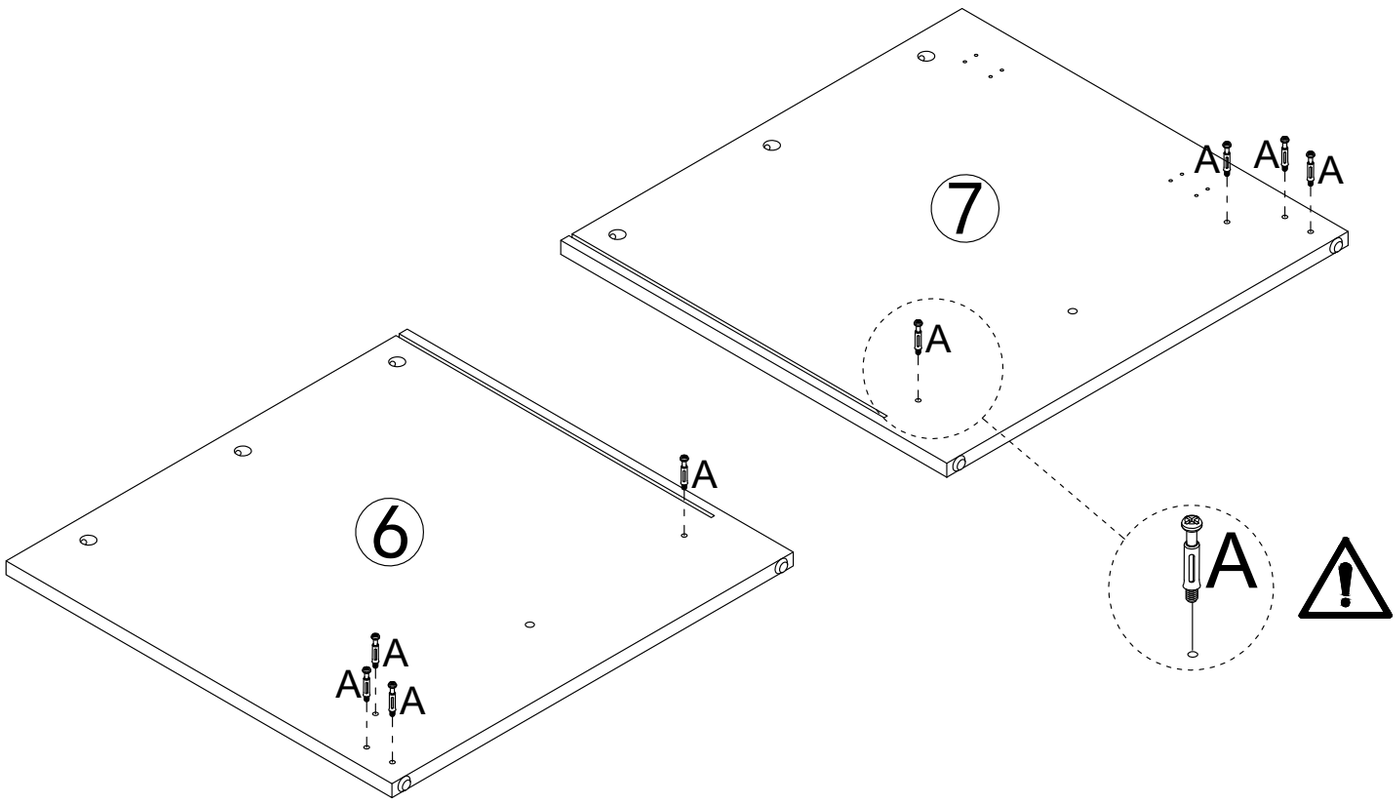

A	X8
	
M6x35mm	


12-1

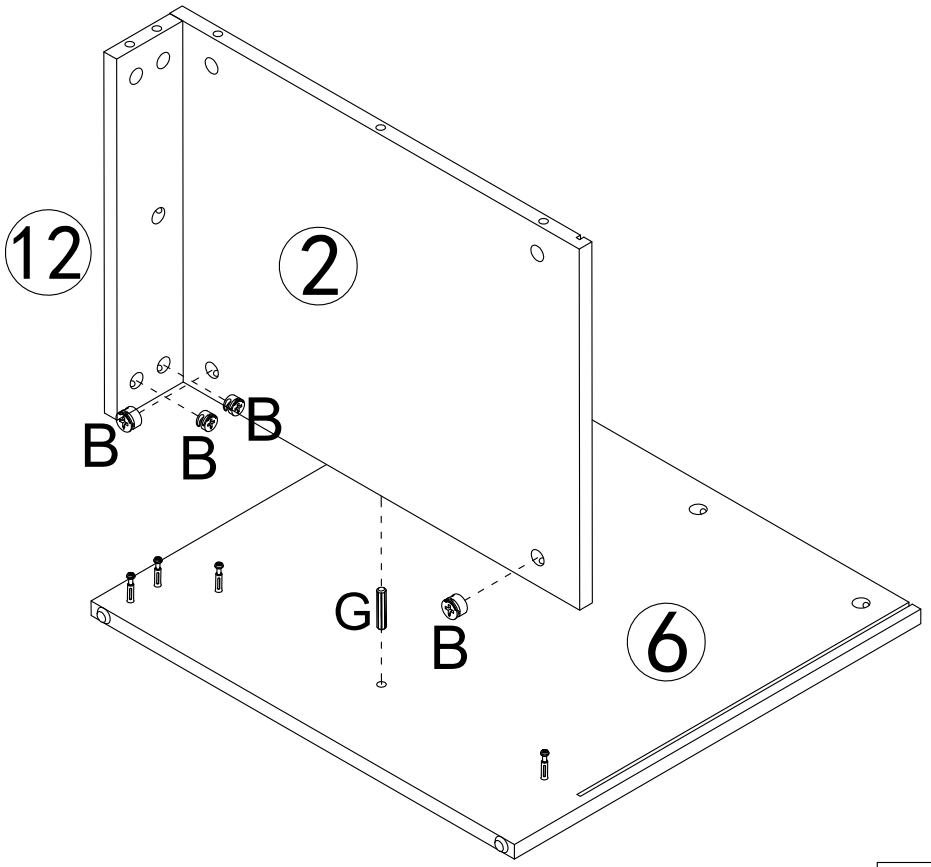


B	X4

G	X1

12-2

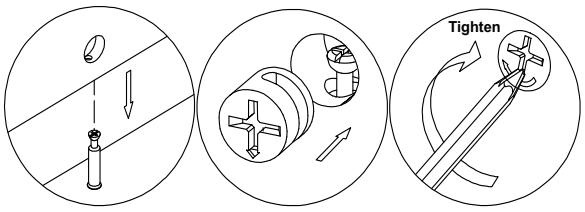


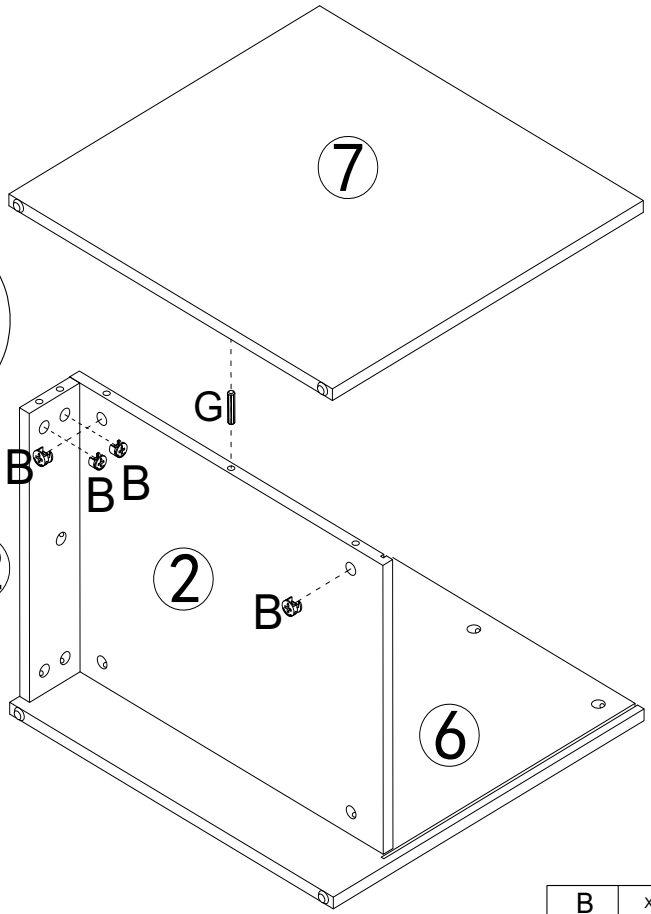


B	X4

G	X1

13

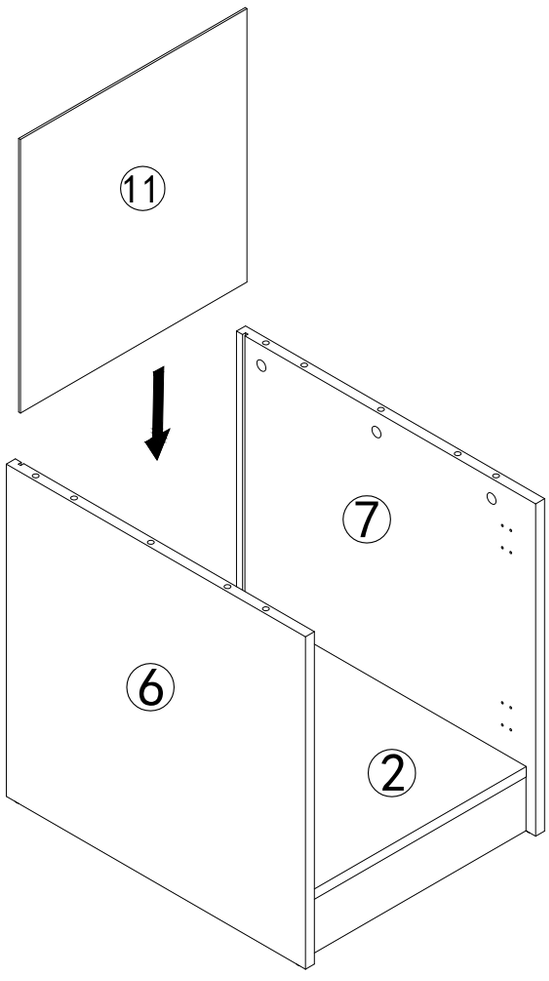


14

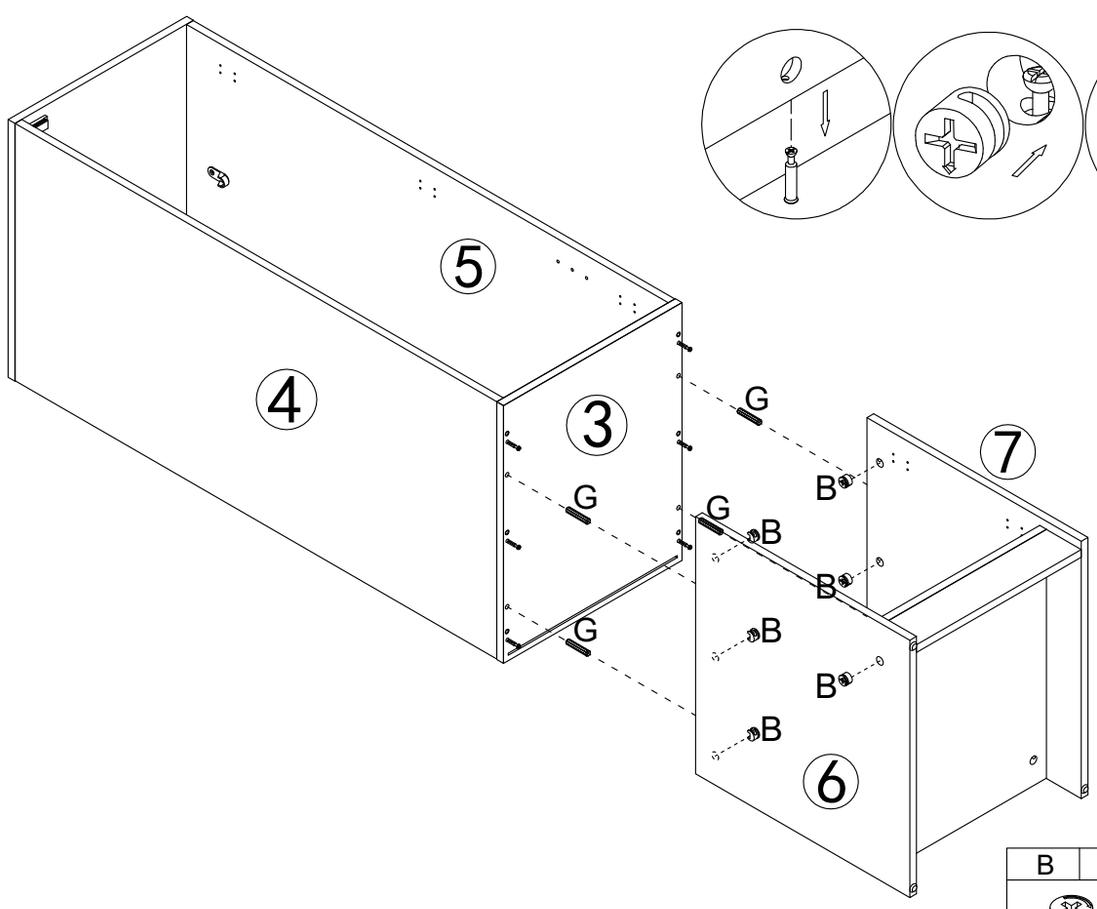

B	X6


G	X4

15

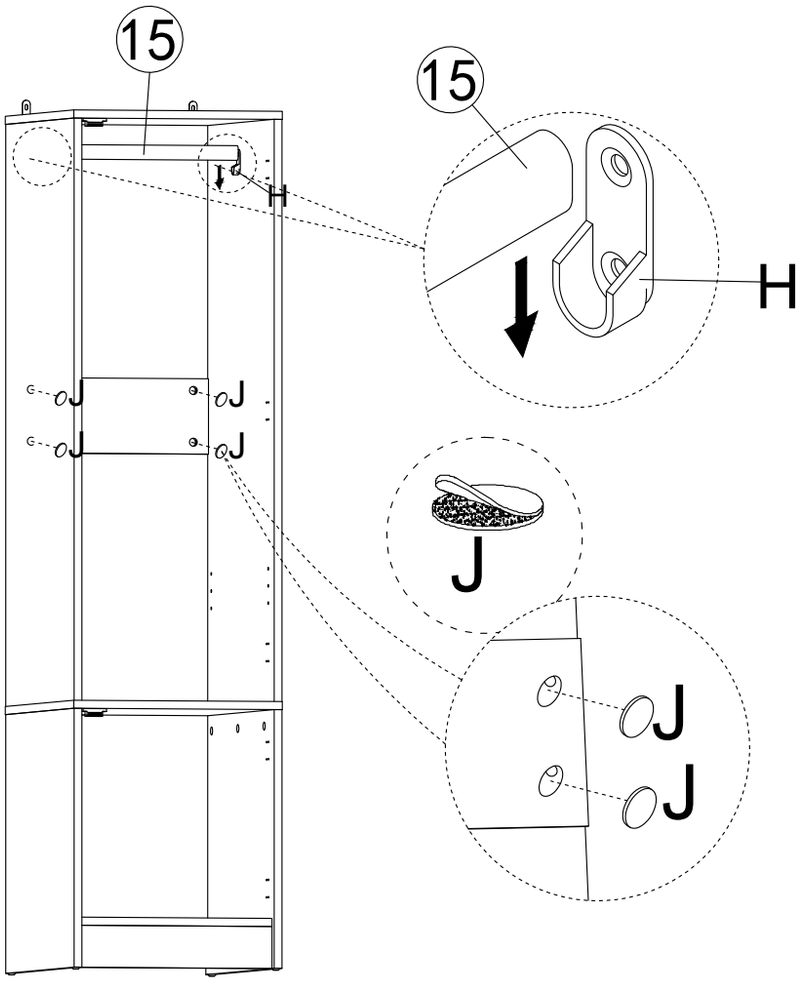


J	X4
	

16

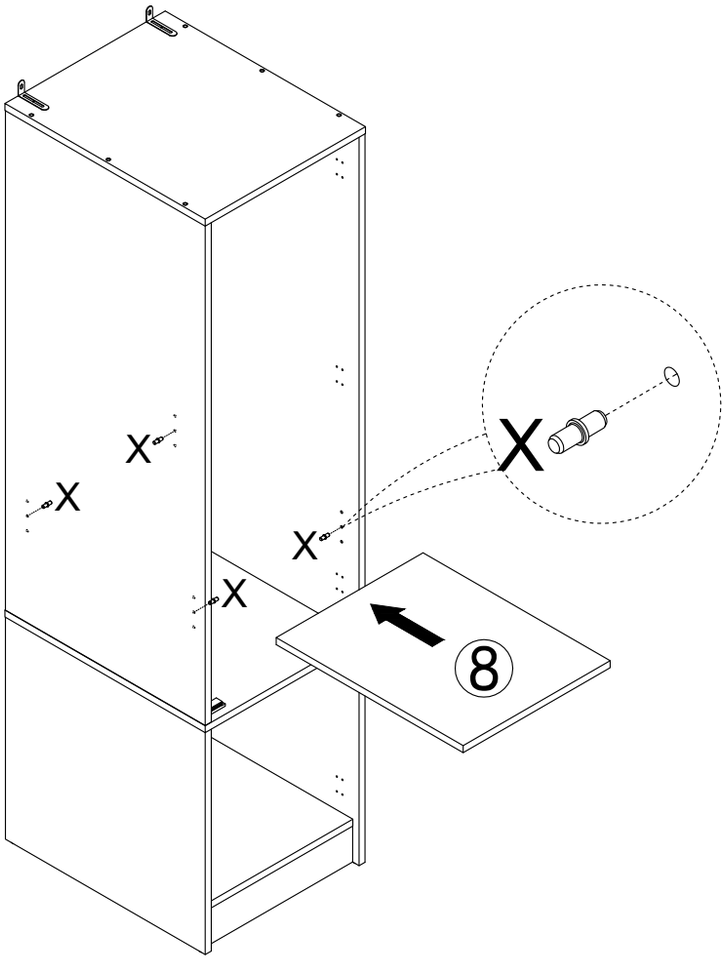

X	X4
	


17

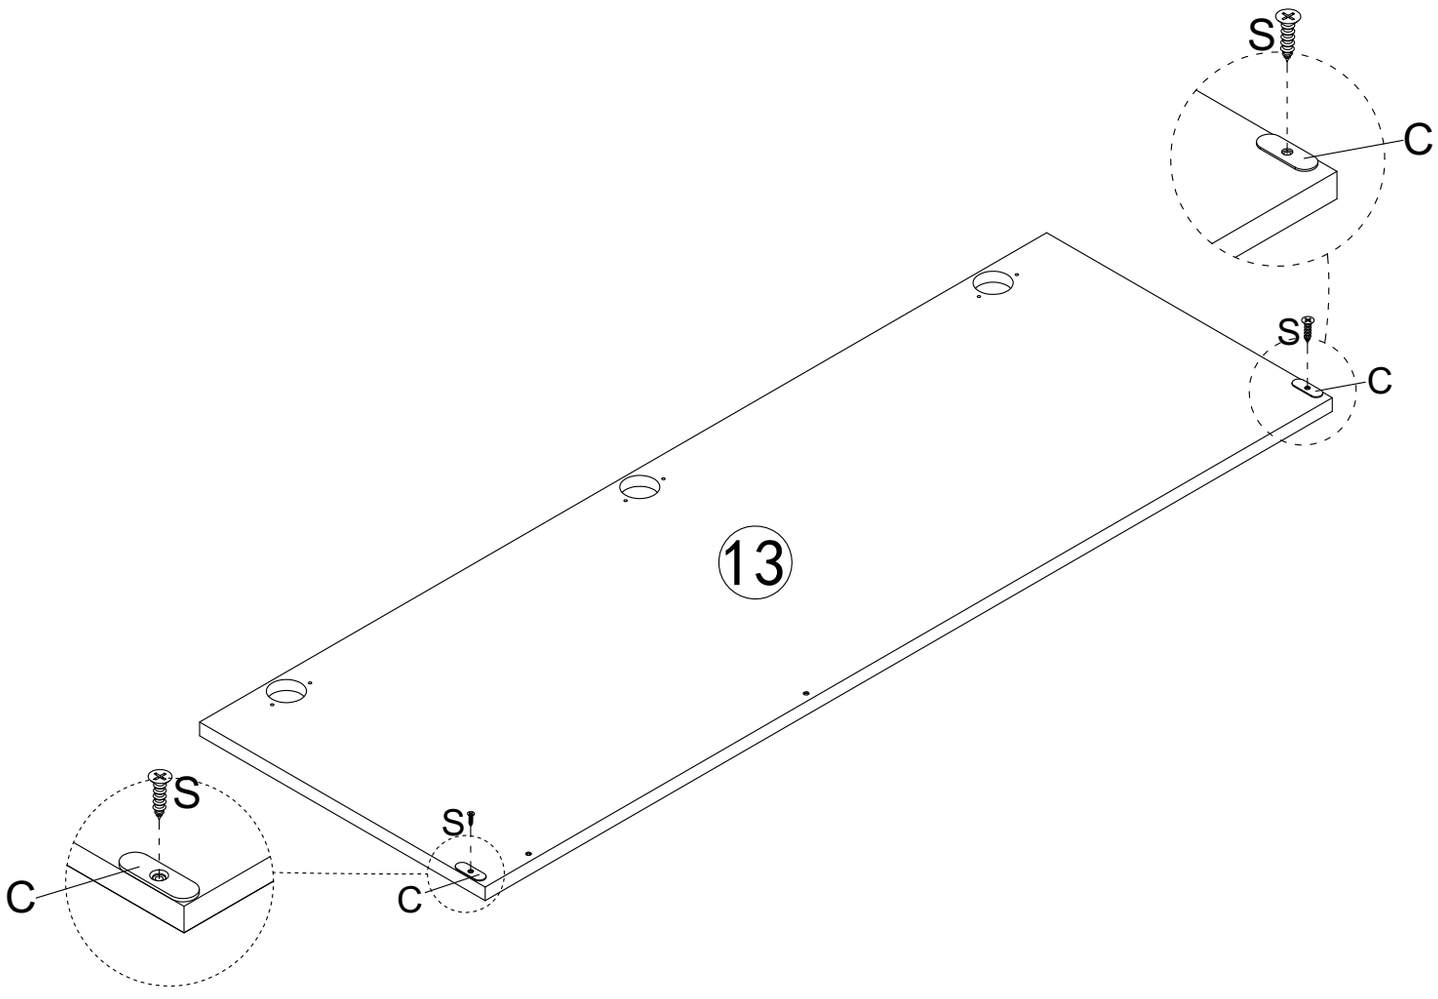


C	X2

S	X2
M3x12mm	

18

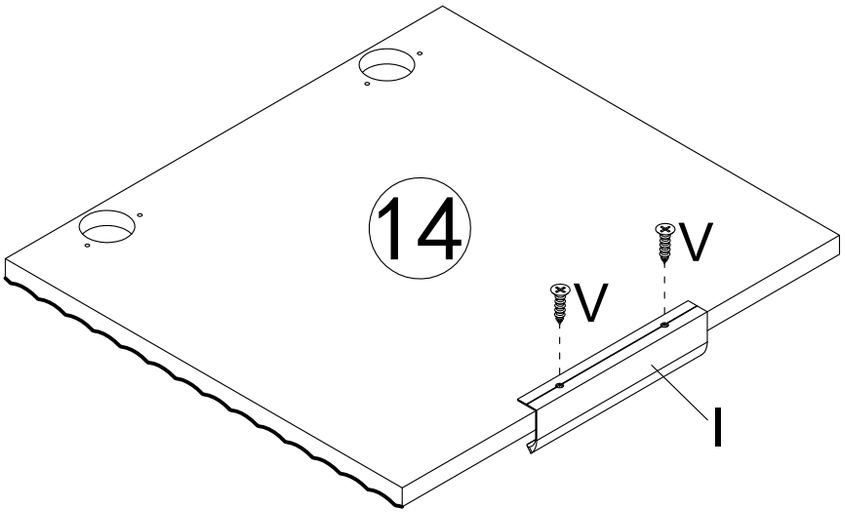


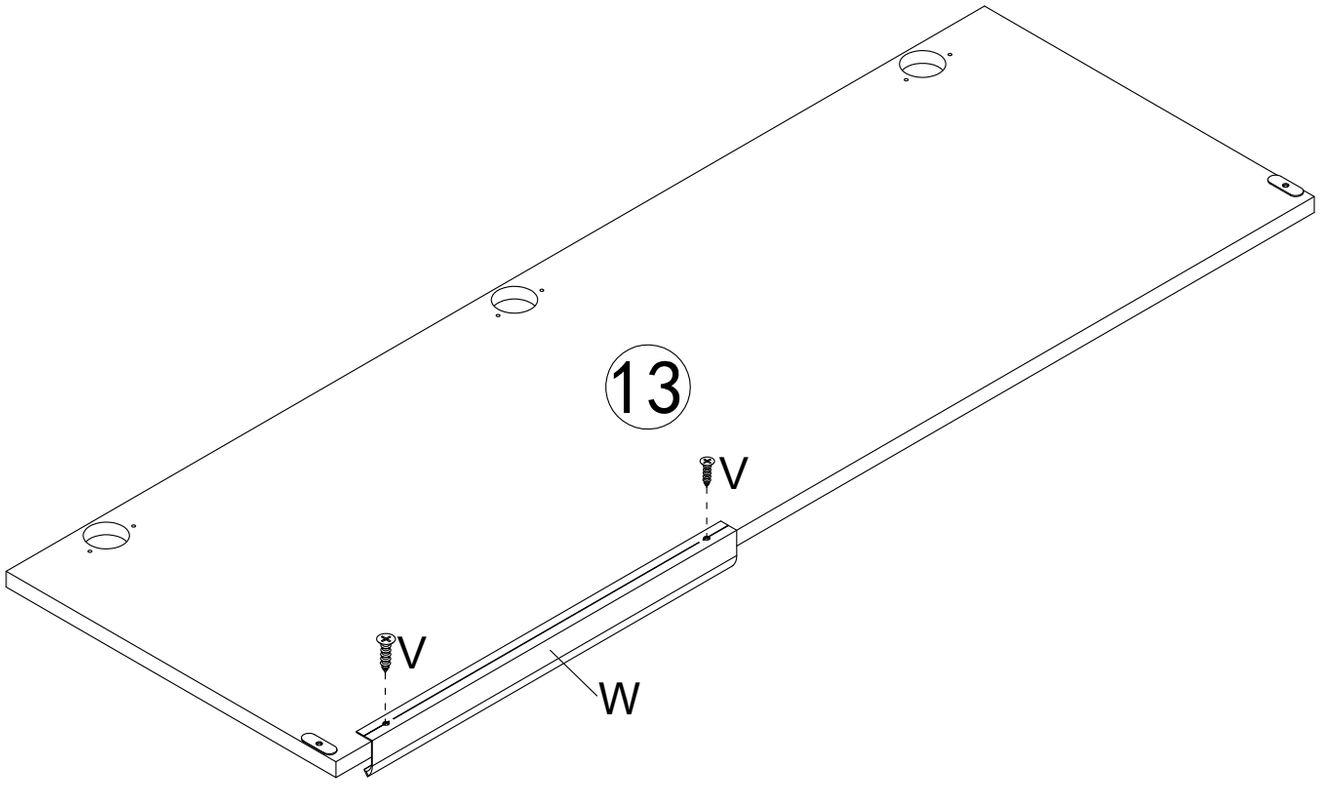


⚠ Important: The required fastener is a 12mm long Black or Golden V screw.
Never secure the mirror with Silver D screws, which may lead to breakage.

V	X4	I	X1	W	X1
M3.5x12mm					

19

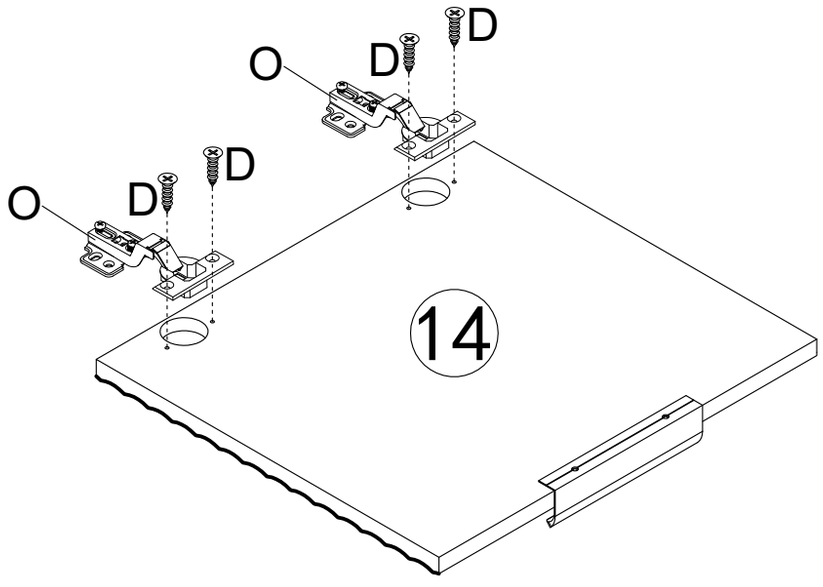


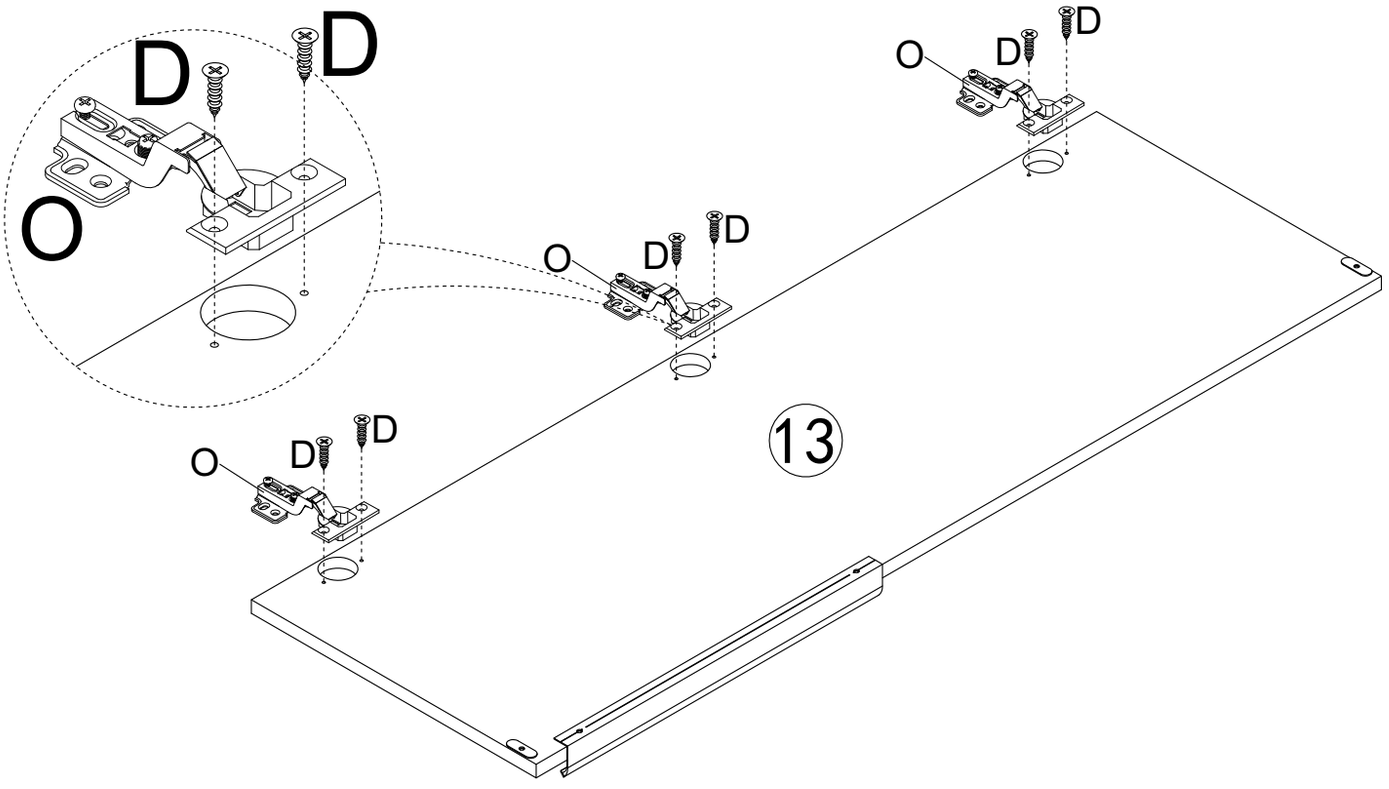


D	X10
M3.5x14mm	


O	X5

Please install and adjust the hinges strictly in accordance with the detailed steps 1, 2, 3, 4 and 5 to assemble the doors

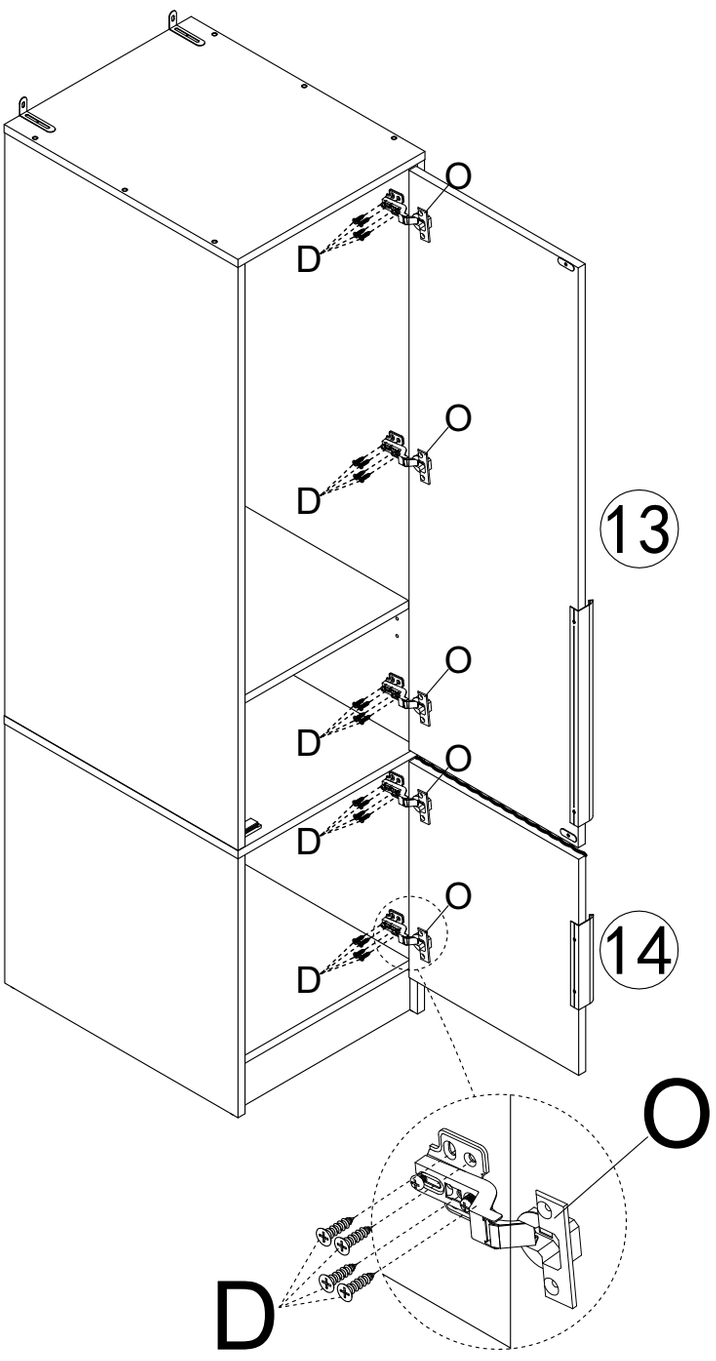


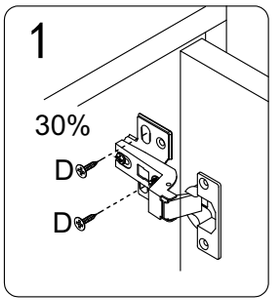


Tighten the screws only 30% as long as the door can be secured.

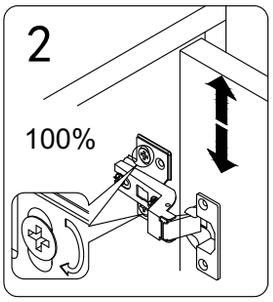


Move the door up and down until it is centred, then tighten the screw 100%.

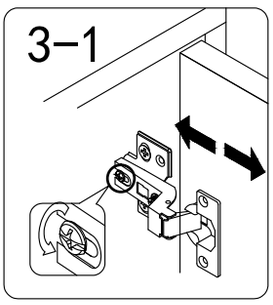


Loosen the screw **anti-clockwise**,and move the door **in or out** until it's **aligned** to side board.

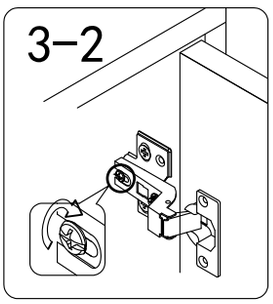


Tighten the screw **clockwise** once the door is aligned.

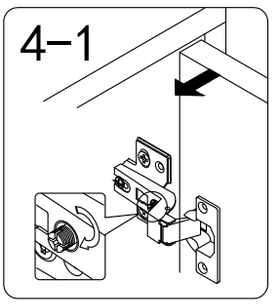

To adjust the gap between the door and the side board to be **larger**, turn the screw **clockwise.**

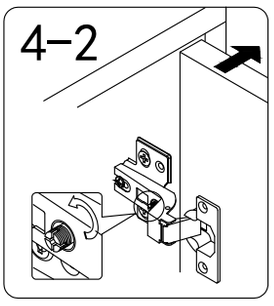


To adjust the gap between the door and the side board to be **smaller**, turn the screw **anti-clockwise.**

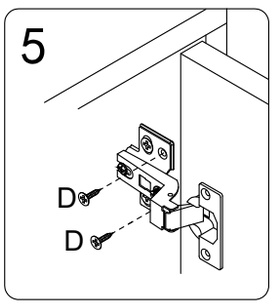

After adjusting the doors properly above, finally tighten these two screws and secured the door.

D	X20
	
M3.5x14mm	


21

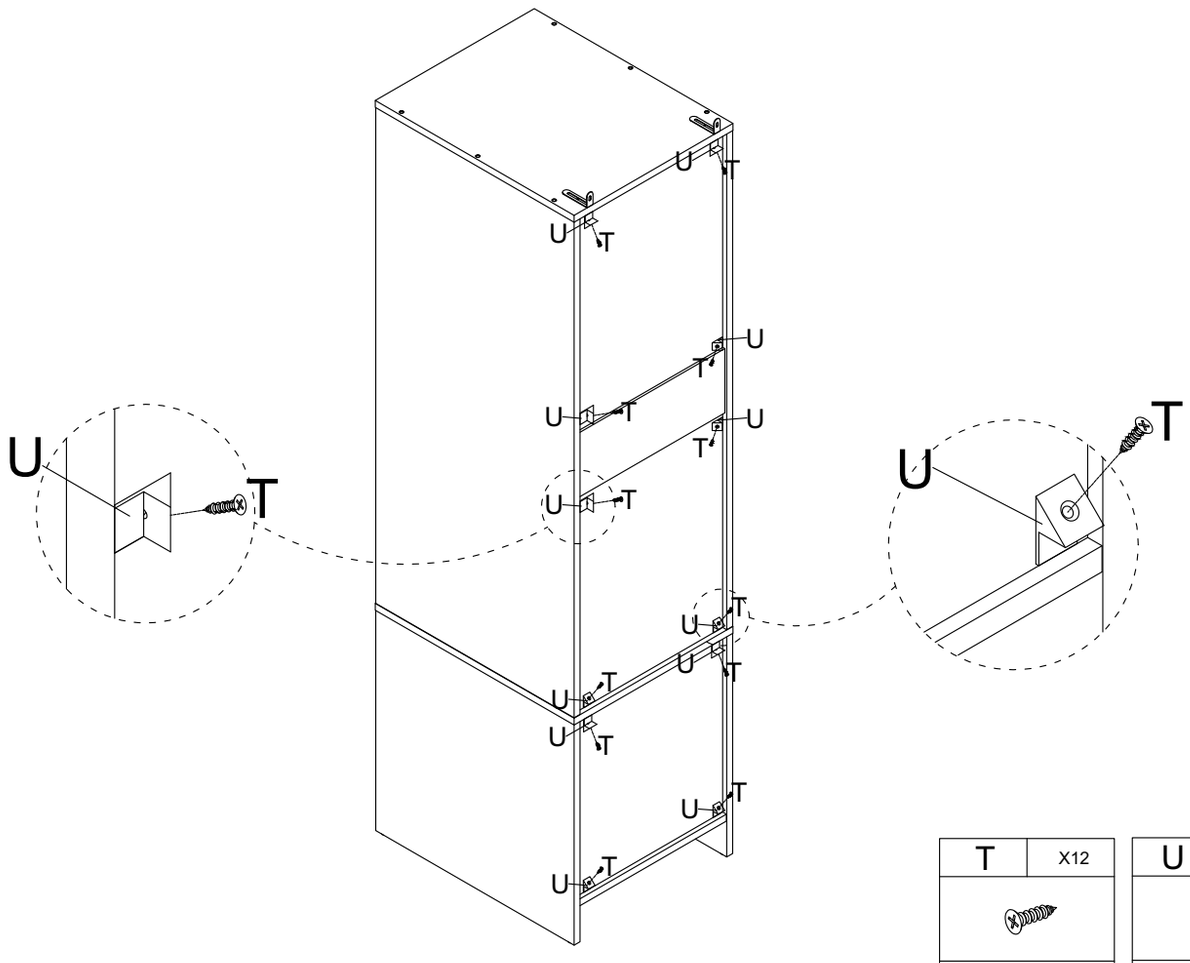

T	X12
M3x16mm	

U	X12

22

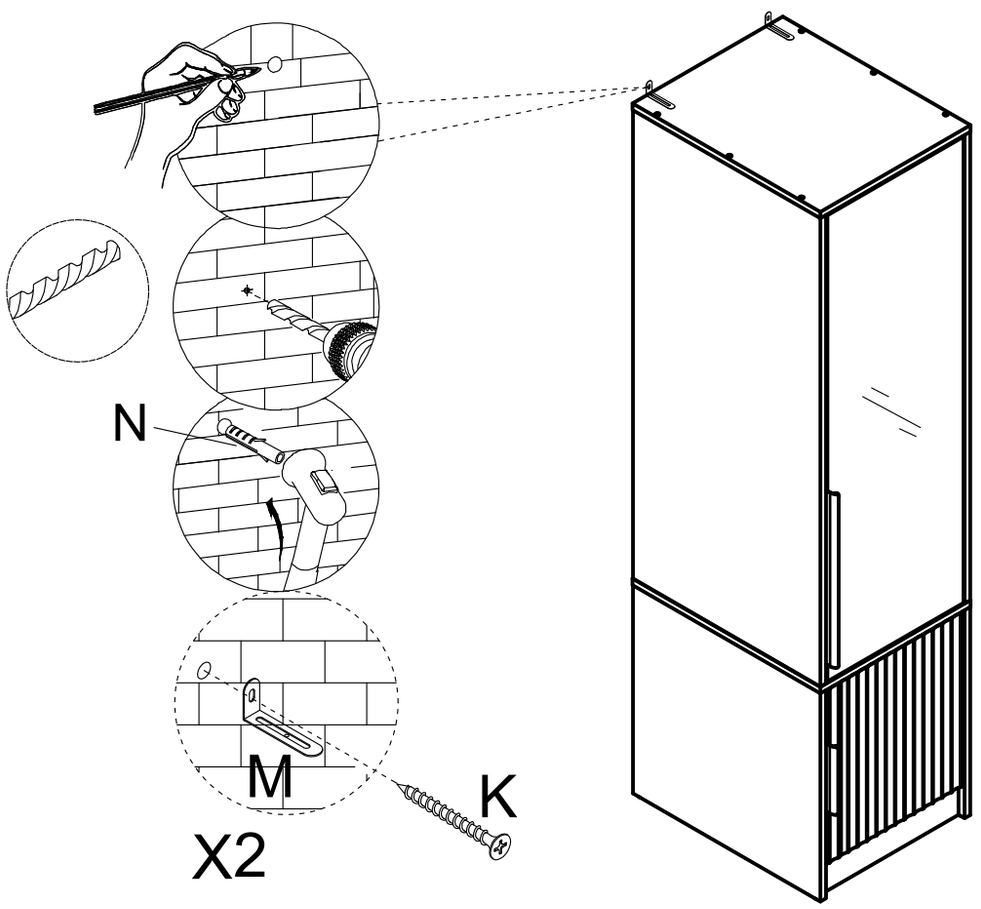

N	X2

K	X2
M4x35mm	

23

