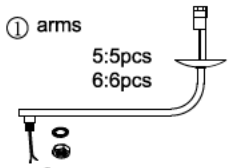





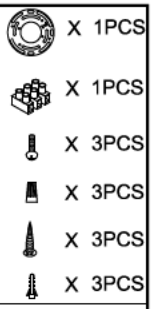

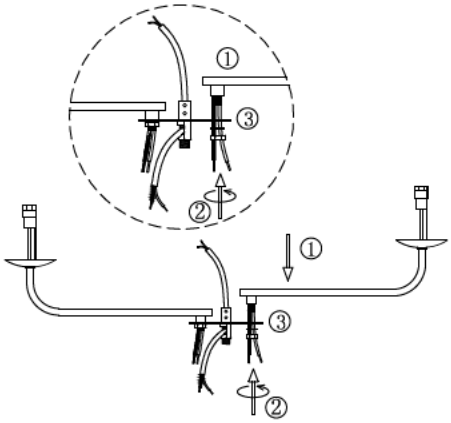

1.Install the arms ① on the plate ③ with lock nut & teeth lock washer ②.

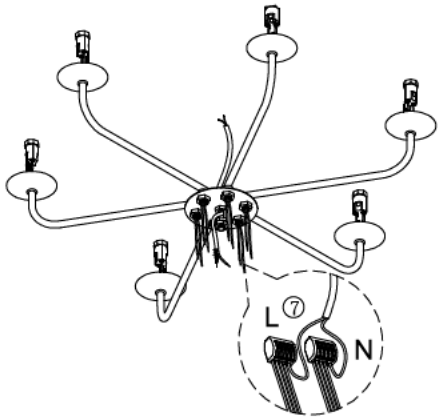

2.Connect all the wires by parallel with connectors ⑦ (all live line-L use one connector, and neutral Line-N use another connector).

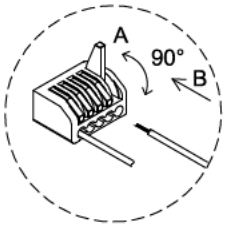

1.Pull the orange operating handle A to open the inlet hole, insert the wire B.
2.Press the operating handle A to finish wiring.
(Note: one inlet hole can put 2 or 3 wires inside)

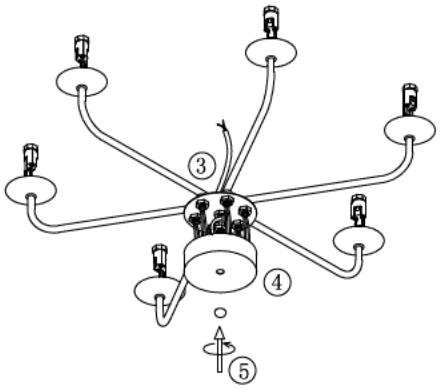

3.Install the box ④ to the plate ③ with end cap ⑤.

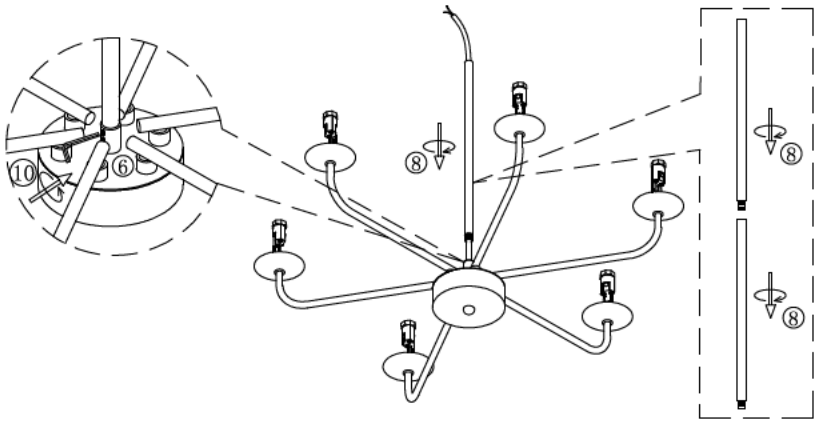

4.Let the wire go through the hanging tube ⑧, rotate to fasten the tube ⑧ to the connect tube ⑥, lock the tube ⑧ with grub screw ⑨ by rotate hex key ⑩.(can connect more tubes to get the height you need).

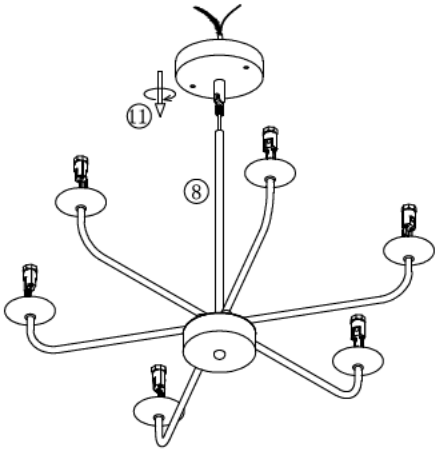

5.Let the wire go through the canopy ⑪, rotate to install the canopy to the tube ⑧.

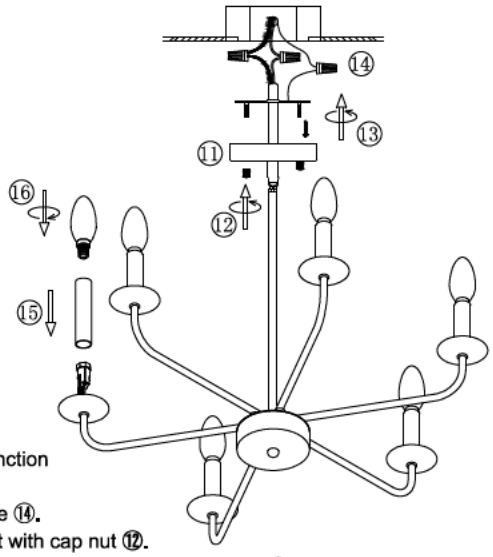

6.Install the bracket to the ceiling junction box with screw ⑬.
7.Connect the wire to your home line ⑭.
8.Install the canopy ⑪ to the bracket with cap nut ⑫.
9.Put the cylinder tubes ⑮ on the lampholder and install the bulbs ⑯.

Please read carefully before installation!!!
Note : Please make sure that the electricity is powered off during installation !
Only a professional electrician should install this kind of product !