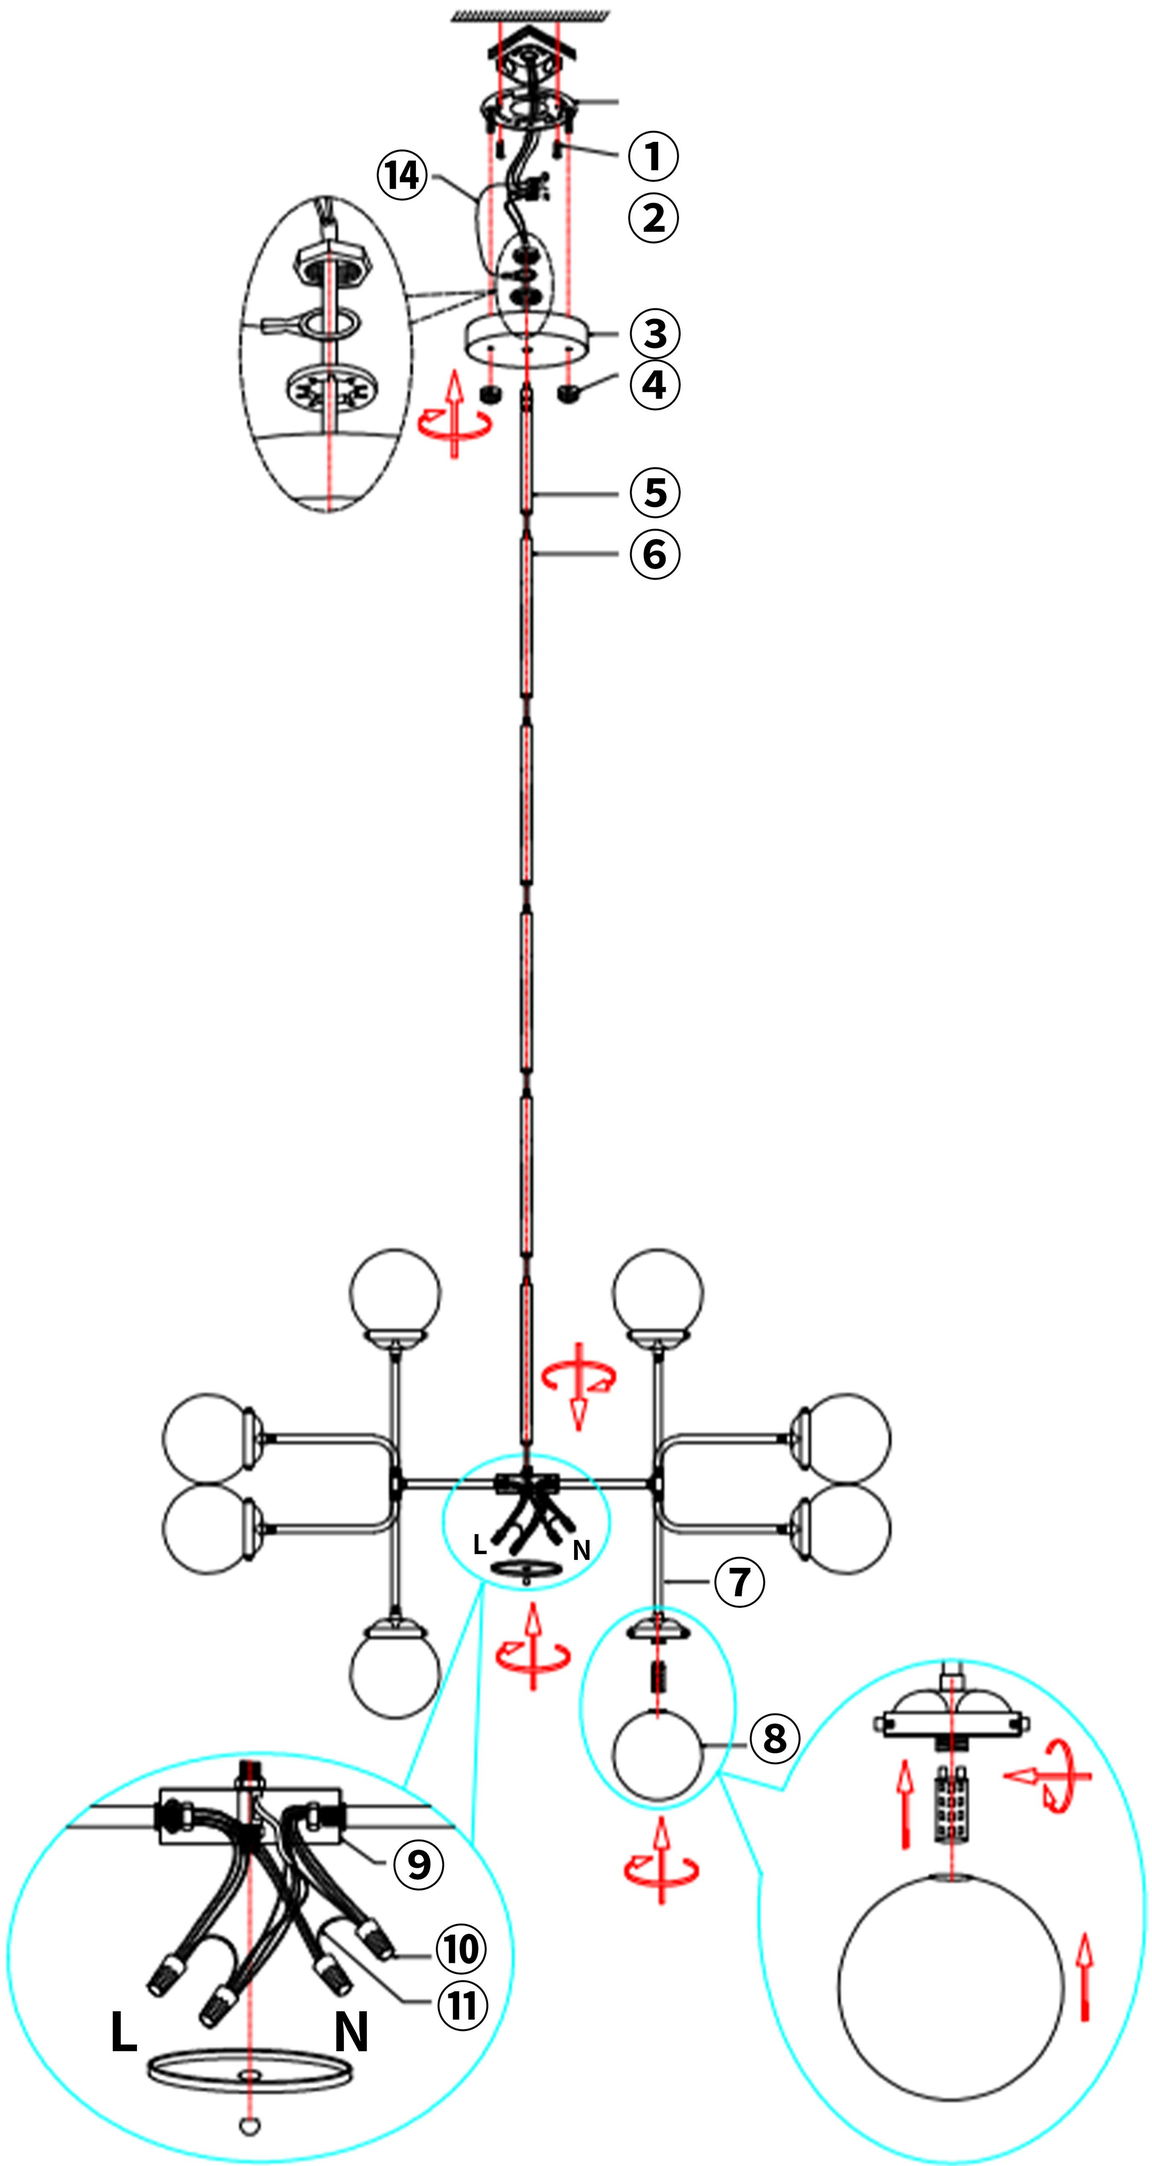

Installation Steps:

Step 1: Lock the lamp arms (7) on the lamp base box (9) with nuts and gaskets.
Step 2: Connect the lamp head cable to the black and white connection wire (11) with the P6 wiring cap (10).
Step 3: Connect the rest of the lamp head wire and the black and white convergence line (11) to the main line with the P6 wiring cap (10).
Step 4: Fix the lamp cover to the base box (9) with decorative particles.
Step 5: Thread the main line through the rod (6) and fix the rod to the lamp base box (9).
Step 6: Fix the rod+cardan joint combination (5) on the rod (6).
Step 7: Fix the canopy (3)Ground Wire(14) on the rod+cardan joint combination (5) with nuts and gaskets.
Step 8: Fasten the bagua board (1) to the ceiling with screws (2).
Step 9: Use the green screws on the mounting plate (1) to lock the ground wire to the mounting plate (1).
Step 10: Connect the positive "L"' negative "N" poles of the main and power cables separately with the P3 wiring cap in the Fittings(12).
Step 11: Fix the canopy(3) to the mounting board (1) with a nut (4).
Step 12: Install G9 bulb (without bulbs).
Step 13: Lock the glass shade(8) to the lamp holder.

Accessories:

1: Mounting Plate*1	
2: Screws*3	
3: Canopy*1	
4: Nut*2	
5: Rod with Cardan joint*1	
6: Rod*5	
7: Arms*6	
8: Glass Shade*12	
9: Base Box*1	
10: P6 Wiring Cap*4	
11: White/Black Wire*2	
12: Fittings*3 each	
13: Wrench*1	
14: Ground Wire*1	

Notice: This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect items and contents carefully. If any damage or defect is found, do not install it.