
5308#

Bathroom cabinet

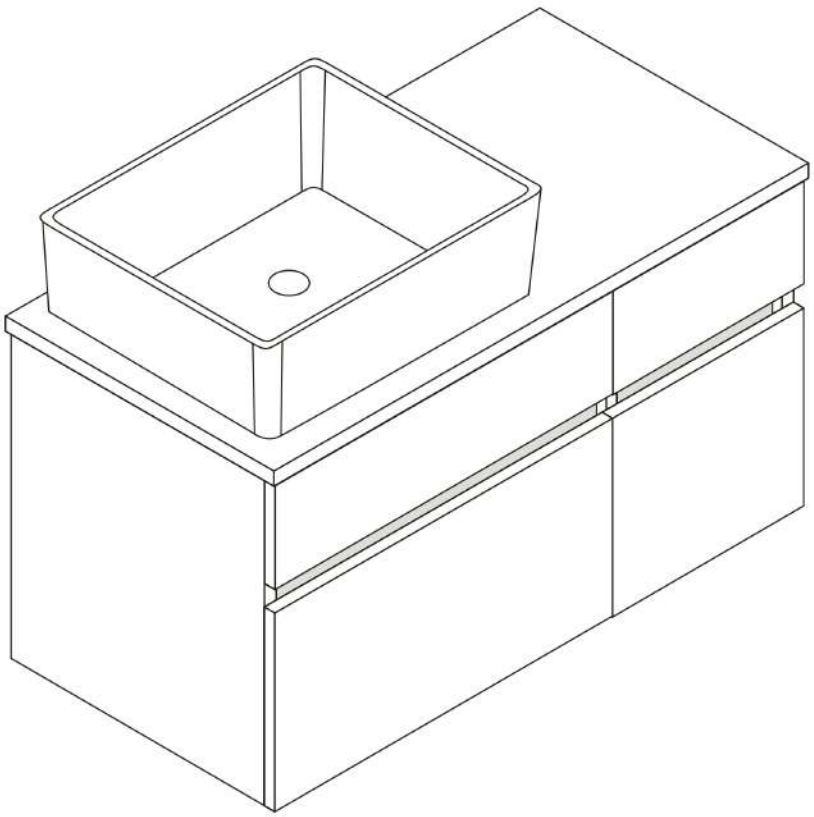




2 Persons


L798*W398*H400MM

Installation Instructions

Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

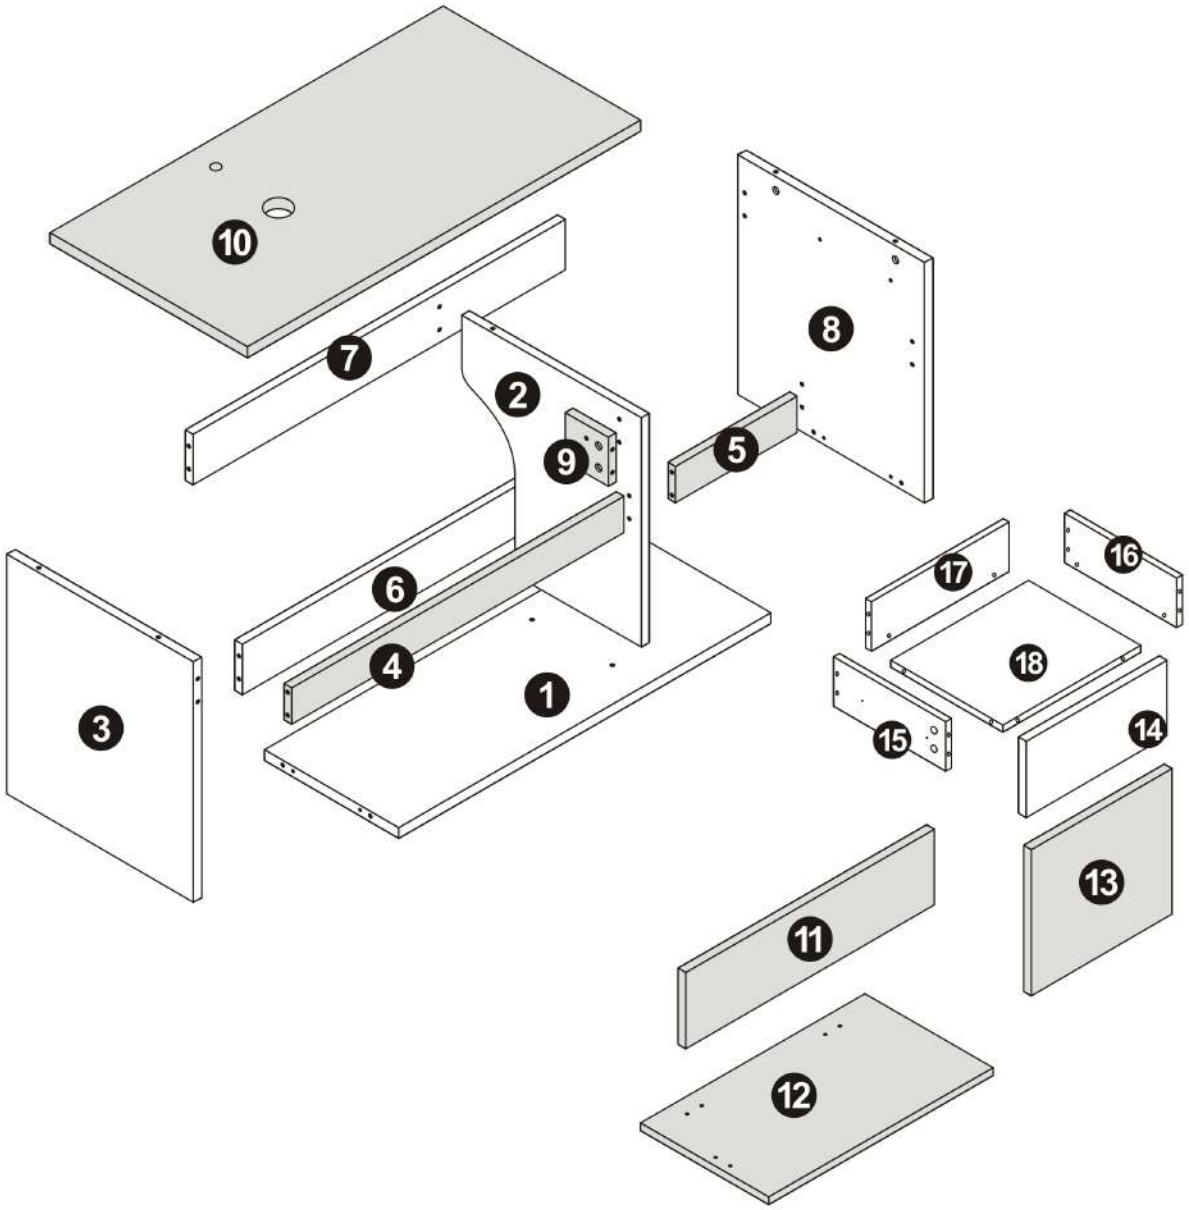


Disassembly and installation of accessories

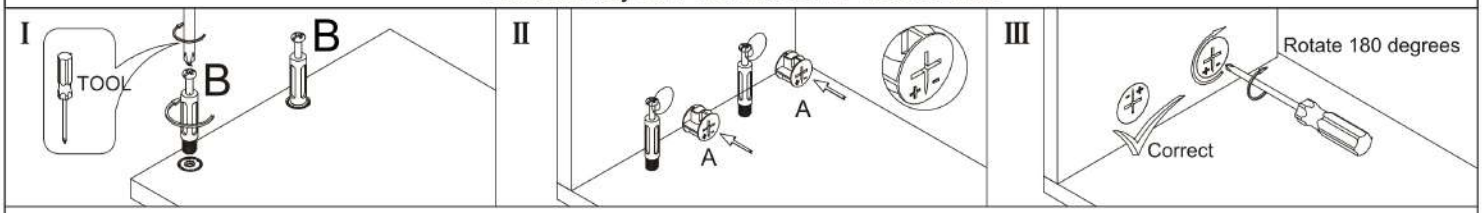

A 42PCS	B 42PCS	C 64PCS	D 6PCS	E 2PCS	F 4PCS	G 4PCS	H 1PCS
15*10mm	6*28mm	3.5*14mm	3.5*35mm	6*25mm	8*30mm	7*38	Pneumatic rod


I 2PCS	J 4PCS	L 2PCS	M 2PCS	N 4PCS
Three-section Rail	Expansion screw	Corner code	Pendant	Hinge

1

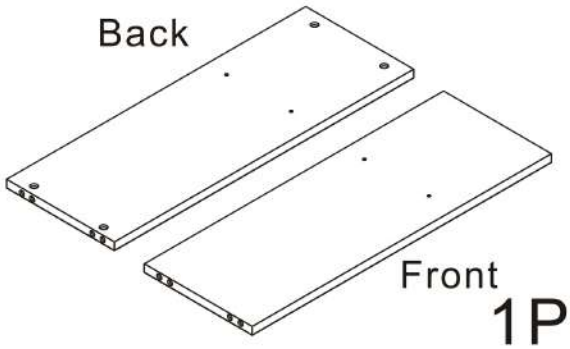


1PC

2

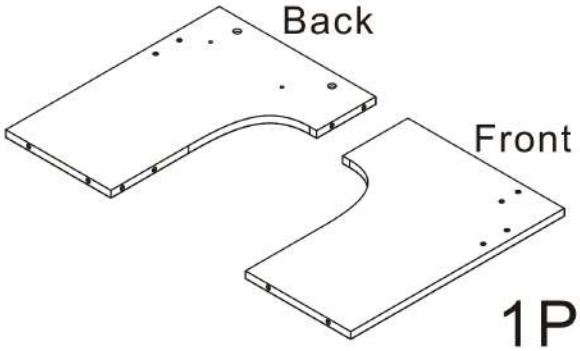


1PC

3

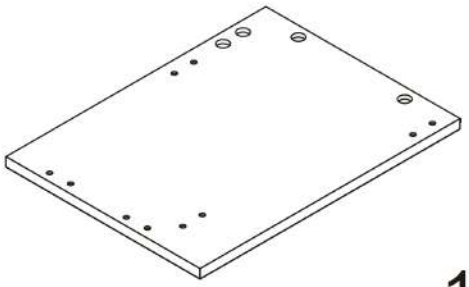


1PC

4

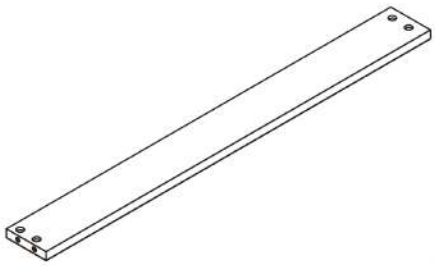


1PC

5

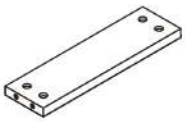


1PC

6

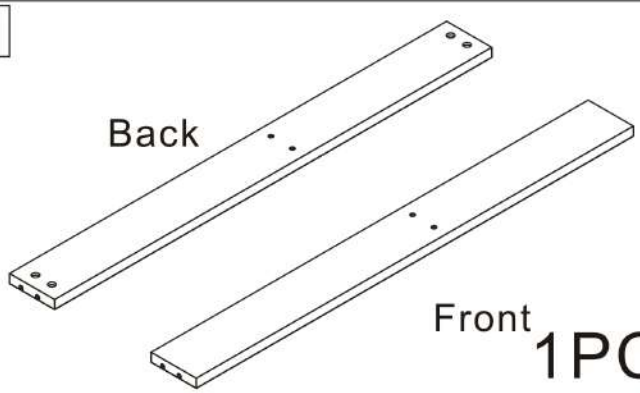


1PC

7

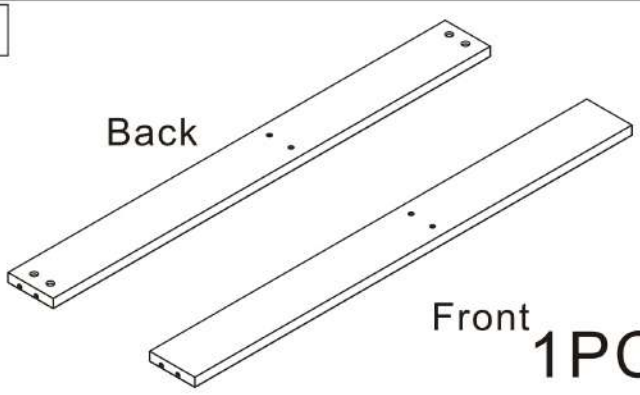


1PC

8

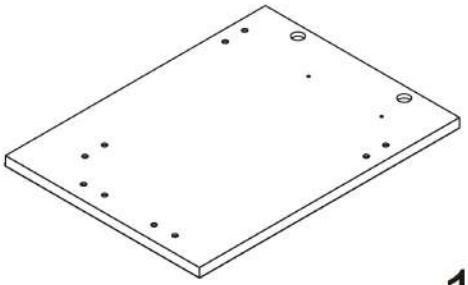


1PC

9

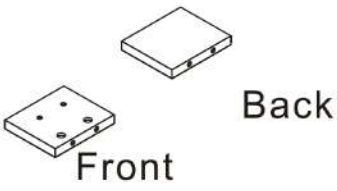


1PC

10

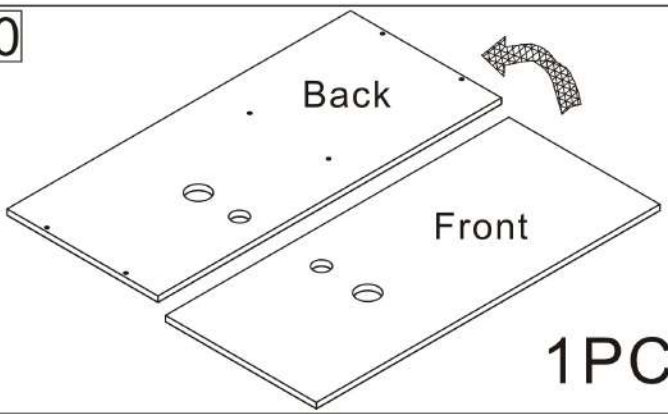


1PC

11

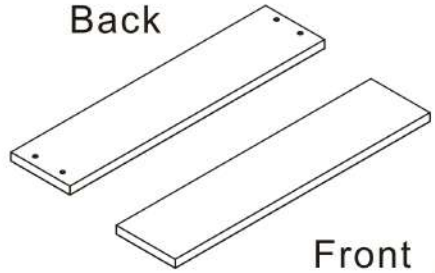


1PC

12

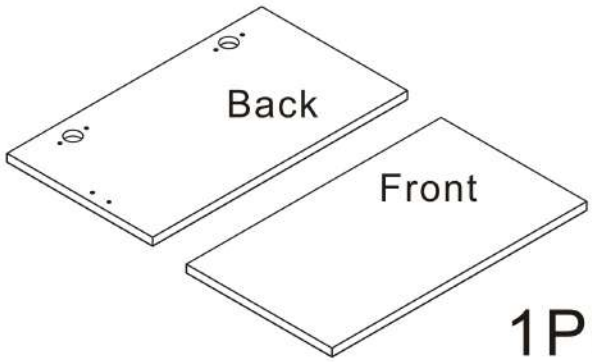


1PC

13

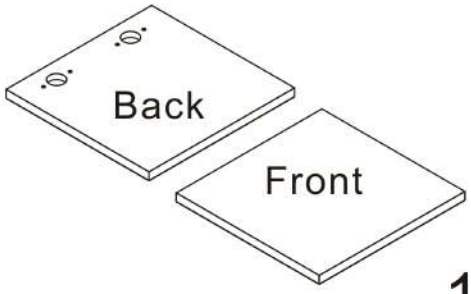


1PC

14

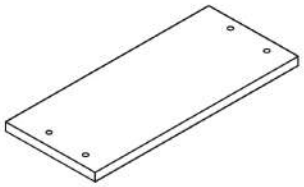


1PC

15

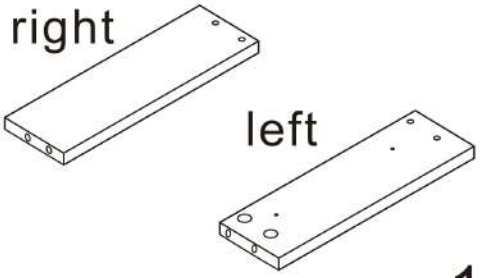


1PC

16

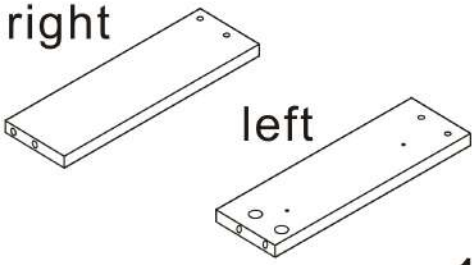


1PC

17

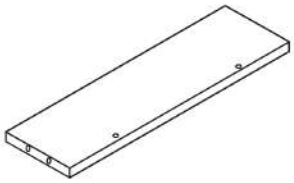


1PC

18

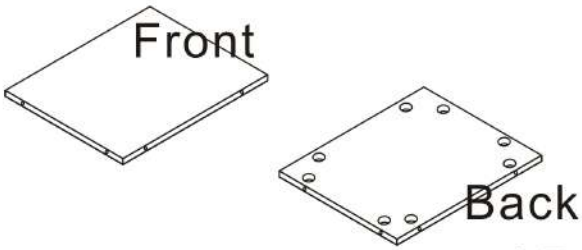


1PC


1

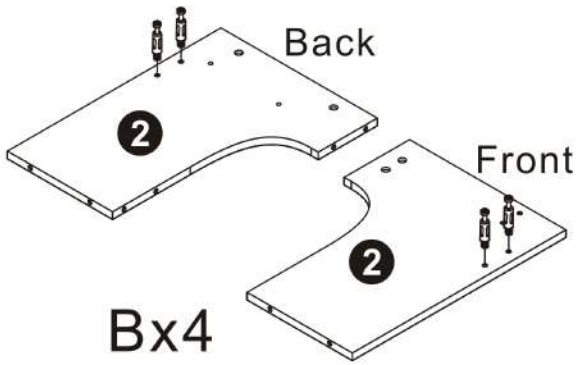


Bx4

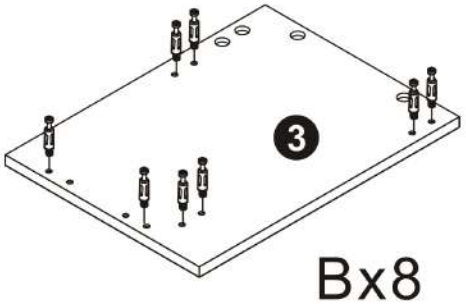


Bx8

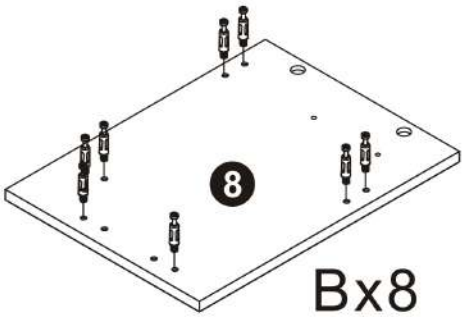


Bx8

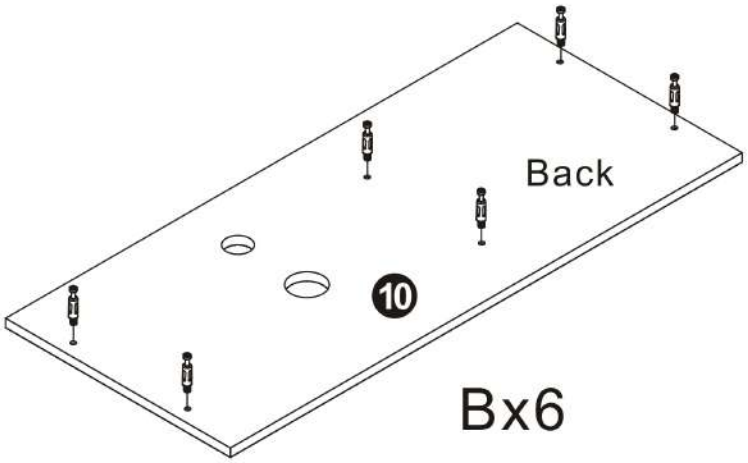


Bx6

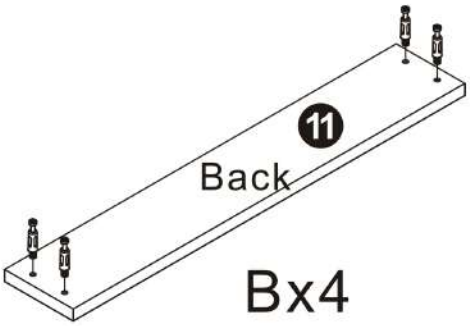


Bx4

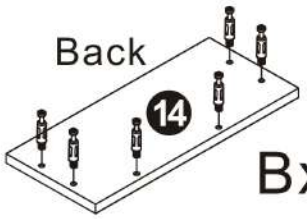


Bx6

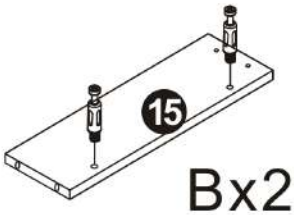

Bx2

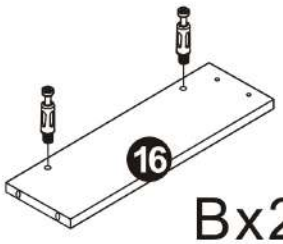


Bx2

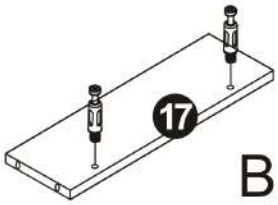

Bx2


B	42PCS
	
6*28mm	


2

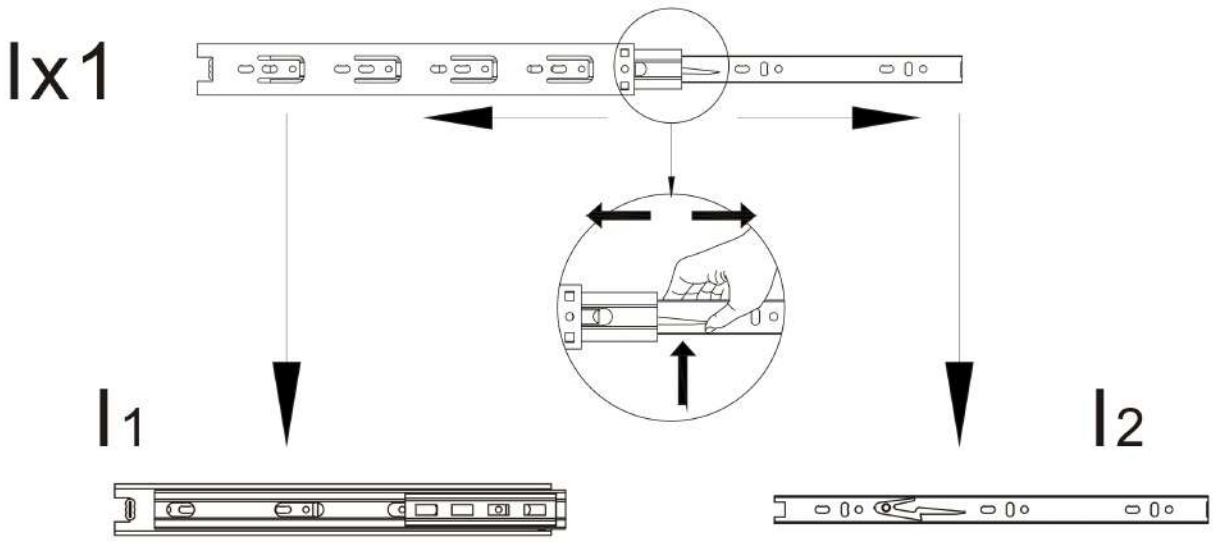

I1	2PCS
	
Three-section Rail	

3

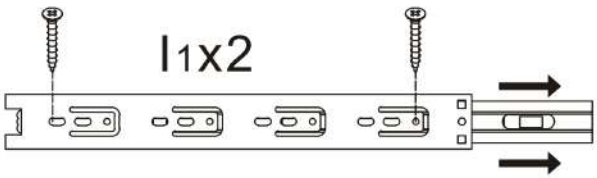


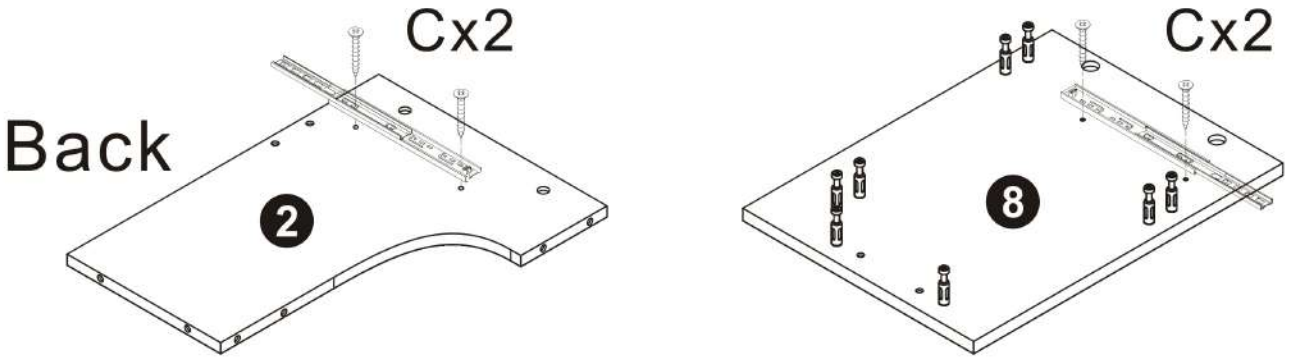

C	4PCS
	
3.5*14mm	


I1	2PCS
	
12 inch Three-section Rail	

4

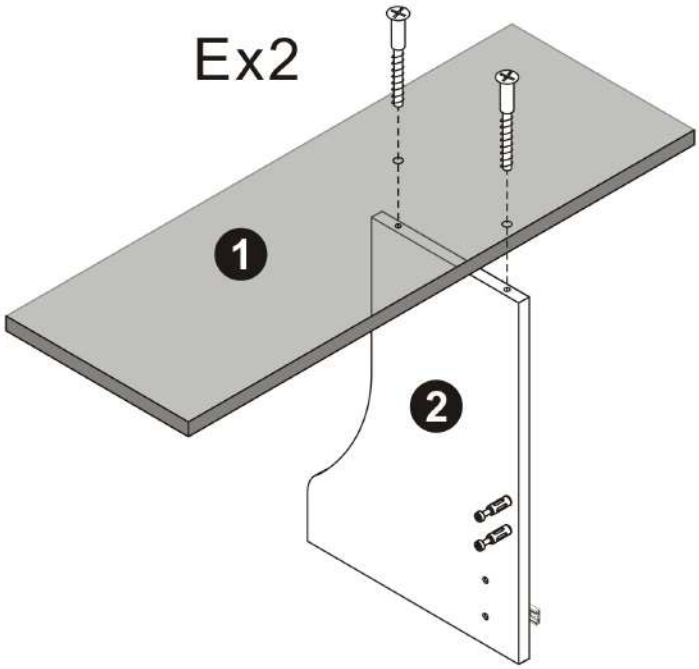


G	2PCS
	
7*38mm	

5

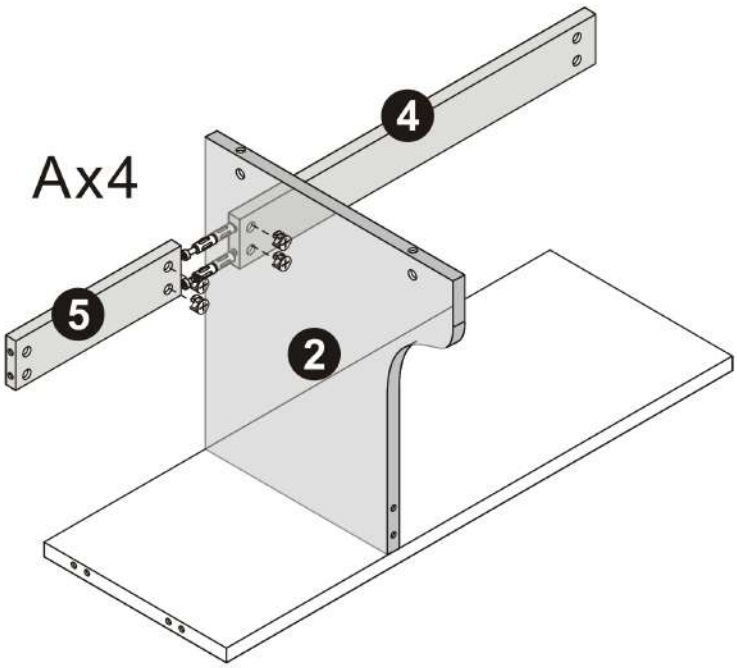

A	4PCS
	
15*10mm	


6

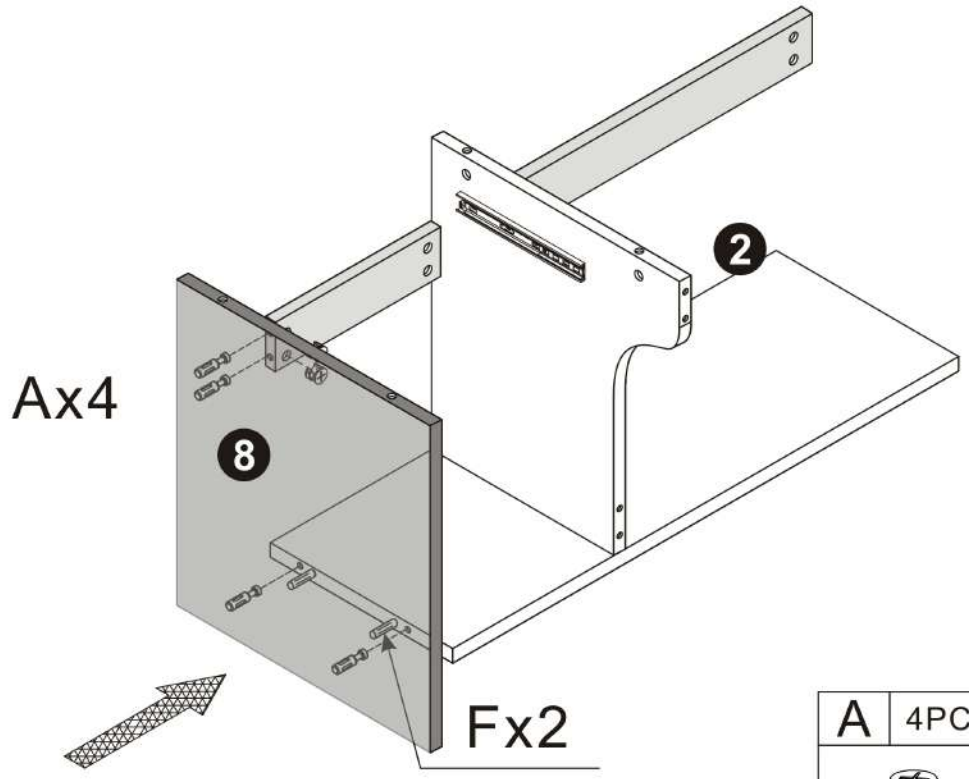

A	4PCS
	
15*10mm	


F	2PCS
	
8*30mm	

7

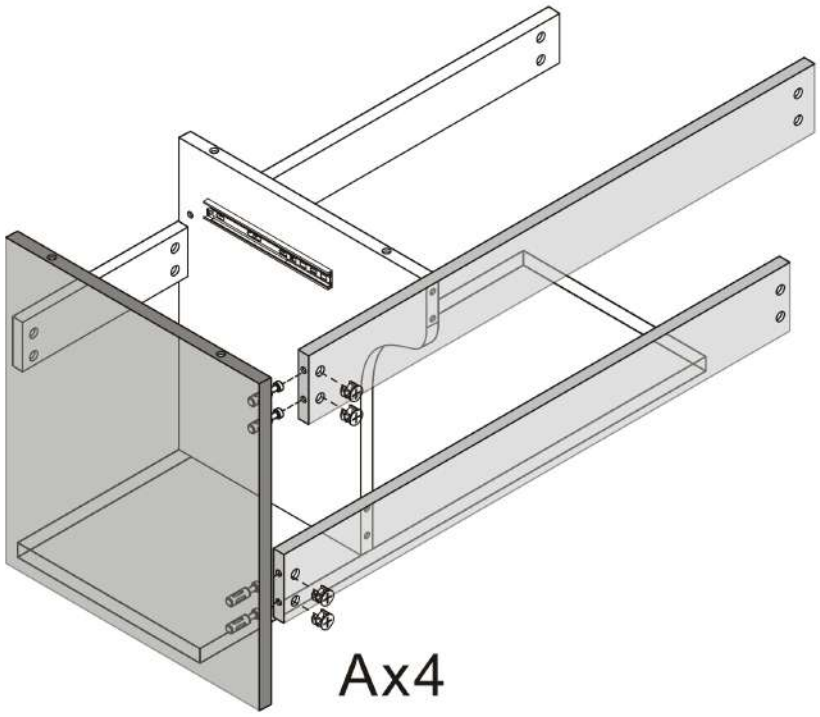


A	4PCS
	
15*10mm	

8

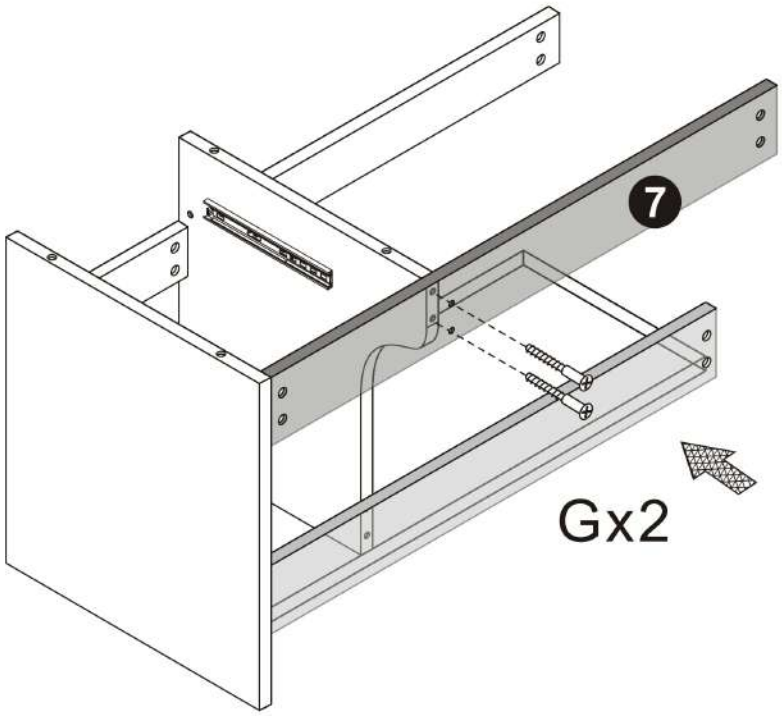


G	2PCS
	
7*38mm	

9

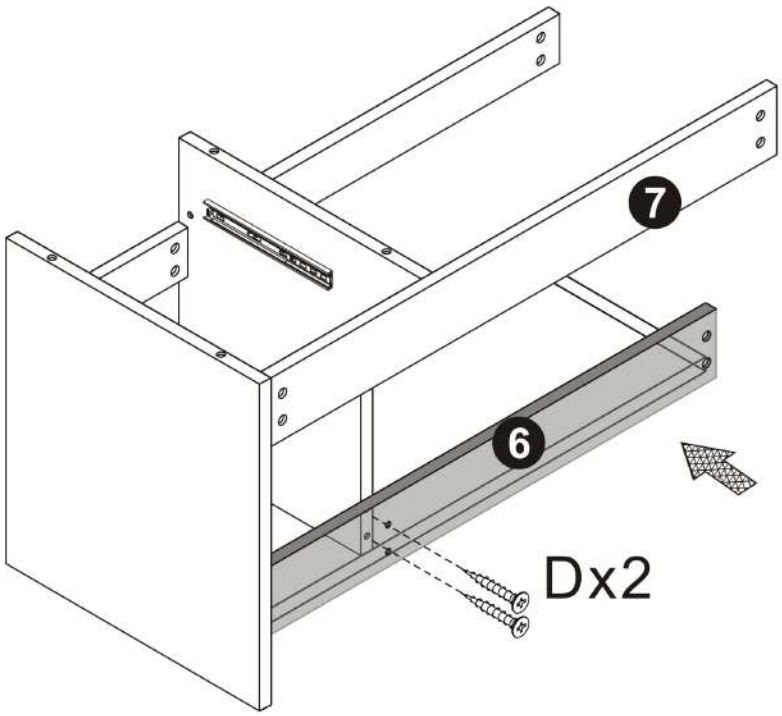

D	2PCS
	
3.5*30mm	


10

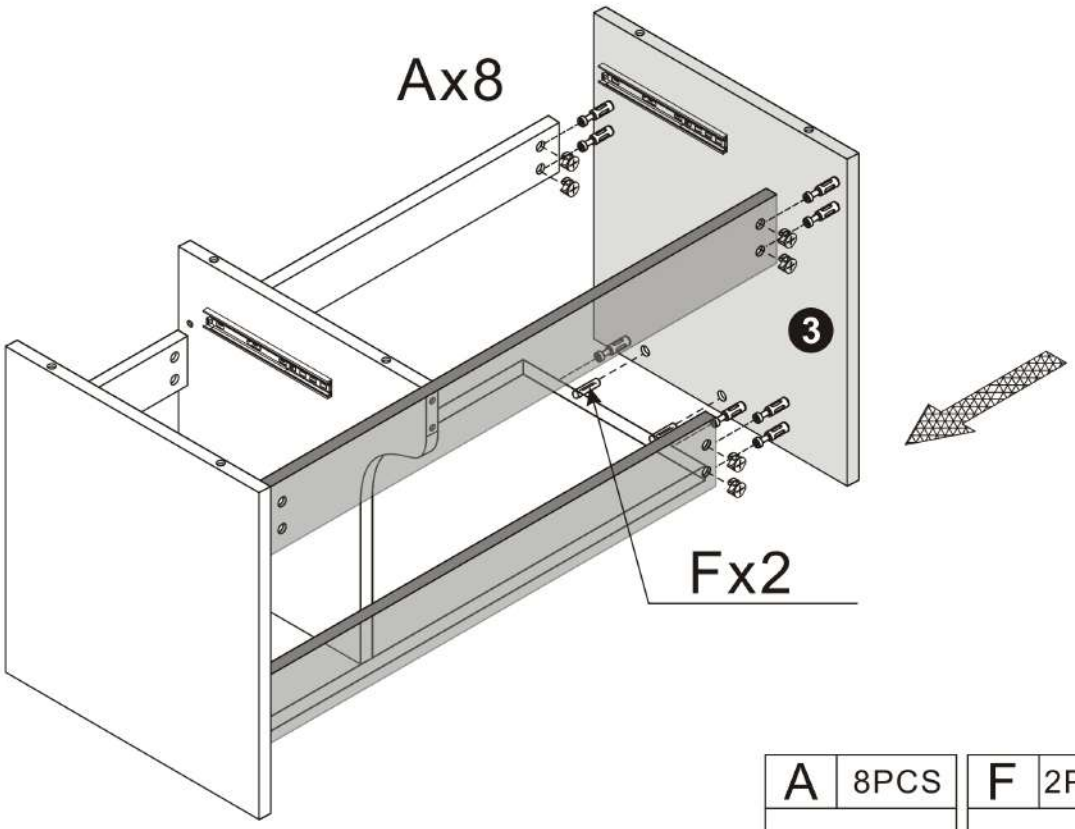

A	8PCS
	
15*10mm	


F	2PCS
	
8*30mm	

11

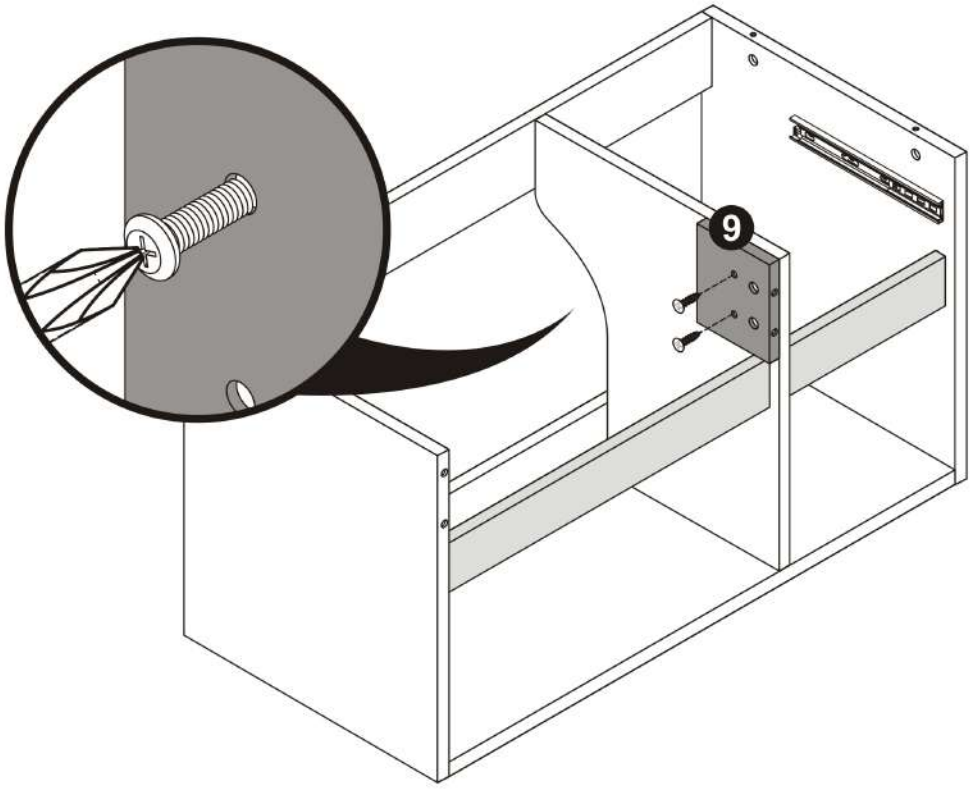


E	2PCS
	
6*25mm	

12

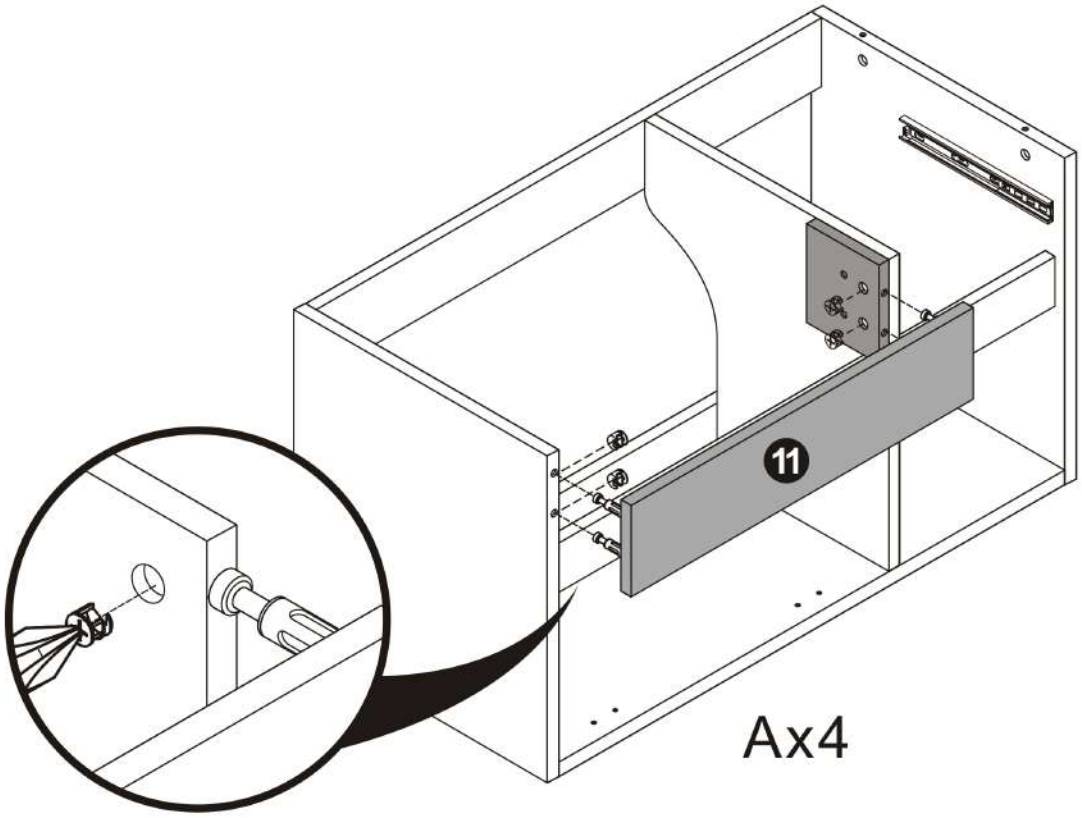

A	4PCS
	
15*10mm	


13

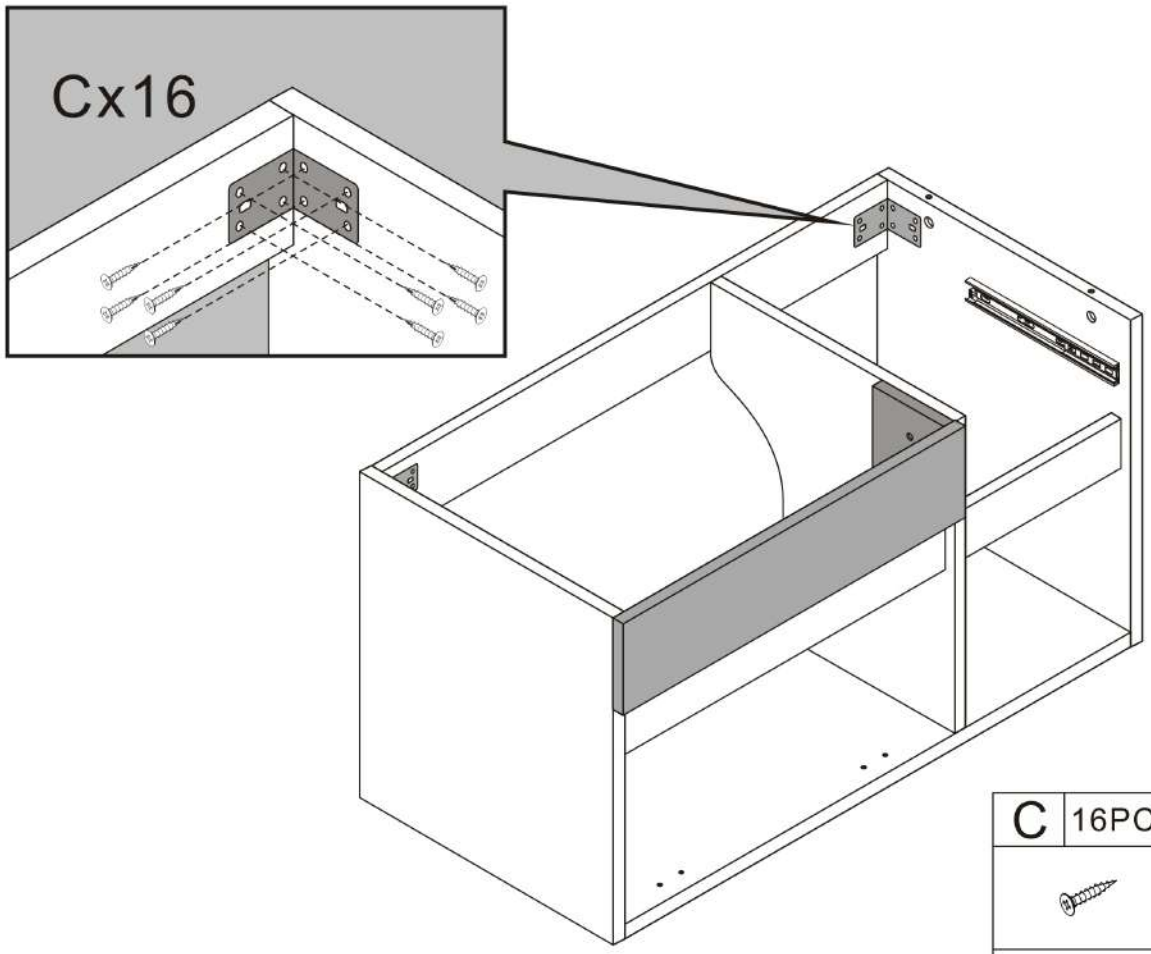

C	16PCS
3.5*14mm	

L	2PCS
	
Corner code	


14

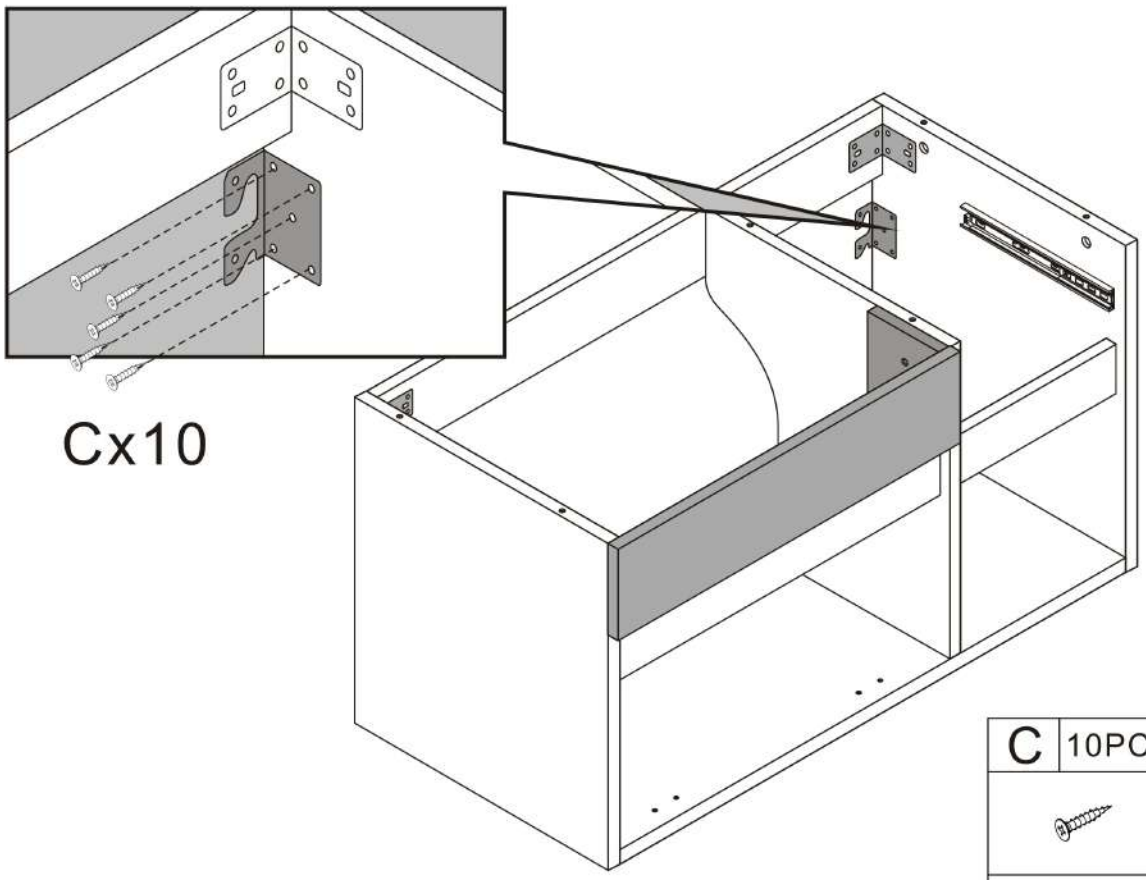

Cx10


C	10PCS	M	2PCS
			
3.5*14mm		Pendant	

15

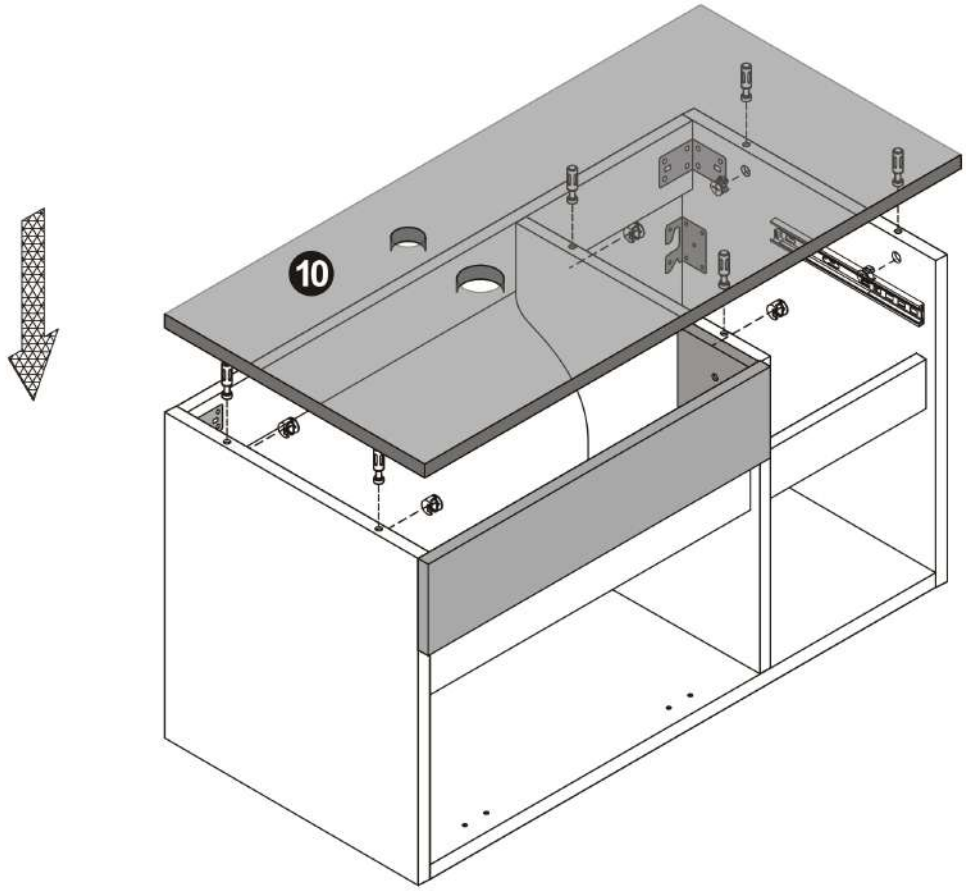


A	6PCS
	
15*10mm	


16

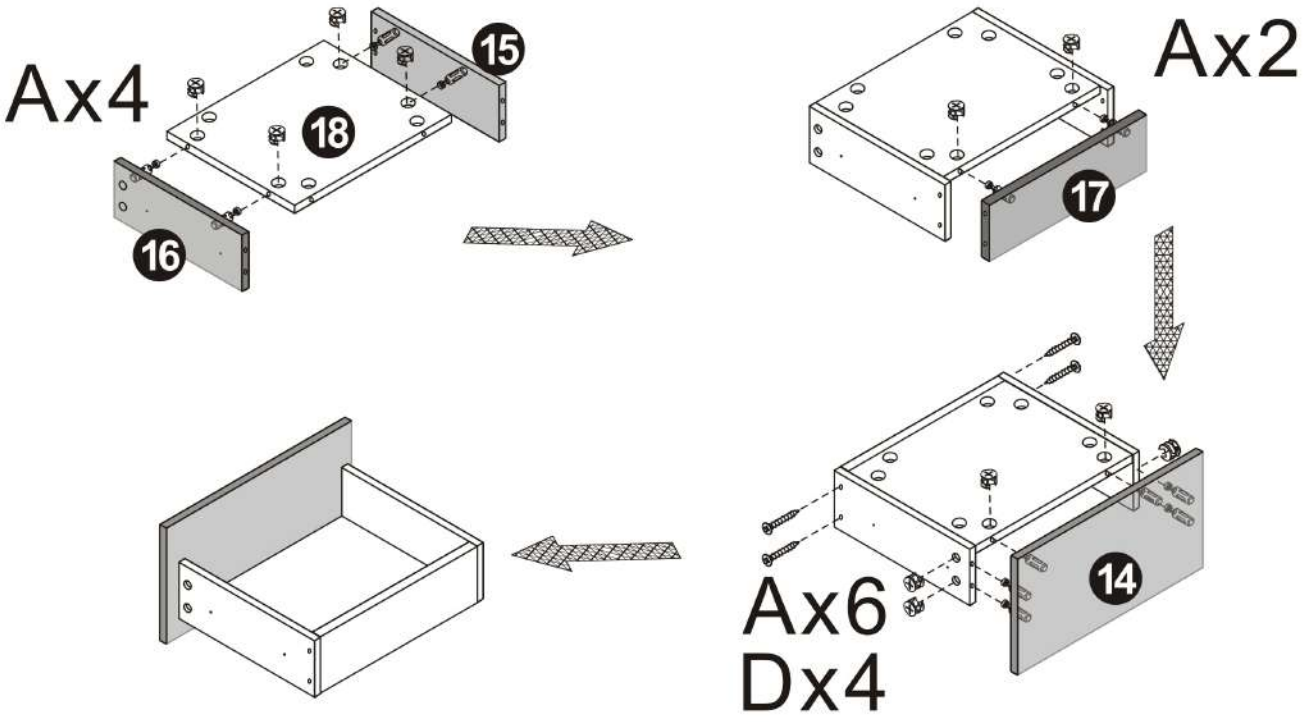

A	12PCS	D	4PCS
			
15*10mm		3.5*30mm	


17

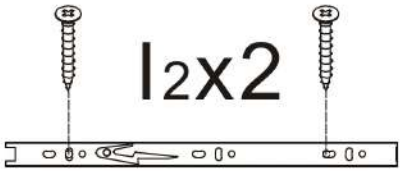

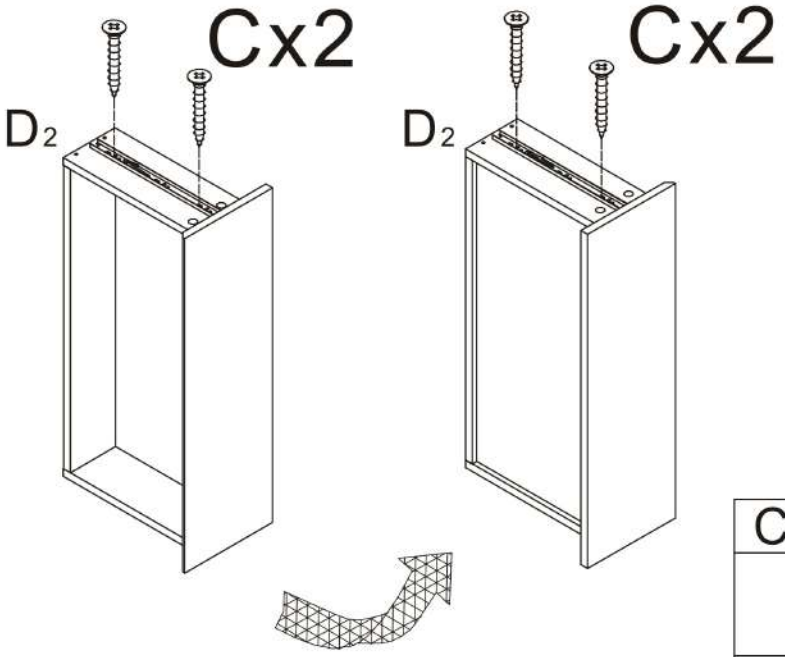



C	4PCS	I	2PCS
			
3.5*14mm		Three-section Rail	


16

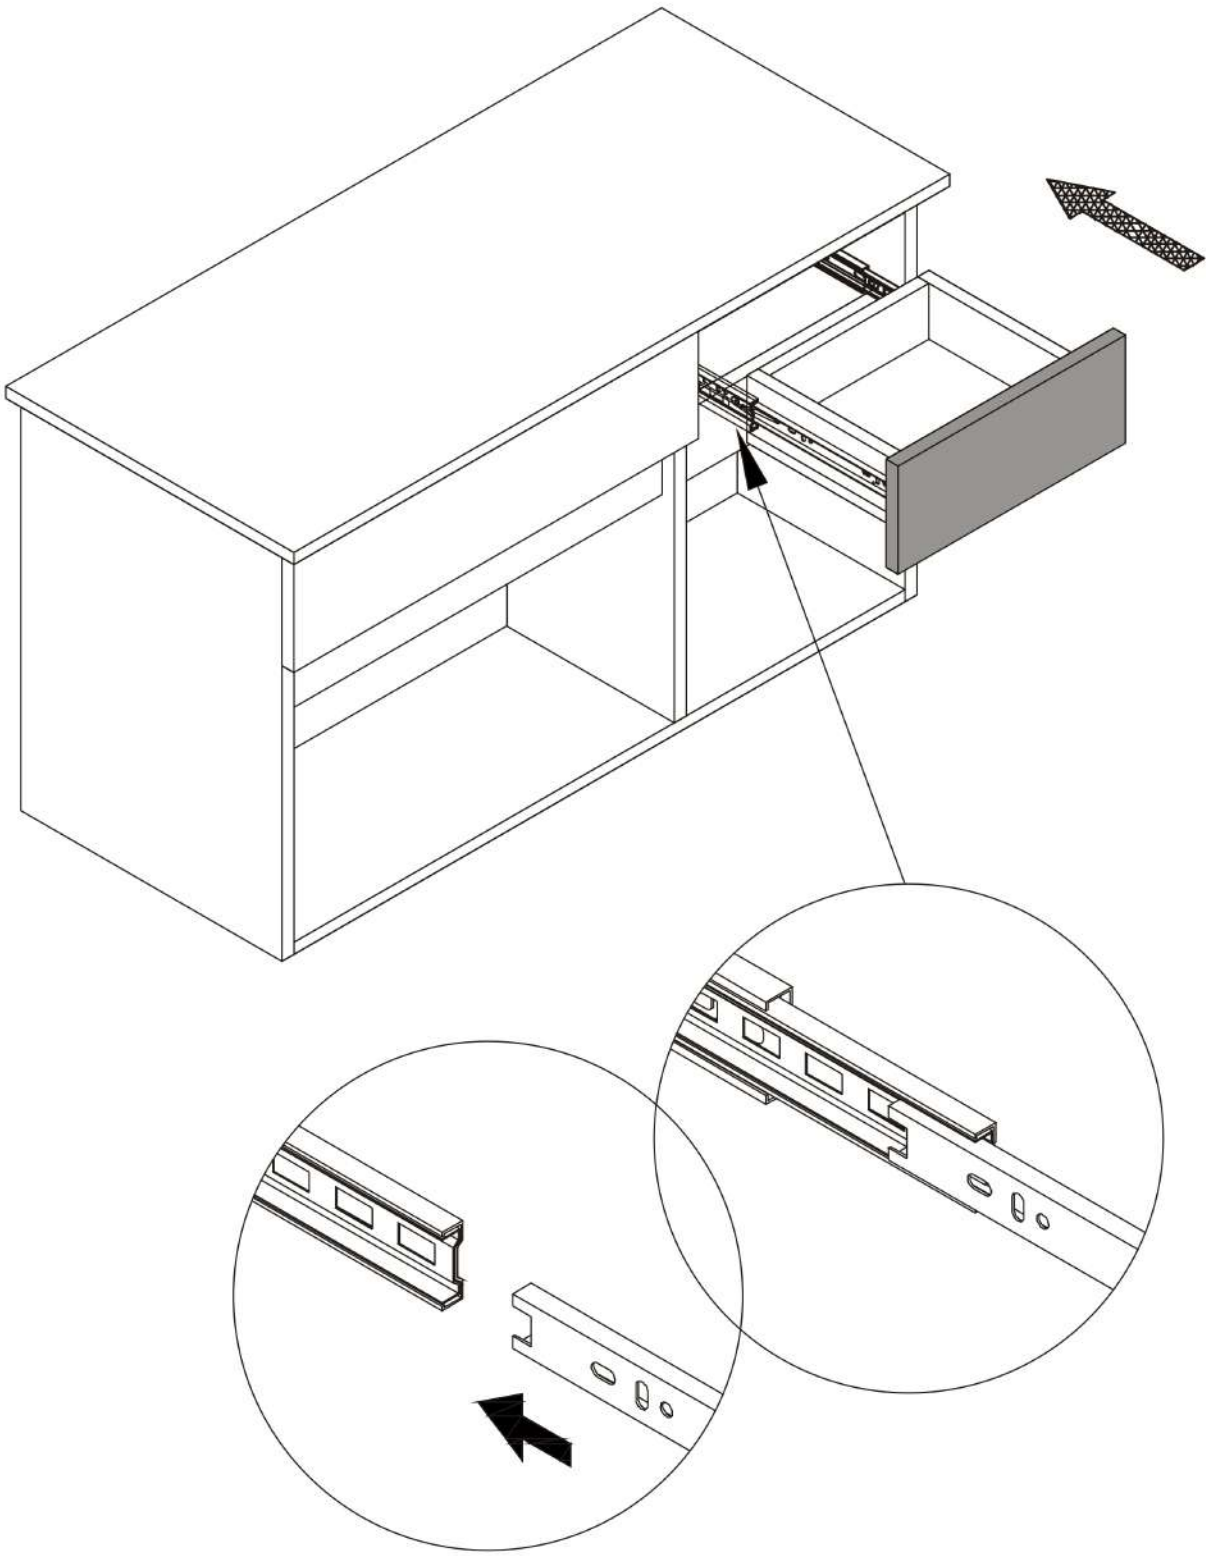

16

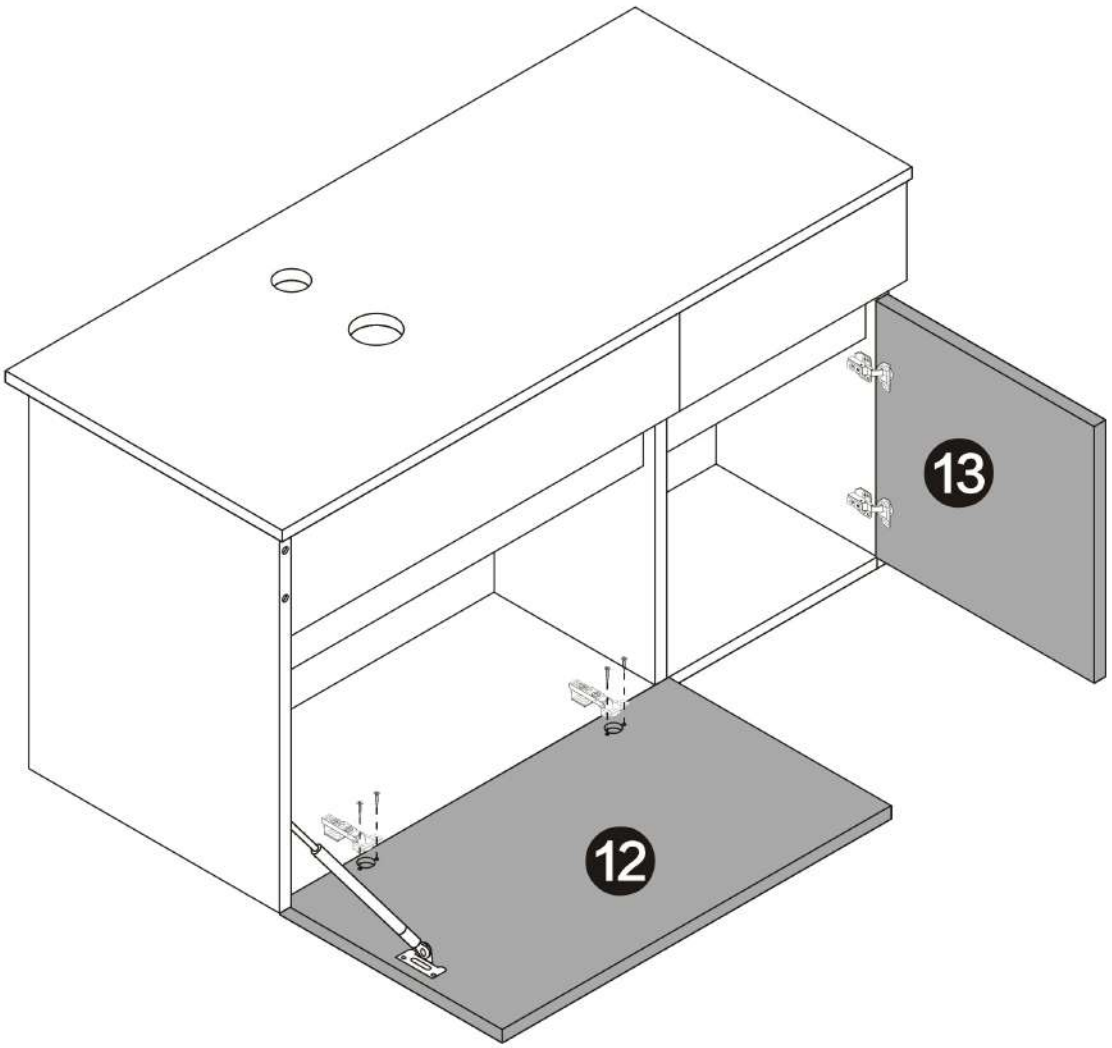

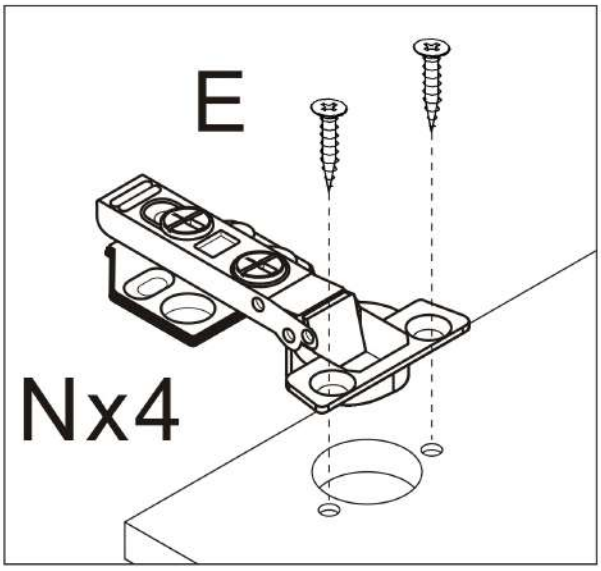

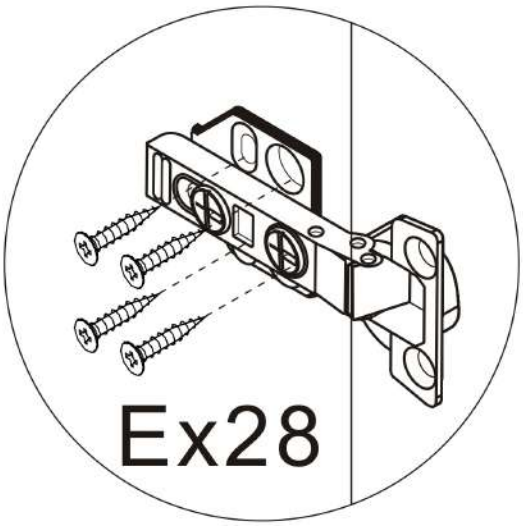


C	28PCS
	
3.5*14mm	

N	4PCS
	
Hinge	


H	1PCS
	
Pneumatic rod	

SPECIAL TIPS FOR DOOR ALIGNMENT
CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS
CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES


A. Lateral adjustment (Moving door left-right) by screw adjusting
Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
Réglage latéral (porte mobile gauche-droite) par réglage à vis

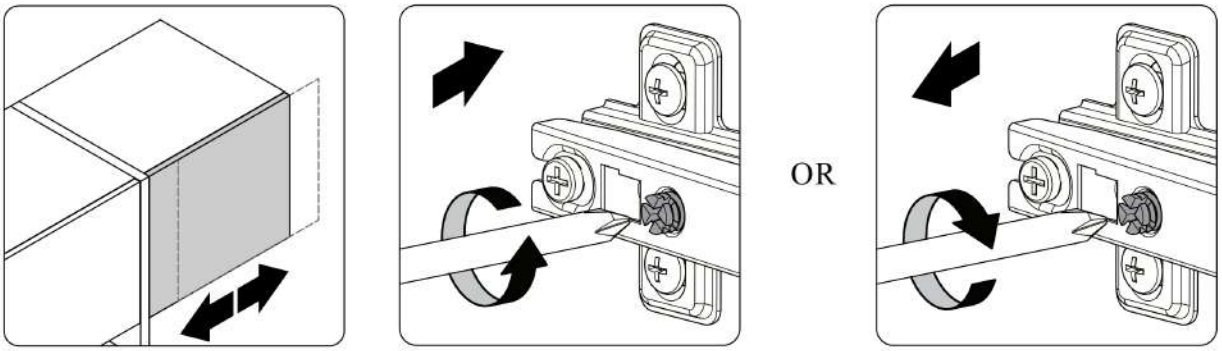


B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

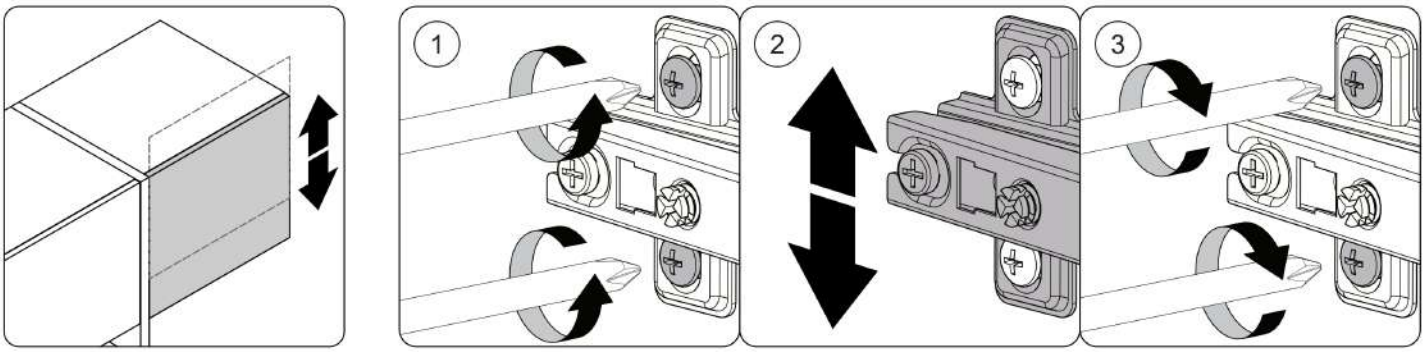

C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

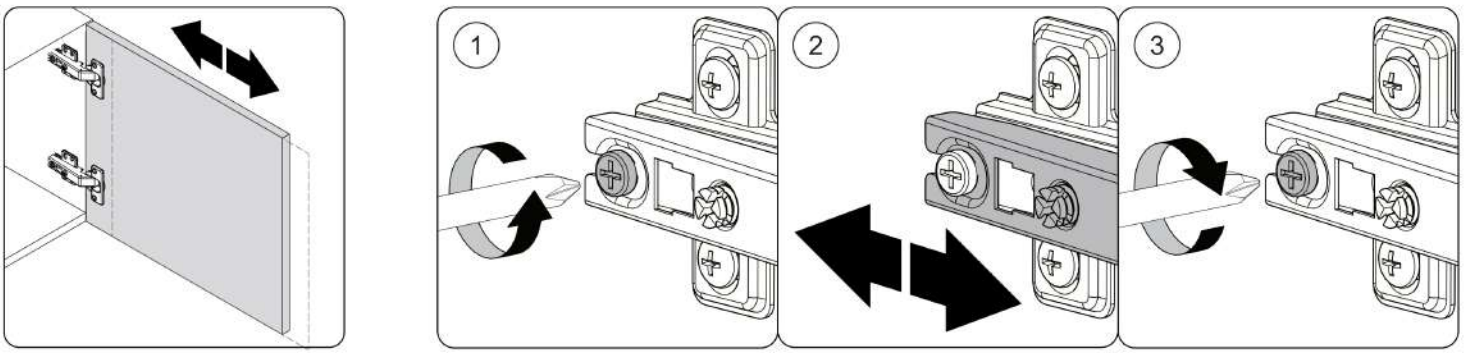


18

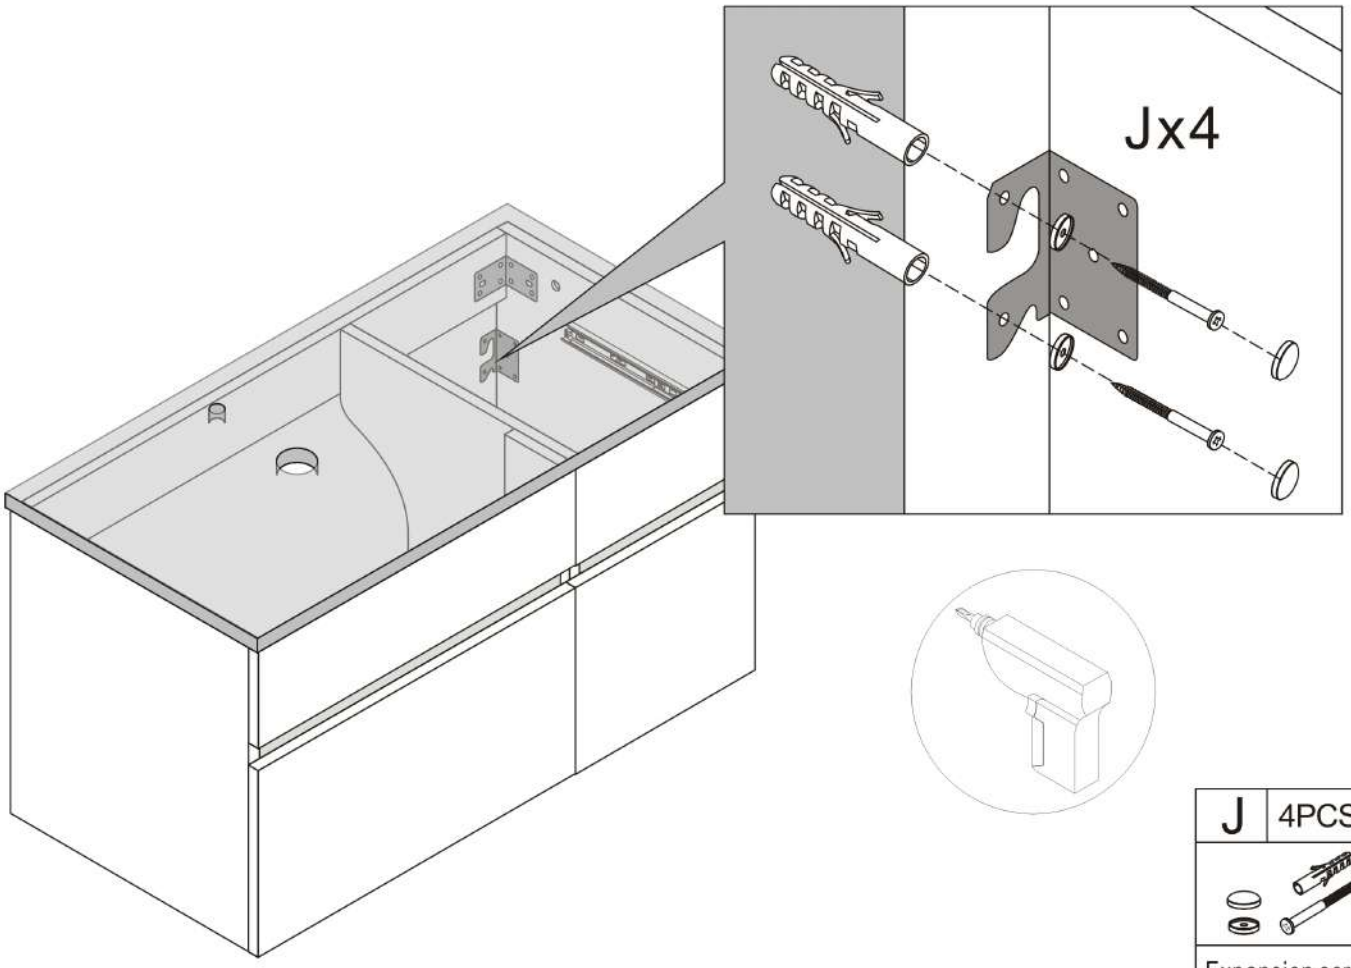

J	4PCS
Expansion screw	

19

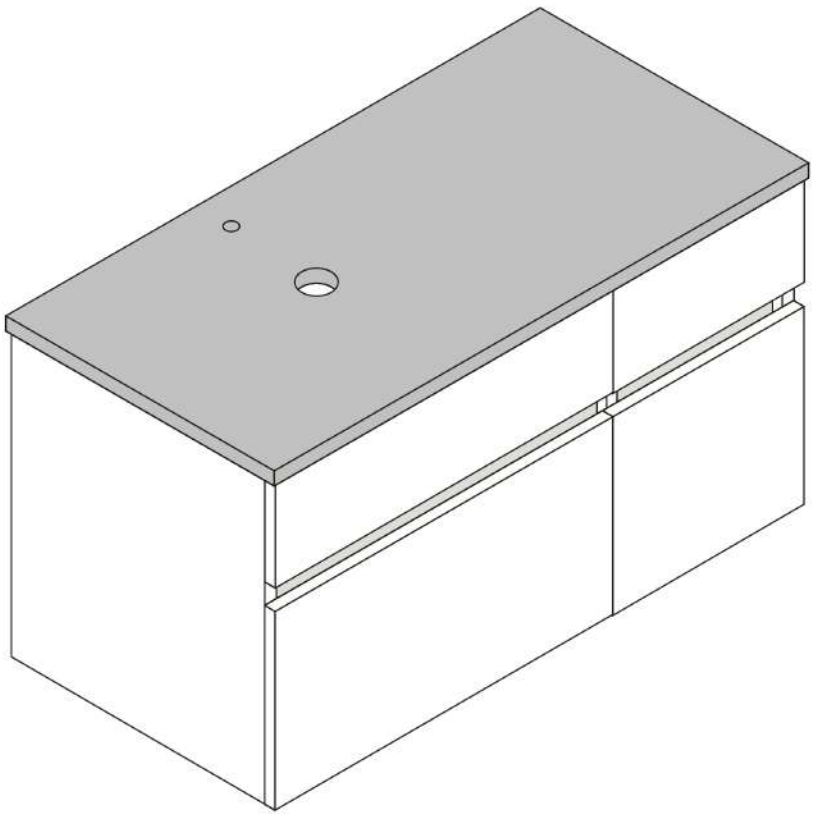

OK