
ASSEMBLY INSTRUCTIONS

LOFT BED WITH 4 DRAWERS CHEST

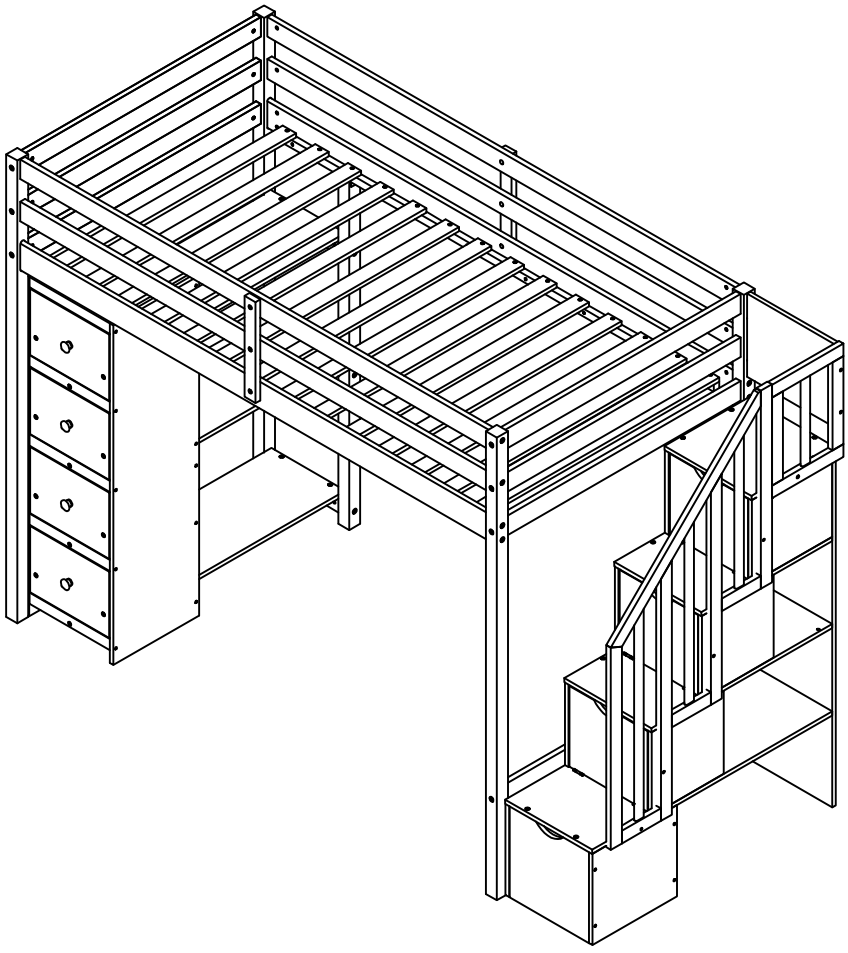

SAFETY WARNING


1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk, and lower bunk:

   Upper bunk (Bunk bed and tribed included)











Bed type	Length	Width	Thickness
Twin Standard	74"-75"	38 1/2"	6"

2. Replacement parts, including additional guardrails, maybe obtained from any of our dealers.
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed.
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails.
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
9. Always use the ladder for entering and leaving the upper bunk.
10. Do not use substitute part. Contact the manufacture or dealer for replacement part.
11. Use of a night light may provide added safety precaution for a child using the upper bunk.
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited.
14. STRANGULATION HAZARD - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
15. Keep these instruction for future reference.
16. Prohibit more than one person on upper bunk
17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
18. Be certain all staples are out of the box before beginning assembly on the shipping carton.











Detail View

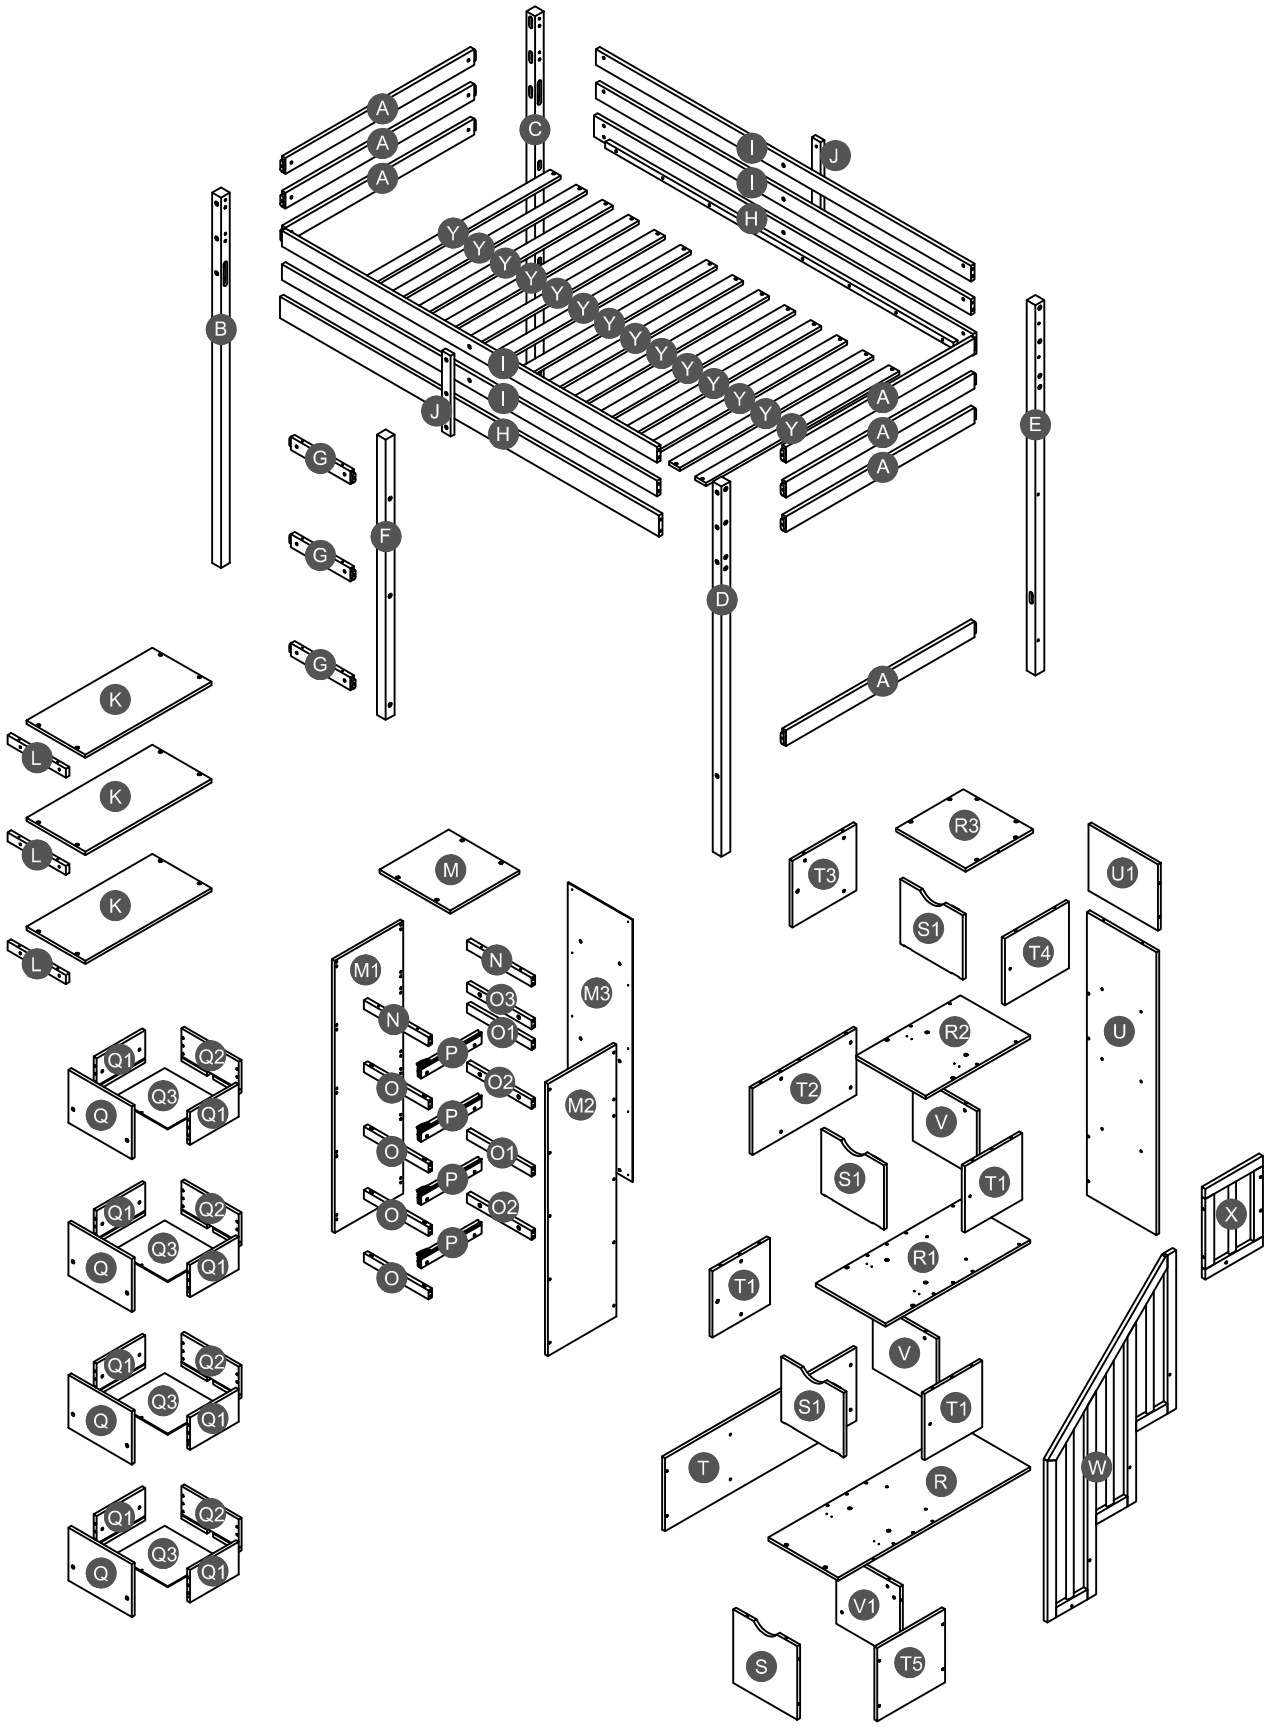
A
A
A
C
I
J
I
H
Y
Y
Y
Y
Y
Y
Y
Y
Y
Y
Y
Y
B
I
I
J
H
A
A
A
E
G
G
G
F
D
A
K
L
K
L
K
L
M
M1
N
N
O3
O1
P
O
O2
P
O
O1
P
O
O2
P
O
M3
M2
Q1
Q2
Q
Q3
Q1
Q1
Q2
Q
Q3
Q1
Q1
Q2
Q
Q3
Q1
Q1
Q2
Q
Q3
Q1
R3
T3
S1
T4
U1
U
R2
T2
V
S1
T1
R1
T1
V
S1
T1
T
R
W
V1
S
T5
X














Part List

A  Horizontal bar - 7pcs	**B**  Leg (Left front) - 1pc	**C**  Leg (Left back) - 1pc
D  Leg (Right front) - 1pc	**E**  Leg (Right back) - 1pc	**F**  Leg short HB (Back) - 1pc
H  Side rail - 2pcs	**I**  Long guard rail - 4pcs	**J**  Vertical guard rail - 2pcs
T1  Center left/right side panel - 3pcs	**T2**  Center left side panel - 1pc	**Y**  Slat - 14pcs







Hardware List

G  Support horizontal bar(back) - 3pcs	**K**  Shelf panel HB - 3pcs	**L** Support horizontal bar - 3pcs
M3 	**N**  Upper horizontal bar - 2pcs	**O**  Horizontal bar (Front) - 4pcs
O1  Horizontal bar (Back) - 2pcs	**O2**  Lower horizontal bar (Back) - 2pcs	**O3**  Horizontal bar (Back) - 1pc
P  Support drawer - 4pcs	**Q3**  Drawer bottom - 4pcs	**R**  Lower step ladder panel -1pc
R1  Lower center step ladder panel -1pc	**R2**  Upper center step ladder panel -1pc	**S**  Lower front panel - 1pc
T  Lower left side panel - 1pc	**T5**  Lower right side panel - 1pc	**U**  Back panel - 1pc


Part List

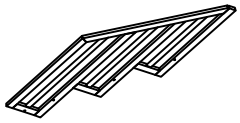M  Top panel - 1pc	**M1**  Side panel (Left) - 1pc	**M2**  Side panel (Right) - 1pc
Q  Front drawer panel - 4pcs	**Q1**  Left / right drawer panel - 8pcs	**Q2**  Back drawer panel - 4pcs
R3  Upper step ladder panel -1pc	**S1**  Upper front panel - 3pcs	**T3**  Upper left side panel - 1pc
T4  Upper right side panel - 1pc	**U1**  Upper guard back - 1pc	**V**  Support panel - 2pcs
V1  Support lower panel - 1pc	**W**  Guard rail -1pc	**X**  Upper guard rail -1pc

Hardware List

1  Ø8*30mm	**2**  (Ø15)1/4"*100mm	**3**  (Ø15)1/4"*80mm
Wood dowel (74pcs)	Hex-Head bolts (16pcs)	Hex-Head bolts (24pcs)
4  (Ø12)1/4"*60mm	**5**  (Ø12)1/4"*40mm	**6**  (Ø12)1/4"*30mm
Hex-Head bolts (74pcs)	Hex-Head bolts (6pcs)	Hex-Head bolts (9pcs)
7  (Ø12)1/4"*40mm	**8**  1/4"*15 (9.5mm)	**9**  40*17*17*1.6mm
Hex-Head bolts (40pcs)	Horizontal-Hole bolts(112pcs)	Metal bracket (3pcs)
10  (1/4")4.5*58mm	**11**  Ø3.5*15mm	**12**  266*30mm
Allen key (1pc)	Wood screws (10pcs)	Upper slider drawer (4pcs)
13  Ø4*30mm	**14**  24*28*28*2mm	**15**  Ø38*31mm
Wood screws (28pcs)	Metal bracket (1pc)	Pine Knob (4pcs)
16  3/16"*25mm	**17**  Ø10*40mm	**18**  Ø3.5*15mm
Ph zinc(Knob) (4pcs)	Wood dowel (8pcs)	Wood screws (26pcs)
19  ø3.5*12 mm	**20**  45*17*13mm	**21**  42*12*1mm
Wood screws (24pcs)	Door catch (3pcs)	Metal magnet (3pcs)


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)







PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

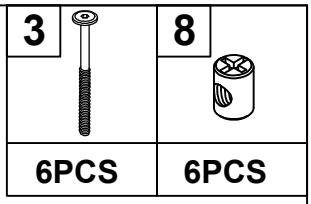


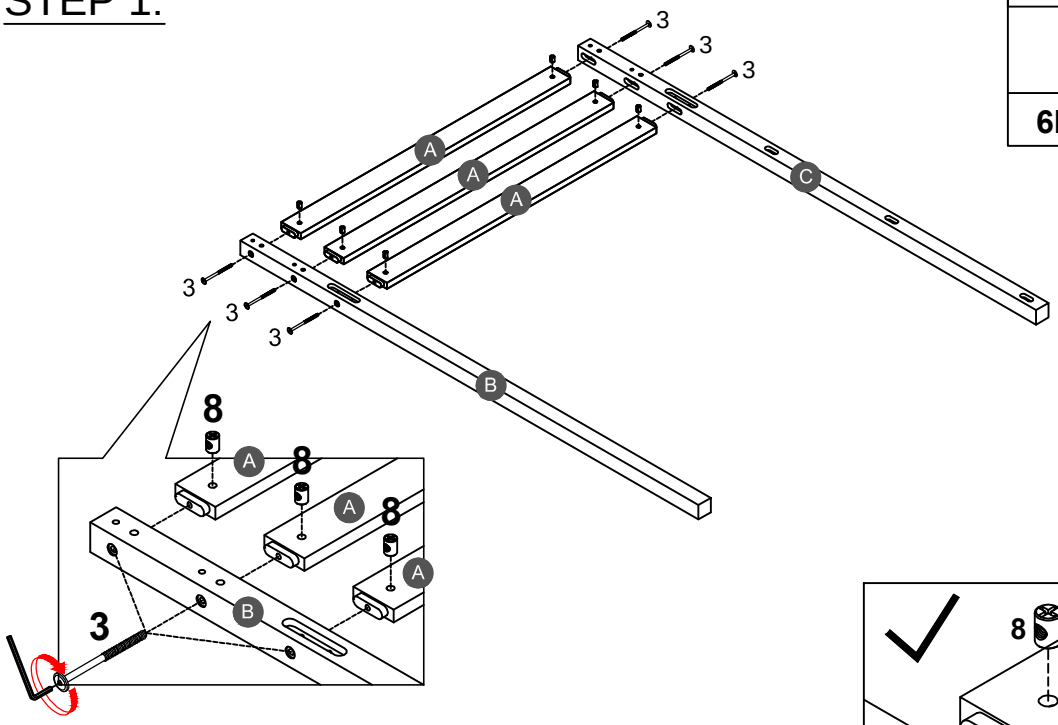


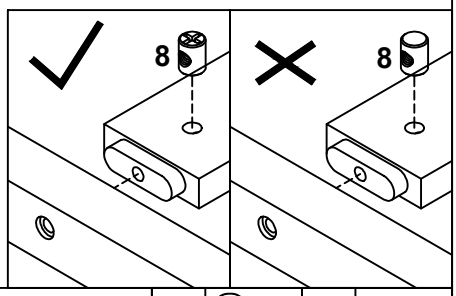


Note:Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

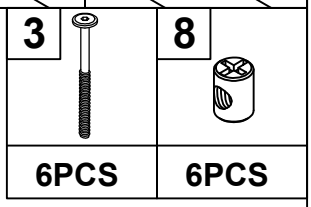


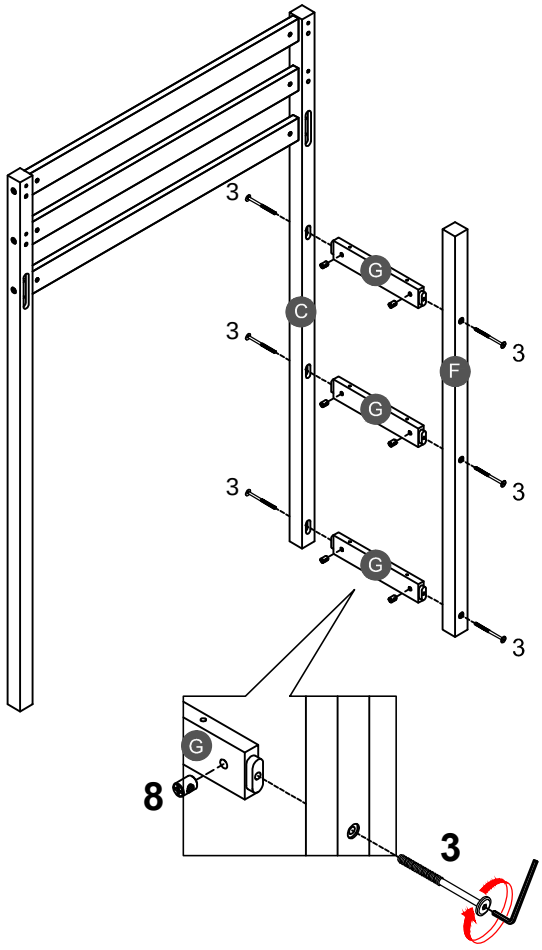

STEP 3:

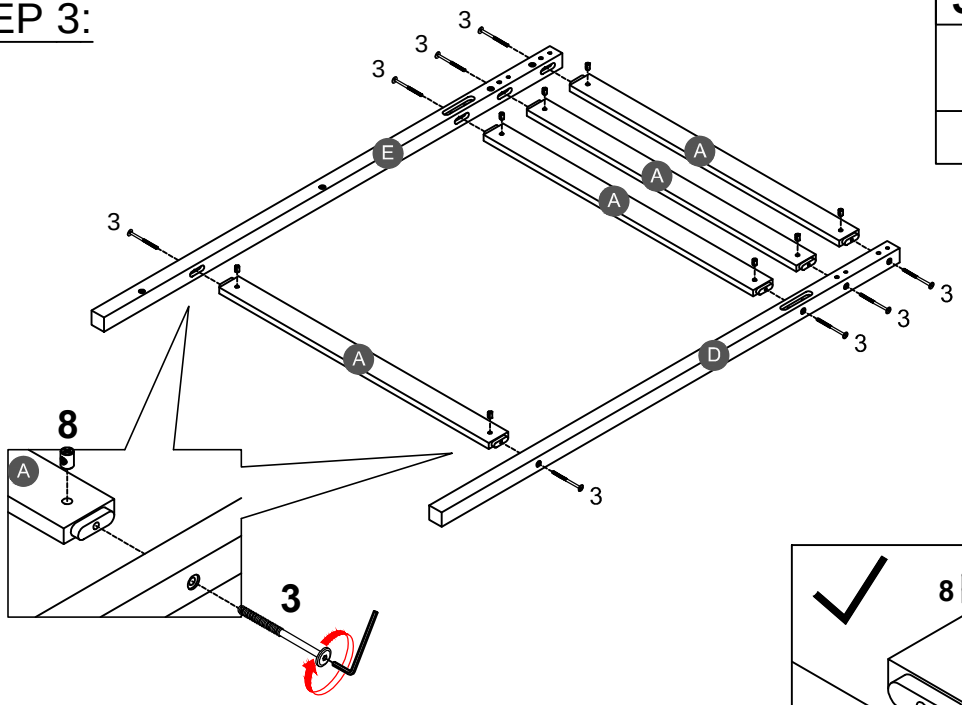


3	8
8PCS	8PCS

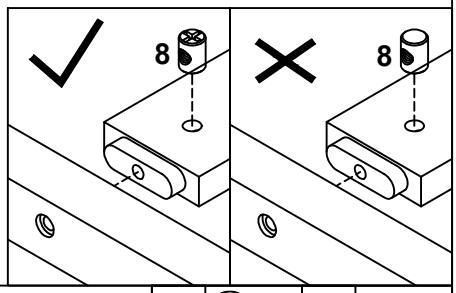

Note:Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 4:

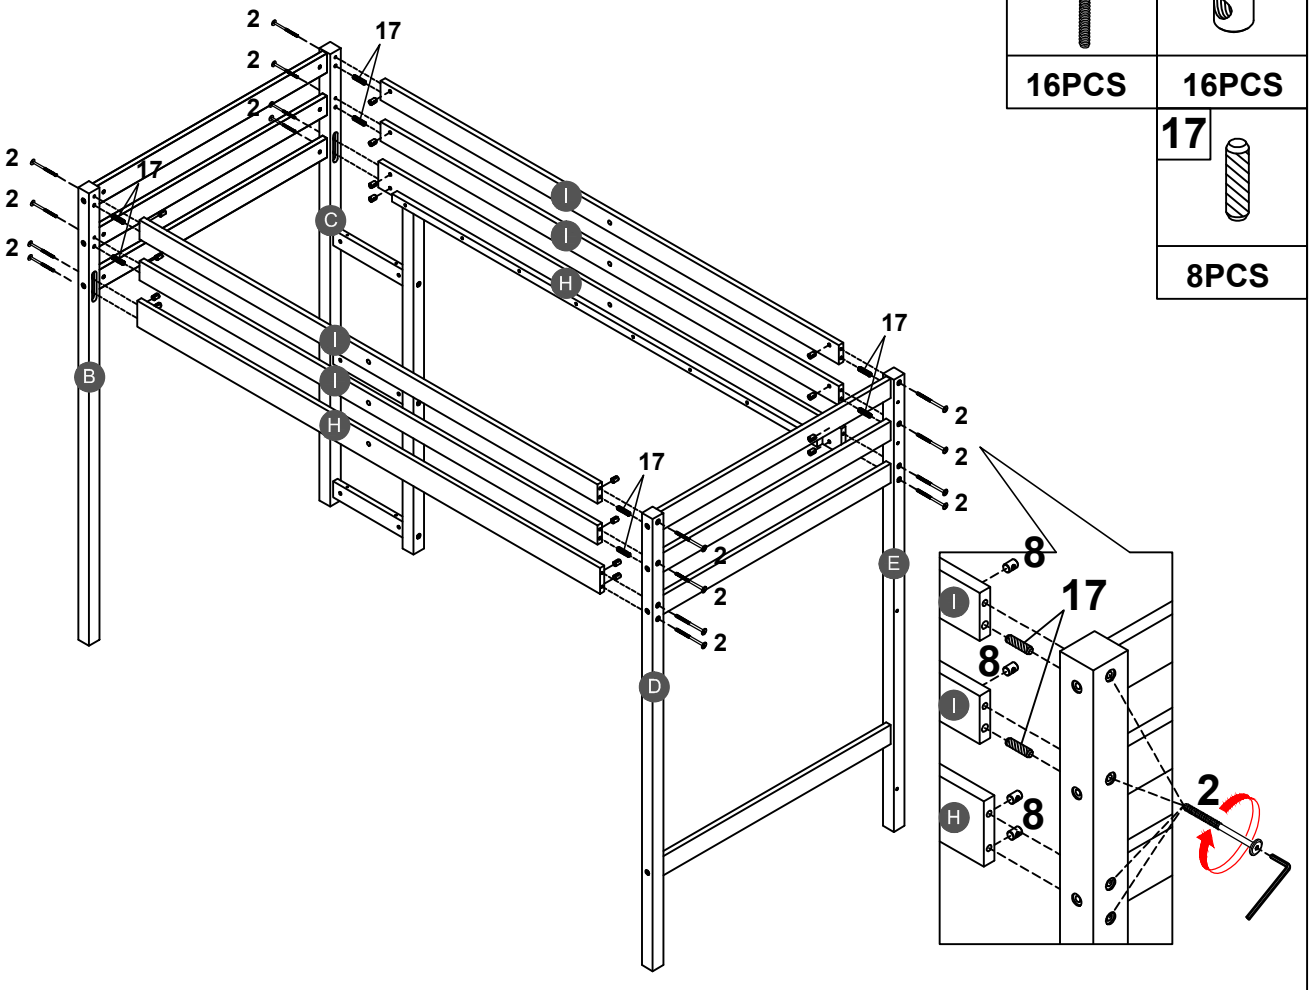

2	8
16PCS	16PCS


17
8PCS

STEP 5:

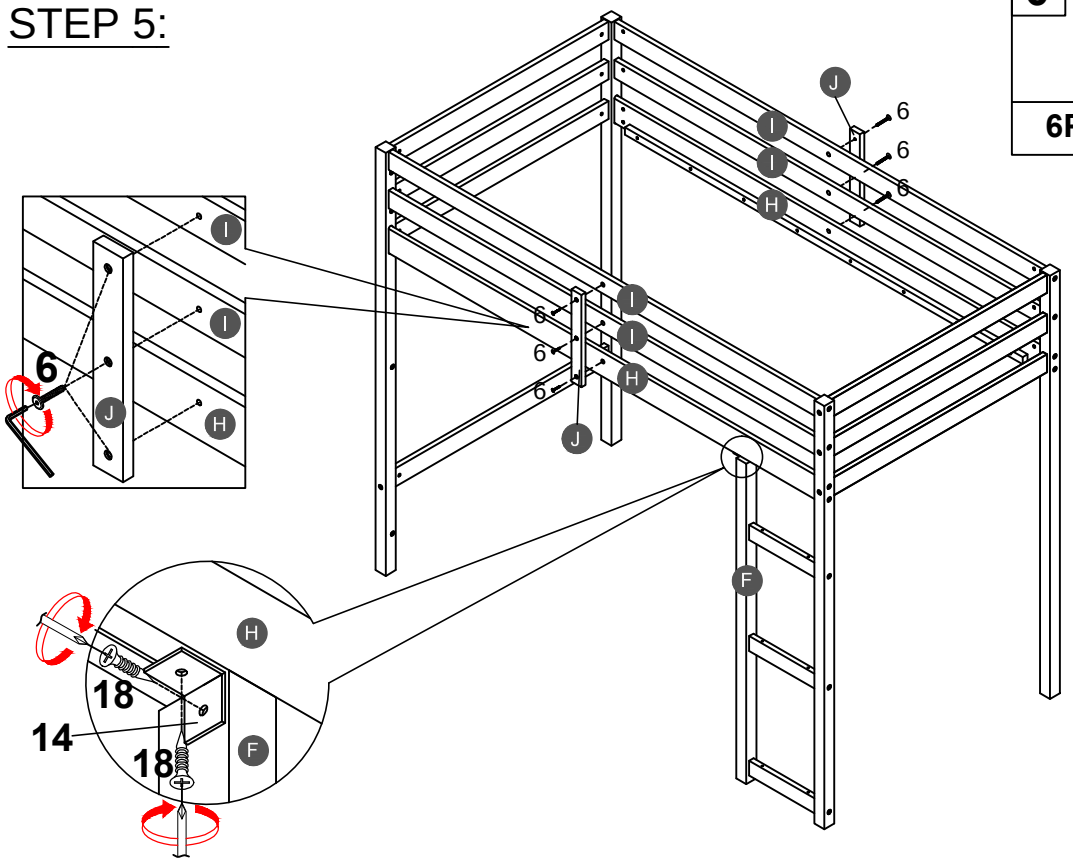


6	14	18
6PCS	1PC	2PCS

STEP 6:

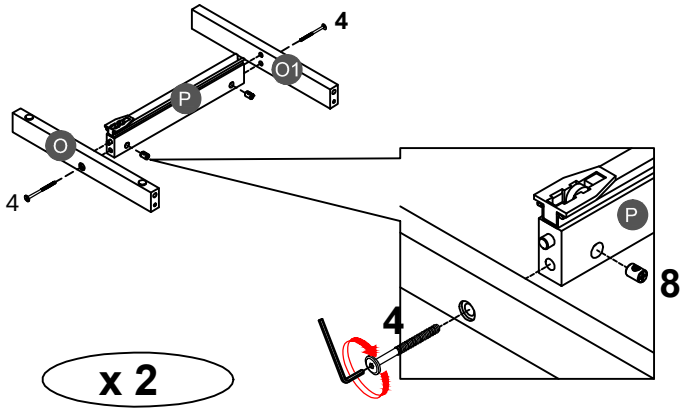

4	8
4PCS	4PCS


STEP 7:

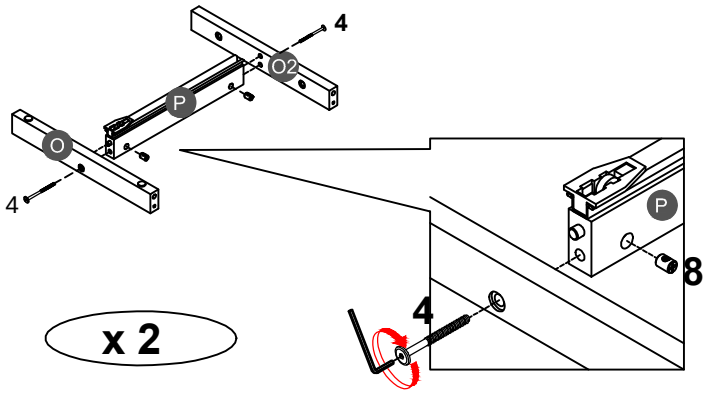

4	8
4PCS	4PCS


STEP 8:

1	7
22PCS	22PCS

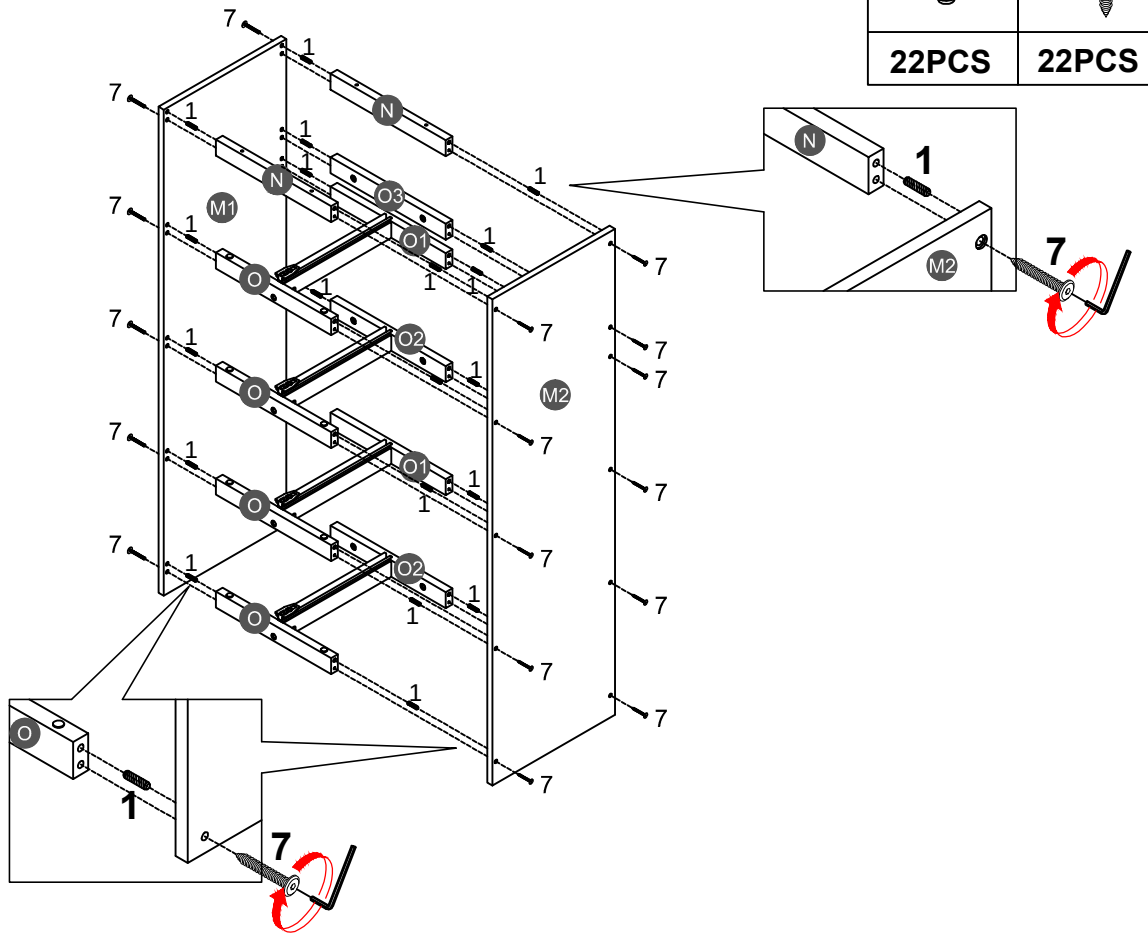


STEP 9:

7
4PCS

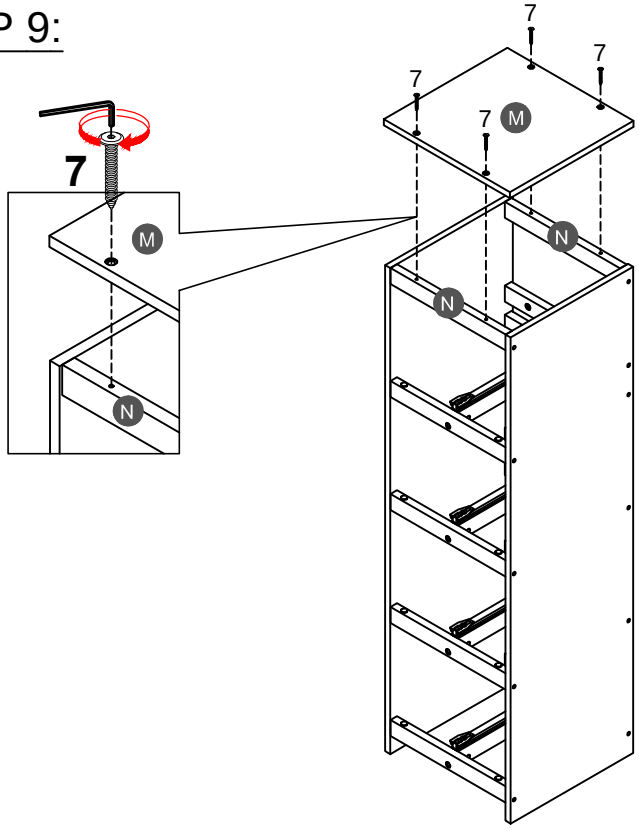

STEP 10:


11

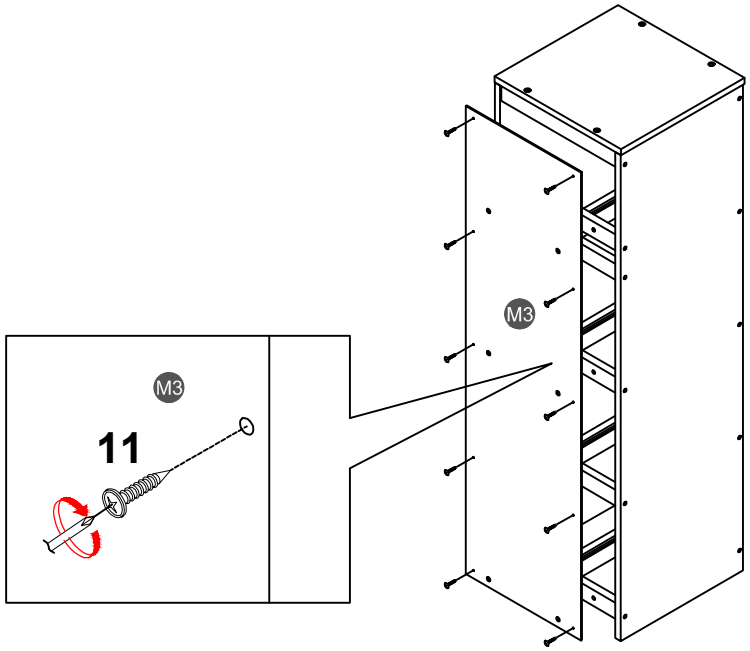

10PCS


STEP 11:

5

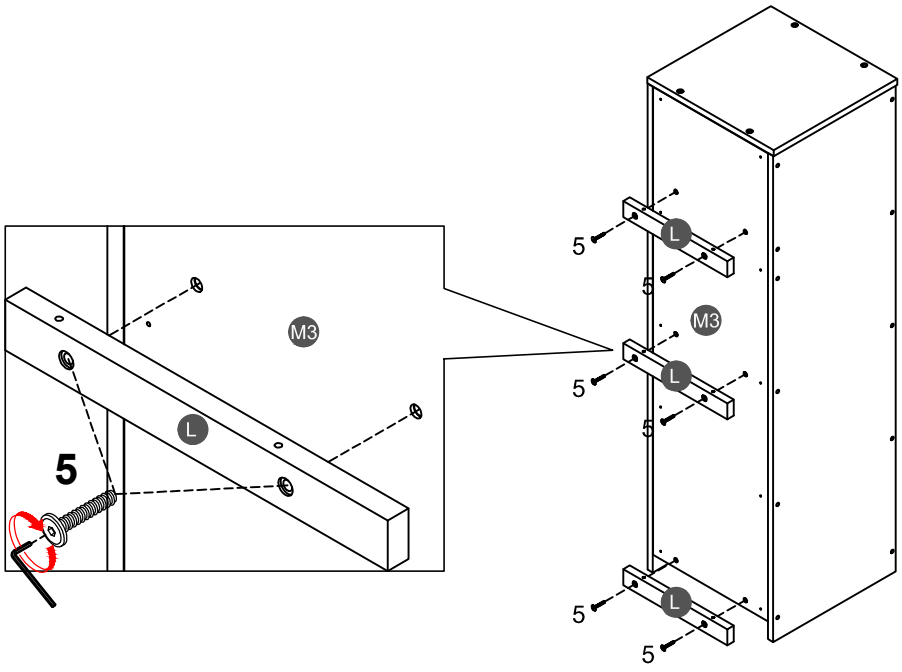

6PCS


STEP 12:

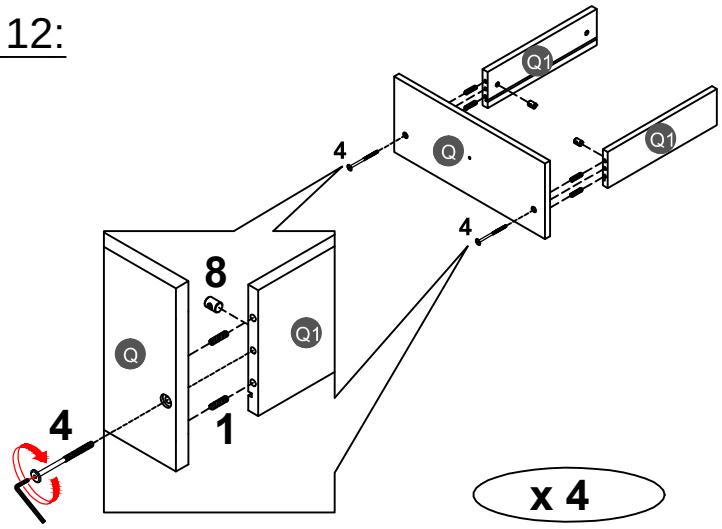

1	8
16PCS	8PCS

4
8PCS


STEP 13:

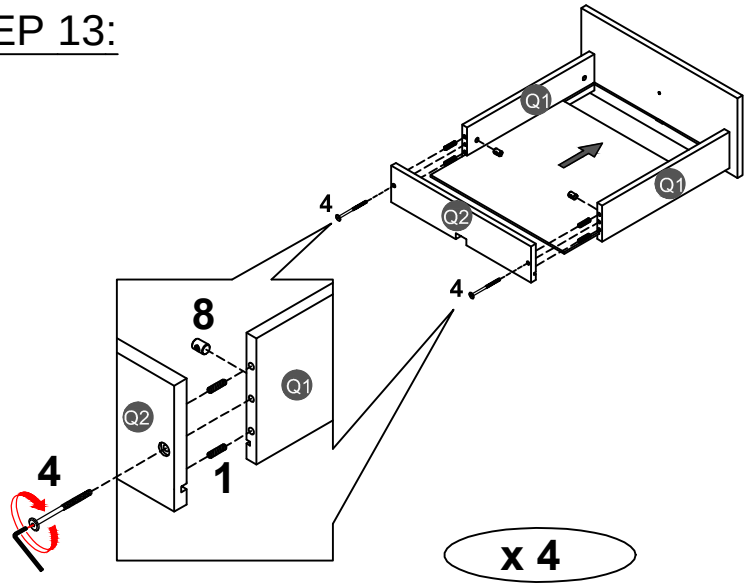

1	8
16PCS	8PCS

4
8PCS


STEP 14:

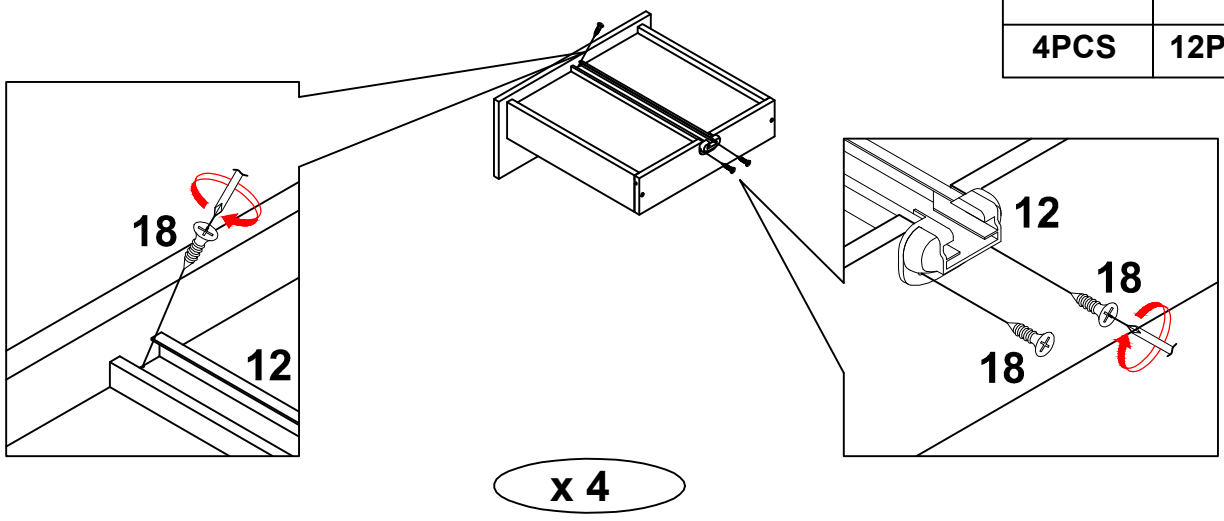


12	18
4PCS	12PCS

STEP 15:


15	16
4PCS	4PCS

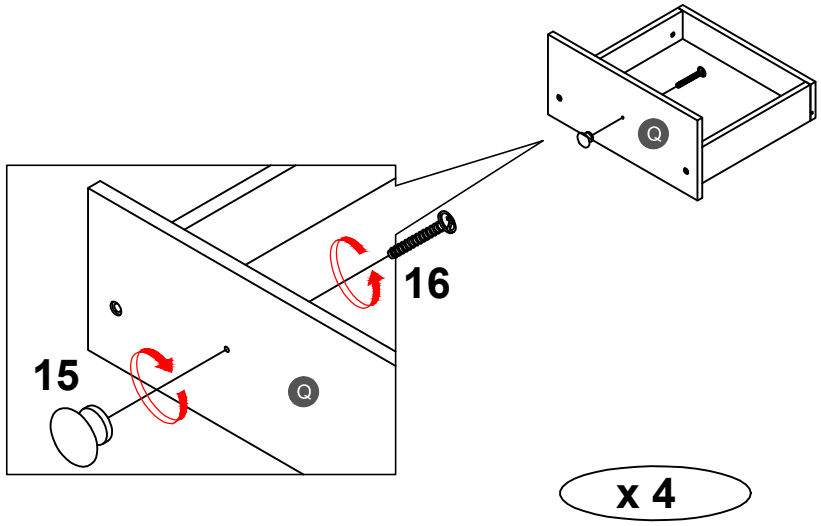

STEP 16:

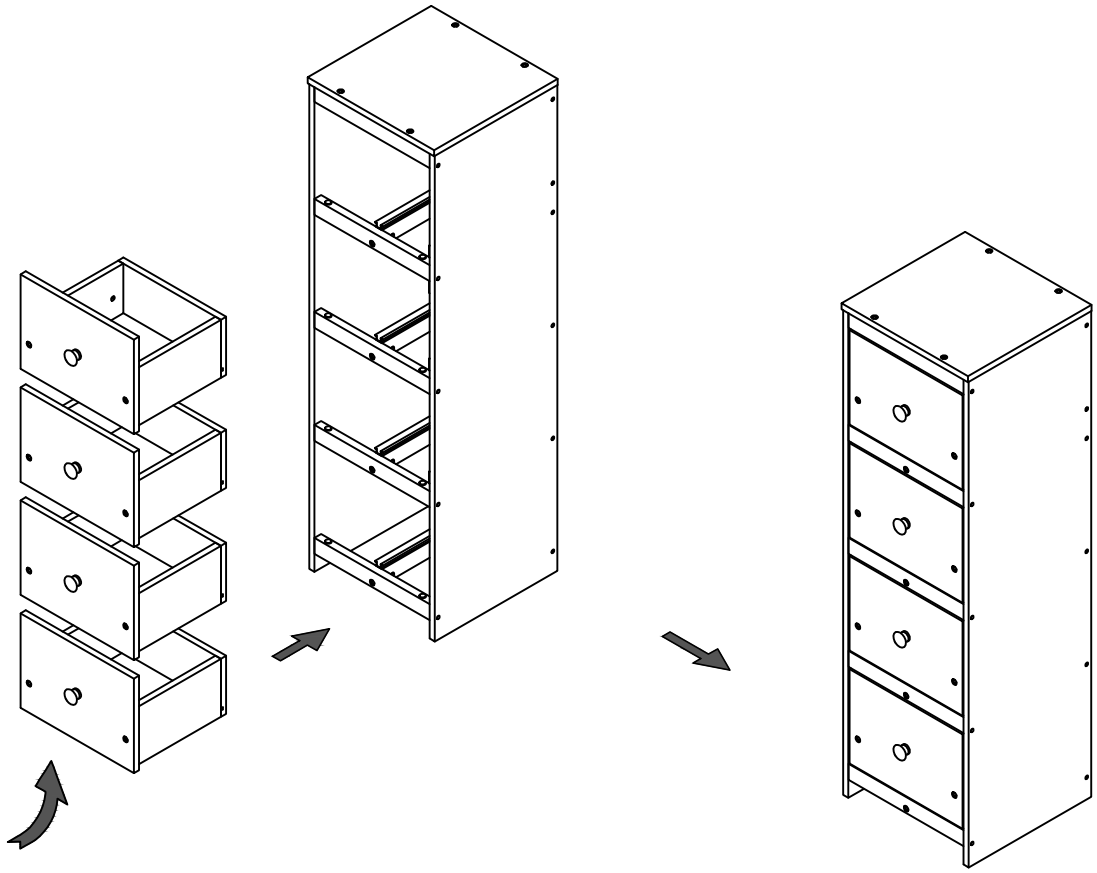


STEP 17:

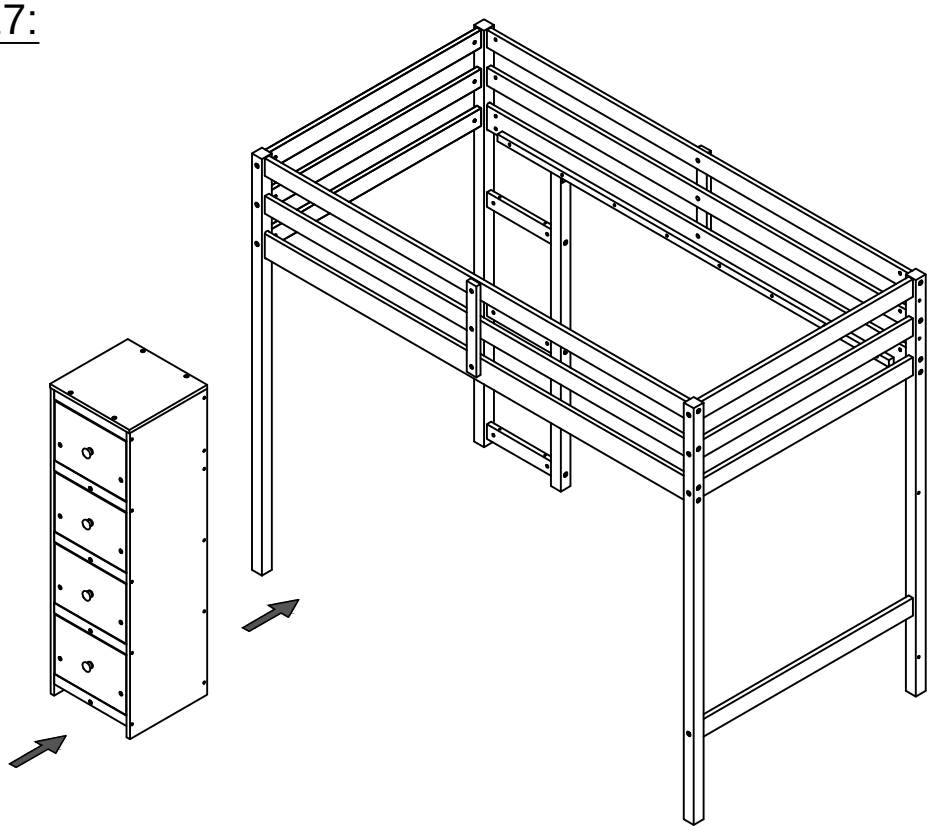


STEP 18:

7	9	18
12PCS	2PCS	8PCS

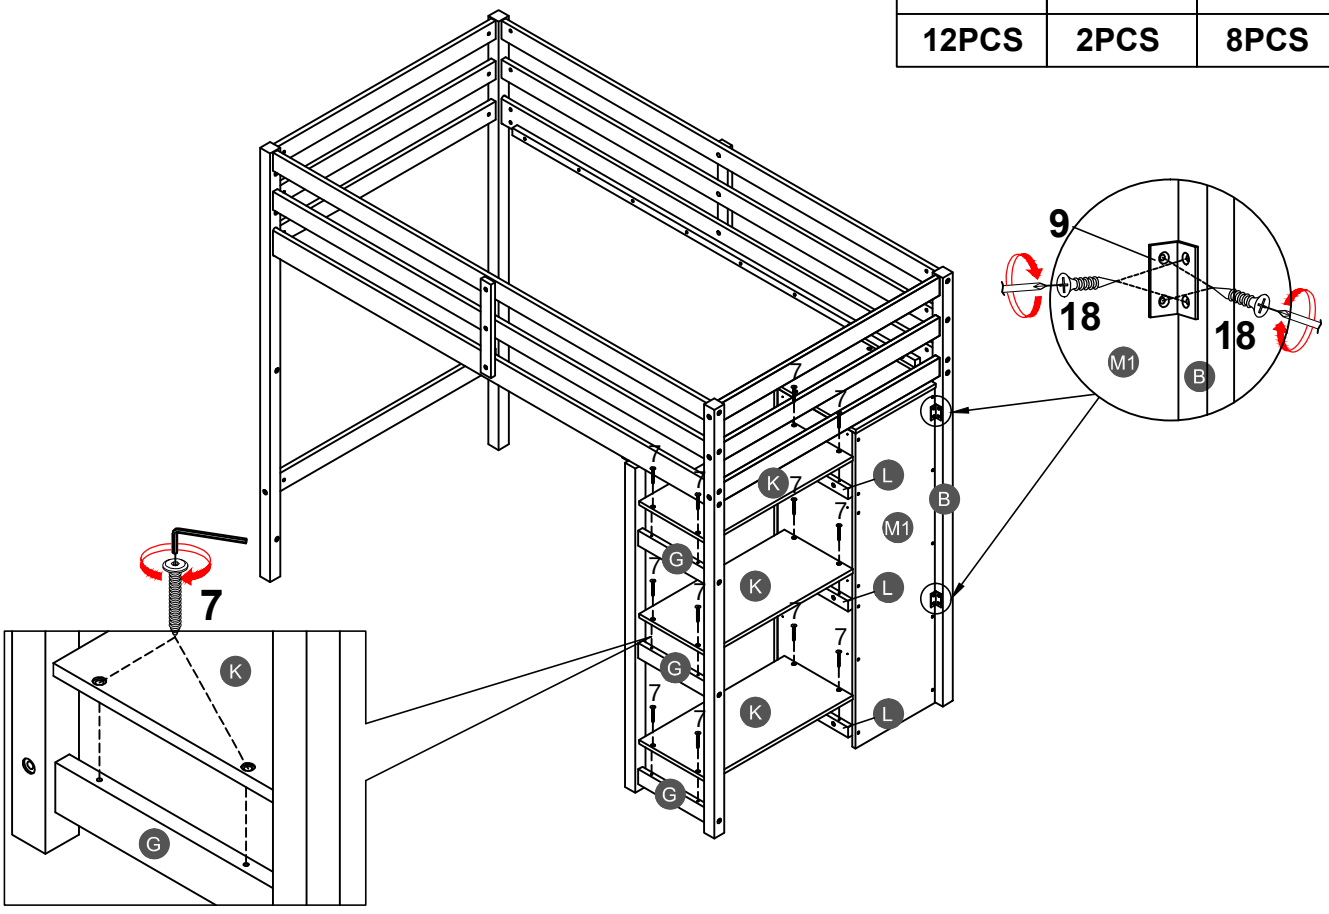


STEP 19:

19	21
6PCS	3PCS

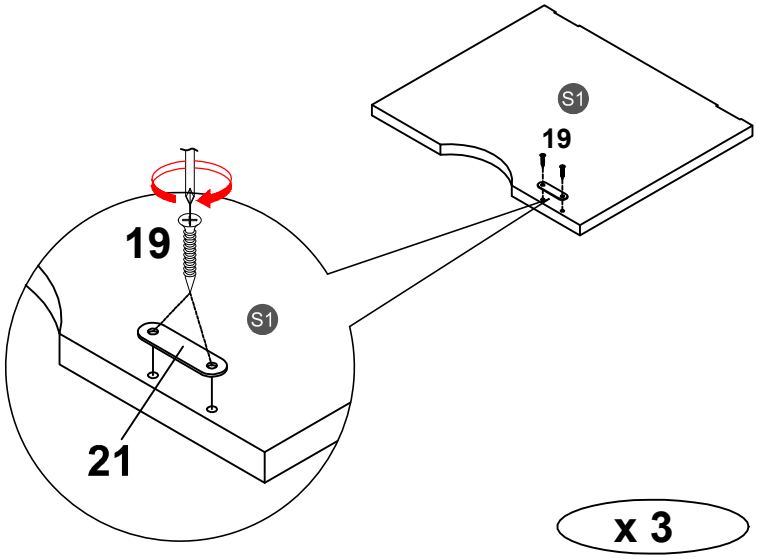


STEP 20:

19	20
2PCS	1PC

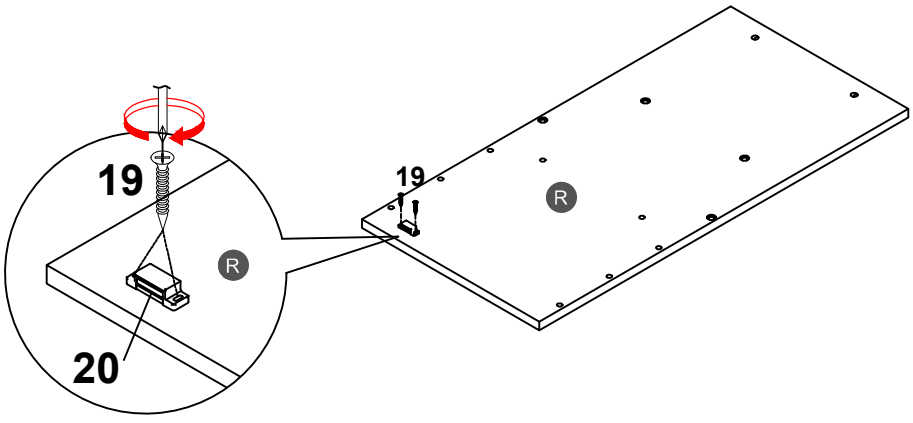


STEP 21:

19	20
2PCS	1PC

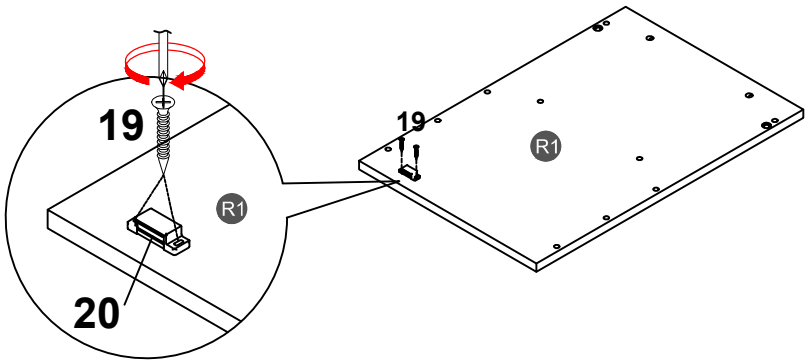


STEP 22:

19	20
2PCS	1PC

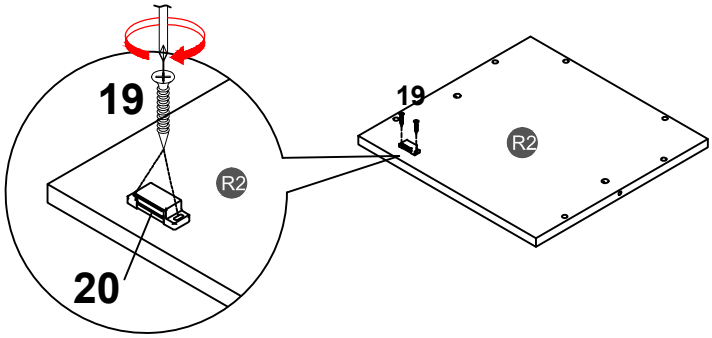


STEP 23:

4	8
8PCS	8PCS

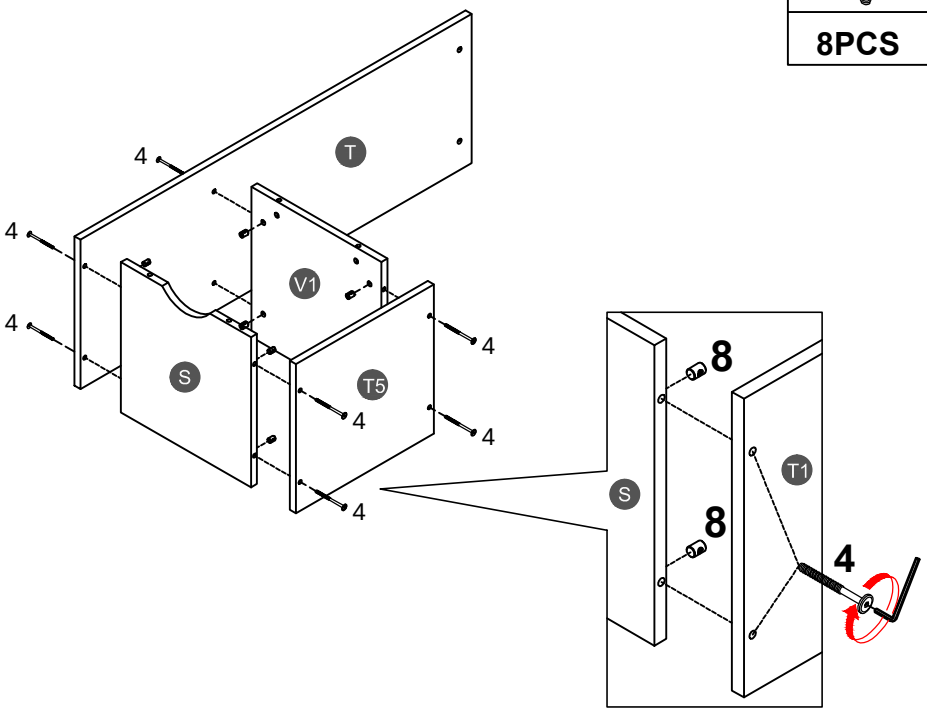


STEP 24:

1	4	8
4PCS	4PCS	4PCS

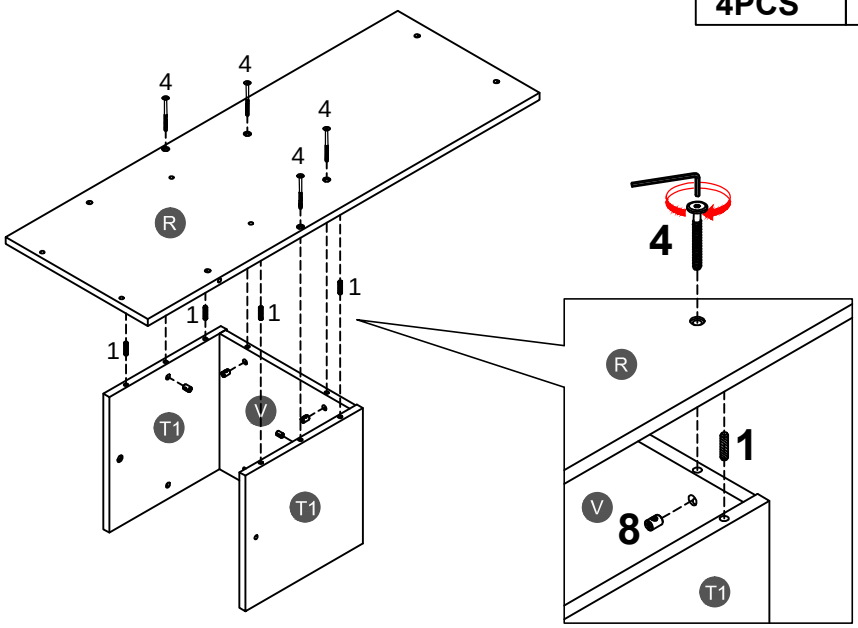


STEP 25:

1	4	8
5PCS	4PCS	4PCS

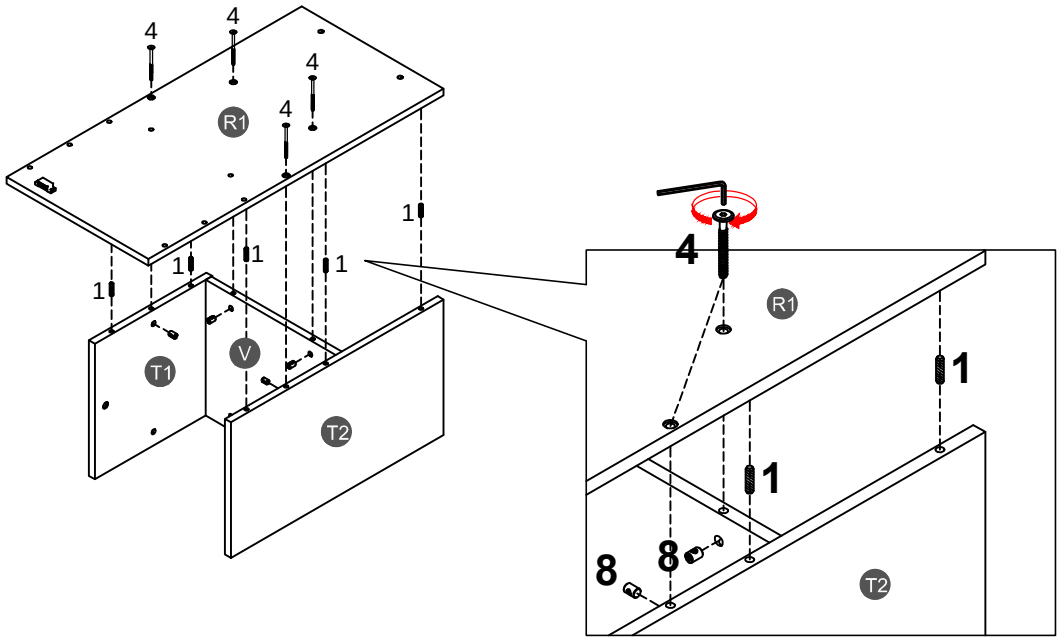


STEP 26:

4	8
4PCS	4PCS

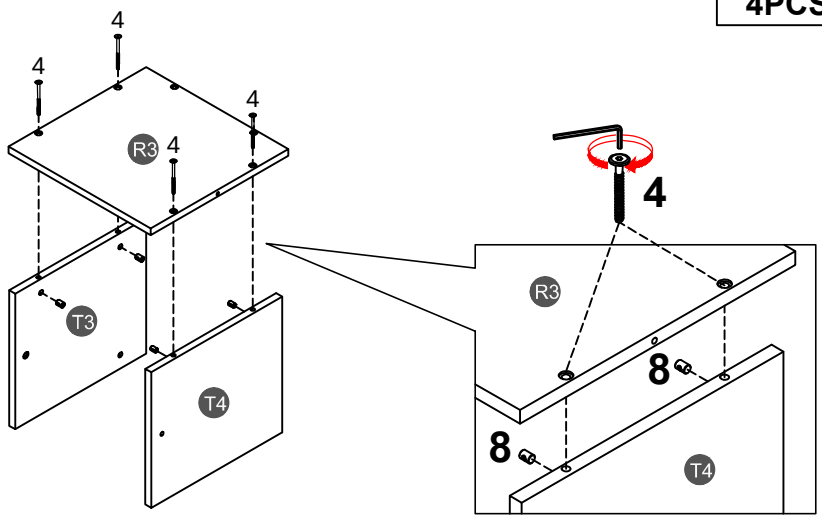


STEP 27:

1	4	8
2PCS	2PCS	2PCS

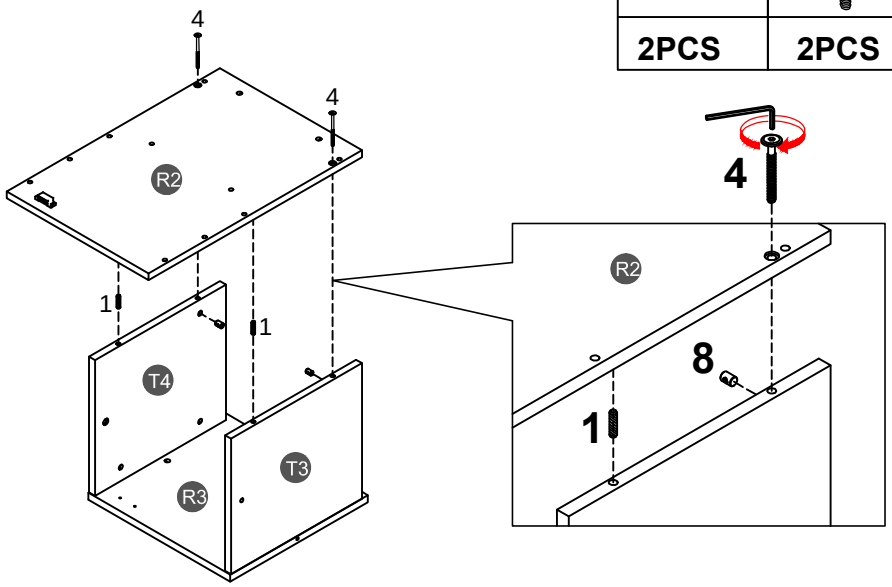


STEP 28:

4	8
4PCS	4PCS

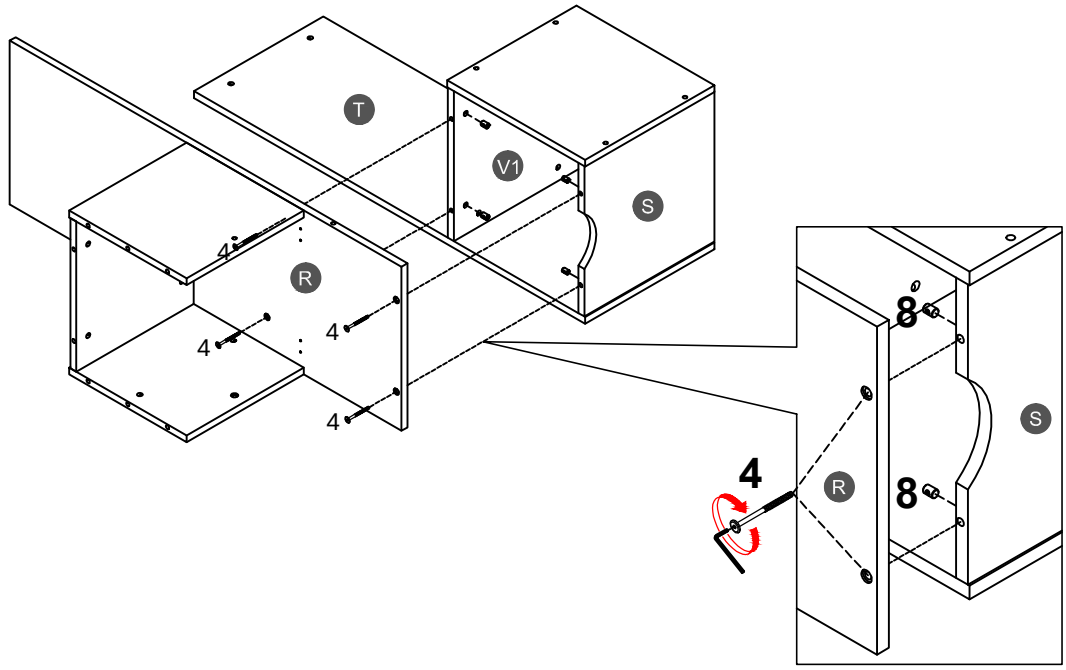


STEP 29:

1	4	8
9PCS	8PCS	8PCS

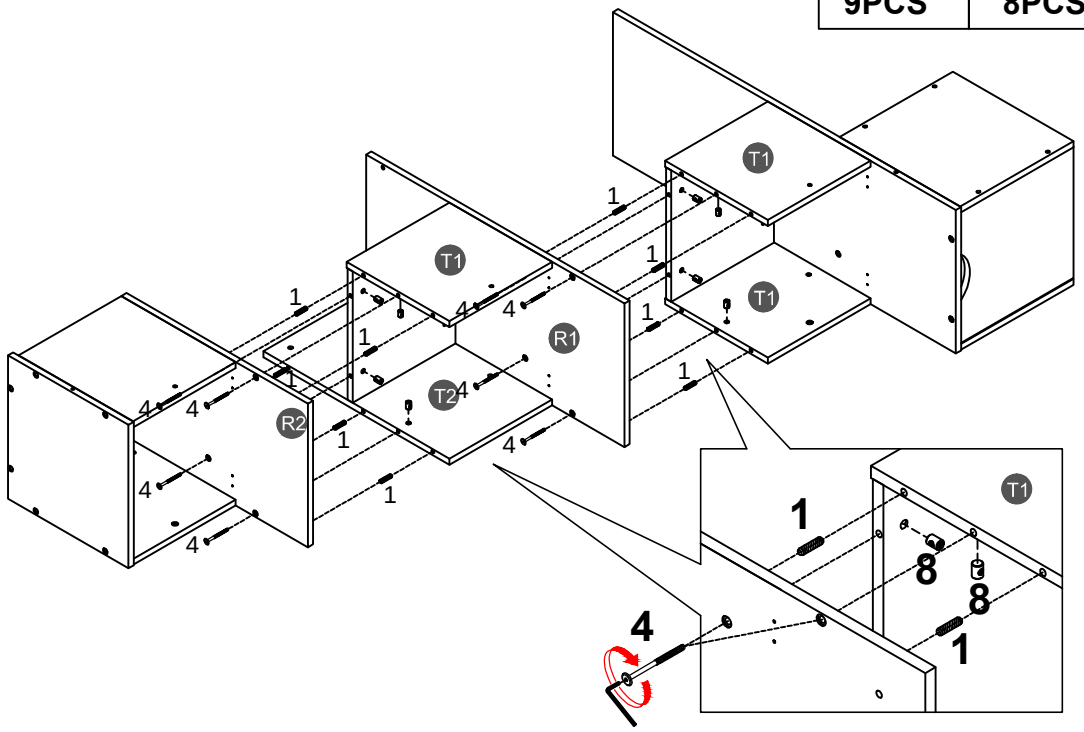


STEP 30:


4	7	8
10PCS	2PCS	10PCS

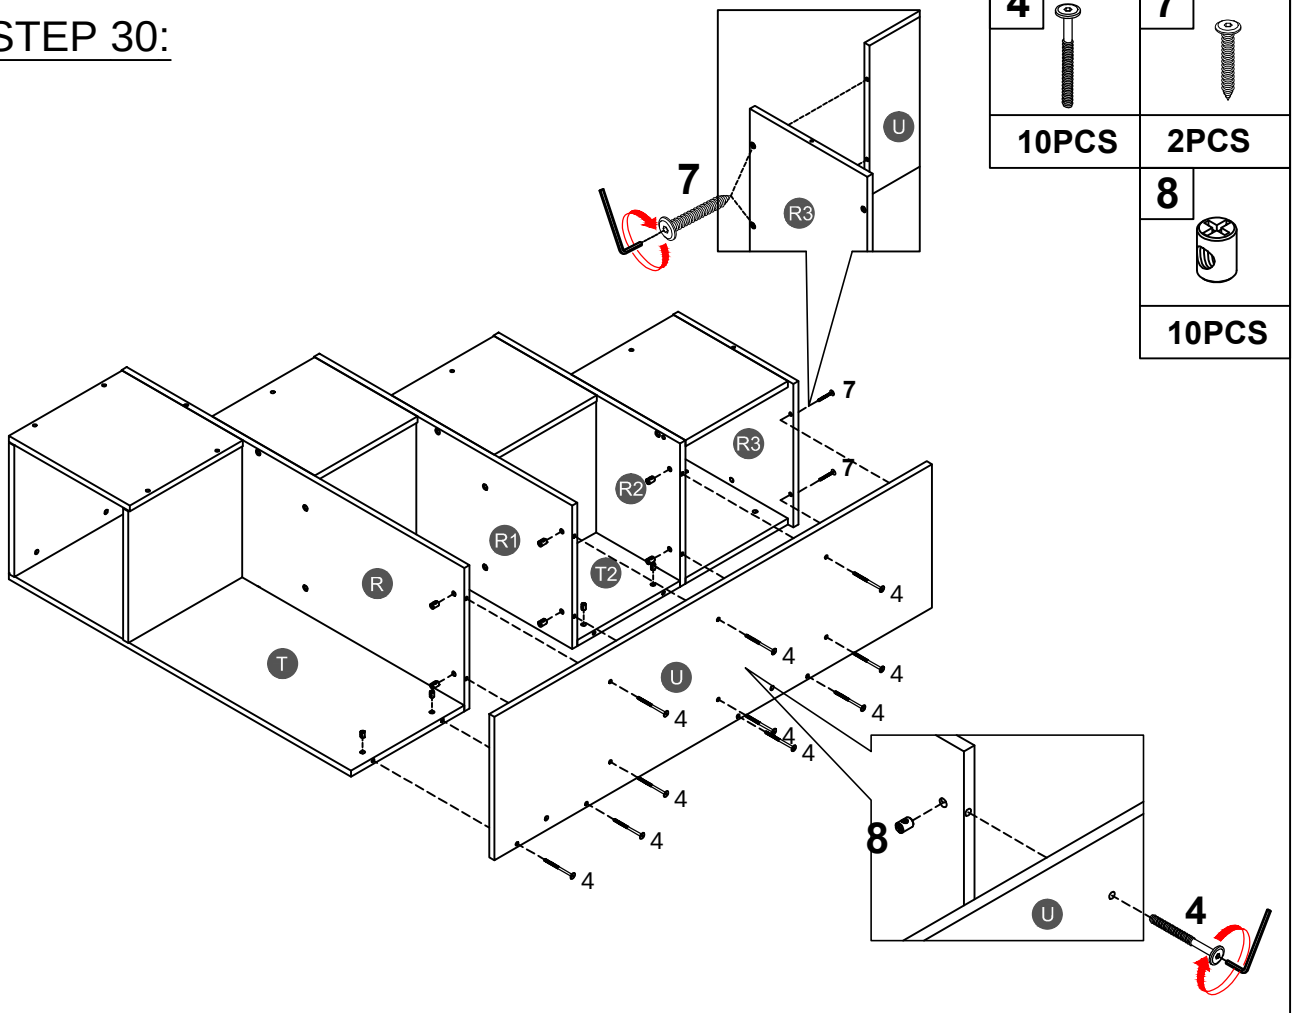


STEP 31:

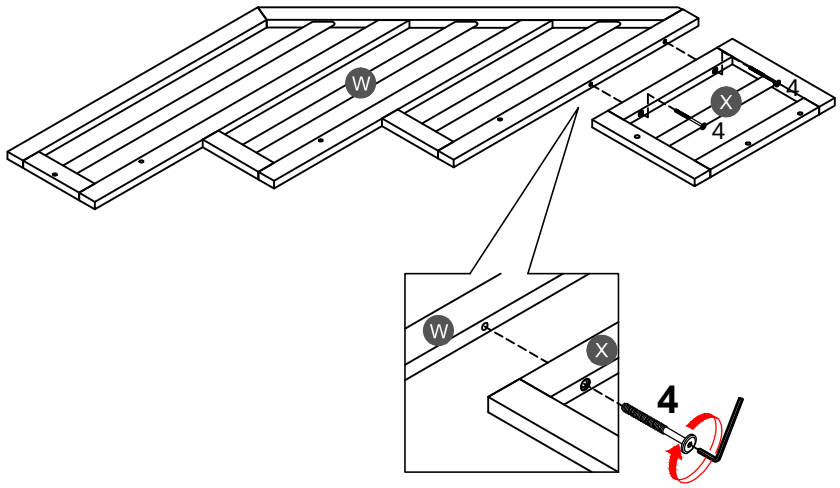

STEP 32:

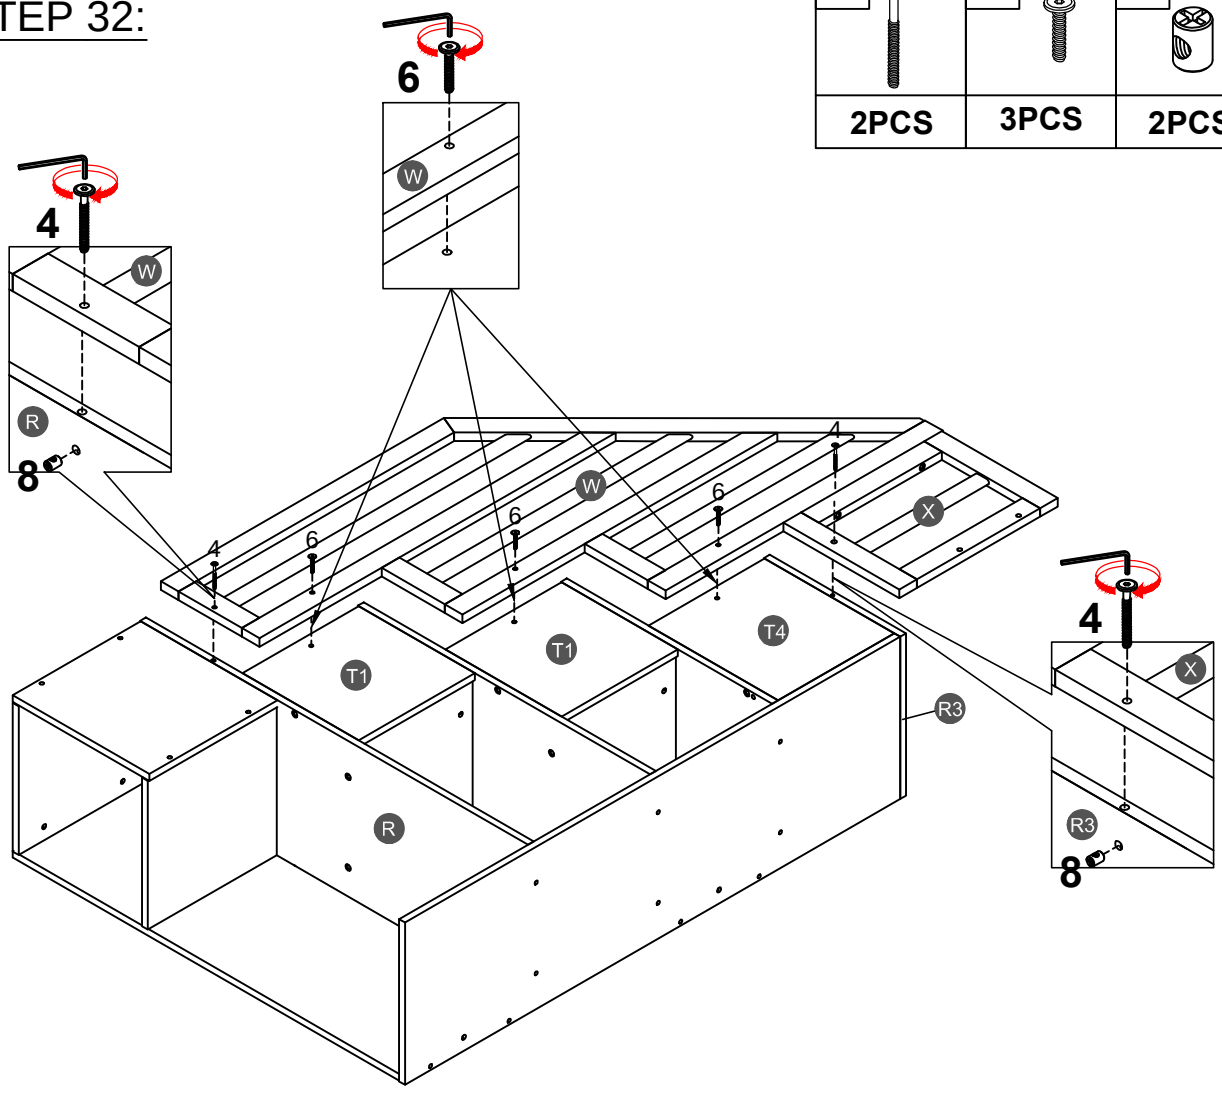


STEP 33:

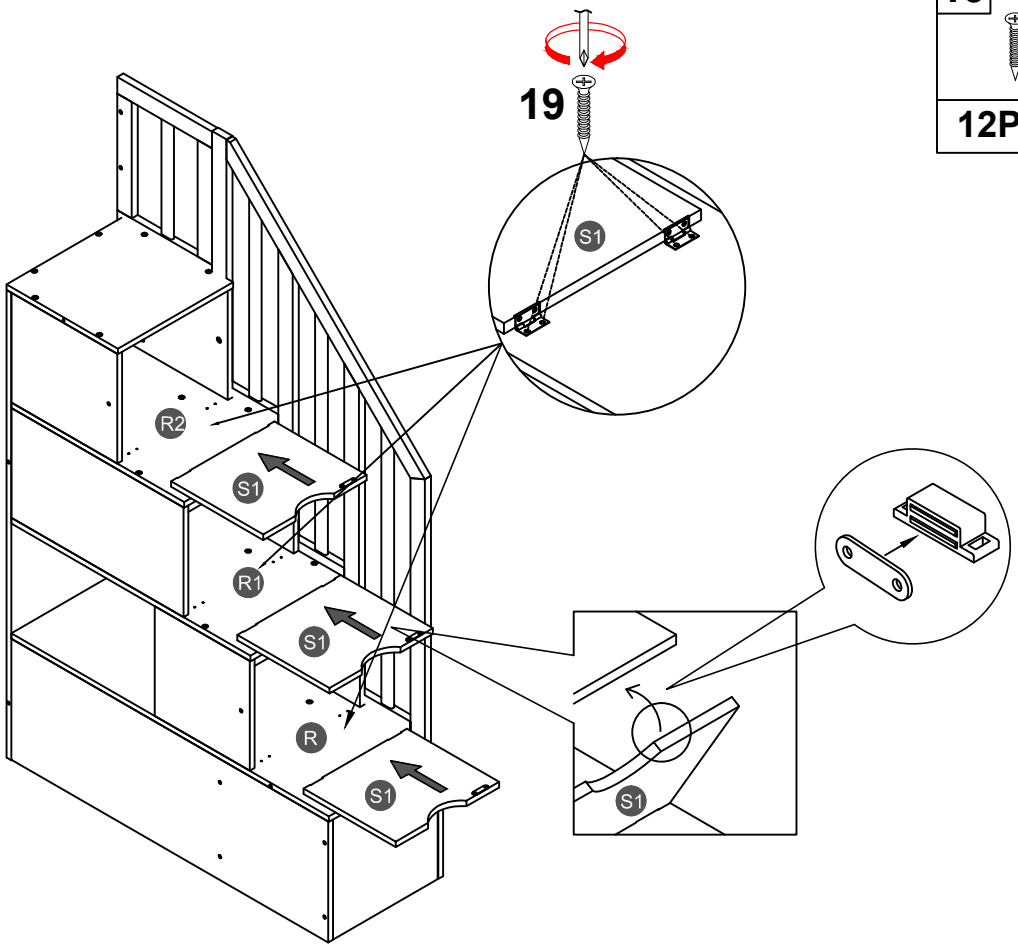

19	
	12PCS


STEP 34:

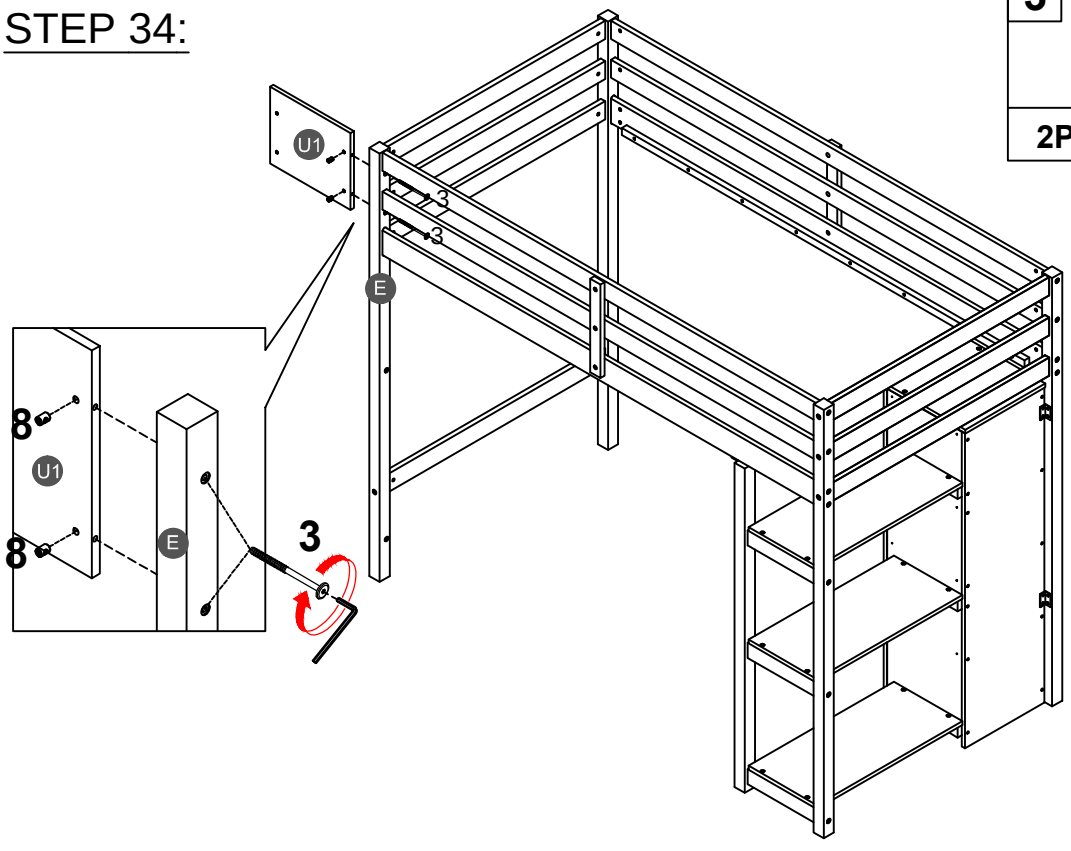

3	8
2PCS	2PCS

STEP 35:


3	4	8	9	18
2PCS	2PCS	4PCS	1PC	4PCS

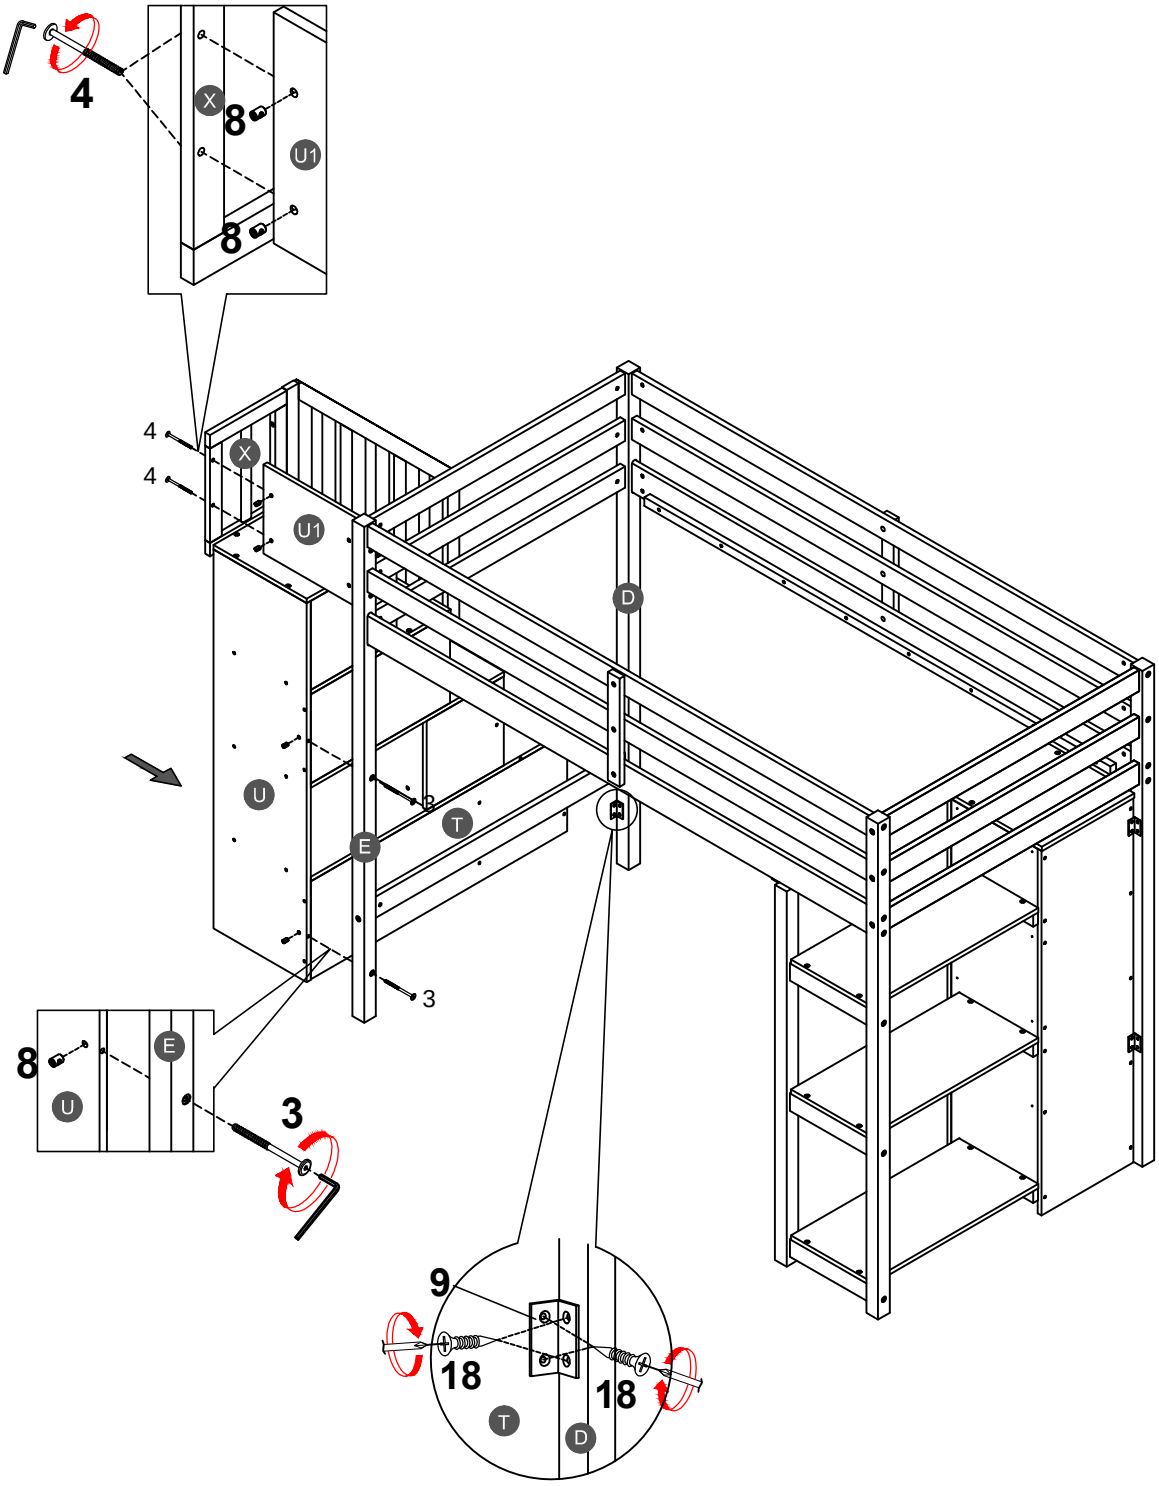

STEP 36:

13

28PCS

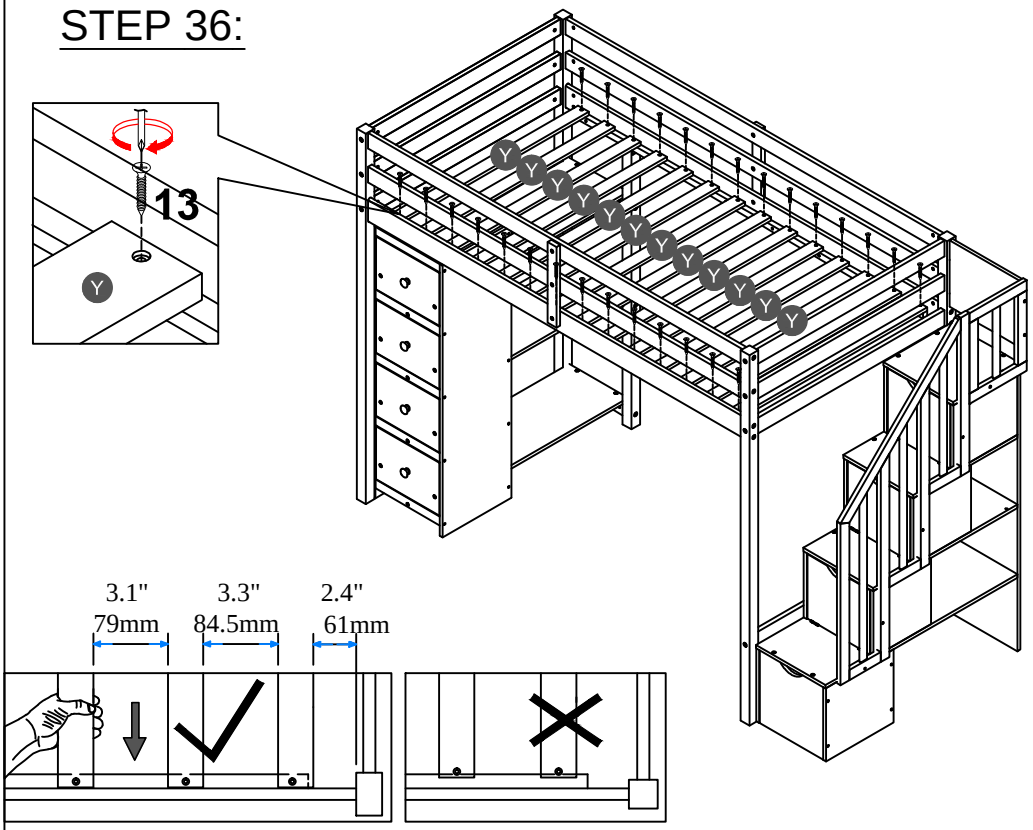

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

